

Congratulations on your purchase of the MUSTEK 560-HTB Home Theater Surround System. You should receive in your speaker box two (2) labeled cables one set being Green, Gray, and Blue and the second set Red, Yellow, and White. In the DVD player box you should have two (2) non-labeled cable one which is Yellow(video) and one that is Red and White(audio). Use this quick install guide to help set up your new home theater system.

CONNECTING SUBWOOFER TO THE DVD PLAYER:

Using the (2) 3-jack RCA cables #1 (Green, Gray, Blue RCA-Jacks) and #2 (Yellow, Red, White RCA-Jacks) connect the Subwoofer to the DVD player.

Note: The cables have been labeled exactly to match the subwoofer on one end and the DVD player on the other.

1. Connect the 3-jack RCA cable #1 into the Subwoofer's 5.1 channel Input sockets (figure 2) as follows:
 - A. Connect the Green (SW) RCA-Jack into the Red (SW) RCA socket of the subwoofer.
 - B. Connect the Gray (SR) RCA-Jack into the Red (SR) RCA socket of the subwoofer.
 - C. Connect the Blue (C) RCA-Jack into the White (C) RCA socket of the subwoofer.
2. Connect the 3-jack RCA cable #2 into the Subwoofer's 5.1 channel Input sockets (figure 2) as follows:
 - A. Connect the Yellow (SL) RCA-Jack into the White (SL) RCA socket of the subwoofer.
 - B. Connect the Red (FR) RCA-Jack into the Red (FR) RCA socket of the subwoofer.
 - C. Connect the White (FL) RCA-Jack into the White (FL) RCA socket of the subwoofer.
3. Connect the 3-jack RCA cable #1 into the DVD players 5.1 channel output sockets (fiigure 3) as follows:
 - A. Connect the Green (Woofer) RCA-Jack into the Black (Woofer) RCA socket of the DVD player.
 - B. Connect the Gray (Rear-R) RCA-Jack into the Red (Rear-R) RCA socket of the DVD player.
 - C. Connect the Blue (Center) RCA-Jack into the Black (Center) RCA socket of the DVD player.
4. Connect the 3-jack RCA cable #2 into the DVD players 5.1 channel output sockets (fiigure 3) as follows:
 - A. Connect the Yellow (Rear-L) RCA-Jack into the White (REAR-L) RCA socket of the DVD player.
 - B. Connect the Red (Front-R) RCA-Jack into the Red (Front-R) RCA socket of the DVD player.
 - C. Connect the White (Front-L) RCA-Jack into the White (Front-L) RCA socket of the DVD player.

CONNECTING THE TELEVISION TO DVD PLAYER AND THE SUBWOOFER:

