

Errata

[Model 8800/8200 Photonics Test System User's Manual]

(Chapter 6) Fiber Optic Power Meter Module, pg. 97, first bulleted item at bottom of page

Reads :

DC CONT – measurement occurs at a programmable sample rate.

Should Read:

DC CONT – measurement occurs at a programmed sample rate.

Reads :

DC SINGLE – a measurement is taken every time the meter receives a trigger up to a 1000 Hz rate.

Should Read:

DC SINGLE – a measurement is taken whenever the RUN/STOP is pressed from the display panel, or with the commands PM:MODE 1 or PM:RUN 1 when running remotely.

Errata

[Photonics Model 8800/8200 Computer Interfacing Manual]

(Chapter 2) Commands and Queries, pg. 20, sixth item down in table

Mode	Should be (same):
PM:MODE	PM:MODE
Number of Parameters	Should be:
1	0
Function	Should be:
Selects the mode for acquiring subsequent readings: 0-continuous, 1-single, 2-integrating	NONE

See bottom of page 75 in this manual under “PM:MODE” for correct settings.

(Chapter 2) Commands and Queries, pg. 67, under “PM AUTOOrange”

The following table should be referenced for using the RCL 0 command:

The RCL 0 command sets the following:

LAMBDA to lower limit	PM: LAMBDA
Range to auto	PM: AUTOOrange 1
Mode to DC-CONT	PM: MODE 0
User Responsivity to 1	PM:USERRESP 1
User Ref to 1mW	PM:USERREF 1
Zero to disabled	PM:ZERO 0
Filter to none	PM:FILTer 0
Units to Watts	PM:UNITS
Attenuation to OFF (for 818 detector)	PMATT 0
Refsel to User Reference	PM:REFSEL 0
CAL SEL to Detector Cal	PM:USERCAL 0