

Confirming the device registration (COOLPIX series / D100) - Windows Millennium Edition (Me) -

The following explanation uses COOLPIX2500 as an example.


After installing Nikon View 5 (device driver) and restarting the computer, connect your camera to the computer using a USB cable and turn on the camera. The camera is registered automatically.



Follow the instructions below to check that the camera has been correctly registered with the system.


Step 1

Right-click the **My Computer** icon on the desktop. Select **Properties** from the menu which appears. The **System Properties** dialog box opens. Click the **Device Manager** tab.

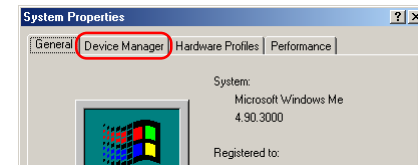

Step 2

Confirm that **Disk drives**, **Storage device**, and **Universal Serial Bus controllers** are listed in the **Device Manager** tab, then click the plus sign (+) next to each of these device types.



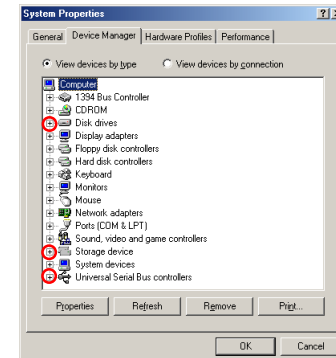


Before connecting the camera to the computer

Be sure to install Nikon View 5 (device driver) before connecting your camera to the computer.

Step 4




Confirm that **NIKON NIKON DSC E2500**, **USB Disk**, and **USB Mass Storage Device** are listed respectively under **Disk drives**, **Storage device**, and **Universal Serial Bus controllers**. Double-click each of these listings to display the associated **Properties** window.

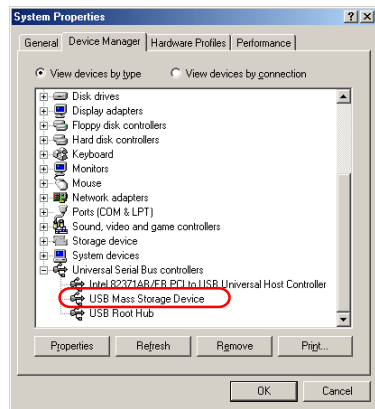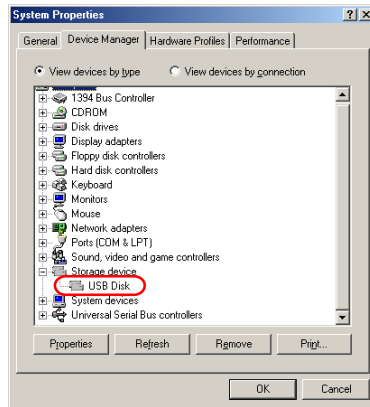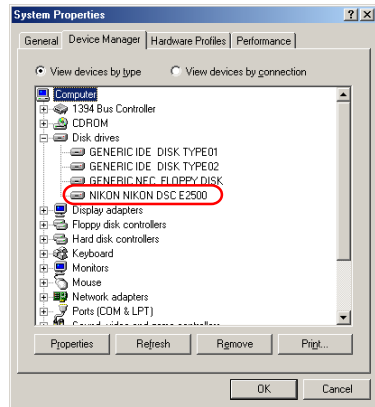

If the **NIKON NIKON DSC E2500** is listed under **Other devices**, delete **NIKON NIKON DSC E2500**, then turn off the camera and turn it on again.

Step 4

The properties for the selected device are displayed. Click the **General** tab and confirm that **This device is working properly** appears under **Device status**. Click **OK**.

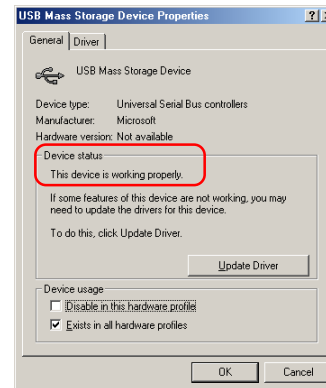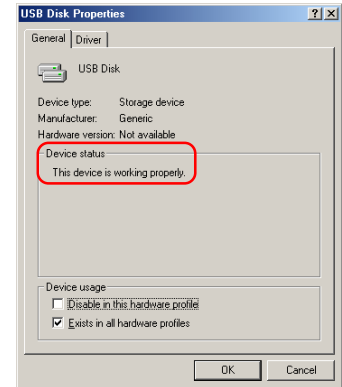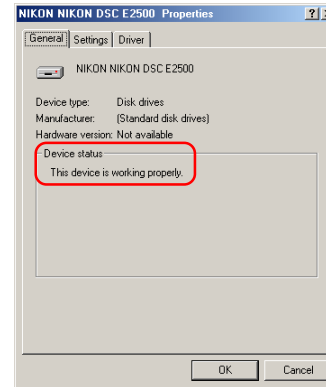

Click **OK** to close the **System Properties** dialog box.

