


Reinstalling the device driver (COOLPIX990/880) - Windows 98 Second Edition (SE) -

If **Nikon Digital Camera E990(E880)** is listed under **Other devices**, you need to reinstall the device driver.


Step 1

Double-click the listing for the **Nikon Digital Camera E990** that appears under **Other devices**.

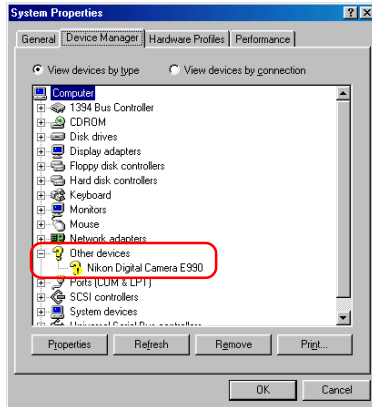


Step 2

The **Nikon Digital Camera E990 Properties** dialog box will be displayed. Open the **General** tab and click **Reinstall Driver**.

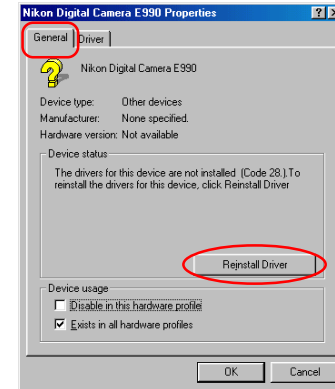


Step 3

The Windows **Update Device Driver Wizard** will be displayed; click **Next**.

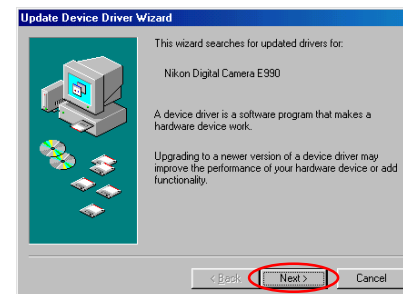

Step 4


The dialog box shown below will be displayed. Select **Search for a better driver than the one your device is using now** and click **Next**.

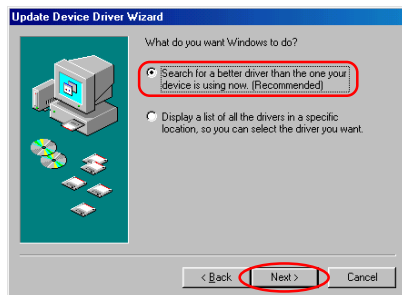

Step 5

The dialog shown below will be displayed.

Insert the Nikon View 5 CD into the CD-ROM drive. You can prevent the **Welcome** dialog from opening automatically by holding down the SHIFT key while inserting the CD. Select the **CD-ROM drive** check box and click **Next**.

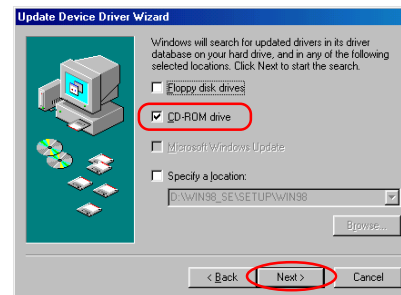

If the **Welcome** dialog box appears when the CD-ROM is inserted, close the dialog box by clicking the **Exit** button.



Step 6

The dialog box shown below will be displayed; click **Next**.





If the message, **Windows was unable to find a suitable driver for this device**, is displayed, this may indicate that the Nikon View 5 CD was not correctly inserted in the CD-ROM drive or that the appropriate check box was not selected. Click **Back** to return to the dialog box shown in Step 5, and confirm that your settings are correct.

If an Insert Disk message appears


If an **Insert Disk** message appears, insert the Windows 98 (Second Edition) CD-ROM and click **OK**.



If the **Copying Files** dialog box appears, click **Browse**, double-click **win98** in the CD-ROM drive folder list, then click **OK**.

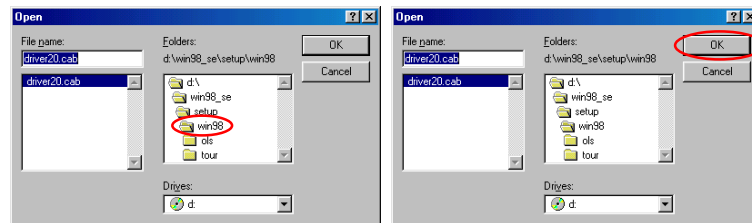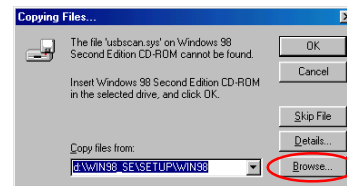


Confirm that the **win98** folder on the CD-ROM is displayed under **Copy files from** and click **OK**.

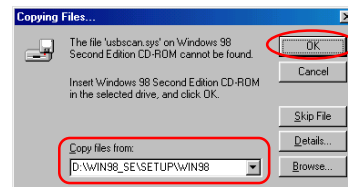

* If the Windows 98 (Second Edition) CD-ROM starts up click  to close the window.


Step 7

A dialog box will be displayed indicating that the driver was successfully updated. Click **Finish** to close the dialog box.

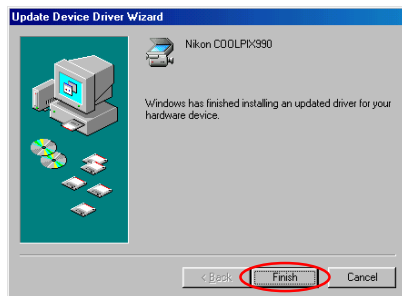

Step 8

Click the **General** tab for the Nikon COOLPIX990 Properties, and confirm that **This device is working properly** appears under **Device status**. Click **Close**.

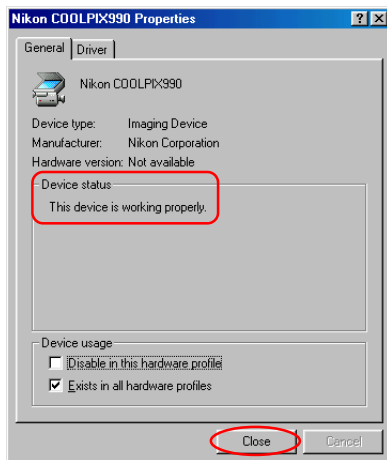

Step 9

Click **OK** to close the **System Properties** dialog box.

