


Registering the DI/DIx/DIH under Windows 2000 Professional

Installing Windows Hardware Drivers for the DI/DIx/DIH

Before You Begin

Confirm that your OHCI-compliant IEEE 1394 interface board or card has been correctly registered with the system.

Click the My Computer icon on the desktop with the right mouse button and select Properties from the menu that appears to display the System Properties dialog. Open the Hardware tab and click the **Device Manager...** button in the Device Manager section.

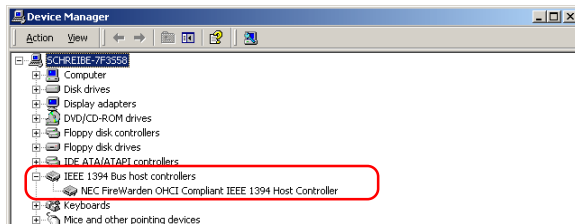

The bus controller for your IEEE 1394 board or card should be listed under “1394 Bus Host Controller”

If “1394 Bus Host Controller” is not listed in the Device Manager, or if your IEEE 1394 interface board or card is listed as an unknown or miscellaneous device or is preceded by a red or yellow warning icon, follow the instructions in the manual provided with the board to ensure that the drivers are properly installed.

After installing Nikon View 5 (device driver) and restarting the computer, connect your camera to the computer using an IEEE 1394 cable and turn on the camera. The camera is registered automatically.

Before connecting the camera to the computer

Be sure to install Nikon View 5 (device driver) before connecting your camera to the computer.

Updating Drivers for the DI

If you are already using the DI with Nikon View DX or Nikon Capture, you will need to update the camera drivers. Click [here](#) .

Log On


You will need to log on as “Administrator” to register the DI/DIx/DIH.

Follow the instructions below to check that the camera has been correctly registered with the system.

Step 1


In the following steps, you are confirming that the registration of the camera has completed properly.

Click the My Computer icon on the desktop with the right mouse button and select Properties from the menu that appears to display the System Properties dialog. Open the Hardware tab and click the **Device Manager...** button in the Device Manager section.

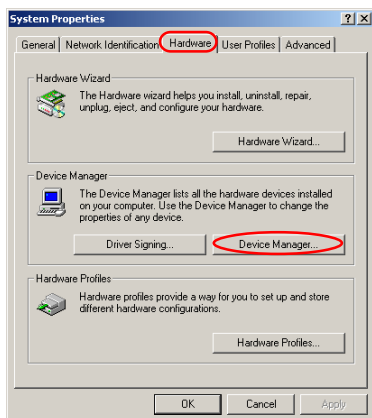


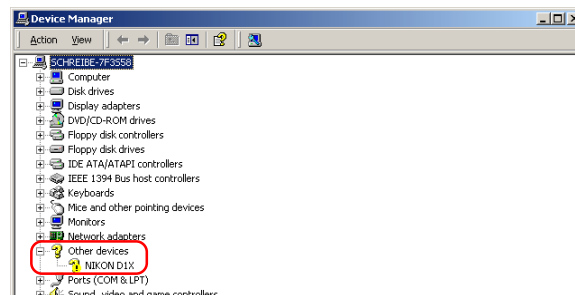
Step 2

After confirming that “Nikon 1394 Protocol Device” is listed in the Device Manager, click the “+” sign to its left.

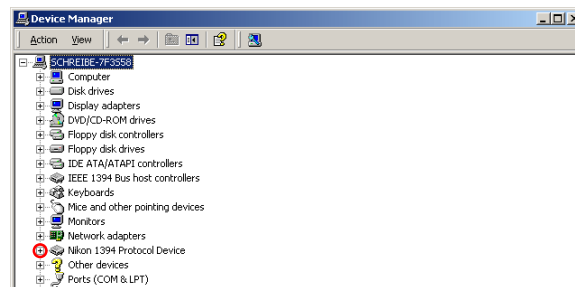

If “Nikon 1394 Protocol Device” does not appear

If “NIKON DIX(DI/DIH)” is listed under “Other Devices”, click [here](#) .




If “Nikon 1394 Protocol Device” is not listed in the Device Manager and “NIKON DIX(DI/DIH)” is not listed under Other Devices, disconnect the camera, and restart the computer. When the computer has restarted, reconnect the camera to the computer.




Step 3

After confirming that “Nikon Digital Camera D1 Series” is listed under “Nikon 1394 Protocol Device,” double-click the listing to open the Properties window.

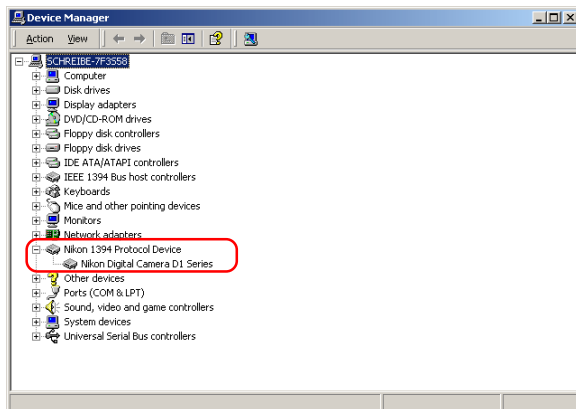

Step 4

The Nikon Digital Camera D1 Series Properties dialog will be displayed. Click the General tab and confirm that “This device is working properly” appears under “Device status”. Click **OK**.

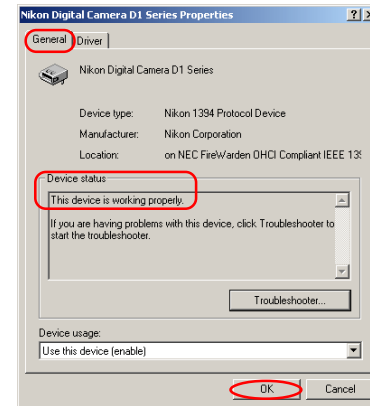

Close the Device Manager, then click **OK** to close the System Properties window.