


REMOTE FREE Instructions and Warranty (English)

The NYKO® Remote Free™ DVD adaptor is a unique device which allows you to control the DVD playback functions of your PlayStation®2 with an unprecedented variety of DVD remotes and universal remotes. It is compatible with most varieties of Aiwa, Denon, Harman, Hitachi, JVC, KLH, Konka, Mitsubishi, Onkyo, Panasonic, Philips, Pioneer, RCA, Samsung, Sanyo, Sharp, Sony, Thompson, Toshiba and Zenith remotes.

TO BEGIN

1. Before inserting the Remote Free DVD adaptor into a controller port on the PlayStation®2, find your brand of DVD remote (see Note for Universal Remotes below) on the Remote Settings Table.
2. Program the corresponding settings into your Remote Free by flipping the toggle switches to the correct setting (see Diagram 1).
3. Insert the Remote Free into a controller port on the front of your PlayStation®2.
4. Turn ON the PlayStation®2 and insert your DVD. Normally, the DVD will begin playing automatically.
5. Use your DVD remote or universal remote to control the DVD functions of the PlayStation®2.
6. For those brands having two codes: if the first code does not work, remove the Remote Free and flip the switches to the second setting. Reinsert and try again.

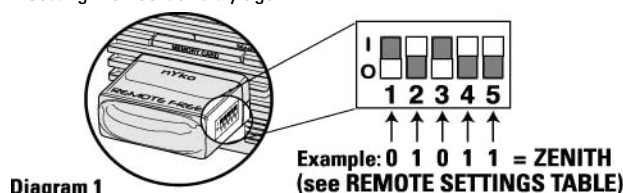

SCROLL: UP/DOWN, LEFT/RIGHT

When in MENU, you can scroll through options using the remote's arrows to move up, down, left or right.

OK (ENTER)

Use this to make your MENU item selection.

DISPLAY

Not present on all remotes, this will bring the PlayStation®2 DVD Control Panel onto the screen. Basic DVD functions are available here, as well as advanced settings. See your PlayStation®2 instruction manual for more information. If your remote does not have a DISPLAY button, use your game controller to access the Control Panel.

KNOWN EXCEPTIONS AND IDIOSYNCRASIES

Manufacturers may modify their remotes without notice. At the time of printing, we have noted these few remotes have the following issues in conjunction with the Remote Free:

- On some Hitachi remotes, the NEXT/PREVIOUS (CHANNEL UP and CHANNEL DOWN) buttons act as FAST FORWARD and FAST REWIND.
- On some Onkyo remotes, the CHANNEL DOWN button acts as STOP.
- On some Panasonic and Pioneer remotes, FAST FORWARD and FAST REWIND are not available.
- With some Philips and JVC remotes, FAST FORWARD and FAST REWIND act as PREVIOUS and NEXT (same as CHANNEL UP/DOWN).
- With some Pioneer remotes, the LEFT and RIGHT buttons in Menu may not be available.
- With some RCA remotes, the PLAY button acts as OK button in MENU mode.

NOTE FOR UNIVERSAL REMOTES

Most universal remotes allow you to control various different devices in your home – such as TV, VCR, DVD, Cable or Satellite device, AUX, RCVR, etc. – each corresponding to a button on the universal remote itself. For many universal remotes, you may assign either the VCR, DVD or AUX button to control your PlayStation®2 with the Remote Free.

This means that you have the option of assigning a universal remote button using any of the settings listed below in the Remote Settings Table, as long as the brand names match the brands names listed in the instructions for your universal remote.

If all of your universal remote buttons are assigned, including the DVD button, you may only want to use the setting listed below that corresponds to the same brand as the DVD device your DVD remote or universal remote is set to emulate.

IMPORTANT

- Read your PlayStation®2 instruction manual to understand its DVD functionality.
- Not all DVD remotes and universal remotes behave in the same way. You may find that your remote requires a quick button push, whereas other may find the need to hold down the buttons slightly longer.
- Some remotes will have a DISPLAY button (to display the DVD Controller Panel on the screen), others will not. If your remote does not have a DISPLAY button, you can still enjoy the most commonly used DVD controls with your remote. If you desire to go into advanced settings from the Control Panel, use your normal game controller to access it. Your PlayStation®2 instruction manual will explain the functions of the on-screen Control Panel.
- Some remotes will use an OK button to make a MENU selection, others an ENTER button. On a rare few the PLAY makes the selection.

REMOTE SETTINGS TABLE

Compatible with most models of remotes and universal remotes of the following brands:

Remote	1	2	3	4	5		1	2	3	4	5
AIWA	0	0	0	0	0	or	0	1	0	0	0
DENON	1	0	0	0	0						
HARMAN	1	1	0	0	0						
HITACHI	0	0	1	0	0						
JVC	1	0	1	0	0						
KLH	0	1	1	0	0						
KONKA	1	1	1	0	0						
MITSUBISHI	0	0	0	1	0						
ONKYO	1	0	0	1	0						
PANASONIC	0	1	0	1	0						
PHILIPS	1	1	0	1	0	or	1	0	1	1	0
PIONEER	1	1	1	1	0	or	0	0	0	0	1
RCA	1	0	0	0	1						
SAMSUNG	0	1	0	0	1						
SANYO	1	1	0	0	1						
SHARP	0	0	1	0	1						
SONY	1	0	1	0	1						
THOMPSON	1	1	1	0	1						
TOSHIBA	0	0	0	1	1	or	1	0	0	1	1
ZENITH	0	1	0	1	1						

TROUBLESHOOTING

- If your DVD remote or universal remote suddenly stops working, replace its batteries to make certain that you have fresh batteries installed.
- If you cannot get your Remote Free to operate properly with the universal remote selection that you are using, try another selection setting of the NYKO Remote Free™ and try again.

- You will see from the Remote Settings Table that for a few brands of DVD remotes and universal remotes, two switch settings are offered. If the first one does not work, use the second. Remove the Remote Free from the PlayStation®2 before changing the settings.

NORMAL DVD REMOTE CONTROL FUNCTIONS PLAY

Most often this button will toggle between PLAY and PAUSE. On a few you will need to press the PAUSE button to pause the DVD.

PAUSE

Most often this button acts like the PLAY button, and toggles between the two modes. On some remotes, you will need to resume play with the PLAY button.

STOP

On most remotes, stopping the DVD will mean it will play from the beginning when PLAY is next used. Once STOP has been pressed you will see the PlayStation®2 display the DVD control panel selections on the screen. You may use the direction buttons to go to PLAY or rewind or tap the Display button once or twice to make it go away.

FAST FORWARD/FAST REWIND

Most easily, you can press the Fast Forward/Rewind or PLAY button to go back to normal speed. (Any button will do.)

NEXT/PREVIOUS

This feature jumps to the next or previous scene in a movie, or song for a concert DVD. It works with the CH+ or CH- (CHANNEL UP or CHANNEL DOWN) buttons.

MENU

Most DVD's offer extra bonus features, such as trailers or interviews, plus a selection of scene groupings you can jump to, or songs if it is a concert video, for example. The options, including PLAY, are laid out in the MENU. Many DVD's will begin in the MENU.

- It is best not to try to remove the NYKO Remote Free™ while the power to your PlayStation®2 is turned on. Only insert or remove the NYKO Remote Free™ while the unit has been turned off.
- When the Remote Free first receives power it 'looks' at the dip switch settings that you have programmed the device to. This is why when you go to change the dip switch setting, that you must turn the PlayStation®2 OFF, remove the NYKO Remote Free™, change the switch settings, reinsert and then power up the PlayStation®2.
- Keep the I/R sensor area free and clear of things so you may control the PlayStation®2 DVD playback more easily.
- Never try to open up your Remote Free or put it into water as this may permanently damage your NYKO Remote Free™ unit.

NYKO Product Limited Warranty

This NYKO product is warranted to the original purchaser for the normal intended use for a period of ninety (90) days from the date of purchase. If a defect covered under this warranty period occurs, NYKO will replace or repair the product or its defective parts, at its option, at no charge. Warranty does not apply to defects resulting from modification or misuse of this product. The product can be returned to the place of purchase accompanied with proof of purchase or shipped to: NYKO Technologies, Inc., P.O. Box 46697, Los Angeles, CA 90046 with freight charges prepaid. Please allow 3-4 weeks for processing.

NYKO®
INNOVATION FIRST

For support visit: www.nyko.com

ITEM# 80509