

This document is a text description of the control panel layout for the product listed below.

“PDF” files of the complete operating instructions are available from the Customer Support section of www.Panasonic.com.

If you need the operating instructions in an alternate format, please request it from Customer Support.

Compact Plain Paper FAX

Model Number KX-FHD301

Finding the Controls

The control panel of the unit is divided into three equal parts: left, middle and right.

Left part:

This part contains the telephone keypad laid out in the conventional telephone arrangement with a “nib” on the 5 button. Below the keypad are four circular buttons in a horizontal row: from left to right, FLASH, REDIAL, MUTE and MONITOR. The REDIAL button is also the PAUSE button.

Middle part:

At the top middle part of the panel is a smooth surface. This is the display. Immediately below the display is the ONE-TOUCH LABEL CARD, which has four buttons, each, in a vertical row at both ends. Below the four vertical buttons on the left is a long oval button. This is the AUTO ANSWER button. To the right of this button is a circular button. This is the MENU button. To the right of these buttons is the NAVIGATOR control, which is a large cross control with four active areas. The active areas are the 12 o’clock, 3 o’clock, 6 o’clock and 9 o’clock positions. The 12 and 6 o’clock positions are PLUS and MINUS keys respectively. These are also the VOLUME control increase and decrease keys. The 3 and 9 o’clock positions are the RIGHT and LEFT arrow keys.

Right part:

At the top are two oval buttons. The upper one is the CALLER ID button. The lower one is the HELP button. Below the HELP button is a circular button marked with an indented page icon. This is the COPY START button. Below this is a circular button, with a minus-shaped protrusion, marked with an indented triangle. This is the STOP button. To the right below the COPY START button, there is another circular button, with a “nib”, marked with an indented diamond. This is the FAX START button, which is also the

SET button.

PFQW1624ZA June 13, 2001
September 24, 2002 Revised