

This document is a text description of the control panel layout for the product listed below.

“PDF” files of the complete operating instructions are available from the Customer Support section of [www.Panasonic.com](http://www.Panasonic.com).

If you need the operating instructions in an alternate format, please request it from Customer Support.

Compact Plain Paper Fax with Answering System  
Model Number KX-FHD351

#### Finding the Controls

The control panel of the unit is divided into three equal parts: left, middle, and right.

##### Left part:

This part contains the telephone keypad laid out in the conventional telephone arrangement with a “nib” on the 5 button. Below the keypad are four circular buttons in a horizontal row: from left to right, FLASH, REDIAL, MUTE and DIGITAL SPEAKER-PHONE. The REDIAL button is also the PAUSE button.

##### Middle part:

At the top middle part of the panel is a smooth surface. This is the display. On the lower left below of the display is the CALLER IQ button. On the lower right below of the display is the AUTO ANSWER button. Immediately below the display is the ONE-TOUCH LABEL CARD, which has three buttons each, in vertical rows at both ends. Below the three vertical buttons on the left is the RECORD button. To the right of the RECORD button is the ERASE button. Below these two buttons is the PLAY MESSAGES button. To the right of this button is the NAVIGATOR control, which is a large cross key with four active areas. The active areas are the 12 o'clock, 3 o'clock, 6 o'clock and 9 o'clock positions. The 12 and 6 o'clock positions are PLUS and MINUS keys respectively. These are also the VOLUME control increase and decrease keys. The 3 and 9 o'clock positions are the RIGHT and LEFT arrow keys. To the upper right of the NAVIGATOR control is the MENU button.

##### Right part:

At the top are two circular buttons. The smaller on the left is the HELP button. The bigger on the right is the CALLER ID button. Below the HELP button is a button marked with an indented page icon. This is

the COPY button. Below this is a button with a minus-shaped protrusion, marked with an indented triangle. This is the STOP button. To the below right of the COPY button, there is another circular button with a “nib”, marked with an indented diamond. This is the FAX START button, which is also the SET button. To the lower right of this button is an indentation. This is the microphone.

PFQW1911ZA      September 20, 2002