

This document is a text description of the control panel layout for the product listed below.

“PDF” files of the complete operating instructions are available from the Customer Support section of www.Panasonic.com.

If you need the operating instructions in an alternate format, please request it from Customer Support.

Model Number KX-TG2219B
2.4GHz Digital Cordless Phone

Handset:

With the handset buttons facing you, the antenna is a narrow 2 inch long protrusion on the top right. Just below the top on the front of the handset is a shallow oval concave. This is the earpiece. The smooth surface below the earpiece is the display. Immediately below the display are three buttons in a horizontal row: from left to right, they are FUNCTION, MUTE, and VOICE ENHANCER buttons. Below these buttons in the center of the handset is the NAVIGATOR KEY, which is a large rectangular control with four active areas. The active areas are at the 12 o'clock, 3 o'clock, 6 o'clock, and 9 o'clock positions. The 12 and 6 o'clock positions are the UP and DOWN keys and also control volume up and down during a call. The 3 and 9 o'clock positions are the LEFT and RIGHT arrow keys. The 3 o'clock position is often used as ‘Yes’ key during programming. These keys are also the EDIT and CHANNEL keys respectively. To the upper left of the Navigator key, an oval button with a clipped edge is the TALK button. The oval button below the TALK button is the SPEAKER PHONE button. To the upper right of the NAVIGATOR KEY, an oval button with a clipped edge is the OFF button. The oval button below the OFF button is the HOLD button. The HOLD button is also the CLEAR button. Below these buttons is the keypad laid out in the conventional telephone arrangement with a “nib” on the 5 button. On the lower left below the keypad is the FLASH button. The FLASH button is also the CALL WAIT or VOICE MAIL button. On the lower right of the keypad is the REDIAL button. The REDIAL button is also the PAUSE button. The indentation between the FLASH and REDIAL button is the microphone. The 2 metal ridges at the bottom of the handset are the charge contacts. On the left edge of the handset, parallel to the TALK button, is the headset jack covered with a little round rubber. This cover is opened from front to back, and is not completely removable. The triangular pattern of raised texture on the back side of the handset identifies the battery compartment. The battery door is opened by pushing in and down on this area.

Base Unit:

With the base unit facing you, the antenna is on the right side of the base unit and it should be positioned pointing upwards. The handset's charging cradle is on the left side of the base unit. This is 1 inch deep depression. For charging, the bottom of the handset is placed in the cradle with the handset buttons facing up. The handset also can be placed in the cradle by inverted position. The unit beeps when the handset is set properly in the cradle for charging. To the right of the handset's charging cradle, in the middle of the base unit, are the two indicators in a vertical row. The top is the VOICE MAIL indicator. Below is the IN USE indicator. The IN USE indicator is also the CHARGE or HOLD indicator. Below these indicators is the HANDSET LOCATOR button.