

This document is a text description of the control panel layout for the product listed below.

"PDF" files of the complete operating instructions are available from the Customer Support section of www.Panasonic.com.

If you need the operating instructions in an alternate format, please request it from Customer Support.

Model Number KX-TG2451B or KX-TG2451S

2.4GHz Cordless Phone

Handset

With the handset facing you, the antenna is at the top right. Below the earpiece is the display. Below the display, in the center of the handset is the NAVIGATOR, a large cross key consisting of UP and DOWN TRIANGLES on the vertical row, and RIGHT and LEFT TRIANGLES on the horizontal row. To the upper left of the NAVIGATOR key is the TALK button. To the upper right is the DIRECT button. To the lower left is the CHANNEL button. The CHANNEL button is also the FUNCTION or EXIT button. To the lower right of the NAVIGATOR key is the CLEAR button.

Below these buttons is the telephone keypad laid out in the conventional arrangement. Below the keypad on the left is the FLASH button. The FLASH button is also the CALL WAIT or VOICE MAIL button. Below the keypad on the right is the REDIAL button. The REDIAL button is also the PAUSE button.

At the very bottom of the handset are the charge contacts.

The headset jack is on the left side of the handset, with a rubber cover.

Base unit

With the base unit facing you, the antenna should be straight up on the right side, toward the back of the unit. The left part of the unit is a cradle for charging the handset. In the front right of the unit is a large triangular depression with a large button with three nibs. This button is the HANDSET LOCATOR. On the top of the depression is the HANDSET IN USE or CHARGE indicator. Above this indicator is the CALLER ID indicator.

PQQX13153ZA-BM

September 21, 2001