

This document is a text description of the control panel layout for the product listed below.

"PDF" files of the complete operating instructions are available from the Customer Support section of www.Panasonic.com.

If you need the operating instructions in an alternate format, please request it from Customer Support.

Model Number KX-TG2481B or KX-TG2481S 2.4GHz Cordless Answering System

Handset

With the handset facing you, the antenna is at the top right. Below the earpiece is the display. Below the display, in the center of the handset is the NAVIGATOR, a large cross key consisting of UP and DOWN TRIANGLES on the vertical row, and RIGHT and LEFT TRIANGLES on the horizontal row. To the upper left of the NAVIGATOR key is the TALK button. To the upper right is the DIRECT button. To the lower left is the CHANNEL button. The CHANNEL button is also the FUNCTION or EXIT button. To the lower right of the NAVIGATOR key is the INTERCOM button. The INTERCOM button is also the CLEAR button.

Below these buttons is the telephone keypad laid out in the conventional arrangement. Below the keypad on the left is the FLASH button. The FLASH button is also the CALL WAIT or PLAYBACK button. Below the keypad on the right is the REDIAL button. The REDIAL button is also the PAUSE button.

At the very bottom of the handset are the charge contacts.

The headset jack is on the left side of the handset, with a rubber cover.

Base unit

With the base unit facing you, the antenna should be straight up on the right side, toward the back of the unit. The left part of the unit is a cradle for charging the handset. The handset is placed in the cradle with either faced up or faced down.

The control panel is located on the right part of the base unit. The top area of the control panel slants down towards the front and has grooves. This is the speakerphone speaker. The raised area below the speaker contains the display. Below the display is three buttons: on the left is the STOP button marked with a square. In the middle is the NEW MESSAGE or SLOW TALK button marked with an indented

triangle. On the right is the round ANSWER ON button, with an indicator light above it (to the right of the display). Below these buttons, there are four buttons in a row. From left to right, they are the ERASE, GREETING, REPEAT and SKIP buttons. Below that row of buttons, in the center is a large shallow triangular depression with the LOCATOR or INTERCOM button. Above this button on the top of the depression is the IN USE or CHARGE indicator light. To the right of this indicator light are two round VOLUME buttons arranged in a diagonal. The upper right button increases the volume; the lower right button decreases the volume.

PQQX13152ZA-BM

October 4, 2001