


# Panasonic®

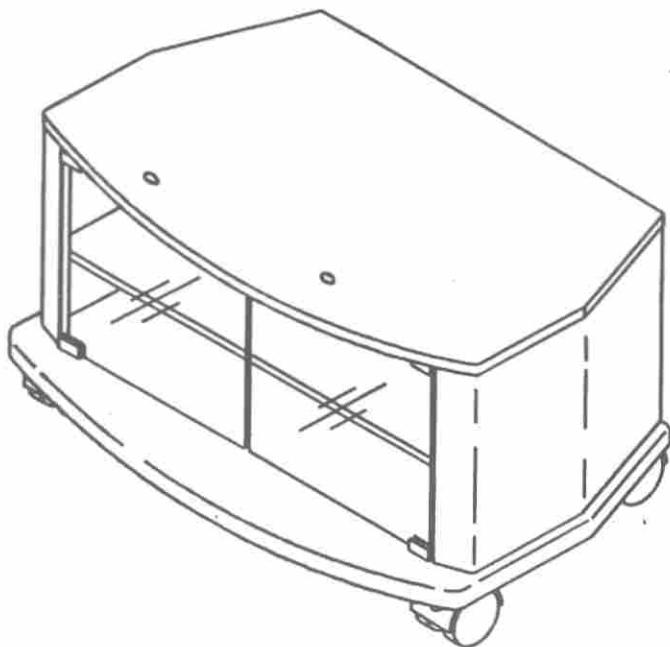

## Assembly Instructions **TY-36G22M** VIDEO STAND

**TOLL FREE CUSTOMER ASSISTANCE LINE  
1-800-900-MICA (6422)**

Monday – Thursday: 7:30 am – 4:30 pm E.S.T.  
Friday: 7:30 am – 2:30 pm E.S.T.

### Important

A study of the assembly instructions will not only save you time but may prevent possible damage to your new stand. Assistance may be required for some assembly procedures.

THIS STAND IS DESIGNED FOR USE WITH TELEVISIONS.

**UL APPROVED MODELS:** CT-36G22V, CT-36G22UV,  
CT-36G32V, CT-36G32UV, CT-36XF54V, CT-36VG50V

### The Tools Required:



Hammer

 
 
 
 
 


Philips  
Screwdriver




Slot  
Screwdriver

### Your Hardware Pack Contains / Replacement Parts


Cam Lock Screw  8 Pcs.	<b>A</b> Cam Lock Housing  8 Pcs.	<b>B</b> Hinges  2 Bags	<b>C</b> Dowels  16 Pcs.	<b>D</b>
Set Location Pin  2 Pcs.	<b>E</b> Nail  9 Pcs.	<b>F</b> Shelf Pin  4 Pcs.	<b>G</b> Screw #6 x 5/8"  2 Pcs.	<b>H</b>
Screw #8 x 5/8"  16 Pcs.	<b>I</b> Caster  4 Pcs. 1 Bag	<b>J</b> Touch Plate  2 Bags	<b>K</b> Magnetic Latch  1 Pc.	<b>L</b>
TKC2Q25131	TKX2Q1162	TKC2Q25114	TKD2Q26023	TKC2Q25094
TKC2Q25094	TKC2Q25112	TKC2Q25036	THT2Q07B99B	THT2Q0FB76B
TKC2Q25015	TKC2Q25082	TKC2Q25082	TKC2Q25015	TKC2Q25015

## STEP 1

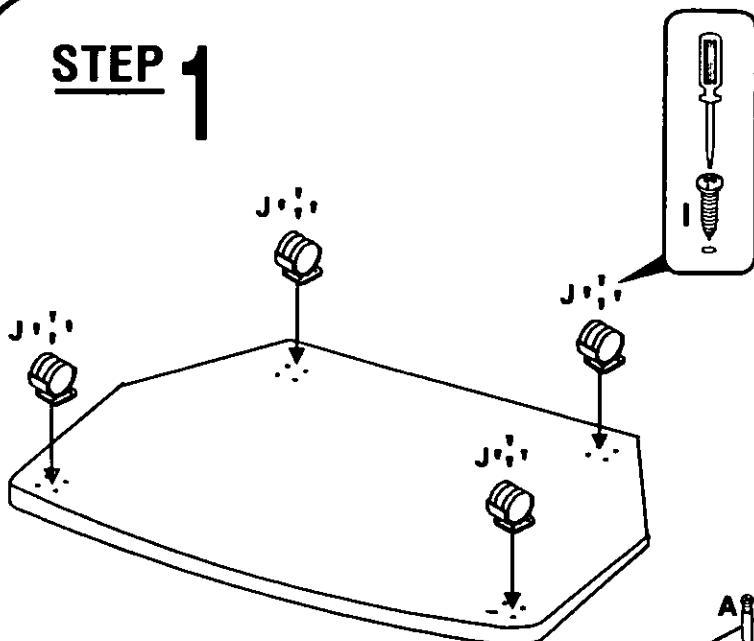


## STEP 2

- Screw cam lock screws into bottom as illustrated

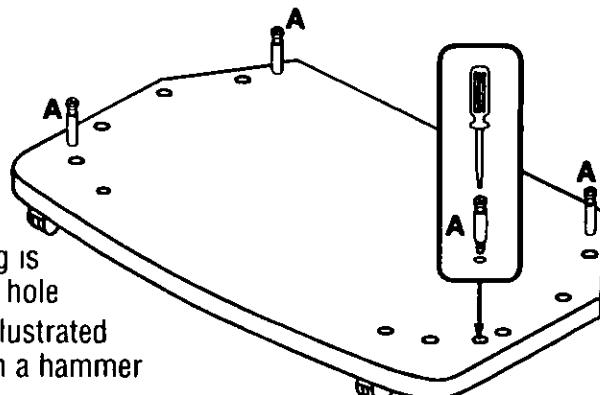


## STEP 3

- Ensure arrow of cam lock housing is facing out towards the pre-drilled hole
- Insert dowels into side panel as illustrated  
If dowels are tight, tap lightly with a hammer

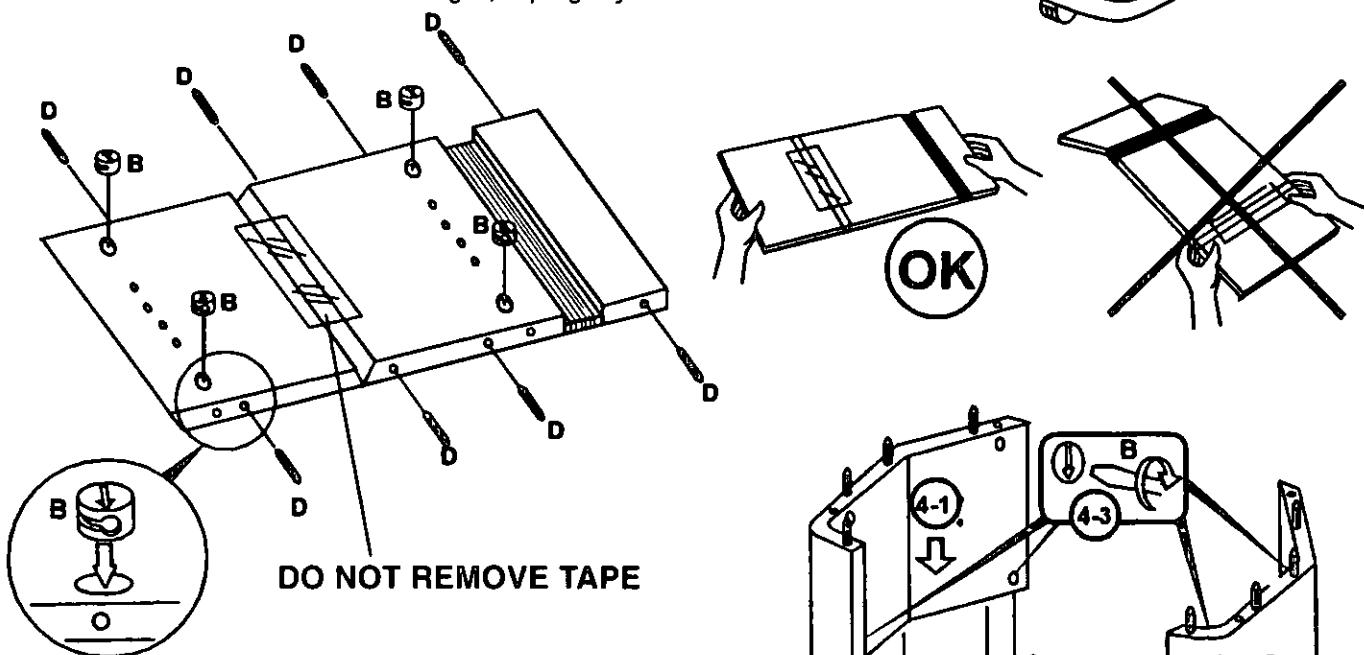


## STEP 4

- After inserting side panel, turn cam lock housing clockwise to lock

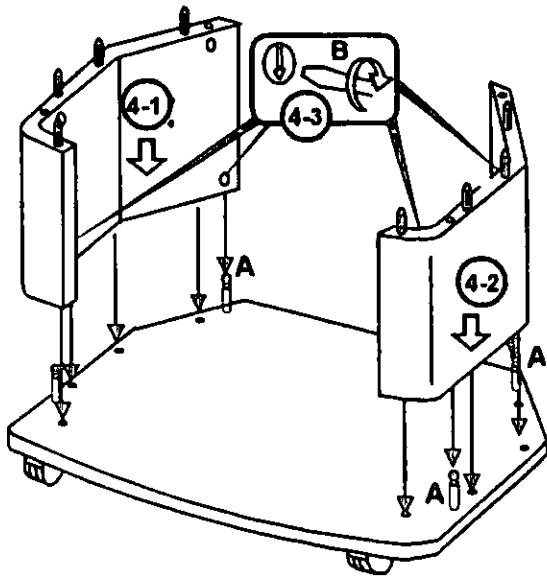


## STEP 5

- Insert shelf pins.
- Insert shelf from top as illustrated.

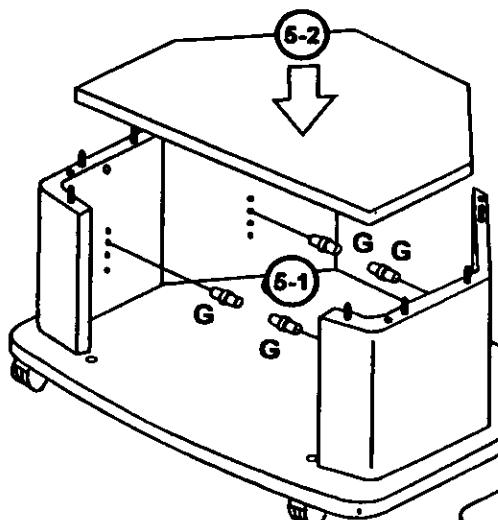


## STEP 6

- Install hardware into top as illustrated

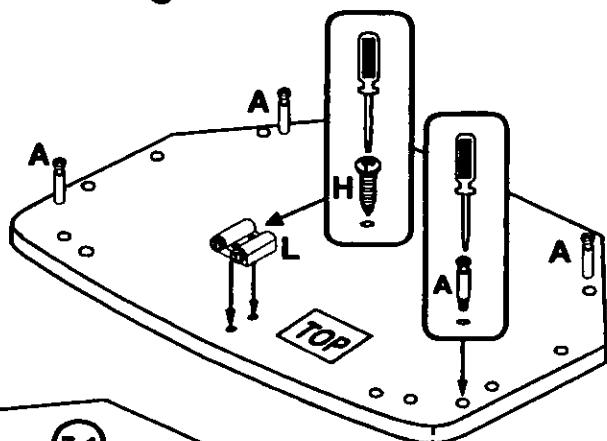



## STEP 7

- After installing top, turn cam lock housing clockwise to lock

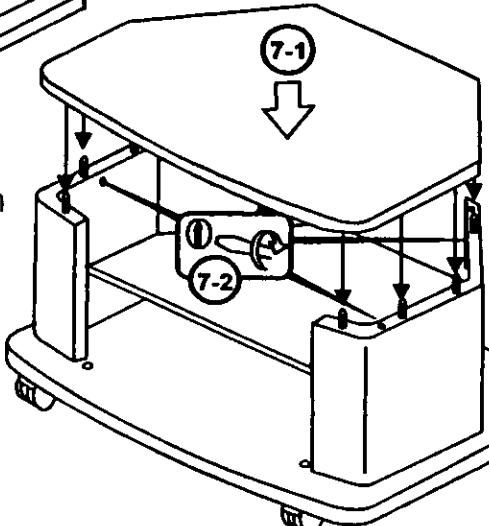

## STEP 8

 - Fasten rear cover with the nail angled along the side panel as shown

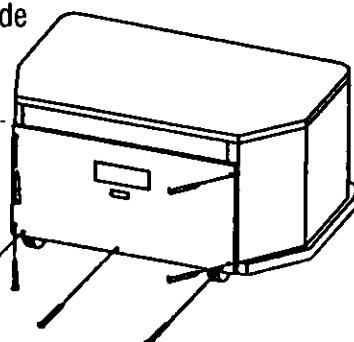


## STEP 9

### Glass Door Installation



(Left glass door installation shown)

- 9-1 • Insert bushings into top and bottom pre-drilled holes
- 9-2 • Insert bottom hinge into bottom bushings
- 9-3 • Insert top hinge into top bushing  
Hold top hinge in place while sliding in glass door and tighten screws
- 9-4 • Remove protective liner from rubber pad and fold over door as shown  
Slide touch plate over rubber pad  
Repeat steps 9-1 to 9-4 for right door installation

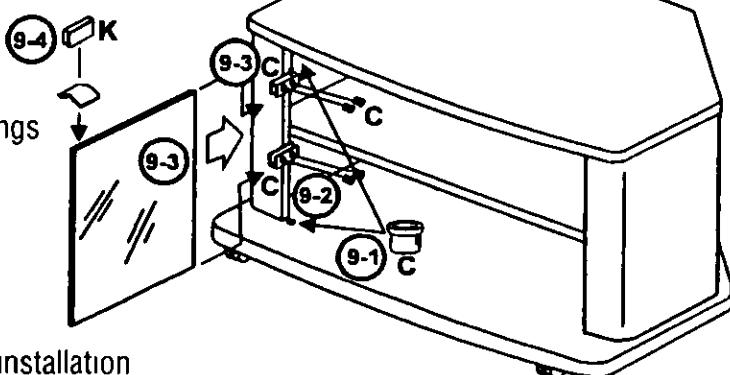

## STEP 10

- Insert pins as shown
- Place television on stand making sure pins are in line with the bottom holes of television

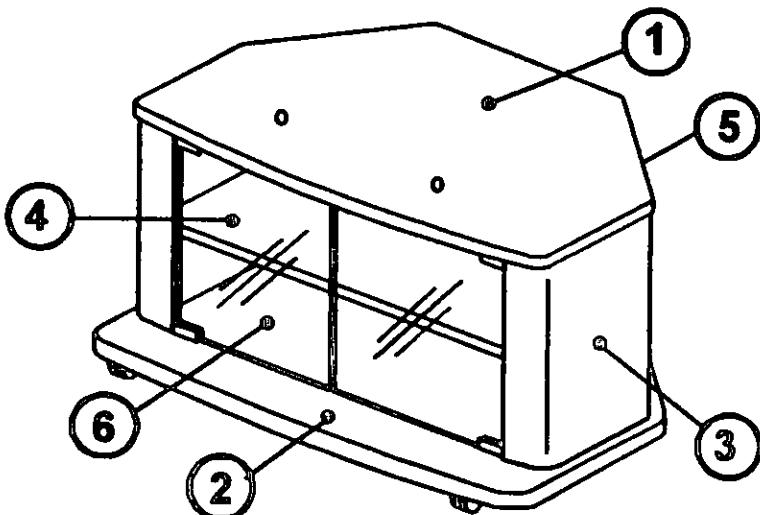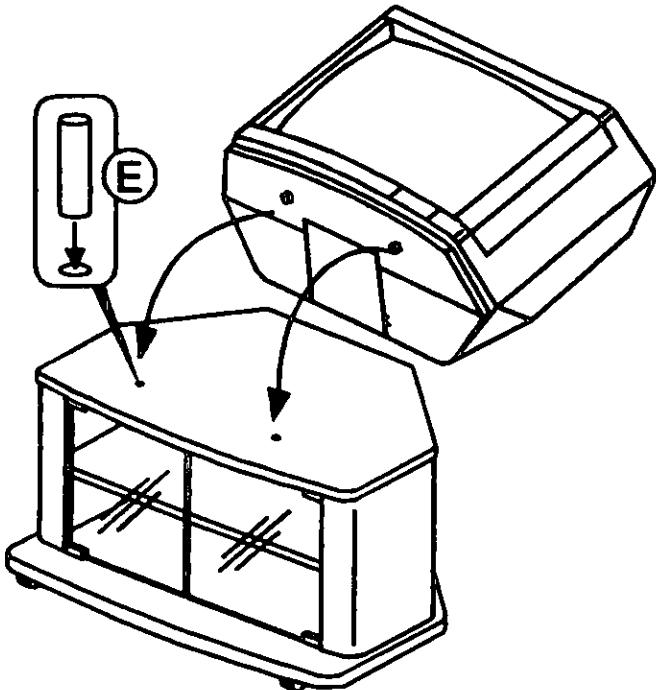

### REPLACEMENT PARTS

Ref.	Description	Qty.	Part No.
1	Top	1	TKD2Q14684
2	Bottom	1	TKD2Q23367P
3	Side Panel	2	TKD2Q24770P
4	Shelf	1	TKD2Q13400
5	Rear Cover	1	TKD2Q17406
6	Glass Door	2	TKG2Q59482

### To maintain appearance we recommend the following:

For Painted Surfaces: Use a damp cloth for cleaning. Do not use any abrasive or chemical based cleaners

Vinyl: Vinyl does not need polishing and is remarkably resistant to almost any stain

• Scuff Marks: Most scratches and scuffs can be removed with fine steel wool and furniture wax

• Stains: A sponge, dipped in warm, soapy water and used to wipe lightly over vinyl will remove most stains

NOTE As with all indoor furniture, this unit should not be exposed to direct sunlight, extreme temperatures or moisture, as this can result in serious irreparable damage

*For improvement purposes, design and specifications are subject to change without notice*

**When making a part(s) inquiry, please quote part number and description.**

**For parts inquiries or for out of warranty purchases:**

**PANASONIC SERVICES COMPANY**

20421 84th Avenue South, Kent, Washington 98032 • Tel 1-800-833-9626 • Fax 1-800-237-9080

© 1997 Matsushita Electric Industrial Co., Ltd. • All rights reserved. Unauthorized copying and distribution is a violation of law