

Lamp Replacement


CAUTION:

Because of the possibility of injury, strictly follow the replacement procedure below.

This product has a High Intensity Discharge (HID) lamp that contains a small amount of mercury. Disposal of these materials may be regulated in your community due to environmental considerations. For disposal or recycling information please contact your local authorities, or the Electronics Industries Alliance: <<http://www.eiae.org>>.


■ Lamp replacement procedure

1 Turn power off, wait until power indicator stops blinking red, then unplug the power cord from the wall outlet and confirm that the area around the lamp unit has cooled down.

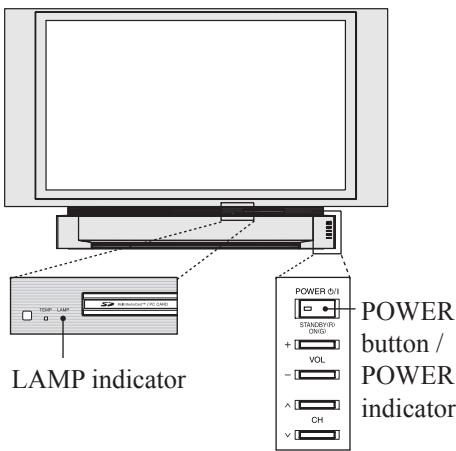


- Please wait more than one hour for lamp replacement.
[If you need to replace the lamp more urgently]
 - The Projection display has a forced cooling feature. After the POWER button is turned OFF, and during the first minute of the normal cooling fan operation, press the VOL+ button on the projection display and ▲ button on the remote control at same time for more than 5 seconds. The cooling fan operates for about 10 minutes. The LAMP indicator flashes red 5 times every 5 seconds.


2 Remove the Front cover. Place your fingertips under the Front cover and pull it from the projection display.

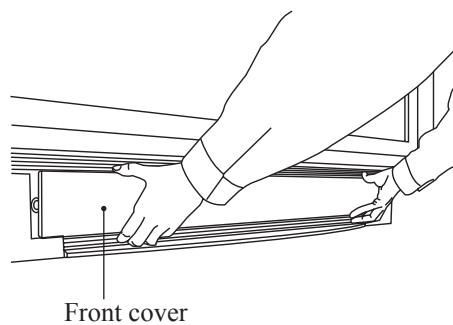

3 Loosen the Lamp cover screw. First read caution and warning labels on lamp cover. Then, loosen the lamp cover screw by using a screwdriver.

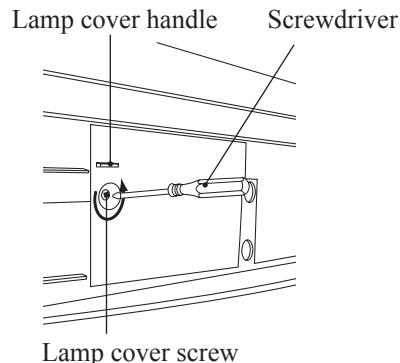

4 Loosen the lamp unit screw with a screwdriver. Then, grasp the lamp unit as shown in the diagram, and slowly remove from the projection display.

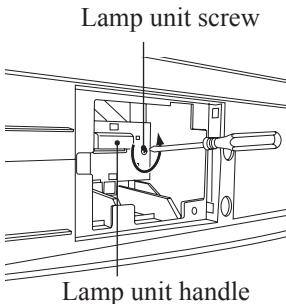


! CAUTION

- Because the lamp unit is hot immediately after its use, touching it may cause burns.
- Please allow the lamp to cool before handling or replacing the lamp unit.

5 Insert the new lamp unit being careful of the insertion direction.

- Press on the arrow mark making sure insertion is done correctly.

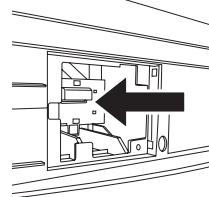

6 Replace the Lamp unit and cover screws. Tighten the lamp unit/cover screw with a screwdriver.

- Properly dispose of old lamp. Please see the operating instructions for the projection display.

Note

Attach the lamp unit and lamp unit housing door securely. If the lamp unit and lamp unit housing door are not attached securely, the protective circuit will be activated and the lamp will not turn on.

7 Replace the Front cover.

After lamp replacement, follow the procedure below


Warning:

Perform lamp time reset only when the lamp has been replaced.

■ Lamp time reset procedure

1 Be sure the power cord is plugged into a properly grounded wall outlet. Then, press the POWER button on the projection display or the remote control to turn the unit on.

2 While pressing the VOL- button on the projection display, hold down the PIP or SPLIT button on the remote control at same time for more than 5 seconds.

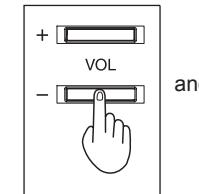


For models PT-50LC13/
PT-60LC13/PT-50LCX63/
PT-60LCX63/PT-43LCX64/
PT-50LCX64/PT-60LCX64



For models PT-43LC14/
PT-50LC14/PT-60LC14



3 When reset procedure is complete, the screen on the right will appear.

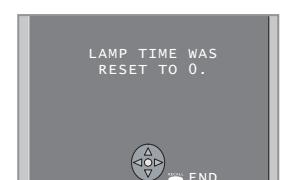

* This screen may be different from the actual screen.

Note

When lamp time reset is finished, the LAMP indicator goes out.