 





 
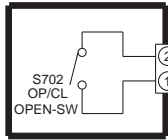


SCHEMATIC DIAGRAM-2



B MAIN CIRCUIT


-  : Main Signal line
-  : AM/FM Signal line
-  : CD Signal line
-  : Playback Signal line
-  : Rec Signal line
-  : +B Signal line




Q702
KTC3199GRTA
MUTING SWITCH


A
TO
CD SERVO CIRCUIT
(CS306B) ON
SCHEMATIC
DIAGRAM-1

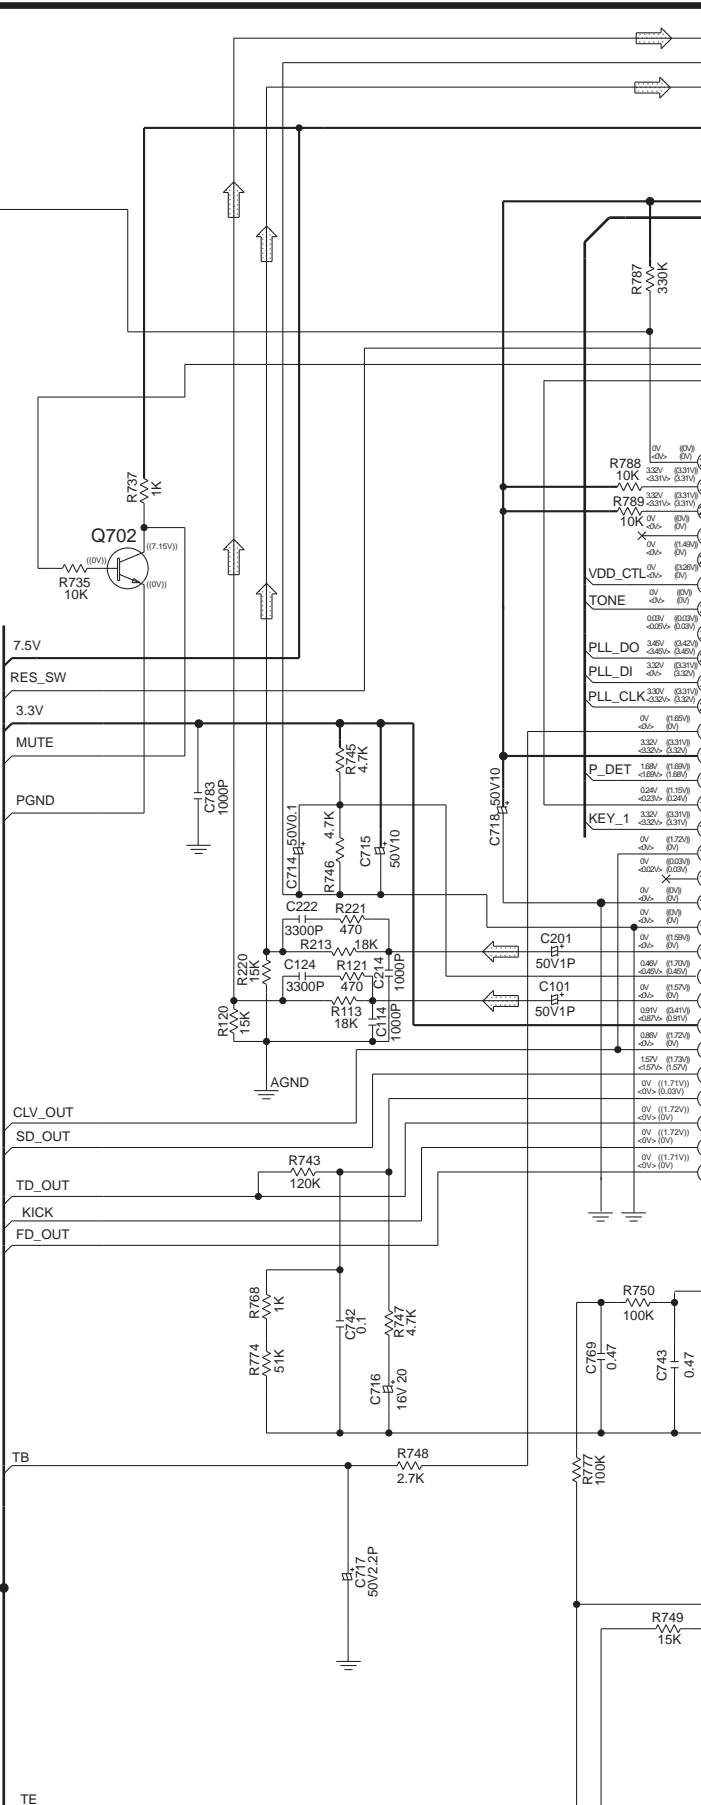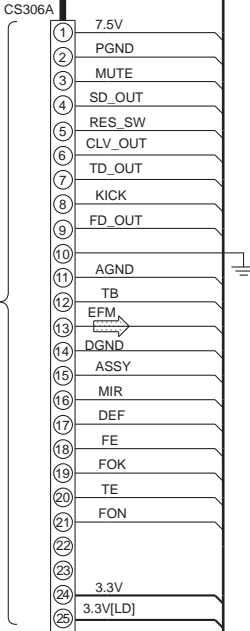

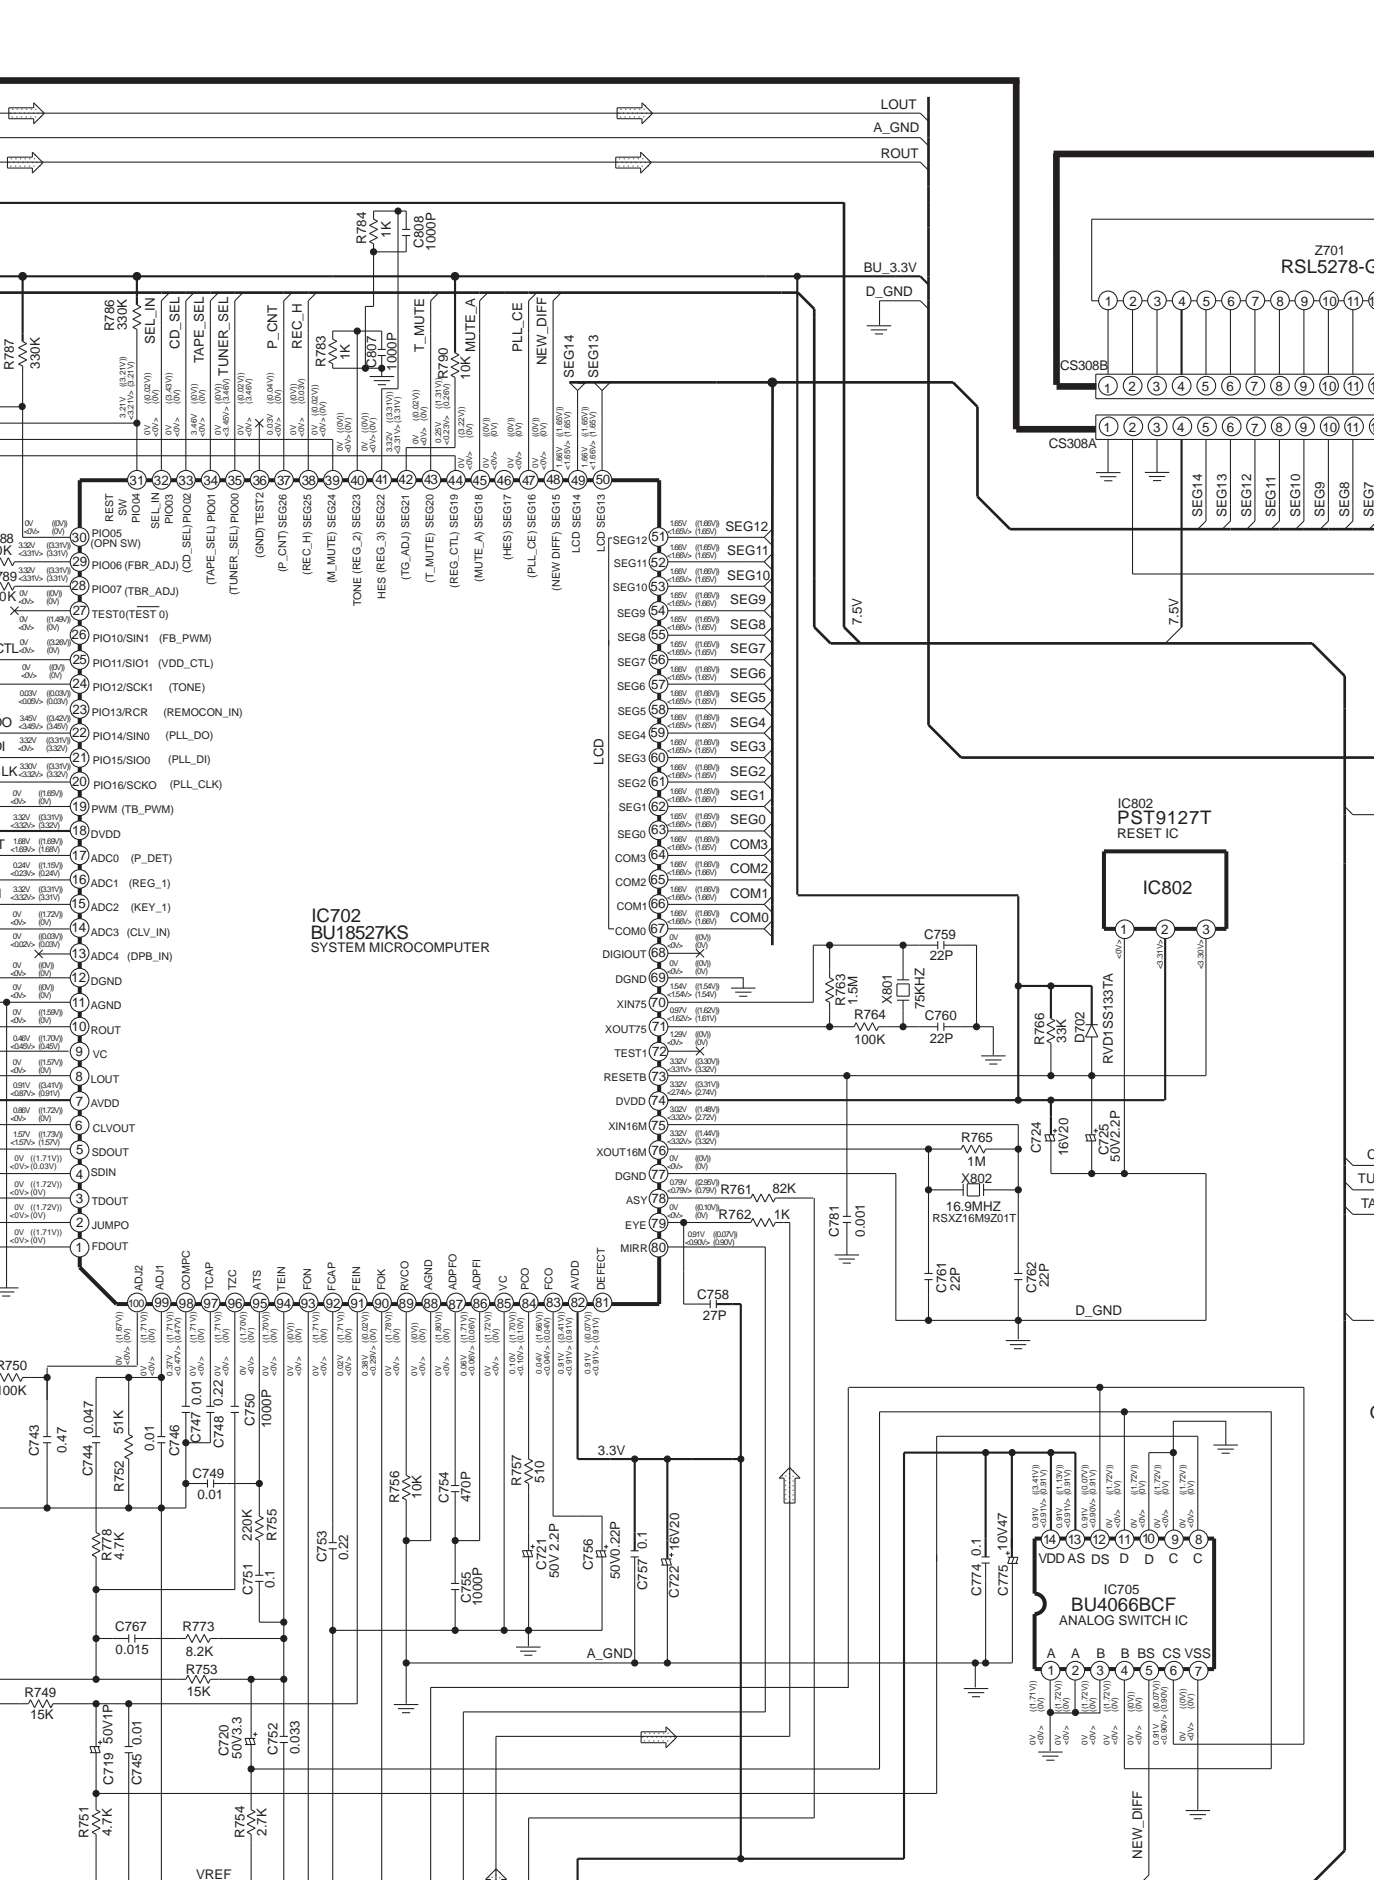


C PANEL CIRCUIT

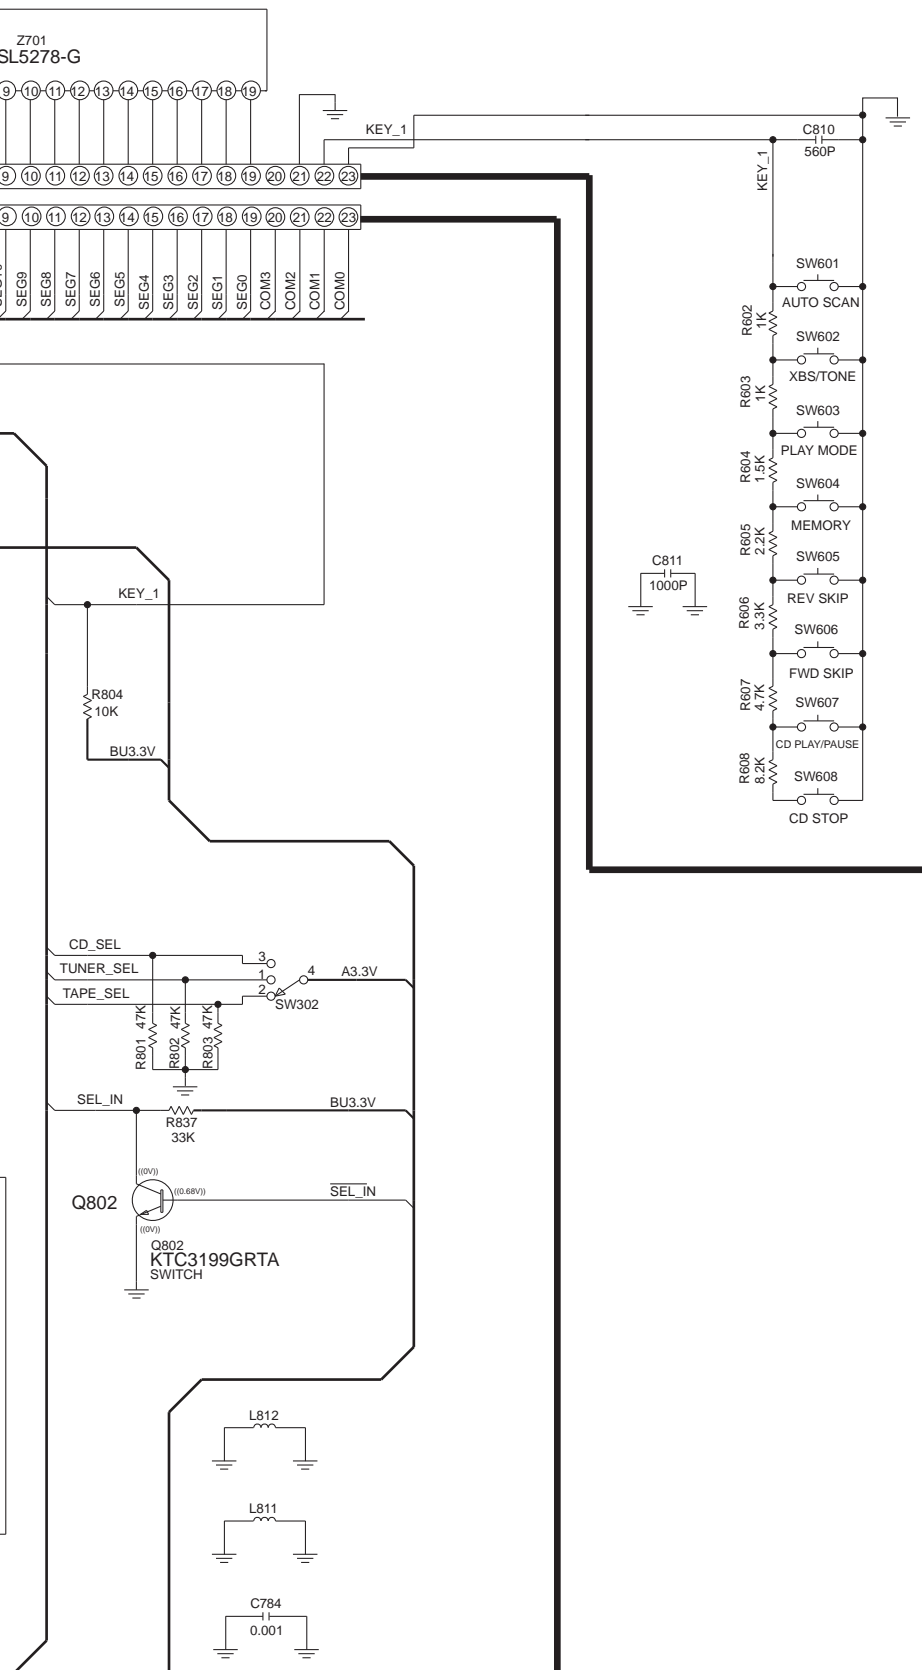

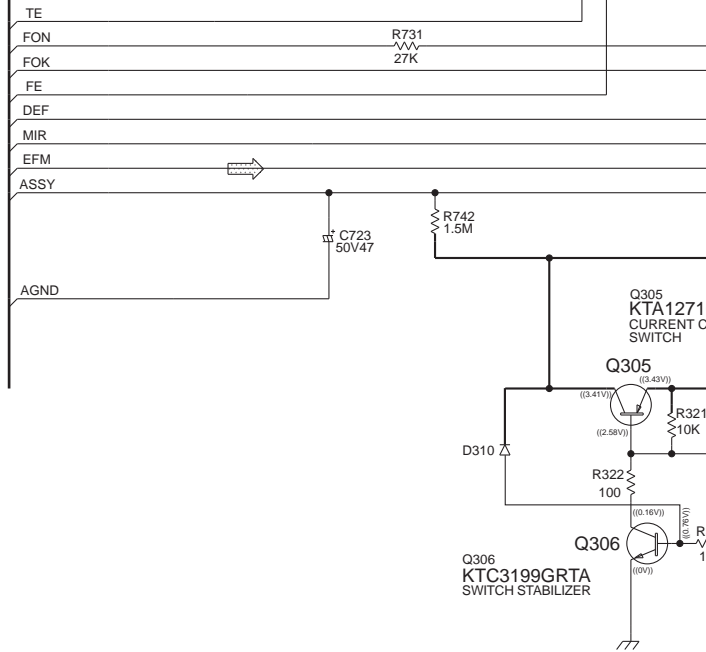

H
TO TUNER CIRCUIT
(W304) ON
SCHEMATIC
DIAGRAM-4

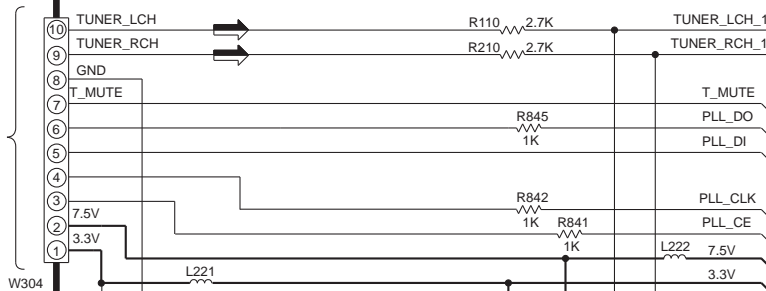

I
TO DECK CIRCUIT
(CP1003) ON
SCHEMATIC
DIAGRAM-6

H305/W305

