




DVD-RV30

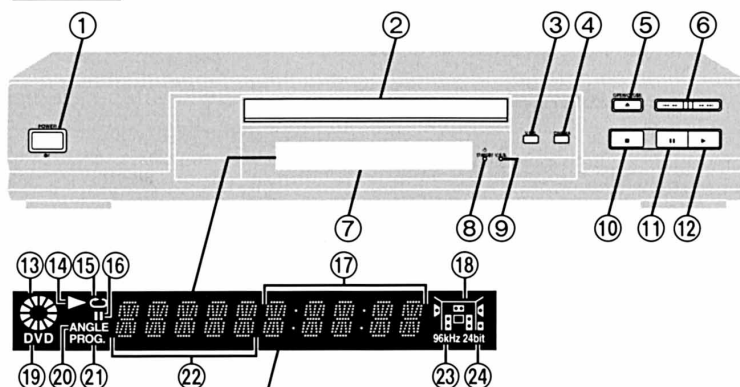

DVD-RV20 DVD-RV10

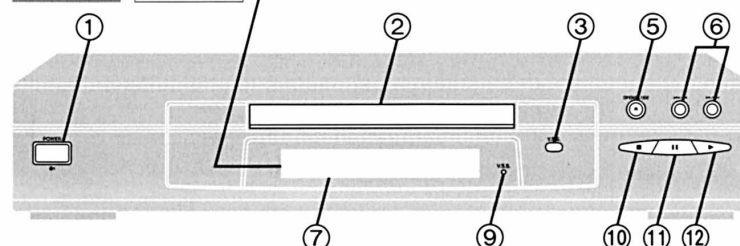



 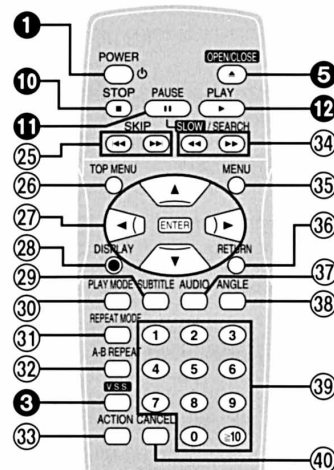
Buttons such as ❶ function in exactly the same way as the buttons on the player.



Player

Page

- ❶ **Power button (POWER ❶/I)** 11
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
- ❷ **Disc tray** 11
- ❸ **Virtual Surround Sound button (V.S.S.)** 18
- ❹ **DVD-RV30 Cinema button (CINEMA)** 18
- ❺ **Disc tray open/close button (▲OPEN/CLOSE)** 11
- ❻ **Skip/Search button (◀◀/▶▶)** 13
- ❼ **FL display**
- ❽ **For units sold outside U.S.A. and Canada**
STANDBY indicator (⚡ STANDBY)
When the unit is connected to the AC power supply, this indicator lights up in standby mode and goes out when the unit is turned on.
- ❾ **Virtual Surround Sound indicator (V.S.S.)** 18
- ❿ **Stop button (■)** 12
- ⓫ **Pause button (⏸)** 13
- ⓬ **Play button (▶)** 11
- ⓭  **Rotates during play.**
Rotates fast clockwise or counterclockwise during rapid advance (reverse).
Rotates slowly clockwise or counterclockwise during slow-motion play. **[DVD] [VCD]**
- ⓮  **Illuminates in the stop mode.**
- ⓯ **Illuminates during playback.**
Flashes when the RESUME function is ON.
- ⓰ **Illuminates during repeat play.**
- ⓱ **Illuminates in the still picture (pause) mode.**
- ⓲ **Elapsed playing time from the start of the title/track during play**
- ⓳ **Audio channel information recorded in the disc being played back (e.g. 2ch or 5.1ch)**



- ⓴ **A DVD is loaded.**
- ⓵ **It is possible to switch the angle.** **[DVD]**
- ⓶ **Illuminates during program play.** **[VCD] [CD]**
- ⓷ **Title/chapter number** **[DVD]**
- ⓸ **Track number** **[VCD] [CD]**
- ⓹ **Linear PCM of 96 kHz sampling is being played.**
- ⓺ **Linear PCM of 24 bit is being played.**

Remote control

Page

- ⓴ **Skip buttons (◀◀, ▶▶ SKIP)** 13
- ⓵ **Top menu button (TOP MENU)** 11
- ⓶ **Cursor buttons (▲, ▼, ◀, ▶)/Enter button (ENTER)** 11
- ⓷ **Display button (● DISPLAY)** 21
- ⓸ **Subtitle button (SUBTITLE)** 17
- ⓹ **Play mode button (PLAY MODE)** 20
- ⓺ **Repeat mode button (REPEAT MODE)** 19
- ⓻ **A-B repeat button (A-B REPEAT)** 19
- ⓼ **Action button (ACTION)** 24
- ⓽ **Slow/Search buttons (◀◀, ▶▶ SLOW/SEARCH)** 14
- ⓾ **Menu button (MENU)** 11
- ⓿ **Return button (RETURN)** 11
- ⓿ **Audio button (AUDIO)** 16
- ⓿ **Angle button (ANGLE)** 17
- ⓿ **Numeric buttons (1-9, 0, ≥10)** 11
• To select a 2-digit number
Example: To select track 23
Press [≥10], then [2] and [3].
- ⓿ **Cancel button (CANCEL)** 20