Service Manual

AOH and Caller ID Compatible



KX-TGA161RUF/RUH/ RUJ/RUR/RUW (Handset)



KX-TG1611RUF/RUH/ RUJ/RUR/RUW (Base Unit)



(Charger Unit)

Configuration for each model

Model No	Base Unit	Handset	Charger Unit
KX-TG1611	1 (TG1611)	1 (TGA161)	
KX-TG1612	1 (TG1611)	2 (TGA161)	1

Model No. KX-TG1611RUF KX-TG1611RUJ KX-TG1611RUR KX-TG1611RUW KX-TG1612RU1 KX-TG1612RU3 KX-TG1612RUH KX-TGA161RUF KX-TGA161RUH KX-TGA161RUJ KX-TGA161RUJ KX-TGA161RUR KX-TGA161RUR

Telephone Equipment

Digital Cordless Phone

F: Purple Version

H: Charcoal Gray Version

J: Beige Version

R: Red Version

W: Ivory Version

(for Russia, Belarus)

MARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE -

There are special components used in this equipment which are important for safety. These parts are marked by \triangle in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these cirtical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

IMPORTANT INFORMATION ABOUT LEAD FREE, (PbF), SOLDERING

If lead free solder was used in the manufacture of this product the printed circuit boards will be marked PbF. Standard leaded, (Pb), solder can be used as usual on boards without the PbF mark. When this mark does appear, please read and follow the special instructions described in this manual on the use of PbF and how it might be permissible to use Pb solder during service and repair work.

- When you note the serial number, write down all 11 digits. The serial number may be found on the bottom of the unit.
- The illustrations in this Service Manual may vary slightly from the actual product.

TABLE OF CONTENTS

		PAGE
1	Safety Precautions	
	1.1. For Service Technicians	
2	Warning	
	2.1. Battery Caution	
	2.2. About Lead Free Solder (PbF: Pb free)	
	2.3. Discarding of P.C. Board	
	Specifications	
4	Technical Descriptions	7
	4.1. Block Diagram (Base Unit)	
	4.2. Circuit Operation (Base Unit)	
	4.3. Block Diagram (Handset)	10
	4.4. Circuit Operation (Handset)	
	4.5. Circuit Operation (Charger Unit)	11
	4.6. Signal Route	12
5	Location of Controls and Components	13
6	Installation Instructions	13
7	Operating Instructions	13
	7.1. For Service Hint	13
8	Service Mode	14
	8.1. Engineering Mode	14
9	Troubleshooting Guide	
	9.1. Troubleshooting Flowchart	
	9.2. Troubleshooting by Symptom (Base Unit and	d
	Charger Unit)	
	9.3. Troubleshooting by Symptom (Handset)	27
10	Disassembly and Assembly Instructions	
	10.1. Disassembly Instructions	
	10.2. How to Replace the Handset LCD	
11	Measurements and Adjustments	
	11.1. The Setting Method of JIG (Base Unit)	
	11.2. Adjustment Standard (Base Unit)	
	11.3. Adjustment Standard (Charger Unit)	
	11.4. The Setting Method of JIG (Handset)	
	11.5. Adjustment Standard (Handset)	
	11.6. Things to Do after Replacing IC	
	11.7. RF Specification	
	11.8. How to Check the Handset Speaker of	
	Receiver	
	11.9. Frequency Table (MHz)	
12	Miscellaneous	
	12.1. How to Replace the Flat Package IC	44
	12.2. How to Replace the Shield Case	
	12.3. Terminal Guide of the ICs, Transistors, Diodes	
	and Electrolytic Capacitors	
13	Schematic Diagram	
	13.1. For Schematic Diagram	
	13.2. Schematic Diagram (Base Unit)	
	13.3. Schematic Diagram (Handset)	
	13.4. Schematic Diagram (Charger Unit)	
14	Printed Circuit Board	
	14.1. Circuit Board (Base Unit)	
	14.2. Circuit Board (Handset)	
	14.3. Circuit Board (Charger Unit)	
15	Exploded View and Replacement Parts List	
13	15.1. Cabinet and Electrical Parts (Base Unit)	
	15.2. Cabinet and Electrical Parts (Base Unit)	
	15.3. Cabinet and Electrical Parts (Charger Unit) 15.4. Accessories	
	10.4. ACCESSURES	01

		PAC	эĿ
15.5.	Replacement Part List		32

1 Safety Precautions

1.1. For Service Technicians

- Repair service shall be provided in accordance with repair technology information such as service manual so as to prevent fires, injury or electric shock, which can be caused by improper repair work.
 - 1. When repair services are provided, neither the products nor their parts or members shall be remodeled.
 - 2. If a lead wire assembly is supplied as a repair part, the lead wire assembly shall be replaced.
 - 3. FASTON terminals shall be plugged straight in and unplugged straight out.
- · ICs and LSIs are vulnerable to static electricity.

When repairing, the following precautions will help prevent recurring malfunctions.

- 1. Cover plastic parts boxes with aluminum foil.
- 2. Ground the soldering irons.
- 3. Use a conductive mat on worktable.
- 4. Do not grasp IC or LSI pins with bare fingers.

2 Warning

2.1. Battery Caution

- 1. Danger of explosion if battery is incorrectly replaced.
- 2. Replace only with the same or equivalent type recommended by the manufacturer.
- 3. Dispose of used batteries according to the manufacture's Instructions.

2.2. About Lead Free Solder (PbF: Pb free)

Note:


In the information below, Pb, the symbol for lead in the periodic table of elements, will refer to standard solder or solder that contains lead.

We will use PbF solder when discussing the lead free solder used in our manufacturing process which is made from Tin (Sn), Silver (Ag), and Copper (Cu).

This model, and others like it, manufactured using lead free solder will have PbF stamped on the PCB. For service and repair work we suggest using the same type of solder.


Caution

- PbF solder has a melting point that is 50°F ~70°F (30°C ~ 40°C) higher than Pb solder. Please use a soldering iron with temperature control and adjust it to 700°F ± 20°F (370°C ± 10°C).
- Exercise care while using higher temperature soldering irons.: Do not heat the PCB for too long time in order to prevent solder splash or damage to the PCB.
- PbF solder will tend to splash if it is heated much higher than its melting point, approximately 1100°F (600°C).
- When applying PbF solder to double layered boards, please check the component side for excess which may flow onto the opposite side (See the figure below).

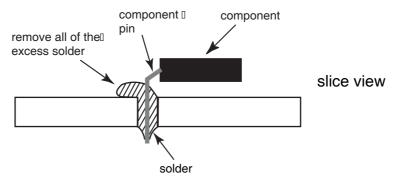

2.2.1. Suggested PbF Solder

There are several types of PbF solder available commercially. While this product is manufactured using Tin, Silver, and Copper (Sn+Ag+Cu), you can also use Tin and Copper (Sn+Cu) or Tin, Zinc, and Bismuth (Sn+Zn+Bi). Please check the manufacturer's specific instructions for the melting points of their products and any precautions for using their product with other materials. The following lead free (PbF) solder wire sizes are recommended for service of this product: 0.3 mm, 0.6 mm and 1.0 mm.

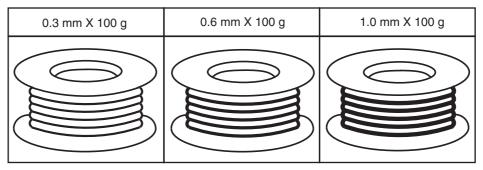

2.3. Discarding of P.C. Board

When discarding P. C. Board, delete all personal information such as telephone directory and caller list or scrap P. C. Board.

3 Specifications

■ Standard:

DECT (Digital Enhanced Cordless Telecommunications),

■ Number of channels:

120 Duplex Channels

■ Frequency range: 1.88 GHz to 1.90 GHz

■ Duplex procedure:

TDMA (Time Division Multiple Access)

■ Channel spacing:

1,728 kHz
■ Bit rate:
1,152 kbit/s
■ Modulation:

GFSK (Gaussian Frequency Shift Keying)

■ RF transmission power:

Approx. 10 mW (average power per channel)

■ Voice coding: ADPCM 32 kbit/s ■ Power source (AC Adaptor):

220-240V AC, 50/60 Hz

Base unit: PNLV226CE0Z

Charger: PNLV226CE0Z

■ Power consumption

Base unit:

Standby: Approx. 0.6 W Maximum: Approx. 3.3 W

Charger:

Standby: Approx. 0.1 W Maximum: Approx. 2.2 W ■ Operating conditions:

0°C-40°C, 20%-80% relative air humidity (dry)

■ Dimensions:

Base unit: Approx. 90 mm x 100 mm x 50 mm Handset: Approx. 49 mm x 30 mm x 159 mm Charger: Approx. 72 mm x 76 mm x 43 mm

■ Mass (weight):

Base unit : Approx. 100 $\rm g$ Handset: Approx. 130 $\rm g$ Charger: Approx. 50 $\rm g$

Note:


• Design and specifications are subject to change without notice.

Note for Service:

- Operation range: Up to 300 m outdoors, Up to 50 m indoors, depending on condition
- Analog telephone connection: Telephone Line

4 Technical Descriptions

4.1. Block Diagram (Base Unit)

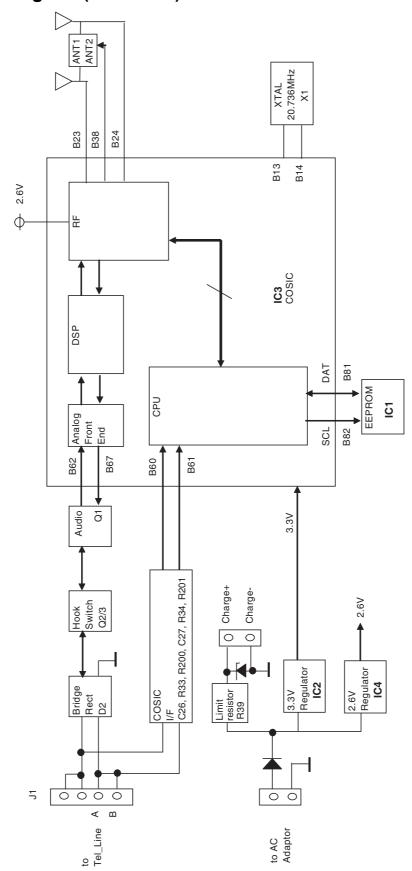

KX-TG1611/1612 BLOCK DIAGRAM (BASE UNIT)

4.2. Circuit Operation (Base Unit)

4.2.1. **Outline**


Base Unit consists of the following ICs as shown in Block Diagram (Base Unit) (P.7).

- DECT BBIC (Base Band IC): IC3 (career module)
 - Handling all the audio, signal and data processing needed in a DECT base unit
 - Controlling the DECT specific physical layer and radio section (Burst Module Controller section)
 - ADPCM codec filter for speech encoding and speech decoding (DSP section)
 - Echo-cancellation and Echo-suppression (DSP section)
 - Any tones (tone, sidetone, ringing tone, etc.) generation (DSP section)
 - DTMF receiver (DSP section)
 - Clock Generation for RF Module
 - ADC, DAC, timer, and power control circuitry
 - All interfaces (ex: RF module, EEPROM, LED, Analog Front End, etc.)
 - PLL Oscillator
 - Detector
 - Compress/Expander
 - First/Second Mixer
 - Amplifier for transmission and reception
- EEPROM: IC1
 - Temporary operating parameters (for RF, etc.)
- · Additionally,
 - Power Supply Circuit (+2.65V output)
 - Crystal Circuit (20.736MHz)
 - Charge Circuit
 - Telephone Line Interface Circuit

4.2.2. Power Supply Circuit

The power is supplied to the DECT BBIC, RF Module, EEPROM, Relay Coil, LED and Charge Contact from AC Adaptor as shown in Fig.101. The power supply is as follows:

- DECT BBIC (IC3): $J2 \rightarrow F1 \rightarrow IC2 \rightarrow IC3-VDDBAT$
- EEPROM (IC1): $J2 \rightarrow F1 \rightarrow IC2 \rightarrow IC3 \rightarrow IC1$
- Charge Contact (CHARGE+): J2 → F1 → R39 → CHARGE+

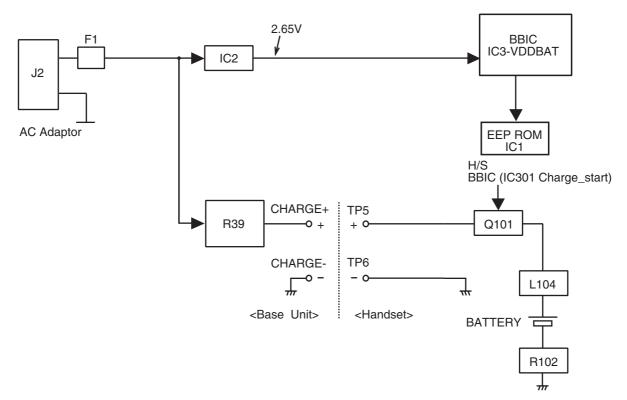

<Fig.101>

4.2.3. Telephone Line Interface

<Function>

- · Bell signal detection
- · Clip signal detection
- ON/OFF hook circuit
- · Audio circuits

Bell & Clip (: Calling Line Identification Presentation: Caller ID) signal detection:

In the standby mode, Q3 is open to cut the DC loop current and decrease the ring load.

When ring voltage appears at the L1T and L1R leads (when the telephone rings), the signal is transferred as follows;

- A \rightarrow C26 \rightarrow R33 \rightarrow R50, C70 \rightarrow R16, R30 \rightarrow R200 \rightarrow LINEN [**BELL & CLIP**]
- B \rightarrow C27 \rightarrow R34 \rightarrow R51, C71 \rightarrow R19, R31 \rightarrow R201 \rightarrow LINEP [**BELL & CLIP**]

ON/OFF hook circuit:

In the standby mode, Q3 is open, and connected as to cut the DC loop current and to cut the voice signal. The unit is consequently in an **off-hook condition**.

When IC3 detects a ring signal or press the TALK Key onto the handset, Q2 turns on and then Q3 turns on, thus providing an **off-hook condition** (active DC current flow through the circuit) and the following signal flow is for the loop current.

• A \rightarrow D2 \rightarrow Q3 \rightarrow Q1 \rightarrow R9 \rightarrow R10 \rightarrow D2 \rightarrow B [**OFF HOOK**]

Audio circuits:

Refer to Signal Route (P.12).

4.2.4. Transmitter/Receiver

Base Unit and Handset mainly consist of RF Module and DECT BBIC.

Base Unit and Handset transmit/receive voice signal and data signal through the antenna on carrier frequency.

Signal Path:

*Refer to Signal Route (P.12).

4.2.4.1. Transmitter Block

The voice signal input from the TEL LINE interface goes to DECT BBIC (IC3) as shown in **Block Diagram (Base Unit)** (P.7) The voice signal passes through the analog part of IC3 where it is amplified and converted to a digital audio stream signal. The burst switch controller processes this stream performing encryption and scrambling, adding the various other fields to produce the GAP (**G**eneric **A**ccess **P**rofile) standard DECT frame, assigning to a time slot and channel etc.

In IC3, the carrier frequency is changing, and frequency modulated RF signal is generated and amplified, and radiated from antenna. Handset detects the voice signal or data signal in the circuit same as the following explanation of Receiver Block.

4.2.4.2. Receiver Block


The signal of 1.9 GHz band (1.881792 GHz \sim 1.897344 GHz) which is input from antenna is input to IC3 as shown in **Block Diagram (Base Unit)** (P.7).

In IC3, the signal of 1.9 GHz band is demodulated, and goes to IC2 as GAP (**G**eneric **A**ccess **P**rofile) standard DECT frames. It passes through the decoding section burst switch controller where it separates out the frame information and performs deencryption and de-scrambling as required. It then goes to the DSP section where it is turned back into analog audio. This is amplified by the analog front end, and goes to the TEL LINE Interface.

4.2.5. Pulse Dialling

During pulse dialing the hookswitch (Q3, Q4) is used to generate the pulses using the HOOK control signal, which is set high during pulses. To force the line impedance low during the "pause" intervals between dial pulses, the PULSE_DIAL signal turns on Q2.

4.3. Block Diagram (Handset)

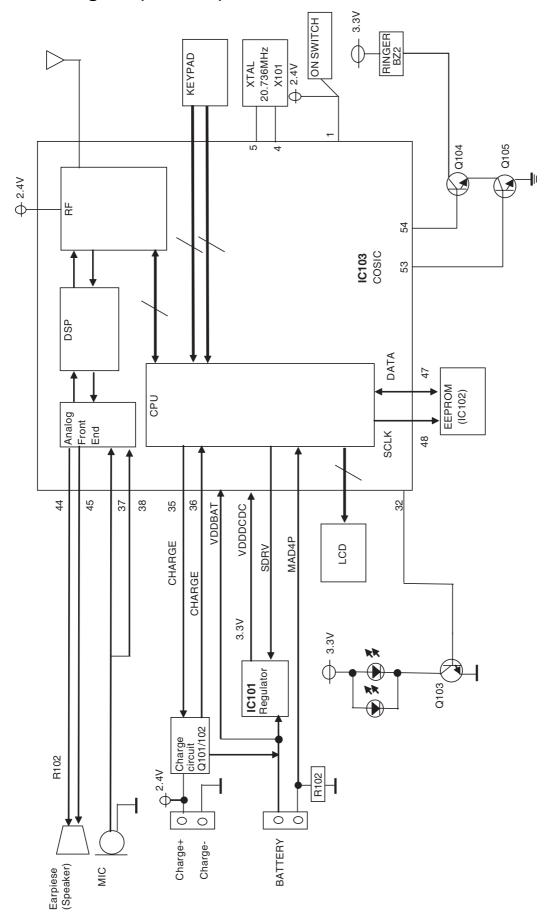

KX-TGA161 BLOCK DIAGRAM (HANDSET)

4.4. Circuit Operation (Handset)

4.4.1. Outline

Handset consists of the following ICs as shown in Block Diagram (Handset) (P.10).

- DECT BBIC (Base Band IC): IC103
 - All data signals (forming/analyzing ACK or CMD signal)
 - All interfaces (ex: Key, Detector Circuit, Charge, DC/DC Converter, EEPROM, LCD)
 - PLL Oscillator
 - Detector
 - Compress/Expander
 - Amplifier for transmission and reception
- EEPROM: IC102
 - Temporary operating parameters

4.4.2. Power Supply Circuit/Reset Circuit

Circuit Operation:

When power on the Handset, the voltage is as follows;

BATTERY (2.2 V
$$\sim$$
 2.6V) \rightarrow D107 \rightarrow IC103-VDDBAT \rightarrow IC103-SDRV \rightarrow R107 \rightarrow L103 \rightarrow IC101 \rightarrow 3.3V

The Reset signal generates R121, C186 and ≒2.6V.

4.4.3. Charge Circuit

Circuit Operation:

When charging the handset on the Base Unit, the charge current is as follows;

 $DC+ \rightarrow F1 \rightarrow R39 \rightarrow CHARGE+ (Base) \rightarrow CHARGE+ (Handset) \rightarrow Q101 \rightarrow L104 \rightarrow BATTERY+...$ Battery...

 $BATTERY- \rightarrow R102 \rightarrow GND \rightarrow CHARGE- (Handset) \rightarrow CHARGE- (Base) \rightarrow GND \rightarrow DC- (GND)$

In this way, the BBIC on Handset detects the fact that the battery is charged.

The charge current is controlled by switching Q101 of Handset.

Refer to Fig.101 in Power Supply Circuit (P.8).

4.4.4. Battery Low/Power Down Detector

Circuit Operation:

"Battery Low" and "Power Down" are detected by BBIC which check the voltage from battery.

The detected voltage is as follows;

· Battery Low

Battery voltage: V (Batt) < 2.20V

The BBIC detects this level and "
is displayed on LCD and "battery alarm" starts ringing.

• Power Down


Battery voltage: V (Batt) < 2.05V

The BBIC detects this level and power down.


4.5. Circuit Operation (Charger Unit)

4.5.1. Power Supply Circuit

The power supply is as shown.

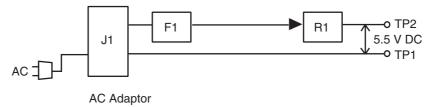

4.6. Signal Route

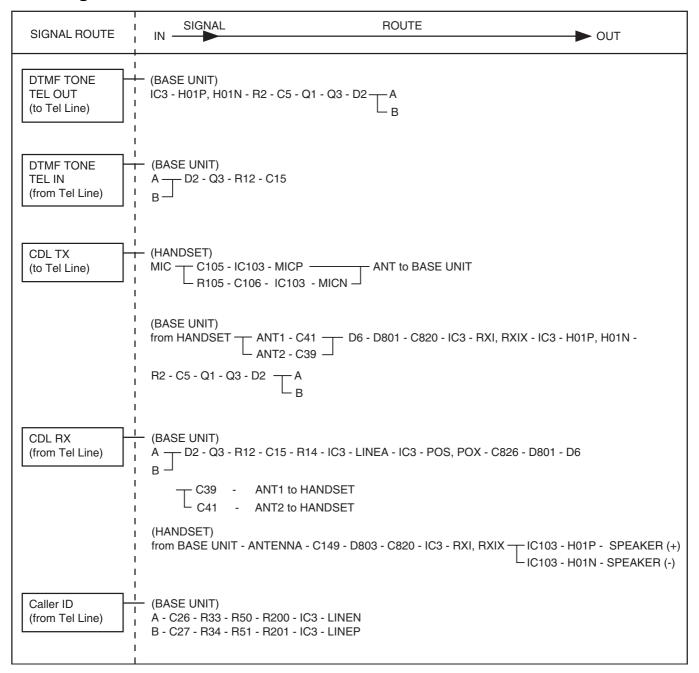

5 Location of Controls and Components

Refer to the Operating Instructions.

Note

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

6 Installation Instructions

Refer to the Operating Instructions.

Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

7 Operating Instructions

Refer to the Operating Instructions.

Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

7.1. For Service Hint

Items	Contents		
Battery	You could use other rechargeable batteries sold in a market, but the unit is not guaranteed to work properly.		
	The battery strength may not be indicated correctly if the battery is disconnected and connected again, even after it is fully charged. In that case, by recharging the battery as mentioned in the Operating Instructions, you will get a correct indication of the battery strength.		
PIN Code	Base unit PIN 1 [□/OK] 2 [♣]: "Setup" → [□/OK] 3 [♣]: "Change PIN" → [□/OK] 4 Old PIN → Input Current PIN 5 New PIN → Input New PIN 6 Re-enter PIN → Input New PIN 7 Saved 8 [★①]		


8 Service Mode

8.1. Engineering Mode

8.1.1. Base Unit

Important:

Make sure the address on LCD is correct when entering new data. Otherwise, you may ruin the unit.

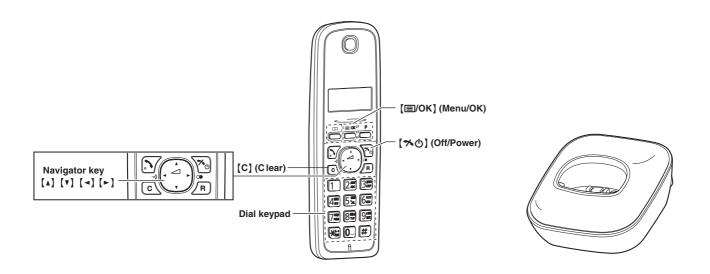

H/S key operation

H/S LCD

- 1). Register a Handset to a Base Unit.
- 2). Press [/OK] (Menu/OK) key.

Ringer Setup

3). Press "#004".A is Address D is data

- A:0000 D:00 **Y**
- 4). Press "XXXX"(Address), then press [宣/OK] (Menu/OK) key. D is current setting data
- A:XXXX D:XX
- 5). Press "YY"(Data),then press [国/OK] (Menu/OK) key.D is new setting data
- A:XXXX D:YY

6). Repeat from Step 4).



If press [*/①] (Off/Power) twice anytime, return to standby mode.

Note:

(*1) Refer to For Service Hint (P.13).

Frequency Used Items (Base Unit)
Note:

*: When you enter the address, please refer to the table below.

Desired Number (hex)	Input Keys	Desired Number (hex)	Input Keys
0	0	A	Press and keep 1
1	1	В	Press and keep 2
		C	Press and keep 3
		D	Press and keep 4
		E	Press and keep 5
9	9	F	Press and keep 6

ex.)

Items (*2)	Address	Default Data	New	Data	Remarks
C-ID (FSK) sensitivity	01 C1~ 01	00 28	(3dB up)	(6dB up)	When hex changes from "0028" to "00A4" or
	C2		00 A4	00 E7	"00E7", gain increases by 3dB or 6dB.
C-ID (DTMF) sensitivity	01 B7	34	(3dB up)	(6dB up)	When hex changes from "34" to "38" or "3C", gain
			38	3C	increases by 3dB or 6dB.
Frequency	01 63~ 01 64	Given value	-	-	Use these items in a READ-ONLY mode to confirm
ID	00 10~ 00 14	Given value	-	-	the contents. Careless rewriting may cause serious
					damage to the computer system.
Bell length	015D~015E	02 EE(6sec) (*1)	01 77(3sec)	00 FA (2sec)	This is time until bell stops ringing. (Unit:8ms)
PULSE Dial speed	0129~012A	01 90(40msec)	00 C8(20msec)	-	This is pulse make time. (Unit:0.1ms)
(10PPS -> 20PPS)		(*3)			
	012B~012C	02 58(60msec)	01 2C(30msec)	-	This is pulse break time. (Unit:0.1ms)
		(*3)			
	012D~012E	23 28(900msec)	11 30(440msec)	-	This is inter-digit time in pulse mode.
		(*3)			(Unit:0.1ms)

(*1)

Bell length	02EE(hex) = 750(dec) → 750 x 8msec = 6000msec(6sec)
PULSE Dial speed	0190(hex) = 400(dec) → 400 x 0.1msec = 40msec
(10PPS -> 20PPS)	0258(hex) = 600(dec) → 600 x 0.1msec = 60msec
	2328(hex) = 9000(dec) → 9000 x 0.1msec = 900msec


(*2)


Items	Description
C-ID (FSK) sensitivity	FSKGain_shiftgain
C-ID (DTMF) sensitivity	Foutgains:HPFilter Foutgains
Frequency	Setting value of FREQ_TRIM_REG
ID	ID
Bell length	Time until it stops bell.

8.1.2. Handset

Important:

Make sure the address on LCD is correct when entering new data. Otherwise, you may ruin the unit.

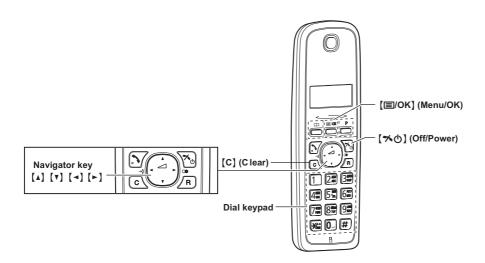

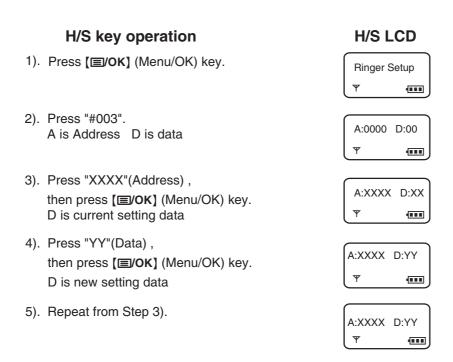

If press [%/0] (Off/Power) twice anytime, return to standby mode.

Note:

(*1) Refer to For Service Hint (P.13).

Frequency Used Items (Handset)

Note:

*: When you enter the address, please refer to the table in **Note:** (P.14) of **Engineering Mode**. ex.)

Items (*4)	Address	Default Data	New Data	Remarks
Sending level	01 31	07 (36 dB)	06 (30 dB) 05 (24 dB) 04 (18 dB) 03 (12 dB)	(*1)
Receiving level	01 3D	BB4A (-2.4 dB)		Volume 5
	01 3B	AA33 (-5.4 dB)		Volume 4
	01 39	9995 (-8.4 dB)		Volume 3 default setting
	01 37	99C2 (-11.4 dB)		Volume 2
	01 35	A8A5 (-14.4 dB)		Volume 1 (*2)

- (*1) This model has already been setting Max.
- (*2) Each Volume level is different by 3dB, (I.e Volume 3 and Volume 2...) If one of Receiving level is changed it is highly recommended changing other Receiving levels as well.
- (*3) Use these items in a READ-ONLY mode to confirm the contents. Careless rewriting may cause serious damage to the Handset.


(*4)

Items	Description
Sending level	Analog Front End MIC Setting for Handset Mode
Receiving level	Analog Front End LSR Setting for Handset Mode
Battery Low	ADC value for battery low detection
Frequency	Setting value of FREQ_TRIM_REG
ID	International Portable Part Equipment Identities

9 Troubleshooting Guide

9.1. Troubleshooting Flowchart

Flow Chart

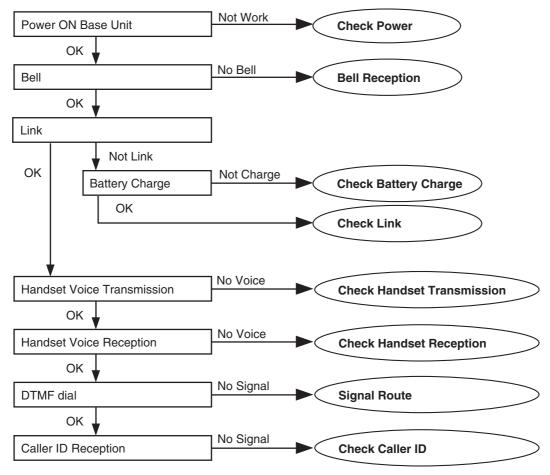

Cross Reference:

Check Power (P.19)

Bell Reception (P.23)

Check Battery Charge (P.20)

Check Link (P.21)

Check Handset Transmission (P.23)

Check Handset Reception (P.23)


Signal Route (P.12)

Check Caller ID (P.23)

9.1.1. Check Power

9.1.1.1. Base Unit


Is the AC Adaptor inserted into AC outlet? (Check AC Adaptor's specification.)

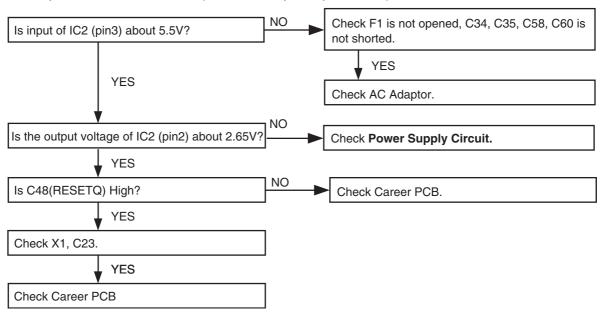

Cross Reference

Power Supply Circuit (P.8)

9.1.1.2. Handset

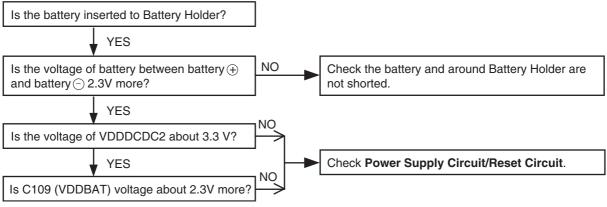


Cross Reference

Power Supply Circuit/Reset Circuit (P.11)

9.1.2. Check Battery Charge


9.1.2.1. Base Unit

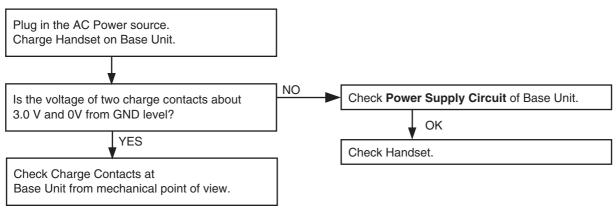

Cross Reference:

Power Supply Circuit (P.8)

9.1.2.2. Handset

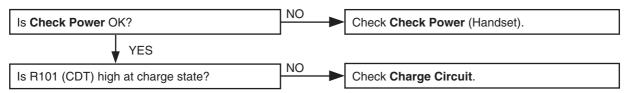


Cross Reference:

Check Power (P.19)

Charge Circuit (P.11)

9.1.2.3. Charger Unit

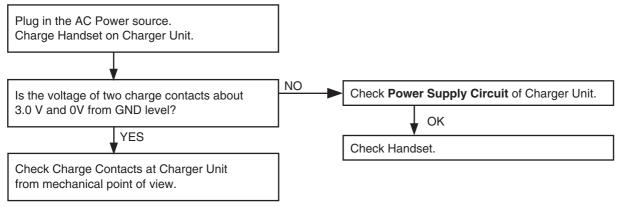


Cross Reference:

Power Supply Circuit (P.11)

9.1.3. Check Link

9.1.3.1. Base Unit

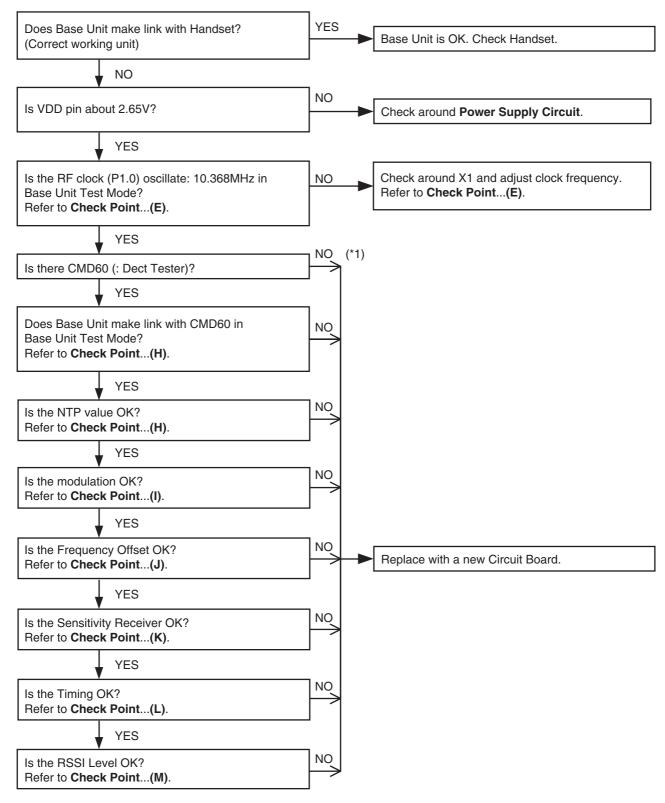

Cross Reference:


Power Supply Circuit (P.8)

Check Point (Base Unit) (P.24)

Note:

(*1) Refer to Troubleshooting by Symptom (Base Unit and Charger Unit) (P.24).

9.1.3.2. Handset

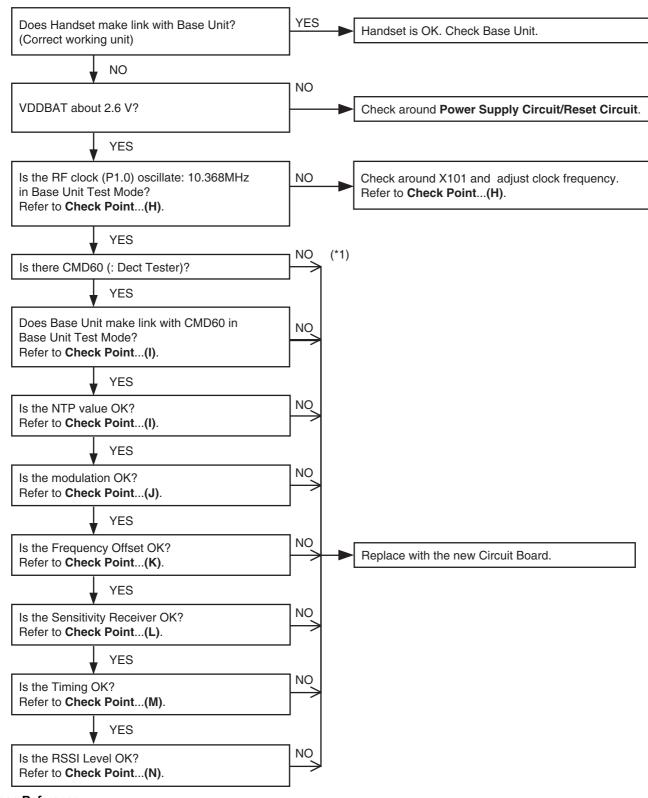

Cross Reference


Power Supply Circuit/Reset Circuit (P.11)

Check Point (Handset) (P.27)

Note:

(*1) Refer to Troubleshooting by Symptom (Handset) (P.27).

9.1.4. Check Handset Transmission

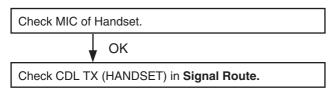

Cross Reference:

Signal Route (P.12)

9.1.5. Check Handset Reception



Cross Reference:

How to Check the Handset Speaker or Receiver (P.43). Signal Route (P.12)

9.1.6. Check Caller ID


Check Caller ID in Signal Route.

Cross Reference:

Signal Route (P.12)

9.1.7. Bell Reception

9.1.7.1. Handset

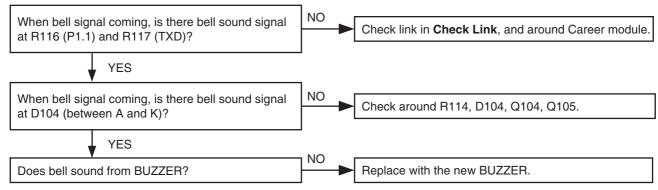

Cross Reference:

Telephone Line Interface (P.9)

Check Link (P.21)

How to Check the Handset Speaker or Receiver (P.43)

9.2. Troubleshooting by Symptom (Base Unit and Charger Unit)

If your unit has below symptoms, follow the instructions in remedy column. Remedies depend on whether you have DECT tester (*1) or not.

	Remedy (*2)		
Symptom	You don't have DECT Tester.	You have DECT Tester. (Model Number : CMD60)	
You cannot dial.	Check item (A)-(E).	Check item (A)-(E), (G)-(L).	
You cannot hear the caller's voice.	Check item (A)-(D).	Check item (A)-(D), (G)-(I), (K).	
You cannot use handset a little away from base unit even if the handset is within range of the base unit.	-	Check item (G), (J).	
The acoustic transmission level is high or low.	Check item (N).	Check item (N).	
The acoustic reception level is high or low.	Check item (N).	Check item (N).	
The unit does not link.	Check item (A)-(F).	Check item (A)-(L).	
The unit cannot charge.	Check item (M).	Check item (M).	

Note:

- (*1) A general repair is possible even if you don't have the DECT tester because it is for confirming the levels, such as Acoustic level in detail.
- (*2) Refer to Check Point (Base Unit) (P.24)

9.2.1. Check Point (Base Unit)

Please follow the items below when BBIC or EEPROM is replaced.

Note:

After the measuring, suck up the solder of TP.

*: PC Setting (P.34) is required beforehand.

The connections of simulator equipment are as shown in Adjustment Standard (Base Unit) (P.36).

	Items	Adjustment	Procedure	Check or
		Point		Replace Parts
(A)	2.65V Supply Confirmation	-	1. Confirm that the voltage between VDD and GND is 2.65V ± 0.2V.	C58, C60, F1 C35, C34, IC2
	Committation			C29, R35, R36
				C28, 133, 130 C28. C103.
				C11, C48, R17
(B)	VDDIO Confirmation	-	1. Confirm that the voltage between C24 and GND is 2.5 ± 0.3.	IC3, X1, C22
				C23, C17
(C)*	BBIC Confirmation	-	BBIC Confirmation (Execute the command "getchk").	IC3, X1, C22
			Confirm the returned checksum value.	C23, C17
			Connection of checksum value and program number is shown below.	
			ex.) checksum value program number	
			0152 DCM1EB	
(D)*	BBIC Clock Adjustment	P1.0	Execute the command "EnableClockOutput".	IC3, X1, C22
	(Important)	CLK	2. Input Command "GetFreq", then you can confirm the current value.	C23, C17
			3. Check X'tal Frequency. (10.368 MHz ± 100 Hz).	
			4. If the frequency is not 10.368MHz ± 100Hz, adjust the frequency of CLK	
			executing the command "setfreq xx xx (where xx is the value)" so that the	
			reading of the frequency counter is 10.368000 MHz ± 5 Hz.	
(E)*	Hookswitch Check with	-	Connect J1 (Telephone Socket) to Tel-simulator which is connected with 600	
	DC Characteristics		Ω.	D2, Q3, R26,
			2. Set line voltage to 48V at on-hook condition and line current to 40mA at off-	
			hook condition of normal telephone. 3. Execute the command "hookoff".	C21, R18, R15
			Execute the command nookon. Confirm that the line current is 40mA ± 5mA.	
			4. Confirm that the line current is 40mA ± 5mA. 5. Execute the command "hookon".	
			6. Confirm that the line current is 0mA + 2mA.	
			o. Commin that the line current is only . Zing.	

	Items	Adjustment Point	Procedure	Chec	
(F)*	DTMF Generator Check	-	 Connect J1 (Telephone Socket) to DTMF tester. Execute the command "hookoff" and "dtmf_up". Confirm that the high frequency (1477.06Hz) group is -3.0 ± 2dBm. Execute the command "dtmf_low". Confirm that the low frequency (852.05Hz) group is -6.0 ± 2dBm. 	IC3, R C5, R R10, C R6, R1 Q3, R2 Q2, C4 R18, R C30, C3	7, R9, 29, Q1, 12, D1, 6, R22, 5, C21, 15, D2,
(G)*	Transmitted Power Confirmation	-	Remove the Antenna before starting steps from 1 to 5. 1. Configure the DECT tester (CMD60) as follows; <setting> • Test mode: FP • Traffic Channel: 5 • Traffic Slot: 4 • Mode: Loopback • PMID: 00000 2. Execute the command "testmode". 3. Initiate connection from DECT tester. ("set up connect") 4. Execute the command "ANT2". 5. Confirm that the NTP value at ANT is 19dBm ~ 25dBm.</setting>	IC3, C807, C826, C817, C39, R802, C803, C806, C804	C813, C819, D801, D6, C38, C823, C44, C802,
, ,	Modulation Check and Adjustment	ANT	Follow steps 1 to 3 of (G) . 4. Confirm that the B-Field Modulation is -350±50kHz/div, +350±50kHz/div using data type Fig31.	IC3, C807, C826, C817, C39, R802, C803, C806,	C813, C819, D801, D6, C38, C823, C44, C802,
(I)*	Frequency Offset Check	-	Follow steps 1 to 3 of (G) . 4. Confirm that the frequency offset is -50kHz ~ +50kHz.	IC3, C807, C826, C817, C39, R802, C803, C806,	C813, C819, D801, D6, C38, C823, C44, C802,
(J)*	Sensitivity Receiver Confirmation	-	Follow steps 1 to 3 of (G) . 4. Set DECT tester power to -84dBm. 5. Confirm that the BER is < 1000ppm.	IC3, C820, C817, C39, R801, C803, C806, C804	C830, D801, D6, C38, C821, C44, C802,
(K)*	Timing Confirmation	-	Follow steps 1 to 3 of (G) . 4. Confirm that the Timing accuracy is < ± 2.0ppm.	IC3, C807, C826, C817, C39, R802, C803, C806, C804	C813, C819, D801, D6, C38, C823, C44, C802,
	RSSI Level Confirmation	-	Follow steps 1 to 3 of (G). 4. Set DECT tester power to -70dBm. 5. Execute the command "readrssi". 6. Confirm: 25 < returned value < 43 (hex) (0E ± A (hex)) 1. Connect Charge Contact 12Ω/2W resistor between charge+ and charge	IC3, C807, C826, C817, C39, R802, C803, C806, C804	C813, C819, D801, D6, C38, C823, C44, C802,
()			Measure and confirm voltage across the resistor is 3.0V ± 0.2V.	R39, C6	

KX-TG1611RU/KX-TG1612RU/KX-TGA161RU

	Items	Adjustment Point	Procedure	Check or Replace Parts
(N)*	Audio Check	-	 Link with Handset which is connected to Line Simulator. Set line voltage to 48V and line current to 50mA. Input -45dBm(600Ω)/1kHz to MIC of Handset. Measure the Level at Line I/F and distortion level. Confirm that the level is -5.5 ± 3dBm and that the distortion level is < 5% at TEL Line (600Ω Load). Input -20dBm(600Ω)/1kHz to Line I/F. Measure the level at Receiver of Handset and distortion level (*Receive volume set to third position from minimum). Confirm that the level is -23.5 ± 3dBm and that the distortion level is < 5% at Receiver (150Ω Load). 	

9.2.2. Check Point (Charger Unit)

	Items	Adjustment	Procedure	Check or
		Point		Replace Parts
(A)	Charging Check	-	 Connect Charge Contact 10Ω/2W resistor between charge+ and charge 	R1, F1
			Measure and confirm voltage across the resistor is 2.8V ± 0.3V.	

Note:

After the measuring, suck up the solder of TP.

The connection of adjustment equipment are as shown in Adjustment Standard (Charger Unit) (P.37).

9.3. Troubleshooting by Symptom (Handset)

If your unit has below symptoms, follow the instructions in remedy column. Remedies depend on whether you have DECT tester (*1) or not.

	Remedy (*2)		
Symptom	You don't have DECT Tester.	You have DECT Tester. (Model Number : CMD60)	
Battery strength is not indicated correctly by Battery icon.	Check item (A)-(C), (F)-(G).	Check item (A)-(C), (F)-(G).	
You cannot hear the caller's voice.	Check item (A)-(C), (H).	Check item (A)-(C), (H)-(K), (M).	
You cannot use handset a little away from base unit even if the handset is within range of the base unit.	-	Check item (I), (L).	
Does not link between base unit and handset.	Check item (A)-(C), (H).	Check item (A)-(C), (H)-(N).	
The Audio level is high or low.	Check item (O).	Check item (O).	

Note:

- (*1) A general repair is possible even if you don't have the DECT tester because it is for confirming the levels, such as Acoustic level in detail.
- (*2) Refer to Check Point (Handset) (P.27)

9.3.1. Check Point (Handset)

Please follow the items below when BBIC or EEPROM is replaced.

Note:

After the measuring, suck up the solder of TP.

*: PC Setting (P.38) is required beforehand.

The connections of simulator equipments are as shown in Adjustment Standard (Handset) (P.40).

	Items	Adjustment	Procedure	Chec	ck or
		Point		Replace	e Parts
(A)	Battery Supply	-	1. Confirm that the consumption current is < 200mA, that is, there is no short	C143,	R102,
	Confirmation		circuit.	L104	
				C140,	L103,
				IC101	
				C141,	R201,
				C102,	C135,
				C120, C	
				C803,	C825,
				C110,	C802,
				C804,	C148,
				D107,	C109,
				R121, C	
(B)	VDDDCDC2 Supply	-	1. Confirm that the voltage between VDDDCDC2 and GND is $3.3V \pm 0.3V$.	IC103,	C140,
	Confirmation			L103,	R107,
				IC101,	C141,
				R201,	C102,
				C135, C	
(C)*	BBIC Confirmation	-	BBIC Confirmation (Execute the command "getchk").	IC103,	X101,
			Confirm the returned checksum value.	C122,	C123,
			Connection of checksum value and program number is shown below.	C127	
			ex.) checksum value program number		
			011B DCN2EA		
<u></u>				0.101	0.105
(D)	Charge Control Check &	-	()	C101,	C160,
	Charge Current Monitor			R101,	C161,
	Check		SW to decrease current limit of PSU to 75mA.	Q101,	Q102,
			4. Confirm that the charge current is stable.	C142,	R108,
/ F *	Ohanna Dataatian (OFF)		4. Chan count in a CV/ to TDF(1) and TDC(1)	IC103	0400
(E) [^]	Charge Detection (OFF)	-		C101,	C160,
	Check			R101,	C161,
				Q101,	Q102,
				C142,	R108,
				IC103	

KX-TG1611RU/KX-TG1612RU/KX-TGA161RU

	Items	Adjustment Point	Procedure	Check or Replace Parts
	Battery Monitor Check & Adjustment (Important)	-	 Apply 2.3V ± 0.005V between BATTERY (+) and BATTERY (-) with DC power. Execute the command "deactmac" to stabilize the value. Then, execute the command "readbatt". The returned value is XX. Confirm that XX is between 98 and A7. 98 < XX < A7 (Hex) (If XX is out of range, change BBIC) 	IC103, D107, C148, C109
(G)	Battery Low Confirmation (Important)		 Apply 2.40V between BATTERY (+) and BATTERY (-). Confirm that there is no Speaker sound (Battery low alarm). Apply 2.2V between BATTERY(+) and BATTERY(-). Confirm that there is Speaker sound (Battery low alarm). 	IC103, D107, C148 C109, R121, C186 R114, C114, D104 Q104, Q105, R116, R117, BUZZER
(H)*	BBIC Clock Adjustment (Important)	P1.0 CLK	 Apply 2.6V between BATTERY (+) and BATTERY (-) with DC power. Execute the command "EnableClockOutput". Input Command "sfr", then you can confirm the current value. Check X'tal Frequency. (10.368 MHz ± 100 Hz). If the frequency is not 10.368 MHz ± 100 Hz, adjust the frequency of CLK executing the command "setfreq xx xx (where xx is the value)" so that the reading of the frequency counter is 10.368000 MHz ± 5 Hz. Note: * How to de-registration (link to base unit) 1) Push handset: menu → # → 1 → 3 → 1 2) Push handset: 0 → 0 → 0 → 0 3) Select handset you want to de-regist. After push OK. Register to it on Base Unit after measurement. 1. Apply 2.6 with DC power. 2. With DC power. 3. With DC power. 3. With DC power. 4. Apply 2.6 with DC power. 3. With DC power. 3. With DC power. 4. Apply 2.6 with	C127, C122, C123, X101
(I)*	Transmitted Power Confirmation	ANT	Remove the Antenna before starting steps from 1 to 5. 1. Configure the DECT tester (CMD60) as follows; <setting> • Test mode: PP • RFPI: 0102030405</setting>	IC103, C813, C807, C819, C826, D803, C817, C149, R802, C823, C131, C803, C825, C110, C802, C804
(J)*	Modulation Check	ANT		IC103, C813, C807, C819, C826, D803, C817, C149, R802, C823, C131, C803, C825, C110, C802, C804
	Frequency Offset Confirmation			IC103, C813, C807, C819, C826, D803, C817, C149, R802, C823, C131, C803, C825, C110, C802, C804
(L)*	Sensitivity Receiver Confirmation	-	4. Set DECT tester power to -85dBm.5. Confirm that the BER is < 1000ppm.	IC103, C815, C830, C820, C821, R801, D803, C817, C149
(M)*	Timing Confirmation		Follow steps 1 to 4 of (I) . 4. Confirm that the Timing accuracy is < ± 2.0ppm.	IC103, C815, C830, C820, C821, R801, D803, C817, C149
(N)*	RSSI Level Confirmation	-	Follow steps 1 to 4 of (I). 4. Set DECT tester power to -70dBm. 5. Execute the command "readrssi". 6. Confirm: 9 < returned value < 13 (hex) (0E ± 5 (hex))	IC103, C815, C830, C820, C821, R801, D803, C817, C149

KX-TG1611RU/KX-TG1612RU/KX-TGA161RU

	Items	Adjustment	Procedure	Check or
		Point		Replace Parts
(O)	Audio Check and	-	Link with BASE which is connected to Line Simulator.	
	Confirmation		2. Set line voltage to 48V and line current to 50mA.	
			3. Input -45dBm(600 Ω)/1kHz to MIC of Handset. Measure the Level at Line I/F and distortion level.	
			4. Confirm that the level is -5.5 \pm 3dBm and that the distortion level is < 5% at TEL Line (600 Ω Load).	
			 Input -20dBm(600Ω)/1kHz to Line I/F. Measure the level at Receiver of Handset and distortion level (*Receive volume set to third position from minimum). 	
			6. Confirm that the level is -23.5 \pm 3dBm and that the distortion level is < 5% at Receiver (150 Ω Load).	

10 Disassembly and Assembly Instructions


10.1. Disassembly Instructions

10.1.1. Base Unit


The state of the capture of the cabinet cover.

Cabinet cover

② Insert a plastic card. (Ex. Used SIM card etc.) between the cabinet body and the cabinet cover, then pull it along the gap to open the cabinet.

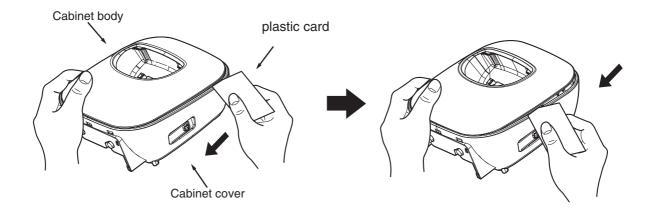

3 Remove the solders to remove the main P.C. board.

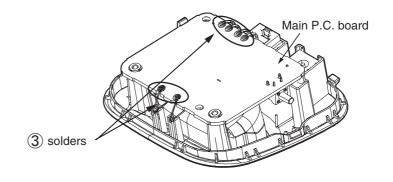


10.1.2. Handset

(1) Remove the 2 screws.

- ② Insert a plastic card. (Ex. Used SIM card etc.) between the cabinet body and the cabinet cover, then pull it along the gap to open the cabinet.
- (3) Likewise, open the other side of the cabinet.
- 4 Remove the cabinet cover by pushing it upward.


- (5) Remove the solders.
- 6 Remove the screw to remove the main P. C. board.

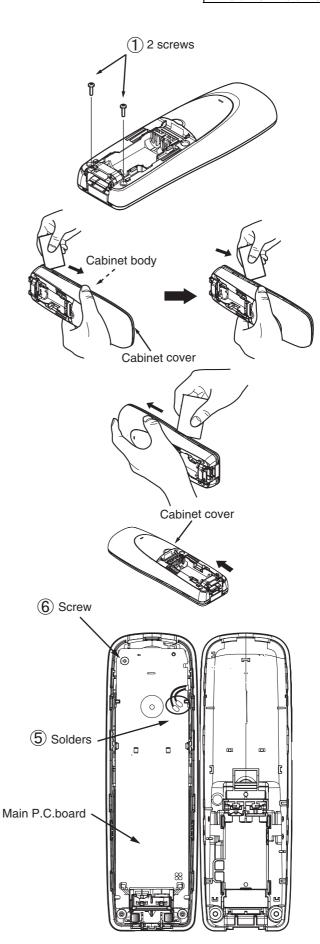


10.1.3. Charger Unit

1 Remove the screw to remove the cabinet cover.


② Remove the solders to remove the 2 charge terminals.

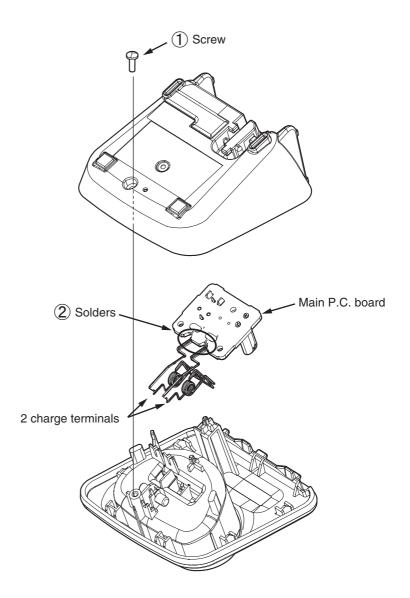

10.2. How to Replace the Handset LCD

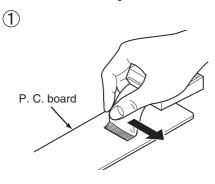


Peel off the FFC (Flexible Flat Cable) from the LCD, in the direction of the arrow. Take care to ensure that the foil on the P.C. board is not damaged.

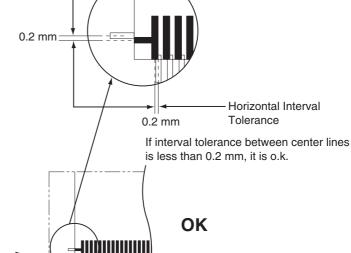


Vertical Interval Tolerance

New LCD

Fit the heatseal of a new LCD.

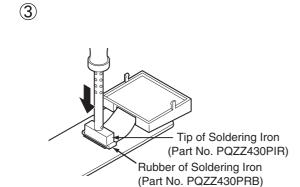


Heatweld with the tip of the soldering iron about 5 to 8 seconds (in case of 60W soldering iron).

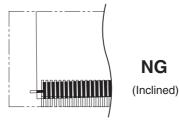



NG

(Vertical interval tolerance is more than 0.2 mm.)

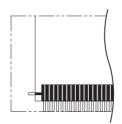

NG

(Horizontal interval tolerance is more than 0.2 mm.)

11 Measurements and Adjustments

11.1. The Setting Method of JIG (Base Unit)

11.1.1. Preparation

11.1.1.1. Equipment Required

- DECT tester: Rohde & Schwarz, CMD 60 is recommended.
- Frequency counter: it must be precise to be able to measure 1Hz (precision; ±4ppm).
 Hewlett Packard, 53131A is recommended.
- DC power: it must be able to output at least 1A current under 9V.
- Digital multi-meter (DMM): it must be able to measure voltage and current.
- Oscilloscope

11.1.1.2. JIG and PC

- Serial JIG PQZZ1CD300E*
- PC which runs in DOS mode
- Batch file CD-ROM for setting: PNZZTG1611RU

Note:


*: If you have the JIG Cable for TCD500 series (PQZZ1CD505E), change the following values of resistance. Then you can use it as a JIG Cable for both TCD300 and TCD500 series. (It is an upper compatible JIG Cable.)

Resistor	Old value (kΩ)	New value (kΩ)
R2	22	3.3
R3	22	3.3
R4	22	4.7
R7	4.7	10

11.1.2. PC Setting

11.1.2.1. Connections

- 1) Connect the AC adaptor to J2 (base unit).
- (2) Serial JIG to the Serial Port of PC.
- (3) Connect the Clip cable GND.
- (4) Connect the Clip cable TXD and RXD.

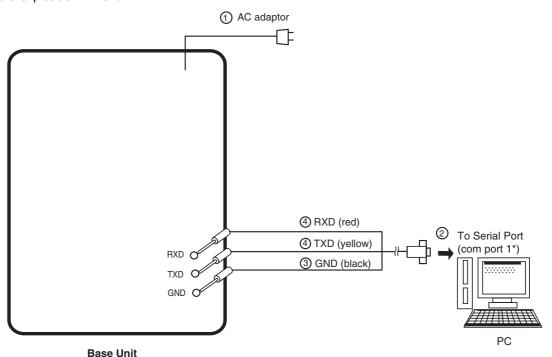

Note:

*: Comport names may vary depending on what your PC calls it.

11.1.2.2. Batch file Setting

- 1. Insert the Batch file CD-ROM into CD-ROM drive and copy PNZZTG***** folder to your PC (example: D drive).
- 2. Open a window of MS-DOS mode.

<Example for Windows>

On your computer, click [Start], select Programs (All Programs for Windows XP/Windows Server 2003),

then click

MS-DOS Prompt. (for Windows 95/Windows 98)

Accessories-MS-DOS Prompt. (for Windows Me)

Command Prompt. (for Windows NT 4.0)

Or

Accessories-Command Prompt.

(for Windows 2000/Windows XP/Windows Server 2003)

- **3.** At the DOS prompt, type "D:" (for example) to select the drive, then press the **Enter** key.
- **4.** Type "CD ¥PNZZTG*****", then press the Enter key.
- **5.** Type "CTE open com X", then press the Enter key (X: COM port number used for the serial connection on your PC).
- **6.** Type "**READID**", then press the **Enter** key.
 - •If any error messages appear, change the port number or check the cable connection.
 - •If any value appear, go to next step.
- 7. Type "DOSKEY", then press the Enter key.

- <Example: correct setting>
- C: ¥Documents and Settings>D:
- D: ¥>CD ¥PNZZTG*****
- D: ¥PNZZTG**** >CTE open com X
- D: ¥PNZZTG*****>READID
- 00 52 4F A8 A8
- D: ¥PNZZTG*****>DOSKEY
- D: ¥PNZZTG*****> _

<Example: incorrect setting>

- C: ¥Documents and Settings>D:
- D: ¥>CD ¥PNZZTG*****
- D: ¥PNZZTG**** >CTE open com X
- D: ¥PNZZTG*****>READID

ReadID

ReadIPUI Error: read access failed

D: ¥PNZZTG*****> _

Note:

• "****" varies depending on the country.

11.1.2.3. Commands


See the table below for frequently used commands.

Command name	Function	Example
readid	Read ID (RFPI)	Type "readid", and the registered ID is read out.
writeid	Write ID (RFPI)	Type "writeid 00 18 E0 0E 98", and the ID "0018 E0 0E 98" is written.
setfreq	adjust Frequency of RFIC	Type "setfreq nn nn".
hookoff	off-hook mode on Base	Type "hookoff".
hookon	on-hook mode on Base	Type "hookon".
Getchk	Read checksum	Type "getchk".

11.2. Adjustment Standard (Base Unit)

When connecting the simulator equipment for checking, please refer to below.

11.2.1. Bottom View

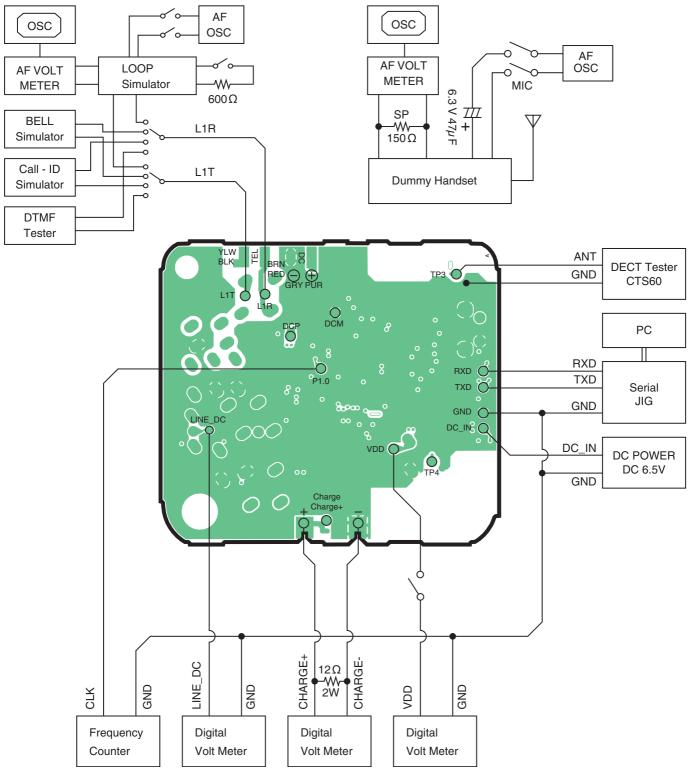


Note:

(A) - (O) is referred to Check Point (Base Unit) (P.24)

11.3. Adjustment Standard (Charger Unit)

When connecting the simulator equipment for checking, please refer to below.

11.3.1. Bottom View

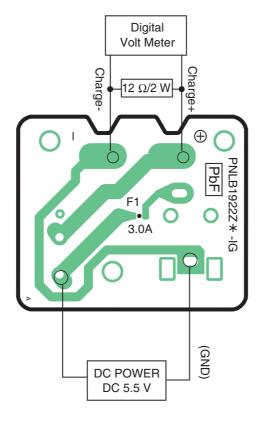

Note:

(A) is referred to Check Point (Charger Unit) (P.26)

11.4. The Setting Method of JIG (Handset)

11.4.1. Preparation

11.4.1.1. Equipment Required

- DECT tester: Rohde & Schwarz, CMD 60 is recommended.
- Frequency counter: it must be precise to be able to measure 1Hz (precision; ± 4ppm). Hewlett Packard, 53131A is recommended.
- DC power: it must be able to output at least 1A current under 2.4V for Handset.
- Digital multi-meter (DMM): it must be able to measure voltage and current.
- Oscilloscope

11.4.1.2. JIG and PC

- Serial JIG PQZZT1CD300E*
- PC which runs in DOS mode.
- Batch file CD-ROM for setting: PNZZTG1611RU

Note:


*: If you have the JIG Cable for TCD500 series (PQZZ1CD505E), change the following values of resistance. Then you can use it as a JIG Cable for both TCD300 and TCD500 series. (It is an upper compatible JIG Cable.)

Resistor	Old value (kΩ)	New value (kΩ)
R2	22	3.3
R3	22	3.3
R4	22	4.7
R7	4.7	10

11.4.2. PC Setting

11.4.2.1. Connections

- ① Connect the DC Power or Battery to BATTERY(+) and BATTERY(-) (Handset).
- (2) Serial JIG to the Serial Port of PC.
- (3) Connect the Clip cable GND.
- (4) Connect the Clip cable TXD and RXD.

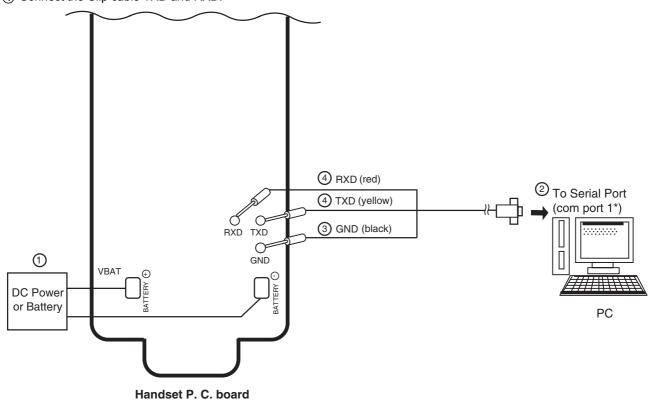

Note:

*: Com port names may vary depending on what your PC calls it.

11.4.2.2. Batch file Setting

- Insert the Batch file CD-ROM into CD-ROM drive and copy PNZZTG***** folder to your PC (example: D drive).
- 2. Open a window of MS-DOS mode.

<Example for Windows>

On your computer, click [Start], select Programs

(All Programs for Windows XP/Windows Server 2003), then click

MS-DOS Prompt. (for Windows 95/Windows 98)

Accessories-MS-DOS Prompt. (for Windows Me)

Command Prompt. (for Windows NT 4.0)

Or

Accessories-Command Prompt.

(for Windows 2000/Windows XP/Windows Server 2003)

<Example: correct setting>

- **3.** At the DOS prompt, type "D:" (for example) to select the drive, then press the **Enter** key.
- **4.** Type "CD ¥PNZZTG*****", then press the Enter key.
- **5.** Type "CTE open com X", then press the Enter key (X: COM port number used for the serial connection on your PC).
- **6.** Type "**READID**", then press the **Enter** key.
 - •If any error messages appear, change the port number or check the cable connection.
 - •If any value appear, go to next step.
- 7. Type "DOSKEY", then press the Enter key.

- C: ¥Documents and Settings>D:
- D: ¥>CD ¥PNZZTG*****
- D: ¥PNZZTG**** >CTE open com X
- D: ¥PNZZTG*****>READID
- 00 52 4F A8 A8
- D: ¥PNZZTG*****>DOSKEY
- D: ¥PNZZTG*****> _

<Example: incorrect setting>

- C: ¥Documents and Settings>D:
- D: ¥>CD ¥PNZZTG*****
- D: ¥PNZZTG**** >CTE open com X
- D: ¥PNZZTG*****>READID

ReadID

ReadIPUI Error: read access failed

D: ¥PNZZTG*****> _

Note:

• "****" varies depending on the country.

11.4.2.3. Commands


See the table below for frequently used commands.

Command name	Function	Example
rdeep Read the data of EEPROM 1		Type "rdeep 00 00 10", and the data from address "00 00" to "10" is read
		out.
readid	Read ID (RFPI)	Type "readid", and the registered ID is read out.
writeid	Write ID (RFPI)	Type "writeid 00 18 E0 0E 98", and the ID "0018 E0 0E 98" is written.
setfreq	adjust Frequency of RFIC	Type "setfreq nn nn".
Getchk	Read checksum	Type "getchk".
wrteep	write eeprom	Type "wrteep 01 23 45". "01 23" is address and "45" is data to be written.

11.5. Adjustment Standard (Handset)

When connecting the simulator equipment for checking, please refer to below.

11.5.1. Component View

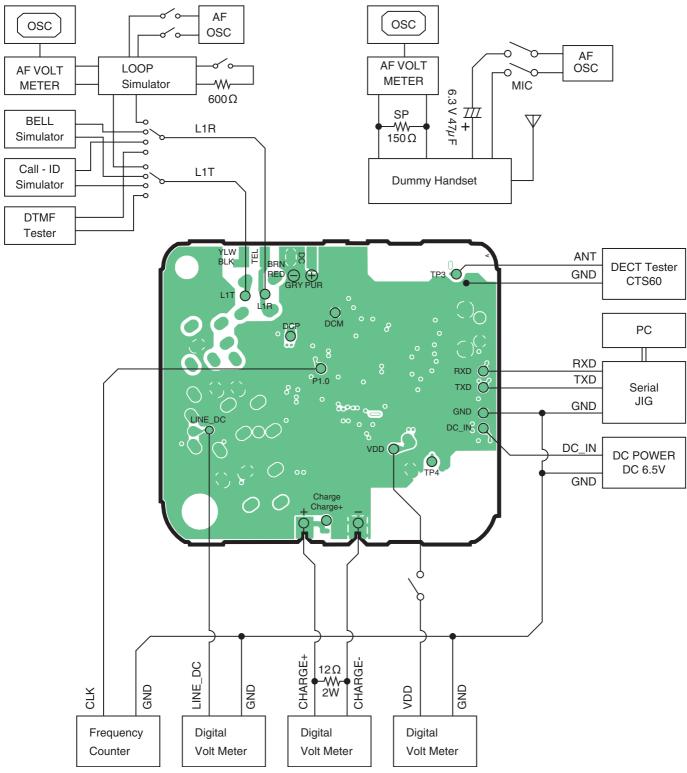

Note:

(A) - (O) is referred to Check Point (Handset) (P.27)

11.6. Things to Do after Replacing IC

Cautions:

Since this page is common to each country, it may not apply to some models in your country. The contents below are the minimum adjustments required for operation.

11.6.1. Base Unit

Before doing the following adjustment, be sure to do PC Setting (P.34) in The Setting Method of JIG (Base Unit).

	IC	Necessary Adjustment		
BBIC Programs for Voice processing, interface for RF and EEPROM		1. Clock adjustment: Refer to Check Point (D). (*1)		
EEPROM	Adjustment parameter data (country version batch file, default batch file, etc.)	Default batch file: Execute the command "DefaultEEP". Country version batch file: Execute the command "TG16XX_FP_ROM2_xx_yyy.bat". (*2) Clock adjustment: Refer to Check Point (D). (*1)		

Note:

- (*1) Refer to Check Point (Base Unit) (P.24)
- (*2) xx: country code, yyy: revision number

"xx" and "yyy" vary depending on the country version. You can find them in the batch file, PQZZ- mentioned in **JIG and PC** (P.34).

11.6.2. Handset

Before doing the following adjustment, be sure to do PC Setting (P.38) in The Setting Method of JIG (Handset).

	IC	Necessary Adjustment		
BBIC	Programs for Voice processing, interface for RF and EEPROM	Clock adjustment: Refer to Check Point (H). (*3) 4.0 V setting and battery low detection: Refer to Check Point (A), (F) and (G). (*3)		
EEPROM	Adjustment parameter data (country version batch file, default batch file, etc.)	 Default batch file: Execute the command "Default". Melody Initialize batch file; Execute the Command "Melody_008". Country version batch file: Execute the command "TG16XX_PP_xx_yyy.bat". Clock adjustment: Refer to Check Point (H). (*3) 4.0 V setting and battery low detection: Refer to Check Point (A), (F) and (G). (*3) 		

Note:

- (*3) Refer to Check Point (Handset) (P.27)
- (*4) xx: country code, yyy: revision number

"xx" and "yyy" vary depending on the country version. You can find them in the batch file, PQZZ- mentioned in **JIG and PC** (P.38).

11.7. RF Specification

11.7.1. Base Unit

Item		Refer to *
TX Power		Check Point (Base Unit) (G)
Modulation	340 kHz/div ~ 402 kHz/div	Check Point (Base Unit) (H)
Frequency Offset	-50 kHz ~ +50 kHz	Check Point (Base Unit) (I)
RX Sensitivity	< 1000 ppm	Check Point (Base Unit) (J)
Timing Accuracy	< ± 2.0 ppm	Check Point (Base Unit) (K)
RSSI Level	0E hex ± A hex	Check Point (Base Unit) (L)

^{*:} Refer to Check Point (Base Unit) (P.24)


11.7.2. Handset

Item	Value	Refer to **
TX Power	More than 19 dBm ~ 25 dBm	Check Point (Handset) (I)
Modulation	340 kHz/div ~ 402 kHz/div	Check Point (Handset) (J)
Frequency Offset	-50 kHz ~ +50 kHz	Check Point (Handset) (K)
RX Sensitivity	< 1000 ppm	Check Point (Handset) (L)
Timing Accuracy	< ± 2.0 ppm	Check Point (Handset) (M)
RSSI Level	0E hex ± 5 hex	Check Point (Handset) (N)

^{**:} Refer to Check Point (Handset) (P.27)

11.8. How to Check the Handset Speaker or Receiver

- 1. Prepare the digital voltmeter, and set the selector knob to ohm meter.
- 2. Put the probes at the speaker terminals as shown below.

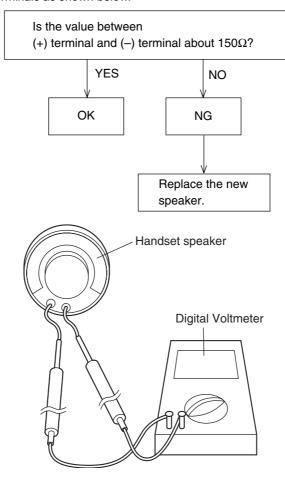

11.9. Frequency Table (MHz)

	BASE UNIT		HANDSET		
Channel No	Transmit Frequency	Receive Frequency	Transmit Frequency	Receive Frequency	
1	1897.344	1897.344	1897.344	1897.344	
2	1895.616	1895.616	1895.616	1895.616	
3	1893.888	1893.888	1893.888	1893.888	
4	1892.160	1892.160	1892.160	1892.160	
5	1890.432	1890.432	1890.432	1890.432	
6	1888.704	1888.704	1888.704	1888.704	
7	1886.976	1886.976	1886.976	1886.976	
8	1885.248	1885.248	1885.248	1885.248	
9	1883.520	1883.520	1883.520	1883.520	
10	1881.792	1881.792	1881.792	1881.792	

Note:

Channel No. 10: In the Test Mode on Base Unit and Handset.

12 Miscellaneous

12.1. How to Replace the Flat Package IC

Even if you do not have the special tools (for example, a spot heater) to remove the Flat IC, with some solder (large amount), a soldering iron and a cutter knife, you can easily remove the ICs that have more than 100 pins.

12.1.1. Preparation

- PbF (: Pb free) Solder
- Soldering Iron

Tip Temperature of 700 °F ± 20 °F (370 °C ± 10 °C)

Note: We recommend a 30 to 40 Watt soldering iron. An expert may be able to use a 60 to 80 Watt iron where someone with less experience could overheat and damage the PCB foil.

Flux

Recommended Flux: Specific Gravity \rightarrow 0.82. Type \rightarrow RMA (lower residue, non-cleaning type)


Note: See About Lead Free Solder (PbF: Pb free) (P.4)

12.1.2. How to Remove the IC


1. Put plenty of solder on the IC pins so that the pins can be completely covered.

Note:


If the IC pins are not soldered enough, you may give pressure to the P.C. board when cutting the pins with a cutter.

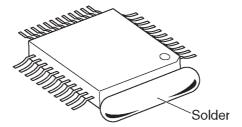

2. Make a few cuts into the joint (between the IC and its pins) first and then cut off the pins thoroughly.

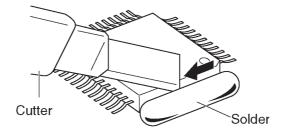

3. While the solder melts, remove it together with the IC pins.

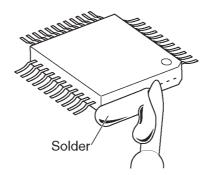

When you attach a new IC to the board, remove all solder left on the board with some tools like a soldering wire. If some solder is left at the joint on the board, the new IC will not be attached properly.


12.1.3. How to Install the IC

1. Temporarily fix the FLAT PACKAGE IC, soldering the two marked pins.




*Check the accuracy of the IC setting with the corresponding soldering foil.

2. Apply flux to all pins of the FLAT PACKAGE IC.

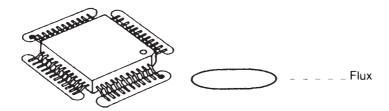

3. Solder the pins, sliding the soldering iron in the direction of the arrow.

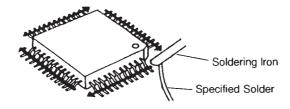

12.1.4. How to Remove a Solder Bridge

- 1. Lightly resolder the bridged portion.
- 2. Remove the remaining solder along the pins using a soldering iron as shown in the figure below.



12.2. How to Replace the Shield Case

12.2.1. Preparation

- PbF (: Pb free) Solder
- · Soldering Iron

Tip Temperature of $700^{\circ}F \pm 20^{\circ}F (370^{\circ}C \pm 10^{\circ}C)$

Note:

We recommend a 30 to 40 Watt soldering iron. An expert may be able to use a 60 to 80 Watt iron where someone with less experience could overheat and damage the PCB foil.

· Hot Air Desoldering Tool

Temperature: 608°F ± 68°F (320°C ± 20°C)

12.2.2. Caution


- To replace the IC efficiently, choose the right sized nozzle of the hot air desoldering tool that matches the IC package.
- Be careful about the temperature of the hot air desoldering tool not to damage the PCB and/or IC.

12.2.3. How to Remove the Shield Case


Note:

If you don't have special tools (ex. Hot air disordering tool), conduct the following operations.


1. Cut the case along perforation.

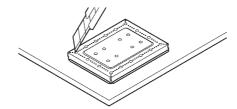


2. Remove the cut part.

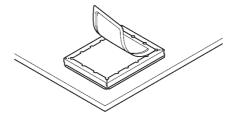

3. Cut the four corners along perforation.

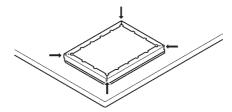


4. Remove the reminds by melting solder.

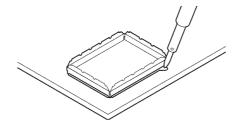


12.2.4. How to Install the Shield Case

Note:

- If you don't have special tools (ex. Hot air disordering tool), conduct the following operations.
- Shield case's No. : PNMC1040Z
 - 1. Put the shield case.

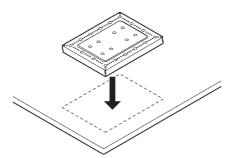


2. Solder the surroundings.

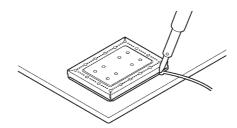


12.3. Terminal Guide of the ICs, Transistors, Diodes and Electrolytic Capacitors

12.3.1. Base Unit

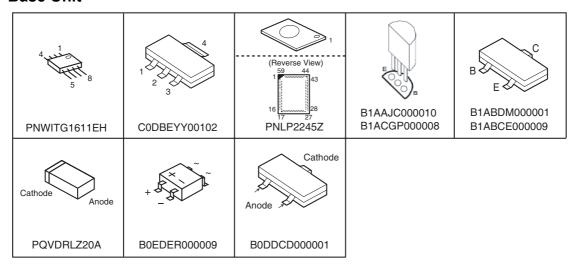

12.3.2. Handset

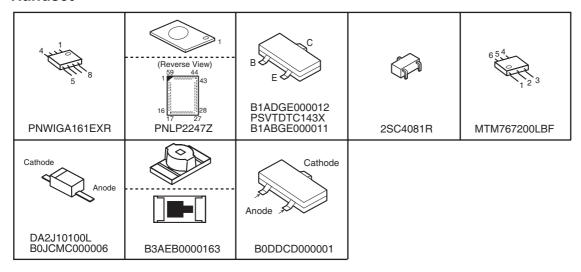

13 Schematic Diagram

13.1. For Schematic Diagram

13.1.1. Base Unit (Schematic Diagram (Base Unit))

Notes:

1. DC voltage measurements are taken with voltmeter from the negative voltage line.

Important Safety Notice:

Components identified by \triangle mark have special characteristics important for safety. When replacing any of these components, use only the manufacturer's specified parts.

2. This schematic diagram may be modified at any time with the development of new technology.

13.1.2. Handset (Schematic Diagram (Handset))

Notes:

- 1. DC voltage measurements are taken with an oscilloscope or a tester with a ground.
- 2. The schematic diagrams may be modified at any time with the development of new technology.

13.1.3. Charger Unit (Schematic Diagram (Charger Unit))

Notes:


1. DC voltage measurements are taken with voltmeter from the negative voltage line.

Important Safety Notice:

Components identified by \triangle mark have special characteristics important for safety. When replacing any of these components, use only the manufacturer's specified parts.


2. This schematic diagram may be modified at any time with the development of new technology.

13.2. Schematic Diagram (Base Unit)

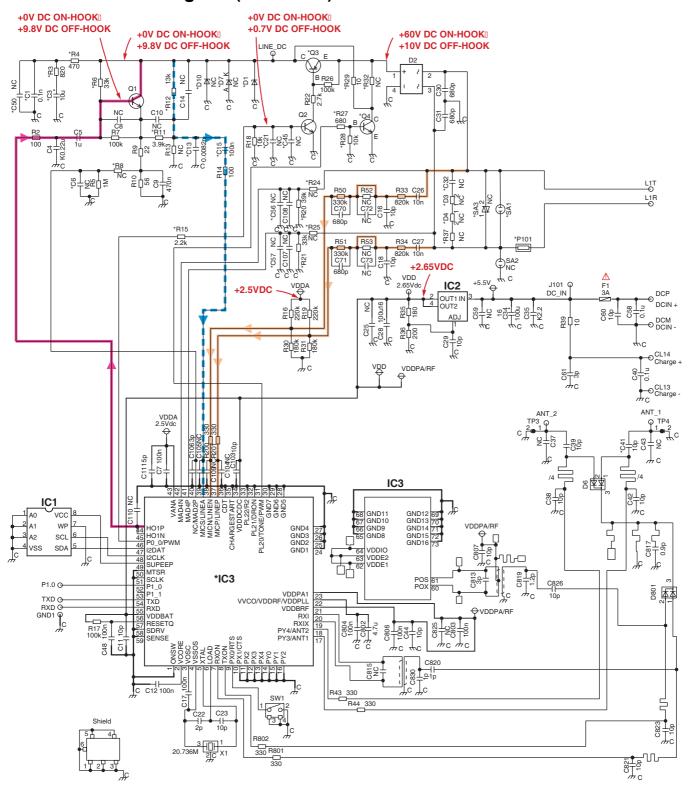


NC: No Components KX-TG1611/1612RU SCHEMATIC DIAGRAM (Base Unit_Main)

13.3. Schematic Diagram (Handset)

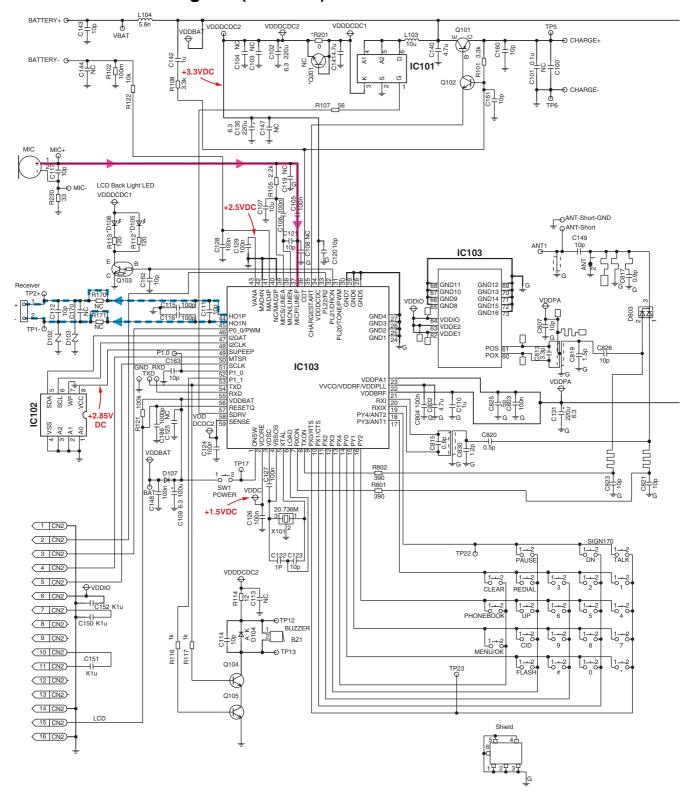

NC: No Components KX-TGA161 SCHEMATIC DIAGRAM (Handset_Main)

13.4. Schematic Diagram (Charger Unit)

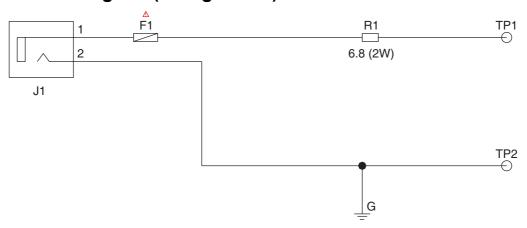


SCHEMATIC DIAGRAM (Charger Unit)

14 Printed Circuit Board


14.1. Circuit Board (Base Unit)

14.1.1. Component View

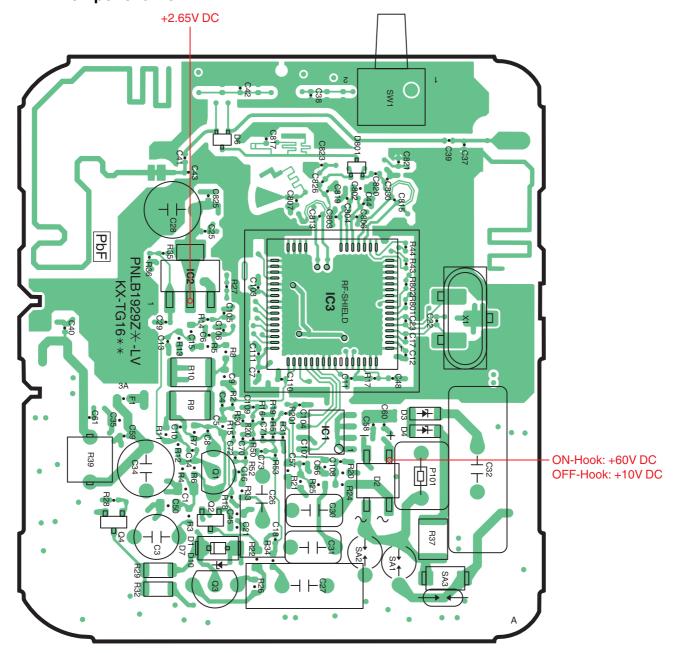

KX-TG1611/1612 CIRCUIT BOARD (Base Unit_Main (Component View))


14.1.2. Bottom View

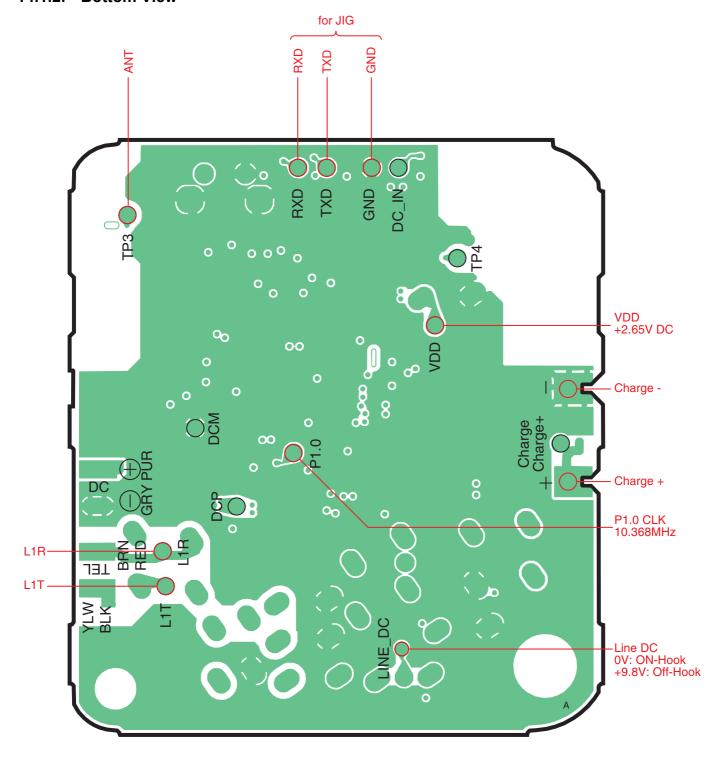

KX-TG1611/1612 CIRCUIT BOARD (Base Unit_Main (Bottom View))


14.2. Circuit Board (Handset)

14.2.1. Component View

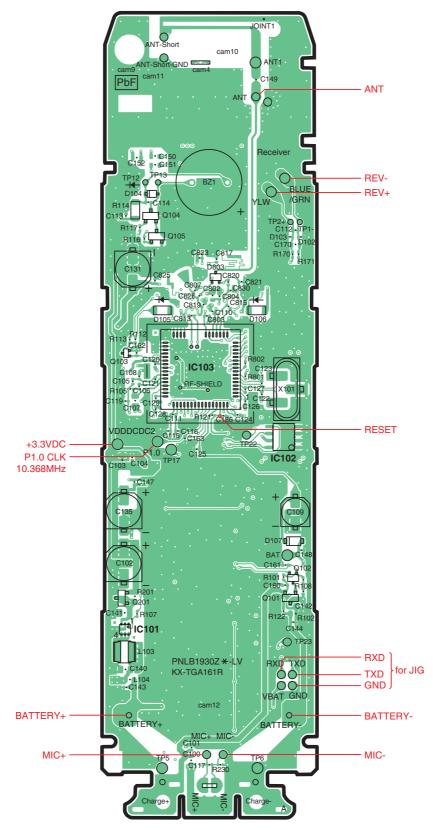

KX-TGA161 CIRCUIT BOARD (Handset_Main (Component View))


14.2.2. Bottom View

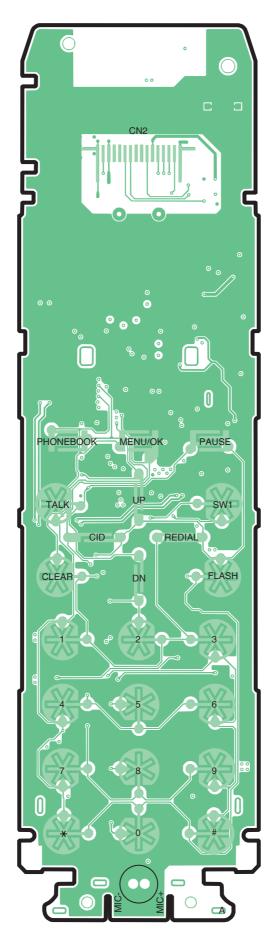

KX-TGA161 CIRCUIT BOARD (Handset_Main (Bottom View))


14.3. Circuit Board (Charger Unit)

14.3.1. Component View

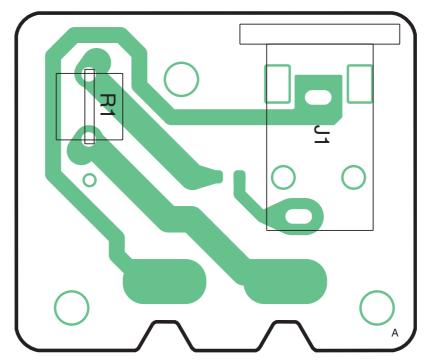

CIRCUIT BOARD (Charger Unit (Component View))


14.3.2. Bottom View

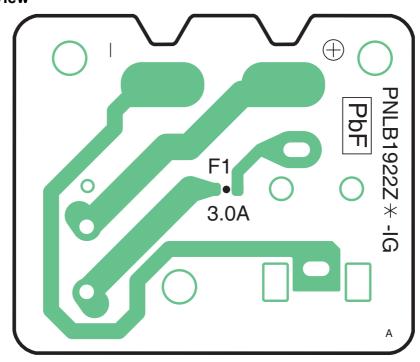


CIRCUIT BOARD (Charger Unit (Bottom View))

15 Exploded View and Replacement Parts List

15.1. Cabinet and Electrical Parts (Base Unit)

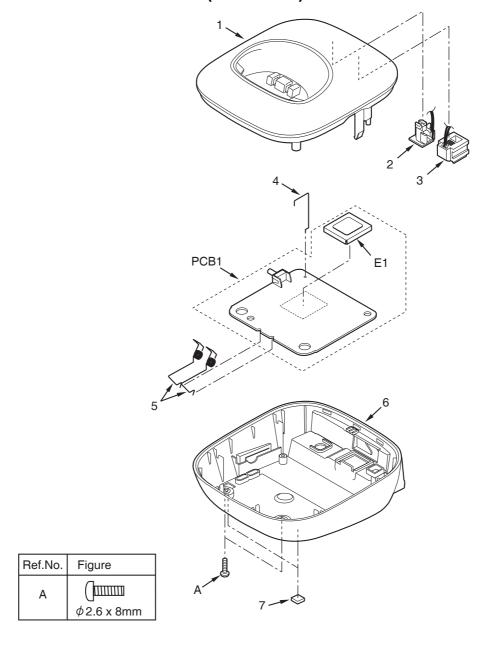


15.2. Cabinet and Electrical Parts (Handset)

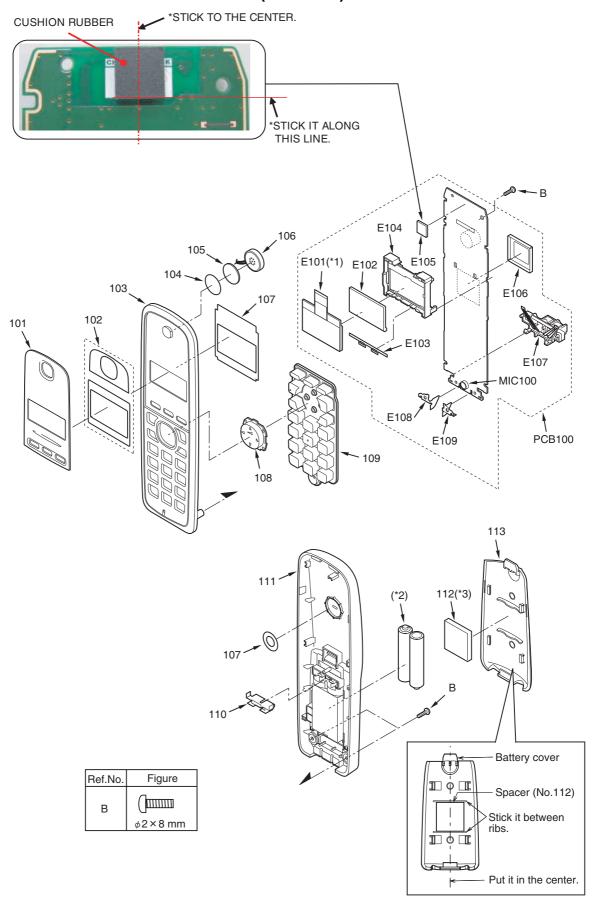

Note:

- (*1) This cable is fixed by attaching. Refer to **How to Replace the Handset LCD** (P.33).
- (*2) The rechargeable Ni-MH battery HHR-4NGE (P03P) or HHR-4MRE (P03I) is available through sales route of Panasonic.
- (*3) Attach the spacer (No. 112) to the exact location described above.

15.3. Cabinet and Electrical Parts (Charger Unit)

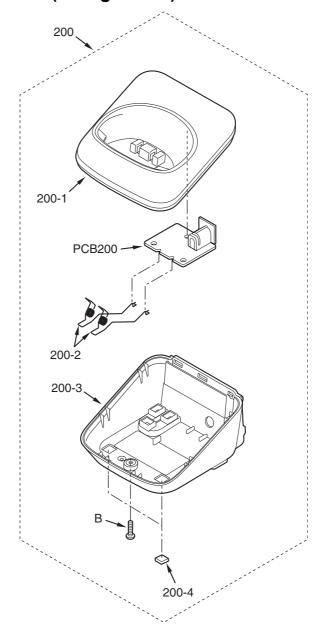

Ref.No.	Figure
В	

15.4. Accessories





15.5. Replacement Part List

1. RTL (Retention Time Limited)

Note:

The "RTL" marking indicates that its Retention Time is Limited.

When production is discontinued, this item will continue to be available only for a specific period of time.

This period of time depends on the type of item, and the local laws governing parts and product retention. At the end of this period, the item will no longer be available.

2. Important safety notice

Components identified by the \triangle mark indicates special characteristics important for safety. When replacing any of these components, only use specified manufacture's parts.

- 3. The S mark means the part is one of some identical parts. For that reason, it may be different from the installed part.
- ISO code (Example: ABS-94HB) of the remarks column shows quality of the material and a flame resisting grade about plastics.

Туре

ERC:Solid ERDS:Carbon ERJ:Chip	ERG:Metal Oxide	PQ4R:Chip ERS:Fusible Resistor ERF:Cement Resistor
Wattage		

^{*}Type & Voltage Of Capacitor Type

=======================================	
ECFD:Semi-Conductor	ECCD,ECKD,ECBT,F1K,ECUV:Ceramic
	ECQE,ECQV,ECQG:Polyester
ECUV,PQCUV,ECUE:Chip	ECEA,ECST,EEE:Electlytic
ECQMS:Mica	ECQP:Polypropylene

Voltage

ECQ Type	ECQG ECQV Type	ECSZ Type		Oth	ers	
1H:50V 2A:100V 2E:250V 2H:500V	05:50V 1:100V 2:200V	0F:3.15V 1A:10V 1V:35V 0J:6.3V	0J 1A 1C 1E,2	:6.3V :10V :16V :5:25V	1V 50,1 1J 2A	:35V H:50V :16V :100V

15.5.1. Base Unit

15.5.1.1. Cabinet and Electrical Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	1	PNKM1188Z2	CABINET BODY (for KX- TG1611RUF) (for KX- TG1611RUJ)	PS-HB
	1	PNKM1188Z1	CABINET BODY (for KX- TG1611RUH) (for KX- TG1611RUR) (for KX- TG1611RUW) (for KX- TG1612RUH) (for KX- TG1612RUH) (for KX- TG1612RUI) (for KX- TG1612RU3)	PS-HB
	2	K2ECYZ000001	JACK DC	
	3	PQJJ1T039M	JACK MODULAR	
	4	PNLA1062Z	ANTENNA	
	5	PNJT1063Z	CHARGE TERMINAL	
	6	PNKF1137Z7	CABINET COVER (for KX- TG1611RUF)	PS-HB
	6	PNKF1137Z2	CABINET COVER (for KX- TG1611RUH) (for KX- TG1612RUH) (for KX- TG1612RUI) (for KX- TG1612RU3)	PS-HB

Safety	Ref.	Part No.	Part Name & Description	Remarks
	No.			
	6	PNKF1137Z5	CABINET COVER (for KX- TG1611RUJ)	PS-HB
	6	PNKF1137Z4	CABINET COVER (for KX- TG1611RUR)	PS-HB
	6	PNKF1137Z3	CABINET COVER (for KX- TG1611RUW)	PS-HB
	7	PQHA10023Z	RUBBER PARTS FOOT CUSHION	

15.5.1.2. Main P.C.Board Parts

Note:

- (*1) When replacing IC1, IC3, make the adjustment using PNZZTG1611RU. Refer to **Base Unit** (P.41) of Things to Do after Replacing IC.
- (*2) When removing E1, use special tools (ex. Hot air disordering tool).

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB1	PNWPG1611RUH	MAIN P.C.BOARD ASS'Y (RTL)	
			(ICs)	
	IC1	PNWITG1611EH	IC (EEPROM) (*1)	
	IC2	C0DBEYY00102	IC	
	IC3	PNLP2245Z	IC (COB) (*1)	
			(TRANSISTORS)	
	Q1	B1AAJC000010	TRANSISTOR (SI)	
	Q2	B1ABDM000001	TRANSISTOR (SI)	
	Q3	B1ACGP000008	TRANSISTOR (SI)	
	Q4	B1ABCE000009	TRANSISTOR(SI)	
			(DIODES)	
	D1	PQVDRLZ20A	DIODE(SI)	S
	D2	B0EDER000009		
	D6	B0DDCD000001		
	D801	B0DDCD000001		
		20220200001	(VARISTOR)	
	SA1	PQVDDSS301L	VARISTOR (SURGE	S
	JAI	PQVDDSSSOIL	ABSORBER)	5
			(RESISTORS)	
	R2	ERJ2GEJ101	100	S
	R3	ERJ3GEYJ821	820	S
	R4	ERJ3GEYJ471	470	S
	R5	ERJ3GEYJ105	1M	s
	R6	ERJ3GEYJ333	33k	s
	R7	ERJ3GEYJ104	100k	S
	R9	ERJ12YJ220	22	5
			56	
	R10	ERJ12YJ560 ERJ3GEYJ392		
	R11		3.9k	S
	R12	ERJ3GEYJ133	13k	S
	R14	ERJ2GEJ101	100	S
	R15	ERJ2GEJ222	2.2k	S
	R16	ERJ2GEJ224	220k	S
	R17	ERJ2GEJ104	100k	S
	R18	ERJ2GEJ103	10k	S
	R19	ERJ2GEJ224	220k	S
	R20	ERJ3GEYJ393	39k	S
	R21	ERJ3GEYJ333	33k	S
	R22	PQ4R10XJ272	2.7k	S
	R26	ERJ3GEYJ104	100k	S
	R27	ERJ2GEJ681	680	S
	R28	ERJ2GEJ103	10k	S
	R29	PQ4R18XJ100	10	S
	R30	ERJ2GEJ184	180k	s
	R31	ERJ2GEJ184	180k	s
	R33	ERJ3GEYJ824	820k	S
	R34	ERJ3GEYJ824	820k	S
	R35	ERJ2RKF1800	180	
	R36	ERJ2RKF2000	200	
	R39	ERG2SJ100E	10	
	R43	ERJ2GEJ331	330	s
	R44	ERJ2GEJ331	330	S
	R50	ERJ2GEJ334	330k	S
	R51	ERJ2GEJ334	330k	S

Safety	Ref. No.	Part No.	Part Name & Description	Remark
	R200	ERJ2GEJ331	330	s
	R201	ERJ2GEJ331	330	s
	R801	ERJ2GEJ331	330	s
	R802	ERJ2GEJ331	330	s
			(CAPACITORS)	
	C1	PQCUV1H104KB		
	C3	ECEA1HKA100	10	
	C4	ECJ0EB0J224K		s
	C5			3
		ECUV1A105KBV		
	C7	ECUE1A104KBQ		
	C9	ECUV1C474KBV		
	C11	ECUE1H100DCQ		
	C12	ECUE1A104KBQ	0.1	
	C13	ECJ0EB1C822K	0.0082	S
	C15	ECUV1C104KBV	0.1	
	C16	ECUE1H100DCQ	10p	
	C17	ECUE1A104KBQ	0.1	
	C18	ECUE1H100DCQ	10p	
	C22	ECUE1H2R0CCQ	_	
	C23	ECUE1H100DCQ		
	C26	F0C2E103A148	_	
	C27	F0C2E103A148		
	C28	F2A1C101B060		
	C29	ECUE1H100DCQ	10p	
	C30	F1B2H681A070	680p	
	C31	F1B2H681A070	680p	
	C34	F2A1C101B060	100	
	C35	PQCUV1A225KB	2.2	
	C38	ECUE1H100DCQ	10p	
	C39	ECUE1H100DCQ	-	
	C40	ECUE1C104KBQ		
	C41	ECUE1H100DCQ		
			_	
	C42	ECUE1H100DCQ	_	
	C44	ECUE1H100DCQ	=	
	C48	ECUE1A104KBQ		
	C58	ECUE1C104KBQ		
	C60	ECUE1H100DCQ	10p	
	C61	ECUE1H3R0CCQ	3	
	C70	ECUE1H681KBQ	680p	
	C71	ECUE1H681KBQ	680p	
	C103	ECUE1H100DCQ	10p	
	C106	ECUE1H3R0CCQ	_	
	C111	ECUE1H5R0CCQ		
	C802	-		
		F1H0J4750004 ECUE1A104KBQ		
	C803			
	C804	ECUE1A104KBQ		
	C806	ECUE1A104KBQ		
	C807	ECUE1H100DCQ		
	C813	F1G1H3R0A480	-	
	C817	F1G1HR90A480	0.9p	
	C819	F1G1H1R2A480	1.2p	
	C820	F1G1H1R0A480	1p	
	C821	ECUE1H100DCQ	-	
	C823	ECUE1H100DCQ		
	C825	ECUE1H100DCQ	_	
	C826	ECUE1H100DCQ	_	-
				-
	C830	F1G1H1R0A480	_	
			(OTHERS)	
	E1	PNMC1040Z	CASE, MAGNETIC	
			SHIELD(*2)	
	P101		THERMISTOR (POSISTOR)	
<u> </u>	F1	K5H302Y00003	FUSE	
	X1	ној207500006	CRYSTAL OSCILLATOR	

15.5.2. Handset

15.5.2.1. Cabinet and Electrical Parts

TGA161RUF) (for KX-TGA161RUJ)	PMMA-HE
TGA161RUJ)	PMMA-HE
TGA161RUH) (for KX- TGA161RUR) (for KX- TGA161RUW) 102 PNYE1050Z TAPE DOUBLESIDED 103 PNKM1186Z2 CABINET BODY (for KX- TGA161RUJ) 104 PNKM1186Z1 CABINET BODY (for KX- TGA161RUH) (for KX- TGA161RUH) (for KX- TGA161RUH) (for KX- TGA161RUW) 104 PNHS1001Z RECEIVER NET 105 PQHS10467Z SPEAKER NET 106 L0AD02A00042 SPEAKER 107 PNYE1042Z SPACER CUSHION LCD 108 PNBC1354Z7 BUTTON NAVIGATOR KEY (for KX-TGA161RUJ) (for	ABS-HB
TGA161RUR) (for KX-TGA161RUW) 102 PNYE1050Z TAPE DOUBLESIDED 103 PNKM1186Z2 CABINET BODY (for KX-TGA161RUF) (for KX-TGA161RUJ) 104 PNKM1186Z1 CABINET BODY (for KX-TGA161RUH) (for KX-TGA161RUH) (for KX-TGA161RUW) 105 PQHS10467Z RECEIVER NET 106 L0AD02A0004Z SPEAKER 107 PNYE104ZZ SPACER CUSHION LCD 108 PNBC1354Z7 BUTTON NAVIGATOR KEX-TGA161RUJ)	- ABS-HB
102 PNYE1050Z TAPE DOUBLESIDED	- ABS-HB
103 PNKM1186Z2 CABINET BODY (for KX-TGA161RUF) (for KX-TGA161RUJ) 103 PNKM1186Z1 CABINET BODY (for KX-TGA161RUH) (for KX-TGA161RUH) (for KX-TGA161RUW) 104 PNHS1001Z RECEIVER NET 105 PQHS10467Z SPEAKER NET 106 LOADO2A00042 SPEAKER 107 PNYE1042Z SPACER CUSHION LCD 108 PNBC1354Z7 BUTTON NAVIGATOR KEY (for KX-TGA161RUJ)	- ABS-HB
TGA161RUF) (for KX- TGA161RUJ) 103 PNKM1186Z1 CABINET BODY (for KX- TGA161RUH) (for KX- TGA161RUR) (for KX- TGA161RUW) 104 PNHS1001Z RECEIVER NET 105 PQHS10467Z SPEAKER NET 106 L0AD02A00042 SPEAKER 107 PNYE1042Z SPACER CUSHION LCD 108 PNBC1354Z7 BUTTON NAVIGATOR KEY (for KX-TGA161RUJ)	- ABS-HB
TGA161RUH) (for KX- TGA161RUR) (for KX- TGA161RUW) 104 PNHS1001Z RECEIVER NET 105 PQHS10467Z SPEAKER NET 106 L0AD02A00042 SPEAKER 107 PNYE1042Z SPACER CUSHION LCD 108 PNBC1354Z7 BUTTON NAVIGATOR KEY (for KX-TGA161RUF) (for KX-TGA161RUJ)	-
TGA161RUR) (for KX- TGA161RUW) 104 PNHS1001Z RECEIVER NET 105 PQHS10467Z SPEAKER NET 106 L0AD02A00042 SPEAKER 107 PNYE1042Z SPACER CUSHION LCD 108 PNBC1354Z7 BUTTON NAVIGATOR KEY (for KX-TGA161RUF) (for KX-TGA161RUJ)	
104 PNHS1001Z RECEIVER NET 105 PQHS10467Z SPEAKER NET 106 LOADO2A00042 SPEAKER 107 PNYE1042Z SPACER CUSHION LCD 108 PNBC1354Z7 BUTTON NAVIGATOR KEY (for KX-TGA161RUF) (for KX-TGA161RUJ)	
106 L0AD02A00042 SPEAKER 107 PNYE1042Z SPACER CUSHION LCD 108 PNBC1354Z7 BUTTON NAVIGATOR KEY (for KX-TGA161RUF) (for KX-TGA161RUJ)	
107 PNYE1042Z SPACER CUSHION LCD 108 PNBC1354Z7 BUTTON NAVIGATOR KEY (for KX-TGA161RUF) (for KX-TGA161RUJ)	
108 PNBC1354Z7 BUTTON NAVIGATOR KEY (for KX-TGA161RUF) (for KX-TGA161RUJ)	
(for KX-TGA161RUF) (for KX-TGA161RUJ)	
100 prod 25451	
PNBC1354Z1 BUTTON NAVIGATOR KEY (for KX-TGA161RUH) (for KX-TGA161RUR) (for KX-TGA161RUW)	r
109 PNJK1114N KEYBOARD SWITCH (for KX-TGA161RUF) (for KX-TGA161RUJ)	
109 PNJK1114S KEYBOARD SWITCH (for KX-TGA161RUH) (for KX-TGA161RUR) (for KX-TGA161RUW)	-
110 PNJC1018Z BATTERY TERMINAL	
PNKF1135Z8 CABINET COVER (for KX- TGA161RUF)	
111 PNKF1135Z3 CABINET COVER (for KX- TGA161RUH) 111 PNKF1135Z6 CABINET COVER (for KX-	
TGA161RUJ)	
111 PNKF1135Z5 CABINET COVER (for KX- TGA161RUR)	
PNKF1135Z4 CABINET COVER (for KX- TGA161RUW)	- ABS-HB
112 PNHS1079Z SPACER BATTERY	
113 PNKK1053Z9 LID BATTERY (for KX- TGA161RUF)	
TGA161RUH)	- ABS-HB
TGA161RUJ)	- ABS-HB
PNKK1053Z6 LID BATTERY (for KX- TGA161RUR)	ABS-HB
PNKK1053Z5 LID BATTERY (for KX- TGA161RUW)	1

15.5.2.2. Main P.C.Board Parts

Note:

- (*1) Reconfirm the model No. written on the handset's name plate when replacing PCB100. Because the model No. of the optional handset may differ from the included handset.
- (*2) When replacing IC102, IC103, make the adjustment using PNZZTG1611RU. Refer to **Handset** (P.41) of Things to Do after Replacing IC or X'tal.
- (*3) When removing E106, use special tools (ex. Hot air disordering tool).
- (*4) When replacing the handset LCD, See How to Replace the Handset LCD (P.33).

Safety	Ref. No.	Part No.	Part Name & Description	Remark
	PCB100	PNWPGA161RUR	MAIN P.C.BOARD ASS'Y (RTL) (*1)	
			(ICs)	
	IC102		IC (EEPROM) (*2)	
	IC103	PNLP2247Z	IC (COB) (*2)	
	01.01	P1 ADCE000012	(TRANSISTORS)	
	Q101		TRANSISTOR (SI)	c
	Q102 Q103	2SC4081R PSVTDTC143X	TRANSISTOR(SI) TRANSISTOR(SI)	S
	Q103 Q104		TRANSISTOR(SI)	3
	Q105		TRANSISTOR(SI)	
	Q201		TRANSISTOR(SI)	
	IC101		TRANSISTOR(SI)	S
			(DIODES)	
	D104	DA2J10100L	DIODE(SI)	
	D105	B3AEB0000163	DIODE(SI)	
	D106	B3AEB0000163	DIODE(SI)	
	D107	B0JCMC000006	DIODE(SI)	
	D803	B0DDCD000001	DIODE(SI)	
			(COILS)	
	L103	G1C100MA0395	COIL	
	L104	PQLQR2M5N6K	COIL	s
			(VARISTORS)	
	D102	D4ED16R80001	VARISTOR	
	D103	D4ED16R80001		
			(RESISTORS)	
	R101	ERJ2GEJ332	3.3k	s
	R102	ERJ6RSJR10V	0.1	
	R105	ERJ2GEJ222	2.2k	s
	R107	ERJ2GEJ560X	56	S
	R108	ERJ2GEJ332	3.3k	S
	R112	ERJ2GEJ121	120	S
	R113	ERJ2GEJ121	120	S
	R114 R116	ERJ8GEYJ120 ERJ2GEJ102	12 1k	S
	R117	ERJ2GEJ102 ERJ2GEJ102	1k	
	R121	ERJ2GEJ102	100k	S
	R122	ERJ2GEJ103	10k	s
	R230	ERJ2GEJ330	33	s
	R801	ERJ2GEJ391	390	s
	R802	ERJ2GEJ391	390	s
			(CAPACITORS)	
	C101	ECUE1C104KBQ	0.1	
	C102	EEE0JA221WP	220	
	C105	ECUE1A104KBQ		
	C106	ECUE1A104KBQ		
	C107	PQCUV0J106KB	10	
	C109	EEE0JA101WR	100	
	C110	ECUE0J105KBQ	1	
	C111	ECUE1H100DCQ	10p	
	C112	ECUE1H100DCQ	10p	
	C114	ECUE1H100DCQ	10p	
	C115	ECUE1H101JCQ	-	
	C116	ECUE1H101JCQ	-	
·	C117	ECUE1H100DCQ	-	
	C120	ECUE1H100DCQ	-	
	C121	ECUE1H100DCQ	_	
	C122	ECUE1H010CCQ	-	s
	C123	ECUE1H100DCQ	-	
	C124	ECUE1A104KBQ		
	C126	ECUE1A104KBQ		
	C127	ECUE1A104KBQ		
	C128	ECUE1A104KBQ		
	C129	ECUE1A104KBQ		
	C131	EEE0JA221WP	220	
	C135	EEE0JA221WP	220	
	C140	PQCUV0J475MB		
	C141	PQCUV0J475MB		
	C1/12		I -	1
	C142	ECUE1H100DCO		
	C142 C143 C148	ECUE1H100DCQ ECUE1A104KBQ	10p	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C150	ECUV1C105KBV	1	
	C151	ECUV1C105KBV	1	
	C152	ECUV1C105KBV	1	
	C160	ECUE1H100DCQ	10p	
	C161	ECUE1H100DCQ	_	
	C162	ECUE1H100DCQ	10p	
	C163	ECUE1H100DCQ	10p	
	C186	ECUE1E102KBQ	0.001	
	C802	F1H0J4750004	4.7	
	C803	ECUE1A104KBQ	0.1	
	C804	ECUE1A104KBQ	0.1	
	C807	ECUE1H100DCQ	10p	
	C813	F1G1H3R3A480	3.3p	
	C815	F1G1HR80A480	0.8p	
	C817	F1G1HR90A480	0.9p	
	C819	F1G1H1R5A480	1.5p	
	C820	F1G1HR50A480	0.5p	
	C821	ECUE1H100DCQ	10p	
	C823	ECUE1H100DCQ	10p	
	C825	F1G1H5R0A480	5p	
	C826	ECUE1H100DCQ	10p	
	C830	F1G1H1R2A480	1.2p	
			(OTHERS)	
	MIC100	L0CBAY000053	MICROPHONE	
	E101	L5DYBYY00022	LIQUID CRYSTAL DISPLAY (*4)	
	E102	PNHR1394Z	TRANSPARENT PLATE, LCD	PMMA-HE
	E103	PNHX1383Z	COVER, LCD	
	E104	PNHR1393Z	GUIDE, LCD	ABS-HB
	E105	PQHG10729Z	RUBBER PARTS , RECEIVER	
	E106	PNMC1040Z	CASE, MAGNETIC SHIELD (*3)	
	E107	PNVE1011Z	BATTERY TERMINAL	ABS-HB
	E108	PNJT1059Z	CHARGE TERMINAL (L)	
	E109	PNJT1060Z	CHARGE TERMINAL (R)	
	X101	ној207500007	CRYSTAL OSCILLATOR	
	BZ1	L0DACA000024	BUZZER	

15.5.3. Charger Unit

15.5.3.1. Cabinet and Electrical Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	200	PNLC1023ZH	CHARGER UNIT ASS'Y	
			without NAME PLATE	
			(RTL) (for KX-	
			TG1612RUH)	
	200	PNLC1023ZW	CHARGER UNIT ASS'Y	
			without NAME PLATE	
			(RTL) (for KX-	
			TG1612RU1)	
	200	PNLC1023ZR	CHARGER UNIT ASS'Y	
			without NAME PLATE	
			(RTL) (for KX-	
			TG1612RU3)	
	200-1	PNKM1204Z1	CABINET BODY	PS-HB
	200-2	PNJT1087Z	CHARGE TERMINAL	
	200-3	PNKF1150Z2	CABINET COVER (for KX-	PS-HB
			TG1612RUH)	
	200-3	PNKF1150Z4	CABINET COVER (for KX-	PS-HB
			TG1612RU1)	
	200-3	PNKF1150Z5	CABINET COVER (for KX-	PS-HB
			TG1612RU3)	
	200-4	PQHA10023Z	RUBBER PARTS FOOT	
			CUSHION	

15.5.3.2. Main P.C.Board Parts

Safety	Ref. No.	Part No.	Part Name & Description Remark	s
	PCB200	PNWPTGA161CH	PC BOARD W/COMPONENT (RTL)	
			(JACK)	
	J1	K2ECYB000001	JACK/SOCKET	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
			(RESISTOR)	
	R1	ERG2SJ100E	10	
			(FUSE)	
⚠	F1	K5H302Y00003	FUSE	

15.5.4. Accessories

Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
⚠	A1	PNLV226CE0Z	AC ADAPTOR	
	A2	PQJA10075Z	CORD, TELEPHONE	

15.5.5. Screws

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	A	XTB26+8GFJ	TAPPING SCREW	
	В	XTB2+8GFJ	TAPPING SCREW	

15.5.6. Fixtures and Tools

Note:

- (*1) See The Setting Method of JIG (Base Unit) (P.34), and The Setting Method of JIG (Handset) (P.38).
- (*2) When replacing the Handset LCD, see How to Replace the Handset LCD (P.33)

Safety	Ref. No.	Part No.	Part Name & Description Remarks
		PNZZTG1611RU	BATCH FILE CD-ROM (*1)
		PQZZ430PIR	TIP OF SOLDERING IRON (*2)
		PQZZ430PRB	RUBBER OF SOLDERING IRON (*2)
		PQZZ1CD300E	JIG CABLE (*1)

T.I
KXTG1611RUF
KXTG1611RUH
KXTG1611RUN
KXTG1611RUW
KXTG1612RU1
KXTG1612RU1
KXTG1612RUH
KXTGA161RUF
KXTGA161RUH
KXTGA161RUH
KXTGA161RUN
KXTGA161RUN
KXTGA161RUN
KXTGA161RUN