


Standard Accessories


Illustrated are accessories supplied with the Movie Camera.

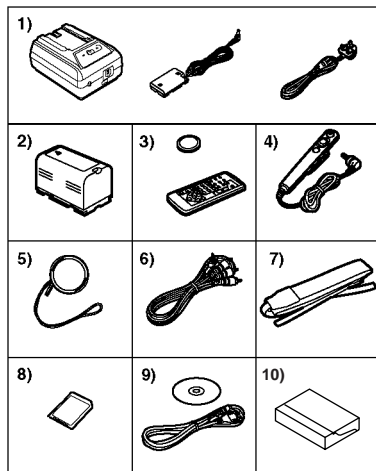

- 1) AC Adaptor, DC Input Lead and AC Mains Lead
- 2) Battery Pack
- 3) Remote Controller and Button-Type Battery
- 4) Free Style Remote Controller
- 5) Lens Cap
- 6) AV Cable
- 7) Shoulder Strap
- 8) SD Memory Card
- 9) USB Connection Kit
- 10) Head Cleaning Cassette (NV-MX500EN/A/ENT)

Controls and Components

Movie Camera

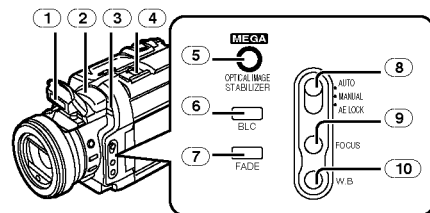

- 1) **Auto Pop-up Flash**
- 2) **Microphone (built-in, stereo)**
- 3) **White Balance Sensor**
- 4) **Smart Accessory Shoe**
 - The Video Flash (VW-FLH3E: optional) or the Stereo Microphone (VW-VMS2E: optional), etc. can be attached here. Power is supplied directly from the Movie Camera when using an accessory supported by the Smart Accessory Shoe.
 - Do not touch the connector part of the Smart Accessory Shoe.
- 5) **Optical Image Stabilizer Button [OPTICAL IMAGE STABILIZER]**
- 6) **Backlight Button [BLC]**
- 7) **Fade Button [FADE]**
- 8) **Mode Selector Switch [AUTO/MANUAL/AE LOCK]**
- 9) **Focus Button [FOCUS]**
- 10) **White Balance Button [W.B.]**