


- 11 LCD Monitor Open Button [PUSH OPEN]
- 12 LCD Monitor

Due to limitations in LCD production technology, there may be some tiny bright or dark spots on the LCD Monitor screen. However, this is not a malfunction and does not affect the recorded picture.


- 13 Tape/Card Selector [TAPE/CARD/CARD MODE]
- 14 Card Access Lamp [ACCESS]
- 15 Card Slot
- 16 Card Slot Cover
- 17 Rewind/Review Button [◀◀]
- 18 Reverse Search Button [SEARCH-]
- 19 Recording Check Button [G]
- 20 Play Button [▶]
- 21 Fast Forward/Cue Button [▶▶]
- 22 Forward Search Button [SEARCH+]
- 23 Colour Night View Button [C.NIGHT VIEW]
- 24 Stop Button [■]
- 25 Web Camera Button [WEB CAMERA]
- 26 Title Button [TITLE]
- 27 Pause Button [||]
- 28 Still Button [STILL]
- 29 Multi Button [MULTI]
- 30 Picture-in-Picture Button [P-IN-P]

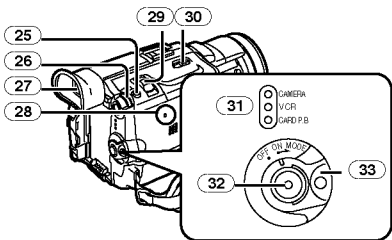

- 25 Photoshot Button [PHOTO SHOT]
- 26 Multi-Function Dial [PUSH]
- 27 Viewfinder


Due to limitations in LCD production technology, there may be some tiny bright or dark spots on the Viewfinder screen. However, this is not a malfunction and does not affect the recorded picture.

- 28 Reset Button [RESET]
- 29 Zoom Lever [W/T]
- 30 Cassette Eject Lever [OPEN/EJECT]
- 31 Operation Mode Lamps [CAMERA/VCR/CARD P.B.]
- 32 Recording Start/Stop Button
- 33 Off/On Mode Selector Switch [OFF/ON/MODE]

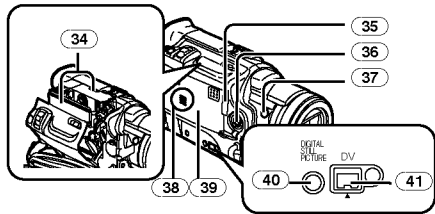


- 34 Cassette Holder
- 35 Cassette Holder Close Button [PUSH CLOSE]
- 36 S-Video Input/Output Socket [S-VIDEO IN/OUT]
- 37 Sub Recording Start/Stop Button [REC]
- 38 Speaker
- 39 Cassette Compartment Cover
- 40 Digital Still Picture Terminal [DIGITAL STILL PICTURE]
- 41 DV Terminal [DV]

● Connect this to the digital video equipment.

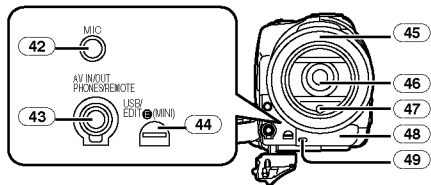

- 42 Microphone Socket [MIC]
- 43 Audio-Video Input/Output Socket [AV IN/OUT]
- 44 Headphone Socket [PHONES]
- 45 Free Style Remote Controller Socket [REMOTE]
- 46 Connecting an AV Cable or Free Style Remote Controller to this socket activates the Movie Camera's built-in speaker, but connecting a headphone, etc. deactivates it.
- 47 When plugging the pin plug of the AV Cable or Free Style Remote Controller to this socket, plug it in as far as it goes.
- 48 USB Socket [USB]
- 49 Edit Socket [EDIT(MINI)]
- 50 Lens Hood
- 51 Lens (LEICA DICOMAR)
- 52 Flash Sensor
- 53 Remote Control Sensor
- 54 Recording Lamp

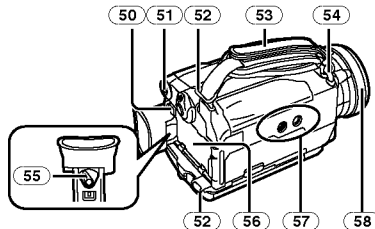

- 50 Battery Eject Button [PUSH BATT]
- 51 Menu Button [MENU]
- 52 Shoulder Strap Holders
- 53 Grip Belt (Free Style Grip Belt)
- 54 Lens Cap String Holder
- 55 Eyepiece Corrector Knob
- 56 Battery Holder
- 57 Tripod Receptacle
- 58 Focus Ring

● Used for mounting the Movie Camera on an optional tripod.