



6.1.4.2. Side L FPC Unit

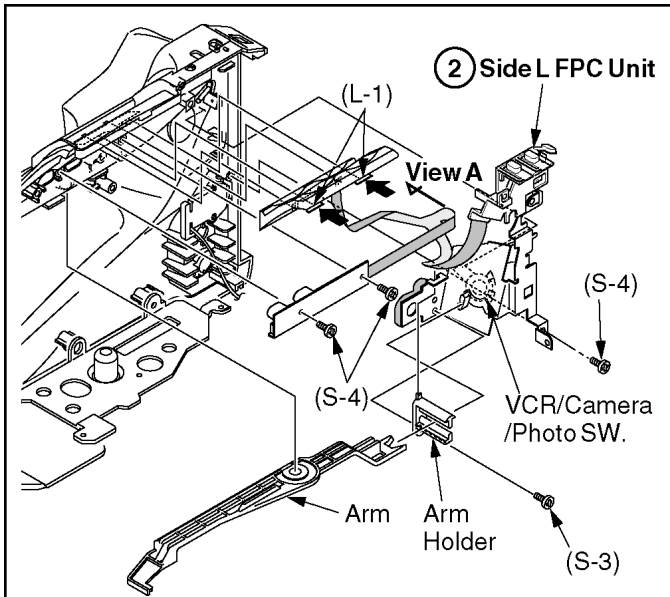

Note:

1. Removal of the Side L FPC Unit

- (1) Remove the Arm first.
- (2) Remove Screw (S-3). Then, remove the Arm Holder.
- (3) Remove 3 Screws (S-4).
- (4) Remove the Side L FPC Unit after releasing 2 Locking Tabs (L-1) by pushing as indicated by the arrow.

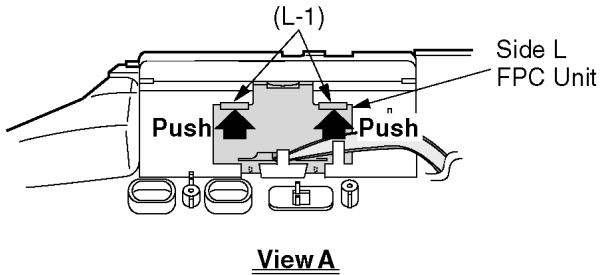

Reassembly Note:

When installing the Side L FPC Unit, set the VCR/Camera/Photo SW. to Camera mode or Photo mode.

Fig. D8-2

6.1.4.3. PC Jack C.B.A., TV Tuner Jack C.B.A. (Model:D)

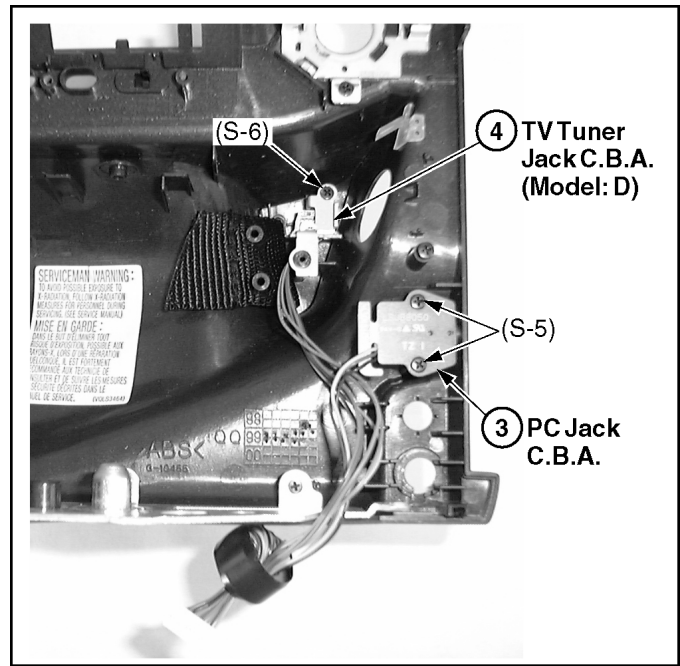


Fig. D8-3