This page is copyright by mike@butkus.org M. Butkus, N.J.
This page may not be sold or distributed without the expressed permission of the producer
I have no connection with any camera company

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your E-mail address too so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy. These donations allow me to continue to buy new manuals and maintain these pages. It'll make you feel better, won't it?

If you use Pay Pal, use the link below. Use the above address for a check, M.O. or cash. Use the E-mail of butkusmi@ptd.net for PayPal.



back to my "Orphancameras" manuals /flash and light meter site


Only one "donation" needed per manual, not per multiple section of a manual!

The large manuals are split only for easy download size.

PENTAX ZX-M



OPERATING MANUAL

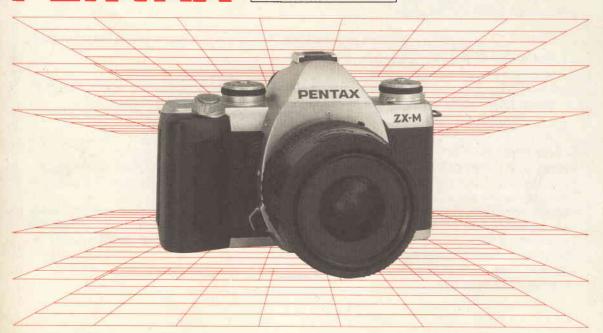

Read this instruction manual carefully to get a full explanation of operations before use.



The names of the camera's working parts are listed on the front and back flaps in this operating manual. Keep the flaps unfolded for quick reference while reading this manual.

Lenses and accessories produced by other manufacturers are not made to our precise specifications and therefore may cause difficulties with or actual damage to your Pentax camera. We do not assume any responsibility or liability for difficulties resulting from the use of lenses and accessories made by other manufacturers.

Icon indicators used in this manual

Operation direction	—
Automatic operation	4
Attention	0
Lamp blinking	***
Correct	0
Incorrect	X

PRECAUTIONS FOR YOUR CAMERA

Your Pentax camera is a high-precision mechanism. Handle it with great care.

Precautions when taking pictures

- Do not use the camera where it may come in contact with rain, water, or any other liquid, because the camera is not weather, water, or liquid resistant. Should the camera get wet from rain, splashing water, or any other liquid wipe it off immediately with a dry soft cloth.
- Other liquid wipe it off immediately with a dry soft cloth.
 Do not drop the camera or allow it to hit solid objects.
 If the camera suffers a shock or impact, take it to a
- Pentax service center for inspection.

 Be careful not to subject the camera to strong vibrations, shock or pressure. Use a cushion to protect the camera when carrying it in a motorcycle, car, boat, etc.
- Condensation on the interior or exterior of the camera may be extremely harmful to the camera mechanism as it may cause rust. Furthermore, if the camera is taken from warm temperature to a subfreezing one or vice versa, the formation of icelets may cause damage. In such a case, put the camera into a case or plastic bag so that any changes in temperature difference is minimized. Do not remove it from the bag until temperature has stabilized.

 Regular size color prints may cut off what appears on the extreme edges of the film frame. Compose your picture with a margin of safety at the edges.


Precautions for storage

- Avoid leaving the camera for extended periods in places where the humidity and temperature are very high, such as in a car.
- Do not store the camera in a closet with moth balls or in an area where chemicals are handled. Store it in a place with good dry air circulation to prevent the growth of fungus.

Precautions for proper care

- Never touch the shutter curtain or mirror with your finger or any other object.
- Use a blower and lens brush to remove dust accumulated on the lens or viewfinder.
- Never use solvents such as paint thinner, alcohol or benzene to clean the camera.
- Electrical problems may often be caused by water, dirt
 or dust at points of electrical contact. Also check for
 battery leakage, traces of dirt or grease, or corrosion
 due to salinity or gas. If you cannot correct the problems, have your camera inspected at a Pentax service
 center. Repairs of this nature are not covered under
 the terms of the warranty and charges may be
 assessed.

NAMES OF WORKING PARTS I

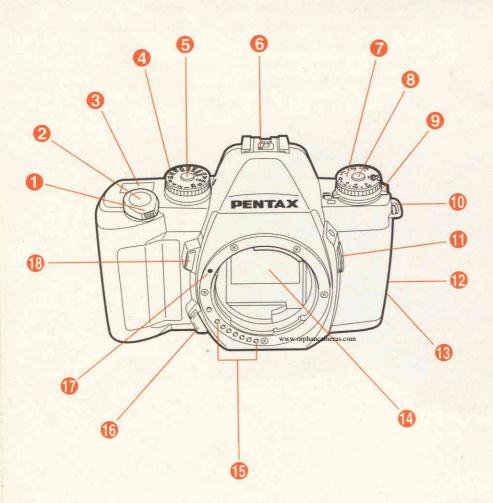

- 1 Main switch (p.12)
- Shutter release button
- 3 LCD panel (p.3)
- 4) Shutter dial
- Shutter dial lock button
- (6) Hot shoe (p.39)
- Exposure compensatiion dial (p.15, 33)
- (p.15, 33)
- O Drive mode dial (p.23)
- 10 Strap lug (p.7)
- Electronic cable release socket (p.32)
- P Back cover release lever (p.12)
- (B) Mid-roll rewind button (p.17)
- Mirror
- 15 Lens information contacts
- 16 Lens unlock button (p.11)
- The Lens mount index (p.10)
- (B) Preview button (p.35)

FOR SAFE USE OF YOUR CAMERA

Although we have carefully designed this camera for safe operation, please be sure to follow precautions given on this page.

- <u>A CAUTION</u> This mark indicates precautions that, if not followed, could result in minor or medium injury to the operator or damage to the equipment.

A WARNING

- Wrapping the strap around your neck is dangerous. Make sure that small children do not get the strap caught around their neck.
- Do not look directly at the sun through the camera, as viewing the sun for an extended period may damage your eyes.
- Be sure to store batteries out of the reach of children. Seek medical assistance immediately if accidentally swallowed.

A CAUTION

- Never try to disassemble, short or recharge the battery. Also, do not dispose of the battery in fire, as it may explode.
- Remove the batteries from the camera immediately if they become hot or begin to smoke. Be careful not to burn yourself during removal.

Other precautions

- The temperature range at which this camera functions properly is -10°C to 50°C (14°F to 122°F).
- A camera which has been submerged in water usually cannot be repaired. If such an accident should occur, it is advisable to contact a Pentax Service Center immediately.
- To maintain optimum performance, it is recommended that the camera be inspected every one or two years. If the camera has not been used for an extended period, or is being prepared for an important photographic session, it is recommended that you have the camera inspected or test shoot with it.
- Repairs deemed necessary due to usage of this product in an industrial or commercial application may not be covered under the terms of the Pentax warranty.
- The PENTAX warranty provides only for the repair of defects in materials or workmanship. Damage of any kind cannot be repaired at no charge under the terms of the warranty. If the difficulty is caused as a direct result of the product being used in conditions as outlined in the "Precautions for Your Camera" section or any other operation contrary to the instructions outlined in this manual, charges will be assessed and a repair quotation will be provided.

PRECAUTIONS FOR BATTERY USAGE

- Use two 3V lithium batteries (CR2 type).
- Misuse of the battery can cause hazards such as leakage, overheating, explosion, etc. The battery should be inserted with the "+" and "-" sides facing correctly.
- Battery performance may be temporarily hindered in low temperatures, but will recover in normal temperatures.
- Keep a spare battery on hand for replacement convenience when shooting outdoors or while traveling.
- Replace the batteries at the same time. Do not mix battery brands, types or old batteries with new, as this may cause overheating or explosion.

LCD PANEL INDICATION

P : Programmed AE (p.19, 26)
Av : Aperture-Priority AE (p.27)
Tv : Shutter-Priority AE (p.29)
M : Metered Manual Mode (p.30)

88 : Frame Counter (p.14)

• : Film Status Information (p.14)
: Battery Exhaustion Warning (p.9)


ISO : Film Speed Setting Signal (p.15)

Blue Comparison (p.15)

LCD (Liquid-Crystal Display)

When the LCD is exposed to high temperatures over approximately 60°C it may blacken, but when the temperature normalizes, it should return to normal.

VIEWFINDER INDICATION

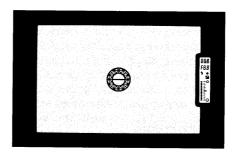

Microprism (p.21)

→ : Split-image (p.21)

88 : Shutter Speed (p.26, 28, 29, 31) F88 : Aperture Value (p.26, 28, 29, 31)

: Flash Status Information (p.39)
: Exposure Compensation (p.33)

•

: Bar Graph (p.31, 33)

* : Memory lock (p.34)

TABLE OF CONTENTS

Names of working parts Flaps	3. Attaching the lens 1
Safe use of your camera Inside cover	4. Turning on the power 1:
Precautions for your camera 1	5. Film loading 13
Precautions for battery usage 2	6. Film Speed (ISO) setting1
LCD panel indication 3	7. Rewinding and Unloading 1
Viewfinder indication 3	* Rewinding in mid-roll 1
Camera functions available with various lenses 6	8. Using the shutter release button 18
	9. Setting the aperture and shutter speed dial 1
I GENERAL OPERATIONS	10. Holding the Camera2
1. Attaching the camera strap 7	11. Focusing 2
2. Loading the batteries 8	3

II ADVANCED OPERATION	Adjusting the Date on the Data Back	36
1. Selecting a Drive Mode23	Adjusting the Time on the Data Back	27
Single Frame Mode23		
Consecutive Frame Mode24	Replacing the battery in the Data Back	. 38
Self-Timer Mode	7. Using a Pentax Dedicated External Flash	
	Overview of flash functions	
2. Selecting the Exposure Mode	8. Slow-speed-sync shooting	. 41
Using the Programmed AE Mode 26	9. Accessories (Optional)	42
Using the Aperture-Priority AE Mode 27	10. Camera case	4:
Using the Shutter-Priority AE Mode 29	11. The infrared index	
Using the Metered Manual Mode 30	11. The illiared lidex	. 44
Using the Bulb Exposure Mode 32	III OTHERS	
3. Exposure Compensation 33	Troubleshooting	45
4. Using the Memory Lock 34	Specifications	46
5. Depth of Field Preview button 35	Warranty policy	
6. Data Back (optional)	• • •	

CAMERA FUNCTIONS AVAILABLE WITH VARIOUS LENSES

Some of the special functions (Power zoom, Image-size tracking, Zoom clip, auto-zoom effect) cannot be used with this camera.

Function	Lens [Mount type]	FA lens [KAF2]	F lens [Kar]	A lens [K ₄]	M lens [K]	S lens [Screw]
Programmed AE		O*1	O*1	0	Х	Х
Aperture-Priority AE		0	0	0	0	0
Shutter-Priority AE	- 100	O*1	O*1	0	X	Х
Metered Manual		0	0	0	0	0
Auto Flash		0	0	0	0	0
Multi (2)-segment metering	3	0	0	0	X*2	X*2
Approx. f-stop indication	4.00	0	0	Х	Х	Х

Notes:

^{*1.} Exception of Pentax-FA Soft 85mm f/2.8 and FA-soft 28mm f/2.8.

^{*2.} Center-weighted metering is used instead of the multi-(2) segment metering mode.


I GENERAL OPERATION


PENTAX


Fit the strap on the camera as illustrated.

 There is a pocket on the strap so you can store the finder cap, release socket cover, hot shoe cover or any other small accessory as illustrated.


2 LOADING THE BATTERIES

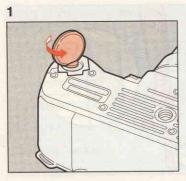

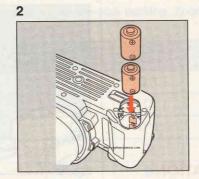

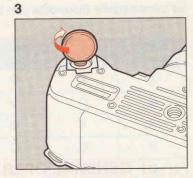

- 1 Open the battery chamber cover by using a coin or similar object.
- 2 Load two batteries (CR2 type) according to the markings (+,) in the battery chamber.
- 3 Turn the battery chamber cover screw in the direction of the arrow to lock it securely.
- Misuse of the battery can cause hazards such as leakage, overheating, explosions, etc. The battery should be inserted with the "+" and "-" sides facing correctly.
- The optional "AA-Battery Pack FG" is also available for this camera instead of using the lithium batteries.
- Replace the batteries at the same time. Do not mix battery brands, types or old batteries with new, as this may cause overheating or explosion.
- Keep spare batteries on hand for replacement convenience when shooting outdoors or while traveling.

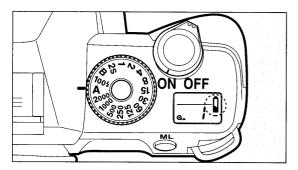

* Low Battery Warning

- * When the low battery warning []] starts blinking, the shutter cannot be released.
- * Replace both batteries at the same time.

Battery Life (using 24-exposure film rolls at 20°C/68°F)


General existing light photography	about 120 rolls		
Bulb exposure time	about 8 hours		

Battery Life (using 24-exposure film rolls at -10°C/14°F)


General existing light photography	about 30 rolls	
Bulb exposure time	about 2 hours	

CR2 batteries were used under Pentax testing conditions. Actual battery life and performance may vary drastically depending on external conditions such as temperature and freshness of the battery.

3 ATTACHING THE LENS

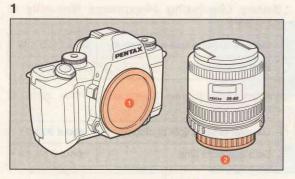


- 1 Remove the body mount cap @ and rear lens cap @ as shown in the illustration.
- The body mount cap is designed to protect the camera against scratches and dust at the factory.
- · For storage, the optional accessory "Body Mount Cap K" is available.

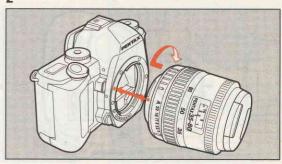


2 Align the red dots on the camera and lens mount, attach the lens to the camera body, and turn it fully to the right until it clicks into place.


3 ATTACHING THE LENS

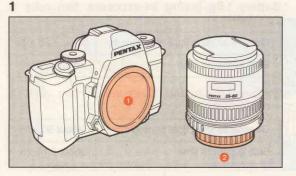


- 1 Remove the body mount cap 1 and rear lens cap 2 as shown in the illustration.
- The body mount cap is designed to protect the camera against scratches and dust at the factory.
- For storage, the optional accessory "Body Mount Cap K" is available.

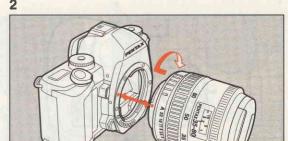

2 Align the red dots on the camera and lens mount, attach the lens to the camera body, and turn it fully to the right until it clicks into place.

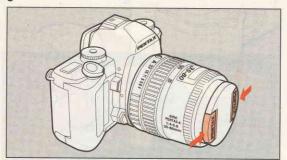

- 3 To remove the front lens cap, squeeze the tabs on both sides in the direction of the arrow.
- We assume no responsibility nor liability for damages resulting from the use of lenses made by other manufacturers.
- The camera body and lens mount incorporate lens information contacts. Dirt, dust, or corrosion may cause damage to the electrical system. Clean the contacts with a soft, dry cloth.

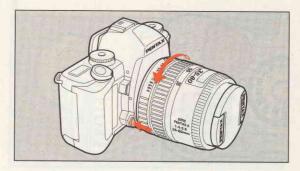

*To remove the lens, turn it to the left while depressing the lens unlock button.

5 LOADING FILM



Set the main switch to the ON position.

Note:

The LCD panel shown above is an example. The actual display that you see may be different if a lens is attached or if you have made other camera settings.






- 1 To open the back cover, slide the back cover release lever in the direction of the arrow.
- 2 Place the film cartridge in the film chamber as shown in the illustration.
- Always load and unload film in the shade or by using your body to shade the camera.
- · Pull the film leader out only far enough to reach the take-up spool.




THE SHUTTER CURTAINS ARE FINE-PRECISION MATERIAL. DO NOT TOUCH THEM WITH YOUR FINGERS OR ANY OTHER OBJECT WHILE LOADING FILM.


- If you have pulled out too much film, push it back into the cartridge to reduce the slack.
- The DX information pins in the film chamber are used to read film speed. Keep them clean and free from scratches. To remove smudges, wipe them gently with a soft, dry cloth.



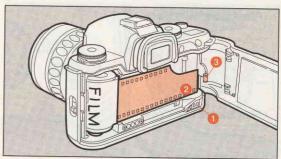


- 3 Align the film leader with the film leader end mark 1 as shown.
- Make sure that the film perforations properly engage on the sprocket teeth 2.
- Make sure that the film leader is positioned under the film retainer 3 as shown in the illustration.

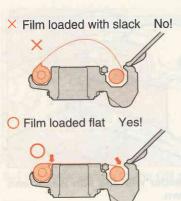

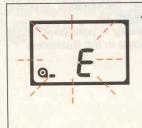


 If the film is not loaded properly, [Q E] on the LCD panel blinks, indicating that the film is not loaded properly.
 Open the back cover and load the film once again. 4

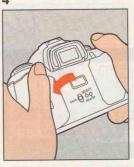




- 4 Close the back cover and, if you have not already done so, set the main switch to the [ON] position. The film automatically advances to the first frame.
- Check that [/] and [Q _] are displayed on the LCD panel.
- The film counter indication advances one each time the shutter is released.

6 FILM SPEED (ISO) SETTING

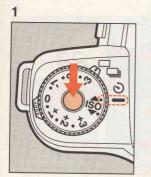

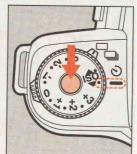


Automatic film speed setting

This camera is designed to use DX-coded films with ISO ratings from 25 to 5000. When DX-coded film is used, the correct film speed is automatically set for the camera. If you use a non-DX coded film, set the film speed manually.

To set the ISO film speed manually:

- 1 To change the ISO to a larger number (higher film speed), turn the exposure compensation dial to [▲] while holding down the exposure compensation dial release button.
- 2 To change the ISO to a smaller number (lower film speed), turn the exposure compensation dial to [▼] while holding down the exposure compensation dial release button.

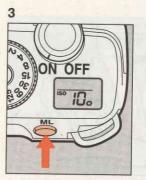




- 3 Depress the memory lock button until the desired ISO is indicated on the LCD panel.
- 4 After the ISO is set, move the exposure compensation dial to [0].


Note:

- The shutter cannot be released with the exposure compensation dial set at [▲] or [▼].
- When the ISO film speed is set manually, [ISO] appears on the LCD panel.


7 REWINDING AND UNLOADING THE FILM

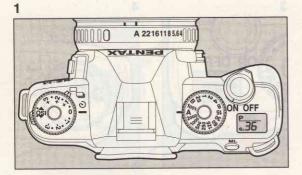


- 1 The film automatically rewinds at the end of the roll.
- During rewinding, [=] blinks on the LCD panel, indicating that the film is being rewound, the exposure counter counts frame numbers in reverse.

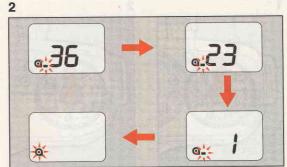

2 When the film is fully rewound, only [@] blinks on the LCD panel.

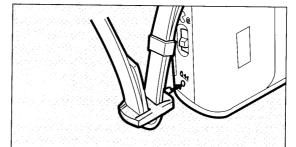

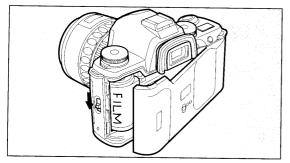

- 3 Before opening the back cover, check that [Q] is blinking. Open the back cover and remove the film.
- Never open the back cover until the whole film roll is completely rewound.
- When removing the film from the camera, protect it from exposure to direct sun light.
- A roll of 24-exposure film takes about 13 seconds to rewind.
- The shutter may be released a frame or more after the specified number of frames have been used as indicated by the number of frames on the film cartridge. However, those extra frames may be lost in processing. When you take important pictures, rewind the film when the film reaches the number of frames indicated on the film cartridge.

* REWINDING A ROLL OF FILM IN MID-ROLL


If you wish to unload the film before exposing all the frames, use this function.

- 1 Set the main switch to the [ON] position.
- 2 Depress the mid-roll rewind button by using the protruding part of the strap clamp.
- 3 Before opening the back cover, check that [@] is blinking.
- 4 Open the back and remove the film.
- Do not depress the button with an object having a sharp tip.


8 USING THE SHUTTER RELEASE BUTTON

The shutter release button has two positions. Depressing it down halfway (first position) turns on the exposure meter and the shutter speed and aperture setting are displayed. Depressing it fully (second position) releases the shutter. When taking a picture, depress the shutter release button gently to prevent camera shake.

- To prevent camera shake, depress the shutter release button gently.
- The LCD indication stays on for about 10 seconds after the button is released from the halfway position. Depressing the shutter release button down halfway keeps the LCD indicator on.

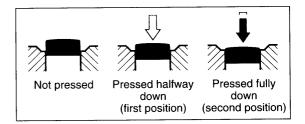


9 SETTING APERTURE AND SHUTTER SPEED

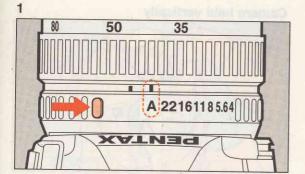

1. SETTING THE APERTURE ON THE LENS

Any aperture can be selected by simply turning the aperture ring.

 To move the lens aperture ring to the [A] position, turn the aperture ring while holding down the aperture-A lock button on the lens. The lens aperture ring can be released from the [A] position in the same manner.

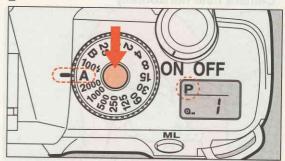

2. SETTING THE SHUTTER SPEED ON THE CAMERA

Any shutter speed can be selected by simply turning the shutter speed dial.

- To set the shutter dial to the [A] position, turn the shutter speed dial while holding down the shutter dial lock button. The shutter dial can be released from [A] in the same manner.
- [P] appears on the LCD panel to indicate that the Programmed AE Mode is set.

10 HOLDING THE CAMERA

Camera held horizontally



For best results, be sure to hold the camera correctly as shown in the illustrations.

Hold the camera firmly, with your left hand supporting the camera and lens as shown in the illustrations.

Camera held vertically




- Although there are individual differences among photographers, in general the shutter speed for a hand held camera is the inverse of the focal length. For example, 1/50 of second when the focal length is 50mm, and 1/100 of second when it is 100mm. A tripod should be used for shutter speeds slower than this.
- When using an ultra-telephoto lens, a tripod that is heavier than the total weight of the camera and lens is recommended to avoid camera shake.






- 1 Proper focusing is easily done by looking through the viewfinder and turning the focusing ring on the lens.
- 2 Depress the shutter release button halfway down. The shutter speed and aperture value are displayed in the viewfinder. Depress the shutter release button to take a picture.
- The focusing screen in the viewfinder is divided into three fields - the split-image field in the center, surrounded by the microprism ring field, and the rest of the screen is a matte field to assist in accurate focusing.

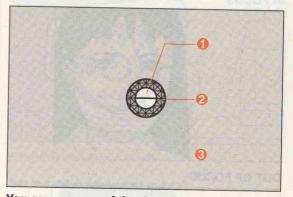


You can use any of the three fields for focusing:

- Split-image field
 - Turn the focusing ring until the two images in the split-image circle at the center of the focusing field are perfectly aligned.
- Microprism field Turn the focusing ring until the glitter disappears from inside the collar.
- Matte field Turn the focusing ring until the image on the matte field appears sharp and crisp.

IN FOCUS

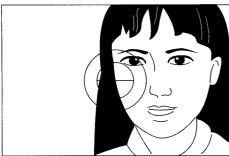


OUT OF FOCUS

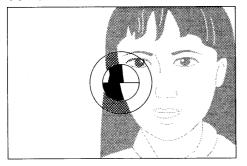

Note: Diopter adjustment for viewfinder eyepiece

People who wear eyeglasses sometimes find it difficult to focus accurately while wearing their glasses. Eyeglass wearers might find it beneficial to use the optional accessory diopter correction lens M so that the camera can be easily used and focused without the need for their glasses.

1 SELECTING A DRIVE MODE 23

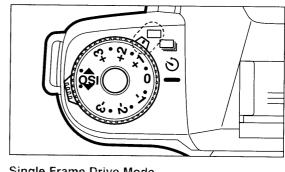



ADVANCED OPERATIONS

Single Frame Drive Mode

Set the drive mode dial to $[\Box]$.

 • One picture is taken each time the shutter release button is depressed.




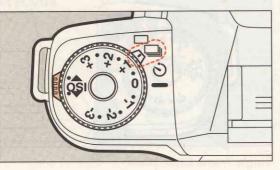

Consecutive-Frame Mode

Set the drive mode dial to [].

· Consecutive pictures can be taken by holding down the shutter release button.

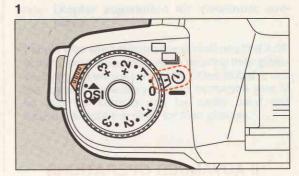

Self-Timer Mode

1 Set the drive mode dial to [🖒].

- The shutter will be released about 12 seconds after the shutter release is depressed.
- The self-timer mode delays the shutter release, and is useful for taking group shots that include the photographer.







2 Focus on the subject and then depress the shutter release button fully.

To Cancel


To cancel the self-timer operation after it has been activated, move the drive mode dial to any position other than [💍].

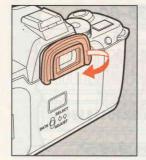

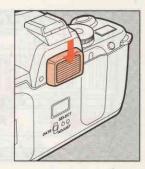

* Underexposure may occur if light enters the viewfinder during self-timer operation. If you intend to move away from the viewfinder, attach the supplied finder cap as shown in the illustration.
* When using accessories such as the finder cap, remove the Eyecup FH. The Eyecup FH comes from the factory fitted to the camera's viewfinder accessory grooves.


2 SELECTING THE EXPOSURE MODE

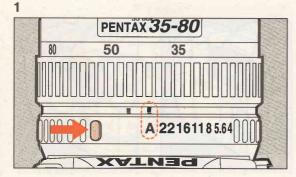


Programmed Auto-Exposure (AE) Mode


Purpose:

 For easy picture taking, use this mode. In the Programmed AE mode, the camera automatically selects the best combination of aperture and shutter speed setting allowing you to take pictures by simply depressing the shutter release button.

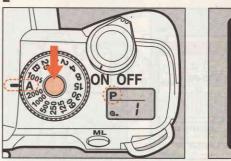



- 1. Turn the lens aperture ring to the [A] position as shown in the illustration.
- 2. Turn the shutter dial to [A] while holding down the shutter dial lock button.
- [P] appears on the LCD panel to indicate that the Programmed AE Mode is set.
- When the shutter release button is depressed halfway down, the shutter speed and the aperture value will be displayed in the viewfinder.

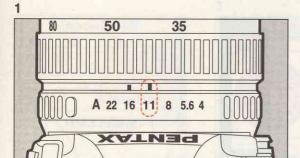


Aperture - Priority AE Mode

Purpose:


Allows the user to directly control the lens aperture. This mode is ideal for shooting landscapes with increased depth of field, or a portrait against a blurred background. When the desired aperture is selected, an appropriate shutter speed is automatically set by the camera for a proper exposure.

1. Set the lens aperture ring to the desired fstop other than [A].

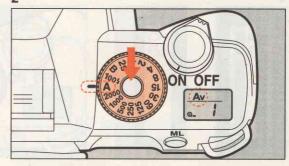

2. Set the shutter dial to [A]. [A_V] appears on the LCD panel.

 3



When the shutter release button is depressed halfway, the shutter speed will be displayed in the viewfinder.

Note:


- When an F or FA lens is used, an approximate aperture indication will appear in the viewfinder when the shutter release button is depressed halfway. When lenses other than an F or FA series are used, no approximate aperture indication will appear in the viewfinder.
- When a lens with no lens information contact is used, the center-weighted metering mode is automatically set.
- If the SMC Pentax 50mm f/1.2 lens is used with the lens aperture ring set at a position other than the [A] position, the center-weighted metering mode will be set instead of the multi-segment metering mode. As the




 
exposure will come out 1 stop overexposed, set the lens aperture ring to [A] or adjust the exposure deliberately to 1 stop under.

* Exposure Warning

If the subject is too bright or too dark, the selected shutter speed will blink in the viewfinder and on the LCD panel as a warning as shown. When the subject is too bright, choose a smaller aperture, if available; when it is too dark, choose a larger aperture, if available. When the shutter speed indication stops blinking, you can take the picture. If both shutter and aperture blink, it means that the exposure is out of metering range, unable to obtain a correct exposure even if the aperture is adjusted. Select a darker subject if it is too bright, or use a flash if it is too dark.

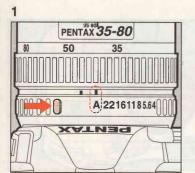

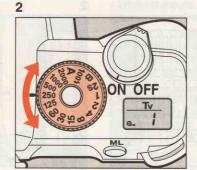





Shutter-Priority AE Mode

Purpose:

Allows the user to directly control the shutter speed. This mode is suitable for freezing the action with a fast shutter speed or capturing a flowing dynamic image with a slow shutter speed. When the desired shutter speed is selected, the appropriate aperture is automatically set by the camera for a proper exposure according to the brightness of the subject.

- 1. Set the lens aperture ring to [A].
- 2. Set the shutter dial to a shutter speed other than [A]. [T_V] appears on the LCD panel.


3. When the shutter release button is depressed halfway down, the shutter speed and the aperture value will be displayed in the viewfinder.

Note:

In flash photography, when you use the flash sync shutter speed of 1/100 second or a non-dedicated external flash unit, set the shutter dial to the [100 \(\frac{1}{2} \)] (1/100 of second) position.

* Exposure Warning

If the subject is too bright or too dark, the shutter speed and aperture setting in the viewfinder blink.

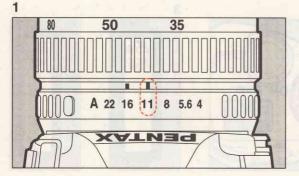

Metered Manual Mode


Purpose:

 
Allows the user direct control over all exposure settings. The Metered Manual Mode is a convenient exposure mode for taking pictures using the same shutter speed and aperture setting combination, or taking creatively under or over exposed photographs.



- Set the lens aperture ring to the desired fstop setting.
- 2. Set the shutter dial to the desired shutter speed. [M] appears on the LCD panel.
- When the shutter release button is depressed halfway, the shutter speed, approximate aperture and bar graph will be displayed in the viewfinder.

3

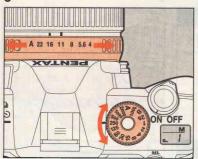



3. Turn either the shutter dial or lens aperture ring until a dot is displayed in the center of the bar graph at the right side of the viewfinder.


Note:

When a lens other than an F or FA lens is used, no approximate aperture indication will appear in the viewfinder.

- When the dots are displayed to the [+] side on the bar graph, it indicates overexposure and when the dots are displayed to the [-] side, it indicates underexposure. Moving one dot on the bar graph indicates 0.5 step (0.5EV). However, when under or over exposure is set beyond + 3 or 3 steps (3EV), [+] or [-] indicator will blink.
- In flash photography, when you use the flash sync shutter speed of 1/100 second or a non-dedicated external flash unit, set the shutter dial to the [100 *] (1/100 of second) position.

Note:

When a lens with no lens information contacts is used, the center-weighted metering mode is automatically set. When using a SMC Pentax 50mm f/1.2 lens with the lens aperture ring set other than the A position, the center weighted metering mode will be set instead of the multi-segment metering mode. As the exposure will come out 1 stop over, set the lens aperture ring to [A], or adjust the exposure deliberately to 1 stop under.

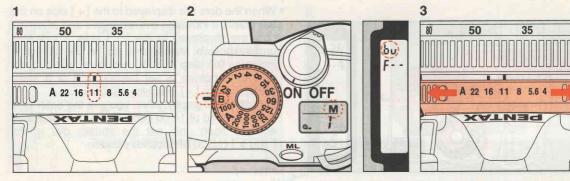

Bulb Exposure Mode

Purpose:

This mode is useful for the long exposures required for shooting night scenes and fireworks. The shutter remains open as long as the shutter release button is held down.


- 1. Set the lens aperture ring to the desired f-stop other than [A].
- 2. Set the shutter dial to [B]. [M] appears on the LCD panel and [bu] appears in the viewfinder.
- * When the shutter release button is depressed halfway, an approximate aperture is displayed in the viewfinder only when the FA lens is attached.

 
3. Set the desired aperture on the lens aperture ring.

Note:

 When using this mode, use a steady tripod to prevent camera shake and attach the optional "Cable Switch F" after removing the Release Socket Cap F.
 Up to approx. 8 hours of time exposure are possible with new lithium batteries at room temperature.

3 EXPOSURE COMPENSATION

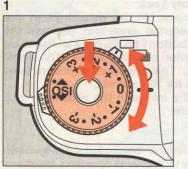



Purpose:


The exposure compensation allows you to deliberately overexposure (brighten) or underexposure (darken) a subject, or compensate for difficult lighting conditions which may fool the camera's built-in exposure meter.

- Turn the exposure compensation dial to the desired compensation value while holding down the exposure compensation dial release button.
- The bar graph which indicates the compensation value and [☑] appear in the viewfinder.

Notes:

- Exposure compensation does not work in the Bulb Exposure Mode.
- The exposure compensation range is 3EV to +3EV in 0.5EV steps.
- Moving one dot on the bar graph indicates 0.5EV step
- When exposure compensation is used in the Metered Manual Mode, the dots on the bar graph indicate under or overexposure, it is not indicating the exposure compensation value.

4 MEMORY LOCK FUNCTION

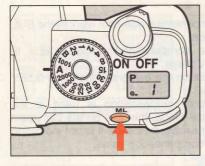



Purpose:

The memory lock function enables an exposure level to be memorized before shooting. Use the memory lock function to get a correct exposure from a neutral mid-tone area of a high-contrast scene.

To set the Memory Lock:


- Position the area to be measured in the viewfinder metering area and depress the memory lock button [ML]. [*] is displayed in the viewfinder and an audible PCV signal can be heard. The measured exposure level is memorized for 10 seconds.
- 2. Recompose the image in the viewfinder and take the picture.

Note:

If the shutter button is depressed halfway down while the memory lock timer is operating, the memorized meter reading will remain even if the memory lock button is released.

To cancel the memory lock function, depress the memory lock button [ML] again.

5 DEPTH-OF-FIELD PREVIEW BUTTON

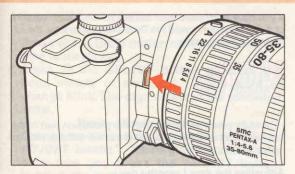

Purpose:

To determine before taking a picture how much of the scene will actually be in focus at the aperture selected or indicated.


While looking through the viewfinder, press the preview button.

 The image seen in the viewfinder may appear dark, but the actual depth-of-field can be seen.

Notes:

- If the lens aperture is set to an f-stop other than
 [A] position, the camera will close down to the aperture you have set while depressing the preview button.
- This preview button can also be used even if the lens aperture ring is set to the [A] position.

6 DATA BACK (optional)

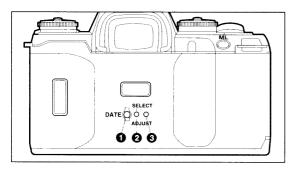



If you have purchased your camera as the "Date" version, or if you have purchased the Data Back separately, the following section applies.

- DATE button
- SELECT button
- 3 ADJUST button

Notes:

 Carefully press the button with the protrusion part of the camera's strap clamp. Do not press the buttons with an object having have a sharp tip.

Adjusting the year / month / day

- Press the DATE button repeatedly until the date is displayed.
- Press 2 the SELECT button to make the year, month, or day you want to change blink. The digits blink in the following order.

Year - Month - Day - Year

- 3. Change the date with **(3)** the ADJUST button. The digit increases by one each time the ADJUST button is depressed. Holding the button for about 2 to 3 seconds will change the digits continuously.
- Press 2 the SELECT button to stop the digit from blinking, after you have changed the date. The adjusted date has been entered.

Adjusting the hour / minute


- 1. Press 1 the DATE button repeatedly until the time is displayed.
- Press the SELECT button to make the hour, minute or second (:) you want to change blink. The digits blink in the following order.

Hour - Minute - : - Hour

- 3. Change the data (hour or minute) with the ADJUST button . The digits increases one each time you press the ADJUST button. Holding the button for 2 to 3 seconds will change the digits continuously.
- 4. To change the second (:), press ② the SELECT button until ":" blinks, and then press the ADJUST button in sync with a time signal to set the second to zero.
- Press the SELECT button to stop the adjusted hour / minute from blinking.

Operating precautions


- The working temperature for data printing is 0°C-50°C (32°F 122°F).
- Use DX-coded films with ISO rating from 25 1600.
- If high-speed film with an ISO rating of 1000 or faster is used, the imprinted characters may blur.
- If film with ISO rating of 50 or slower is used, the printed characters may be dark or dim.
- If you release the shutter while the blinking data is being corrected, the data cannot be imprinted.

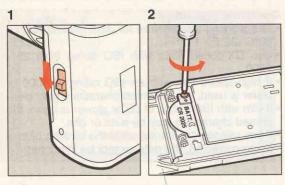

Replacing the Battery

Replace the battery when the data information on a picture or the LCD panel becomes weak or invisible. The battery will last for approximately 3 years. The data back uses one 3V lithium battery, type CR2025.

- Ensure that a film is not loaded, then open the back cover.
- Loosen the battery cover fixing screw (located near the upper left side of the pressure plate) with a Phillips-head screwdriver, and then remove the battery chamber cover.

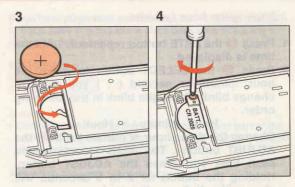

- Replace the old battery with a new battery with the + side facing up.
- Reinstall the battery chamber cover, and tighten the battery chamber fixing screw.

Note:

If the data indication does not appear on the LCD panel, it means that the battery has not been installed properly. After the battery has been replaced, adjust the data again

7 USING PENTAX DEDICATED AUTO FLASH UNITS 39

Pentax dedicated auto flashes (except FTZ-series flashes) can be used with this camera, regardless of whether it is set to the Programmed AE, Aperture-priority AE or Metered Manual Mode. TTL auto flash mode cannot be used in this camera.

Using a PENTAX Dedicated Flash

- 1. Remove the hot shoe cover FC and attach a Pentax dedicated flash unit to the camera.
- 2. Set the flash mode to AUTO position. Do not set the flash unit to TTL position.
- 3. Turn ON the flash. When the flash is fully charged, the ready lamp on the flash unit lights up.
- 4. Depress the shutter release button halfway down. If the flash is fully charged, [4] appears in the viewfinder indicating the flash is ready.
- 5. Focus on the subject and release the shutter.

Note:

Read the operating manual of the flash unit for more details regarding flash effective range, and aperture selections.

Overview of Flash Function

CAMERA FUNCTION	TYPE A	TYPE B
After the flash is charged, the camera automatically switches to the flash-sync speed.	0	0
Automatic aperture setting in the Programmed AE Mode or Shutter-Priority AE mode.	O*1	O*1
Slow-speed sync in the Shutter-Priority AE Mode or Metered Manual Mode	0	O*2

TYPE A: AF400T, AF280T, AF220T, AF200T, AF080C, AF140C, AF200SA, AF201SA TYPE B: AF200S, AF160, AF140,

Notes:

- When using a Type A flash (except AF200SA and AF220T) in the MS (Manual Sync) or M (Manual) modes or when using a Type B flash, set the camera's exposure mode to the Aperture-Priority AE Mode, Manual or Bulb. The Program and Aperture-Priority AE Modes cannot be used because the actual required aperture value may change.
- 2. Only the manual mode can be used.

Using other types of a flash

Use of non-Pentax flash units may damage the camera. For the best results, use a Pentax dedicated flash unit.

8 SLOW SHUTTER SPEED SYNC SHOOTING 41



Purpose:

It is possible to balance the exposure of a foreground subject against a dimly-lit background by using the flash to properly expose the foreground subject and a slow-shutter-speed to expose the low light background.

In the Metered Manual Mode

- 1. Attach the flash unit to the camera.
- 2. Set the camera's exposure mode to the Metered Manual Mode
- 3. Select an appropriate shutter speed (slower than 1/100 of second) and aperture combination for a correct exposure.
- 4. Focus the subject and release the shutter.

In the Shutter-Priority AE Mode

- 1. With the power switch of the flash unit off position, attach the flash unit to the camera.
- 2. Set the camera's exposure mode to the Shutter-Priority AE Mode.
- 3. Set the desired shutter speed. If a shutter speed over 1/100 is selected, the camera will automatically re-set the shutter to a maximum speed of 1/100.

Note:

If the aperture in the viewfinder blinks, a correct exposure will not be obtained for the background. Adjust the shutter speed until the blinking stops.

4. Turn the flash on

Note:

If the power is on before the flash unit is attached to the camera, correct exposure will not be obtained for the background.

5. Take a picture.

Note:

In the slow-speed-sync shooting, use of a tripod is recommended to prevent camera shake.

9 ACCESSORIES (OPTIONAL)

A number of dedicated accessories are available for this camera.

Cable Switch F

A shutter release cord designed for use with the MZ-M/ZX-M, MZ-5/ZX-5, MZ-5N/ZX-5N, MZ-10/ZX-10, MZ-50/ZX-50, Z-1P/PZ-1P, Z-70/PZ-70,Z-1/PZ-1, Z-20/PZ-20, Z-10/PZ-10.

Magnifier FB

A viewfinder accessory for magnifying the central area of the viewfinder.

PENTAX Dedicated Flashes

• AF200SA

Hot-shoe mount, thyristor auto flash with a Guide Number of 20 (ISO 100, m)

AF201SA

Hot-shoe mount series-control Auto flash, Guide Number: 20 (ISO 100, m)

AF260SA

Hot-shoe mount, thyristor auto flash with a Guide Number of 26 (ISO 100, m)

AF280T

Hot-shoe mount, thyristor auto flash with a Guide Number of 28 (ISO 100, m), with tilting and rotating head for flash.

AF400T

Grip mount, thyristor auto flash with a Guide Number of 40 (ISO 100, m), with tilting and rotating head for flash.

Refconverter A

Right angle finder which attaches to the grooves on both sides of the viewfinder. The viewfinder magnification is able to switch from 1X to 2X.

• Filters

Skylight, Cloudy, UV, Y2, O2, R2, and Circular Polarizing Filter are available. Each filter is available in sizes of 49mm, 52mm, 67mm and 77mm.

• AA Battery Pack Fg

A battery pack which takes four AA batteries can attach at the bottom of the camera, instead of using the lithium batteries.


Correction Lens Adapter-M

A clip-on prescription eyepiece for eyeglass wearers. Specially ground corrective lenses are available in 8 diopters from -5 to +3


Notes on accessories

- "Auto Bellows A" cannot be used in combination with the double cable release. When taking a vertical photograph, position the camera with the grip facing upward.
- When attaching the "ADAPTER K FOR 645 LENS" to the camera body, the camera shift lock screw of the lens may hit the camera body. To avoid this, change the position of the fixing screw.


10 CAMERA CASE

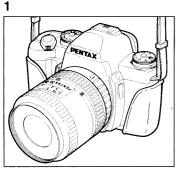

2

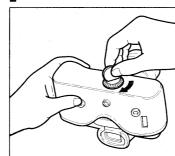

3

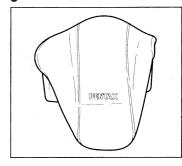

The soft case is available as an option and consists of a front and a back cover.

- 1. Open the front cover and place the camera body in the back cover.
- Fasten the back cover to the camera body by tightening the fitting screw in the tripod socket.
- 3. Attach the front case.


Selecting a Case

• The back case FG is the same back case included with the Soft case S,M and L.

Front case comes in three sizes, S, M and L

Case	Applicable F, FA-lens
FGS	A20mm f/2.8, FA20mm f/2.8, FA28mm f/2.8, A50mm f/1.2, A50mmf/2.0, FA50mm f/1.4, A Fisheye 16mm f/2.8, Fish-eye Zoom17-28mm, FA Soft 28mm, A Zoom 35-80mm
FGM	FA24mm f/2, FA 135mm f/2.8, FA Zoom 28-70mm f/4, FA Zoom 28-80mm f/4, Zoom 28-200mm,FA Macro 50mm f/2.8, FA Soft 85mm
FGL	A15mm f/3.5, FA85mm f/1.4, FA Zoom28-105mm, FA Zoom70-200mm, A Zoom 80-200mm, FA Macro 100mm f/2.8

11 INFRARED INDEX

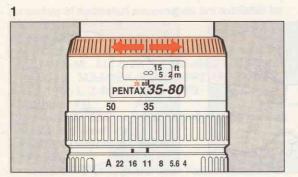


When infrared film and an "R2" or "O2" filter are used, the focal point is different from that of ordinary film exposed in visible light.

Focusing

- 1. Focus on a subject as usual.
- 2. Turn the focusing ring to the left by the distance indicated on the infrared index.

2

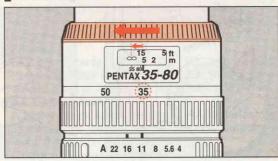

- As shown in the illustration, if 35 is read from the zoom scale, adjust the distance scale to 35 on the infrared index (red line).
- To set the proper exposure level for infrared pictures, refer to the instructions accompanying the film. The Programmed AE Mode, Aperture Priority Mode, or Shutter Priority Mode will not give a correct exposure for Infrared film. Use the Metered Manual Mode.

III OTHERS

TROUBLESHOOTING



What appears troublesome may be easily remedied. Here are some problems that may occur and their remedies. Before contacting a Pentax service center, check the following items.

Symptoms	Causes	Remedies	Reference
The shutter does not release.	The main switch is set to [OFF].	Set the main switch to [ON].	P. 12
	The low battery warning [] appears.	Replace the battery.	P. 8
	The battery is improperly installed.	Install the battery properly.	P. 8
	The exposure compensation dial is set to [▲] or [▼].	Set the exposure compensation dial to another position.	P. 33
	The self-timer is being used	Cancel the self-timer mode.	P. 24
Indicators do not appear on the LCD panel.	The main switch is the [OFF] position.	Turn the main switch to [ON].	P. 12
	No batteries are installed.	Install the batteries.	P. 8
	The batteries are improperly installed.	Re-install the batteries properly.	P. 8
	The batteries are dead.	Replace the batteries.	P. 8

SPECIFICATIONS

Type	- Multi-Exposure Mode 35mm SLR
Format —	– 24x36mm
Usable Film	- 35mm perforated cartridge film. DX-coded film with ISO 25-5000; non-DX coded films with ISO 6-6400
Exposure Modes	- Programmed AE Mode, Shutter-Priority AE Mode, Aperture-Priority AE Mode, Metered Manual Mode, Bulb Mode,
Shutter —	 Electronically controlled vertical-run focal-plane shutter, Electromagnetic release, Speed range: (1) Auto 1/2000- 30 sec. (stepless), (2) Manual 1/2000-2 sec. (3) Bulb,
Lens Mount	— Pentax K₂ bayonet mount (K-mount with lens information contacts)
Compatible Lens ——	- Pentax Kaf2-, Kaf-,Ka-, and K-mount lenses are usable.
Viewfinder	 Pentamirror finder, Matte field and sprit-image spot with microprism collar focusing screen, Field of view: 92%, Magnification:0.77X (with 50mm lens at infinity), - 1.0 diopter eyepiece
Viewfinder Indication	 Shutter speed indication, Aperture indication, Flash ready indication, [§]Bar graph (exposure compensation), Over or Under exposure indication in Manual Exposure Mode, [☑] exposure compensation indication, [¥] memory lock indicator
External LCD panel — Indication	— [P]=ProgrammedAE Mode, [Tv]=Shutter-Priority AE Mode, [Av]=Aperture-Priority AE Mode, [M]=Manual Exposure Mode, Film speed=6 - 6400, ISO indication, [Q]=Film status information, [☐]=Battery exhaustion warning, Film counter=0-99
Preview Button	Electronically controlled. Useable in all exposure modes
Self-timer —	 Electronically-controlled type with delay time of 12 sec. Start by depressing of shutter release button, Operation confirmation: by PCV beep tone. Cancelable after starting.
Mirror —	— Quick-return mirror
Film Loading	Film advances automatically to 1st frame after back cover is closed, Film information window is provided
Film Wind & Rewind -	 Auto wind/rewind by built-in motor, Consecutive or Single advance mode, Approx.2 frames/sec.(consecutive mode), Auto rewinding starts at end of roll, Film rewind/completion of rewinding is displayed on the LCD panel, mid-roll rewind button will rewind film in mid-roll

-With FA-, F-, or A-series lenses: TTL multi (2)-segment metering, Metering range from EV1 to EV17.5 at ISO100 Exposure Meter ---with 50mm f/1.4 lens With M-series, screw-mount, or any other lens that does not have information contacts: Center-weighted meter-Exposure --+/3EV in 0.5EV step increments Compensation -Hot shoe with X-contact with couplings for Pentax dedicated auto flashes (except FTZ-series flashes), ISO Flash sync range=25-800 Flash sync speed ----- 1/100 sec. or slower Power Source— Two 3V lithium battery (CR2 or equivalent) Battery Exhaustion — Battery exhaustion symbol [] is lit (blinking when the shutter is locked). Warning Dimension and Weight -135.0mm (W) x 90.5mm (H) x 55mm (D) (5.3"x3.6"x2.2") 305g (10.8 oz) body only without batteries Date Model Date mechanism —— Crystal quartz controlled LCD with digital clock, auto calendar up to 2019. 7-segment, 6-digit liquid crystal display Imprinting mode ———Year / Month / Day, Day / Month / Year, Month / Day / Year, Day / Hour / Minute, and " ----- " (blank) Dimension and Weight-135.00mm (W) x 90.5mm (H) x 55mm (D) (5.3"x3.6"x2.2") 320g (11.3 oz) Supplied Accessories - Hot Shoe Cover FC, Release Socket Cap F, Camera Strap FG, Eye Cup FH, Finder Cap Back cover — Interchangeable for replacing Data Back FJ

SPECIFICATIONS ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTIFICATION OR ANY OBLIGATION ON THE PART OF THE MANUFACTURER.

NAMES OF WORKING PARTS II

