 




PHILIPS

There are many ways to connect your new DVD/VCR to your Television and other equipment. This Quick-Use Guide shows the easiest, most common connection. Higher quality connections are explained in the accompanying owner's manual and will provide better sound or picture if your TV and/or audio system is compatible.

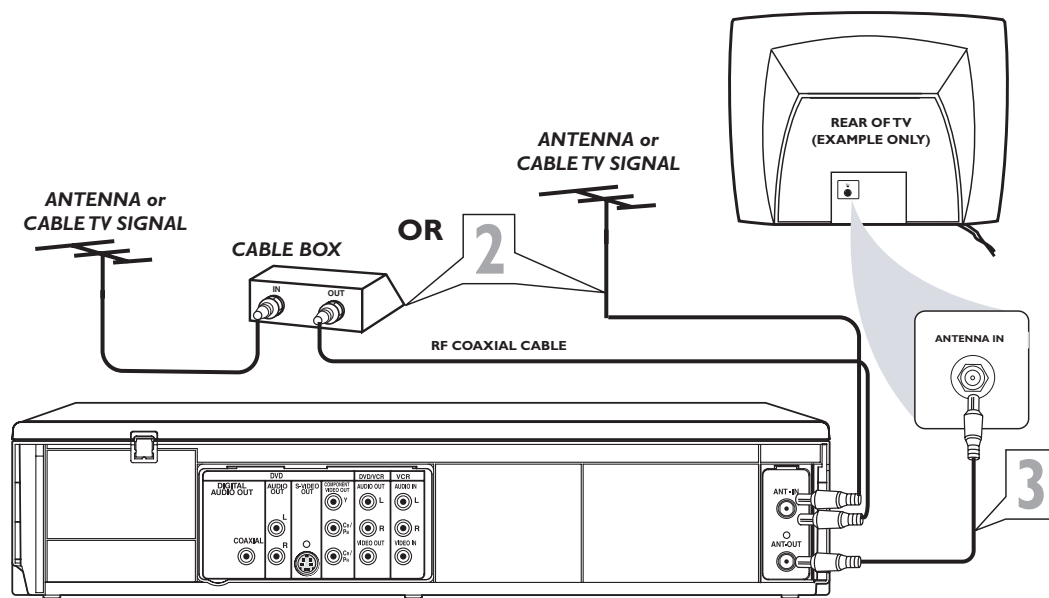

- 1** Disconnect all equipment from the power outlets. Connect the equipment to the power outlets only after you have finished hooking up everything. Never make or change connections with equipment connected to the power outlet.
- 2** If you do have a Cable Box (or Satellite Receiver), first connect the Cable TV (or Satellite) signal to the IN jack on the Cable Box/Satellite Receiver. Then, use an RF coaxial cable (like the one supplied) to connect the OUT jack of the Cable Box/Satellite Receiver to the ANT-IN jack on the DVD/VCR. If you do not have a Cable Box, simply connect your Antenna or Cable TV signal directly to the ANT-IN jack on the rear of the DVD/VCR.
- 3** Connect the supplied black RF coaxial cable to the DVD/VCR's ANT-OUT jack and to your TV's ANTENNA IN jack. The TV's ANTENNA IN jack may be labelled 75-ohm, TV IN, or RF IN. Check your TV manual for details.
- 4** Plug the power cords of the DVD/VCR and the TV into an active power outlet.
- 5** Turn on the TV power. Set the TV to channel 3 or 4. (If you cannot use channel 3 at your TV, you can use channel 4 instead. However, you must set the DVD/VCR's output channel to 4. See the accompanying DVD/VCR owner's manual for details.)
- 6** Press the STANDBY-ON button on the DVD/VCR or its remote to turn on the DVD/VCR. The first time you turn on the DVD/VCR, you should complete the VCR setup. See the other side of this Quick-Use Guide for details.


Quick-Use Guide (cont'd)

Setting Up the VCR the First Time

- 1** Turn on the TV and set it to channel 3 or 4 or its **AUDIO/VIDEO In** channel, depending on how you connected the DVD/VCR to a TV.
- 2** Press **VCR**, then press **STANDBY-ON**. The green VCR light will appear on the front of the DVD/VCR. The display shown on right will appear. This menu may not appear if you have already turned on DVD/VCR. You may have turned on the DVD/VCR before to find the Audio/Video In channel of the TV. (See the owner's manual to select a language and set up channels.)
- 3** Press **▲** or **▼** to select **English, French, or Spanish** as the language for VCR displays. Then, press **►**.
- 4** The AUTO SET UP message will appear. Press **►** to set up TV channels for the VCR. When set up is complete, the lowest TV channel will appear on the TV.


LANGUAGE SELECT
► ENGLISH [ON]
FRANCAIS
ESPANOL
PUSH ►

AUTO SET UP
PUSH ►

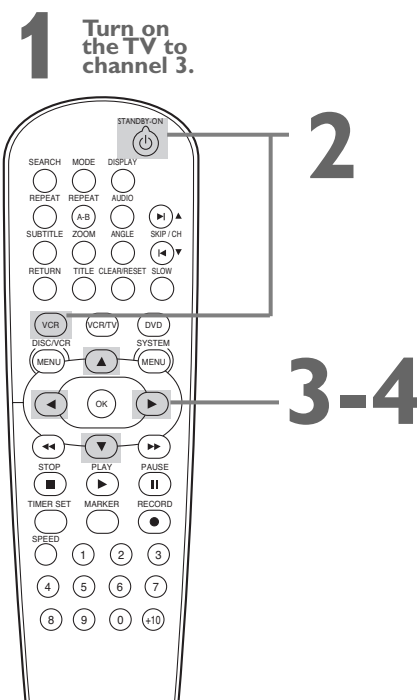

Playing a Disc

 - 1** With the TV and DVD/VCR on, press the **DVD** button to put the DVD/VCR in the DVD mode. Press **STANDBY-ON** to turn on the DVD/VCR.
- 2** Press **OPEN/CLOSE ▲** to open the disc tray. Put a Disc in the tray with the label facing up and the shiny side facing down. Press **OPEN/CLOSE ▲** again to close the disc tray.
- 3** Playback may start automatically. If not, press **PLAY ►** again. If a DVD Disc menu appears, use the **◀▶▲▼**, **ENTER**, or Number buttons to select features or start playback. Follow the instructions in the menu.
- 4** To stop playing a Disc, press **STOP ■**.

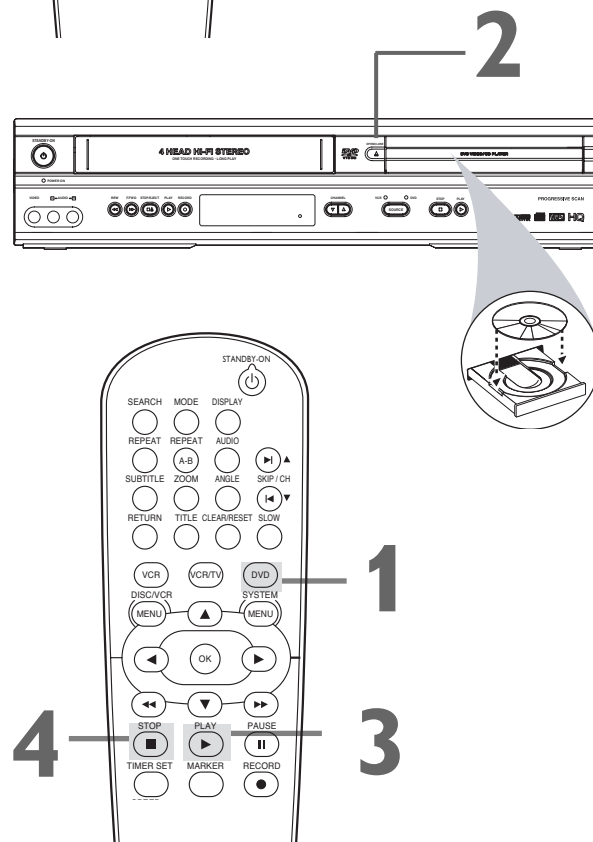

Playable Discs

The DVD Player of the DVD/VCR will play the following Discs.



DVDs must have a Region Code of ALL regions or Region I.



DVDs must be recorded in the **NTSC** Color System.

8239 300 2xxxx
0VMN04133/H9620UD*****