



This manual is for reference and historical purposes, all rights reserved.

This page is copyright© by M. Butkus, NJ.

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.

This will allow me to continue to buy new manuals and pay their shipping costs.

It'll make you feel better, won't it?

**If you use Pay Pal or wish to use your credit card,
click on the secure site on my main page.**

Polaroid Automatic

Land Camera


SHOOT Gently press No. 2 button until shutter clicks. In dim light hold No. 2 down, hold steady until second click as shutter closes.

FOCUS

Look through Focus window. Aim bright spot at subject. Push No. 1 buttons back and forth until two images in bright spot become one.

PULL TABS

Pull small white tab straight out of camera, all the way; large yellow tab will pop out. Pull yellow tab straight out of camera, all the way, moderately fast, smoothly, without hesitation. **THIS STARTS DEVELOPMENT.** Develop for full time recommended in film instruction sheet. Separate white print from brown paper. Don't touch face of print until thoroughly dry.

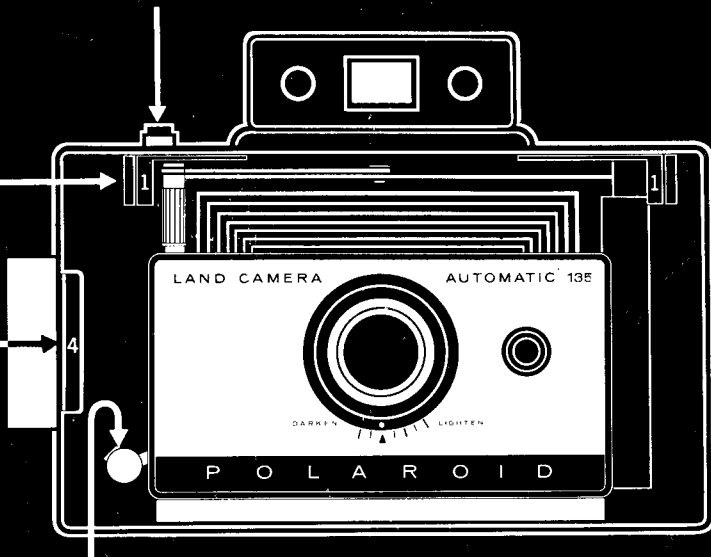

RESET Press No. 3 button down until it locks and stays down.

CONTENTS

Getting Acquainted

	Page
Introduction	2
How to open the camera	3
How to close and cover the camera	4
How to hold the camera	5
How to use the viewfinder	6
How to focus the camera	7
Practice the 1, 2, 3 system	8


Operation

How to load a film pack	9
How to set the camera for a daylight black & white picture	12
Tips for good daylight black and white pictures	13
How to set the camera for a daylight color picture	14
Tips for good daylight color pictures	15
How to take a picture	16
How to develop the print	18
If no yellow tab pops out	20

Check the temperature! It's important	21
How to make daylight pictures lighter or darker	22
Black and white prints must be coated	23
How to use the Cold-Clip with color film	24
Troublesome lighting situations to avoid	26
Black and white pictures in dim daylight	27
Fast focusing for black and white pictures	28
Flash pictures	29

Miscellaneous

Some helpful accessories	30
A filter can pep up black and white scenics	31
Devices for close-ups and portraits	32
You must take care of your camera	33
Picture troubles, their cause and cure	35
Protect film and camera from heat	39
Where to write for information	39
Warranty	39
List of repair stations	40

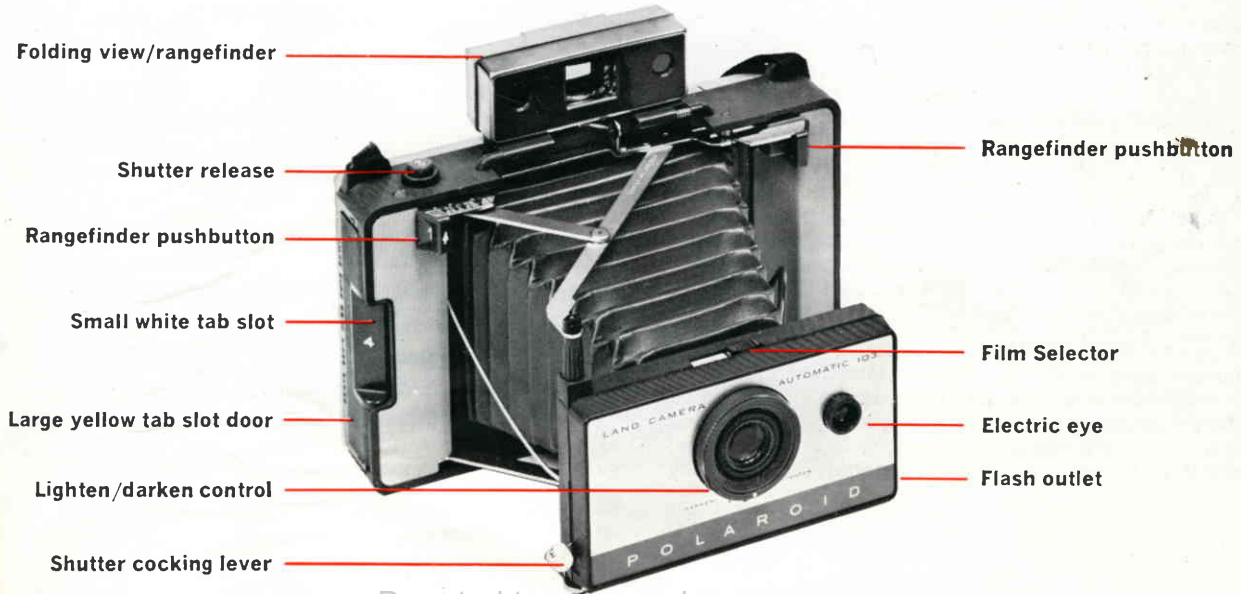

Donated to www.orphancameras.com

HOW TO GET THE MOST OUT OF THIS CAMERA

This is one of the world's easiest-to-use cameras, once you understand a few simple techniques. However, it is very important that you learn the basic operating steps or you're bound to waste film and money and be disappointed with your picture results.

With this camera, snap all your outdoor pictures in bright daylight, shoot all indoor pictures with flash.

Before you load your camera with film, please be sure to read carefully the first two sections in this booklet: Getting Acquainted, and Operation (the red edged pages). As you read the text and look at the pictures, go through all the motions of using the camera — without film.

Once you get the simple operating routine down pat, load a film pack. We suggest that you start with black and white. Please remember that even the finest camera and film need some help from the photographer if they are to produce good pictures. That help can be summed up in one sentence: **Plan and think before you shoot.** As a starter, read carefully


the instruction sheet packed with your film. Those instructions may change from time to time, so it's a good idea to review the film instruction sheet occasionally.

As a quick guide to help you get a good picture every time, here are seven helpful hints. They're important.

1. In daylight pictures **always have the light on the subject coming from behind you.** For best color pictures place your subjects in bright sunshine.
2. **Move in close**, to get a big image in the print.
3. **Choose colorful subjects** for your color pictures.
4. **Pick a good background**, particularly with flash.
5. **Pull the tab correctly.**
6. **Time development carefully.**
7. **Keep an eye on the temperature.**

As you go through this booklet you'll find these seven points explained in detail. They can make the difference between getting good pictures and poor ones.

HOW TO OPEN THE CAMERA

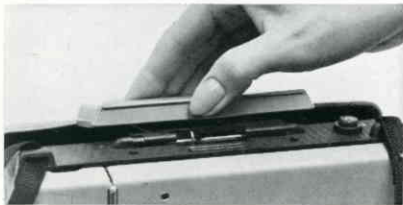


1. Magnet holds cover down. Lift back edge.




2. You can let cover hang down or . . .



3. . . . to remove it, push spring (arrow) and lift.

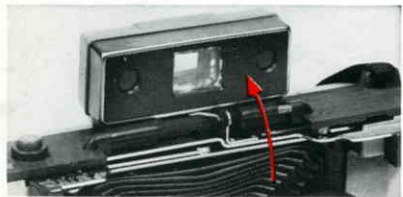

4. Lift finder up and back; magnet will grip it.

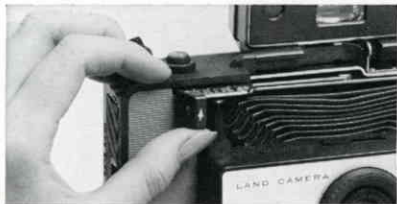

5. Raise button No. 1; this unlocks camera front.



6. Pull camera front out as far as it will go.


PHOTO 6, IMPORTANT: Be sure to pull the camera front out until there is a definite click and the locking bar (arrow) snaps

into place. If the front isn't fully out and locked, your prints will be badly blurred and may have large black areas.

This booklet is designed to fit neatly inside the cover, under a spring clip (photo 2).

· Donated to www.orphancameras.com


HOW TO CLOSE AND COVER THE CAMERA

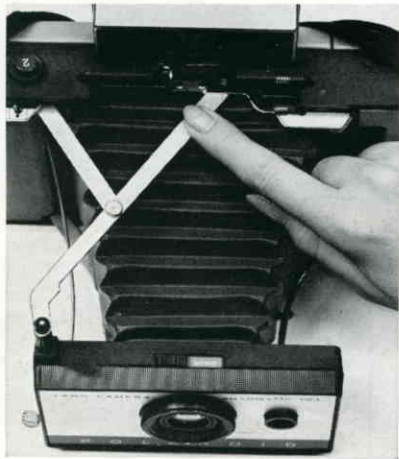

Press down on the locking bar. This releases the front of the camera. Push the front in all the way until it locks.



A magnet holds the finder up. Fold the finder down gently. Try not to bang it on the camera.

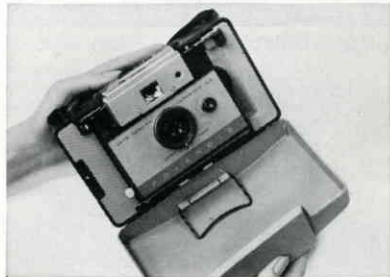

If you have removed the cover: to replace it slide the hinge down over the lock spring until it snaps into place (top). Swing the cover up and over; the magnet on top of the camera will hold it.

When storing the camera be sure that nothing presses on the No. 2 button; if it's depressed even slightly, the battery may be drained.

HOW TO HOLD THE CAMERA




HORIZONTAL: Grip the two ends. Place your forefingers on the No. 1 buttons; you can easily shift the right forefinger to No. 2 button. To steady the camera, press your elbows into your ribs; rest the camera against your nose.

GETTING ACQUAINTED



VERTICAL: Grip the camera as you would for a horizontal picture, turn it so your right hand is below. Brace the camera against your forehead and face.

HOW TO USE THE VIEWFINDER

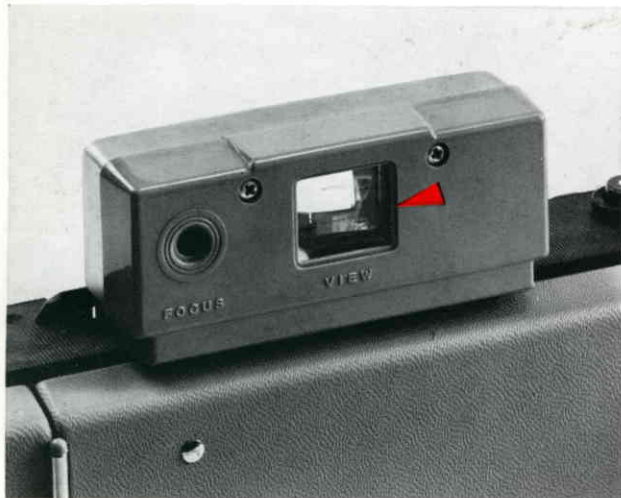


Looking through the viewfinder window (arrow) you'll see a bright, white broken line. Frame the scene with this line. Always try to look through the center of the window and concentrate on your subject, not on the white line. If your




subject is very close ($3\frac{1}{2}$ ft., for example), allow a little extra space between your subject and the top frame line (above). If not, you may accidentally cut off the top of someone's head in your picture.

HOW TO FOCUS THE CAMERA

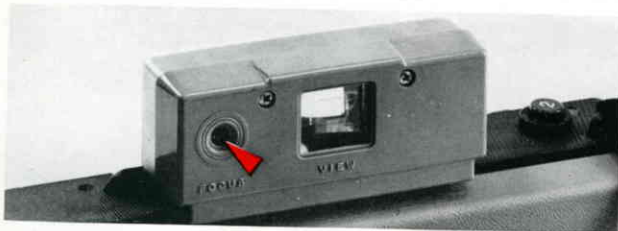

Look through here at the bright spot ▲

▼ Push No. 1 buttons.

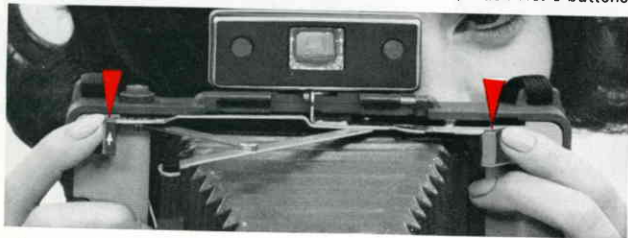

Holding the camera horizontal, place your forefingers on both No. 1 buttons as shown and push them all the way to your left. Look through the Focus window and aim the bright spot in the center at a nearby subject (about 5 ft. away, for example). You should see two images of your target in

GETTING ACQUAINTED

OUT OF FOCUS



IN FOCUS




the bright spot; this means that the camera is not focused for that distance. Push the No. 1 buttons back and forth until the two images become one — sharp and clear. Now the camera is focused. For vertical pictures, focus with the camera horizontal; turn it to aim and shoot.

BEFORE LOADING FILM, PRACTICE THE 1, 2, 3 SYSTEM



ONE is for focusing. Look through the Focus window and aim the bright spot at various subjects. Push the No. 1 buttons and practice bringing together the two images of your subject in the bright spot to make one clear image. Then shift your eye to the View window and frame your subject in the white line.

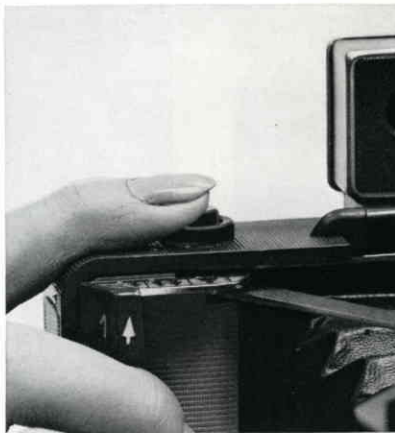


TWO is for shooting. Practice pressing the No. 2 button slowly until the shutter clicks. In dim light hold No. 2 down and stay very still until you hear the second click as the shutter closes. Then you can move and let No. 2 up. If nothing happens when you press No. 2, perhaps you forgot to reset No. 3 (right).



THREE is for resetting. Right after snapping a picture, always push down No. 3 button firmly until it locks and stays down. This resets the shutter for the next picture. If you don't reset No. 3 button, you won't be able to shoot your next picture; nothing will happen when you press No. 2 button.

LOADING: OPEN THE FILM PACKAGE

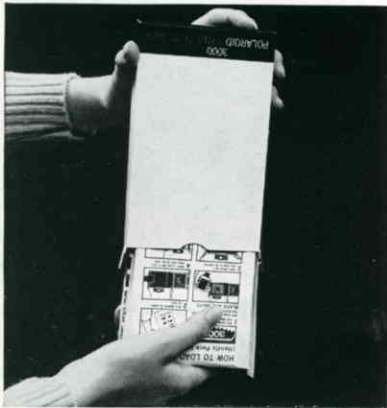

Open the top of the box. With color film there's a set of mounts; with black and white film there's a coater. Remove these and the instruction sheet (please read it). Pull out the film package. Handle it gently, carefully. Save the box to carry prints in safely. It also can be very useful for coating black and white prints.

Hold the package near the edges. **Don't press hard on the**




middle of the package. Starting at the corner, tear open the entire side of the package along the dotted line. When the side is open, rip apart the front and back of the package. Lift out the pack. Dispose of the little package of silica gel. Always handle the pack by the edges only.

Always open the package and load film in the shade, not in direct sunlight, to avoid fogging the film.


OPERATION




LOADING (Cont.)

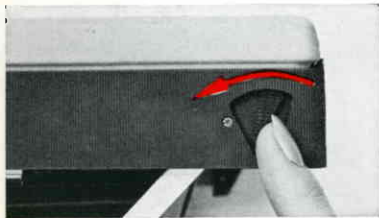


1. Push the back door latch; the door will pop up.

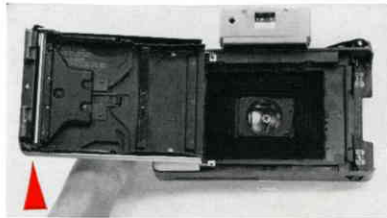


2. Open it all the way. Are the rollers (arrow) clean? If not, clean them as shown on page 33.

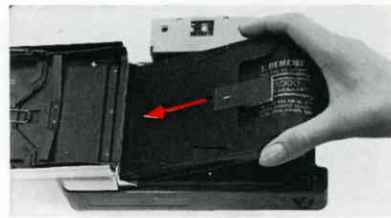

3. Hold the film pack by the edges so the printing on the safety cover faces the lens, and push the closed end of the pack under the door hinge against a light spring tension.

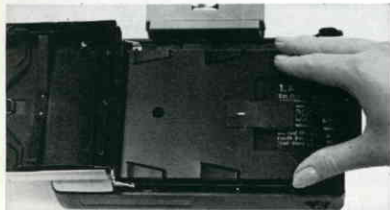


4. Push the pack down into the camera. You'll feel it snap into place.

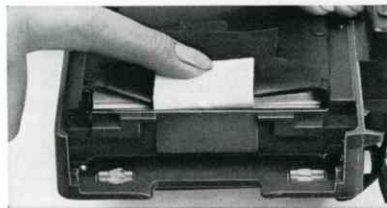


5. & 6. Be sure the white tabs are free and not folded under. Close the back door. Press both sides firmly to be sure that both sides latch. The black tab of the safety cover must stick out of the small slot.



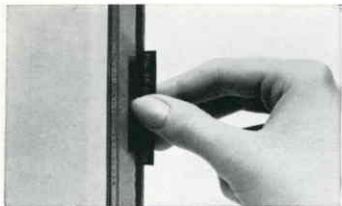

7. & 8. Pull the safety cover all the way out of the camera without stopping. Don't rip it.

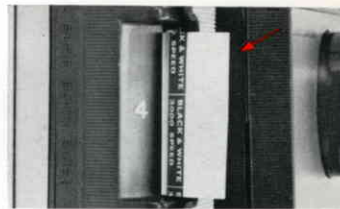


9. With the safety cover out, the white tab (arrow) should stick out of the small slot (No. 4). Don't pull the white tab. You're now ready for the first picture.

IF NO WHITE TAB APPEARS



If there's no white tab to pull, do the following in the shade or indoors, not in the bright sun.

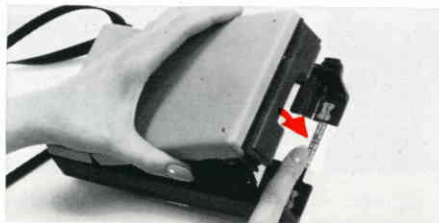


Open the back of the camera part way and, without disturbing or moving the film pack, push the white tab out into the open.




Close the back of the camera, making sure that both sides are locked securely and the white tab is outside in the No. 4 slot.

HOW TO SET THE CAMERA FOR A DAYLIGHT BLACK AND WHITE PICTURE

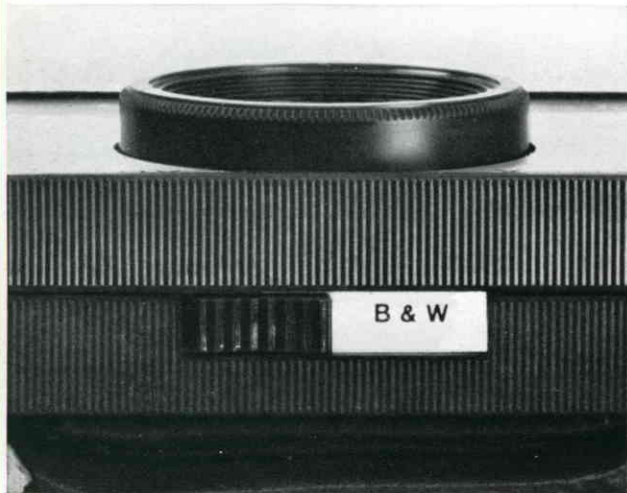

Set the Film Selector as shown for black and white pictures.

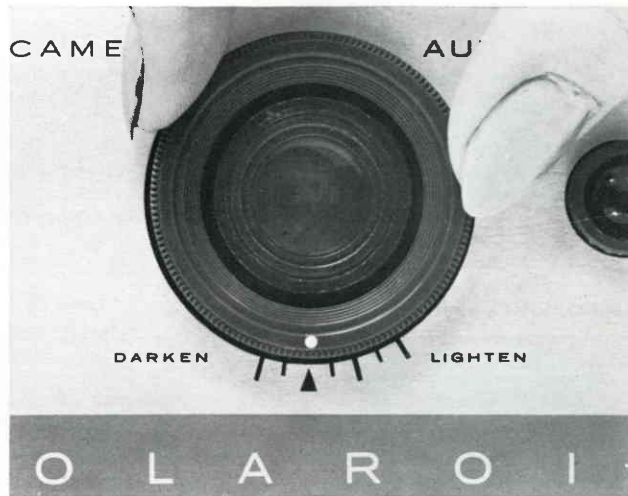

Set the white dot on the Lighten/Darken (L/D) control next to the arrow, as shown. This is the Normal position.

USE BRIGHT, EVEN LIGHT, COMING FROM BEHIND YOU:

Place yourself so the light on the subject is coming over your shoulder. Don't have the subject between you and the sun. For portraits you'll get best results when a cloud blocks the direct sun, or on an overcast but bright day, or in open shade.

For scenic pictures, avoid high overhead sun, shoot with the light coming from behind you and from the side.

AVOID DIM LIGHT: The shutter moves slowly and your picture may be blurred. But if you must make a picture without flash in dim light, follow the suggestions on page 27.

WATCH THE BACKGROUND: The light on the background, behind your subject, should be just about as bright as the light on the subject. Don't photograph someone in the shade if the background is out in the open and brightly lit. Strong light behind the subject will "fool" the electric eye (page 26).

MOVE IN CLOSE: The bigger your subject is in the print, the more details you'll be able to see. For scenic pictures,

try to get something big and solid looking into the foreground to help fill the print and add a feeling of distance.


TIME DEVELOPMENT CAREFULLY: Follow the recommendations in the film instruction sheet. These may change from time to time. With black and white film no harm is done if you overdevelop for a few extra seconds; in fact, it may improve some pictures. However, if you develop for less than the recommended time, your pictures will be of poor quality, with a gray, washed-out look.

KEEP AN EYE ON THE TEMPERATURE: Cold weather can affect the quality of your pictures. Be sure to read page 21, which explains how the temperature affects your pictures and what to do about it.


IF YOUR PICTURE IS TOO DARK OR TOO LIGHT: Use the L/D control as shown on page 22 to make the next one of the same subject, in the same location and lighting conditions, come out exactly as you want it to.

Never try to use flash with daylight pictures.

HOW TO SET THE CAMERA FOR A DAYLIGHT COLOR PICTURE

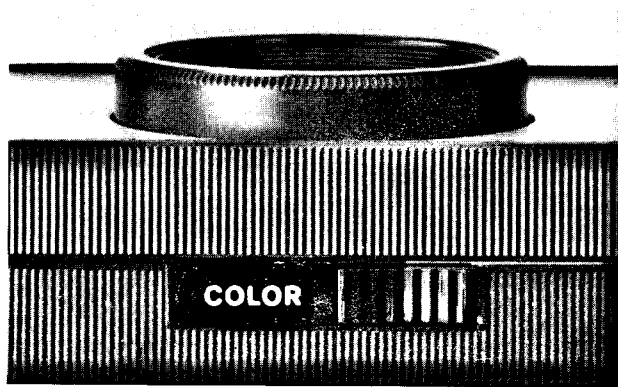

Set the Film Selector as shown above for all color pictures. Set the Lighten/Darken control (right) to Normal, as shown, with this exception. On some color film packs you'll find a printed instruction telling you to set the L/D control one mark toward Lighten for all pictures made with that pack. Please follow these instructions, which may vary from pack to pack;

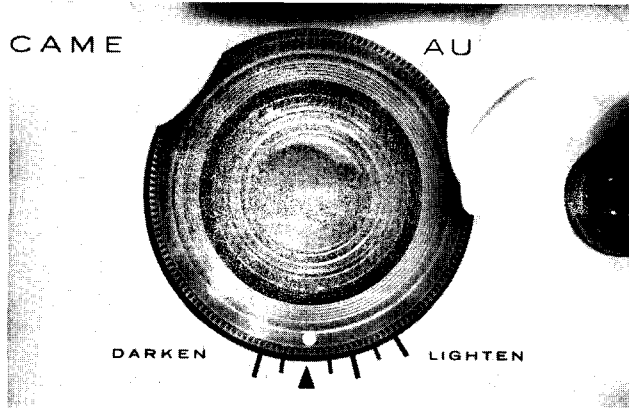

they are important. The new position of the L/D control then becomes the Normal setting for all daylight pictures made with that pack. You can still make your pictures lighter or darker (p. 22) with the L/D control. If there's no special instruction on the pack, set the L/D control to Normal as shown above.


Check all color packs for special L/D control instruction.

Donated to www.orphancameras.com

HOW TO SET THE CAMERA FOR A DAYLIGHT COLOR PICTURE



Set the Film Selector as shown above for all color pictures. Set the Lighten/Darken control (right) to Normal, as shown, with this exception. On some color film packs you'll find a printed instruction telling you to set the L/D control one mark toward Lighten for all pictures made with that pack. Please follow these instructions, which may vary from pack to pack;

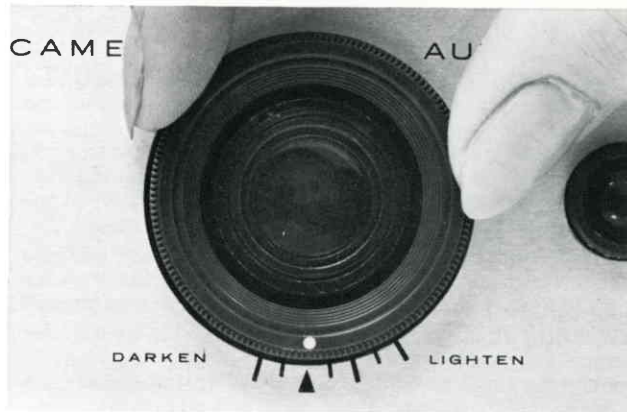

they are important. The new position of the L/D control then becomes the Normal setting for all daylight pictures made with that pack. You can still make your pictures lighter or darker (p. 22) with the L/D control. If there's no special instruction on the pack, set the L/D control to Normal as shown above.

Check all color packs for special L/D control instruction.

Donated to www.orphancameras.com

TIPS FOR GOOD DAYLIGHT COLOR PICTURES

USE BRIGHT SUN, COMING FROM BEHIND YOU: You'll get strongest colors if your subject is in bright sun (but you can also get pleasing results on an overcast but very bright day). Stand so the light on the subject is coming over your shoulder. Don't have the subject between you and the sun.

AVOID DIM LIGHT: The shutter moves slowly and your picture may be blurred.

MOVE IN CLOSE: The bigger your subject is in the print, the more color and detail you'll be able to see. For scenic pictures, try to get something big, solid looking, and colorful into the foreground.

FOCUS CAREFULLY: Focus on the main subject. It will be sharp, but objects much farther or nearer than the subject may be fuzzy.

WATCH THE BACKGROUND: The light on the background should be just about as bright as the light on the subject. Don't photograph someone in the shade if the background is out in the open and brightly lit. The strong light behind the subject will "fool" the electric eye (see page 26).

HAVE PLENTY OF COLOR: Look for subjects and backgrounds with strong, bright colors in big, solid chunks. If

OPERATION

your subject isn't wearing colorful clothes, add color with a bright shirt, scarf, or jacket. Or, find a colorful background — anything that will fill at least one-third of the picture area with strong, solid color.

TIME DEVELOPMENT CAREFULLY: Follow the recommendations in the film instruction sheet. These may change from time to time. Use an accurate timepiece. If you have a Polaroid Development Timer, check it occasionally against a watch with a second hand; if it's fast or slow, allow for this when developing your pictures. A few seconds overdevelopment is not harmful, but prints that are much overdeveloped may look too bluish; those that aren't developed long enough will have a pinkish cast and the colors will be weak.

KEEP AN EYE ON THE TEMPERATURE: Cold weather or excessive heat can affect the quality of your pictures. Be sure to read page 21, which explains how the temperature affects your pictures and what to do about it.

IF YOUR PICTURE IS TOO DARK OR TOO LIGHT: Use the L/D control as shown on page 22 to make the next one of the same subject, in the same location and lighting conditions, come out exactly as you want it to.

Never try to use flash with daylight color pictures.

HOW TO TAKE A PICTURE!



FRAME



FOCUS




AIM


1 **FOCUS:** Look at your subject through the View window. Come close enough to fill most of the frame. Shift your eye to the Focus window. Push the No. 1 buttons

until the bright spot shows a single clear image of the most important part of your subject. Shift your eye back to the View window, center your subject in the white frame.

OPERATION

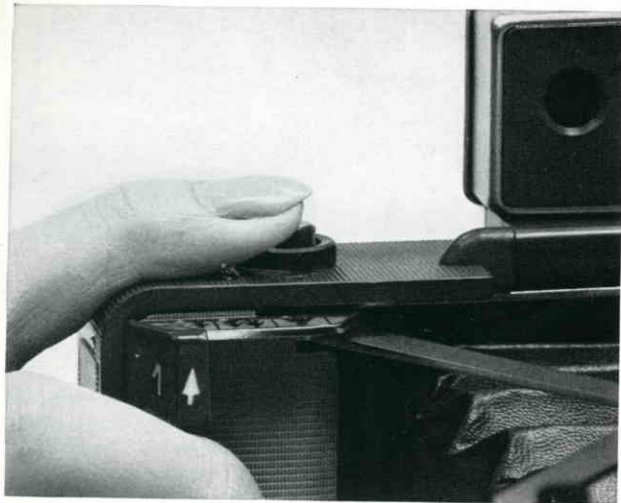

2 SHOOT: Firmly but smoothly press button No. 2, the shutter release, until you hear a loud click. Don't jab at No. 2 — you may shake the camera. When shooting color in the shade or black and white in dim light, hold No. 2 down and don't move until you hear a second click as the shutter closes. Then let No. 2 button come up.


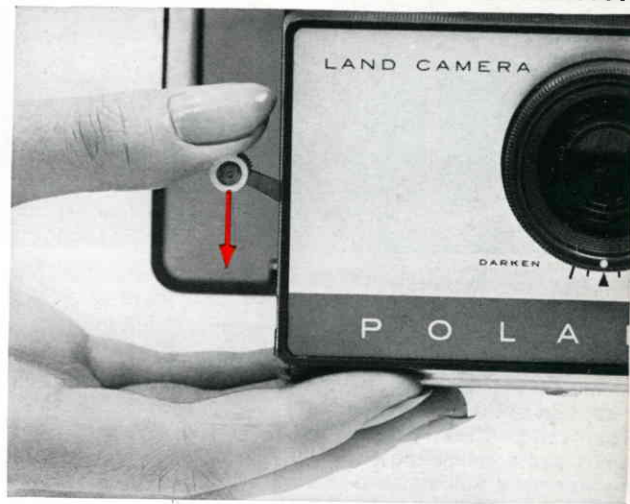


3 RESET: Immediately after snapping a picture, press No. 3 button down firmly until it locks and stays down. This resets the shutter so you'll be ready for the next picture. Always reset No. 3 right away; if you don't, nothing will happen next time you press No. 2 button to shoot.

HOW TO DEVELOP THE PRINT



First, the small white tab. Pull it all the way out of the camera. Don't block the door (arrow).

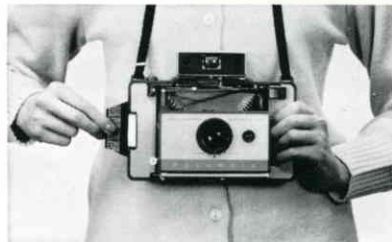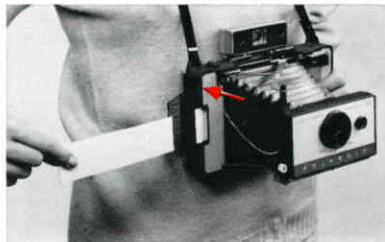

Next, the large yellow tab.

4 PULL THE TABS: Hold the camera in your left hand, as shown. (**Don't hold it any other way!**) Grasp the small white tab between the thumb and forefinger and pull it straight out of the camera, all the way, without stopping. When you pull the white tab out, a concealed door (arrow) opens and a yellow tab pops out. Don't block this door in any way while pulling the tabs.


Pulling the small white tab does not start development. It only prepares the film for the next step, which is pulling the yellow tab. Grip the yellow tab in the center so it will come out straight when you pull it out of the camera. If you pull the yellow tab out at an angle, one edge of your picture may not develop properly.

If no yellow tab pops out when you pull the white tab, stop. Don't pull another white tab. Page 20 shows you what to do in this situation.

Never pull a white tab when you can see a yellow tab. If you do so accidentally, don't pull the yellow tabs that appear or you'll spread developer all over the rollers. Instead, as shown on page 20, carefully open the camera back, disengage the tabs from the tab slot and rollers, remove the crumpled picture assemblies, and close the back.

When you pull the yellow tab, hold the camera so the lens faces straight ahead of you, not pointing down. This, plus gripping the center of the tab, helps you to pull it out straight.

PULL STRAIGHT, PULL SWIFTLY

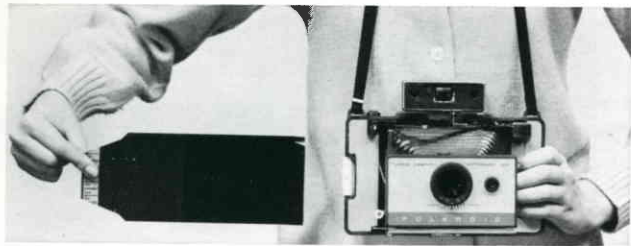


Pull it straight out of the camera, swiftly. Begin timing development.


Pull the yellow tab straight out of the camera all the way, swiftly, without hesitating. This starts development of your picture, so begin timing as soon as you get the tab out. How fast is a swift pull? It should take about as long as it takes you to say "PULL IT" briskly, each time you pull the tab. If your picture is full of white specks, pull a bit slower.

The picture develops outside the camera. While it's developing, hold the tab by the yellow tip, or lay the picture assembly down flat. Don't touch or bend the white paper or lift it off. Outdoors, don't let the picture assembly flap in the breeze. Develop the picture for the full time recommended in the film instruction sheet.

OPERATION

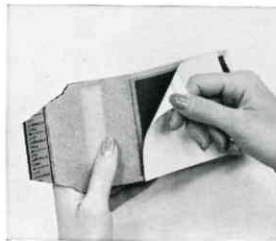

Lift off the white print quickly.

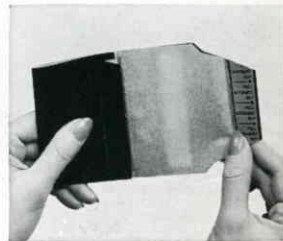

Fold up the negative.

After the recommended development time, quickly strip the white print off the brown paper starting from the end nearest to the yellow tab. A color print will look nearly dry, but don't touch the face for a few minutes. It will harden to a tough, glossy finish. When it is dry, mount it on a color print mount, which is supplied with the film.

Don't touch the face of black and white prints. You must coat them to prevent fading and other damage (see page 23 for how to coat prints).

To avoid contact with chemicals left after the print is removed, fold up the negative with the moist side in. Please put it in a waste basket or film box. Don't be a litterbug.

2

SHOOT Gently press No. 2 button until shutter clicks. In dim light hold No. 2 down, hold steady until second click as shutter closes.

1

FOCUS

Look through Focus window. Aim bright spot at subject. Push No. 1 buttons back and forth until two images in bright spot become one.

4

PULL TABS

Pull small white tab straight out of camera, all the way; large yellow tab will pop out. Pull yellow tab straight out of camera, all the way, moderately fast, smoothly, without hesitation. **THIS STARTS DEVELOPMENT.** Develop for full time recommended in film instruction sheet. Separate white print from brown paper. Don't touch face of print until thoroughly dry.



3

RESET Press No. 3 button down until it locks and stays down.