This page is copyright by mike@butkus.org M. Butkus, N.J.
This page may not be sold or distributed without the expressed permission of the producer
I have no connection with any camera company

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your E-mail address too so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy. These donations allow me to continue to buy new manuals and maintain these pages. It'll make you feel better, won't it?

If you use Pay Pal, use the link below. Use the above address for a check, M.O. or cash. Use the E-mail of butkusmi@ptd.net for PayPal.




back to my "Orphancameras" manuals /flash and light meter site

Only one "donation" needed per manual, not per multiple section of a manual!

The large manuals are split only for easy download size.



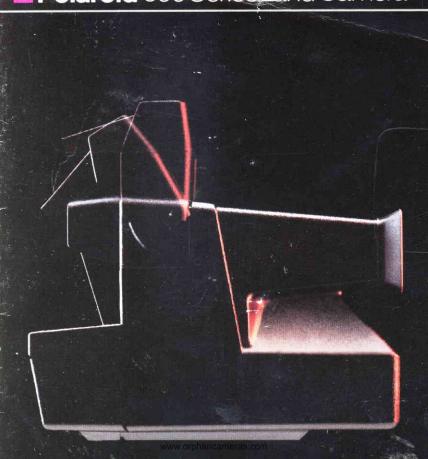

Contents.

To use the camera

- 3 Raise the flash hood
- 4 Load the film
- 5 Hold the camera
- 6 Take the picture

The camera system

- 8 Camera parts
- 10 Features
- 11 Lighten/darken control

Customer information

- 12 Trouble-free picture-taking
- 13 Copies and enlargements
- 13 Polaroid service centers and offices
- 14 Full one-year warranty

The file:

Use only Polaroid **600 color film.** Other Polaroid films will not fit into or work with this camera.

Each film pack provides 10 color pictures and contains a high-energy battery that powers both the camera and the electronic flash.

A film expiration date appears on the bottom of every film box. Check this date before buying film to be sure the film is fresh.

4

Whenever you have a question about your camera or pictures, call us toll free...


from anywhere in the U.S.A. Our Customer Service representatives can be reached every weekday from 8 a.m. to 5 p.m., Eastern Time. In Canada, call toll free – 800-268-6970.


Grip the sides of the flash hood.

Swing the flash hood up to snap it in place.

When you are not using the camera, lower the flash hood. It will protect the

lens and lock the red button.

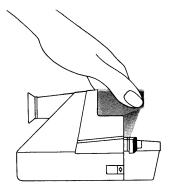

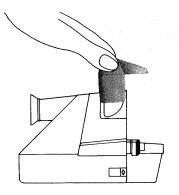

2. Load the film

Use only Polaroid 600 color film


Push the latch **forward.** The film door will drop open

Hold the film pack by its edges **only**, as shown (printed side up), and slide it all the way into the camera. Close the film

door. The camera will automatically eject the film cover.

Save the film cover to order copies and enlargements of your favorite pictures.


To remove an empty film pack, pull the colored tab on the film pack,

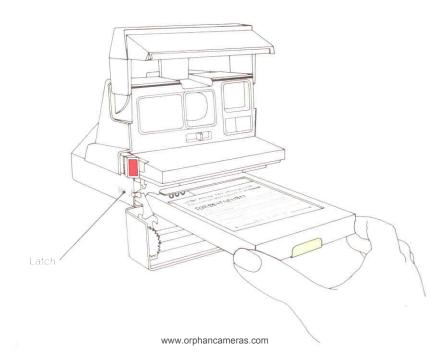

Grip the camera in the palm of your left hand.

Place your right thumb on the thumbrest, your index finger on the red button, and curl your other fingers into your palm.

Or, if it is more comfortable, place the fingers of your left hand over the top of the viewfinder and your thumb under the camera – holding your right hand as described above.

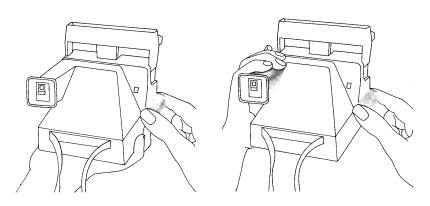

www.orphancameras.com

Indoors:


Insert the 600 flash into the flash socket with the front of the camera pointing away from you.

For best results, your subject should be from **4 to 10 feet** away and near a light colored background.

To take a picture, press the red button. The camera will then automatically eject the developing picture.

Hold the developing picture by its wide white border.

Flash pictures should not be taken where the atmosphere contains gases or dust that may be ignited by a spark.

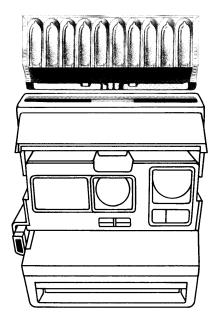

Outdoors:

In bright sunlight, stand so the sun is behind you or to the side.

When taking pictures outdoors, stand at least 4 feet from your subject.

To take a picture, press the red button. The camera will then automatically eject the developing picture.

Hold the developing picture by its wide white border.


Using flash outdoors:

In bright sunlight, you can use the 600 flash to soften facial shadows. The flash will also improve your pictures when you are photographing your subject in the shade, under heavily overcast skies, or at dusk.

When using flash outdoors, your subject should be from **4 to 10 feet** away.

- 1. Socket for the 600 flash.
- 2. Flash hood.
- 3. Fixed focus, f/19, 106mm lens.
- Automatic variable speed/aperture shutter system (speeds range from 1/200 to 1/3 of a second; apertures from f/19 to f/45).


- 5. Red button (press to take a picture).
- 6 Film door latch.
- 7. Film door.
- 8. Film shade (shields each picture from light as it exits the camera; it rolls out with the picture, then snaps back).

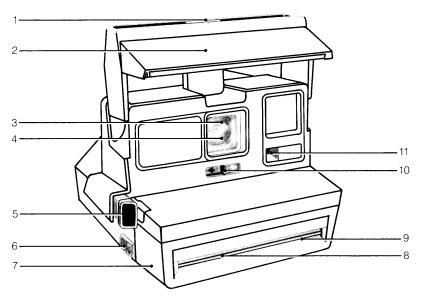

www.orphancameras.com

- 9. Film exit slot.
- 10. Lighten/darken control (see page 11).
- 11. Photocell (silicon photo-diode measures light from the scene).
- 12. Viewfinder.

- 13. Neckstrap.
- 14. Thumbrest.
- 15. Picture counter (indicates how many pictures remain).

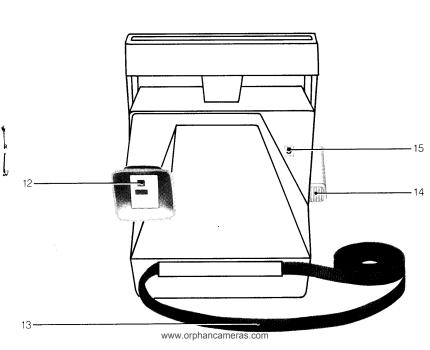

Camera

The fixed focus lens never needs to be set. Just stand at least 4 feet from your subject. In the picture, everything beyond 4 feet will be in focus.

The improved shutter system provides more uniform exposures over the full 4 to 10 foot flash range.

The flash hood lifts up for picturetaking, folds down for carrying ease.

 
Flash

The new 600 flash has all 10 bulbs on one side, which means you can shoot a full pack of film without having to replace the flash unit.


When all 10 bulbs have fired, the camera will not operate, so you never waste film

The 600 flash will not fire when the film pack is empty, so you cannot waste a flashbulb.


Use this control **only** when you want to reshoot a picture to make it lighter or darker.

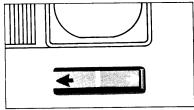

 To take a lighter picture, slide the control past the white arrow.

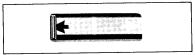

 To take a darker picture, slide the control past the black arrow.

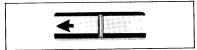

Return the control to center when you have finished reshooting. A white double arrow appears in the bottom of the view-finder as a reminder that the control is not in center position.

Trouble-free picture-taking

Hold the developing picture by its wide white border.

While it is developing, keep the picture out of direct sunlight

When the temperature is below 55°F (13°C), keep the camera and film warm. Immediately place the developing picture in a warm pocket for at least a minute.

Keep the developer rollers clean.

Dirty rollers can cause a repeated spot or bar pattern to appear in the picture.

The developer rollers are located inside the film door. If there is film in the camera, open the door in dim light.

Clean the rollers with a damp, lint-free cloth.



What to look for if the camera does not operate:

Check the picture counter. The camera will not operate when the film pack is empty.

Check the 600 flash. When all 10 bulbs have fired, the camera will not operate until you remove the flash or insert a new one.



Send Polaroid any photograph or 35mm slide – color or black and white, instant or conventional. We can copy photographs and make enlargements. We can duplicate slides, make slides from prints or prints from slides.

Square and rectangular enlargements can be ordered framed in three popular sizes. There is an order form on the back of the film cover.*

For your convenience, Polaroid has postage-paid mailers and a toll-free number. If you have any questions or special requests call (800) 421-1030. In California, call collect (213) 644-2221.

If you think your camera needs repair, please call Customer Service (see page 2). We may be able to save you the time and trouble of returning the camera to one of the centers listed below.

California

Polaroid Corporation 3232 West MacArthur Blvd. Santa Ana 92704

Canada

Polaroid Canada Inc. 350 Carlingview Drive Rexdale, Ontario M9W 5G6

Georgia

Polaroid Corporation 5601 Fulton Industrial Blvd., S.W. Atlanta 30378

Massachusetts

Polaroid Corporation 784 Memorial Drive Cambridge 02139

New Jersey

Polaroid Corporation P.O. Box 607 W-95 Century Road Paramus 07652

^{*}When you load film into the camera, it automatically ejects the film cover.