

Copy Tray Type 700/1075
Connector Kit Type 700
(B333/B476/B322)

 
 
 
**Copy Tray Type 700/1075
Connector Kit Tyepe 700
(B333/B476/B322)**

PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.COPY TRAY/CONNECTOR KIT (B322/B333/B476)	2
PARTS INDEX.....	5

1.COPY TRAY/CONNECTOR KIT (B322/B333/B476)

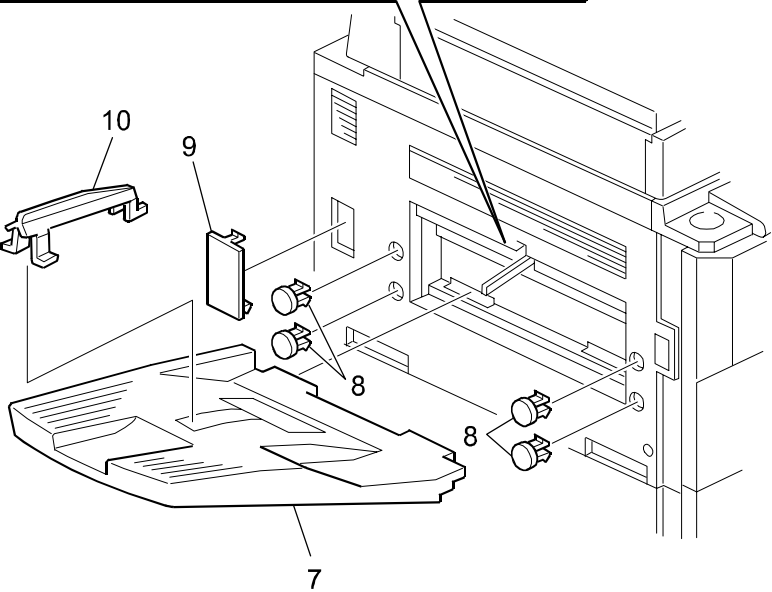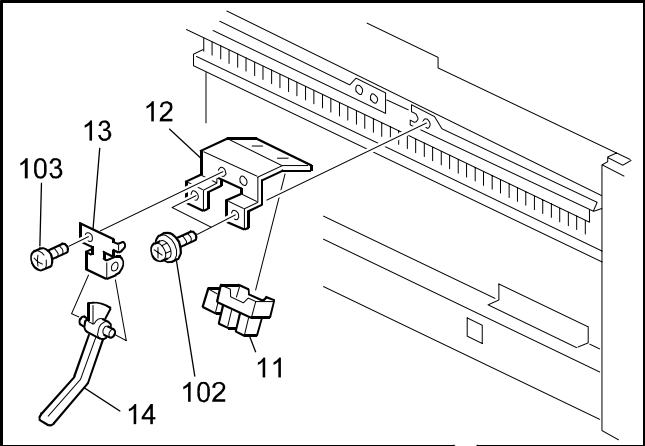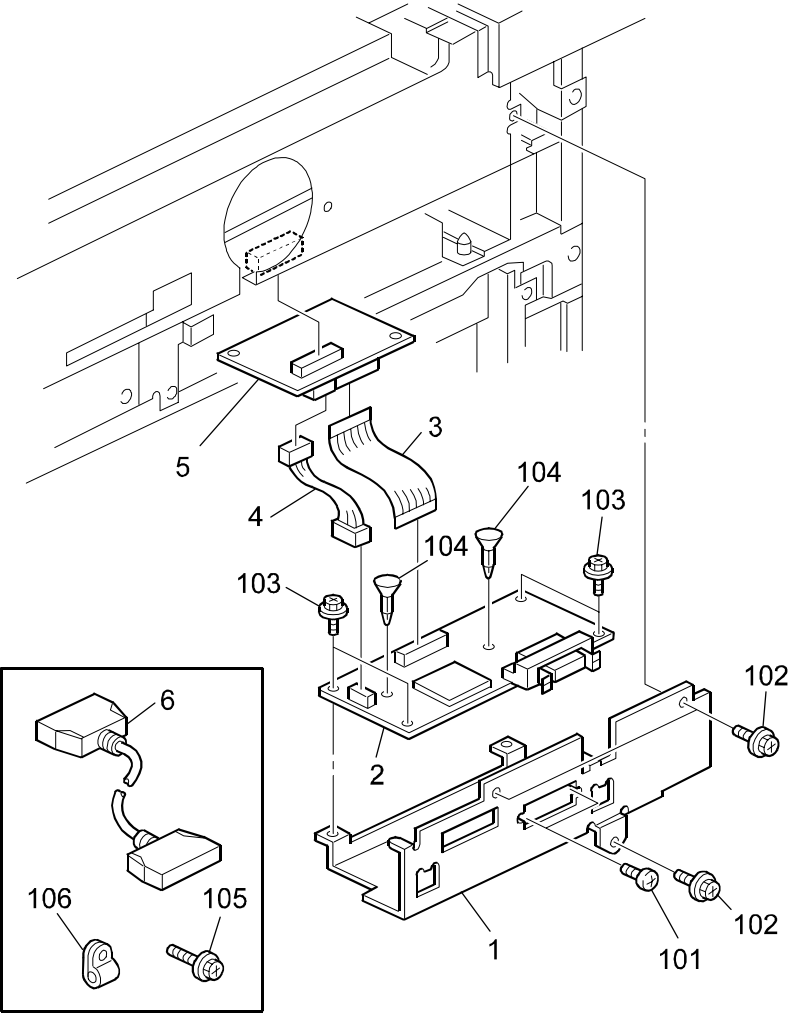

1.COPY TRAY/CONNECTOR KIT (B322/B333/B476)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B322 6001	Bracket - Copy Connect Board	1
2	B322 5250	Copy Connect Board	1
3	B322 5551	FFC Harness	1
4	B322 5550	Power Supply Harness	1
5	B322 5260	Pcb:mojito:link:connecting	1
6	B328 5070	Interface Cable	1
7	AF04 3101	Copy Tray - Exit (B333)	1
7	AF04 3106	Copy Tray:Exit (B476)	1
8	A247 1299	Cap - 22 (B333)	4
8	B065 1299	Cap - 22 (B476)	4
9	A229 1333	Connector Cap (B333)	1
9	B065 1344	Connector G4 (B476)	1
10	AF04 3077	Copy Tray Guide (B333)	1
10	AF04 3107	Copy Tray Guide (B476)	1
11	AW02 0056	Photointerrupter - EE-SX4235A-P1	1
12	A229 4489	Sensor Bracket	1
13	A353 3172	Actuator Bracket	1
14	A379 1225	Upper Sensor Actuator	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0312 5080B	Screw - M2.5X8	1
102	0451 4008B	Philips Tapping Screw - M4x8	
103	0451 3006B	Tapping Screw - M3x6	
104	1105 0214	Spacer	
105	0451 4020H	Tapping Screw:4x20	
106	1105 0034	Clamp	

Parts Index

Parts Index

Part No.	Description	Page and Index No.
B322 5250	Copy Connect Board	3 - 2
B322 5260	Pcb:mojito:link:connecting	3 - 5
B322 5550	Power Supply Harness	3 - 4
B322 5551	FFC Harness	3 - 3
B322 6001	Bracket - Copy Connect Board	3 - 1

Part No.	Description	Page and Index No.
A229 1333	Connector Cap (B333)	3 - 9
A229 4489	Sensor Bracket	3 - 12
A247 1299	Cap - 22 (B333)	3 - 8
A353 3172	Actuator Bracket	3 - 13
A379 1225	Upper Sensor Actuator	3 - 14
B065 1299	Cap - 22 (B476)	3 - 8
B065 1344	Connector G4 (B476)	3 - 9
B328 5070	Interface Cable	3 - 6

Part No.	Description	Page and Index No.
AF04 3077	Copy Tray Guide (B333)	3 - 10
AF04 3101	Copy Tray - Exit (B333)	3 - 7
AF04 3106	Copy Tray:Exit (B476)	3 - 7
AF04 3107	Copy Tray Guide (B476)	3 - 10
AW02 0056	Photointerrupter - EE-SX4235A-P1	3 - 11

Part No.	Description	Page and Index No.
0312 5080B	Screw - M2.5X8	3 -101
0451 3006B	Tapping Screw - M3x6	3 -103
0451 4008B	Philips Tapping Screw - M4x8	3 -102
0451 4020H	Tapping Screw:4x20	3 -105
1105 0034	Clamp	3 -106
1105 0214	Spacer	3 -104

Copy Tray Type 1075
(B476)

Copy Tray Type 1075 (B476)


PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.COPY TRAY TYPE 1075 (B476)	2
PARTS INDEX	5

June ,10 ' 2002

 1.COPY TRAY TYPE 1075 (B476)

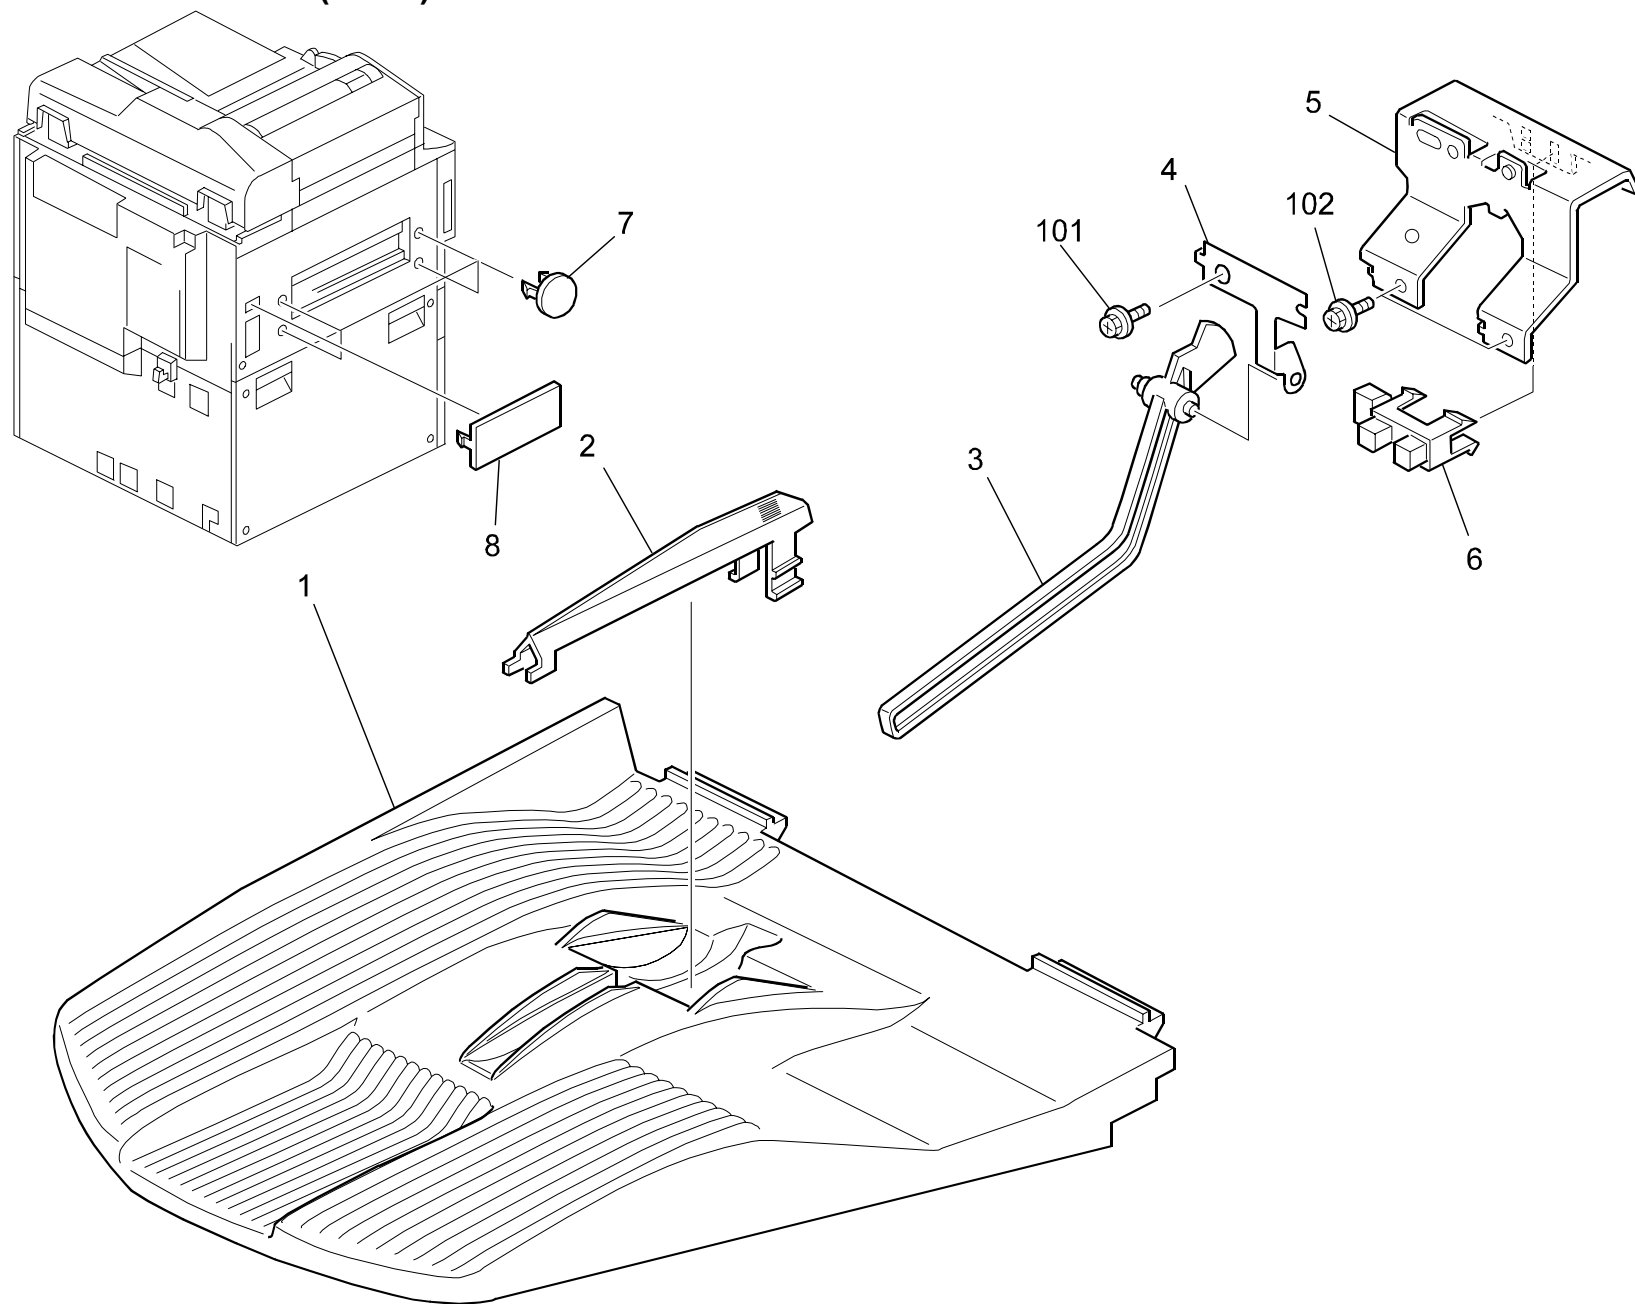

1.COPY TRAY TYPE 1075 (B476)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AF04 3106	Copy Tray - Exit	1
2	AF04 3107	Guide - Copy Tray	1
3	A379 1225	Upper Sensor Actuator	1
4	A353 3172	Actuator Bracket	1
5	A229 4489	Sensor Bracket	1
6	AW02 0056	Photointerruptor - EE-SX4235A-P1	1
7	B065 1299	Cap - 22mm	4
8	B065 1344	G4 Cap	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006B	Tapping Screw - M3x6	
102	0451 4008B	Philips Tapping Screw - M4x8	

Parts Index

Parts Index

Part No.	Description	Page and Index No.
A229 4489	Sensor Bracket	3 - 5
A353 3172	Actuator Bracket	3 - 4
A379 1225	Upper Sensor Actuator	3 - 3
B065 1299	Cap - 22mm	3 - 7
B065 1344	G4 Cap	3 - 8

Part No.	Description	Page and Index No.
AF04 3106	Copy Tray - Exit	3 - 1
AF04 3107	Guide - Copy Tray	3 - 2
AW02 0056	Photointerruptor - EE-SX4235A-P1	3 - 6

