

DF65 (A661)

PARTS CATALOG

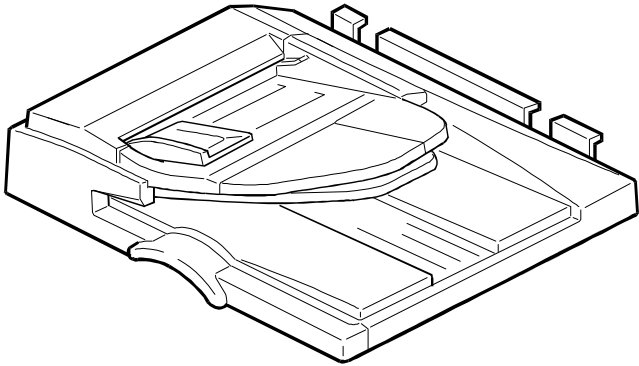
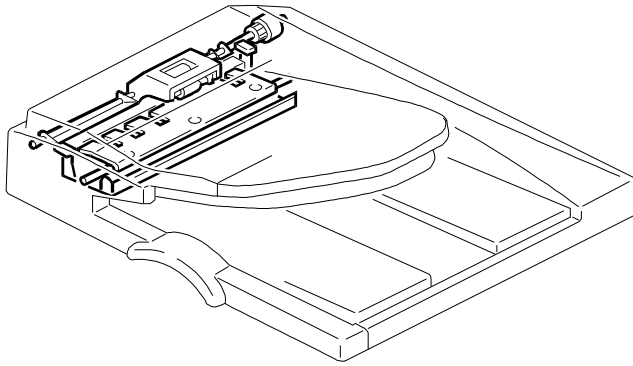
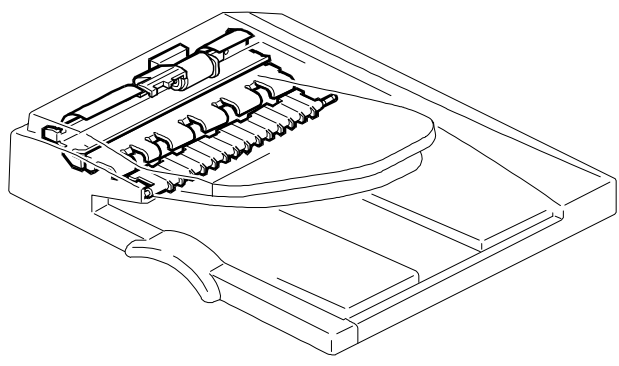
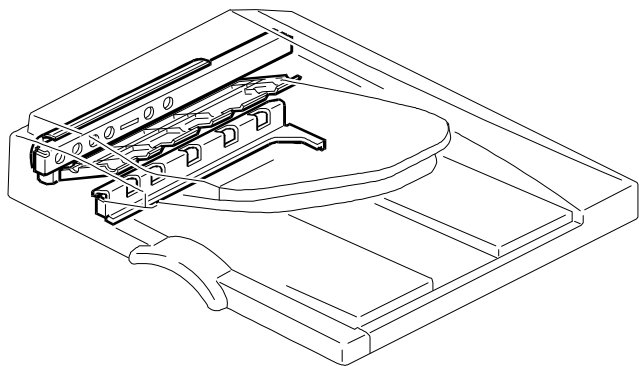
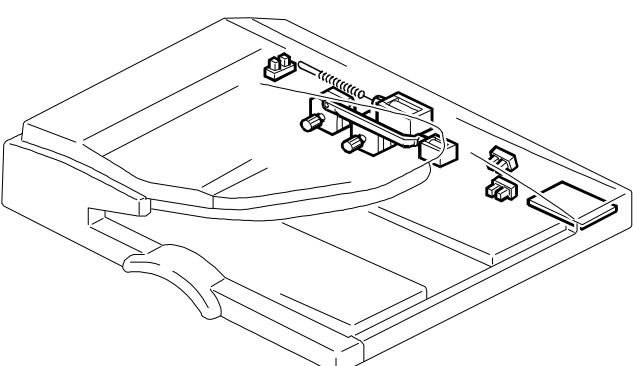
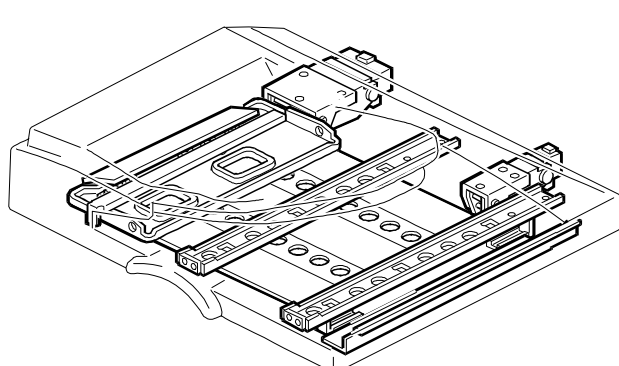
INTRODUCTION

This chapter instructs you the numbers and names of parts on this machine.

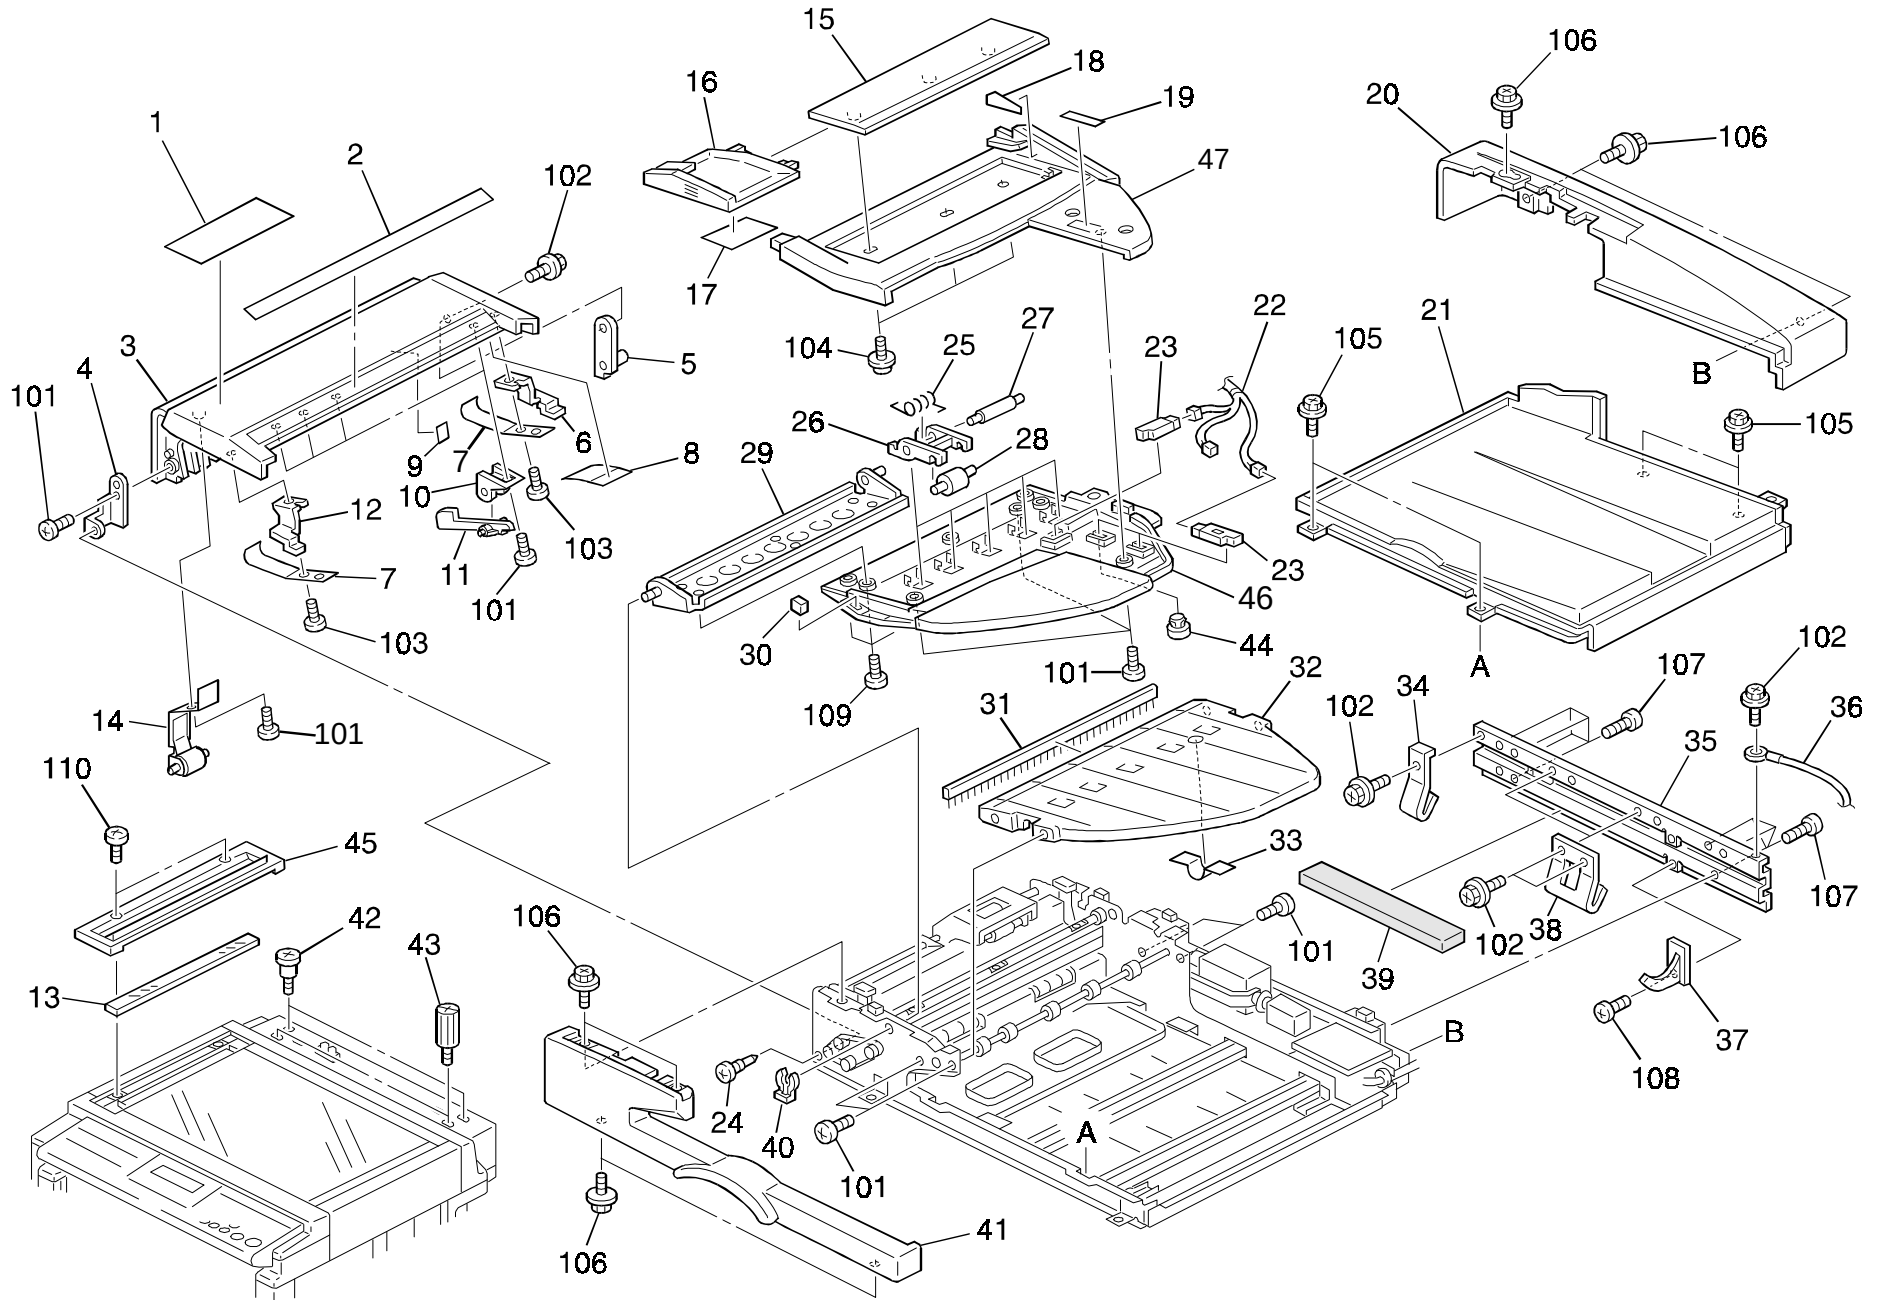
INDEX to PARTS CATALOG

LOCATION OF UNIT	3
1.EXTERIOR 1 (A661)	4
2.ORIGINAL FEED SECTION 1 (A661)	6
3.ORIGINAL FEED SECTION 2 (A661)	8
4.ORIGINAL TRANSPORT AND EXIT (A661)	10
5.DRIVE AND ELECTRICAL (A661)	12
6.ORIGINAL HOLDER SECTION (A661)	14
7.DECAL AND DOCUMENT (A661)	16
PARTS INDEX	19

LOCATION OF UNIT

 1. EXTERIOR 1 (A661)	See Page 4  2. ORIGINAL FEED SECTION 1 (A661)	See Page 6  3. ORIGINAL FEED SECTION 2 (A661)
See Page 8  4. ORIGINAL TRANSPORT AND EXIT (A661)	See Page 10  5. DRIVE AND ELECTRICAL (A661)	See Page 12  6. ORIGINAL HOLDER SECTION (A661)

1. EXTERIOR 1 (A661)

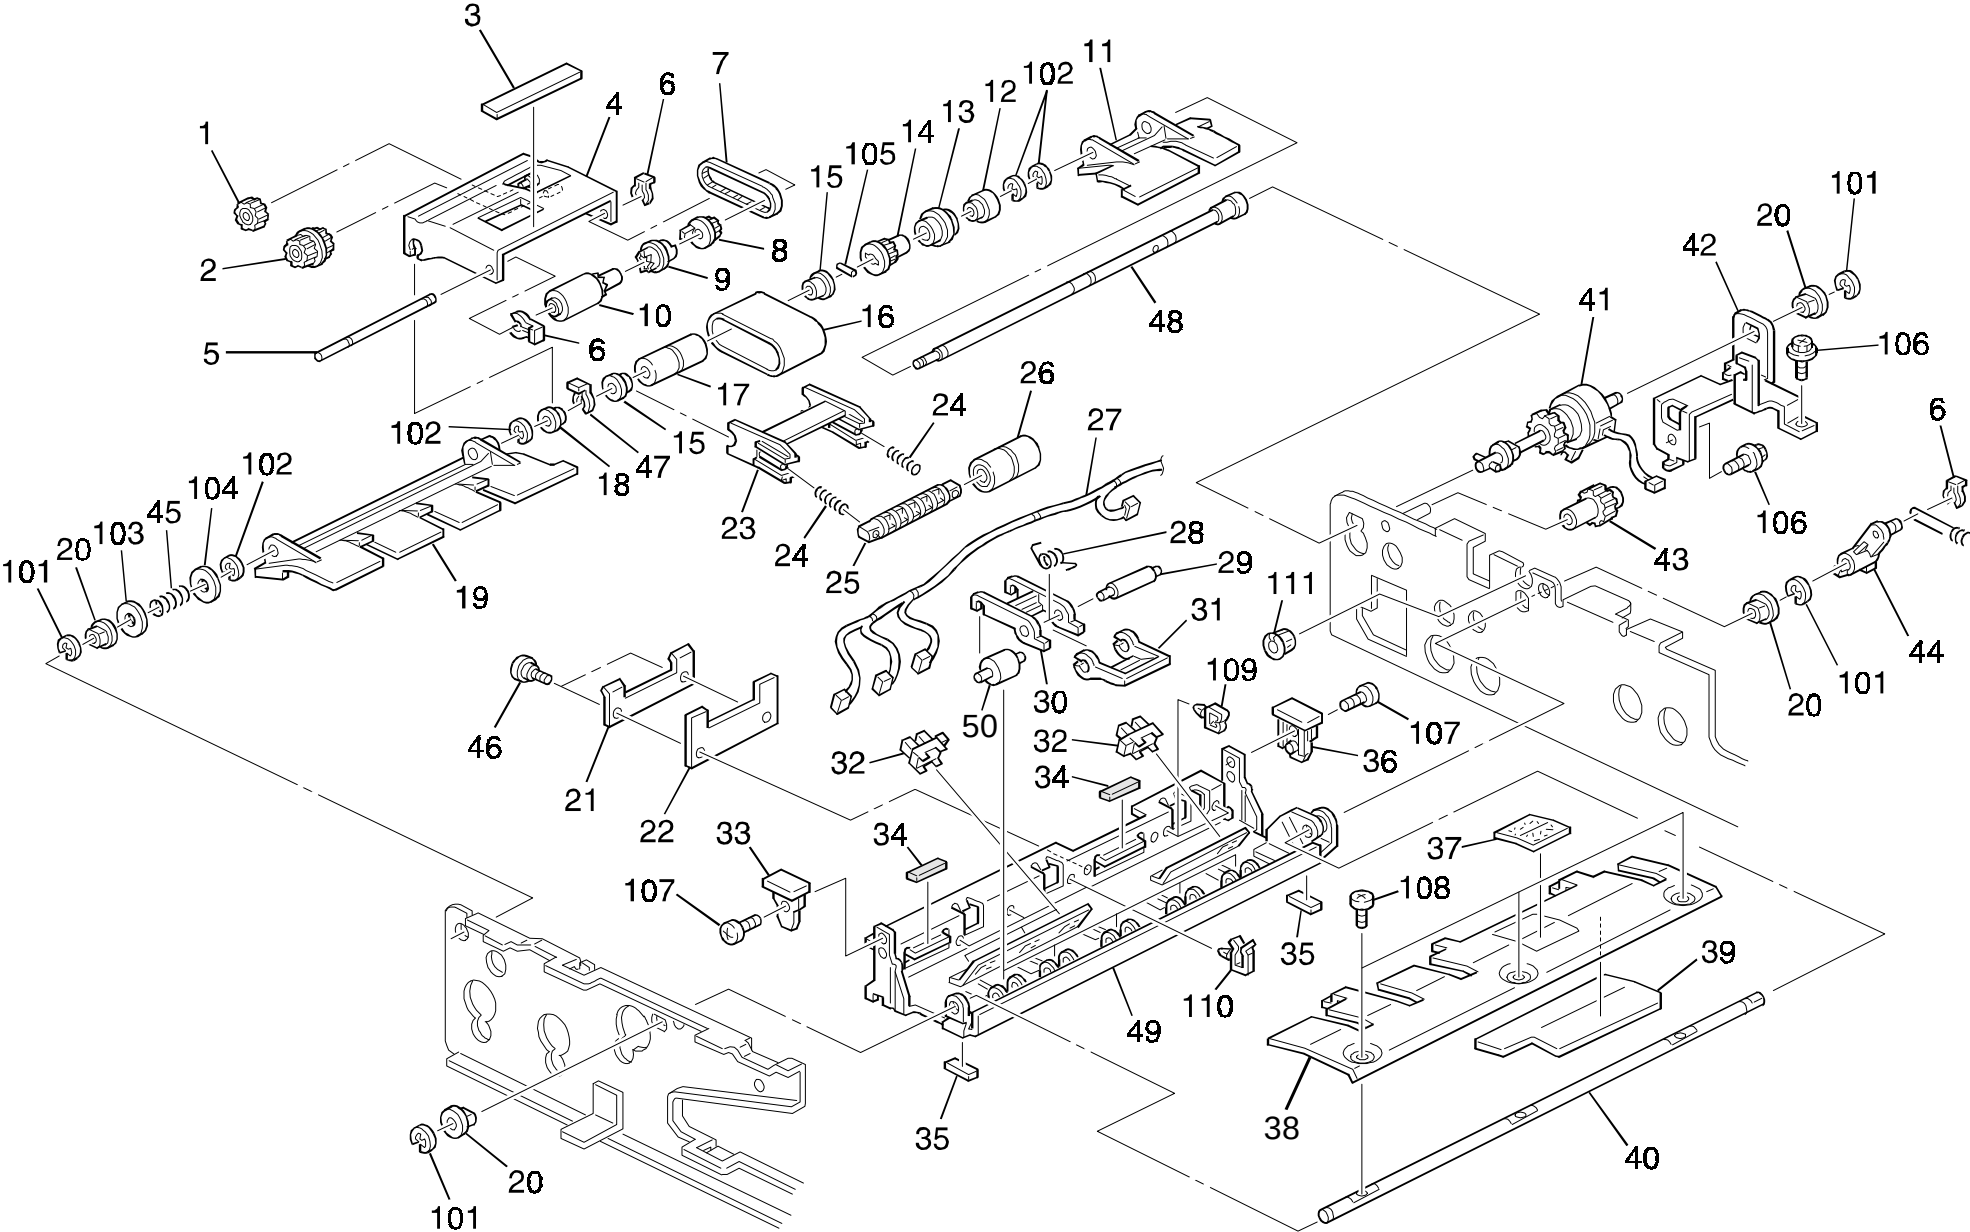


1. EXTERIOR 1 (A661)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A661 6031	Jam Removal Decal	1
2	A628 6021	Original Size Decal	1
3	A661 2131	Left Cover	1
4	A628 2174	Front Cover Hinge	1
5	A628 2171	Fixing Bracket - Left Cover	1
6	A628 2175	Rear Magnet Catch	1
7	A661 2177	Spring Plate - Guide Plate	2
8	A628 2211	Rear Guide Plate	1
9	A628 2179	Registration Sensor Shield	1
10	A628 2178	Feeler Bracket - Paper Size Detecti	1
11	A628 2177	Feeler - Paper Size Detection	1
12	A628 2176	Front Magnet Catch	1
13	AC01 3003	Exposure Glass - DF	1
14	A661 2183	Spring Plate	1
15	A628 2151	Side Fence Guide	1
16	A548 1771	Side Fence	1
17	A376 4599	Side Fence Pad	1
18	A628 6041	Decal - Original Tray	1
19	A610 6051	Decal - Document Set	1
20	A661 2121	Rear Cover	1
21	A661 2191	Upper Cover	1
22	A661 5735	Relay Harness - Original Tray	1
23	AW01 0066	Photosensor - PS-R50D1-B	3
24	5446 2824	Screw - Duplex Guide Plate	1
25	A661 2163	Spring	5
26	A661 1742	Lever - Upper Feed Out	5
27	A661 1744	Feed Out Shaft	5
28	A661 1745	Feed Out Roller	5
29	A661 2165	Original Table Bracket	1
30	G012 1531	Magnet	1
31	AA12 0083	Antistatic Brush	1
32	A661 2152	Inverter Tray	1
33	A661 2154	Shield Plate	1
34	A628 1177	Left Ground Plate - Hinge Bracket	1
35	A628 1173	Hinge Bracket	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	A628 5745	Grounding Wire	1
37	A565 1172	Sensor Actuator	1
38	A628 1174	Right Ground Plate - Hinge Bracket	2
39	A628 1178	DF Bracket Cushion	1
40	5447 2681	Snap Ring	1
41	A661 2111	Front Cover	1
42	A628 3111	Shoulder Screw - M5	2
43	A628 3115	Knob Screw - M4	2
44	A661 2991	Magnet	1
45	A628 3192	Original Scale	1
46	A661 2161	Rear Original Table	1
47	A661 2141	Front Original Table	1
101	0452 3008B	Tapping Screw - M3x8	
102	0451 3006B	Tapping Screw - M3x6	
103	0452 4008B	Tapping Screw - M4x8	
104	0951 4008B	Philips Screw With Washer - M4x8	
105	0451 3008B	Tapping Screw - M3x8	
106	0802 5255	Tapping Screw - M3x8	
107	0434 0122B	Tapping Screw-m4x12	
108	0314 0060B	Philips Pan Head Screw - M4x6	
109	0453 3006Z	Tapping Screw - M3x6	
110	0353 0050F	Tapping Screw - M3x5	

2. ORIGINAL FEED SECTION 1 (A661)

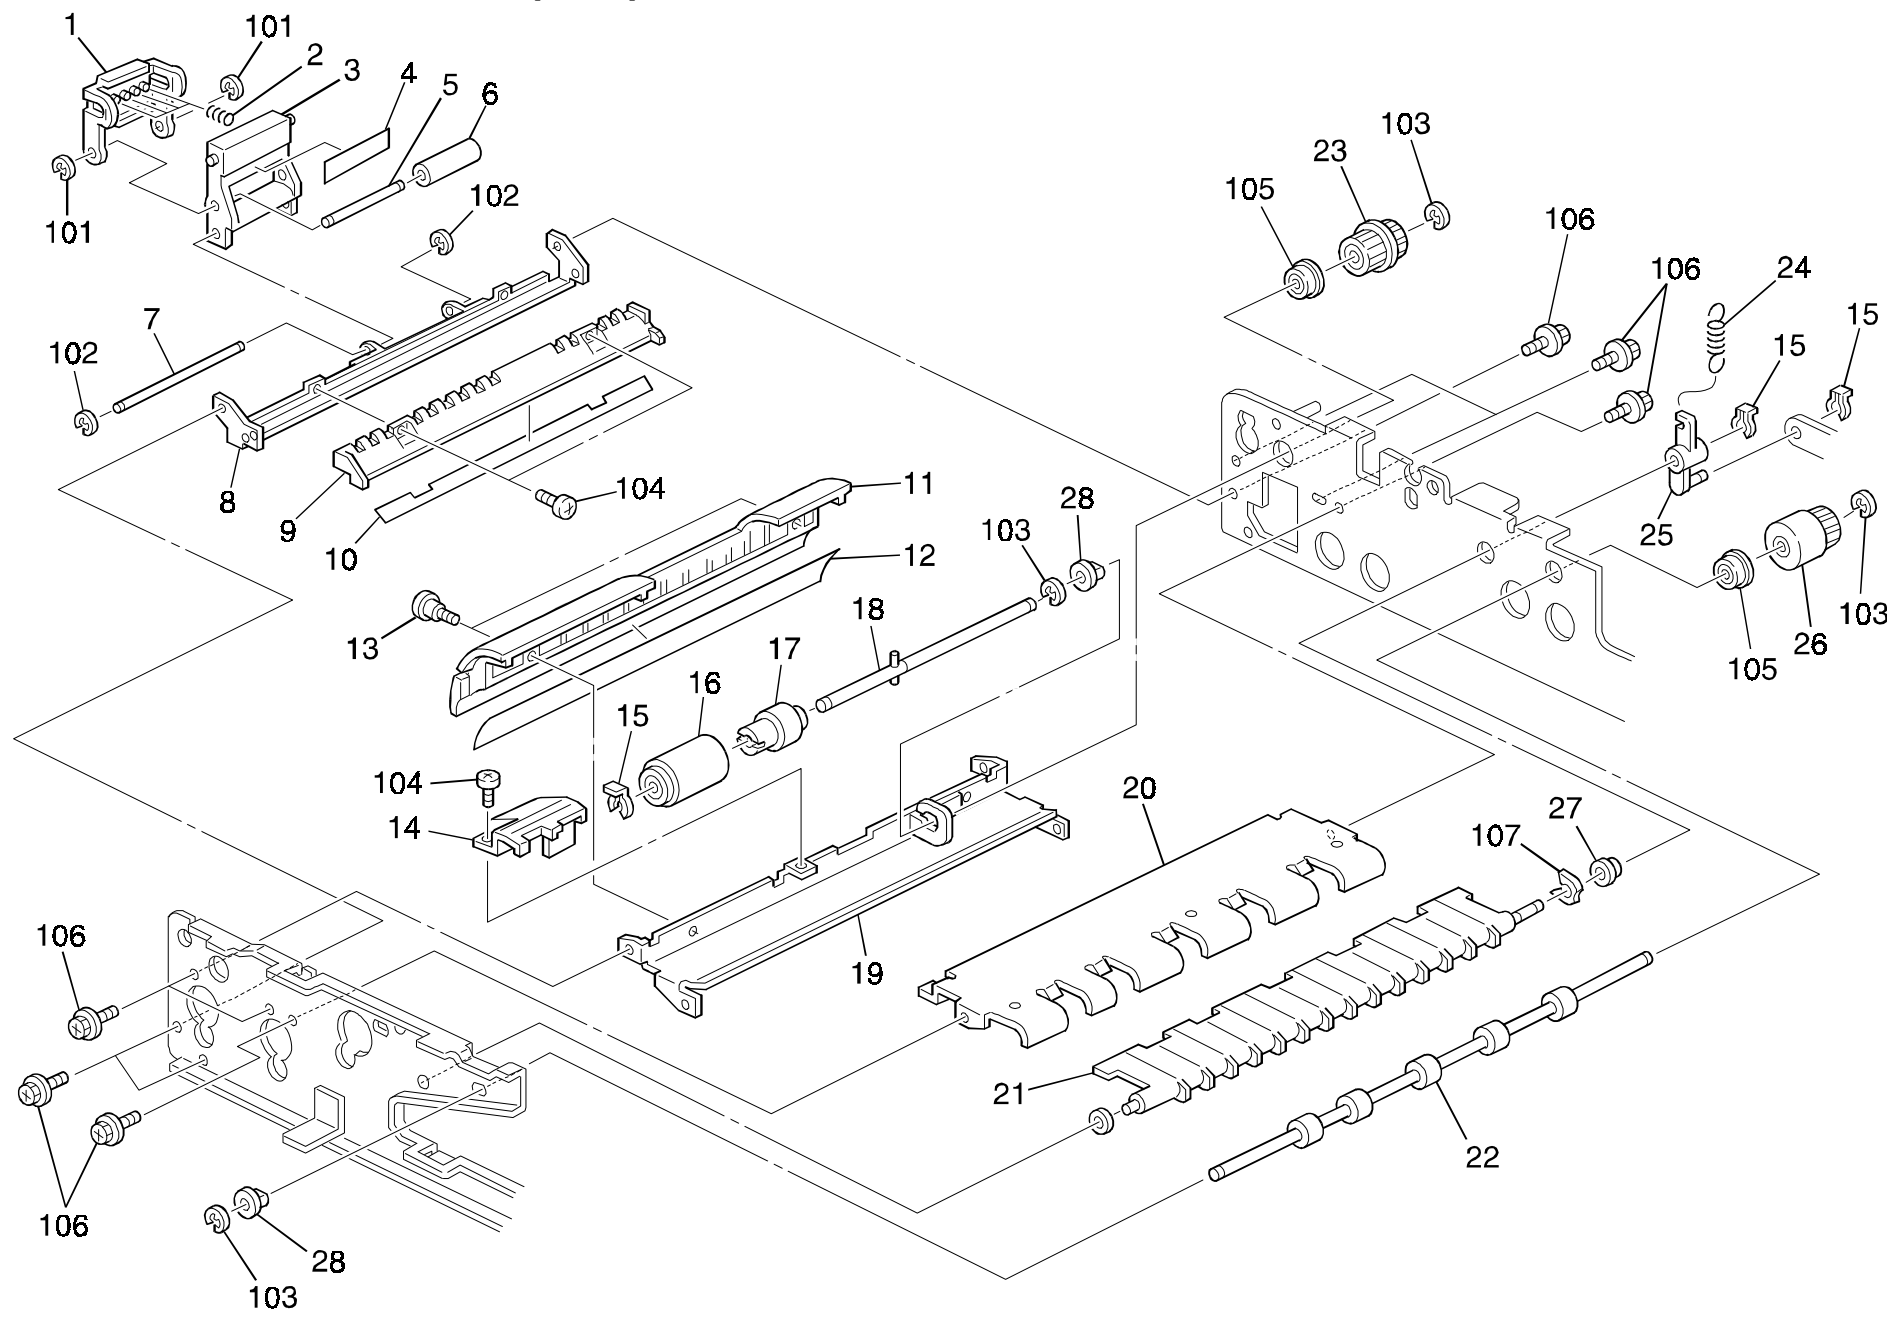


2. ORIGINAL FEED SECTION 1 (A661)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A628 1246	Gear - 22Z	1
2	A628 1245	Pulley And Gear - 20T/22Z	1
3	A661 1247	Cushion	1
4	A628 1243	Pick-up Roller Holder	1
5	A628 1242	Pick-up Roller Shaft	1
6	5206 2686	Snap Ring	3
7	A628 1248	Timing Belt - 118MM	1
8	A628 1244	Pulley - 20T	1
9	A628 1249	Joint - Pick-up Roller	1
10	A628 1241	Pick-up Roller	1
11	A661 1219	Rear Guide Plate	1
12	A628 1220	Bushing - 8mm	1
13	A661 1226	Holder Guide	1
14	A628 1221	Gear - 22Z	1
15	AA08 0075	Bushing	2
16	A628 1257	Original Feed Belt	1
17	A628 1214	Belt Drive Roller	1
18	A628 1225	Bushing - 8mm	1
19	A661 1218	Front Guide Plate	1
20	5053 0447	Bushing - 6mm	4
21	A661 1263	Suppoer Guide - Feed Belt	1
22	A661 1262	Suppoer Guide Holder	1
23	A628 1211	Holder - Belt Drive Roller	1
24	A628 1215	Spring - Belt Guide Roller	2
25	A628 1212	Shaft - Belt Guide Roller	1
26	A628 1213	Belt Guide Roller	1
27	A661 5730	Harness:paper Feed:connecting:ass'y	1
28	A661 1746	Spring	5
29	A661 1744	Feed Out Shaft	5
30	A661 1742	Lever - Upper Feed Out	5
31	A661 1743	Pressure Lever	5
32	AW02 0075	Photointerrupter	4
33	A661 1167	Knob - Guide Plate	1
34	A628 1163	Cushion - Original Entrance Guide	2
35	5446 1665	Rubber Pad - Exposure Glass	2

Index No.	Part No.	Description	Q'ty Per Assembly
36	A661 1167	Knob - Guide Plate	1
37	A628 1262	Pad - Original Entrance Guide	1
38	A661 1236	Original Entrance Guide	1
39	A628 1251	Anti-vibration Weight	1
40	A661 1239	Shaft Bottom Plate	1
41	A628 1851	Feed-in Clutch Ass'y	1
42	A661 1855	Bracket - Spring Clutch	1
43	A661 1835	Gear - 20Z	1
44	A661 1238	Lever-original Stopper	1
45	A628 1216	Spring - Belt Drive Shaft	1
46	5894 2540	Arm Screw	2
47	5215 2621	Snap Ring - M6	1
48	A628 1222	Drive Roller Shaft	1
49	A661 1161	Guide Plate - Original Feed	1
101	0720 0040B	Retaining Ring - M4	
102	0720 0060B	Retaining Ring - M6	
103	0807 4072	Washer - Core	
104	0807 5066	Washer - M8.1xM11x0.3	
105	0632 0100	Parallel Pin - M2x10	
106	0451 3006B	Tapping Screw - M3x6	
107	0353 0040B	Screw - M3x4	
108	0353 0060F	Philips Truss Head Screw - M3x6	
109	1105 0319	Harness Clamp	
110	1105 0283	Clamp	
111	1106 0241	Bushing - 6.7mm	

3. ORIGINAL FEED SECTION 2 (A661)

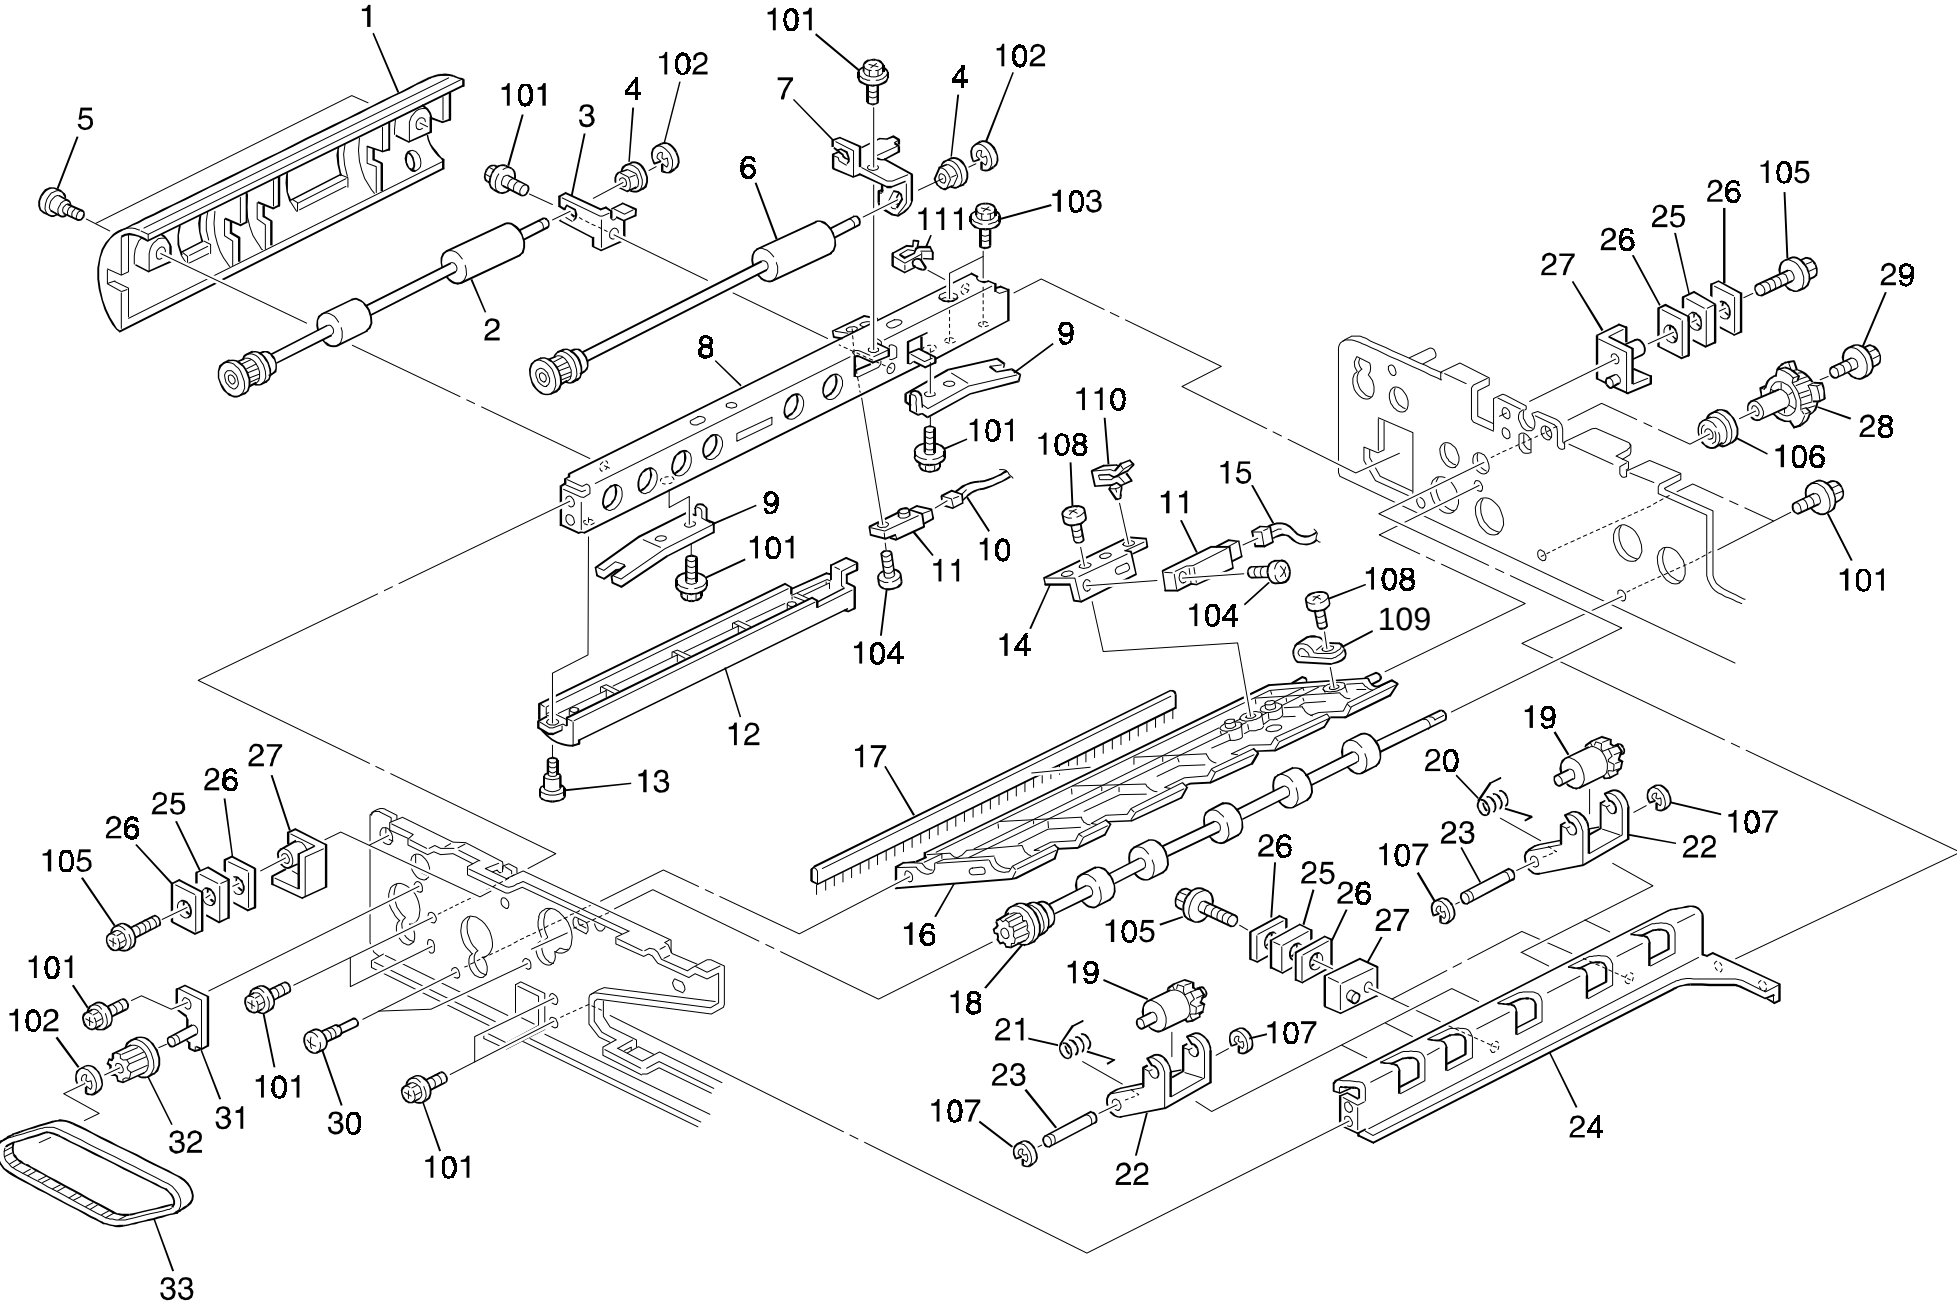


3. ORIGINAL FEED SECTION 2 (A661)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A661 1595	Spring Holder	1
2	A628 1596	Left Transport Roller Spring	4
3	A661 1594	Pressure Lever	1
4	A661 1596	Guide Plate - Driven Roller	1
5	A628 1591	Left Transport Roller Shaft	1
6	A628 1592	Left Transport Roller	1
7	A628 1184	Shaft - Pull Out Roller	1
8	A628 1181	Lower Right Stay	1
9	A628 1187	Lower Transport Guide	1
10	A628 1188	Seal - Lower Transport Guide	1
11	A661 1196	Guide Plate - Original Separation	1
12	A661 1198	Guide Plate - Inverter	1
13	5447 2769	Stepped Screw	2
14	A661 1194	Separation Cover	1
15	5447 2681	Snap Ring	3
16	A628 1512	Separation Roller	1
17	A134 2885	Torque Limiter	1
18	A661 1516	Shaft Separation Roller	1
19	A661 1191	Original Separation Stay	1
20	A661 1546	Guide Plate - Inverter Unit	1
21	A661 1722	Junction Gate	1
22	A661 1712	Inverter Roller	1
23	A661 1836	Gear - 24Z/32T	1
24	A661 1724	Spring	1
25	A661 1723	Lever Junction Gate	1
26	A661 1883	Pulley 32t	1
27	AA08 0072	Bushing - 6x10x3	1
28	5053 0447	Bushing - 6mm	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0720 0030B	Retaining Ring - M3	
102	0720 0025B	Retaining Ring - M2.5	
103	0720 0040B	Retaining Ring - M4	
104	0453 3006Z	Bind Tapping Screw - M3x6	
105	0741 3506	Ball Bearing - 6x12x4 mm	
106	0451 3006B	Tapping Screw - M3x6	
107	0805 0094	Retaining Ring - M5	

4. ORIGINAL TRANSPORT AND EXIT (A661)

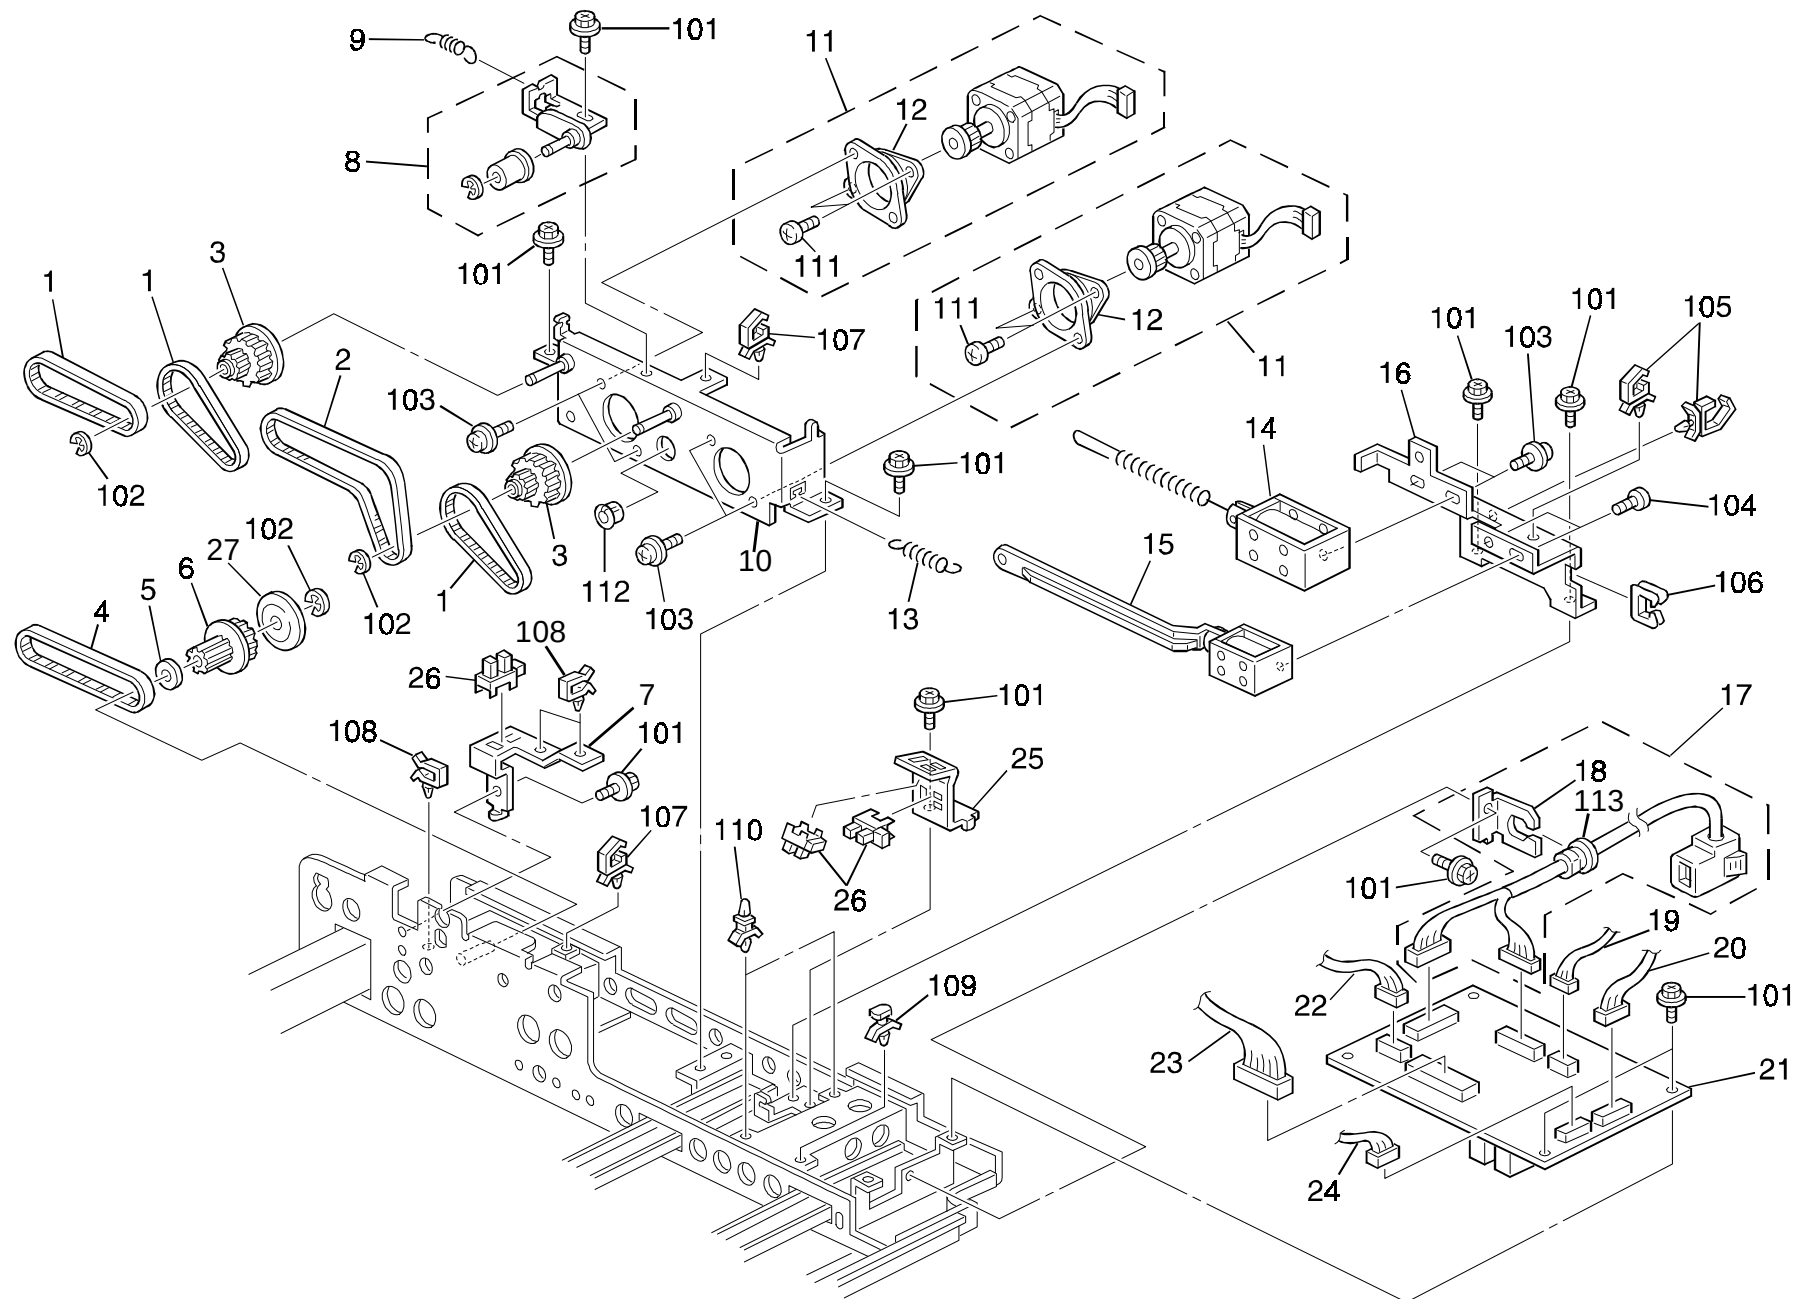


4. ORIGINAL TRANSPORT AND EXIT (A661)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A661 1541	Guide Plate - Feed Out Roller	1
2	A628 1542	Pull Out Roller	1
3	A628 1147	Brracket - Pull Out Roller	1
4	5053 0447	Bushing - 6mm	2
5	5447 2769	Stepped Screw	2
6	A628 1562	Right Transport Roller	1
7	A661 1143	Roller Bracket	1
8	A661 1141	Left Stay	1
9	A628 1144	Spring Plate - Guide - Expo Glass	2
10	A661 5745	Relay Harness - Regist Sensor	1
11	AW01 0066	Photosensor - PS-R50D1-B	2
12	A628 1551	Original Guide - DF Exposure Glass	1
13	AA14 3051	Shoulder Screw - M4	1
14	A661 1566	Bracket - Exit Sensor	1
15	A661 5740	Harness - Exit Sensor	1
16	A661 1562	Upper Guide Plate - Feed Out	1
17	AA12 0083	Antistatic Brush	1
18	A661 1563	Feed Out Roller	1
19	A661 1582	Driven Roller	5
20	A661 1586	Spring	2
21	A661 1587	Spring	3
22	A661 1585	Lever - Driven Roller	5
23	A661 1583	Shaft - Lever	5
24	A661 1576	Lower Guide Plate - Feed Out	1
25	A607 2176	Exit Cover Magnet	3
26	A661 1123	Yoke - Magnet	4
27	A661 1122	Magnet Holder	3
28	A661 1833	Pulley 36T	1
29	A590 2214	Screw - M3x5	1
30	5415 4145	Stud	1
31	A628 1136	Belt Tightener	1
32	A628 1837	Pulley - 20T	1
33	A628 1834	Timing Belt - 220MM	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006B	Tapping Screw - M3x6	
102	0720 0040B	Retaining Ring - M4	
103	0451 4006B	Tapping Screw - 4x6	
104	0313 0100B	Philips Pan Head Screw - M3x10	
105	0451 3012B	Tapping Screw With Washer - M3x12	
106	0741 3506	Ball Bearing - 6x12x4 Mm	
107	0720 0030B	Retaining Ring - M3	
108	0452 3008B	Tapping Screw - M3x8	
109	1105 0008	Nylon Clamp - 2n	
110	1105 0283	Clamp	
111	1105 0200	Clamp	

5. DRIVE AND ELECTRICAL (A661)

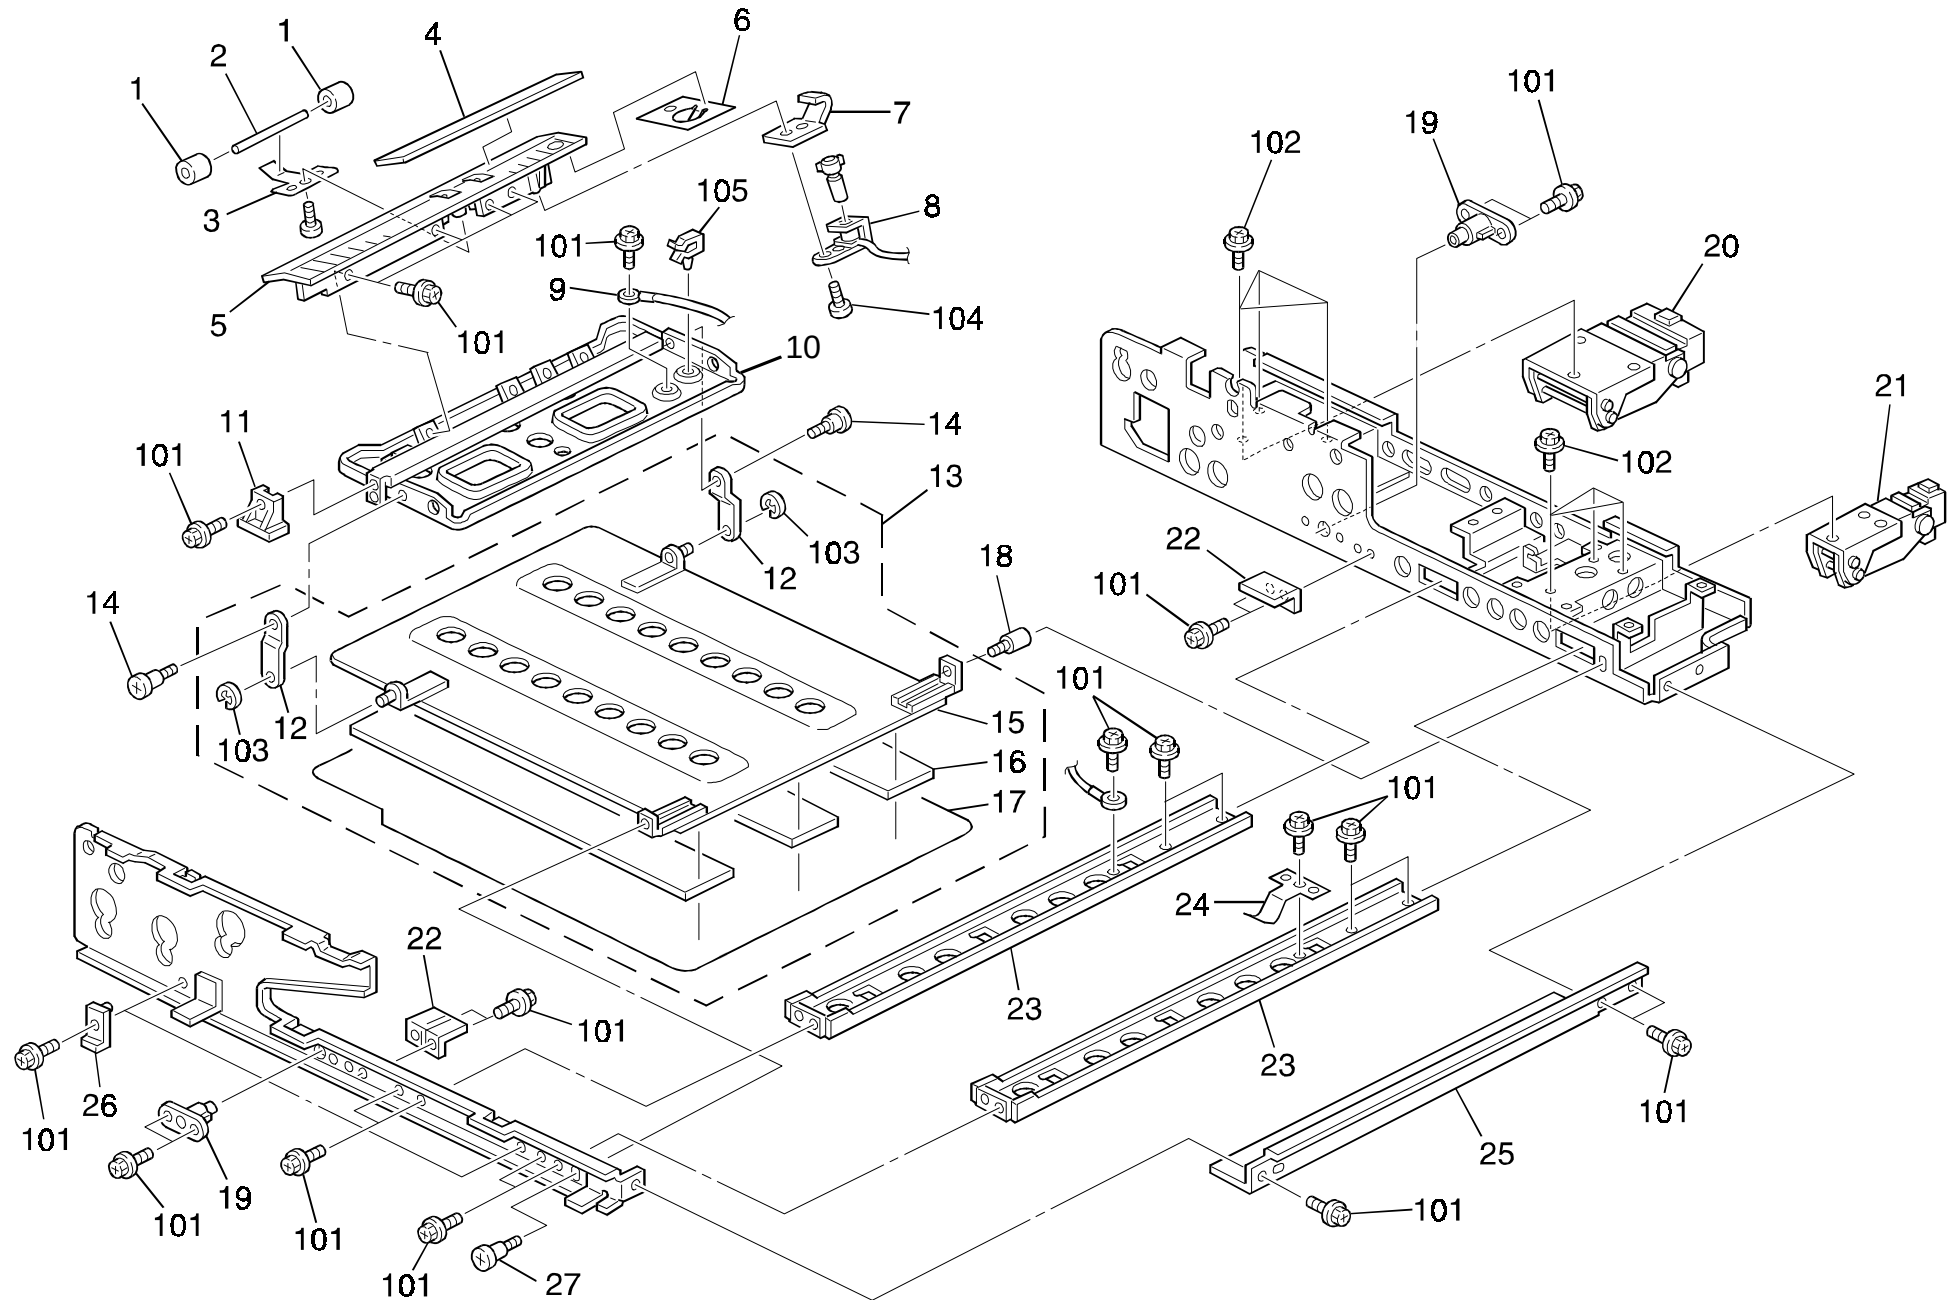


5. DRIVE AND ELECTRICAL (A661)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA04 3470	Timing Belt - SM152	3
2	AA04 3469	Timing Belt - SM300	1
3	A661 1884	Pulley - 20T/48T	2
4	AA04 3468	Timing Belt - SM230	1
5	A661 1832	Pulley Flange	1
6	A661 1831	Pulley - 20T/36T	1
7	A661 1128	Bracket - Cover Open Detector	1
8	A661 1890	Tightener	1
9	A661 1895	Spring	1
10	A661 1885	Motor Bracket	1
11	A628 1821	DF Main Motor - DC 7W	2
12	A548 2113	Motor Cushion	2
13	A661 1888	Spring	1
14	A661 1231	Bottom Plate - Solenoid	1
15	A661 1725	Junction Gate Solenoid	1
16	A661 1871	Solenoid Bracket	1
17	A661 5710	Interface Harness	1
18	A661 5715	Interface Harness Bracket	1
19	A661 5725	Harness - Clutch	1
20	A661 5720	Harness - Feed-in Motor	1
21	A661 5010	ARDF Control Board	1
22	A661 5712	Harness - Registration Sensor	1
23	A661 5705	Harness - Sensor	1
24	A661 5717	Harness - Transport Motor	1
25	A628 1129	Bracket - DF Position Sensor	1
26	AW02 0075	Photointerrupter	3
27	A661 1834	Timing Belt Ring	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006B	Tapping Screw - M3x6	
102	0720 0040B	Retaining Ring - M4	
103	0951 3006B	Philips Screw With Flat Washer - M3x6	
104	0313 0040B	Philips Pan Head Screw - M3x4	
105	1105 0291	Wire Saddle	
106	1105 0349	Edge Saddle	
107	1105 0310	Wire Clamp	
108	1105 0283	Clamp	
109	1105 0183	Spacer	
110	1105 0378	Clamp	
111	0313 0050B	Philips Pan Head Screw - M3x5	
112	1106 0193	Bushing - 7.9mm	
113	1106 0101	Cord Stopper	

6. ORIGINAL HOLDER SECTION (A661)

 
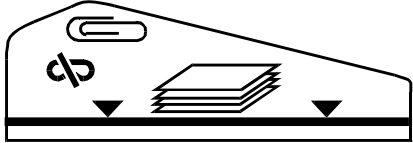
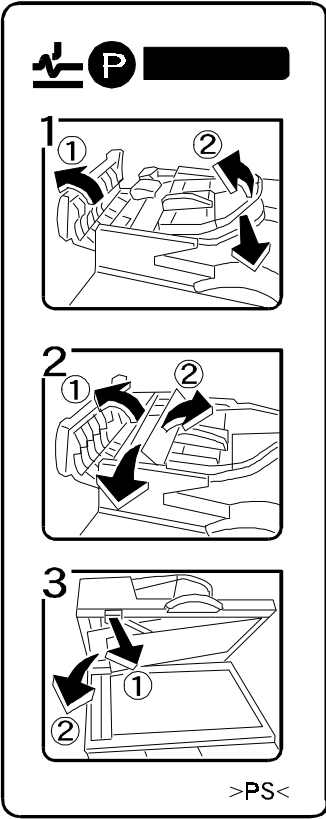


6. ORIGINAL HOLDER SECTION (A661)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A628 1587	Right Transport Roller	2
2	A628 1588	Right Transport Roller Shaft	1
3	A628 1586	Plate Spring - Lower Transport Guid	1
4	A628 1517	Guide - Exit	1
5	A628 1521	Lower Exit Guide	1
6	A628 1535	Stamper Stopper	1
7	A628 1536	Stamper Holder Plate	1
8	H511 5006	Stamper	1
9	A628 5745	Grounding Wire	1
10	A628 1523	Bracket - Platen Cover	1
11	A628 1532	Knob - Release Lever	1
12	A628 1624	Link - Original Holder Bracket	2
13	A628 1613	Original Holder Bracket	1
14	C200 3115	Shoulder Screw - Sensor Actuator	2
15	A628 1613	Original Holder Bracket	1
16	A628 1614	Original Holder Pad	3
17	A628 1615	Original Holder Sheet	1
18	A499 2389	Slider Guide Screw	1
19	A628 1529	Stud - Platen Cover	2
20	A661 1172	Left Hinge	1
21	A661 1171	Right Hinge	1
22	A628 1122	Support Bracket - Platen Sheet	2
23	A628 1151	Middle Stay	2
24	A628 1153	Grounding Plate	1
25	A628 1152	Right Stay	1
26	A628 1139	Stopper Plate	1
27	AA14 3307	Stepped Screw - M3x4	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006B	Tapping Screw - M3x6	
102	0451 4006B	Tapping Screw - 4x6	
103	0720 0030B	Retaining Ring - M3	
104	0452 3008B	Tapping Screw - M3x8	
105	1105 0283	Clamp	

7. DECAL AND DOCUMENT (A661)

1 Face up Mit der Schriftseite nach oben Face imprimée dessus Boca arriba	2 	3 	4  5  >PS<
--	---	--	--

7. DECAL AND DOCUMENT (A661)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A610 6051	Decal - Document Set	1
2	A628 6011	Decal - DF Scale	1
2	A628 6061	Decal - Original Scal	1
3	A628 6021	Original Size Decal	1
4	A628 6041	Decal - Original Tray	1
5	A661 6031	Jam Removal Decal	1

Index No.	Part No.	Description	Q'ty Per Assembly

PARTS INDEX

PM Parts Index

Section Name	Part No.	Description in Service Manual	Description in Parts Catalog	Q'ty Per Assembly	Page and Index No
EXTERIOR 1 (A661)	A628 1241	Pick-up Roller	Pick-up Roller	1	7- 10
PAPER FEED SECTION 1 (A661)	A628 1257	Original Feed Belt	Original Feed Belt	1	7- 16
PAPER FEED SECTION 2 (A661)	A628 1512	Separation Roller	Separation Roller	1	9- 16

Parts Index

Part No.	Description	Page and Index No.
A661 1122	Magnet Holder	11- 27
A661 1123	Yoke - Magnet	11- 26
A661 1128	Bracket - Cover Open Detector	13- 7
A661 1141	Left Stay	11- 8
A661 1143	Roller Bracket	11- 7
A661 1161	Guide Plate - Original Feed	7- 49
A661 1167	Knob - Guide Plate	7- 33
A661 1167	Knob - Guide Plate	7- 36
A661 1171	Right Hinge	15- 21
A661 1172	Left Hinge	15- 20
A661 1191	Original Separation Stay	9- 19
A661 1194	Separation Cover	9- 14
A661 1196	Guide Plate - Original Separation	9- 11
A661 1198	Guide Plate - Inverter	9- 12
A661 1218	Front Guide Plate	7- 19
A661 1219	Rear Guide Plate	7- 11
A661 1226	Holder Guide	7- 13
A661 1231	Bottom Plate - Solenoid	13- 14
A661 1236	Original Entrance Guide	7- 38
A661 1238	Lever-original Stopper	7- 44
A661 1239	Shaft Bottom Plate	7- 40
A661 1247	Cushion	7- 3
A661 1262	Supporter Guide Holder	7- 22
A661 1263	Supporter Guide - Feed Belt	7- 21
A661 1516	Shaft Separation Roller	9- 18
A661 1541	Guide Plate - Feed Out Roller	11- 1
A661 1546	Guide Plate - Inverter Unit	9- 20
A661 1562	Upper Guide Plate - Feed Out	11- 16
A661 1563	Feed Out Roller	11- 18
A661 1566	Bracket - Exit Sensor	11- 14
A661 1576	Lower Guide Plate - Feed Out	11- 24
A661 1582	Driven Roller	11- 19
A661 1583	Shaft - Lever	11- 23
A661 1585	Lever - Driven Roller	11- 22
A661 1586	Spring	11- 20

Part No.	Description	Page and Index No
A661 1587	Spring	11- 21
A661 1594	Pressure Lever	9- 3
A661 1595	Spring Holder	9- 1
A661 1596	Guide Plate - Driven Roller	9- 4
A661 1712	Inverter Roller	9- 22
A661 1722	Junction Gate	9- 21
A661 1723	Lever Junction Gate	9- 25
A661 1724	Spring	9- 24
A661 1725	Junction Gate Solenoid	13- 15
A661 1742	Lever - Upper Feed Out	5- 26
A661 1742	Lever - Upper Feed Out	7- 30
A661 1743	Pressure Lever	7- 31
A661 1744	Feed Out Shaft	5- 27
A661 1744	Feed Out Shaft	7- 29
A661 1745	Feed Out Roller	5- 28
A661 1746	Spring	7- 28
A661 1831	Pulley - 20T/36T	13- 6
A661 1832	Pulley Flange	13- 5
A661 1833	Pulley 36T	11- 28
A661 1834	Timing Belt Ring	13- 27
A661 1835	Gear - 20Z	7- 43
A661 1836	Gear - 24Z/32T	9- 23
A661 1855	Bracket - Spring Clutch	7- 42
A661 1871	Solenoid Bracket	13- 16
A661 1883	Pulley 32t	9- 26
A661 1884	Pulley - 20T/48T	13- 3
A661 1885	Motor Bracket	13- 10
A661 1888	Spring	13- 13
A661 1890	Tightener	13- 8
A661 1895	Spring	13- 9
A661 2111	Front Cover	5- 41
A661 2121	Rear Cover	5- 20
A661 2131	Left Cover	5- 3
A661 2141	Front Original Table	5- 47
A661 2152	Inverter Tray	5- 32

Part No.	Description	Page and Index No.
A661 2154	Shield Plate	5- 33
A661 2161	Rear Original Table	5- 46
A661 2163	Spring	5- 25
A661 2165	Original Table Bracket	5- 29
A661 2177	Spring Plate - Guide Plate	5- 7
A661 2183	Spring Plate	5- 14
A661 2191	Upper Cover	5- 21
A661 2991	Magnet	5- 44
A661 5010	ARDF Control Board	13- 21
A661 5705	Harness - Sensor	13- 23
A661 5710	Interface Harness	13- 17
A661 5712	Harness - Registration Sensor	13- 22
A661 5715	Interface Harness Bracket	13- 18
A661 5717	Harness - Transport Motor	13- 24
A661 5720	Harness - Feed-in Motor	13- 20
A661 5725	Harness - Clutch	13- 19
A661 5730	Harness:paper Feed:connecting:ass'y	7- 27
A661 5735	Relay Harness - Original Tray	5- 22
A661 5740	Harness - Exit Sensor	11- 15
A661 5745	Relay Harness - Regist Sensor	11- 10
A661 6031	Jam Removal Decal	5- 1
A661 6031	Jam Removal Decal	17- 5

Part No.	Description	Page and Index No
AA04 3468	Timing Belt - SM230	13- 4
AA04 3469	Timing Belt - SM300	13- 2
AA04 3470	Timing Belt - SM152	13- 1
AA08 0072	Bushing - 6x10x3	9- 27
AA08 0075	Bushing	7- 15
AA12 0083	Antistatic Brush	5- 31
AA12 0083	Antistatic Brush	11- 17
AA14 3051	Shoulder Screw - M4	11- 13
AA14 3307	Stepped Screw - M3x4	15- 27
AC01 3003	Exposure Glass - DF	5- 13
AW01 0066	Photosensor - PS-R50D1-B	5- 23
AW01 0066	Photosensor - PS-R50D1-B	11- 11
AW02 0075	Photointerrupter	7- 32
AW02 0075	Photointerrupter	13- 26
C200 3115	Shoulder Screw - Sensor Actuator	15- 14
G012 1531	Magnet	5- 30
H511 5006	Stamper	15- 8

Part No.	Description	Page and Index No.
A134 2885	Torque Limiter	9- 17
A376 4599	Side Fence Pad	5- 17
A499 2389	Slider Guide Screw	15- 18
A548 1771	Side Fence	5- 16
A548 2113	Motor Cushion	13- 12
A565 1172	Sensor Actuator	5- 37
A590 2214	Screw - M3x5	11- 29
A607 2176	Exit Cover Magnet	11- 25
A610 6051	Decal - Document Set	5- 19
A610 6051	Decal - Document Set	17- 1
A628 1122	Support Bracket - Platen Sheet	15- 22
A628 1129	Bracket - DF Position Sensor	13- 25
A628 1136	Belt Tightener	11- 31
A628 1139	Stopper Plate	15- 26
A628 1144	Spring Plate - Guide - Expo Glass	11- 9
A628 1147	Brracket - Pull Out Roller	11- 3
A628 1151	Middle Stay	15- 23
A628 1152	Right Stay	15- 25
A628 1153	Grounding Plate	15- 24
A628 1163	Cushion - Original Entrance Guide	7- 34
A628 1173	Hinge Bracket	5- 35
A628 1174	Right Ground Plate - Hinge Bracket	5- 38
A628 1177	Left Ground Plate - Hinge Bracket	5- 34
A628 1178	DF Bracket Cushion	5- 39
A628 1181	Lower Right Stay	9- 8
A628 1184	Shaft - Pull Out Roller	9- 7
A628 1187	Lower Transport Guide	9- 9
A628 1188	Seal - Lower Transport Guide	9- 10
A628 1211	Holder - Belt Drive Roller	7- 23
A628 1212	Shaft - Belt Guide Roller	7- 25
A628 1213	Belt Guide Roller	7- 26
A628 1214	Belt Drive Roller	7- 17
A628 1215	Spring - Belt Guide Roller	7- 24
A628 1216	Spring - Belt Drive Shaft	7- 45
A628 1220	Bushing - 8mm	7- 12

Part No.	Description	Page and Index No
A628 1221	Gear - 22Z	7- 14
A628 1222	Drive Roller Shaft	7- 48
A628 1225	Bushing - 8mm	7- 18
A628 1241	Pick-up Roller	7- 10
A628 1242	Pick-up Roller Shaft	7- 5
A628 1243	Pick-up Roller Holder	7- 4
A628 1244	Pulley - 20T	7- 8
A628 1245	Pulley And Gear - 20T/22Z	7- 2
A628 1246	Gear - 22Z	7- 1
A628 1248	Timing Belt - 118MM	7- 7
A628 1249	Joint - Pick-up Roller	7- 9
A628 1251	Anti-vibration Weight	7- 39
A628 1257	Original Feed Belt	7- 16
A628 1262	Pad - Original Entrance Guide	7- 37
A628 1512	Separation Roller	9- 16
A628 1517	Guide - Exit	15- 4
A628 1521	Lower Exit Guide	15- 5
A628 1523	Bracket - Platen Cover	15- 10
A628 1529	Stud - Platen Cover	15- 19
A628 1532	Knob - Release Lever	15- 11
A628 1535	Stamper Stopper	15- 6
A628 1536	Stamper Holder Plate	15- 7
A628 1542	Pull Out Roller	11- 2
A628 1551	Original Guide - DF Exposure Glass	11- 12
A628 1562	Right Transport Roller	11- 6
A628 1586	Plate Spring - Lower Transport Guid	15- 3
A628 1587	Right Transport Roller	15- 1
A628 1588	Right Transport Roller Shaft	15- 2
A628 1591	Left Transport Roller Shaft	9- 5
A628 1592	Left Transport Roller	9- 6
A628 1596	Left Transport Roller Spring	9- 2
A628 1613	Original Holder Bracket	15- 13
A628 1613	Original Holder Bracket	15- 15
A628 1614	Original Holder Pad	15- 16
A628 1615	Original Holder Sheet	15- 17

Part No.	Description	Page and Index No.
A628 1624	Link - Original Holder Bracket	15- 12
A628 1821	DF Main Motor - DC 7W	13- 11
A628 1834	Timing Belt - 220MM	11- 33
A628 1837	Pulley - 20T	11- 32
A628 1851	Feed-in Clutch Ass'y	7- 41
A628 2151	Side Fence Guide	5- 15
A628 2171	Fixing Bracket - Left Cover	5- 5
A628 2174	Front Cover Hinge	5- 4
A628 2175	Rear Magnet Catch	5- 6
A628 2176	Front Magnet Catch	5- 12
A628 2177	Feeler - Paper Size Detection	5- 11
A628 2178	Feeler Bracket - Paper Size Detecti	5- 10
A628 2179	Registration Sensor Shield	5- 9
A628 2211	Rear Guide Plate	5- 8
A628 3111	Shoulder Screw - M5	5- 42
A628 3115	Knob Screw - M4	5- 43
A628 3192	Original Scale	5- 45
A628 5745	Grounding Wire	5- 36
A628 5745	Grounding Wire	15- 9
A628 6011	Decal - DF Scale	17- 2
A628 6021	Original Size Decal	5- 2
A628 6021	Original Size Decal	17- 3
A628 6041	Decal - Original Tray	5- 18
A628 6041	Decal - Original Tray	17- 4
A628 6061	Decal - Original Scal	17- 2
5053 0447	Bushing - 6mm	7- 20
5053 0447	Bushing - 6mm	9- 28
5053 0447	Bushing - 6mm	11- 4
5206 2686	Snap Ring	7- 6
5215 2621	Snap Ring - M6	7- 47
5415 4145	Stud	11- 30
5446 1665	Rubber Pad - Exposure Glass	7- 35
5446 2824	Screw - Duplex Guide Plate	5- 24
5447 2681	Snap Ring	5- 40
5447 2681	Snap Ring	9- 15

Part No.	Description	Page and Index No
5447 2769	Stepped Screw	9- 13
5447 2769	Stepped Screw	11- 5
5894 2540	Arm Screw	7- 46

Part No.	Description	Page and Index No.
0313 0040B	Philips Pan Head Screw - M3x4	13-104
0313 0050B	Philips Pan Head Screw - M3x5	13-111
0313 0100B	Philips Pan Head Screw - M3x10	11-104
0314 0060B	Philips Pan Head Screw - M4x6	5-108
0353 0040B	Screw - M3x4	7-107
0353 0050F	Tapping Screw - M3x5	5-110
0353 0060F	Philips Truss Head Screw - M3x6	7-108
0434 0122B	Tapping Screw-m4x12	5-107
0451 3006B	Tapping Screw - M3x6	5-102
0451 3006B	Tapping Screw - M3x6	7-106
0451 3006B	Tapping Screw - M3x6	9-106
0451 3006B	Tapping Screw - M3x6	11-101
0451 3006B	Tapping Screw - M3x6	13-101
0451 3006B	Tapping Screw - M3x6	15-101
0451 3008B	Tapping Screw - M3x8	5-105
0451 3012B	Tapping Screw With Washer - M3x12	11-105
0451 4006B	Tapping Screw - 4x6	11-103
0451 4006B	Tapping Screw - 4x6	15-102
0452 3008B	Tapping Screw - M3x8	5-101
0452 3008B	Tapping Screw - M3x8	11-108
0452 3008B	Tapping Screw - M3x8	15-104
0452 4008B	Tapping Screw - M4x8	5-103
0453 3006Z	Tapping Screw - M3x6	5-109
0453 3006Z	Bind Tapping Screw - M3x6	9-104
0632 0100	Parallel Pin - M2x10	7-105
0720 0025B	Retaining Ring - M2.5	9-102
0720 0030B	Retaining Ring - M3	9-101
0720 0030B	Retaining Ring - M3	11-107
0720 0030B	Retaining Ring - M3	15-103
0720 0040B	Retaining Ring - M4	7-101
0720 0040B	Retaining Ring - M4	9-103
0720 0040B	Retaining Ring - M4	11-102
0720 0040B	Retaining Ring - M4	13-102
0720 0060B	Retaining Ring - M6	7-102
0741 3506	Ball Bearing - 6x12x4 mm	9-105

Part No.	Description	Page and Index No
0741 3506	Ball Bearing - 6x12x4 Mm	11-106
0802 5255	Tapping Screw - M3x8	5-106
0805 0094	Retaining Ring - M5	9-107
0807 4072	Washer - Core	7-103
0807 5066	Washer - M8.1xM11x0.3	7-104
0951 3006B	Philips Screw With Flat Washer - M3x6	13-103
0951 4008B	Philips Screw With Washer - M4x8	5-104
1105 0008	Nylon Clamp - 2n	11-109
1105 0183	Spacer	13-109
1105 0200	Clamp	11-111
1105 0283	Clamp	7-110
1105 0283	Clamp	11-110
1105 0283	Clamp	13-108
1105 0283	Clamp	15-105
1105 0291	Wire Saddle	13-105
1105 0310	Wire Clamp	13-107
1105 0319	Harness Clamp	7-109
1105 0349	Edge Saddle	13-106
1105 0378	Clamp	13-110
1106 0101	Cord Stopper	13-113
1106 0193	Bushing - 7.9mm	13-112
1106 0241	Bushing - 6.7mm	7-111