

DF72 (B387)

DF72 (B387)

PARTS CATALOG


This catalog gives the numbers and names of parts on this machine.

CONTENTS

1.Exterior (B387)	2
2.Original Feed Section 1 (B387)	4
3.Original Feed Section 2 (B387)	6
4.Original Transfer And Frame (B387)	8
5.Electrical Section (B387)	10
6.Decals And Documents (B387)	12
Parts Index	15

February ,28 ' 2001

1.Exterior (B387)

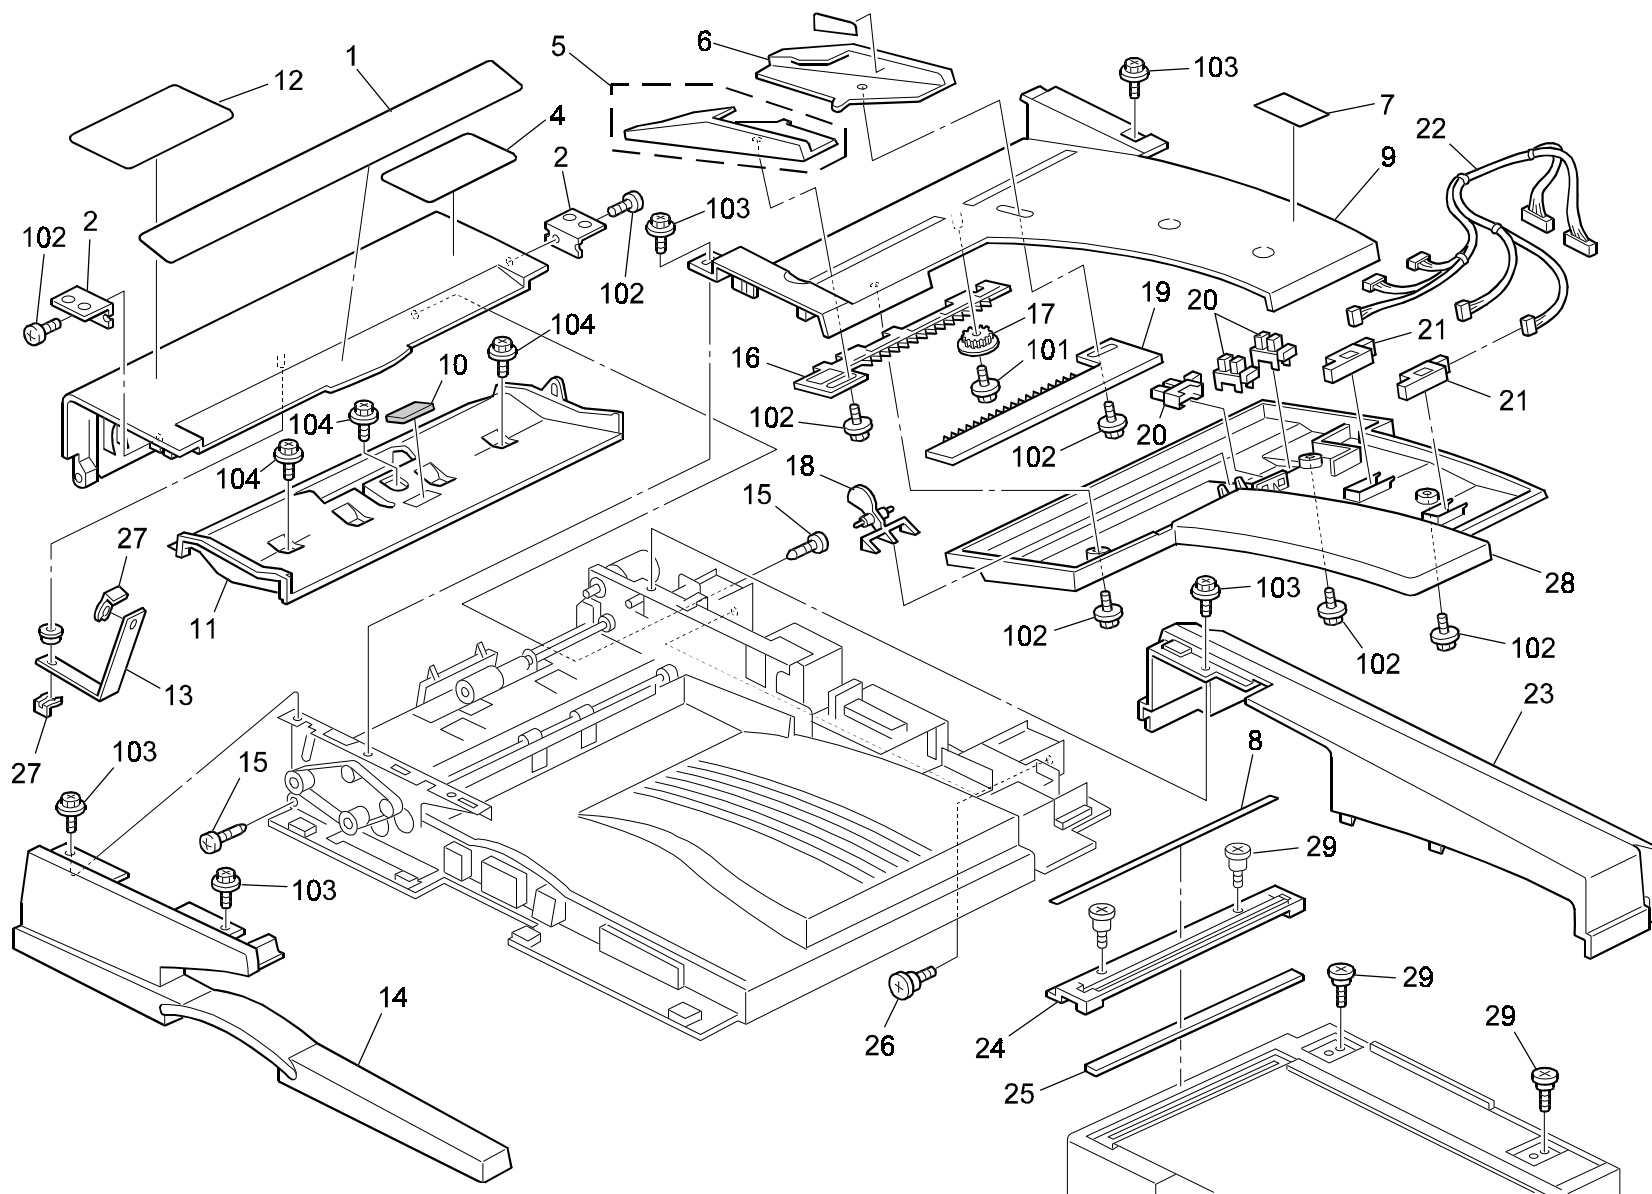


1.Exterior (B387)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B387 6021	Size Indication Decal	1
2	B387 4873	Positioning Plate	2
3	B387 4841	Left Cover	1
4	B379 6063	Exposure Glass Decal	1
5	B387 4640	Front Side Fence	1
6	B387 4655	Rear Side Fence	1
7	B387 6032	Original Orientation Decal	1
8	B387 6012	Misfeed Removal Decal	1
9	B387 4605	Upper Original Table	1
10	A859 2352	Pad Pressure Plate	1
11	B387 2310	Guide Plate - Paper Feed	1
12	B387 6053	Original Scale Decal - A4	1
12	B387 6054	Original Scale Decal - LT	1
13	B387 4875	Left Cover Band	1
14	B387 4812	Front Cover	1
15	5446 2824	Screw - Duplex Guide Plate	1
16	B387 4661	Front Rack - Side Fence	1
17	A859 4665	Gear - 16Z	1
18	B387 4681	Feeler - Original Trailing Edge	1
19	B387 4671	Rear Rack - Side Fence	1
20	AW02 0075	Photointerruptor	1
21	AW01 0087	Photo Sensor - Ass'y	1
22	B387 5705	Original Tray Harness	1
23	B387 4822	Rear Cover	1
24	B386 7101	Original Scale	1
25	AC01 3004	Exposure Glass	1
26	A548 6121	Screw - M4	2
27	5206 2686	Snap Ring	1
28	B387 4621	Lower Original Table	1
29	A859 7211	Stepped Screw	2


Index No.	Part No.	Description	Q'ty Per Assembly
101	0450 3008B	Tapping Screw - M3x8	
102	0452 3008B	Tapping Screw - M3x8	
103	0451 3008H	Tapping Screw - M3x8	

2.Original Feed Section 1 (B387)

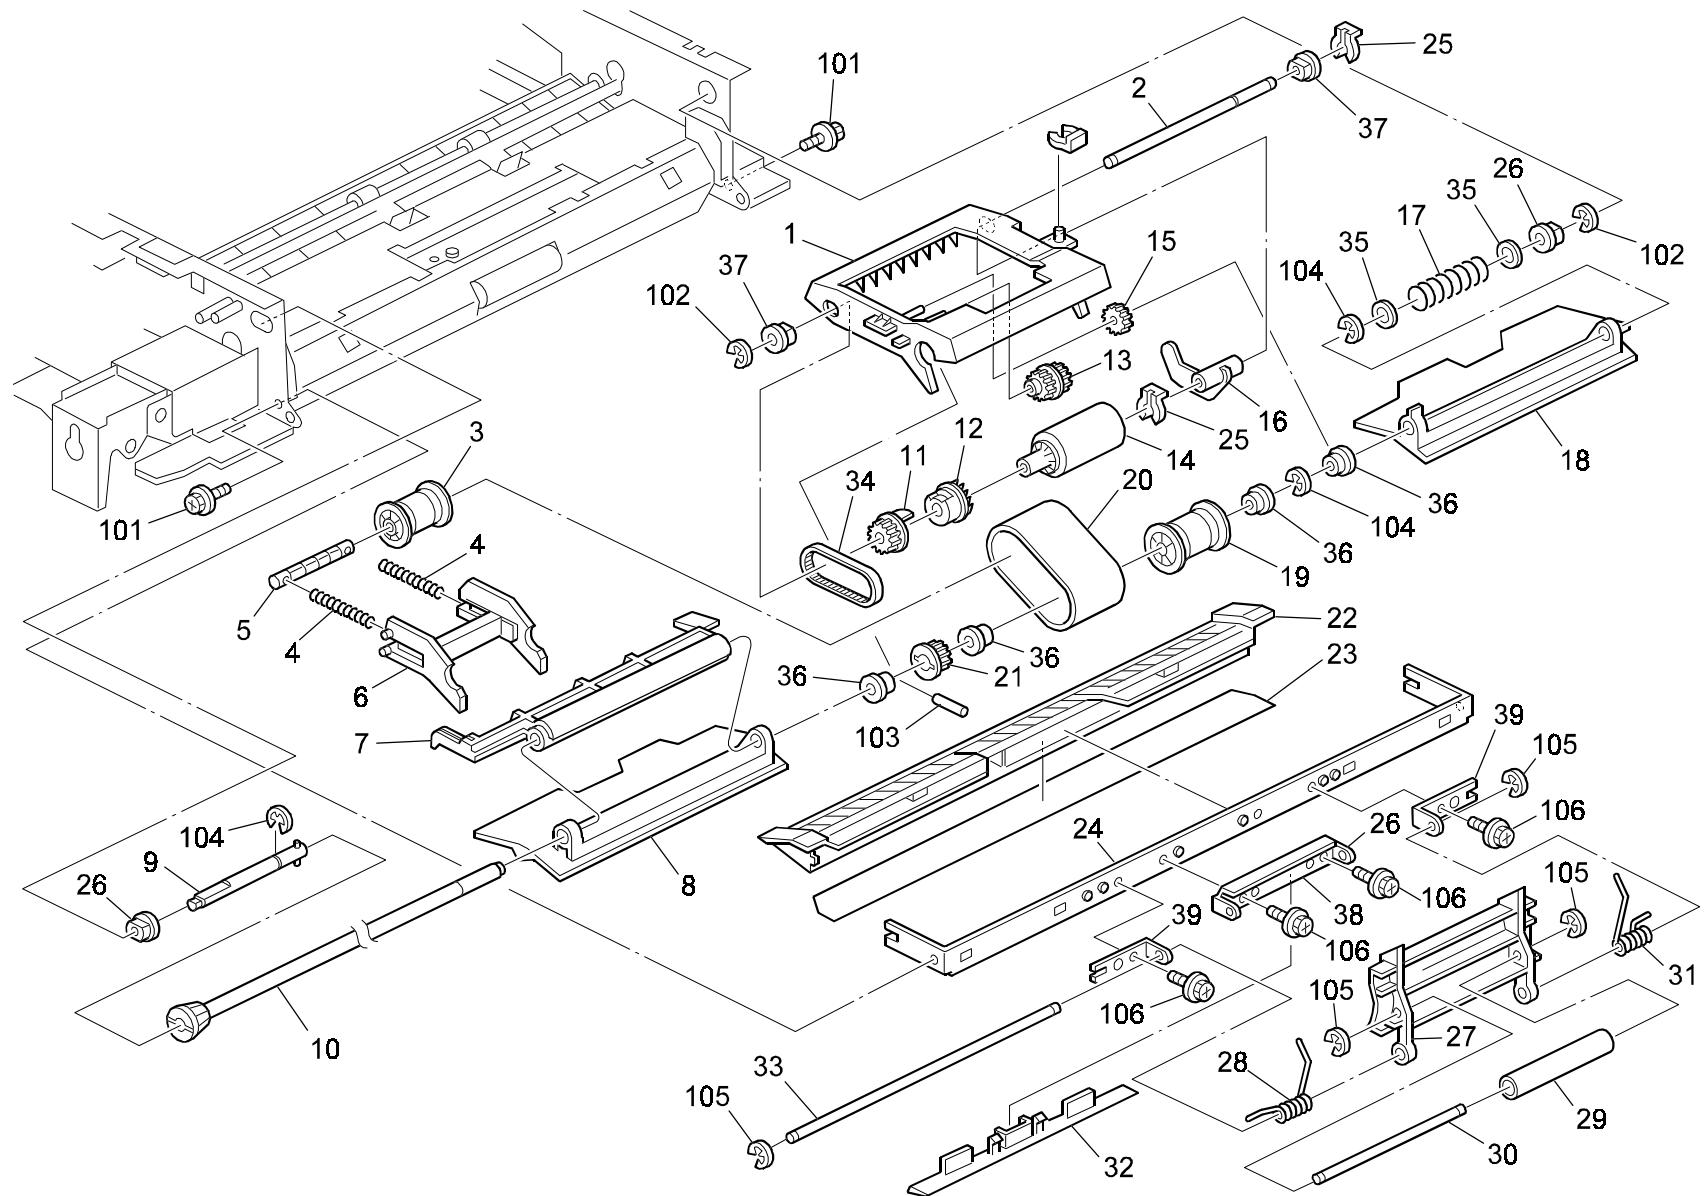

5

3.Original Feed Section 2 (B387)

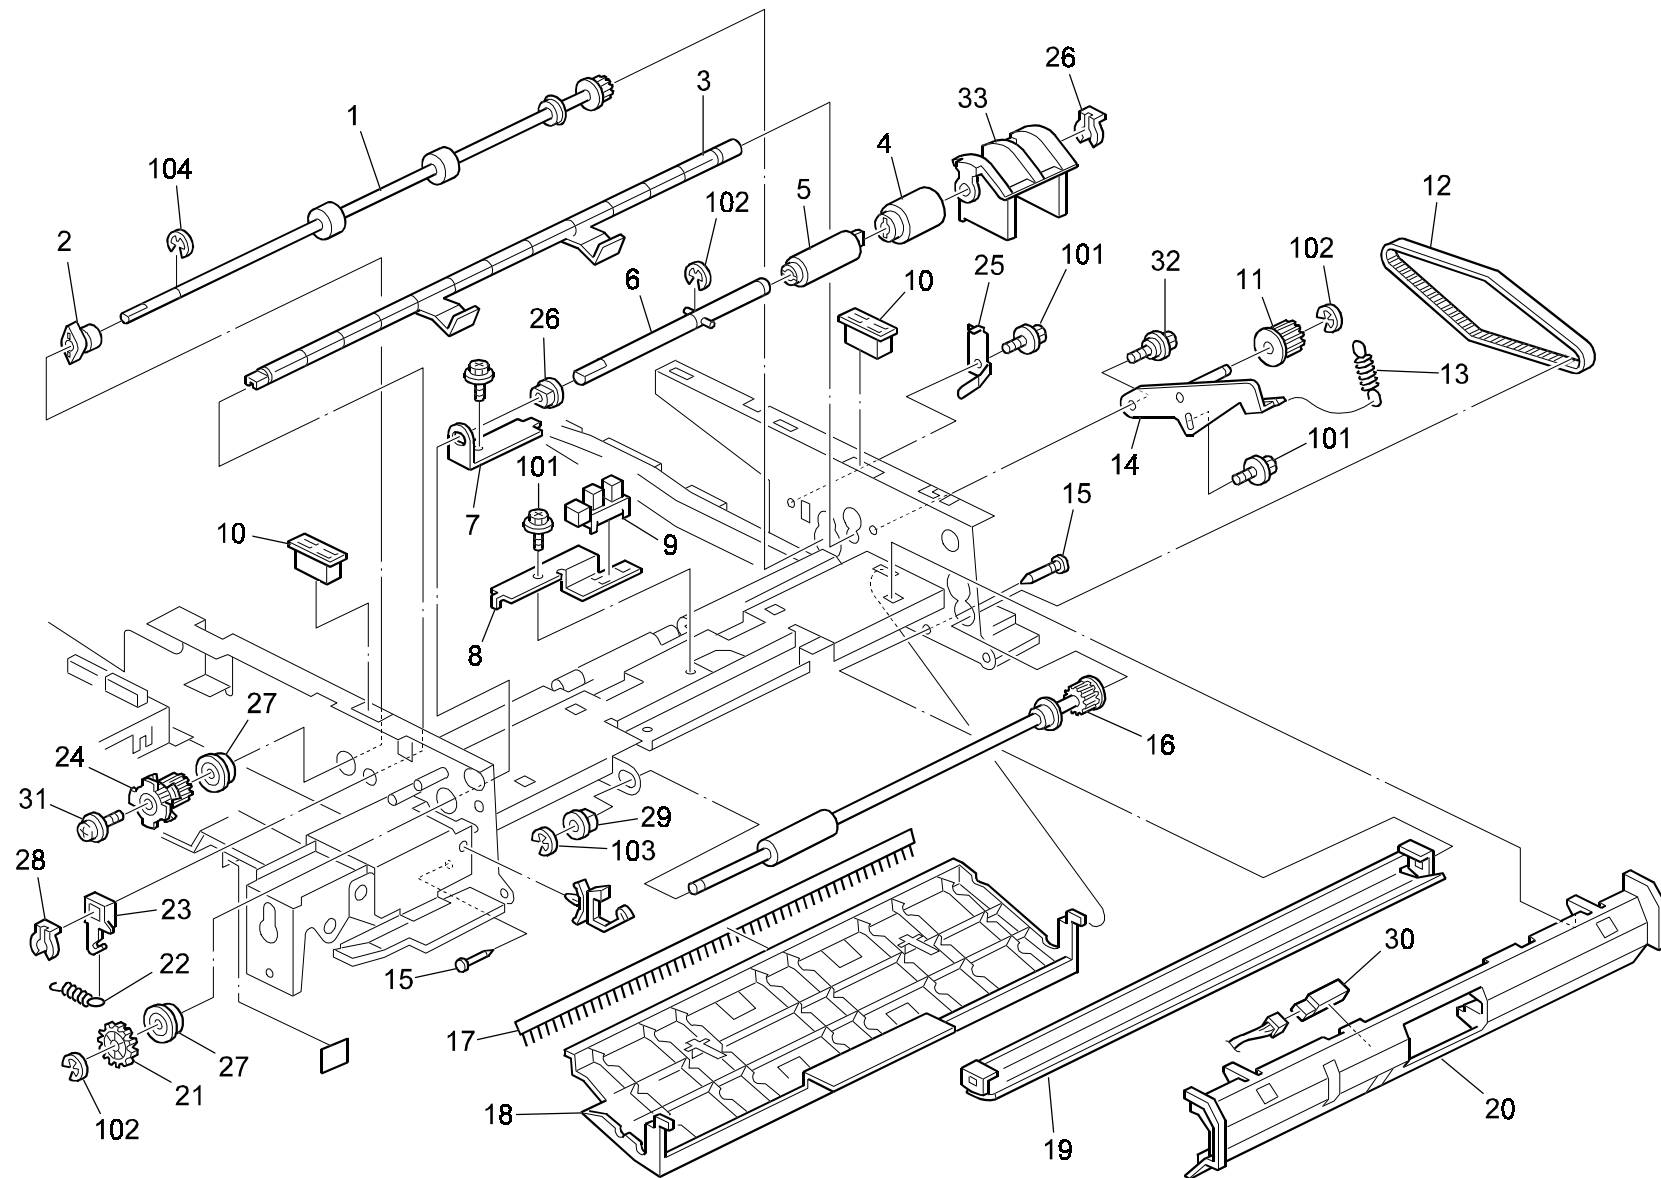


3.Original Feed Section 2 (B387)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B387 3130	Exit Roller	1
2	B387 2421	Original Stopper Cam	1
3	B387 2411	Original Stopper	1
4	B387 1671	Reverse Roller	1
5	B387 2250	Torque Limiter - 40MNXM	1
6	B387 2210	Reverse Roller Shaft	1
7	B387 1612	Bracket - Reverse Roller Shaft	1
8	B387 1331	Original Sensor Bracket	1
9	AW02 0075	Photointerruptor	1
10	B387 1181	Magnet Catch	2
11	A859 4321	Pulley - 20Z	1
12	B387 4331	Timing Belt - 2XL	1
13	B387 4342	Adjusting Bracket Spring	1
14	B387 4311	Adjusting Bracket	1
15	5446 2824	Screw - Duplex Guide Plate	2
16	B387 3110	Left Transport Roller	1
17	B387 3225	Discharge Brush	1
18	B387 3220	Guide Plate - Upper Exit	1
19	A859 3511	Guide Exposure Glass	1
20	B387 3210	Guide Plate - Transport Roller	1
21	B387 4221	Gear - 28Z	1
22	B387 2435	Original Stopper Spring	1
23	B387 2431	Original Stopper Lever	1
24	B387 4271	Coupled Pulley - 20/30Z	1
25	B387 1221	Exit Grounding Plate	1
26	5053 0447	Bushing - 6mm	1
27	A859 2230	Ball Bearing - 6x13x5	2
28	5215 2621	Snap Ring - M6	1
29	5304 1639	Bushing - 8mm	1
30	AW01 0093	Photo Sensor - PS-117ND1	1
31	A590 2214	Screw - M3X5	1
32	A697 1125	Stepped Screw - Lever	1
33	B387 2220	Reverse Roller Cover	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006B	Tapping Screw - M3x6	
102	0720 0040B	Retaining Ring - M4	
103	0720 0060B	Retaining Ring - M6	
104	0720 0050E	Retaining Ring - M5	

4.Original Transfer And Frame (B387)

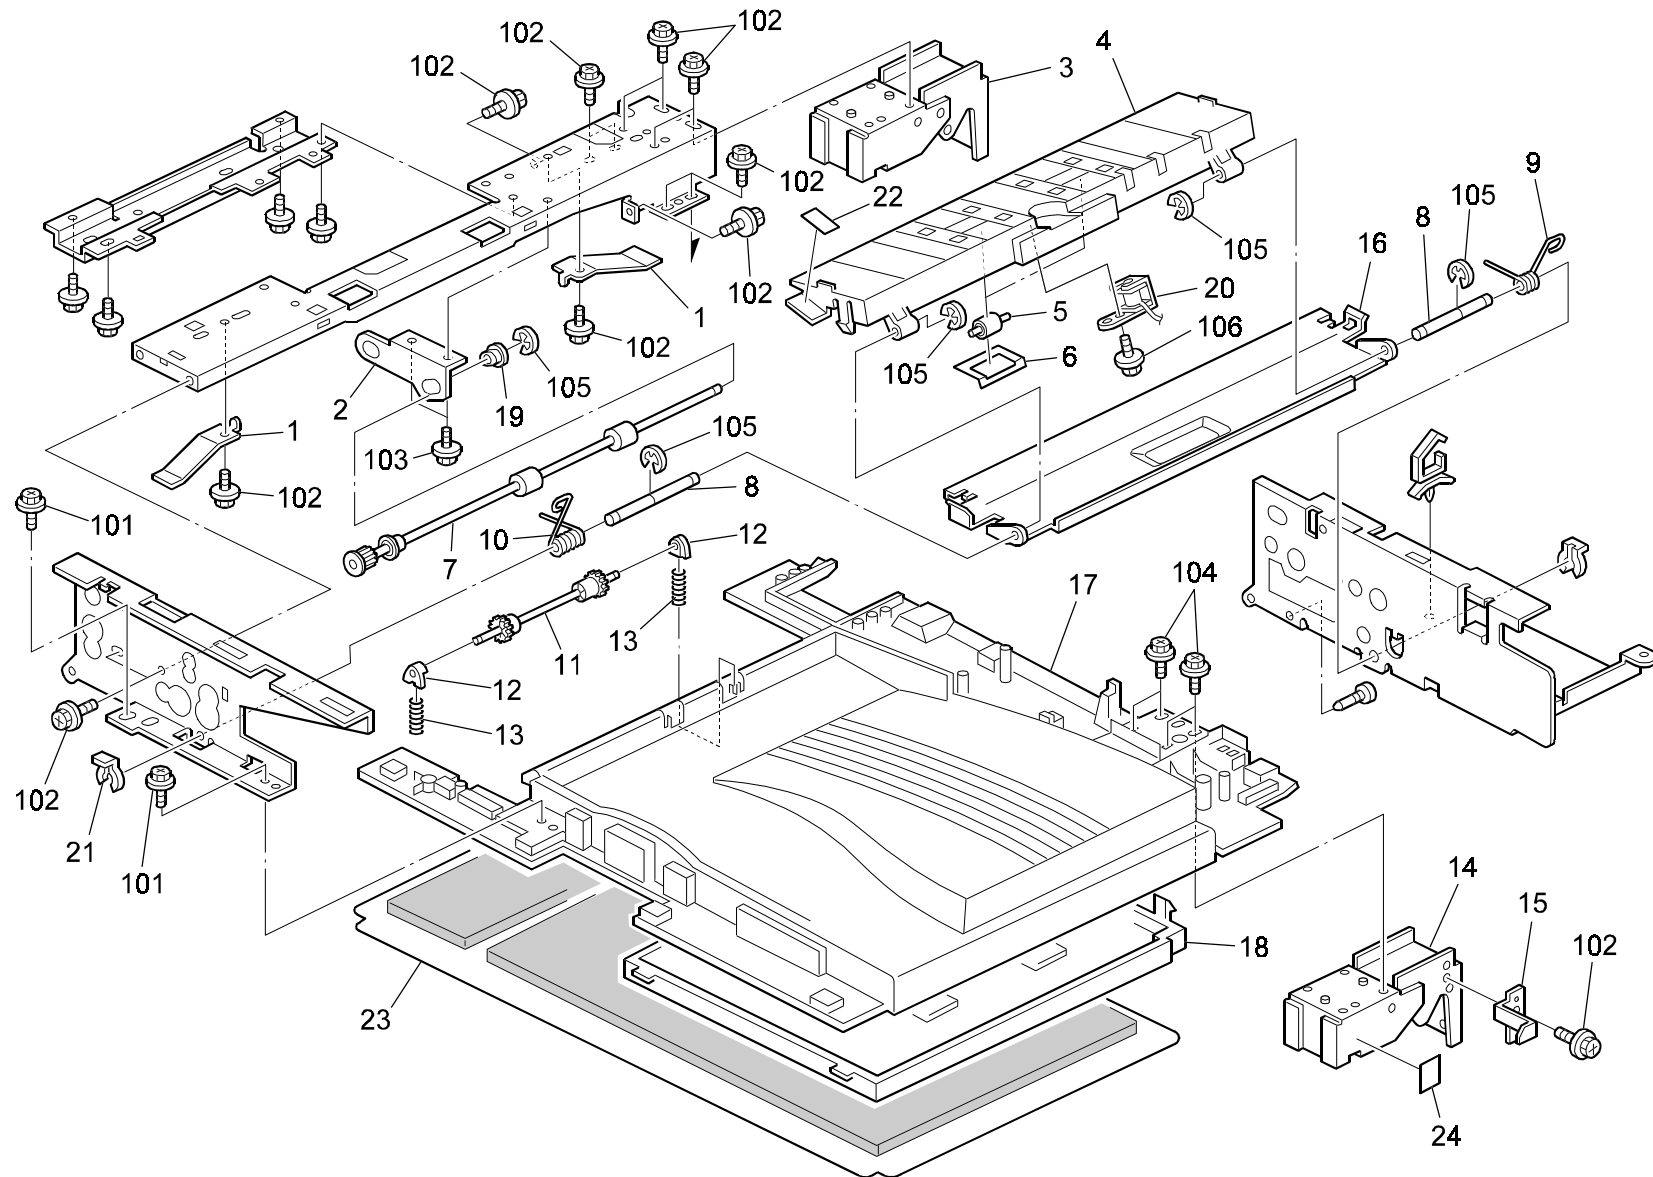


4.Original Transfer And Frame (B387)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B387 1322	Spring Plate	2
2	B387 1320	Transport Roller Bracket	1
3	B387 1811	Left Hinge	1
4	B387 3411	Exit Guide Plate	1
5	A859 3420	Middle Driven Roller	2
6	B387 3425	Spring Plate	2
7	B387 3120	Right Transport Roller	1
8	B387 3412	Shaft - Exit Guide Plate	1
9	B387 3430	Rear Spring - Exit Guide Plate	1
10	B387 3431	Front Spring - Exit Guide Plate	1
11	B387 1921	Driven Exit Roller	1
12	A859 4836	Bushing Exit Driven Roller	2
13	AA06 3311	Transport Roller Spring	2
14	B387 1831	Right Hinge	1
15	B387 1841	Feeler - DF Open Sensor	1
16	B387 3413	Cover - Exit Guide Plate	1
17	B387 1912	Base	1
18	B387 1932	Base - Platen Cover	1
19	5053 0447	Bushing - 6mm	1
20	H511 5006	Stamper	1
21	5447 2681	Snap Ring	2
22	A859 6023	Decal Green	1
23	B387 3600	Platen Sheet	1
24	A334 4678	Rack Shield Mylar	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0450 4008B	Tapping Screw - 4x8	
102	0451 3006B	Tapping Screw - M3x6	
103	0802 5276	Tapping Screw With Washer - M3x6	
104	0451 3008H	Tapping Screw - M3x8	
105	0720 0040B	Retaining Ring - M4	
106	0452 3008B	Tapping Screw - M3x8	

5. Electrical Section (B387)

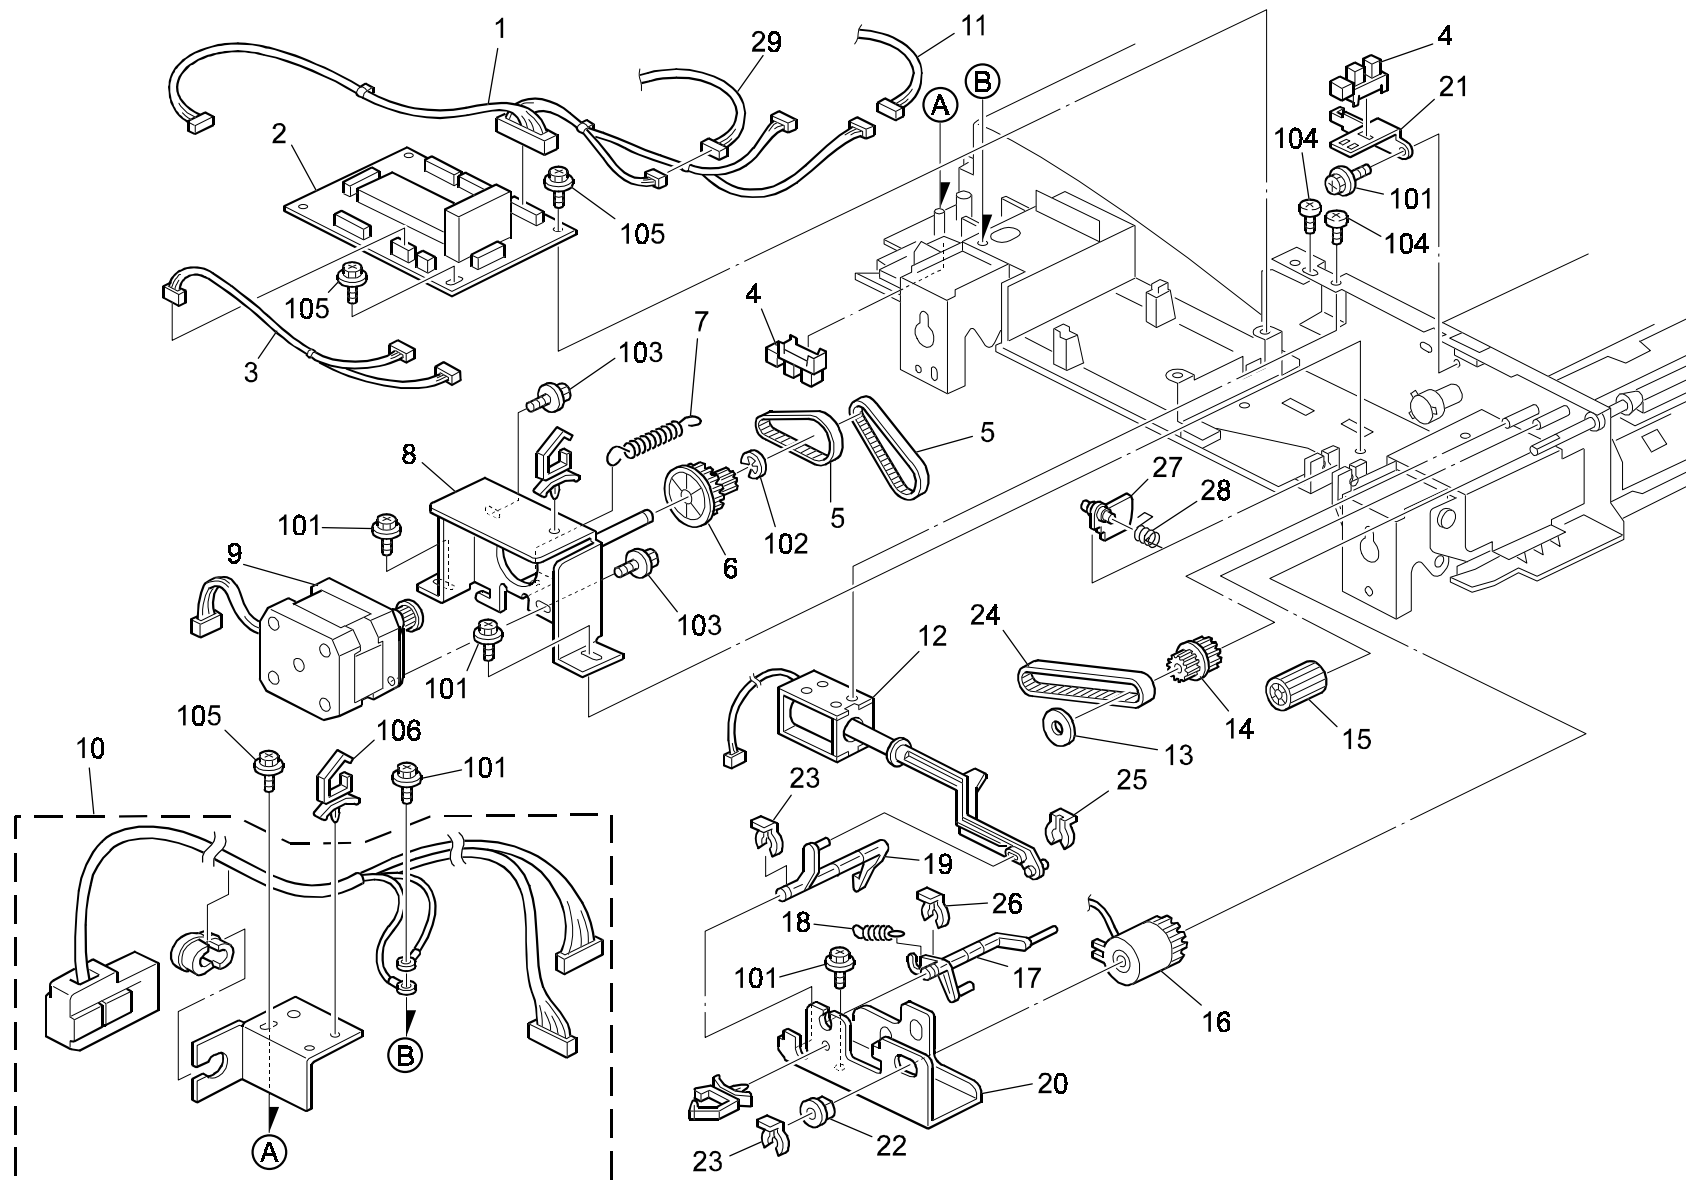


5.Electrical Section (B387)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B387 5700	Main Harness	1
2	B387 5500	Main Control Board	1
3	B387 5710	Feed Clutch Harness	1
4	AW02 0075	Photointerruptor	2
5	A859 4171	Timing Belt - 2XL	2
6	A661 1884	Pulley - 20T/48T	1
7	B387 4198	Transport Motor Spring	1
8	B387 4111	Transport Motor Bracket	1
9	B387 4121	DC Transport Motor	1
10	B387 5800	Interface Harness	1
11	B387 5715	Registration Sensor Harness	1
12	B387 4421	DC Solenoid	1
13	B387 4222	Flange	1
14	B387 4231	Gear/pulley - 20/21Z	1
15	B387 4241	Gear - 20Z	1
16	AX21 0071	Electromagnetic Clutch - 30Z	1
17	B387 2355	Pickup Lever	1
18	B387 2375	Pickup Spring	1
19	B387 2365	Stopper Pawl Lever	1
20	B387 1316	Feed Clutch Bracket	1
21	B387 1123	Bracket - Cover Open Sensor	1
22	5304 1639	Bushing - 8mm	1
23	5447 2681	Snap Ring	2
24	B387 4251	Timing Belt -2XL	1
25	5206 2686	Snap Ring	1
26	C101 2360	Snap Ring	1
27	B387 1941	Feeler - Paper Size Sensor	1
28	B387 1951	Spring - Paper Size Sensor	1
29	B387 5720	Original Sensor Harness	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006B	Tapping Screw - M3x6	
102	0720 0040B	Retaining Ring - M4	
103	0951 3006B	Philips Screw With Flat Washer - M3x6	
104	0353 0040B	Screw - M3X4	
105	0452 3008B	Tapping Screw - M3x8	
106	1105 0460	Clamp	


6.Decals And Documents (B387)

1

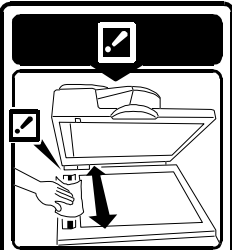


Please clean the part of the contact glass with a soft cloth as shown when you see black lines on a copy image. >PS<


2

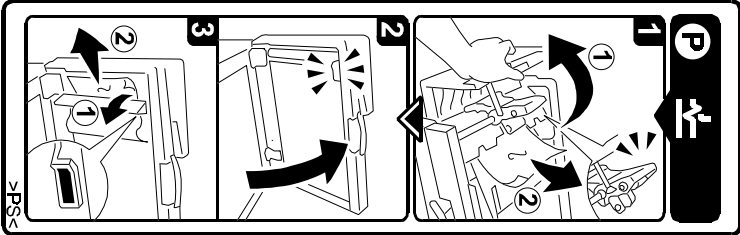

3

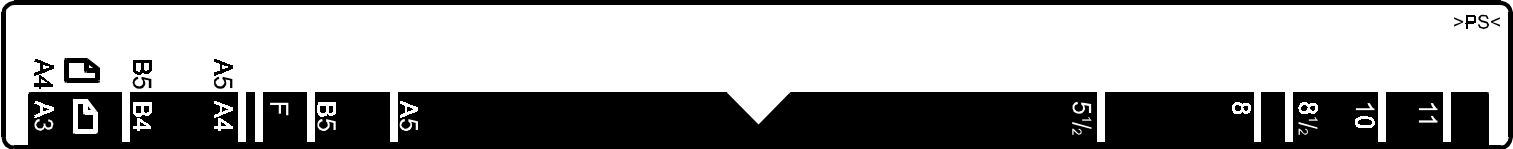

4

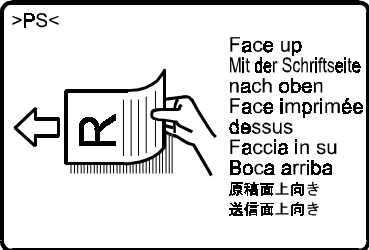

>PS<

Face up
Mit der Schriftseite
nach oben
Face imprimée
dessus
Faccia in su
Boca arriba
原稿面上向き
送信面上向き

5



6.Decals And Documents (B387)



Index No.	Part No.	Description	Q'ty Per Assembly
1	B379 6063	Exposure Glass Decal	1
2	B387 6012	Misfeed Removal Decal	1
3	B387 6021	Size Indication Decal	1
4	B387 6032	Original Orientation Decal	1
5	B387 6053	Original Scale Decal - A4	1
5	B387 6054	Original Scale Decal - LT	1
6	A859 6023	Decal Green	1

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

PM Parts Index

[illegible]

Parts Index

Part No.	Description	Page and Index No.
B387 1123	Bracket - Cover Open Sensor	11- 21
B387 1181	Magnet Catch	7- 10
B387 1221	Exit Grounding Plate	7- 25
B387 1316	Feed Clutch Bracket	11- 20
B387 1320	Transport Roller Bracket	9- 2
B387 1322	Spring Plate	9- 1
B387 1331	Original Sensor Bracket	7- 8
B387 1612	Bracket - Reverse Roller Shaft	7- 7
B387 1671	Reverse Roller	7- 4
B387 1711	Left Lower Stay	5- 24
B387 1712	Center Bracket - Left Lower Stay	5- 38
B387 1713	Outer Bracket - Left Lower Stay	5- 39
B387 1721	Left Lower Guide	5- 22
B387 1722	Entrance Guide	5- 23
B387 1811	Left Hinge	9- 3
B387 1831	Right Hinge	9- 14
B387 1841	Feeler - DF Open Sensor	9- 15
B387 1912	Base	9- 17
B387 1921	Driven Exit Roller	9- 11
B387 1932	Base - Platen Cover	9- 18
B387 1941	Feeler - Paper Size Sensor	11- 27
B387 1951	Spring - Paper Size Sensor	11- 28
B387 2111	Belt Holder	5- 6
B387 2113	Roller - Paper Feed Belt	5- 3
B387 2120	Shaft - Paper Feed Belt	5- 10
B387 2131	Rear Feed Guide	5- 8
B387 2132	Front Feed Guide	5- 18
B387 2133	Pickup Arm	5- 7
B387 2151	Pickup Holder	5- 1
B387 2161	Pickup Roller	5- 14
B387 2162	Pickup Roller Shaft	5- 2
B387 2163	Pickup Collar	5- 12
B387 2164	Timing Pulley - 20Z	5- 11
B387 2210	Reverse Roller Shaft	7- 6
B387 2220	Reverse Roller Cover	7- 33

Part No.	Description	Page and Index No.
B387 2250	Torque Limiter - 40MNXM	7- 5
B387 2310	Guide Plate - Paper Feed	3- 11
B387 2355	Pickup Lever	11- 17
B387 2365	Stopper Pawl Lever	11- 19
B387 2375	Pickup Spring	11- 18
B387 2411	Original Stopper	7- 3
B387 2421	Original Stopper Cam	7- 2
B387 2431	Original Stopper Lever	7- 23
B387 2435	Original Stopper Spring	7- 22
B387 3110	Left Transport Roller	7- 16
B387 3120	Right Transport Roller	9- 7
B387 3130	Exit Roller	7- 1
B387 3210	Guide Plate - Transport Roller	7- 20
B387 3220	Guide Plate - Upper Exit	7- 18
B387 3225	Discharge Brush	7- 17
B387 3311	Transport Driven Roller	5- 29
B387 3313	Shaft - Transport Driven Roller	5- 30
B387 3316	Cover - Transport Driven Roller	5- 27
B387 3317	Main Shaft - Transport Driven	5- 33
B387 3318	Front Pressure Spring	5- 28
B387 3319	Rear Pressure Spring	5- 31
B387 3321	Spring Cover	5- 32
B387 3411	Exit Guide Plate	9- 4
B387 3412	Shaft - Exit Guide Plate	9- 8
B387 3413	Cover - Exit Guide Plate	9- 16
B387 3425	Spring Plate	9- 6
B387 3430	Rear Spring - Exit Guide Plate	9- 9
B387 3431	Front Spring - Exit Guide Plate	9- 10
B387 3600	Platen Sheet	9- 23
B387 4111	Transport Motor Bracket	11- 8
B387 4121	DC Transport Motor	11- 9
B387 4198	Transport Motor Spring	11- 7
B387 4216	Feed Clutch Shaft	5- 9
B387 4221	Gear - 28Z	7- 21
B387 4222	Flange	11- 13

Part No.	Description	Page and Index No.
B387 4231	Gear/pulley - 20/21Z	11- 14
B387 4241	Gear - 20Z	11- 15
B387 4251	Timing Belt - 2XL	11- 24
B387 4271	Coupled Pulley - 20/30Z	7- 24
B387 4311	Adjusting Bracket	7- 14
B387 4331	Timing Belt - 2XL	7- 12
B387 4342	Adjusting Bracket Spring	7- 13
B387 4421	DC Solenoid	11- 12
B387 4605	Upper Original Table	3- 9
B387 4621	Lower Original Table	3- 28
B387 4640	Front Side Fence	3- 5
B387 4655	Rear Side Fence	3- 6
B387 4661	Front Rack - Side Fence	3- 16
B387 4671	Rear Rack - Side Fence	3- 19
B387 4681	Feeler - Original Trailing Edge	3- 18
B387 4812	Front Cover	3- 14
B387 4822	Rear Cover	3- 23
B387 4841	Left Cover	3- 3
B387 4872	Original Sensor Feeler	5- 16
B387 4873	Positioning Plate	3- 2
B387 4875	Left Cover Band	3- 13
B387 5500	Main Control Board	11- 2
B387 5700	Main Harness	11- 1
B387 5705	Original Tray Harness	3- 22
B387 5710	Feed Clutch Harness	11- 3
B387 5715	Registration Sensor Harness	11- 11
B387 5720	Original Sensor Harness	11- 29
B387 5800	Interface Harness	11- 10
B387 6012	Misfeed Removal Decal	3- 8
B387 6012	Misfeed Removal Decal	13- 2
B387 6021	Size Indication Decal	13- 3
B387 6021	Size Indication Decal	3- 1
B387 6032	Original Orientation Decal	3- 7
B387 6032	Original Orientation Decal	13- 4
B387 6053	Original Scale Decal - A4	3- 12

Part No.	Description	Page and Index No.
B387 6053	Original Scale Decal - A4	13- 5
B387 6054	Original Scale Decal - LT	3- 12
B387 6054	Original Scale Decal - LT	13- 5

Part No.	Description	Page and Index No.
AA06 3311	Transport Roller Spring	9- 13
AA06 3315	Spring - Belt Drive Shaft	5- 17
AA06 3318	Spring - Belt Guide Roller	5- 4
AA13 2013	Spacer	5- 35
AC01 3004	Exposure Glass	3- 25
AW01 0087	Photo Sensor - Ass'y	3- 21
AW01 0093	Photo Sensor - PS-117ND1	7- 30
AW02 0075	Photointerruptor	7- 9
AW02 0075	Photointerruptor	3- 20
AW02 0075	Photointerruptor	11- 4
AX21 0071	Electromagnetic Clutch - 30Z	11- 16
B379 6063	Exposure Glass Decal	13- 1
B379 6063	Exposure Glass Decal	3- 4
B386 7101	Original Scale	3- 24
C101 2360	Snap Ring	11- 26
H511 5006	Stamper	9- 20

Part No.	Description	Page and Index No.
A334 4678	Rack Shield Mylar	9- 24
A548 6121	Screw - M4	3- 26
A590 2214	Screw - M3X5	7- 31
A628 1225	Bushing - 8mm	5- 36
A661 1884	Pulley - 20T/48T	11- 6
A697 1125	Stepped Screw - Lever	7- 32
A859 2112	Drive Shaft Paper Feed Belt	5- 5
A859 2114	Drive Roller Paper Feed Belt	5- 19
A859 2121	Gear - 22Z	5- 21
A859 2141	Belt Paper Feed	5- 20
A859 2166	Timing Belt - 2XL	5- 34
A859 2167	Gear - 22Z	5- 15
A859 2168	Pulley - 22Z	5- 13
A859 2230	Ball Bearing - 6x13x5	7- 27
A859 2352	Pad Pressure Plate	3- 10
A859 3420	Middle Driven Roller	9- 5
A859 3511	Guide Exposure Glass	7- 19
A859 4171	Timing Belt - 2XL	11- 5
A859 4321	Pulley - 20Z	7- 11
A859 4665	Gear - 16Z	3- 17
A859 4836	Bushing Exit Driven Roller	9- 12
A859 6023	Decal Green	9- 22
A859 6023	Decal Green	13- 6
A859 7211	Stepped Screw	3- 29

Part No.	Description	Page and Index No.
5053 0447	Bushing - 6mm	5- 37
5053 0447	Bushing - 6mm	9- 19
5053 0447	Bushing - 6mm	7- 26
5206 2686	Snap Ring	11- 25
5206 2686	Snap Ring	3- 27
5215 2621	Snap Ring - M6	7- 28
5304 1639	Bushing - 8mm	5- 26
5304 1639	Bushing - 8mm	7- 29
5304 1639	Bushing - 8mm	11- 22
5446 2824	Screw - Duplex Guide Plate	7- 15
5446 2824	Screw - Duplex Guide Plate	3- 15
5447 2681	Snap Ring	5- 25
5447 2681	Snap Ring	9- 21
5447 2681	Snap Ring	11- 23

Part No.	Description	Page and Index No.
0353 0040B	Screw - M3X4	11-104
0353 0060B	Philips Pan Head Screw - M3x6	5-106
0450 3008B	Tapping Screw - M3x8	3-101
0450 4008B	Tapping Screw - 4x8	9-101
0451 3006B	Tapping Screw - M3x6	9-102
0451 3006B	Tapping Screw - M3x6	7-101
0451 3006B	Tapping Screw - M3x6	11-101
0451 3006B	Tapping Screw - M3x6	5-101
0451 3008H	Tapping Screw - M3x8	3-103
0451 3008H	Tapping Screw - M3x8	9-104
0452 3008B	Tapping Screw - M3x8	11-105
0452 3008B	Tapping Screw - M3x8	3-102
0452 3008B	Tapping Screw - M3x8	9-106
0632 0100G	Pin - 2x10mm	5-103
0720 0030B	Retaining Ring - M3	5-105
0720 0040B	Retaining Ring - M4	7-102
0720 0040B	Retaining Ring - M4	5-102
0720 0040B	Retaining Ring - M4	11-102
0720 0040B	Retaining Ring - M4	9-105
0720 0050E	Retaining Ring - M5	7-104
0720 0060B	Retaining Ring - M6	7-103
0720 0060B	Retaining Ring - M6	5-104
0802 5276	Tapping Screw With Washer - M3x6	9-103
0951 3006B	Philips Screw With Flat Washer - M3x6	11-103
1105 0460	Clamp	11-106