

DF83 (B810)

DF83 (B810)


PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.ARDF 1 (B810)	2
2.ARDF 2 (B810)	4
3.ARDF 3 (B810)	6
4.ARDF 4 (B810)	8
5.ARDF 5 (B810)	10
6.ARDF 6 (B810)	12
7.ARDF 7 (B810)	14
8.Decals And Documents (B810)	16
PARTS INDEX.....	19

April ,6 ' 2005

1.ARDF 1 (B810)

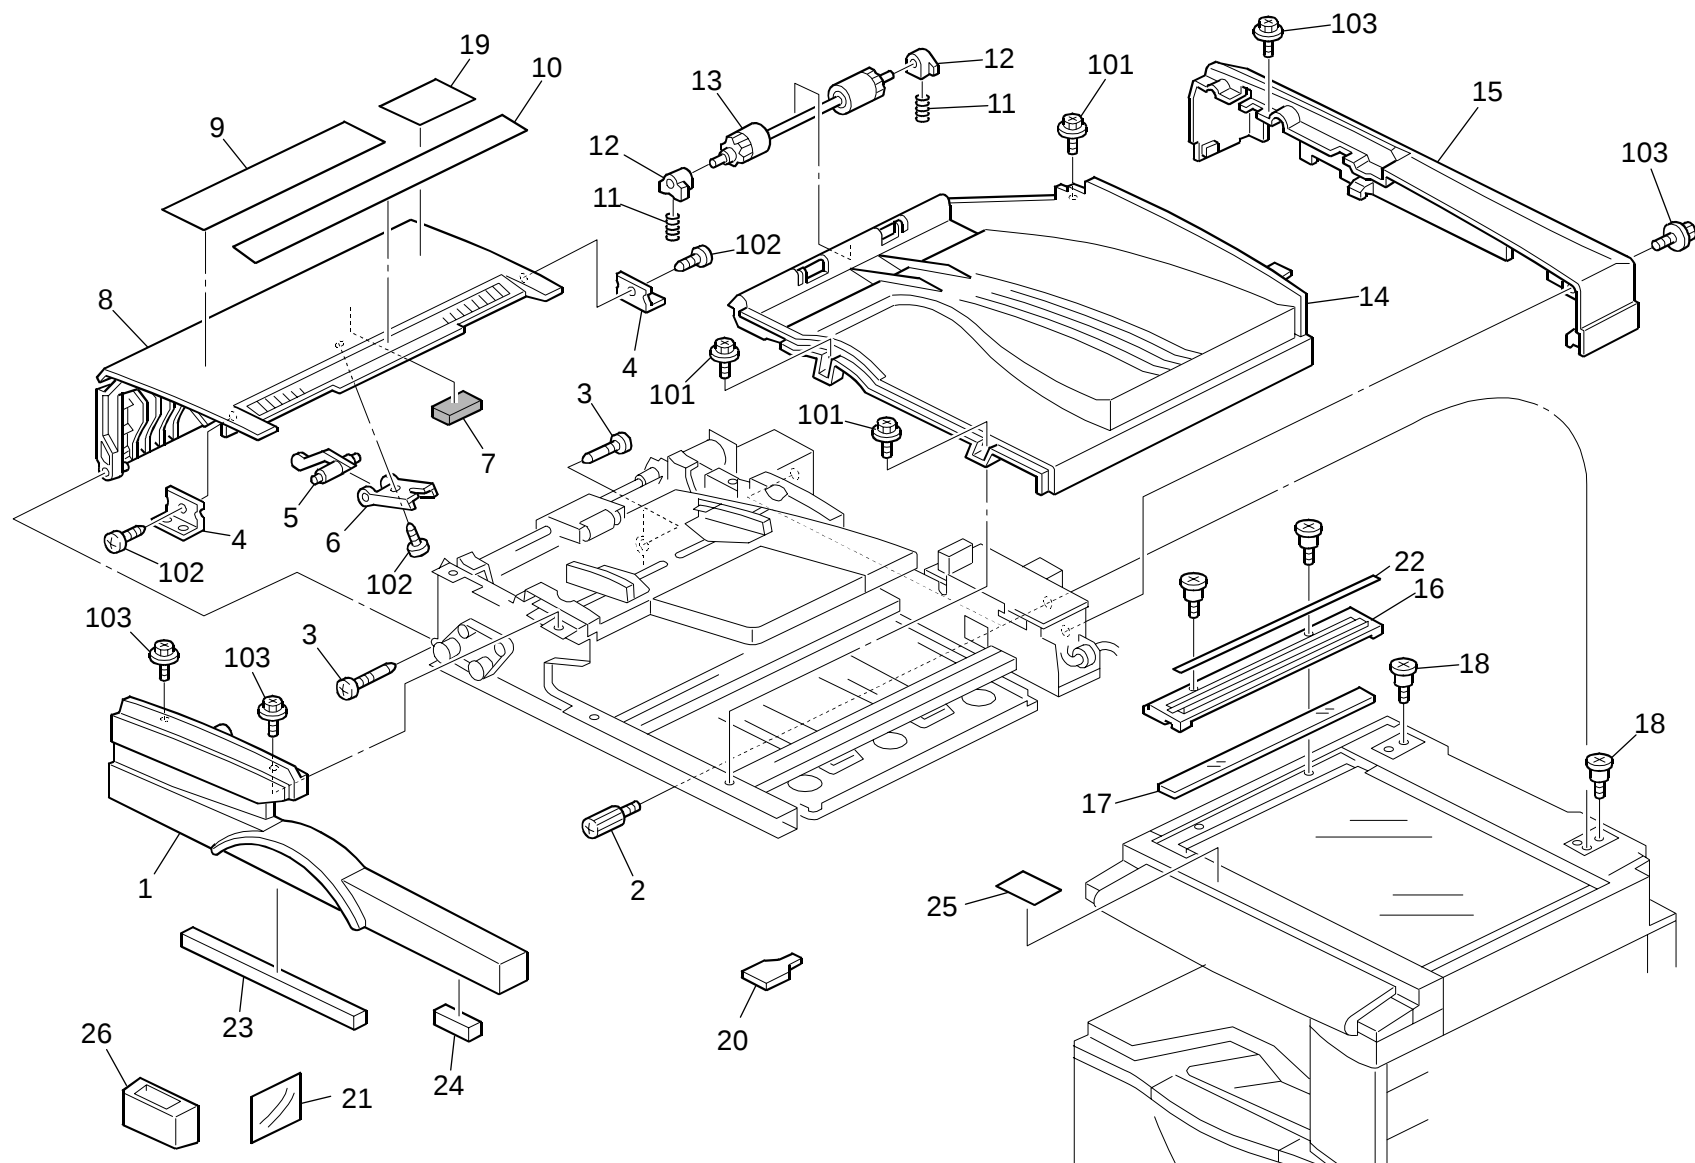


1.ARDF 1 (B810)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B386 4811	Front Cover	1
2	A628 3115	Knob Screw - M4	1
3	AA14 3788	Pin:Guide Plate:Paper Feed	2
4	B386 4873	Positioning Plate	2
5	A859 4871	Original Sensor Feeler	1
6	A859 4872	Feeler Bracket	1
7	A859 4881	Cushion Paper Feed	1
8	B386 4842	Left Cover	1
9	B386 6014	Decal - Removal Misfeed	1
10	B387 6021	Size Indication Decal	1
11	AA06 3311	Transport Roller Spring	2
12	A859 4836	Bushing - Exit Driven Roller	2
13	A859 4837	Exit Driven Roller	1
14	B386 4871	Upper Cover	1
15	B386 4821	Rear Cover	1
16	B386 7102	Original Scale	1
17	BC01 2001	Exposure Glass:Sheet Through:332x14	1
18	A859 7211	Stepped Screw	2
19	G564 6077	Decal:Exposuer Glass:5-Lang	1
20	B386 3118	Standard Screw Driver:Document Feeder	1
21	B065 1374	Cloth - DF Exposure Glass	1
22	B387 6053	Original Scale Decal - A4	1
22	B387 6054	Original Scale Decal - LT	1
23	B386 4874	Sponge:Cover:Front	1
24	B386 4872	Sponge:Cover:Front Right	1
25	G564 6087	Decal:Exposure Glass:Machine Or Cop	1
26	B065 1371	Holder:Exposuer Glass:Ass'y	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0452 3008N	Tapping Screw - M3x8	
103	0451 3008N	Tapping Screw - M3x8	

2.ARDF 2 (B810)

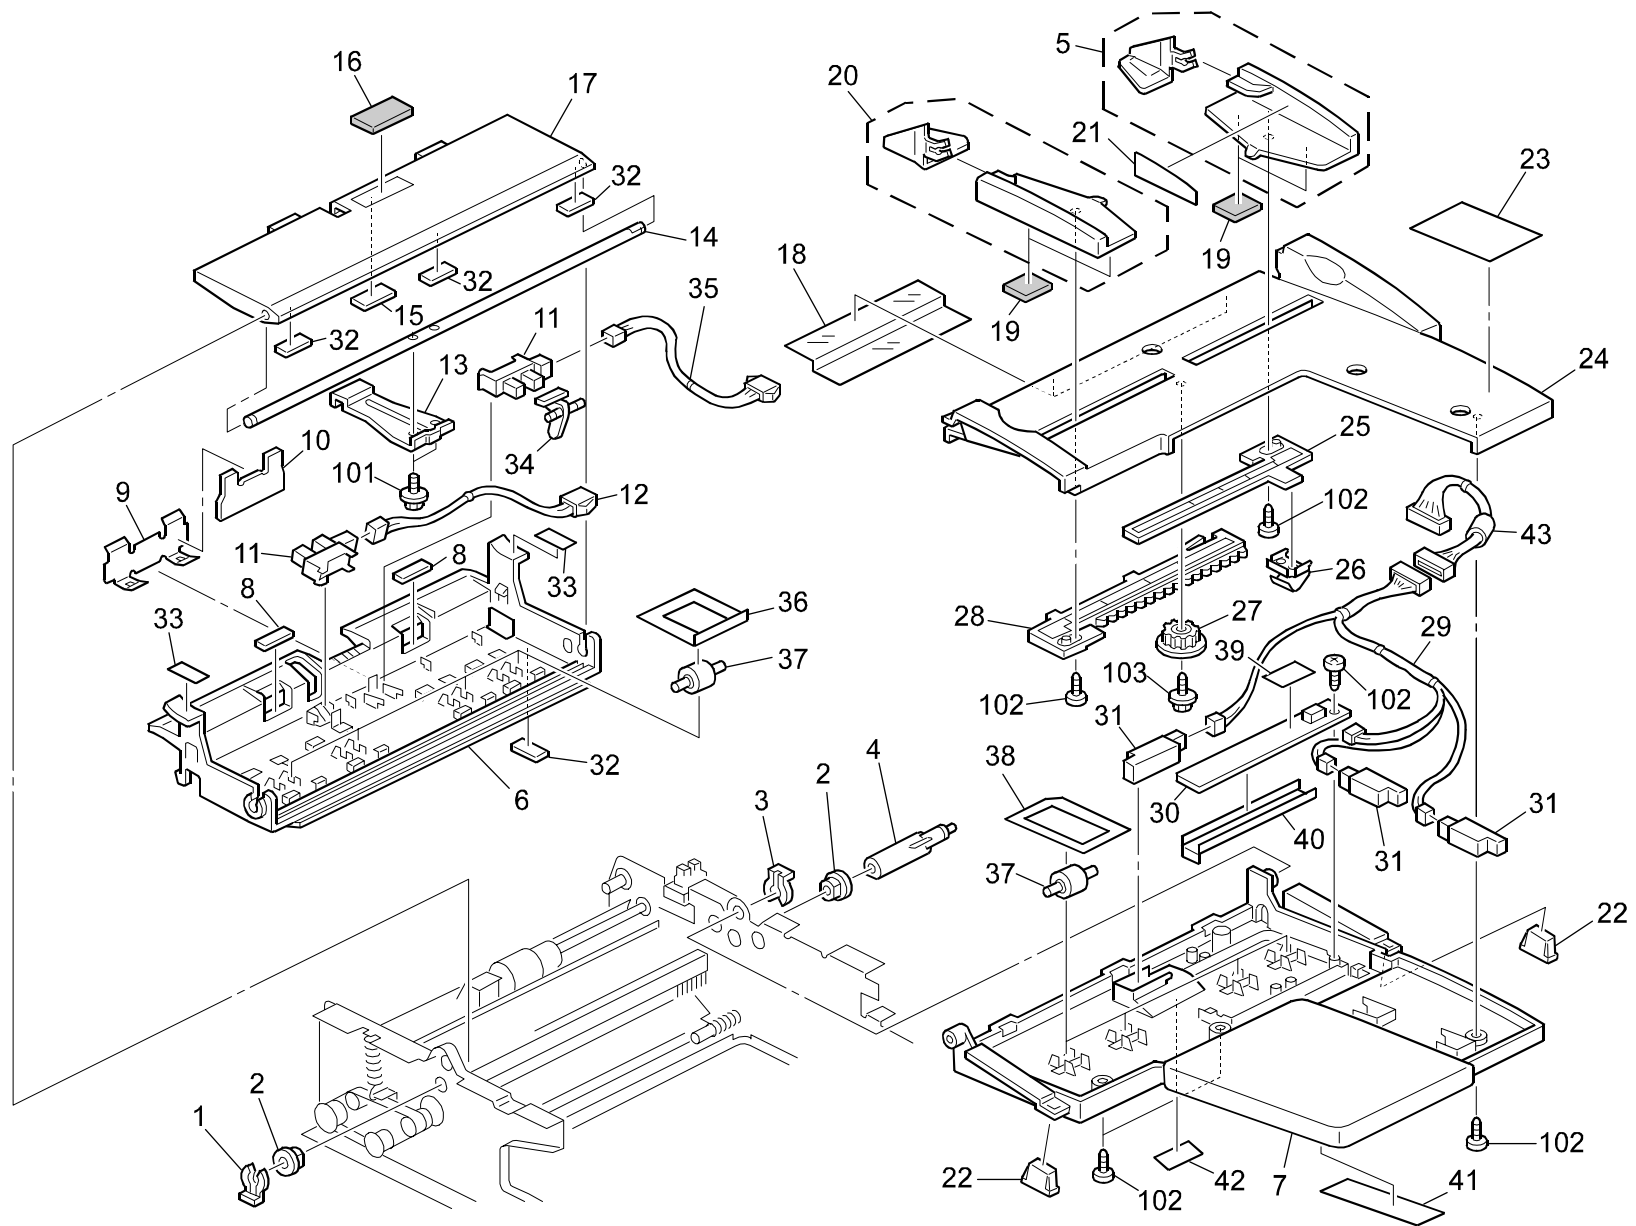


2.ARDF 2 (B810)

Index No.	Part No.	Description	Q'ty Per Assembly
1	5447 2681	Snap Ring	1
2	H060 2126	Bushing - M6x7	2
3	5215 2621	Snap Ring - M6	1
4	A859 2355	Pressure Plate Lever	1
5	B386 4720	Rear Side Fence	1
6	A859 2311	Guide Plate - Paper Feed	1
7	B810 4630	Paper Tray:Behind:Alps-F	1
8	A859 2319	Base Cushion	2
9	A859 2317	Guide - Separation Pad	1
10	A859 2315	Separation Pad	1
11	AW02 0141	Photointerruptor	2
12	B617 5705	Sensor Relay Harness	1
13	B386 2353	Pressure Plate - Base	1
14	A859 2354	Base Shaft	1
15	A859 4876	Left Cushion	1
16	A859 2352	Pressure Plate Pad	1
17	B386 2351	Original Feed Plate	1
18	A858 4681	Sheet - Paper Tray	2
19	A351 4951	Guide Pad - Side Fence	2
20	B386 4710	Front Side Fence	1
21	B386 6043	Decal - Side Fence	1
22	G012 1531	Magnet	2
23	B387 6033	Decal - Original Table	1
24	B386 4621	Upper Original Table	1
25	A859 4662	Rack - Rear Side Fence	1
26	A859 4663	Electrode Plate - Side Fence	1
27	A859 4665	Gear - 16Z	1
28	A859 4661	Rack - Front Side Fence	1
29	B617 5715	Harness - Original Tray	1
30	B386 5550	Paper Size Sensor Board	1
31	AW01 0112	Photo Refiection Sensor:Original Table	3
32	A859 2356	Base Bottom Cushion	4
33	A858 6022	Decal - Blue	2
34	A858 2319	Reverse Sensor Feeler	1
35	B617 5706	Harness - Reverse Sensor	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	A858 2313	Spring Plate - Pressure Roller	4
37	A858 4671	Roller Driven	8
38	A858 4676	Spring Plate - Pressure Roller	4
39	A859 4664	Sheet - Paper Size Sensor Board	1
40	B386 4693	Mylar Seal	1
41	B386 4691	Mylar Seal - 28x107	1
42	B386 4692	Mylar Seal - 16x45	1
43	B386 5713	Harness:Original Tray:Connecting	1
101	0451 3006N	Tapping Screw - 3x6	
102	0452 3008N	Tapping Screw - M3x8	
103	0450 3008N	Tapping Screw - M3x8	

3.ARDF 3 (B810)

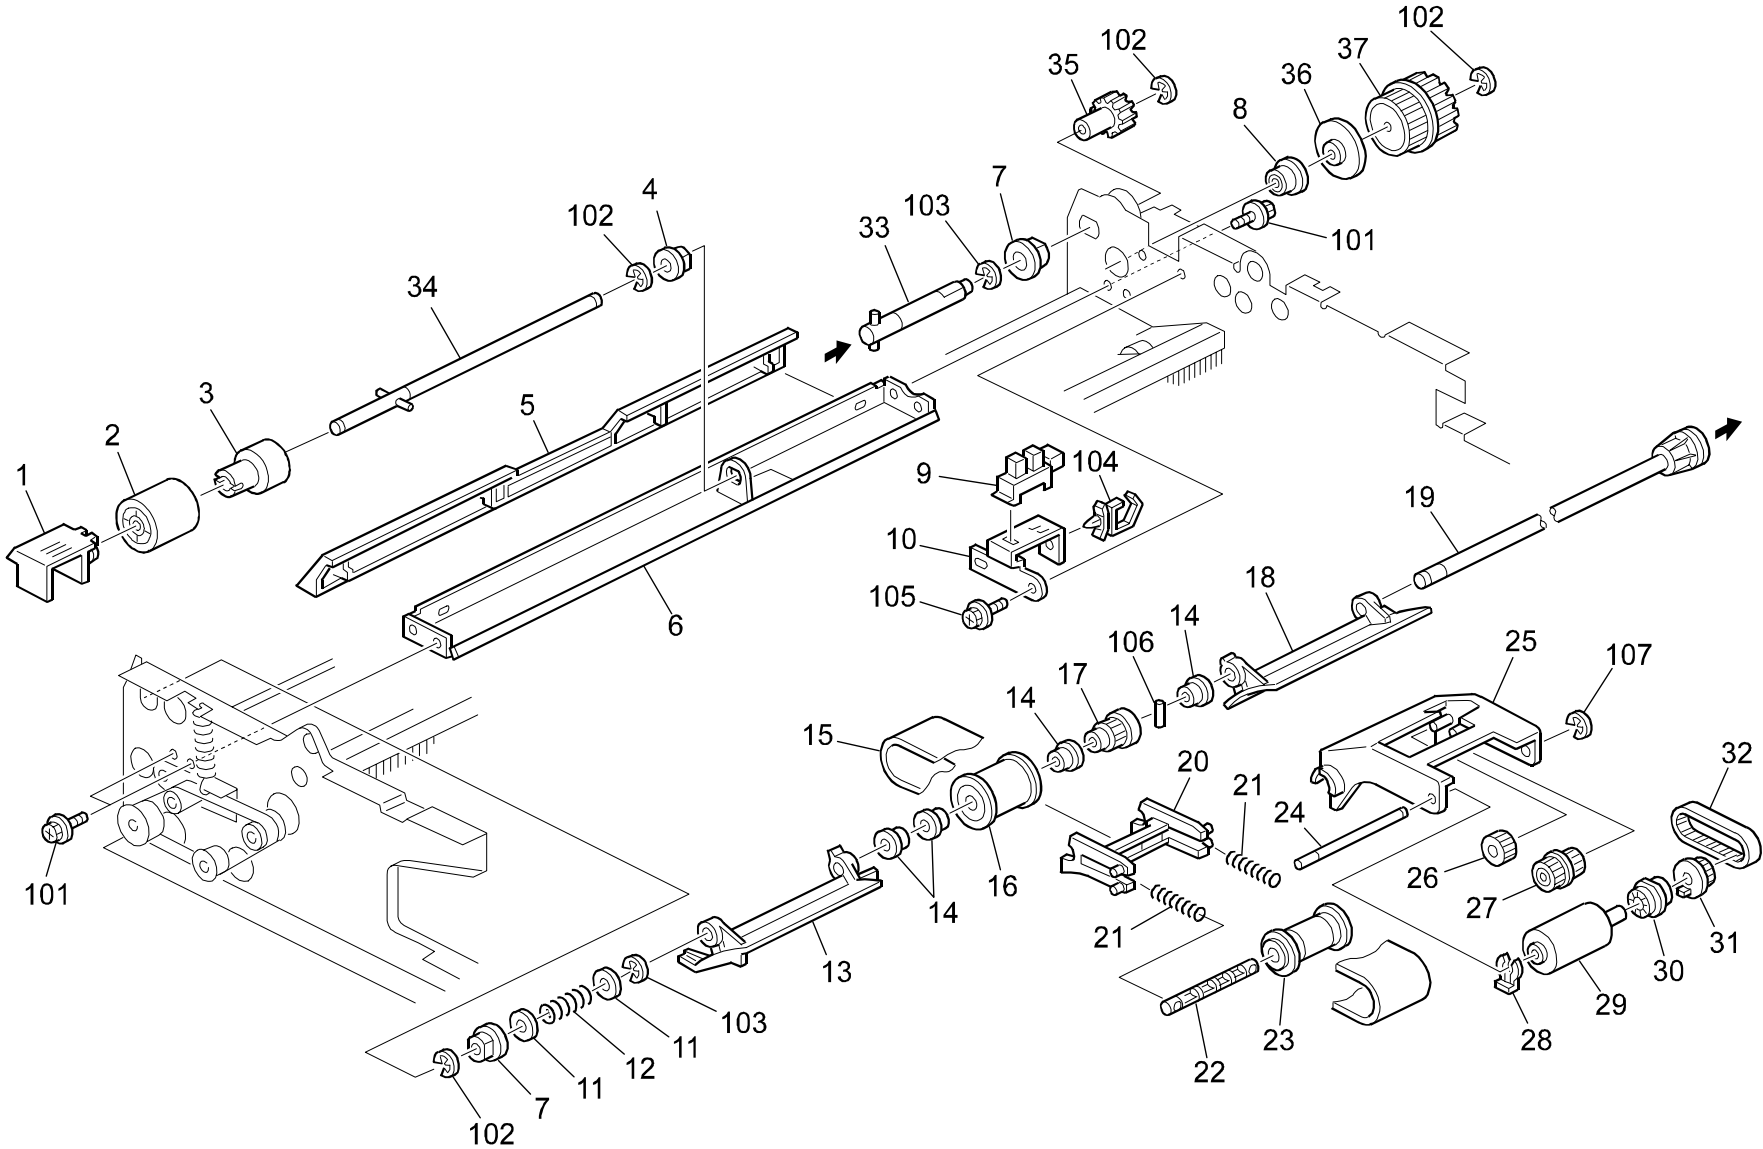


3.ARDF 3 (B810)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A859 2220	Reverse Roller Cover	1
2	A859 2241	Reverse Roller	1
3	A294 6700	Torque Limiter - 53mnm	1
4	5053 0447	Bushing - 6mm	1
5	A859 1621	Separation Guide	1
6	B386 1610	Separation Stay	1
7	5304 1639	Bushing - 8mm	2
8	A859 2230	Ball Bearing - 6x13x5	1
9	AW02 0141	Photointerruptor	1
10	B386 1129	Bracket:Sensor:Right:On Off Detector	1
11	AA13 2013	Spacer	2
12	AA06 3435	Compression Spring:Paper Feed:Joint	1
13	A859 2132	Front Guide - Paper Feed	1
14	A628 1225	Bushing - 8mm	4
15	A859 2141	Belt Paper Feed	1
16	A859 2114	Drive Roller - Paper Feed Belt	1
17	A859 2121	Gear - 22Z	1
18	A859 2131	Rear Guide - Paper Feed	1
19	A859 2120	Drive Shaft - Paper Feed Belt	1
20	A859 2110	Belt Holder	1
21	AA06 3320	Compression Spring:Oil Ssupply Rroller	2
22	A859 2112	Drive Shaft - Paper Feed Belt	1
23	B387 2113	Roller - Paper Feed Belt	1
24	G412 3821	Pick-up Roller Shaft	1
25	G412 3821	Holder - Pick Up	1
26	A859 2167	Gear - 22Z	1
27	G412 3831	Pulley - 22Z	1
28	5206 2686	Snap Ring	1
29	B386 2171	Pickup Roller	1
30	A859 2163	Pick-up Collar	1
31	A859 2164	Pulley - 2Z	1
32	A859 2166	Timing Belt - 2XL	1
33	A859 4216	Shaft Electromagnetic Clutch	1
34	A859 2210	Reverse Roller Shaft	1
35	A858 4231	Gear - 20Z	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	A859 4222	Pulley Flange	1
37	A858 4221	Gear - 31Z	1
101	0802 5276	Tapping Screw With Washer - M3x6	
102	0720 0040E	Retaining Ring - M4	
103	0720 0060E	Retaining Ring - M6	
104	1105 0310	Harness Clamp - LWS-1S	
105	0451 3006N	Tapping Screw - 3x6	
106	0632 0100	Parallel Pin - M2x10	
107	0720 0030E	Retaining Ring - M3	

4.ARDF 4 (B810)

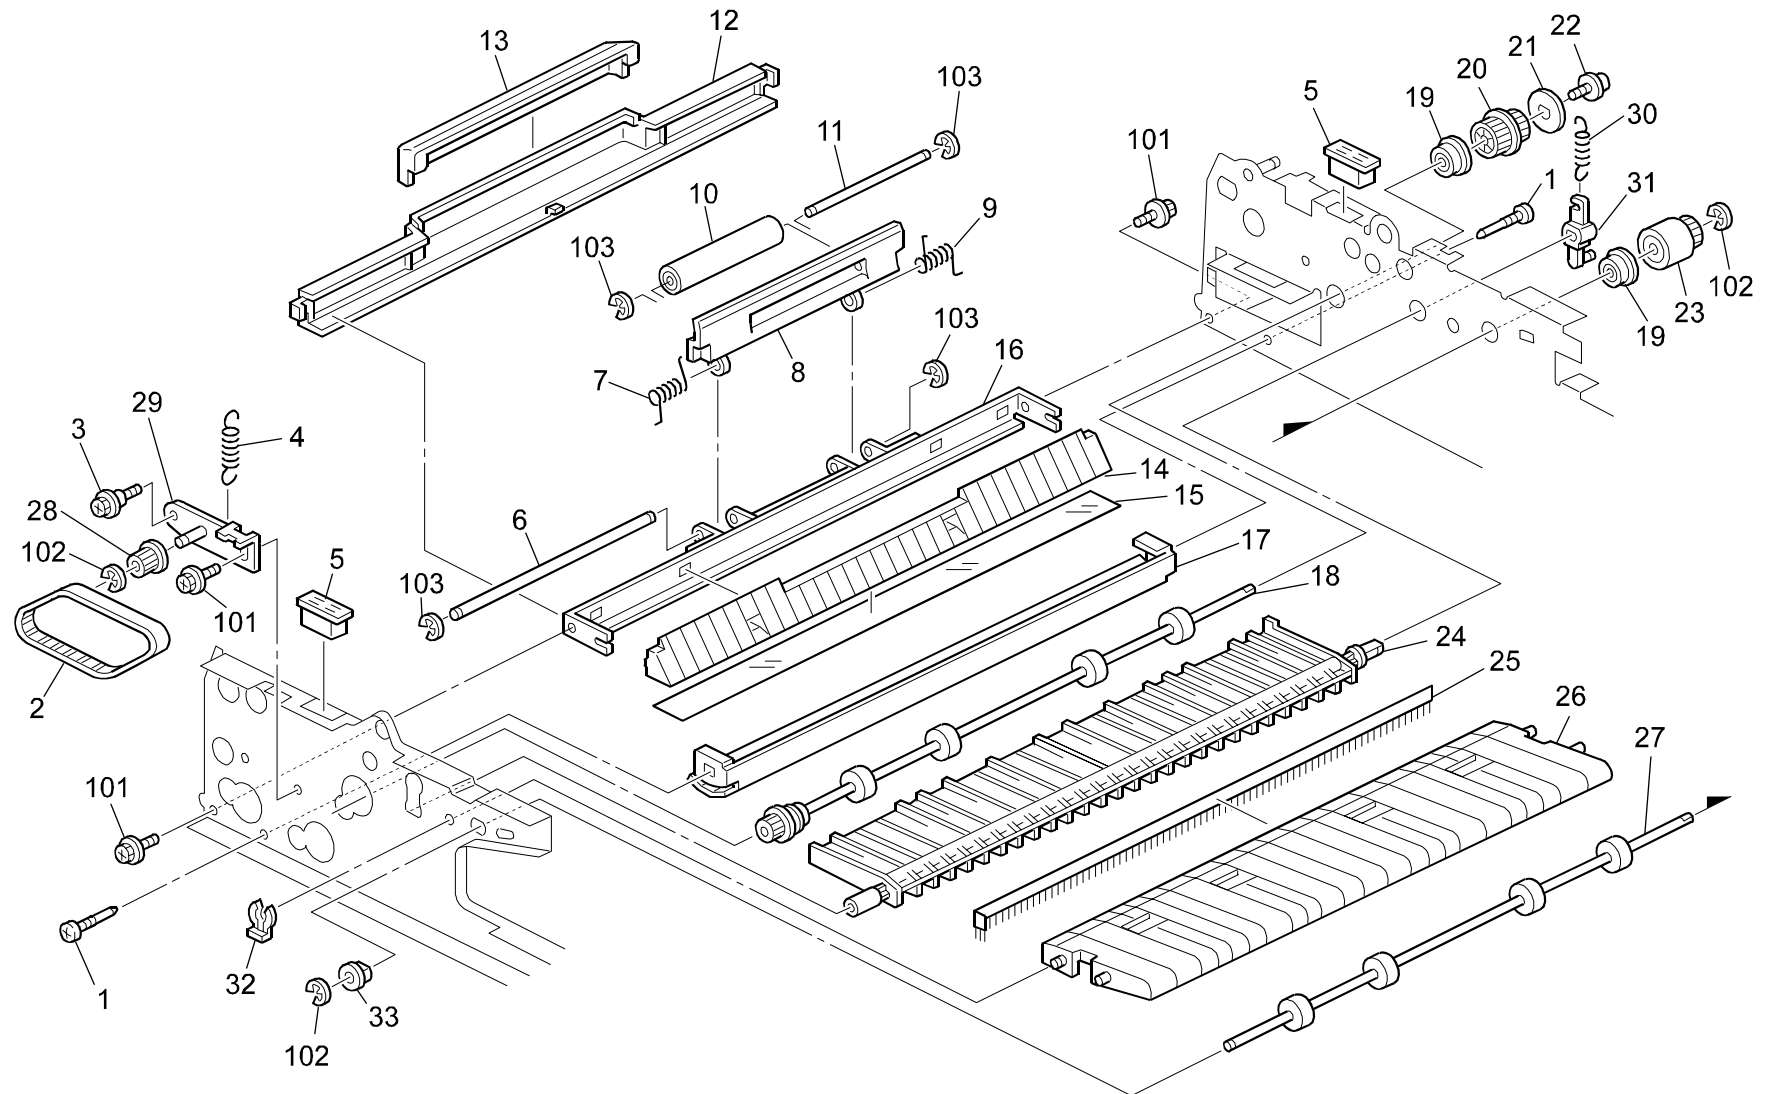


4.ARDF 4 (B810)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA14 3788	Pin:Guide Plate:Paper Feed	2
2	A859 4331	Timing Belt - 2XL	1
3	AA14 3790	Screw:Contact Point	1
4	A859 4341	Tension Spring	1
5	AG07 0513	Magnet Catch:Original Table:25.5N	2
6	A859 3317	Contact Point Shaft	1
7	B386 3322	Trosion Spring:Pressure:Front:20N	1
8	A859 3316	Pullout Lever	1
9	B386 3321	Trosion Spring:Pressure:Rear:20N	1
10	B386 3387	Roller:Driven:Transport Roller:Middle	1
11	A859 3313	Pressure Driven Shaft	1
12	B386 4881	Left Lower Cover	1
13	B386 4856	Cover - Transport Driven Roller	1
14	A859 1723	Left Lower Guide	1
15	G412 3611	Guide Mylar	1
16	B386 1710	Left Lower Stay	1
17	B386 3513	Guide:Exposure Glass	1
18	B386 3130	Exit Drive Roller	1
19	A859 2230	Ball Bearing - 6x13x5	2
20	A859 4271	Pulley - 31/32Z	1
21	A859 4272	Flange	1
22	B386 2214	Screw:M3x5	1
23	A858 4392	Torque Limiter	1
24	A858 3710	Exchange Reverse Powl	1
25	A859 3225	Discharge Brush	1
26	B386 4861	Reverse Tray	1
27	B386 3140	Reverse Drive Roller	1
28	A859 4321	Pulley-20z	1
29	B386 4311	Adjusting Pin - M6	1
30	A858 3717	Tension Spring - Exchange Powl	1
31	A858 3715	Exchange Powl Lever	1
32	5447 2681	Snap Ring	1
33	5053 0447	Bushing - 6mm	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0720 0040E	Retaining Ring - M4	
103	0720 0030E	Retaining Ring - M3	

5.ARDF 5 (B810)

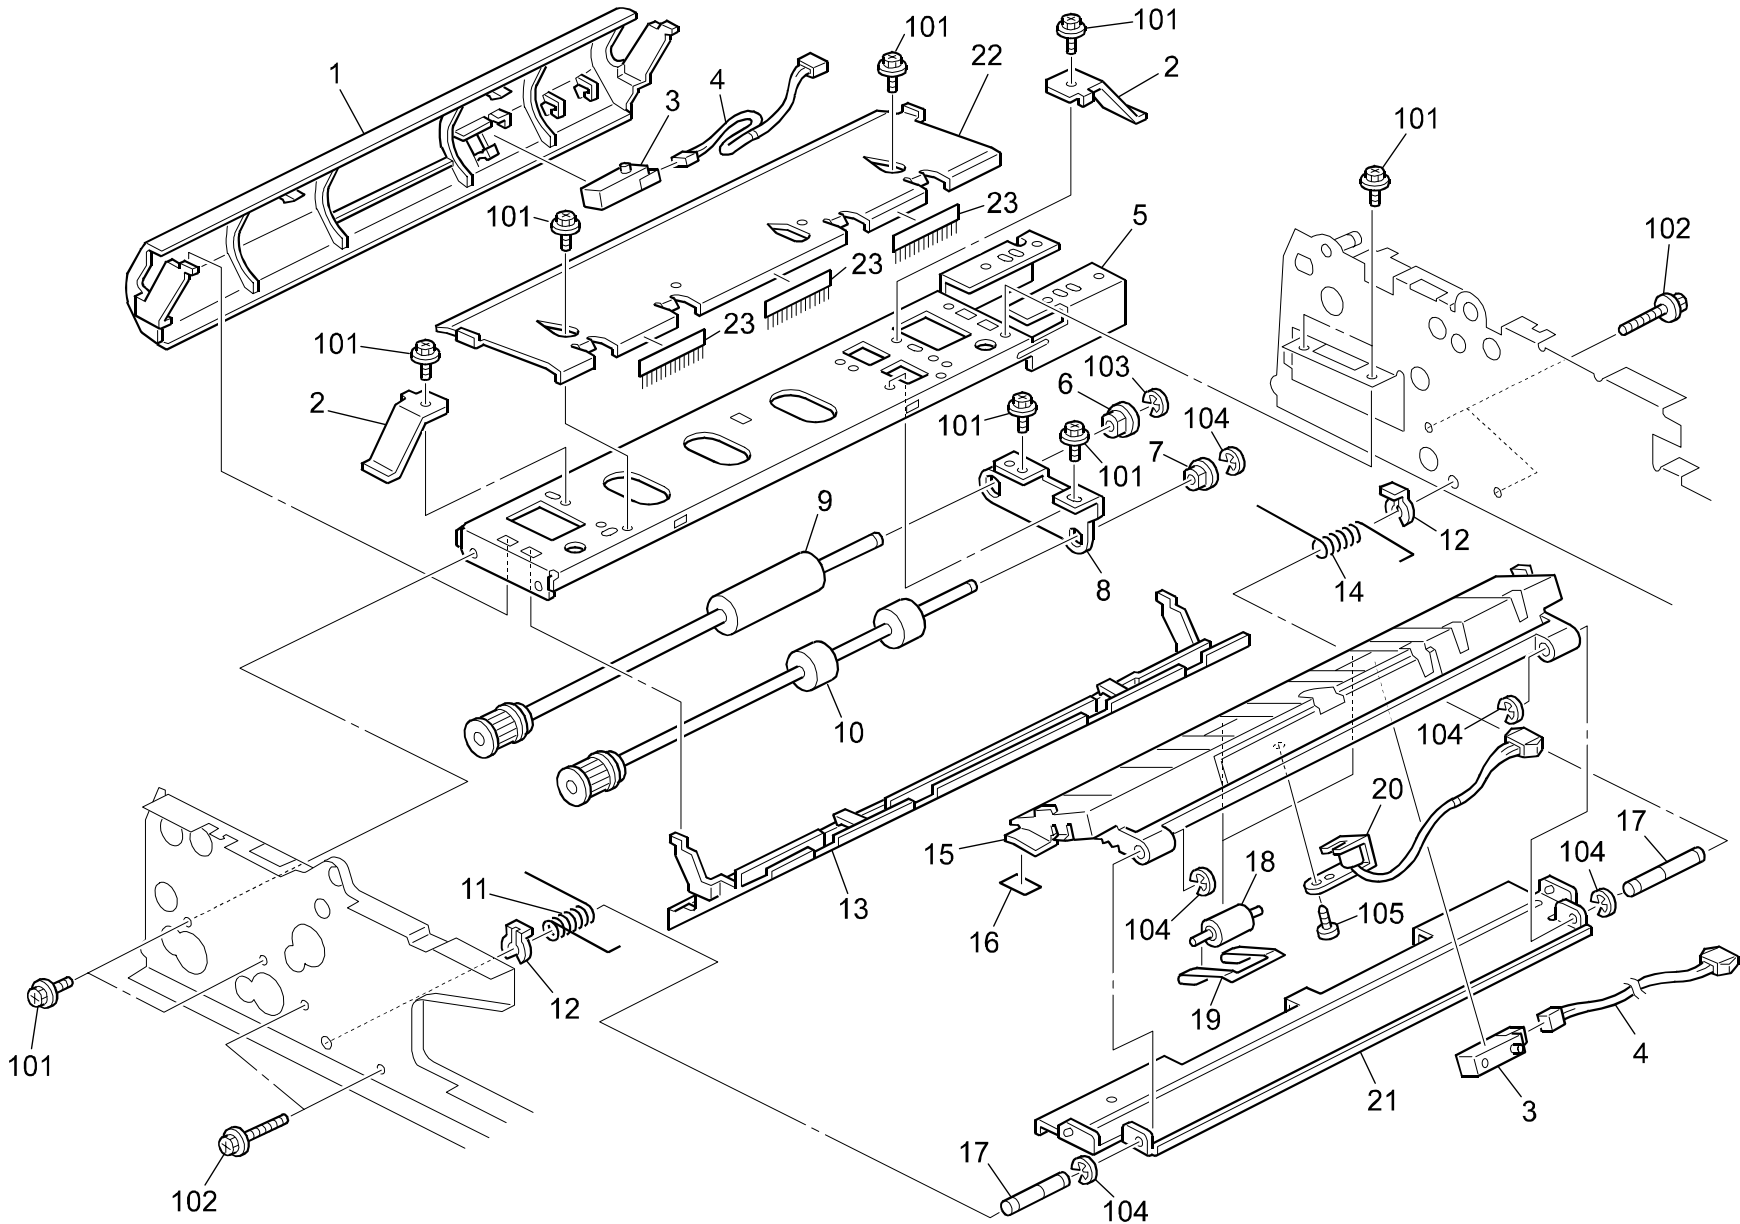


5.ARDF 5 (B810)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A859 3210	Guide Plate - Transport Roller	1
2	B386 1322	Spring Plate Guide	2
3	AW01 0109	Photo Refiection Sensor:PS117ED1	2
4	B617 5705	Sensor Relay Harness	2
5	B386 1311	Left Stay	1
6	5304 1639	Bushing - 8mm	1
7	5053 0447	Bushing - 6mm	1
8	B386 1320	Bracket - Transport Roller	1
9	A859 3110	Transport Roller	1
10	B386 3121	Middle Transport Roller	1
11	A859 3431	Front Spring	1
12	AA14 3788	Pin:Guide Plate:Paper Feed	2
13	A859 3220	Guide Plate - Upper Exit	1
14	A859 3430	Rear Spring	1
15	A859 3411	Exit Guide Plate	1
16	A859 6023	Decal Green	1
17	A859 3412	Shaft - Exit Guide Plate	2
18	B386 3389	Roller:Driven:Middle:EP35	2
19	A859 3425	Spring Plate	2
20	B714 5006	DC Solenoid:Transmitted Rubber Stamp	1
21	B386 3413	Cover - Exit Guide Plate	1
22	B386 3234	Guide Plate:Reverse:Ass'y	1
23	B386 3236	Discharge Brush - I50	3

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3X6	
102	0451 4014N	Tapping Screw:M4x14	
103	0720 0060E	Retaining Ring - M6	
104	0720 0040E	Retaining Ring - M4	
105	0452 3008N	Tapping Screw - M3x8	


6.ARDF 6 (B810)

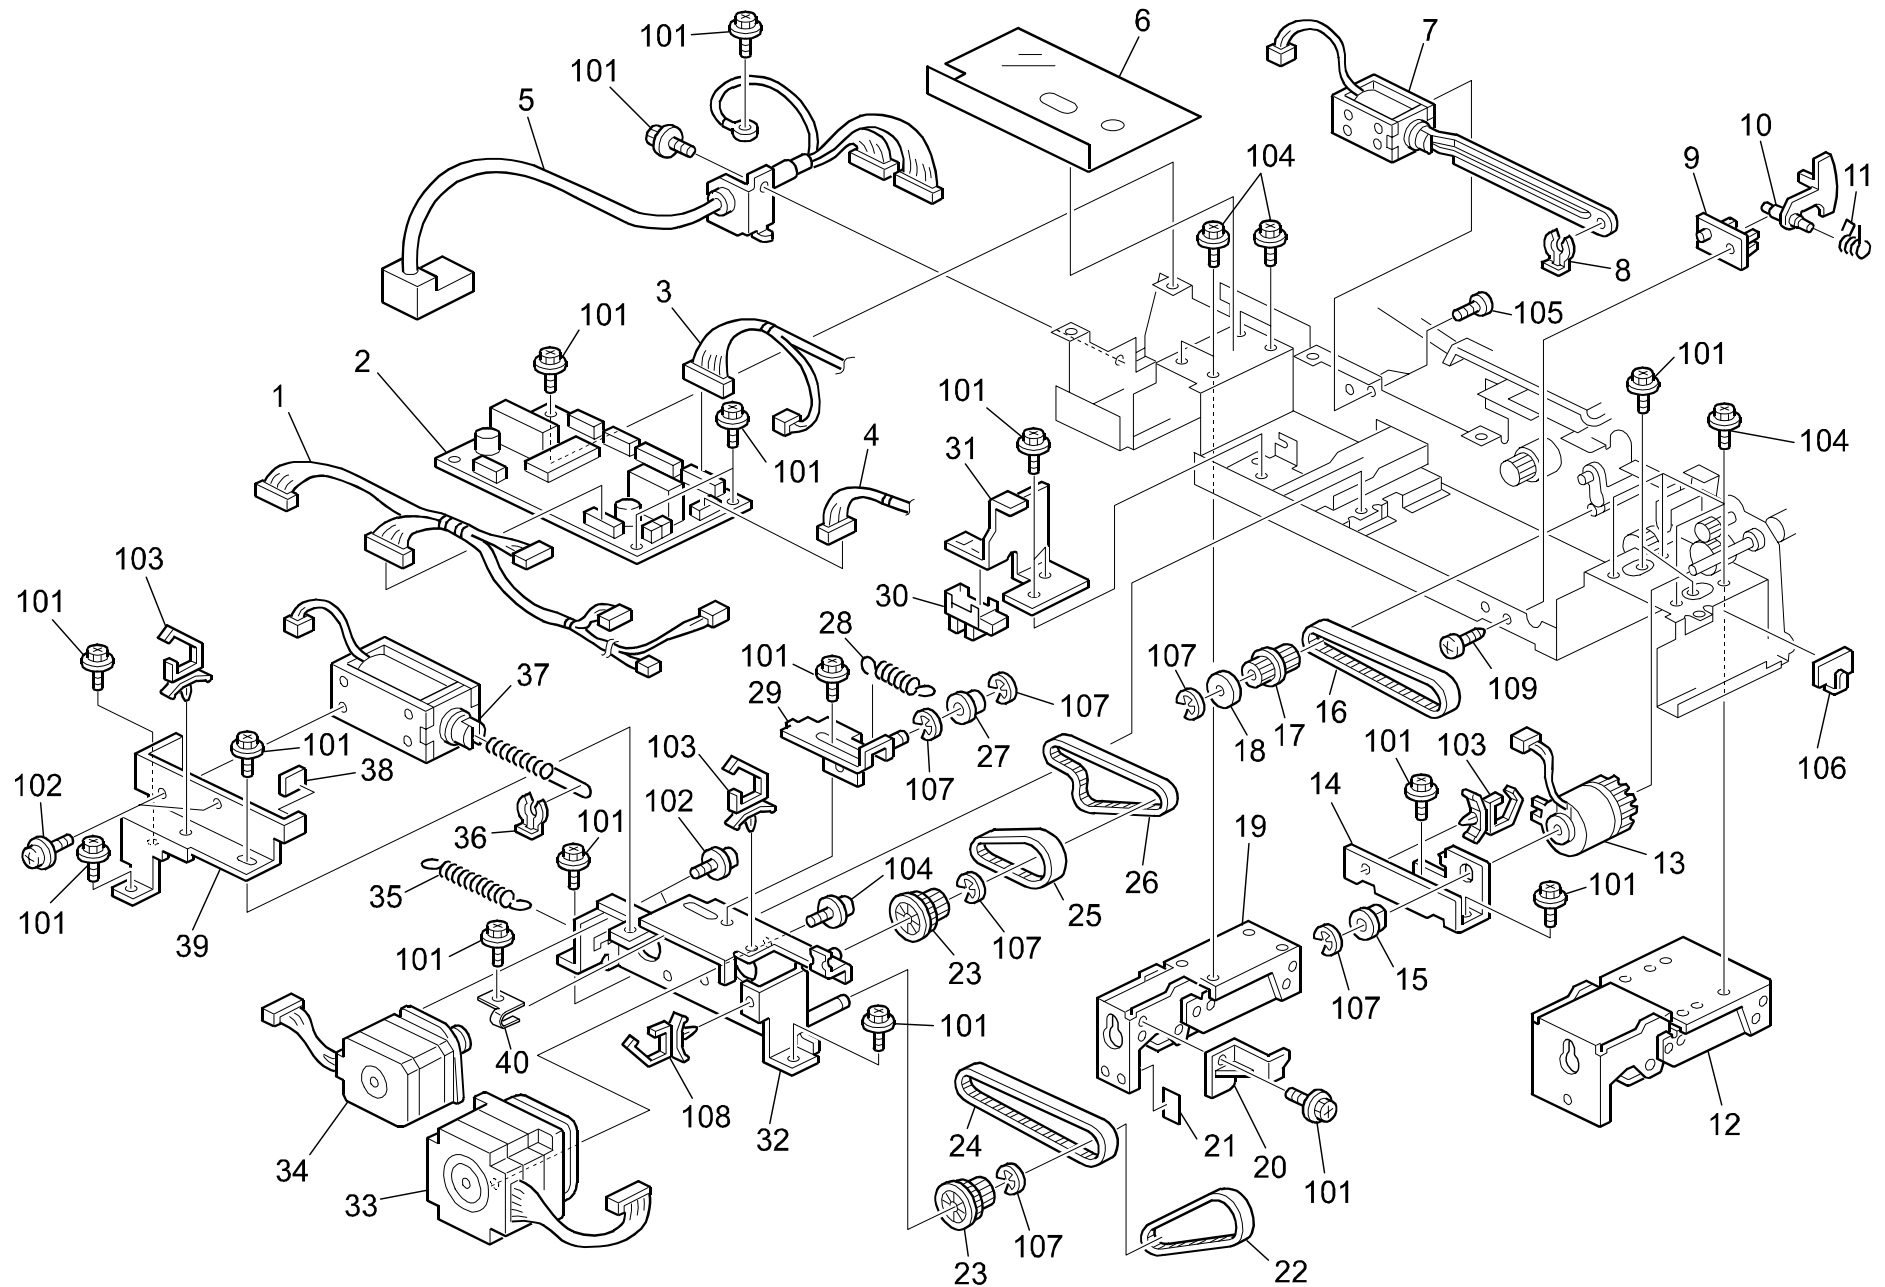

Index No.	Part No.	Description	Q'ty Per Assembly
1	B386 5704	Harness:Stepper Motor:Ass'y	1
2	B386 5570	PCB:Main Control	1
3	B386 5700	Harness:Sensor:Main	1
4	B386 5701	Harness:Sensor:Exit:Connecting	1
5	B386 5810	Harness:Interface	1
6	A859 1131	Insulating Sheet	1
7	A858 4431	DC Solenoid - 24V	1
8	5447 2681	Snap Ring	1
9	B386 1125	APS Feeler Bracket	1
10	B386 1121	APS Feeler	1
11	B387 1951	Spring - Paper Size Sensor	1
12	B386 1812	Hinge:Left:Ass'y	1
13	AX21 0092	Magnetic Clutch:Z30	1
14	B386 1315	Bracket - Electromagnetic Clutch	1
15	5304 1639	Bushing - 8mm	1
16	A858 4261	Timing Belt - 2XL	1
17	B386 4251	Pulley - T20/T19	1
18	B386 4252	Flange - Mm16.5	1
19	B386 1832	Hinge:Right:Ass'y	1
20	A859 1841	Filler - DF Open Sensor	1
21	A334 4678	Rack Shield Mylar	1
22	B386 4161	Timing Belt - B40S2M158	1
23	B386 1884	Pulley - T20/T37	2
24	B386 4181	Timing Belt - B60S2M198	1
25	AA04 3929	Timing Belt - B40S2M114	1
26	B386 4191	Timing Belt - B40S2M254	1
27	A859 4141	Pulley Idler	1
28	A858 4134	Idler Tension Spring	1
29	B386 4131	Idler Adjusting Pin	1
30	AW02 0141	Photointerruptor	1
31	B386 1122	Right Sensor Bracket	1
32	B386 4111	Stepper Motor Bracket	1
33	B386 4122	Stepper Motor:Paper Feed:Ass'y	1
34	B386 4152	Stepper Motor:Transport:Ass'Y	1
35	A859 4197	Tension Spring - Motor	1

13

7.ARDF 7 (B810)

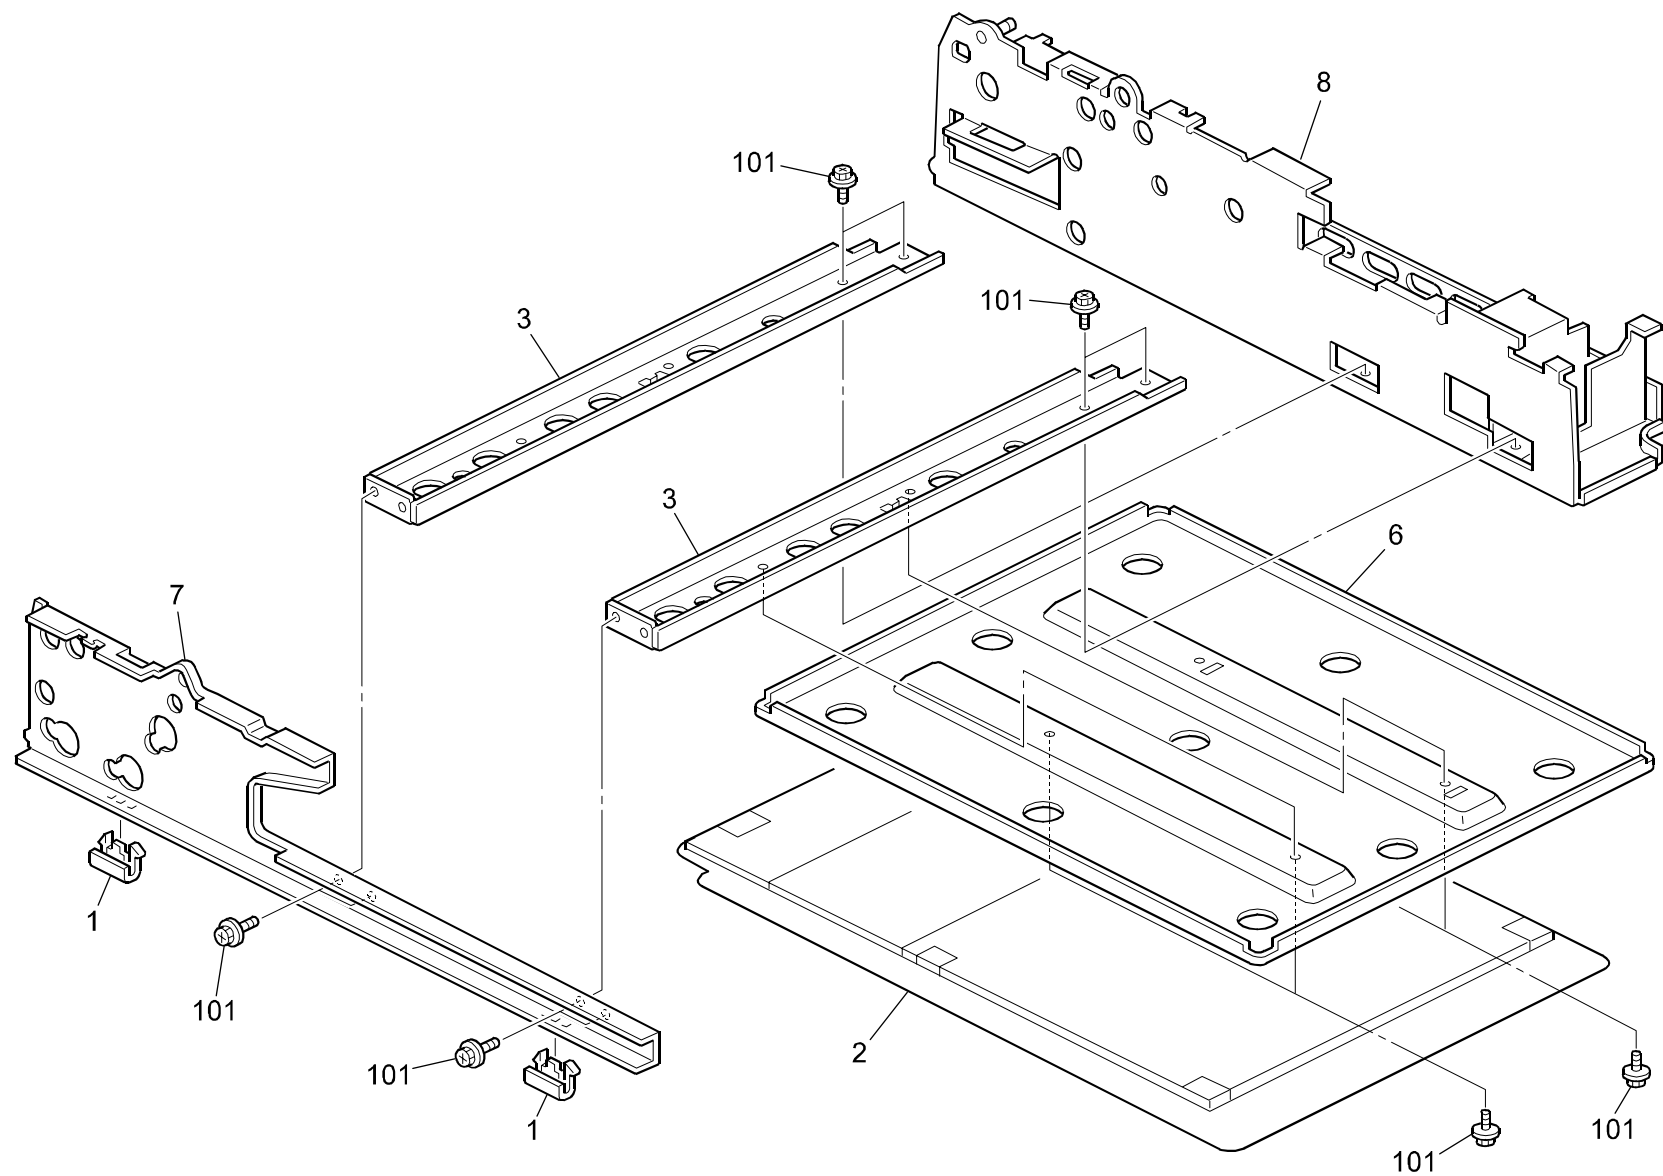


7.ARDF 7 (B810)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A859 1221	Spacer	2
2	B386 3634	Sheet:Ass'y	1
3	B386 1511	Middle Stay	2
4	B386 3625	Sponge:Pressuer Plate:Left	1
5	B386 1110	Rear Side Plate	1
6	B386 3615	Base - Platen Cover	1
7	B386 1211	Front Side Plate	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	

8.Decals And Documents (B810)

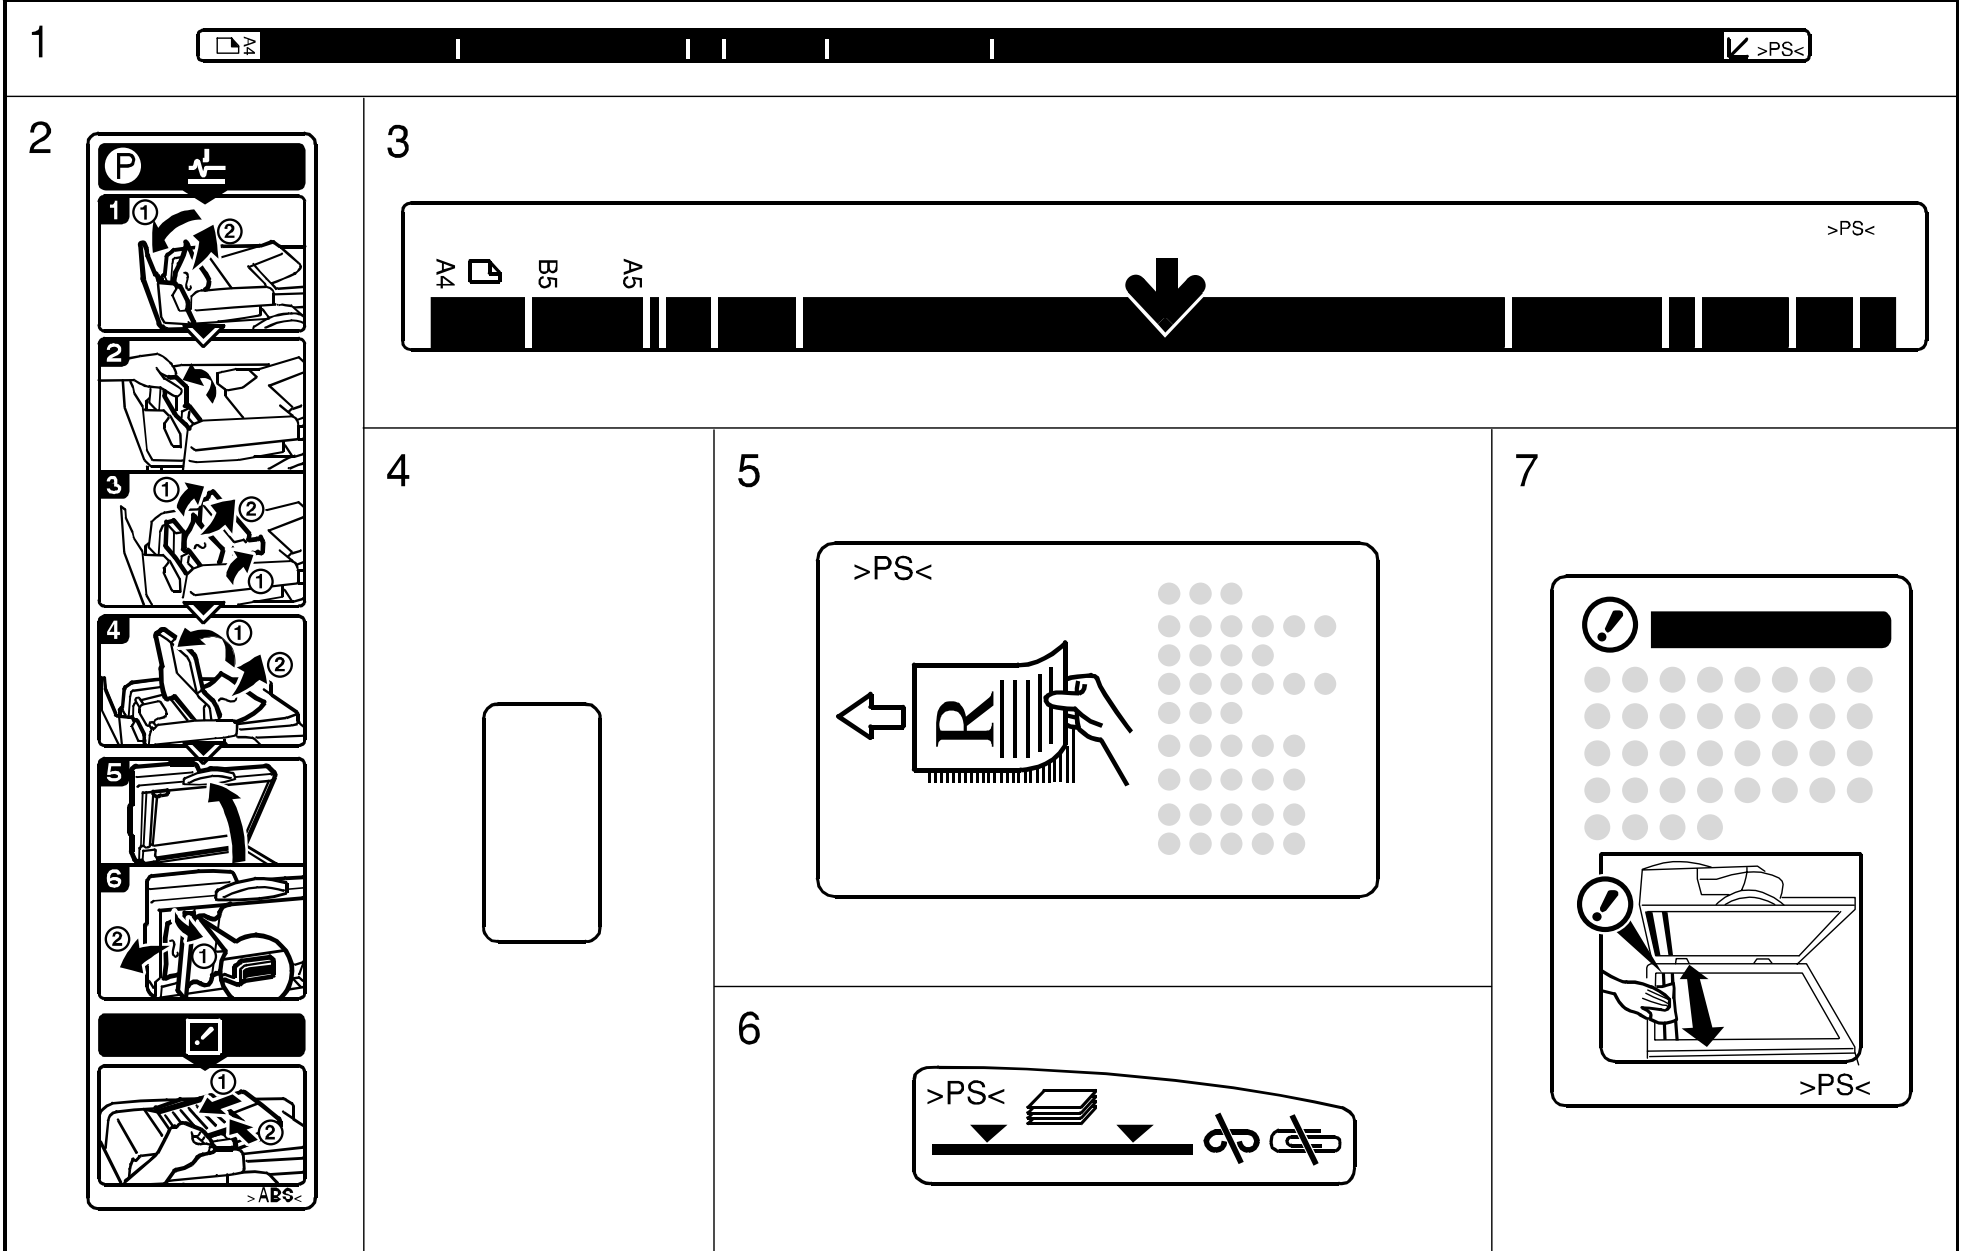

8.Decals And Documents (B810)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B387 6053	Original Scale Decal - A4	1
1	B387 6054	Original Scale Decal - LT	1
2	B386 6014	Decal - Removal Misfeed	1
3	B387 6021	Size Indication Decal	1
4	A858 6022	Decal Blue	1
4	A859 6023	Decal Green	1
5	B387 6033	Decal - Original Table	1
6	B386 6043	Decal - Side Fence	1
7	G564 6076	Exposure Glass Decal	1

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

PM Parts Index

Section Name	Part No.	Description in Service Manual	Description in Parts Catalog	Q'ty Per Assembly	Page and Index No.
ARDF 3 (B810)	A859 2241	Reverse Roller	Reverse Roller	1	7 - 2
ARDF 3 (B810)	A859 2141	Belt Paper Feed	Belt Paper Feed	1	7 - 15
ARDF 3 (B810)	B386 2171	Pickup Roller	Pickup Roller	1	7 - 29

Parts Index

Part No.	Description	Page and Index No.
B810 4630	Paper Tray:Behind:Alps-F	5 - 7

Part No.	Description	Page and Index No.
A028 3264	Stopper Cushion	13 - 38
A294 6700	Torque Limiter - 53mnm	7 - 3
A334 4678	Rack Shield Mylar	13 - 21
A351 4951	Guide Pad - Side Fence	5 - 19
A628 1225	Bushing - 8mm	7 - 14
A628 3115	Knob Screw - M4	3 - 2
A858 2313	Spring Plate - Pressure Roller	5 - 36
A858 2319	Reverse Sensor Feeler	5 - 34
A858 3710	Exchange Reverse Powl	9 - 24
A858 3715	Exchange Powl Lever	9 - 31
A858 3717	Tension Spring - Exchange Powl	9 - 30
A858 4134	Idler Tension Spring	13 - 28
A858 4221	Gear - 31Z	7 - 37
A858 4231	Gear - 20Z	7 - 35
A858 4261	Timing Belt - 2XL	13 - 16
A858 4392	Torque Limiter	9 - 23
A858 4431	DC Solenoid - 24V	13 - 7
A858 4671	Roller Driven	5 - 37
A858 4676	Spring Plate - Pressure Roller	5 - 38
A858 4681	Sheet - Paper Tray	5 - 18
A858 6022	Decal Blue	17 - 4
A858 6022	Decal - Blue	5 - 33
A859 1131	Insulating Sheet	13 - 6
A859 1221	Spacer	15 - 1
A859 1621	Separation Guide	7 - 5
A859 1723	Left Lower Guide	9 - 14
A859 1841	Filler - DF Open Sensor	13 - 20
A859 2110	Belt Holder	7 - 20
A859 2112	Drive Shaft - Paper Feed Belt	7 - 22
A859 2114	Drive Roller - Paper Feed Belt	7 - 16
A859 2120	Drive Shaft - Paper Feed Belt	7 - 19
A859 2121	Gear - 22Z	7 - 17
A859 2131	Rear Guide - Paper Feed	7 - 18
A859 2132	Front Guide - Paper Feed	7 - 13
A859 2141	Belt Paper Feed	7 - 15

Part No.	Description	Page and Index No.
A859 2163	Pick-up Collar	7 - 30
A859 2164	Pulley - 2Z	7 - 31
A859 2166	Timing Belt - 2XL	7 - 32
A859 2167	Gear - 22Z	7 - 26
A859 2210	Reverse Roller Shaft	7 - 34
A859 2220	Reverse Roller Cover	7 - 1
A859 2230	Ball Bearing - 6x13x5	7 - 8
A859 2230	Ball Bearing - 6x13x5	9 - 19
A859 2241	Reverse Roller	7 - 2
A859 2311	Guide Plate - Paper Feed	5 - 6
A859 2315	Separation Pad	5 - 10
A859 2317	Guide - Separation Pad	5 - 9
A859 2319	Base Cushion	5 - 8
A859 2352	Pressure Plate Pad	5 - 16
A859 2354	Base Shaft	5 - 14
A859 2355	Pressure Plate Lever	5 - 4
A859 2356	Base Bottom Cushion	5 - 32
A859 3110	Transport Roller	11 - 9
A859 3210	Guide Plate - Transport Roller	11 - 1
A859 3220	Guide Plate - Upper Exit	11 - 13
A859 3225	Discharge Brush	9 - 25
A859 3313	Pressure Driven Shaft	9 - 11
A859 3316	Pullout Lever	9 - 8
A859 3317	Contact Point Shaft	9 - 6
A859 3411	Exit Guide Plate	11 - 15
A859 3412	Shaft - Exit Guide Plate	11 - 17
A859 3425	Spring Plate	11 - 19
A859 3430	Rear Spring	11 - 14
A859 3431	Front Spring	11 - 11
A859 4141	Pulley Idler	13 - 27
A859 4197	Tension Spring - Motor	13 - 35
A859 4216	Shaft Electromagnetic Clutch	7 - 33
A859 4222	Pulley Flange	7 - 36
A859 4271	Pulley - 31/32Z	9 - 20
A859 4272	Flange	9 - 21

Part No.	Description	Page and Index No.
A859 4321	Pulley-20z	9 - 28
A859 4331	Timing Belt - 2XL	9 - 2
A859 4341	Tension Spring	9 - 4
A859 4661	Rack - Front Side Fence	5 - 28
A859 4662	Rack - Rear Side Fence	5 - 25
A859 4663	Electrode Plate - Side Fence	5 - 26
A859 4664	Sheet - Paper Size Sensor Board	5 - 39
A859 4665	Gear - 16Z	5 - 27
A859 4836	Bushing - Exit Driven Roller	3 - 12
A859 4837	Exit Driven Roller	3 - 13
A859 4871	Original Sensor Feeler	3 - 5
A859 4872	Feeler Bracket	3 - 6
A859 4876	Left Cushion	5 - 15
A859 4881	Cushion Paper Feed	3 - 7
A859 6023	Decal Green	11 - 16
A859 6023	Decal Green	17 - 4
A859 7211	Stepped Screw	3 - 18
B065 1371	Holder:Exposuer Glass:Ass'y	3 - 26
B065 1374	Cloth - DF Exposure Glass	3 - 21
B386 1110	Rear Side Plate	15 - 5
B386 1121	APS Feeler	13 - 10
B386 1122	Right Sensor Bracket	13 - 31
B386 1125	APS Feeler Bracket	13 - 9
B386 1129	Bracket:Sensor:Right:On Off Detector	7 - 10
B386 1211	Front Side Plate	15 - 7
B386 1311	Left Stay	11 - 5
B386 1315	Bracket - Electromagnetic Clutch	13 - 14
B386 1320	Bracket - Transport Roller	11 - 8
B386 1322	Spring Plate Guide	11 - 2
B386 1511	Middle Stay	15 - 3
B386 1610	Separation Stay	7 - 6
B386 1710	Left Lower Stay	9 - 16
B386 1812	Hinge:Left:Ass'y	13 - 12
B386 1832	Hinge:Right:Ass'y	13 - 19
B386 1884	Pulley - T20/T37	13 - 23

Part No.	Description	Page and Index No.
B386 2171	Pickup Roller	7 - 29
B386 2214	Screw:M3x5	9 - 22
B386 2351	Original Feed Plate	5 - 17
B386 2353	Pressure Plate - Base	5 - 13
B386 3118	Standard Screw Driver:Document Feeder	3 - 20
B386 3121	Middle Transport Roller	11 - 10
B386 3130	Exit Drive Roller	9 - 18
B386 3140	Reverse Drive Roller	9 - 27
B386 3234	Guide Plate:Reverse:Ass'y	11 - 22
B386 3236	Discharge Brush - I50	11 - 23
B386 3321	Trosion Spring:Pressure:Rear:20N	9 - 9
B386 3322	Trosion Spring:Pressure:Front:20N	9 - 7
B386 3387	Roller:Driven:Transport Roller:Middle	9 - 10
B386 3389	Roller:Driven:Middle:EP35	11 - 18
B386 3413	Cover - Exit Guide Plate	11 - 21
B386 3513	Guide:Exposure Glass	9 - 17
B386 3615	Base - Platen Cover	15 - 6
B386 3625	Sponge:Pressuer Plate:Left	15 - 4
B386 3634	Sheet:Ass'y	15 - 2
B386 4111	Stepper Motor Bracket	13 - 32
B386 4122	Stepper Motor:Paper Feed:Ass'y	13 - 33
B386 4131	Idler Adjusting Pin	13 - 29
B386 4141	Spring Plate - Stepper Motor	13 - 40
B386 4152	Stepper Motor:Transport:Ass'Y	13 - 34
B386 4161	Timing Belt - B40S2M158	13 - 22
B386 4181	Timing Belt - B60S2M198	13 - 24
B386 4191	Timing Belt - B40S2M254	13 - 26
B386 4251	Pulley - T20/T19	13 - 17
B386 4252	Flange - Mm16.5	13 - 18
B386 4311	Adjusting Pin - M6	9 - 29
B386 4411	Solenoid Bracket	13 - 39
B386 4421	DC Solenoid:Base:Ass'Y	13 - 37
B386 4621	Upper Original Table	5 - 24
B386 4691	Mylar Seal - 28x107	5 - 41
B386 4692	Mylar Seal - 16x45	5 - 42

Part No.	Description	Page and Index No.
B386 4693	Mylar Seal	5 - 40
B386 4710	Front Side Fence	5 - 20
B386 4720	Rear Side Fence	5 - 5
B386 4811	Front Cover	3 - 1
B386 4821	Rear Cover	3 - 15
B386 4842	Left Cover	3 - 8
B386 4856	Cover - Transport Driven Roller	9 - 13
B386 4861	Reverse Tray	9 - 26
B386 4871	Upper Cover	3 - 14
B386 4872	Sponge:Cover:Front Right	3 - 24
B386 4873	Positioning Plate	3 - 4
B386 4874	Sponge:Cover:Front	3 - 23
B386 4881	Left Lower Cover	9 - 12
B386 5550	Paper Size Sensor Board	5 - 30
B386 5570	PCB:Main Control	13 - 2
B386 5700	Harness:Sensor:Main	13 - 3
B386 5701	Harness:Sensor:Exit:Connecting	13 - 4
B386 5704	Harness:Stepper Motor:Ass'y	13 - 1
B386 5713	Harness:Original Tray:Connecting	5 - 43
B386 5810	Harness:Interface	13 - 5
B386 6014	Decal - Removal Misfeed	3 - 9
B386 6014	Decal - Removal Misfeed	17 - 2
B386 6043	Decal - Side Fence	17 - 6
B386 6043	Decal - Side Fence	5 - 21
B386 7102	Original Scale	3 - 16
B387 1951	Spring - Paper Size Sensor	13 - 11
B387 2113	Roller - Paper Feed Belt	7 - 23
B387 6021	Size Indication Decal	17 - 3
B387 6021	Size Indication Decal	3 - 10
B387 6033	Decal - Original Table	17 - 5
B387 6033	Decal - Original Table	5 - 23
B387 6053	Original Scale Decal - A4	3 - 22
B387 6053	Original Scale Decal - A4	17 - 1
B387 6054	Original Scale Decal - LT	17 - 1
B387 6054	Original Scale Decal - LT	3 - 22

Part No.	Description	Page and Index No.
B617 5705	Sensor Relay Harness	11 - 4
B617 5705	Sensor Relay Harness	5 - 12
B617 5706	Harness - Reverse Sensor	5 - 35
B617 5715	Harness - Original Tray	5 - 29
B714 5006	DC Solenoid:Transmitted Rubber Stamp	11 - 20
G012 1531	Magnet	5 - 22
G412 3611	Guide Mylar	9 - 15
G412 3821	Pick-up Roller Shaft	7 - 24
G412 3821	Holder - Pick Up	7 - 25
G412 3831	Pulley - 22Z	7 - 27
G564 6076	Exposure Glass Decal	17 - 7
G564 6077	Decal:Exposuer Glass:5-Lang	3 - 19
G564 6087	Decal:Exposure Glass:Machine Or Cop	3 - 25
H060 2126	Bushing - M6x7	5 - 2

Part No.	Description	Page and Index No.
AA04 3929	Timing Belt - B40S2M114	13 - 25
AA06 3311	Transport Roller Spring	3 - 11
AA06 3320	Compression Spring:Oil Ssupply Rroller	7 - 21
AA06 3435	Compression Spring:Paper Feed:Joint	7 - 12
AA13 2013	Spacer	7 - 11
AA14 3788	Pin:Guide Plate:Paper Feed	11 - 12
AA14 3788	Pin:Guide Plate:Paper Feed	9 - 1
AA14 3788	Pin:Guide Plate:Paper Feed	3 - 3
AA14 3790	Screw:Contact Point	9 - 3
AG07 0513	Magnet Catch:Original Table:25.5N	9 - 5
AW01 0109	Photo Refiection Sensor:PS117ED1	11 - 3
AW01 0112	Photo Refiection Sensor:Original Table	5 - 31
AW02 0141	Photointerruptor	7 - 9
AW02 0141	Photointerruptor	5 - 11
AW02 0141	Photointerruptor	13 - 30
AX21 0092	Magnetic Clutch:Z30	13 - 13
BC01 2001	Exposure Glass:Sheet Through:332x14	3 - 17

Part No.	Description	Page and Index No.
0353 0040N	Screw - M3x4	13 -105
0450 3008N	Tapping Screw - M3x8	5 - 103
0451 3006N	Tapping Screw - 3x6	7 - 105
0451 3006N	Tapping Screw - 3x6	13 -101
0451 3006N	Tapping Screw - 3X6	11 -101
0451 3006N	Tapping Screw - 3x6	3 - 101
0451 3006N	Tapping Screw - 3x6	9 - 101
0451 3006N	Tapping Screw - 3x6	15 -101
0451 3006N	Tapping Screw - 3x6	5 - 101
0451 3008N	Tapping Screw - M3x8	3 - 103
0451 4014N	Tapping Screw:M4x14	11 -102
0452 3008N	Tapping Screw - M3x8	13 -109
0452 3008N	Tapping Screw - M3x8	3 - 102
0452 3008N	Tapping Screw - M3x8	5 - 102
0452 3008N	Tapping Screw - M3x8	11 -105
0632 0100	Parallel Pin - M2x10	7 - 106
0720 0030E	Retaining Ring - M3	9 - 103
0720 0030E	Retaining Ring - M3	7 - 107
0720 0040E	Retaining Ring - M4	13 -107
0720 0040E	Retaining Ring - M4	11 -104
0720 0040E	Retaining Ring - M4	9 - 102
0720 0040E	Retaining Ring - M4	7 - 102
0720 0060E	Retaining Ring - M6	11 -103
0720 0060E	Retaining Ring - M6	7 - 103
0802 5276	Tapping Screw With Washer - M3x6	7 - 101
0951 3006N	Screw - M3x6	13 -102
0951 4006N	Screw:Polished Round:M4x6	13 -104
1105 0109	Cord Keep	13 -106
1105 0310	Harness Clamp - LWS-1S	13 -103
1105 0310	Harness Clamp - LWS-1S	7 - 104
1105 0460	Clamp	13 -108

Part No.	Description	Page and Index No.
5053 0447	Bushing - 6mm	7 - 4
5053 0447	Bushing - 6mm	9 - 33
5053 0447	Bushing - 6mm	11 - 7
5206 2686	Snap Ring	7 - 28
5206 2686	Snap Ring	13 - 36
5215 2621	Snap Ring - M6	5 - 3
5304 1639	Bushing - 8mm	13 - 15
5304 1639	Bushing - 8mm	7 - 7
5304 1639	Bushing - 8mm	11 - 6
5447 2681	Snap Ring	5 - 1
5447 2681	Snap Ring	9 - 32
5447 2681	Snap Ring	13 - 8