

Printer Scanner Unit/HDD/PS3 (B577/B592/G354)


Printer Scanner Unit/HDD/PS3 (B577/B592/G354)

PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.Printer Scanner Unit/HDD/PS3 (B577/B592/G354) 2
Parts Index 5

1.Printer Scanner Unit/HDD/PS3 (B577/B592/G354)

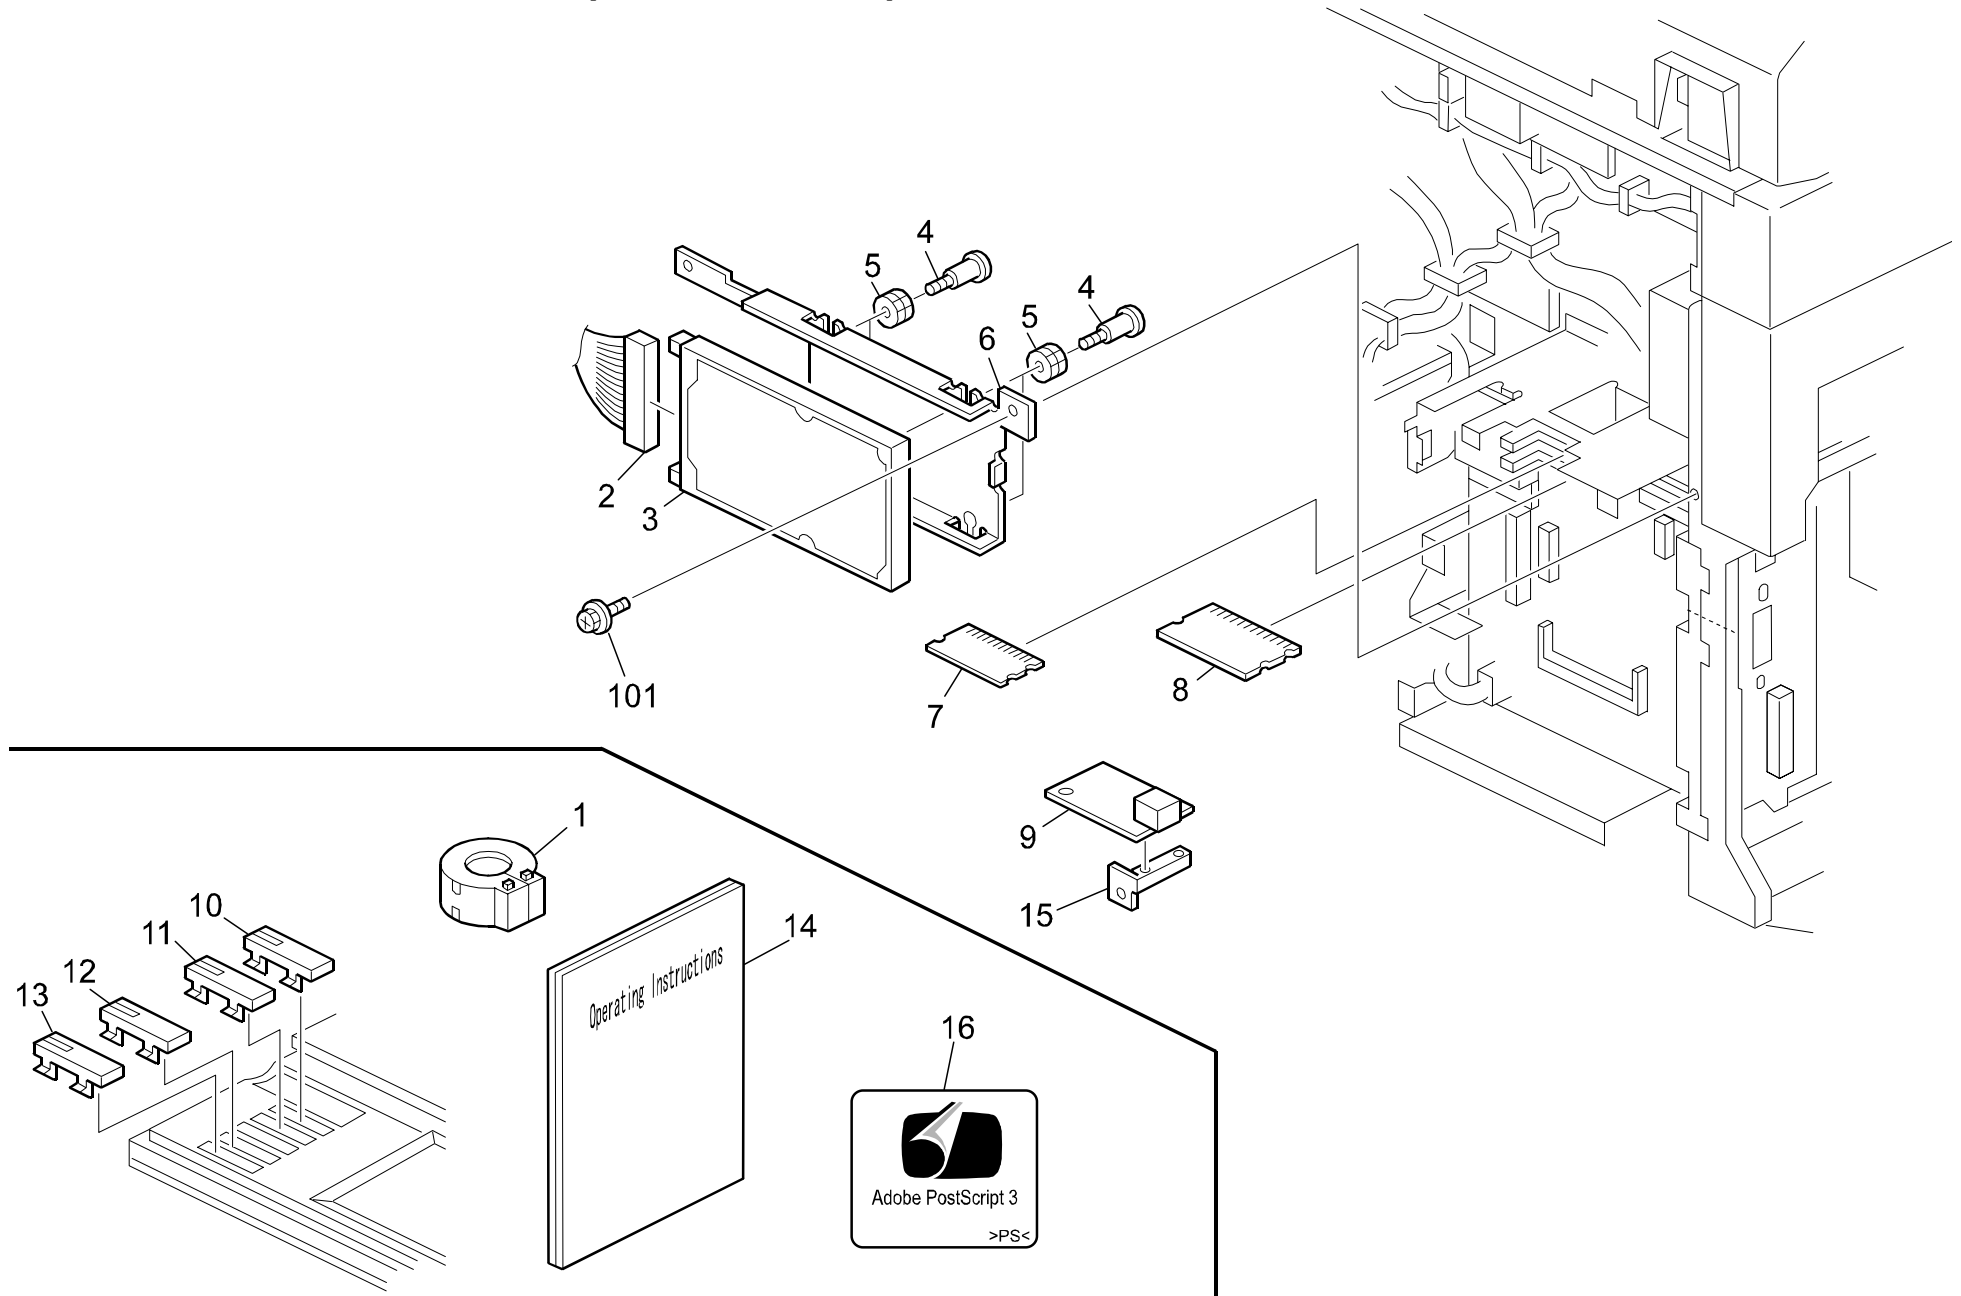

1.Printer Scanner Unit/HDD/PS3 (B577/B592/G354)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A855 5200	Ferrite Core	
2	B592 5260	Harness HDD 44P RC3	1
3	B095 5760	HD Toshiba MK2023GAS	1
4	A193 5843	Stepped Screw	1
5	AA16 1125	Rubber Cushion	1
6	B095 5060	Bracket HDD C3 Ass'y	1
7	G354 5117	PS3 DIMM	1
8	B577 5117	Printer/Scanner DIMM	1
9	B053 5166	Network Interface Board	1
10	B418 7150	Key Top - Copy (USA)	1
10	B418 7170	Key Top - Copy (EU)	1
11	B420 7150	Key Top - Document Box (USA)	1
11	B420 7151	Key Top - Document Box (EU)	1
12	B453 7150	Key Top - Printer (USA)	1
12	B453 7170	Key Top -printer(EU)	1
13	B453 7151	Key Top - Scanner (USA)	1
13	B453 7171	Keytop - Scanner(EU)	1
14	B577 8617	Operating Instructions:Printer	1
14	B577 8606	Operating Instructions:Printer:CHN	1
14	B577 8609	Operating Instructions:Printer:TWN	1
15	B051 5885	NIB Bracket	1
16	GA00 3045	Decal - Postscript	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006B	Tapping Screw - M3x6	

Parts Index

Parts Index

Part No.	Description	Page and Index No.
B577 5117	Printer/Scanner DIMM	3 - 8
B577 8606	Operating Instructions:Printer:CHN	3 - 14
B577 8609	Operating Instructions:Printer:TWN	3 - 14
B577 8617	Operating Instructions:Printer	3 - 14
B592 5260	Harness HDD 44P RC3	3 - 2
G354 5117	PS3 DIMM	3 - 7

Part No.	Description	Page and Index No.
A193 5843	Stepped Screw	3 - 4
A855 5200	Ferrite Core	3 - 1
B051 5885	NIB Bracket	3 - 15
B053 5166	Network Interface Board	3 - 9
B095 5060	Bracket HDD C3 Ass'y	3 - 6
B095 5760	HD Toshiba MK2023GAS	3 - 3
B418 7150	Key Top - Copy (USA)	3 - 10
B418 7170	Key Top - Copy (EU)	3 - 10
B420 7150	Key Top - Document Box (USA)	3 - 11
B420 7151	Key Top - Document Box (EU)	3 - 11
B453 7150	Key Top - Printer (USA)	3 - 12
B453 7151	Key Top - Scanner (USA)	3 - 13
B453 7170	Key Top -printer(EU)	3 - 12
B453 7171	Keytop - Scanner(EU)	3 - 13

