

PAPER FEED UNIT TYPE2000 (DLT)

(Machine Code:G914-17)

INSTALLATION GUIDE

For Machine Code: G031-17

⚠ Caution

- ❑ Make sure to turn off the printer and wait about 30 minutes before installing options. Not waiting for the printer to cool down can result in a burn of yours.
- ❑ When lifting the machine, use the inset grips on both sides of the machine. Otherwise, the machine might fall and cause personal injury.

⚠ Caution

- ❑ When you move the machine, unplug the power cord from the wall outlet to avoid fire or electric shock.

● Important:


- ❑ Do not slide more than one paper tray out at a time. Having more than one paper tray filled with paper in a fully extended position could cause the machine to tilt toward.
 - ❑ You cannot install more than two paper feed units to your printer at a time.
-

1 Check the contents in the box for the following items.

Description	Q'ty
Paper feed unit (including a paper tray)	1
Tray cover	1

2 At the front of the paper feed unit, tape on the left and right sides is used to hold the tray in place. Remove both pieces of tape.

3 Attach the tray cover to the top of the paper tray as shown in the illustration.

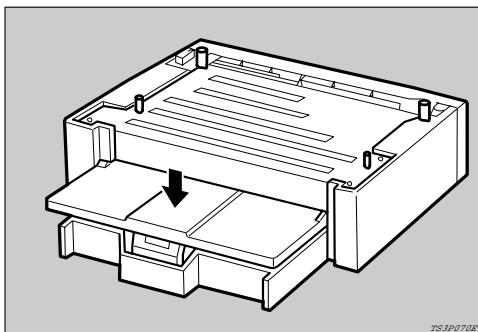


4 Turn off the printer's power switch and unplug the power cord.

5 Unplug the interface cable from the printer.


6 Make sure that the bypass tray and the front cover are closed.

7 There are four pins on the top of the paper feed unit that point straight up. On the bottom of the printer are four holes. Align the holes over the pins and lower the printer gently onto the paper feed unit.

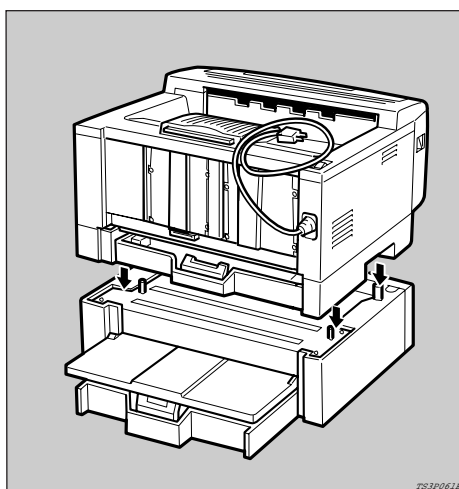

⚠ Caution

- ❑ When lifting the printer, use the inset grips on both sides.

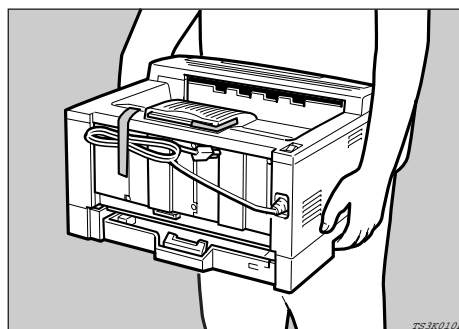

8 Attach the interface cable to the printer.

9 Plug the printer's power cord back into the wall outlet and turn on the printer's power switch.

● Note

- ❑ To make the printer recognize the installed option properly, you should setup the option with the printer driver.

PAPER FEED UNIT TYPE2000 (LT)

(Machine Code:G915-17)

INSTALLATION GUIDE

For Machine Code: G031-17

⚠ Caution

- ❑ Make sure to turn off the printer and wait about 30 minutes before installing options. Not waiting for the printer to cool down can result in a burn of yours.
- ❑ When lifting the machine, use the inset grips on both sides of the machine. Otherwise, the machine might fall and cause personal injury.

⚠ Caution

- ❑ When you move the machine, unplug the power cord from the wall outlet to avoid fire or electric shock.

❗ Important

- ❑ Do not slide more than one paper tray out at a time. Having more than one paper tray filled with paper in a fully extended position could cause the machine to tilt toward.
- ❑ You cannot install more than two paper feed units to your printer at a time.



1 Check the contents in the box for the following item.

Description	Q'ty
Paper feed unit (including a paper tray)	1


2 At the front of the paper feed unit, tape on the left and right sides is used to hold the tray in place. Remove both pieces of tape.

3 Turn off the printer's power switch and unplug the power cord.

4 Unplug the interface cable from the printer.


5 Make sure that the bypass tray and the front cover are closed.

6 There are four pins on the top of the paper feed unit that point straight up. On the bottom of the printer are four holes. Align the holes over the pins and lower the printer gently onto the paper feed unit.

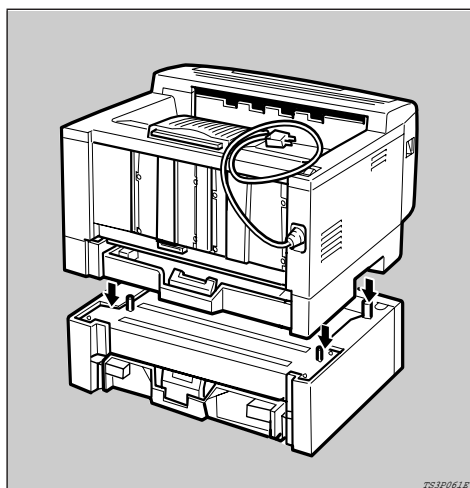

⚠ Caution

- ❑ When lifting the printer, use the inset grips on both sides.

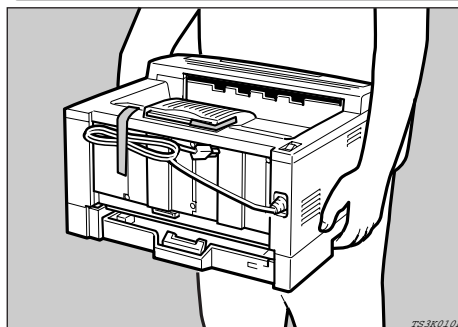

7 Attach the interface cable to the printer.

8 Plug the printer's power cord back into the wall outlet and turn on the printer's power switch.

📌 Note

- ❑ To make the printer recognize the installed option properly, you should setup the option with the printer driver.

PAPER FEED UNIT TYPE1400

(Machine Code:G914-57)

INSTALLATION GUIDE

For Machine Code: G032

⚠ Caution

- ☐ Make sure to turn off the printer and wait about 30 minutes before installing options. Not waiting for the printer to cool down can result in a burn of yours.
- ☐ When lifting the machine, use the inset grips on both sides of the machine. Otherwise, the machine might fall and cause personal injury.

⚠ Caution

- ☐ When you move the machine, unplug the power cord from the wall outlet to avoid fire or electric shock.

● Important

- ☐ Do not slide more than one paper tray out at a time. Having more than one paper tray filled with paper in a fully extended position could cause the machine to tilt toward.
- ☐ You cannot install more than one paper feed unit to your printer at a time.

- 1** Check the contents in the box for the following item.

Description	Q'ty
Paper feed unit (including a paper tray)	1


- 2** At the front of the paper feed unit, tape on the left and right sides is used to hold the tray in place. Remove both pieces of tape.

- 3** Turn off the printer's power switch and unplug the power cord.

- 4** Unplug the interface cable from the printer.


- 5** Make sure that the bypass tray and the front cover are closed.

- 6** There are four pins on the top of the paper feed unit that point straight up. On the bottom of the printer are four holes. Align the holes over the pins and lower the printer gently onto the paper feed unit.

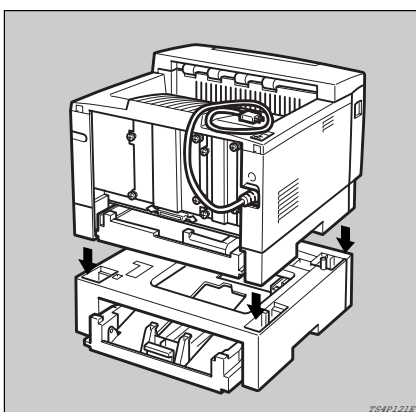

⚠ Caution


- ☐ When lifting the printer, use the inset grips on both sides.

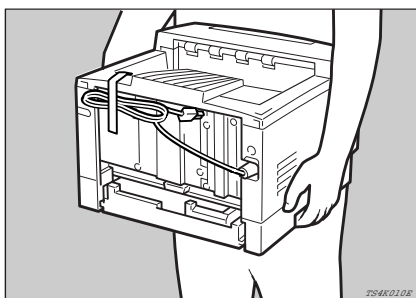

- 7** Attach the interface cable to the printer.

- 8** Plug the printer's power cord back into the wall outlet and turn on the printer's power switch.


- 9** Pull the paper tray out until it stops. After that, lift it slightly, then pull it out of the printer. Place it on a flat surface.

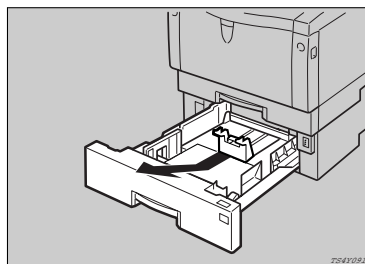


● Note

- ☐ Do not touch the three white pins on the right front side of the paper feed unit.

- 10** Remove the white protective sheet from inside of the paper tray.

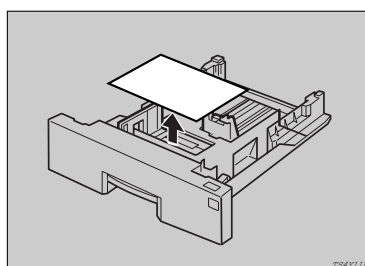

- 11** Remove the red protective sheet taped on the guide. Insert the paper tray into the printer until it stops.

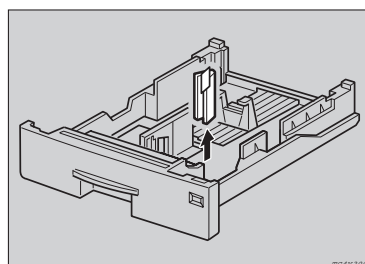

● Note

- ☐ To make the printer recognize the installed option properly you should setup the option with the printer driver.

ENVELOPE FEEDER TYPE2000

(Machine Code:G913-17)

INSTALLATION PROCEDURE

For Machine Code: G031

⚠ Caution

- ☐ Make sure to turn off the printer and wait about 30 minutes before installing options. Not waiting for the printer to cool down can result in a burn of yours.
- ☐ When lifting the machine, use the inset grips on both sides of the machine. Otherwise, the machine might fall and cause personal injury.

⚠ Caution

- ☐ When you move the machine, unplug the power cord from the wall outlet to avoid fire or electric shock.

❗ Important


- ☐ Do not slide more than one paper tray out at a time. Having more than one paper tray filled with paper in a fully extended position could cause the machine to tilt toward.
 - ☐ This unit is a tray that slides into the optional paper feed unit. Without the optional paper feed unit, this envelope feeder cannot be used.
 - ☐ Your printer can have two optional paper feed unit. However, the envelope feeder must be used in the top-most optional paper feed unit (tray2). It can not be used in the bottom-most paper feed unit (tray 3).
-

1 Check the contents in the box for the following item.

Description	Q'ty
-------------	------

Envelope feeder	1
-----------------	---

2 Pull out the 2nd paper tray (tray 2) of the optional paper feed unit until it stops. After that, lift it slightly, then pull it out.

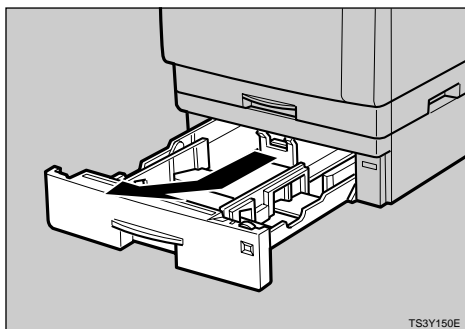


❗ Important

- ☐ The envelope feeder must be used in the top-most optional paper feed unit (tray 2).

📌 Note

- ☐ Keep the paper tray with paper in a cool dark place.

3 While lifting the front side of the envelope feeder, place the feeder into the printer. Then slide it into the printer until it stops.

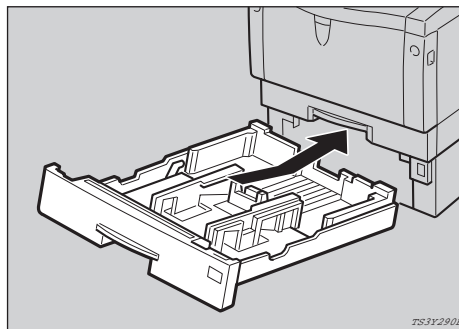

ENVELOPE FEEDER TYPE1400

(Machine Code:G913-57)

INSTALLATION PROCEDURE

For Machine Code: G032

⚠ Caution

- ☐ Make sure to turn off the printer and wait about 30 minutes before installing options. Not waiting for the printer to cool down can result in a burn of yours.
- ☐ When lifting the machine, use the inset grips on both sides of the machine. Otherwise, the machine might fall and cause personal injury.

⚠ Caution

- ☐ When you move the machine, unplug the power cord from the wall outlet to avoid fire or electric shock.

🔧 Important

- ☐ Do not slide more than one paper tray out at a time. Having more than one paper tray filled with paper in a fully extended position could cause the machine to tilt toward.
- ☐ This unit is a tray that slides into the optional paper feed unit. Without the optional paper feed unit, this envelope feeder cannot be used.




1 Check the contents in the box for the following item.

Description	Qty
-------------	-----

Envelope feeder	1
-----------------	---

3 While lifting the front side of the envelope feeder, place the feeder into the printer. Then slide it into the printer until it stops.

2 Pull out the paper tray of the optional paper feed unit until it stops. After that, lift it slightly, then pull it out.

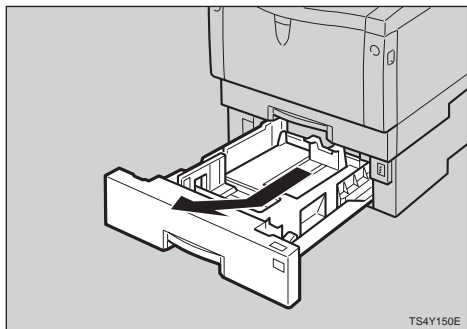

📌 Note

- ☐ Keep the paper tray with paper in a cool and dark place.

