


R&S®FSWP-B1

I/Q Analyzer

User Manual

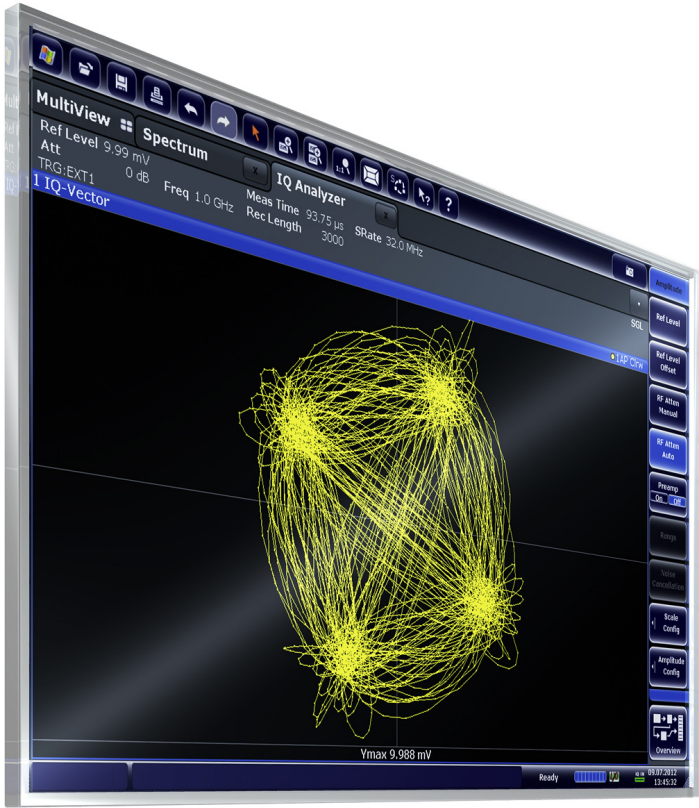

1177.5856.02 – 03

This manual describes the following R&S®FSWP models with firmware version 1.11 or higher:

- R&S®FSWP8 (1322.8003K08)
- R&S®FSWP26 (1322.8003K26)
- R&S®FSWP50 (1322.8003K50)

The I/Q Analyzer is integral part of the following options:

- R&S FSWP-B1 (1322.9997.08)
- R&S FSWP-B1 (1322.9997.26)
- R&S FSWP-B1 (1322.9997.50)

© 2015 Rohde & Schwarz GmbH & Co. KG

Mühlhofstr. 15, 81671 München, Germany

Phone: +49 89 41 29 - 0

Fax: +49 89 41 29 12 164

Email: info@rohde-schwarz.com

Internet: www.rohde-schwarz.com

Subject to change – Data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of the owners.

The following abbreviations are used throughout this manual: R&S®FSWP is abbreviated as R&S FSWP. R&S MultiView is abbreviated as MultiView. Products of the R&S®SMW family, e.g. R&S®SMW200A, are abbreviated as R&S SMW.

Contents

1	Preface	5
1.1	About this Manual.....	5
1.2	Documentation Overview.....	6
1.3	Conventions Used in the Documentation.....	7
2	Welcome to the I/Q Analyzer Application	9
2.1	Starting the I/Q Analyzer Application.....	9
2.2	Understanding the Display Information.....	10
3	Measurement and Result Displays	13
4	Basics on I/Q Data Acquisition and Processing	17
4.1	Processing Analog I/Q Data from RF Input.....	17
4.2	Receiving Data Input and Providing Data Output.....	21
4.3	I/Q Data Import and Export.....	23
4.4	Basics on FFT.....	24
4.5	I/Q Analyzer in MSRA Operating Mode.....	30
5	Configuration	32
5.1	Configuration Overview.....	32
5.2	Import/Export Functions.....	34
5.3	Configuring Data Inputs and Outputs.....	35
5.4	Configuring the Amplitude.....	39
5.5	Configuring Frequency Characteristics.....	44
5.6	Configuring Triggered Measurements.....	45
5.7	Data Acquisition and Bandwidth Settings.....	49
5.8	Display Configuration.....	56
5.9	Adjusting Settings Automatically.....	56
6	Analysis	59
7	How to Work with I/Q Data	60
7.1	How to Perform Measurements in the I/Q Analyzer Application.....	60
7.2	How to Export and Import I/Q Data.....	61
8	Remote Commands for the I/Q Analyzer	64

8.1	Introduction.....	64
8.2	Common Suffixes.....	69
8.3	Activating I/Q Analyzer Measurements.....	69
8.4	Performing Measurements.....	74
8.5	Retrieving Results.....	82
8.6	Configuring I/Q Analyzer Measurements.....	90
8.7	Analyzing Results.....	126
8.8	Importing and Exporting I/Q Data.....	127
8.9	Querying the Status Registers.....	128
8.10	Programming Examples.....	129
	Annex.....	132
A	Annex: Reference.....	132
A.1	Formats for Returned Values: ASCII Format and Binary Format.....	132
A.2	Reference: Format Description for I/Q Data Files.....	132
A.3	I/Q Data File Format (iq-tar).....	134
	List of Remote Commands (I/Q Analyzer).....	140
	Index.....	143

1 Preface

1.1 About this Manual

This R&S FSWP I/Q Analyzer User Manual provides all the information **specific to the application and processing digital I/Q data**. All general instrument functions and settings common to all applications are described in the main R&S FSWP User Manual.

The main focus in this manual is on the measurement results and the tasks required to obtain them. The following topics are included:

- **Welcome to the I/Q Analyzer application**
Introduction to and getting familiar with the application
- **Typical Applications for the I/Q Analyzer and optional input interfaces**
Example measurement scenarios for I/Q data import and analysis
- **Measurements and Result Displays**
Details on supported measurements and their result types
- **Basics on I/Q Data Acquisition**
Background information on basic terms and principles in the context of the I/Q Analyzer application as well as processing digital I/Q data in general
- **Configuration and Analysis**
A concise description of all functions and settings available to import, capture and analyze I/Q data in the I/Q Analyzer, with or without optional interfaces, with their corresponding remote control command
- **How to Work with I/Q Data**
The basic procedure to perform an I/Q Analyzer measurement or capture data via the R&S Digital Baseband Interface with step-by-step instructions
- **Optimizing and Troubleshooting the Measurement**
Hints and tips on how to handle errors and optimize the test setup
- **Remote Commands to perform Measurements with I/Q Data**
Remote commands required to configure and perform I/Q Analyzer measurements or process digital I/Q data in a remote environment, sorted by tasks; (Commands required to set up the environment or to perform common tasks on the instrument are provided in the main R&S FSWP User Manual.)
Programming examples demonstrate the use of many commands and can usually be executed directly for test purposes.
- **Annex**
Reference material, e.g. I/Q file formats and a detailed description of the LVDS connector
- **List of remote commands**
Alphabetical list of all remote commands described in the manual
- **Index**

1.2 Documentation Overview

The user documentation for the R&S FSWP consists of the following parts:

- Printed Getting Started manual
- Online Help system on the instrument
- Documentation DVD with:
 - Getting Started
 - User Manuals for base unit and firmware applications
 - Service Manual
 - Release Notes
 - Data sheet and product brochures

Online Help

The Online Help is embedded in the instrument's firmware. It offers quick, context-sensitive access to the complete information needed for operation and programming. Online help is available using the ? icon on the toolbar of the R&S FSWP.

Getting Started

This manual is delivered with the instrument in printed form and in PDF format on the DVD. It provides the information needed to set up and start working with the instrument. Basic operations and handling are described. Safety information is also included.

User Manuals

User manuals are provided for the base unit and each additional (firmware) application.

The user manuals are available in PDF format - in printable form - on the Documentation DVD delivered with the instrument. In the user manuals, all instrument functions are described in detail. Furthermore, they provide a complete description of the remote control commands with programming examples.

The user manual for the base unit provides basic information on operating the R&S FSWP in general, and the Spectrum application in particular. Furthermore, the software functions that enhance the basic functionality for various applications are described here. An introduction to remote control is provided, as well as information on maintenance, instrument interfaces and troubleshooting.

In the individual application manuals, the specific instrument functions of the application are described in detail. For additional information on default settings and parameters, refer to the data sheets. Basic information on operating the R&S FSWP is not included in the application manuals.

Release Notes

The release notes describe the installation of the firmware, new and modified functions, eliminated problems, and last minute changes to the documentation. The corresponding firmware version is indicated on the title page of the release notes.

Application Notes

Application notes, application cards, white papers and educational notes are further publications that provide more comprehensive descriptions and background information. The latest versions are available for download from the Rohde & Schwarz website, at www.rohde-schwarz.com/apnote/.

1.3 Conventions Used in the Documentation

1.3.1 Typographical Conventions

The following text markers are used throughout this documentation:

Convention	Description
"Graphical user interface elements"	All names of graphical user interface elements on the screen, such as dialog boxes, menus, options, buttons, and softkeys are enclosed by quotation marks.
KEYS	Key names are written in capital letters.
File names, commands, program code	File names, commands, coding samples and screen output are distinguished by their font.
<i>Input</i>	Input to be entered by the user is displayed in italics.
Links	Links that you can click are displayed in blue font.
"References"	References to other parts of the documentation are enclosed by quotation marks.

1.3.2 Conventions for Procedure Descriptions

When describing how to operate the instrument, several alternative methods may be available to perform the same task. In this case, the procedure using the touchscreen is described. Any elements that can be activated by touching can also be clicked using an additionally connected mouse. The alternative procedure using the keys on the instrument or the on-screen keyboard is only described if it deviates from the standard operating procedures.

The term "select" may refer to any of the described methods, i.e. using a finger on the touchscreen, a mouse pointer in the display, or a key on the instrument or on a keyboard.

1.3.3 Notes on Screenshots

When describing the functions of the product, we use sample screenshots. These screenshots are meant to illustrate as much as possible of the provided functions and possible interdependencies between parameters.

The screenshots usually show a fully equipped product, that is: with all options installed. Thus, some functions shown in the screenshots may not be available in your particular product configuration.

2 Welcome to the I/Q Analyzer Application

The R&S FSWP I/Q Analyzer is a firmware application that adds functionality to perform I/Q data acquisition and analysis to the R&S FSWP.

The R&S FSWP-I/Q Analyzer features:

- Acquisition of analog I/Q data
- Import of stored I/Q data from other applications
- Spectrum, magnitude, I/Q vector and separate I and Q component analysis of any I/Q data on the instrument
- Export of I/Q data to other applications



Availability of the I/Q Analyzer

The I/Q Analyzer becomes available when you equip the R&S FSWP with the optional Spectrum Analyzer hardware (R&S FSWP-B1).

This user manual contains a description of the functionality that the application provides, including remote control operation.

All functions not discussed in this manual are the same as in the base unit and are described in the R&S FSWP User Manual. The latest version is available for download at the product homepage

<http://www2.rohde-schwarz.com/product/FSWP.html>.

Installation

The R&S FSWP I/Q Analyzer application is part of the optional Spectrum application and requires no further installation.

2.1 Starting the I/Q Analyzer Application


The I/Q Analyzer is an application on the R&S FSWP.

To activate the I/Q Analyzer application

1. Select the MODE key.

A dialog box opens that contains all applications currently available on your R&S FSWP.

2. Select the "I/Q Analyzer" item.

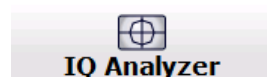

The R&S FSWP opens a new measurement channel for the I/Q Analyzer application.

The measurement is started immediately with the default settings.


It can be configured in the I/Q Analyzer "Overview" dialog box, which is displayed when you select the "Overview" softkey from any menu (see [Chapter 5, "Configuration"](#), on page 32).

Multiple Measurement Channels and Sequencer Function

When you activate an application, a new measurement channel is created which determines the measurement settings for that application. The same application can be activated with different measurement settings by creating several channels for the same application.

The number of channels that can be configured at the same time depends on the available memory on the instrument.

Only one measurement can be performed at any time, namely the one in the currently active channel. However, in order to perform the configured measurements consecutively, a Sequencer function is provided.

If activated, the measurements configured in the currently active channels are performed one after the other in the order of the tabs. The currently active measurement is indicated by a  symbol in the tab label. The result displays of the individual channels are updated in the tabs (as well as the "MultiView") as the measurements are performed. Sequential operation itself is independent of the currently *displayed* tab.

For details on the Sequencer function see the R&S FSWP User Manual.

2.2 Understanding the Display Information

The following figure shows a measurement diagram during I/Q Analyzer operation. All different information areas are labeled. They are explained in more detail in the following sections.

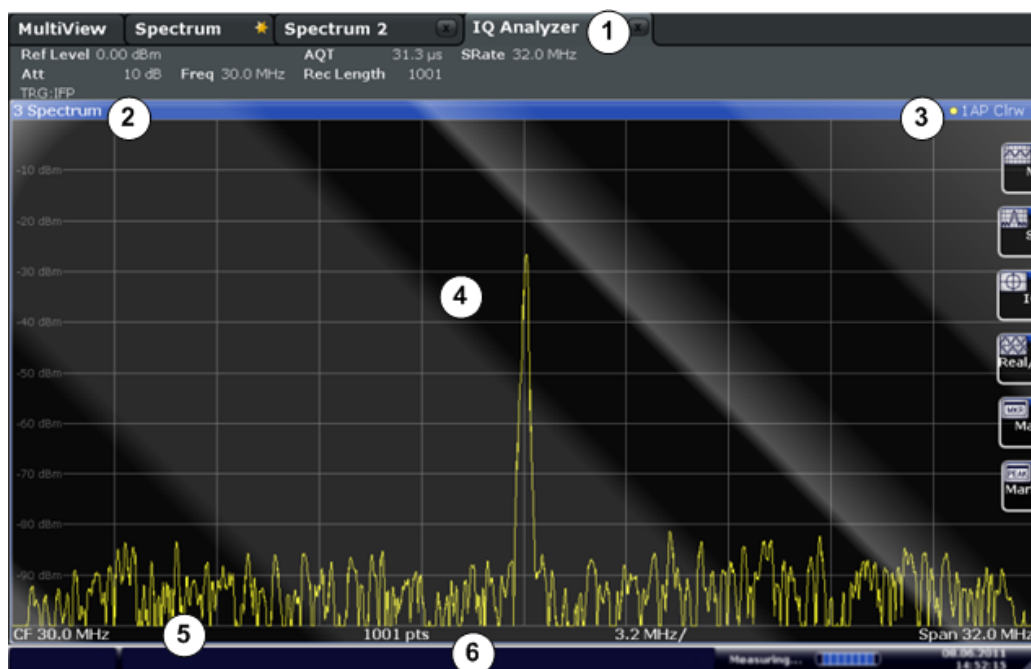


Figure 2-1: Screen elements in the I/Q Analyzer application

- 1 = Channel bar for firmware and measurement settings
- 2+3 = Window title bar with diagram-specific (trace) information
- 4 = Diagram area with marker information
- 5 = Diagram footer with diagram-specific information, depending on result display
- 6 = Instrument status bar with error messages, progress bar and date/time display



MSRA operating mode

In MSRA operating mode, additional tabs and elements are available. A colored background of the screen behind the measurement channel tabs indicates that you are in MSRA operating mode.

For details on the MSRA operating mode see the R&S FSWP MSRA User Manual.

Channel bar information

In the I/Q Analyzer application, the R&S FSWP shows the following settings:

Table 2-1: Information displayed in the channel bar for the I/Q Analyzer application

Ref Level	Reference level
(m.+el.)Att	(Mechanical and electronic) RF attenuation
Ref Offset	Reference level offset
Freq	Center frequency
Meas Time	Measurement time
Rec Length	Defined record length (number of samples to capture)

SRate	Defined sample rate for data acquisition
RBW	(Spectrum evaluation only) Resolution bandwidth calculated from the sample rate and record length

In addition, the channel bar also displays information on instrument settings that affect the measurement results even though this is not immediately apparent from the display of the measured values (e.g. transducer or trigger settings). This information is displayed only when applicable for the current measurement. For details see the R&S FSWP Getting Started manual.

Window title bar information

For each diagram, the header provides the following information:



Figure 2-2: Window title bar information in the I/Q Analyzer application

- 1 = Window number
- 2 = Window type
- 3 = Trace color
- 4 = Trace number
- 5 = Detector
- 6 = Trace mode

Diagram footer information

The information in the diagram footer (beneath the diagram) depends on the evaluation:

- Center frequency
- Number of sweep points
- Range per division (x-axis)
- Span (Spectrum)

Status bar information

Global instrument settings, the instrument status and any irregularities are indicated in the status bar beneath the diagram. Furthermore, the progress of the current operation is displayed in the status bar.

3 Measurement and Result Displays

The I/Q Analyzer can capture I/Q data. The I/Q data that was captured by or imported to the R&S FSWP can then be evaluated in various different result displays. Select the result displays using the SmartGrid functions.

Up to 6 evaluations can be displayed in the I/Q Analyzer at any time, including several graphical diagrams, marker tables or peak lists.

For details on working with the SmartGrid see the R&S FSWP Getting Started manual.

Measurements in the time and frequency domain

The I/Q Analyzer application (*not Master* in MSRA mode) can also perform measurements on the captured I/Q data in the time and frequency domain (see also [Chapter 4.5, "I/Q Analyzer in MSRA Operating Mode"](#), on page 30). They are configured using the same settings and provide similar results. In addition, the analysis interval used for the measurement is indicated as in all multistandard applications.


The time and frequency domain measurements and the available results are described in detail in the R&S FSWP User Manual.

Result displays for I/Q data:

Magnitude.....	13
Spectrum.....	14
I/Q-Vector.....	14
Real/Imag (I/Q).....	15
Marker Table.....	16
Marker Peak List.....	16

Magnitude

Shows the level values in time domain.

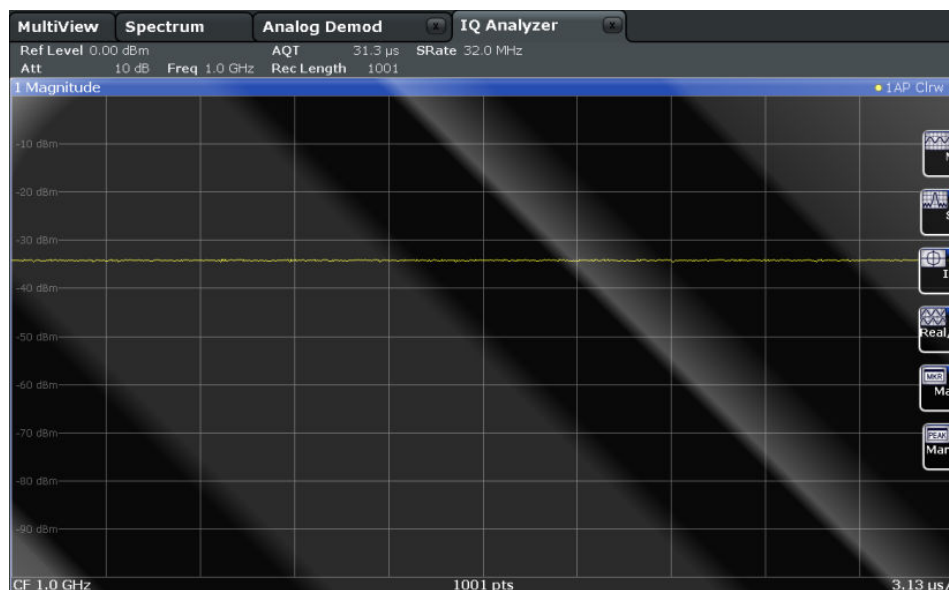

Remote command:


LAY:ADD:WIND? '1', RIGH, MAGN, see [LAYout:ADD\[:WINDow\]?](#) on page 121

Results:

[TRACe<n>\[:DATA\]?](#) on page 86

Spectrum

Displays the frequency spectrum of the captured I/Q samples.

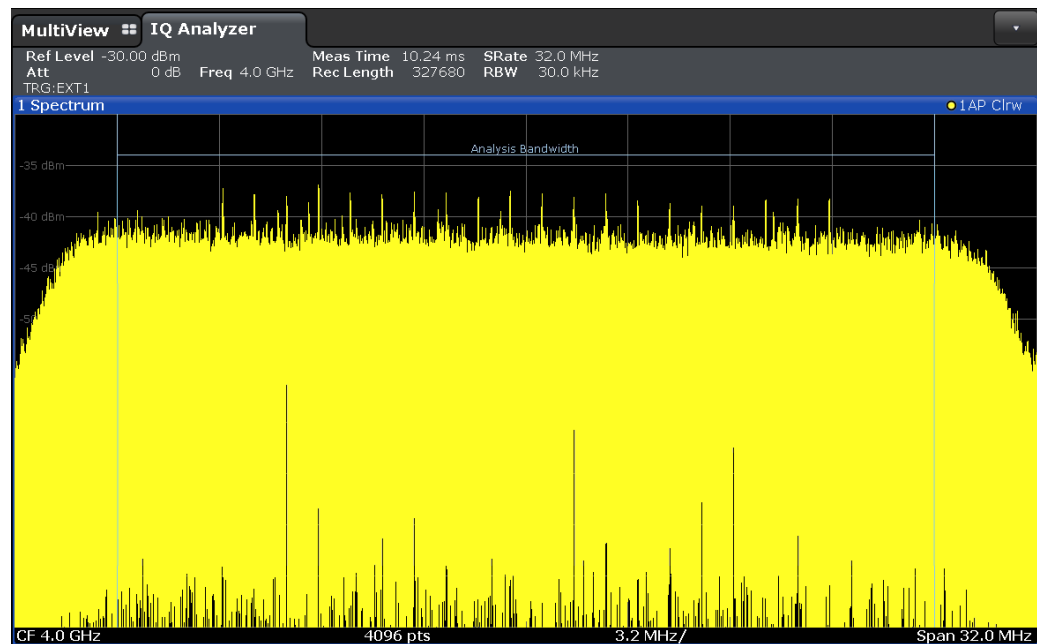

Remote command:


LAY:ADD:WIND? '1', RIGH, FREQ, see [LAYout:ADD\[:WINDow\]?](#) on page 121

Results:

[TRACe<n>\[:DATA\]?](#) on page 86

I/Q-Vector

Displays the captured samples in an I/Q-plot. The samples are connected by a line.

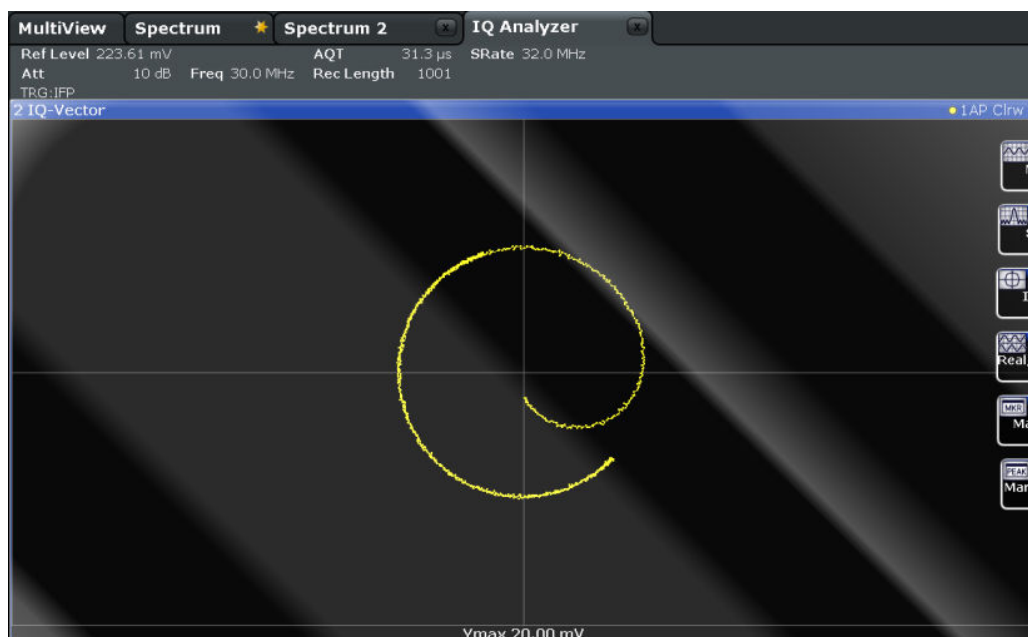

Note: For the I/Q vector result display, the number of I/Q samples to record ("Record Length") must be identical to the number of trace points to be displayed ("Measurement Points"; for I/Q Analyzer: 1001). For record lengths outside the valid range of sweep points the diagram does not show valid results.

Remote command:


LAY:ADD:WIND? '1', RIGH, VECT, see [LAYout:ADD\[:WINDow\]?](#) on page 121

Results:

[TRACe<n>\[:DATA\]?](#) on page 86

Real/Imag (I/Q)

Displays the I and Q values in separate diagrams.

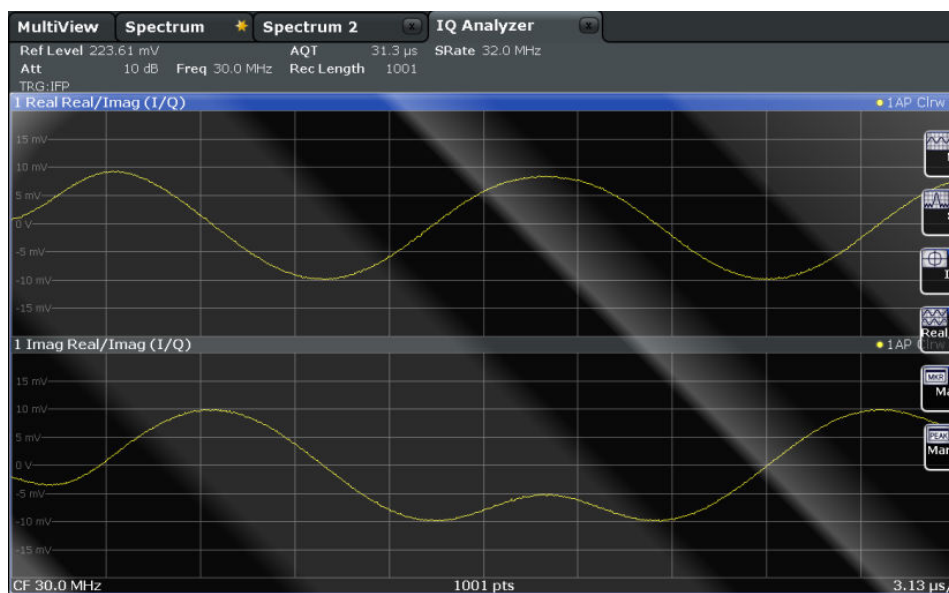

Remote command:

LAY:ADD:WIND? '1', RIGH, RIM, see [LAYout:ADD\[:WINDow\]?](#) on page 121

Results:

[TRACe<n>\[:DATA\]?](#) on page 86

Marker Table

Displays a table with the current marker values for the active markers.

This table may be displayed automatically if configured accordingly.

Type	Shows the marker type and number ("M" for a normal marker, "D" for a delta marker).
Ref	Shows the reference marker a delta marker refers to.
Trace	Shows the trace the marker is positioned on.
X- / Y-Value	Shows the marker coordinates (usually frequency and level).

Tip: To navigate within long marker tables, simply scroll through the entries with your finger on the touchscreen.

Remote command:

LAY:ADD? '1', RIGH, MTAB, see [LAYout:ADD\[:WINDow\]?](#) on page 121

Results:

[CALCulate<n>:MARKer<m>:X](#) on page 89

[CALCulate<n>:MARKer<m>:Y?](#) on page 89

Marker Peak List

The marker peak list determines the frequencies and levels of peaks in the spectrum or time domain. How many peaks are displayed can be defined, as well as the sort order. In addition, the detected peaks can be indicated in the diagram. The peak list can also be exported to a file for analysis in an external application.

No	Stimulus	Response
1	64.400000 MHz	-30.352 dBm
2	128.400000 MHz	-51.896 dBm
3	192.300000 MHz	-40.227 dBm
4	257.200000 MHz	-60.699 dBm
5	320.200000 MHz	-44.273 dBm
6	384.100000 MHz	-53.494 dBm
7	448.100000 MHz	-47.460 dBm
8	513.000000 MHz	-55.603 dBm

Tip: To navigate within long marker peak lists, simply scroll through the entries with your finger on the touchscreen.

Remote command:

LAY:ADD? '1', RIGH, PEAK, see [LAYout:ADD\[:WINDow\]?](#) on page 121

Results:

[CALCulate<n>:MARKer<m>:X](#) on page 89

[CALCulate<n>:MARKer<m>:Y?](#) on page 89

4 Basics on I/Q Data Acquisition and Processing

Some background knowledge on basic terms and principles used when describing I/Q data acquisition on the R&S FSWP in general, and in the I/Q Analyzer application in particular, is provided here for a better understanding of the required configuration settings.

The I/Q Analyzer provides various possibilities to acquire the I/Q data to be analyzed:

- Capturing analog I/Q data from the RF INPUT connector
- Importing I/Q data from a file

Background information for all these scenarios and more is provided in the following sections.

- [Processing Analog I/Q Data from RF Input](#)..... 17
- [Receiving Data Input and Providing Data Output](#)..... 21
- [I/Q Data Import and Export](#)..... 23
- [Basics on FFT](#)..... 24
- [I/Q Analyzer in MSRA Operating Mode](#)..... 30

4.1 Processing Analog I/Q Data from RF Input

Complex baseband data

In the telephone systems of the past, baseband data was transmitted unchanged as an analog signal. In modern phone systems and in radio communication, however, the baseband data is modulated on a carrier frequency, which is then transmitted and must be demodulated by the receiver. When using modern modulation methods (e.g. QPSK, QAM etc.), the baseband signal becomes complex. Complex data (or: I/Q data) consists of an imaginary (I) and a real (Q) component.

I/Q Analyzer - processing complex data from RF input

The I/Q Analyzer is a standard application used to capture and analyze I/Q data on the R&S FSWP. By default, it assumes the I/Q data is modulated on a carrier frequency and input via the RF INPUT connector on the R&S FSWP.

The A/D converter samples the IF signal at a rate of 200 MHz. The digital signal is down-converted to the complex baseband, lowpass-filtered, and the sample rate is reduced. An **equalizer filter** before the **resampler** compensates for the frequency response of the analyzer's analog filter stages which would otherwise add to the modulation errors. The continuously adjustable sample rates are realized using an optimal decimation filter and subsequent resampling on the set sample rate.

A special memory (**capture buffer**) is available in the R&S FSWP for a maximum of 400 Ms (400*1024*1024) of complex samples (pairs of I and Q data). The number of

complex samples to be captured can be defined (for restrictions refer to [Chapter 4.1.1, "Sample Rate and Maximum Usable I/Q Bandwidth for RF Input"](#), on page 18).

The block diagram in [Figure 4-1](#) shows the analyzer hardware from the IF section to the processor.

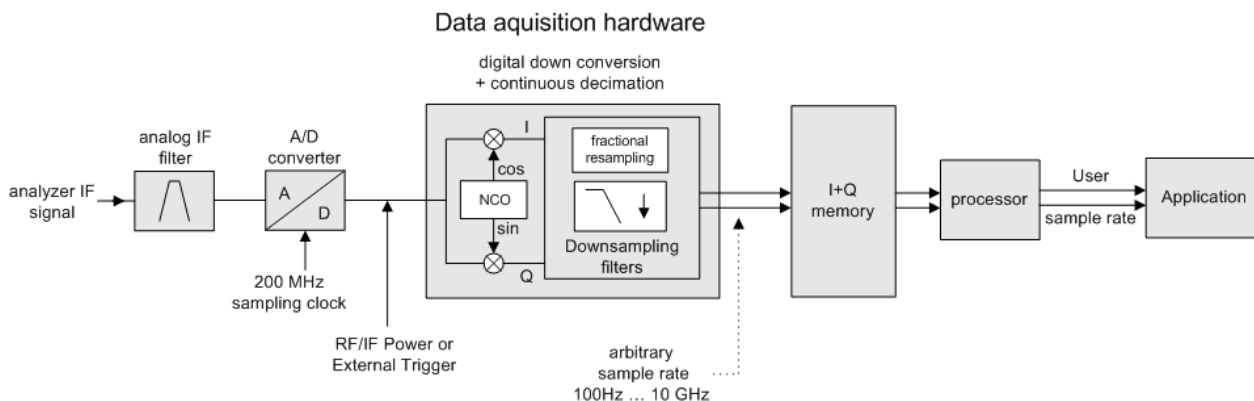


Figure 4-1: Block diagram illustrating the R&S FSWP signal processing for analog I/Q data (without bandwidth extension options)

4.1.1 Sample Rate and Maximum Usable I/Q Bandwidth for RF Input

Definitions

- **Input sample rate (ISR):** the sample rate of the useful data provided by the device connected to the input of the R&S FSWP
- (User, Output) **Sample rate (SR):** the sample rate that is defined by the user (e.g. in the "Data Acquisition" dialog box in the "I/Q Analyzer" application) and which is used as the basis for analysis or output
- **Usable I/Q (Analysis) bandwidth:** the bandwidth range in which the signal remains undistorted in regard to amplitude characteristic and group delay; this range can be used for accurate analysis by the R&S FSWP
- **Record length:** Number of I/Q samples to capture during the specified measurement time; calculated as the measurement time multiplied by the sample rate

For the I/Q data acquisition, digital decimation filters are used internally in the R&S FSWP. The passband of these digital filters determines the *maximum usable I/Q bandwidth*. In consequence, signals within the usable I/Q bandwidth (passband) remain unchanged, while signals outside the usable I/Q bandwidth (passband) are suppressed. Usually, the suppressed signals are noise, artifacts, and the second IF side band. If frequencies of interest to you are also suppressed, you should try to increase the output sample rate, since this increases the maximum usable I/Q bandwidth.

As a rule, the usable I/Q bandwidth is proportional to the output sample rate. Yet, when the I/Q bandwidth reaches the bandwidth of the analog IF filter (at very high output sample rates), the curve breaks.

- [Bandwidth Extension Options](#)..... 19
- [Relationship Between Sample Rate, Record Length and Usable I/Q Bandwidth](#)... 19
- [R&S FSWP without additional bandwidth extension options](#)..... 20
- [R&S FSWP with option B80 \(I/Q Bandwidth Extension\)](#):..... 20

4.1.1.1 Bandwidth Extension Options

Max. usable I/Q BW	Required B-option
80 MHz	B80

4.1.1.2 Relationship Between Sample Rate, Record Length and Usable I/Q Bandwidth

Up to the maximum bandwidth, the following rule applies:

$$Usable\ I/Q\ bandwidth = 0.8 * Output\ sample\ rate$$

Regarding the record length, the following rule applies:

$$Record\ length = Measurement\ time * sample\ rate$$

Maximum record length for RF input

The maximum record length, that is, the maximum number of samples that can be captured, depends on the sample rate.

Table 4-1: Maximum record length

Sample rate	Maximum record length
100 Hz to 200 MHz	440 MSamples (precisely: 461373440 (= 440*1024*1024) samples)
200 MHz to 10 GHz (upsampling) MSRA master: 200 MHz to 600 MHz	220 MSamples



MSRA operating mode

In MSRA operating mode, the MSRA Master is restricted to a sample rate of 600 MHz.

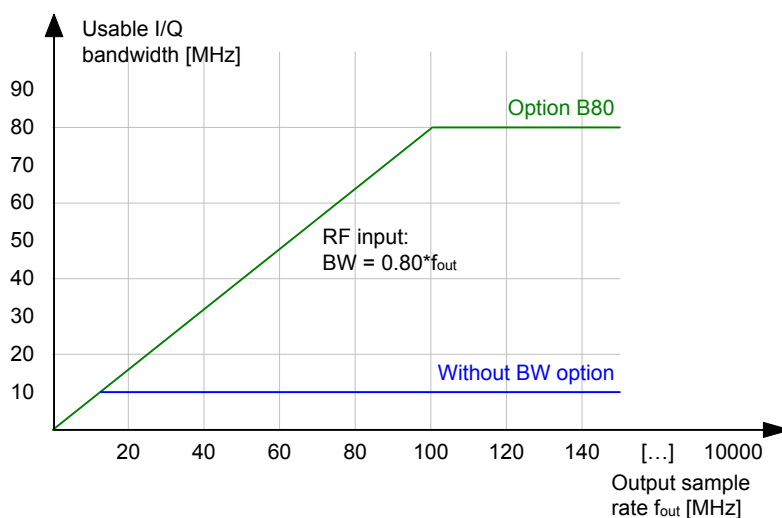


Figure 4-2: Relationship between maximum usable I/Q bandwidth and output sample rate with and without bandwidth extensions

4.1.1.3 R&S FSWP without additional bandwidth extension options

sample rate: 100 Hz - 10 GHz

maximum I/Q bandwidth: 10 MHz



MSRA operating mode

In MSRA operating mode, the MSRA Master is restricted to a sample rate of 600 MHz.

Table 4-2: Maximum I/Q bandwidth

Sample rate	Maximum I/Q bandwidth
100 Hz to 10 MHz	proportional up to maximum 10 MHz
10 MHz to 10 GHz MSRA master: 10 MHz to 600 MHz	10 MHz

4.1.1.4 R&S FSWP with option B80 (I/Q Bandwidth Extension):

sample rate: 100 Hz - 10 GHz

maximum bandwidth: 80 MHz



MSRA operating mode

In MSRA operating mode, the MSRA Master is restricted to a sample rate of 600 MHz.

Sample rate	Maximum I/Q bandwidth
100 Hz to 100 MHz	proportional up to maximum 80 MHz
100 MHz to 10 GHz MSRA master: 100 MHz to 600 MHz	80 MHz

4.2 Receiving Data Input and Providing Data Output

The R&S FSWP can analyze signals from different input sources and provide various types of output (such as noise or trigger signals).

4.2.1 RF Input Protection

The RF input connector of the R&S FSWP must be protected against signal levels that exceed the ranges specified in the data sheet. Therefore, the R&S FSWP is equipped with an overload protection mechanism. This mechanism becomes active as soon as the power at the input mixer exceeds the specified limit. It ensures that the connection between RF input and input mixer is cut off.

When the overload protection is activated, an error message is displayed in the status bar ("INPUT OVLD"), and a message box informs you that the RF Input was disconnected. Furthermore, a status bit (bit 3) in the `STAT:QUES:POW` status register is set. In this case you must decrease the level at the RF input connector and then close the message box. Then measurement is possible again. Reactivating the RF input is also possible via the remote command `INPut:ATTenuation:PROTection:RESet`.

4.2.2 Basics on Input from I/Q Data Files

The I/Q data to be evaluated in a particular R&S FSWP application can not only be captured by the application itself, it can also be loaded from a file, provided it has the correct format. The file is then used as the input source for the application.

For example, you can capture I/Q data using the I/Q Analyzer application, store it to a file, and then analyze the signal parameters for that data later using the Pulse application (if available).

The I/Q data must be stored in a format with the file extension `.iq.tar`. For a detailed description see [Chapter A.3, "I/Q Data File Format \(iq-tar\)"](#), on page 134.

As opposed to importing data from an I/Q data file using the import functions provided by some R&S FSWP applications (e.g. the I/Q Analyzer or the R&S FSWP VSA application), the data is not only stored temporarily in the capture buffer, where it overwrites the current measurement data and is in turn overwritten by a new measurement. Instead, the stored I/Q data remains available as input for any number of subsequent measurements. Furthermore, the (temporary) data import requires the current measurement settings in the current application to match the settings that were applied

when the measurement results were stored (possibly in a different application). When the data is used as an input source, however, the data acquisition settings in the current application (attenuation, center frequency, measurement bandwidth, sample rate) can be ignored. As a result, these settings cannot be changed in the current application. Only the measurement time can be decreased, in order to perform measurements on an extract of the available data (from the beginning of the file) only.

When using input from an I/Q data file, the RUN SINGLE function starts a single measurement (i.e. analysis) of the stored I/Q data, while the RUN CONT function repeatedly analyzes the same data from the file.



Sample iq.tar files

If you have the optional R&S FSWP VSA application (R&S FSWP-K70), some sample iq.tar files are provided in the C:/R_S/Instr/user/vsa/DemoSignals directory on the R&S FSWP.

Furthermore, you can create your own iq.tar files in the I/Q Analyzer, see [Chapter 7.2, "How to Export and Import I/Q Data"](#), on page 61.

Pre-trigger and post-trigger samples

In applications that use pre-triggers or post-triggers, if no pre-trigger or post-trigger samples are specified in the I/Q data file, or too few trigger samples are provided to satisfy the requirements of the application, the missing pre- or post-trigger values are filled up with zeros. Superfluous samples in the file are dropped, if necessary. For pre-trigger samples, values are filled up or omitted at the beginning of the capture buffer, for post-trigger samples, values are filled up or omitted at the end of the capture buffer.

4.2.3 Input from Noise Sources

The R&S FSWP provides a connector (NOISE SOURCE CONTROL) with a voltage supply for an external noise source. By switching the supply voltage for an external noise source on or off in the firmware, you can activate or deactivate the device as required.

External noise sources are useful when you are measuring power levels that fall below the noise floor of the R&S FSWP itself, for example when measuring the noise level of an amplifier.

In this case, you can first connect an external noise source (whose noise power level is known in advance) to the R&S FSWP and measure the total noise power. From this value you can determine the noise power of the R&S FSWP. Then when you measure the power level of the actual DUT, you can deduct the known noise level from the total power to obtain the power level of the DUT.

The noise source is controlled in the "Output" settings, see ["Noise Source"](#) on page 38

4.2.4 Receiving and Providing Trigger Signals

Using one of the TRIGGER connectors of the R&S FSWP, the R&S FSWP can use a signal from an external device as a trigger to capture data. Alternatively, the internal trigger signal used by the R&S FSWP can be output for use by other connected devices. Using the same trigger on several devices is useful to synchronize the transmitted and received signals within a measurement.

For details on the connectors see the R&S FSWP "Getting Started" manual.

External trigger as input

If the trigger signal for the R&S FSWP is provided by an external device, the trigger signal source must be connected to the R&S FSWP and the trigger source must be defined as "External" for the R&S FSWP.

Trigger output

The R&S FSWP can provide output to another device either to pass on the internal trigger signal, or to indicate that the R&S FSWP itself is ready to trigger.

The trigger signal can be output by the R&S FSWP automatically, or manually by the user. If it is provided automatically, a high signal is output when the R&S FSWP has triggered due to a measurement start ("Device Triggered"), or when the R&S FSWP is ready to receive a trigger signal after a measurement start ("Trigger Armed").

Manual triggering

If the trigger output signal is initiated manually, the length and level (high/low) of the trigger pulse is also user-definable. Note, however, that the trigger pulse level is always opposite to the constant signal level defined by the output "Level" setting, e.g. for "Level = High", a constant high signal is output to the connector until the "Send Trigger" button is selected. Then, a low pulse is provided.



Providing trigger signals as output is described in detail in the R&S FSWP User Manual.

4.3 I/Q Data Import and Export

Baseband signals mostly occur as so-called complex baseband signals, i.e. a signal representation that consists of two channels; the in phase (I) and the quadrature (Q) channel. Such signals are referred to as I/Q signals. The complete modulation information and even distortion that originates from the RF, IF or baseband domains can be analyzed in the I/Q baseband.

Importing and exporting I/Q signals is useful for various applications:



- Generating and saving I/Q signals in an RF or baseband signal generator or in external software tools to analyze them with the R&S FSWP later

- Capturing and saving I/Q signals with an RF or baseband signal analyzer to analyze them with the R&S FSWP or an external software tool later

For example, you can capture I/Q data using the I/Q Analyzer application and then perform analog demodulation on that data using the R&S FSWP AnalogDemodulation application, if available.

As opposed to storing trace data, which may be averaged or restricted to peak values, I/Q data is stored as it was captured, without further processing. The data is stored as complex values in 32-bit floating-point format. Multi-channel data is not supported. The I/Q data is stored in a format with the file extension `.iq.tar`.

For a detailed description see the R&S FSWP I/Q Analyzer and I/Q Input User Manual.

The import and export functions are available in the "Save/Recall" menu which is displayed when you select the  "Save" or  "Open" icon in the toolbar (see [Chapter 5.2, "Import/Export Functions"](#), on page 34).




Export only in MSRA mode

In MSRA mode, I/Q data can only be exported to other applications; I/Q data cannot be imported to the MSRA Master or any MSRA applications.

4.4 Basics on FFT

The I/Q Analyzer measures the power of the signal input over time. In order to convert the time domain signal to a frequency spectrum, an FFT (Fast Fourier Transformation) is performed which converts a vector of input values into a discrete spectrum of frequencies.

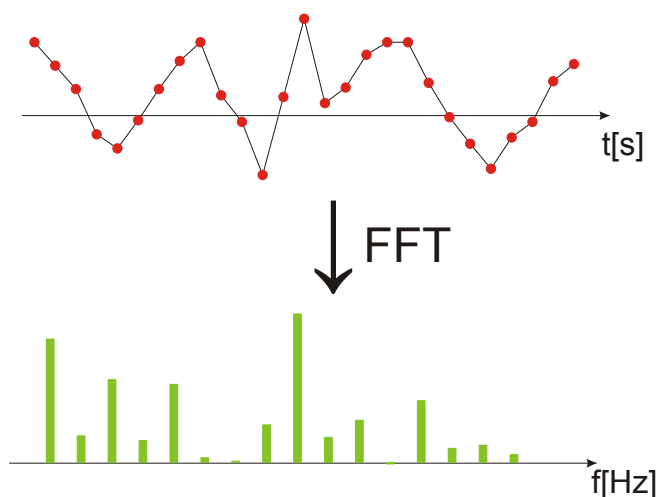

4.4.1 Window Functions

The Fourier transformation is not performed on the entire captured data in one step. Only a limited number of samples is used to calculate an individual result. This process is called windowing.

After sampling in the time domain, each window is multiplied with a specific window function. Windowing helps minimize the discontinuities at the end of the measured signal interval and thus reduces the effect of spectral leakage, increasing the frequency resolution.

Various different window functions are provided in the R&S FSWP to suit different input signals. Each of the window functions has specific characteristics, including some advantages and some trade-offs. These characteristics need to be considered carefully to find the optimum solution for the measurement task.



Ignoring the window function - rectangular window


The rectangular window function is in effect not a function at all, it maintains the original sampled data. This may be useful to minimize the required bandwidth; however, be aware that if the window does not contain exactly one period of your signal, heavy sidelobes may occur, which do not exist in the original signal.

Table 4-3: Characteristics of typical FFT window functions

Window type	Frequency resolution	Magnitude resolution	Sidelobe suppression	Measurement recommendation
Rectangular	Best	Worst	Worst	No function applied. Separation of two tones with almost equal amplitudes and a small frequency distance
Blackman-Harris (default)	Good	Good	Good	Harmonic detection and spurious emission detection
Gauss (Alpha = 0.4)	Good	Good	Good	Weak signals and short duration
Flattop	Worst	Best	Good	Accurate single tone measurements
5-Term	Good	Good	Best	Measurements with very high dynamic range

4.4.2 Overlapping

The I/Q Analyzer calculates multiple FFTs per measurement by dividing one captured record into several windows. Furthermore, the I/Q Analyzer allows consecutive windows to overlap. Overlapping "reuses" samples that were already used to calculate the preceding FFT result.

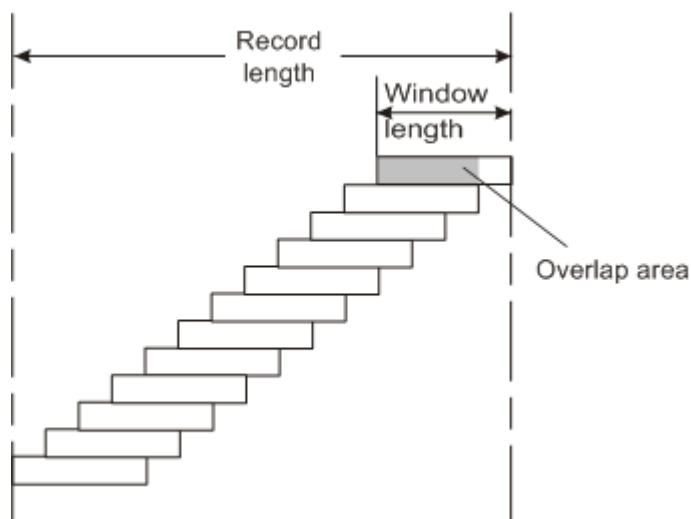

In advanced FFT mode with averaging, the overlapping factor can be set freely. The higher the overlap factor, the more windows are used. This leads to more individual results and improves detection of transient signal effects. However, it also extends the duration of the calculation. The size of the window can be defined manually according to the record length, the overlap factor, and the FFT length.

With an overlap of the FFTs of 67%, for example, the second data block the R&S FSWP performs the FFT on covers the last 67% of the data of the first FFT with only 33% new data. The third data block still covers 33% of the first data block and 67% of the second data block and so on.

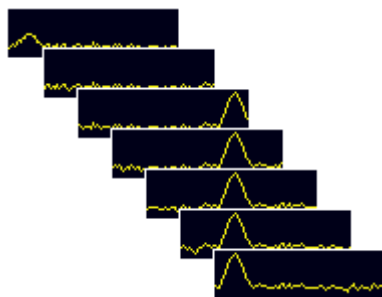


Figure 4-3: Overlapping FFTs


In "Manual" or "Auto" FFT mode, an FFT length of 4096 and a window length of 4096 (or the record length, if shorter) is used to calculate the spectrum.

Combining results - trace detector

If the record length permits, multiple overlapping windows are calculated and combined to create the final spectrum using the selected trace detector. If necessary, the trace detector is also used to reduce the number of calculated frequency points (defined by the FFT length) to the defined number of measurement points. By default, the Auto-peak trace detector is used.



Due to the fact that the frequency points are reduced to the number of measurement points, using a detector other than Auto Peak and fewer than 4096 measurement points may lead to wrong level results.

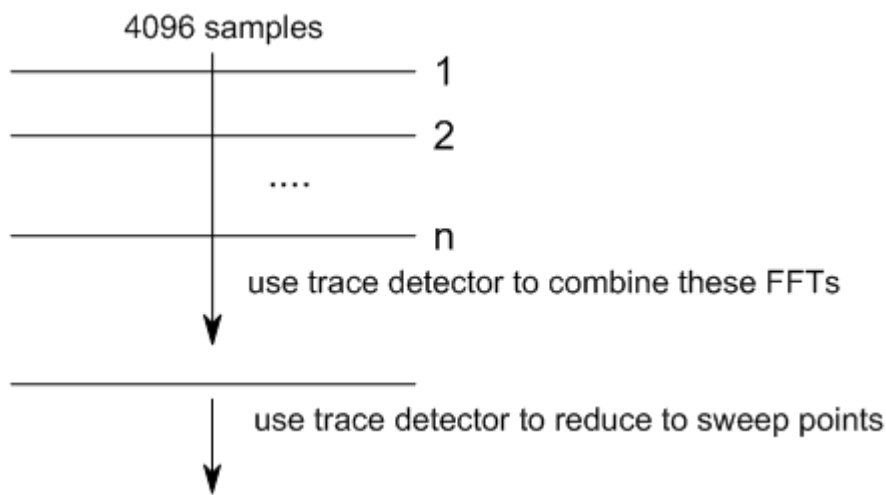

4.4.3 Dependencies Between FFT Parameters

FFT analysis in the R&S FSWP is highly configurable. Several parameters, including the resolution bandwidth, record length, and FFT length, can be defined according to the user's requirements. Note, however, that several parameters are correlated and not all can be configured independently of the others.

Record Length

Defines the number of I/Q samples to capture. By default, the number of measurement points is used. The record length is calculated as the measurement time multiplied by the sample rate.

If you change the record length, the [Meas Time](#) is automatically changed, as well.

For FFTs performed using only a single window ("Single" mode), the record length (which is then identical to the FFT length) may not exceed 512k.

FFT Length

Defines the number of frequency points determined by each FFT calculation. The more points are used, the higher the resolution in the spectrum becomes, but the longer the calculation takes.

In "Auto" or "Manual" mode, an FFT length of 4096 is used.

In advanced FFT mode, the FFT length can be defined by the user. If you use the arrow keys or the rotary knob to change the FFT length, the value is incremented or decremented by powers of 2. If you enter the value manually, any integer value from 3 to 524288 is available.

If the FFT length is longer than the [Window Length](#) the sample data is filled up with zeros up to the FFT length. The FFT is then performed using interpolated frequency points.

For an FFT length that is not a power of 2, a DFT (discrete Fourier transform) is performed, which requires more time for calculation, but avoids the effects of interpolation.

In order to display all calculated frequency points (defined by the FFT length), the number of measurement points is set to the FFT length automatically in advanced FFT mode.

Window Length

Defines the number of samples to be included in a single window in averaging mode. (In single mode, the window length corresponds to the ["Record Length"](#) on page 51.)

Values from 3 to 4096 are available in "Manual" mode; in "Advanced" FFT mode, values from 3 to 524288 are available. However, the window length may not be longer than the [FFT Length](#).

If the window length is shorter than the [FFT Length](#), the sample data is filled up with zeros up to the FFT length.

If the window length is longer than the [Record Length](#) (that is, not enough samples are available), a window length the size of the [Record Length](#) is used for calculation.

The window length and the [Window Overlap](#) determine how many FFT calculations must be performed for each record in averaging mode (see ["Transformation Algorithm"](#) on page 52).

4.4.4 Frequency Resolution of FFT Results - RBW

The **resolution bandwidth** defines the minimum frequency separation at which the individual components of a spectrum can be distinguished. Small values result in a high precision, as the distance between two distinguishable frequencies is small. Higher values decrease the precision, but increase measurement speed.

The RBW is determined by the following equation:

$$RBW = \text{Normalized Bandwidth} * \frac{\text{Sample Rate}}{\text{Window Length}}$$

Equation 4-1: Definition of RBW

(Note: The normalized bandwidth is a fixed value that takes the noise bandwidth of the window function into consideration.)

The maximum RBW is restricted by the [Analysis Bandwidth](#), or by the following equation, whichever is higher:

$$RBW_{max} = \frac{\text{Normalized Bandwidth} * \text{Sample Rate}}{3}$$

If a higher spectral resolution is required, the number of samples must be increased by using a higher sample rate or longer record length.

The minimum achievable RBW depends on the sample rate and record length, according to the following equation:

$$RBW_{min} = \frac{\text{NormalizedBandwidth} * \text{Sample Rate}}{\min(4096, \text{Record Length})}$$

To simplify operation, some parameters are coupled and automatically calculated, such as record length and RBW.

RBW mode

Depending on the selected RBW mode, the resolution bandwidth is either determined automatically or can be defined manually.

Auto mode:

This is the default mode in the I/Q Analyzer. The RBW is determined automatically depending on the [Sample Rate](#) and [Window Length](#), where the window length corresponds to the [Record Length](#), or a maximum of 4096.

If the record length is larger than the window length, multiple windows are combined; the FFT length is 4096.

A Flatop window function is used.

Manual mode:

The RBW can be defined by the user.

The [Window Length](#) is adapted to comply with [Equation 4-1](#). Since only window lengths with integer values can be employed, the [Sample Rate](#) is adapted, if necessary, to obtain an integer window length value.

If the record length is larger than the window length, multiple windows are combined; the FFT length is 4096.

A Flatop window function is used.

Advanced FFT mode

The RBW is determined by the [advanced FFT parameters](#), depending on the selected [FFT Calculation Methods](#) method.

4.4.5 FFT Calculation Methods

FFT calculation can be performed using different methods.

Single

In single mode, one FFT is calculated for the entire record length, that means the window length is identical to the record length.

If the defined **FFT Length** is larger than the record length, zeros are appended to the captured data to reach the FFT length.



Figure 4-4: FFT parameters for single FFT calculation

Averaging

In averaging mode, several overlapping FFTs are calculated for each record; the results are combined to determine the final FFT result for the record.

The number of FFTs to be combined is determined by the **Window Overlap** and the **Window Length**.



Figure 4-5: FFT parameters for averaged FFT calculation

4.5 I/Q Analyzer in MSRA Operating Mode

The I/Q Analyzer can also be used in MSRA operating mode. The MSRA Master channel is implemented as an I/Q Analyzer application. Only this channel captures data in MSRA mode. Thus, the functions and settings described for data acquisition in the I/Q Analyzer application also apply to the MSRA Master. Furthermore, the I/Q Analyzer can be used to analyze data in MSRA mode. Thus, the result displays and analysis functions provided by the I/Q Analyzer can also be used in MSRA mode.


Note that the available functions and settings for the I/Q Analyzer in MSRA mode vary depending on whether the MSRA Master channel or an I/Q Analyzer application channel is selected. For example, data acquisition settings for an I/Q Analyzer **application** channel in MSRA mode configure the analysis interval, not an actual data capture from the input signal. And measurements in the time and frequency domain are only available in an I/Q Analyzer **application** channel in MSRA mode.

Analysis line

A frequent question when analyzing multi-standard signals is how each data channel is correlated (in time) to others. Thus, an analysis line has been introduced. The analysis line is a common time marker for all MSRA applications. It can be positioned in any MSRA application or the MSRA Master and is then adjusted in all other applications. Thus, you can easily analyze the results at a specific time in the measurement in all applications and determine correlations.

If the marked point in time is contained in the analysis interval of the application, the line is indicated in all time-based result displays, such as time, symbol, slot or bit diagrams. By default, the analysis line is displayed, however, it can be hidden from view manually. In all result displays, the "AL" label in the window title bar indicates whether or not the analysis line lies within the analysis interval or not:

- **orange "AL"**: the line lies within the interval
- **white "AL"**: the line lies within the interval, but is not displayed (hidden)
- **no "AL"**: the line lies outside the interval

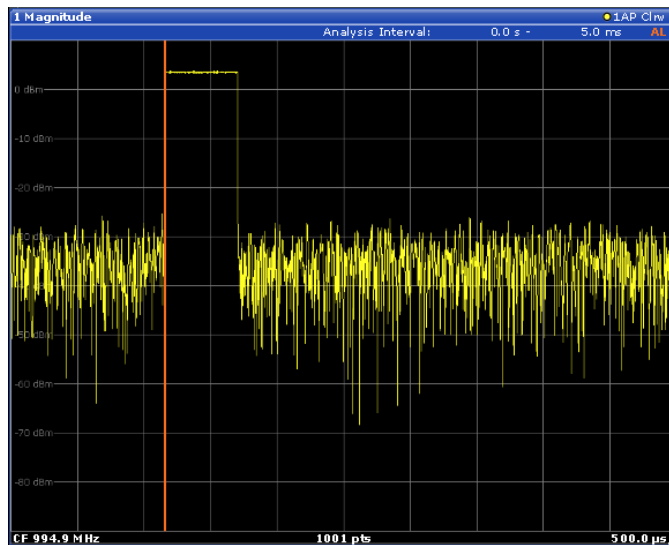

For details on the MSRA operating mode see the R&S FSWP MSRA User Manual.

5 Configuration

The I/Q Analyzer is a special application on the R&S FSWP, which you activate using the MODE key on the front panel.

When you switch to an I/Q Analyzer measurement channel the first time, a set of parameters is passed on from the currently active application. After initial setup, the parameters for the measurement channel are stored upon exiting and restored upon re-entering the channel. Thus, you can switch between applications quickly and easily.

When you activate a measurement channel for the I/Q Analyzer application, data acquisition from the input signal is started automatically with the default configuration. It can be configured in the I/Q Analyzer "Overview" dialog box, which is displayed when you select the "Overview" softkey from any menu.



The main configuration settings and dialog boxes are also available via the "I/Q Analyzer" menu which is displayed when you press the MEAS CONFIG key.

The remote commands required to perform these tasks are described in [Chapter 8.6, "Configuring I/Q Analyzer Measurements"](#), on page 90.



Importing and Exporting I/Q Data

The I/Q data to be evaluated in the I/Q Analyzer application can not only be captured by the I/Q Analyzer itself, it can also be imported to the R&S FSWP, provided it has the correct format. Furthermore, the captured I/Q data from the I/Q Analyzer can be exported for further analysis in external applications.


For details see [Chapter 4.3, "I/Q Data Import and Export"](#), on page 23.

• Configuration Overview	32
• Import/Export Functions	34
• Configuring Data Inputs and Outputs	35
• Configuring the Amplitude	39
• Configuring Frequency Characteristics	44
• Configuring Triggered Measurements	45
• Data Acquisition and Bandwidth Settings	49
• Display Configuration	56
• Adjusting Settings Automatically	56

5.1 Configuration Overview



Throughout the measurement channel configuration, an overview of the most important currently defined settings is provided in the "Overview". The "Overview" is displayed when you select the "Overview" icon, which is available at the bottom of all softkey menus.

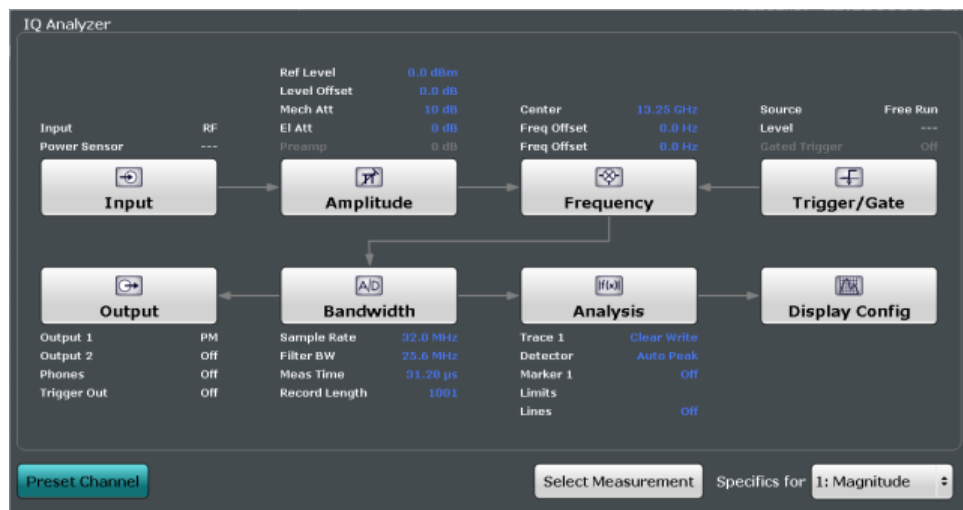

In addition to the main measurement settings, the "Overview" provides quick access to the main settings dialog boxes. The individual configuration steps are displayed in the order of the data flow. Thus, you can easily configure an entire measurement channel from input over processing to output and analysis by stepping through the dialog boxes as indicated in the "Overview".



The Overview varies depending on the application; for detailed descriptions see the corresponding application User Manual.

The "Overview" for the I/Q Analyzer Master provides quick access to the following configuration dialog boxes (listed in the recommended order of processing):

1. Configuring the input
See [Chapter 5.3.1, "Inputs"](#), on page 36
2. Configuring level characteristics
See [Chapter 5.4, "Configuring the Amplitude"](#), on page 39
3. Configuring Frequency Characteristics
See [Chapter 5.5, "Configuring Frequency Characteristics"](#), on page 44
4. Configuring triggered and gated measurements
See [Chapter 5.6, "Configuring Triggered Measurements"](#), on page 45
5. Configuring the output
See [Chapter 5.3.2, "Outputs"](#), on page 37
6. Configuring the bandwidth
See [Chapter 5.7, "Data Acquisition and Bandwidth Settings"](#), on page 49
7. Analyzing results
See the User Manual of the R&S FSWP
8. Configuring the display
See [Chapter 5.8, "Display Configuration"](#), on page 56

To configure settings

- ▶ Select any button in the "Overview" to open the corresponding dialog box. Select a setting in the channel bar (at the top of the measurement channel tab) to change a specific setting.

For step-by-step instructions on configuring I/Q Analyzer measurements, see [Chapter 7.1, "How to Perform Measurements in the I/Q Analyzer Application"](#), on page 60.

Preset Channel	34
Specifics for	34

Preset Channel

Select the "Preset Channel" button in the lower lefthand corner of the "Overview" to restore all measurement settings **in the current channel** to their default values.

Note that the PRESET key restores the entire instrument to its default values and thus closes **all measurement channels** on the R&S FSWP (except for the default channel)!

Remote command:

`SYSTem:PRESet:CHANnel[:EXECute]` on page 73

Specifics for

The measurement channel may contain several windows for different results. Thus, the settings indicated in the "Overview" and configured in the dialog boxes vary depending on the selected window.

Select an active window from the "Specifics for" selection list that is displayed in the "Overview" and in all window-specific configuration dialog boxes.

The "Overview" and dialog boxes are updated to indicate the settings for the selected window.

5.2 Import/Export Functions



The following import and export functions are available via softkeys in the "Save/Recall" menu which is displayed when you select the "Save" or "Open" icon in the toolbar.



These functions are only available if no measurement is running. In particular, if [Continuous Sweep/RUN CONT](#) is active, the import/export functions are not available.

Some functions for particular data types are (also) available via softkeys or dialog boxes in the corresponding menus, e.g. trace data or marker peak lists.



For a description of the other functions in the "Save/Recall" menu see the R&S FSWP User Manual.

Import.....	35
L I/Q Import.....	35
Export.....	35
L I/Q Export.....	35

Import

Provides functions to import data.

I/Q Import ← Import

Opens a file selection dialog box to select an import file that contains IQ data. This function is only available in single sweep mode and only in applications that process I/Q data, such as the I/Q Analyzer or optional applications.

Note that the I/Q data must have a specific format as described in the R&S FSWP I/Q Analyzer and I/Q Input User Manual.

I/Q import is not available in MSRA mode.

Remote command:

[MMEMory:LOAD:IQ:STATe](#) on page 127

Export

Opens a submenu to configure data export.

I/Q Export ← Export

Opens a file selection dialog box to select an export file to which the IQ data will be stored. This function is only available in single sweep mode, and only in applications that process I/Q data, such as the I/Q Analyzer or optional applications.

Note: Secure user mode.

In secure user mode, settings that are to be stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "Memory full" error may occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

For details see "Protecting Data Using the Secure User Mode" in the "Data Management" section of the R&S FSWP User Manual.

Remote command:

[MMEMory:STORe<n>:IQ:STATe](#) on page 128

[MMEMory:STORe<n>:IQ:COMMeNt](#) on page 127

5.3 Configuring Data Inputs and Outputs

The R&S FSWP can analyze signals from different input sources and provide various types of output (such as video or trigger signals).

• Inputs.....	36
• Outputs.....	37

5.3.1 Inputs

The input sources supported by the I/Q Analyzer are similar to those in the Spectrum application. For a comprehensive description on how to configure power sensors and external generators, please refer to the documentation of the Spectrum application.

To configure input sources

Input sources can be configured via the "Input" dialog box.

To display the "Input" dialog box, do one of the following:

1. Select "Input" from the "Overview" dialog box.
2. Press the INPUT/OUTPUT key and then the "Input Source Config" softkey.

The remote commands required to configure inputs are described in [Chapter 8.6.3, "Configuring Level Characteristics"](#), on page 94, [Chapter 8.6.4, "Configuring the Attenuator"](#), on page 96 and [Chapter 8.6.5, "Configuring the Preamplifier"](#), on page 97.

Radio Frequency State	36
Input Coupling	36
Impedance	36
High-Pass Filter 1...3 GHz	37
YIG-Preselector	37

Radio Frequency State

Activates input from the RF INPUT connector.

Remote command:

[INPut:SElect](#) on page 92

Input Coupling

The RF input of the R&S FSWP can be coupled by alternating current (AC) or direct current (DC).

AC coupling blocks any DC voltage from the input signal. This is the default setting to prevent damage to the instrument. Very low frequencies in the input signal may be distorted.

However, some specifications require DC coupling. In this case, you must protect the instrument from damaging DC input voltages manually. For details, refer to the data sheet.

Remote command:

[INPut:COUPling](#) on page 91

Impedance

For some measurements, the reference impedance for the measured levels of the R&S FSWP can be set to 50 Ω or 75 Ω .

75 Ω should be selected if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = 10 log (75 Ω /50 Ω).

This value also affects the unit conversion.

Remote command:

`INPut:IMPedance` on page 92

High-Pass Filter 1...3 GHz

Activates an additional internal high-pass filter for RF input signals from 1 GHz to 3 GHz. This filter is used to remove the harmonics of the analyzer in order to measure the harmonics for a DUT, for example.

This function requires an additional hardware option.

(Note: for RF input signals outside the specified range, the high-pass filter has no effect. For signals with a frequency of approximately 4 GHz upwards, the harmonics are suppressed sufficiently by the YIG filter.)

Remote command:

`INPut:FILTer:HPASs[:STATe]` on page 91

YIG-Preselector

Activates or deactivates the YIG-preselector, if available on the R&S FSWP.

An internal YIG-preselector at the input of the R&S FSWP ensures that image frequencies are rejected. However, this is only possible for a restricted bandwidth. In order to use the maximum bandwidth for signal analysis you can deactivate the YIG-preselector at the input of the R&S FSWP, which may lead to image-frequency display.

Note that the YIG-preselector is active only on frequencies greater than 8 GHz. Therefore, switching the YIG-preselector on or off has no effect if the frequency is below that value.

Note:

For the following measurements, the YIG-Preselector is off by default (if available).

- VSA

Remote command:

`INPut:FILTer:YIG[:STATe]` on page 92

5.3.2 Outputs

The output supported by the I/Q Analyzer are similar to those in the Phase Noise and Spectrum applications.

To configure output

Output can be configured via the "Output" dialog box.

To display the "Output" dialog box, do one of the following:

1. Select "Output" from the "Overview" dialog box.
2. Press the INPUT/OUTPUT key and then the "Output Config" softkey.

For a comprehensive description on how to configure the DC Power sources and the Signal Source, please refer to the documentation of the R&S FSWP.

Noise Source.....	38
Trigger 1/2.....	38
L Output Type.....	38
L Level.....	39
L Pulse Length.....	39
L Send Trigger.....	39

Noise Source

Switches the supply voltage for an external noise source on or off.

External noise sources are useful when you are measuring power levels that fall below the noise floor of the R&S FSWP itself, for example when measuring the noise level of a DUT.

For details see [Chapter 4.2.3, "Input from Noise Sources"](#), on page 22

Remote command:

`DIAGnostic:SERvice:NSource` on page 93

Trigger 1/2

Defines the usage of the variable TRIGGER INPUT/OUTPUT connectors, where:

"Trigger 1": TRIGGER INPUT/OUTPUT connector on the front panel

"Trigger 2": TRIGGER INPUT/OUTPUT connector on the front panel

Note: Providing trigger signals as output is described in detail in the R&S FSWP User Manual.

"Input"	The signal at the connector is used as an external trigger source by the R&S FSWP. Trigger input parameters are available in the "Trigger" dialog box.
"Output"	The R&S FSWP sends a trigger signal to the output connector to be used by connected devices. Further trigger parameters are available for the connector.

Remote command:

`OUTPut:TRIGger<port>:LEVel` on page 107

`OUTPut:TRIGger<port>:DIRection` on page 106

Output Type ← Trigger 1/2

Type of signal to be sent to the output

"Device Triggered"	(Default) Sends a trigger when the R&S FSWP triggers.
"Trigger Armed"	Sends a (high level) trigger when the R&S FSWP is in "Ready for trigger" state. This state is indicated by a status bit in the <code>STATUS:OPERation</code> register (bit 5), as well as by a low level signal at the AUX port (pin 9).
"User Defined"	Sends a trigger when user selects "Send Trigger" button. In this case, further parameters are available for the output signal.

Remote command:

`OUTPut:TRIGger<port>:OTYPe` on page 107

Level ← Output Type ← Trigger 1/2

Defines whether a constant high (1) or low (0) signal is sent to the output connector.

Remote command:

`OUTPut:TRIGger<port>:LEVel` on page 107

Pulse Length ← Output Type ← Trigger 1/2

Defines the length of the pulse sent as a trigger to the output connector.

Remote command:

`OUTPut:TRIGger<port>:PULSe:LENGth` on page 108

Send Trigger ← Output Type ← Trigger 1/2

Sends a user-defined trigger to the output connector immediately. Note that the trigger pulse level is always opposite to the constant signal level defined by the output "Level" setting, e.g. for "Level = High", a constant high signal is output to the connector until the "Send Trigger" button is selected. Then, a low pulse is sent.

Which pulse level will be sent is indicated by a graphic on the button.

Remote command:

`OUTPut:TRIGger<port>:PULSe:IMMediate` on page 107

5.4 Configuring the Amplitude

The amplitude is configured in the "Amplitude" dialog box. Amplitude settings are similar to those of the Spectrum application, except for a few functions

- [Configuring Level Characteristics](#)..... 39
- [Scaling the Level Axis](#)..... 42

5.4.1 Configuring Level Characteristics

To configure the amplitude settings

Amplitude settings can be configured via the AMPT key or in the "Amplitude" dialog box.

- ▶ To display the "Amplitude" dialog box, do one of the following:
 - Select "Amplitude" from the "Overview".
 - Select the AMPT key and then the "Amplitude Config" softkey.

Functions to configure amplitude characteristics described elsewhere:

- ["Input Coupling"](#) on page 36
- ["Impedance"](#) on page 36

- Scaling settings are described in [Chapter 5.4.2, "Scaling the Level Axis"](#), on page 42.

The remote commands required to configure amplitude characteristics are described in [Chapter 8.6.3, "Configuring Level Characteristics"](#), on page 94, [Chapter 8.6.4, "Configuring the Attenuator"](#), on page 96 and [Chapter 8.6.5, "Configuring the Preamplifier"](#), on page 97.

Reference Level.....	40
↳ Shifting the Display (Offset).....	40
↳ Unit.....	40
↳ Setting the Reference Level Automatically (Auto Level).....	41
Attenuation Mode / Value.....	41
Preamplifier.....	41
Noise cancellation.....	42

Reference Level

Defines the expected maximum reference level. Signal levels above this value may not be measured correctly. This is indicated by an "IF OVLD" status display.

The reference level is also used to scale power diagrams; the reference level is then used as the maximum on the y-axis.

Since the hardware of the R&S FSWP is adapted according to this value, it is recommended that you set the reference level close above the expected maximum signal level to ensure an optimum measurement (no compression, good signal-to-noise ratio).

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel` on page 95

Shifting the Display (Offset) ← Reference Level

Defines an arithmetic level offset. This offset is added to the measured level. In some result displays, the scaling of the y-axis is changed accordingly.

Define an offset if the signal is attenuated or amplified before it is fed into the R&S FSWP so the application shows correct power results. All displayed power level results will be shifted by this value.

The setting range is ± 200 dB in 0.01 dB steps.

Note, however, that the *internal* reference level (used to adjust the hardware settings to the expected signal optimally) ignores any "Reference Level Offset". Thus, it is important to keep in mind the actual power level the R&S FSWP must handle, and not to rely on the displayed reference level (internal reference level = displayed reference level - offset).

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet` on page 95

Unit ← Reference Level

The R&S FSWP measures the signal voltage at the RF input.

In the default state, the level is displayed at a power of 1 mW (= dBm). Via the known input impedance (50 Ω or 75 Ω , see ["Impedance"](#) on page 36), conversion to other units is possible.

The following units are available and directly convertible:

- dBm
- dBmV
- dB μ V
- dB μ A
- dBpW
- Volt
- Ampere
- Watt

Remote command:

[INPut:IMPedance](#) on page 92

[CALCulate<n>:UNIT:POWer](#) on page 95

Setting the Reference Level Automatically (Auto Level) ← Reference Level

Automatically determines a reference level which ensures that no overload occurs at the R&S FSWP for the current input data. At the same time, the internal attenuators are adjusted so the signal-to-noise ratio is optimized, while signal compression and clipping are minimized.

To determine the required reference level, a level measurement is performed on the R&S FSWP.

If necessary, you can optimize the reference level further by manually decreasing the attenuation level to the lowest possible value before an overload occurs, then decreasing the reference level in the same way.

You can change the measurement time for the level measurement if necessary (see ["Changing the Automatic Measurement Time \(Meastime Manual\)"](#) on page 58).

Remote command:

[\[SENSe:\]ADJust:LEVel](#) on page 120

Attenuation Mode / Value

The RF attenuation can be set automatically as a function of the selected reference level (Auto mode). This ensures that the optimum RF attenuation is always used. It is the default setting.

In "Manual" mode, you can set the RF attenuation in 1 dB steps (down to 0 dB). Other entries are rounded to the next integer value. The range is specified in the data sheet. If the defined reference level cannot be set for the defined RF attenuation, the reference level is adjusted accordingly and the warning "Limit reached" is displayed.

NOTICE! Risk of hardware damage due to high power levels. When decreasing the attenuation manually, ensure that the power level does not exceed the maximum level allowed at the RF input, as an overload may lead to hardware damage.

Remote command:

[INPut:ATTenuation](#) on page 96

[INPut:ATTenuation:AUTO](#) on page 97

Preamplifier

If the (optional) Preamplifier hardware is installed, a preamplifier can be activated for the RF input signal.

You can use a preamplifier to analyze signals from DUTs with low input power.

For R&S FSWP26 or higher models, the input signal is amplified by 30 dB if the preamplifier is activated.

For R&S FSWP8, the following settings are available:

- | | |
|---------|--|
| "Off" | Deactivates the preamplifier. |
| "15 dB" | The RF input signal is amplified by about 15 dB. |
| "30 dB" | The RF input signal is amplified by about 30 dB. |

Remote command:

[INPut:GAIN:STATe](#) on page 97

[INPut:GAIN\[:VALue\]](#) on page 97

Noise cancellation

The results can be corrected by the instrument's inherent noise, which increases the dynamic range.

In this case, a reference measurement of the instrument's inherent noise is carried out. The measured noise power is then subtracted from the power in the channel that is being analyzed (first active trace only).

The inherent noise of the instrument depends on the selected center frequency, resolution bandwidth and level setting. Therefore, the correction function is disabled whenever one of these parameters is changed. A disable message is displayed on the screen. To enable the correction function after changing one of these settings, activate it again. A new reference measurement is carried out.

Noise cancellation is also available in zero span.

Currently, noise cancellation is only available for the following trace detectors:

- RMS
- Average
- Sample
- Positive Peak

Remote command:

[\[SENSe:\]POWer:NCORrection](#) on page 96

5.4.2 Scaling the Level Axis

To configure the y-axis scaling settings

Vertical Axis settings can be configured via the AMPT key or in the "Amplitude" dialog box.

- ▶ To display the "Amplitude" dialog box, do one of the following:
 - Select "Amplitude" from the "Overview".
 - Select the AMPT key and then the "Scale Config" softkey.

The remote commands required to scale the y-axis are described in [Chapter 8.6.6, "Scaling the Y-Axis"](#), on page 98.

Range.....	43
Ref Level Position.....	43
Scaling.....	43
Y-Axis Max.....	43

Range

Defines the displayed y-axis range in dB.

The default value is 100 dB.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]` on page 98

Ref Level Position

Defines the reference level position, i.e. the position of the maximum AD converter value on the level axis in %, where 0 % corresponds to the lower and 100 % to the upper limit of the diagram.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition` on page 99

Scaling

Defines the scaling method for the y-axis.

"Logarithmic"	Logarithmic scaling (only available for logarithmic units - dB..., and A, V, Watt)
"Linear Unit"	Linear scaling in the unit of the measured signal
"Linear Per-cent"	Linear scaling in percentages from 0 to 100
"Absolute"	The labeling of the level lines refers to the absolute value of the reference level (not available for "Linear Percent")
"Relative"	The scaling is in dB, relative to the reference level (only available for logarithmic units - dB...). The upper line of the grid (reference level) is always at 0 dB.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 99

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MODE` on page 98

Y-Axis Max

Defines the maximum value of the y-axis in the currently selected diagram in either direction (in Volts). Thus, the y-axis scale starts at $-<Y\text{-Axis Max}>$ and ends at $+<Y\text{-Axis Max}>$.

The maximum y-axis value depends on the current reference level. If the reference level is changed, the "Y-Axis Max" value is automatically set to the new reference level (in V).

This command is only available if the evaluation mode for the I/Q Analyzer is set to "IQ Vector" or "Real/Imag".

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]` on page 98

5.5 Configuring Frequency Characteristics

Frequency settings for the input signal can be configured via the "Frequency" dialog box, which is displayed when you do one of the following:

- Select the **FREQ** key and then the "Frequency Config" softkey.
- Select "Frequency" from the "Overview".

The remote commands required to configure the frequency are described in [Chapter 8.6.7, "Configuring the Frequency"](#), on page 100.

Center frequency.....	44
Center Frequency Stepsize.....	44
Frequency Offset.....	44

Center frequency

Defines the center frequency of the signal in Hertz.

The allowed range of values for the center frequency depends on the frequency span.

$$\text{span} > 0: \text{span}_{\min}/2 \leq f_{\text{center}} \leq f_{\max} - \text{span}_{\min}/2$$

f_{\max} and span_{\min} depend on the instrument and are specified in the data sheet.

Remote command:

`[SENSe:]FREQuency:CENTer` on page 100

Center Frequency Stepsize

Defines the step size by which the center frequency is increased or decreased using the arrow keys.

When you use the rotary knob the center frequency changes in steps of only 1/10 of the "Center Frequency Stepsize".

The step size can be coupled to another value or it can be manually set to a fixed value.

"= Center"	Sets the step size to the value of the center frequency. The used value is indicated in the "Value" field.
"Manual"	Defines a fixed step size for the center frequency. Enter the step size in the "Value" field.

Remote command:

`[SENSe:]FREQuency:CENTer:STEP` on page 100

Frequency Offset

Shifts the displayed frequency range along the x-axis by the defined offset.

This parameter has no effect on the instrument's hardware, or on the captured data or on data processing. It is simply a manipulation of the final results in which absolute frequency values are displayed. Thus, the x-axis of a spectrum display is shifted by a constant offset if it shows absolute frequencies, but not if it shows frequencies relative to the signal's center frequency.

A frequency offset can be used to correct the display of a signal that is slightly distorted by the measurement setup, for example.

The allowed values range from -100 GHz to 100 GHz. The default setting is 0 Hz.

Note: In MSRA mode, this function is only available for the MSRA Master.

Remote command:


[SENSe:] FREQuency:OFFSet on page 101

5.6 Configuring Triggered Measurements

Trigger settings determine when the input signal is measured.

Trigger settings can be configured via the TRIG key or in the "Trigger" dialog box, which is displayed when you select the "Trigger" button in the "Overview".

External triggers from one of the TRIGGER INPUT/OUTPUT connectors on the R&S FSWP are configured in a separate tab of the dialog box.

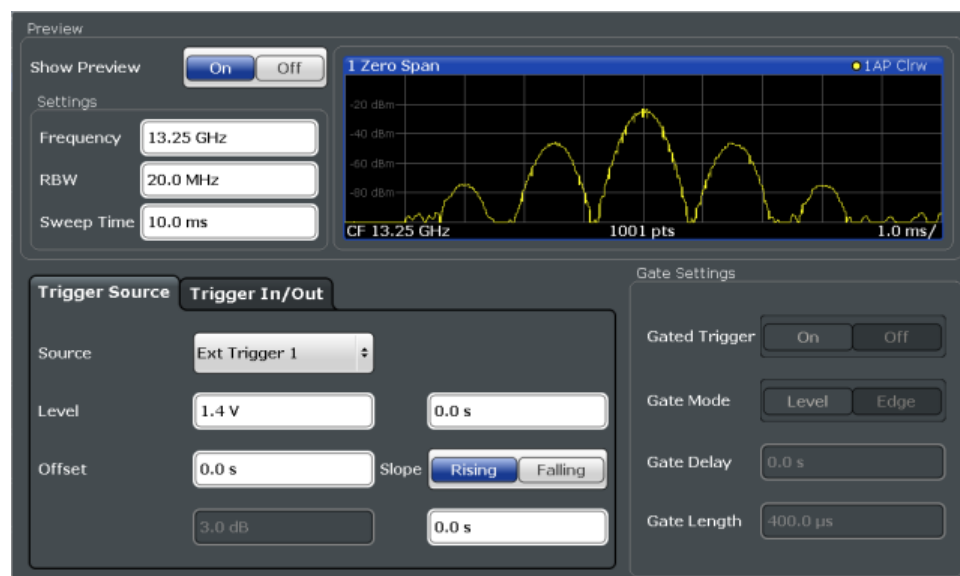

Conventional gating as in the Spectrum application is not available for the I/Q Analyzer; however, a special gating mode is available in remote control, see [Chapter 8.6.10, "Configuring Gated Measurements"](#), on page 108.

For step-by-step instructions on configuring triggered measurements, see the R&S FSWP User Manual.

Functions to configure trigger output described elsewhere:

- "Trigger 1/2" on page 38

The remote commands required to configure triggered measurements are described in Chapter 8.6.8, "Configuring Trigger", on page 102.

Trigger Source.....	46
L Free Run.....	46
L Ext. Trigger 1/2.....	46
L IF Power.....	47
L I/Q Power.....	47
L RF Power.....	47
L Power Sensor.....	48
L Time.....	48
Trigger Level.....	48
Repetition Interval.....	48
Trigger Offset.....	48
Hysteresis.....	49
Drop-Out Time.....	49
Trigger Holdoff.....	49
Slope.....	49

Trigger Source

Selects the trigger source. If a trigger source other than "Free Run" is set, "TRG" is displayed in the channel bar and the trigger source is indicated.

For gated measurements, this setting also selects the gating source.

Remote command:

TRIGger [:SEquence] :SOURce on page 105

Free Run ← Trigger Source

No trigger source is considered. Data acquisition is started manually or automatically and continues until stopped explicitly.

In its default state, the R&S FSWP performs free run measurements.

Remote command:

TRIG:SOUR IMM, see TRIGger [:SEquence] :SOURce on page 105

Ext. Trigger 1/2 ← Trigger Source

Data acquisition starts when the TTL signal fed into the specified input connector meets or exceeds the specified trigger level.

Note: The "External Trigger 1" softkey automatically selects the trigger signal from the TRIGGER 1 INPUT / OUTPUT connector on the front panel.

In the I/Q Analyzer application only "External Trigger 1" is supported.

For details see the "Instrument Tour" chapter in the R&S FSWP Getting Started manual.

"External Trigger 1"

Trigger signal from the TRIGGER 1 INPUT / OUTPUT connector.
(front panel)

"External Trigger 2"

Trigger signal from the TRIGGER 2 INPUT / OUTPUT connector.
(rear panel)

Note: Connector must be configured for "Input" in the "Outputs" configuration (see ["Trigger 1/2"](#) on page 38).

Remote command:

TRIG:SOUR EXT, TRIG:SOUR EXT2

See [TRIGger \[:SEQuence \] :SOURce](#) on page 105

IF Power ← Trigger Source

The R&S FSWP starts capturing data as soon as the trigger level is exceeded around the third intermediate frequency.

For frequency sweeps, the third IF represents the start frequency. The trigger bandwidth at the third IF depends on the RBW and sweep type.

For measurements on a fixed frequency (e.g. zero span or I/Q measurements), the third IF represents the center frequency.

This trigger source is only available for RF input.

The available trigger levels depend on the RF attenuation and preamplification. A reference level offset, if defined, is also considered.

For details on available trigger levels and trigger bandwidths see the data sheet.

Remote command:

TRIG:SOUR IFP, see [TRIGger \[:SEQuence \] :SOURce](#) on page 105

I/Q Power ← Trigger Source

This trigger source is only available in the I/Q Analyzer application and in applications that process I/Q data.

Triggers the measurement when the magnitude of the sampled I/Q data exceeds the trigger threshold.

The trigger bandwidth corresponds to the bandwidth setting for I/Q data acquisition.

(See ["Analysis Bandwidth"](#) on page 51).

Remote command:

TRIG:SOUR IQP, see [TRIGger \[:SEQuence \] :SOURce](#) on page 105

RF Power ← Trigger Source

Defines triggering of the measurement via signals which are outside the displayed measurement range.

For this purpose the instrument uses a level detector at the first intermediate frequency.

The input signal must be in the frequency range between 500 MHz and 8 GHz.

The resulting trigger level at the RF input depends on the RF attenuation and preamplification. For details on available trigger levels see the instrument's data sheet.

Note: If the input signal contains frequencies outside of this range (e.g. for fullspan measurements), the measurement may be aborted and a message indicating the allowed input frequencies is displayed in the status bar.

A "Trigger Offset", "Trigger Polarity" and "Trigger Holdoff" (to improve the trigger stability) can be defined for the RF trigger, but no "Hysteresis".

Remote command:

TRIG:SOUR RFP, see TRIGger[:SEquence]:SOURce on page 105

Power Sensor ← Trigger Source

Uses an external power sensor as a trigger source. This option is only available if a power sensor is connected and configured.

Note: For R&S power sensors, the "Gate Mode" *Lvl* is not supported. The signal sent by these sensors merely reflects the instant the level is first exceeded, rather than a time period. However, only time periods can be used for gating in level mode. Thus, the trigger impulse from the sensors is not long enough for a fully gated measurement; the measurement cannot be completed.

Remote command:

TRIG:SOUR PSE, see TRIGger[:SEquence]:SOURce on page 105

Time ← Trigger Source

Triggers in a specified repetition interval.

Remote command:

TRIG:SOUR TIME, see TRIGger[:SEquence]:SOURce on page 105

Trigger Level

Defines the trigger level for the specified trigger source.

For details on supported trigger levels, see the data sheet.

Remote command:

TRIGger[:SEquence]:LEVel:IFPower on page 104

TRIGger[:SEquence]:LEVel:IQPower on page 104

TRIGger[:SEquence]:LEVel[:EXternal<port>] on page 103

TRIGger[:SEquence]:LEVel:RFPower on page 104

Repetition Interval

Defines the repetition interval for a time trigger. The shortest interval is 2 ms.

The repetition interval should be set to the exact pulse period, burst length, frame length or other repetitive signal characteristic.

Remote command:

TRIGger[:SEquence]:TIME:RINTerval on page 106

Trigger Offset

Defines the time offset between the trigger event and the start of the measurement.

offset > 0:	Start of the measurement is delayed
offset < 0:	Measurement starts earlier (pre-trigger) Only possible for zero span (e.g. I/Q Analyzer application) and gated trigger switched off Maximum allowed range limited by the measurement time: $\text{pretrigger}_{\text{max}} = \text{measurement time}_{\text{max}}$

Tip: To determine the trigger point in the sample (for "External" or "IF Power" trigger source), use the `TRACe:IQ:TPISample?` command.

Remote command:

`TRIGger[:SEquence]:HOLDoff[:TIME]` on page 102

Hysteresis

Defines the distance in dB to the trigger level that the trigger source must exceed before a trigger event occurs. Setting a hysteresis avoids unwanted trigger events caused by noise oscillation around the trigger level.

This setting is only available for "IF Power" trigger sources. The range of the value is between 3 dB and 50 dB with a step width of 1 dB.

Remote command:

`TRIGger[:SEquence]:IFPower:HYSteresis` on page 103

Drop-Out Time

Defines the time the input signal must stay below the trigger level before triggering again.

Remote command:

`TRIGger[:SEquence]:DTIME` on page 102

Trigger Holdoff

Defines the minimum time (in seconds) that must pass between two trigger events. Trigger events that occur during the holdoff time are ignored.

Remote command:

`TRIGger[:SEquence]:IFPower:HOLDoff` on page 102

Slope

For all trigger sources except time you can define whether triggering occurs when the signal rises to the trigger level or falls down to it.

Remote command:

`TRIGger[:SEquence]:SLOPe` on page 104

5.7 Data Acquisition and Bandwidth Settings

How data is to be acquired is configured in the "Bandwidth" dialog box.

- [Data Acquisition](#)..... 49
- [Sweep Settings](#)..... 54

5.7.1 Data Acquisition

The data acquisition settings define which parts of the input signal are captured for further evaluation in the applications. They are configured in the "Data Acquisition" tab of the "Bandwidth" dialog box.

- ▶ To display this dialog box, do one of the following:
 - Select the "Bandwidth" button in the configuration "Overview"
 - Select the BW key and then the "Data Acquisition" softkey.
 - Select the "Data Acquisition" softkey in the "I/Q Analyzer" menu.

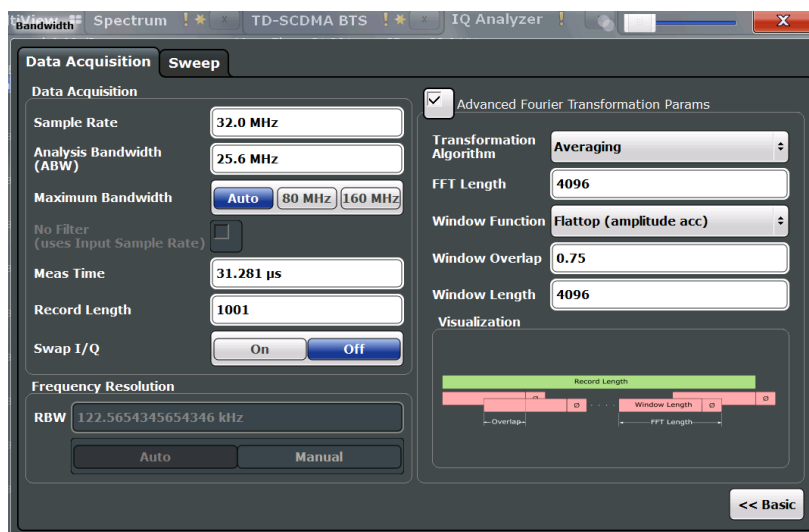


Figure 5-1: Data acquisition settings with advanced FFT parameters



MSRA operating mode

In MSRA operating mode, only the MSRA Master channel actually captures data from the input signal. The data acquisition settings for the I/Q Analyzer application in MSRA mode define the analysis interval.

For details on the MSRA operating mode see the R&S FSWP MSRA User Manual.

The remote commands required to perform these tasks are described in [Chapter 8.6.11, "Configuring Data Acquisition"](#), on page 110.

Sample Rate.....	50
Analysis Bandwidth.....	51
Meas Time.....	51
Record Length.....	51
Swap I/Q.....	51
RBW.....	52
Advanced FFT mode / Basic settings.....	52
L Transformation Algorithm.....	52
L FFT Length.....	53
L Window Function.....	53
L Window Overlap.....	53
L Window Length.....	53

Sample Rate

Defines the I/Q data sample rate of the R&S FSWP. This value is dependent on the defined [Analysis Bandwidth](#) and the defined signal source.

The following rule applies:

$$\text{sample rate} = \text{analysis bandwidth} / 0.8$$

For details on the dependencies see [Chapter 4.1.1, "Sample Rate and Maximum Usable I/Q Bandwidth for RF Input"](#), on page 18.

Remote command:

[TRACe: IQ:SRATe](#) on page 116

Analysis Bandwidth

Defines the flat, usable bandwidth of the final I/Q data. This value is dependent on the defined [Sample Rate](#) and the defined signal source.

The following rule applies:

$$\text{analysis bandwidth} = 0.8 * \text{sample rate}$$

Remote command:

[TRACe: IQ:BWIDth](#) on page 114

Meas Time

Defines the I/Q acquisition time. By default, the measurement time is calculated as the number of I/Q samples ("Record Length") divided by the sample rate. If you change the measurement time, the [Record Length](#) is automatically changed, as well.

For details on the maximum number of samples see also [Chapter 4.1.1, "Sample Rate and Maximum Usable I/Q Bandwidth for RF Input"](#), on page 18.

Remote command:

[\[SENSe:\] SWEep: TIME](#) on page 81

Record Length

Defines the number of I/Q samples to record. By default, the number of measurement points is used. The record length is calculated as the measurement time multiplied by the sample rate. If you change the record length, the [Meas Time](#) is automatically changed, as well.

Note: For the I/Q vector result display, the number of I/Q samples to record ("Record Length") must be identical to the number of trace points to be displayed ("Measurement Points"). Thus, the measurement points are not editable for this result display. If the "Record Length" is edited, the measurement points are adapted automatically. For record lengths outside the valid range of measurement points, i.e. less than 101 points or more than 100001 points, the diagram does not show valid results.

Remote command:

[TRACe: IQ: RLENgth](#) on page 114

[TRACe: IQ: SET](#) on page 114

Swap I/Q

Activates or deactivates the inverted I/Q modulation. If the I and Q parts of the signal from the DUT are interchanged, the R&S FSWP can do the same to compensate for it.

On	I and Q signals are interchanged Inverted sideband, $Q+j*I$
Off	I and Q signals are not interchanged Normal sideband, $I+j*Q$

Remote command:

`[SENSe:]SWAPiq` on page 113

RBW

Defines the resolution bandwidth for Spectrum results. The available RBW values depend on the sample rate and record length.

(See [Chapter 4.4.4, "Frequency Resolution of FFT Results - RBW"](#), on page 28).

Depending on the selected RBW mode, the value is either determined automatically or can be defined manually. As soon as you enter a value in the input field, the RBW mode is changed to "Manual".

This setting is only available if a Spectrum window is active.

If the "Advanced Fourier Transformation Params" option is enabled, advanced FFT mode is selected and the RBW cannot be defined directly.

Note that the RBW is correlated with the [Sample Rate](#) and [Record Length](#) (and possibly the [Window Function](#) and [Window Length](#)). Changing any one of these parameters may cause a change to one or more of the other parameters. For more information see [Chapter 4.4, "Basics on FFT"](#), on page 24.

"Auto mode" (Default) The RBW is determined automatically depending on the [Sample Rate](#) and [Record Length](#).

"Manual mode" The RBW can be defined by the user. The user-defined RBW is used and the [Window Length](#) (and possibly [Sample Rate](#)) are adapted accordingly.

"Advanced FFT mode" This mode is used if the "Advanced Fourier Transformation Params" option is enabled. The RBW is determined by the [advanced FFT parameters](#).

Remote command:

`[SENSe:]IQ:BANDwidth|BWIDth:MODE` on page 111

`[SENSe:]IQ:BANDwidth|BWIDth:RESolution` on page 111

Advanced FFT mode / Basic settings

Shows or hides the "Advanced Fourier Transformation" parameters in the "Data Acquisition" dialog box.

These parameters are only available and required for the advanced FFT mode.

Note that if the advanced FFT mode is used, the [RBW](#) settings are not available.

For more information see [Chapter 4.4.4, "Frequency Resolution of FFT Results - RBW"](#), on page 28.

Transformation Algorithm ← Advanced FFT mode / Basic settings

Defines the FFT calculation method.

- "Single" One FFT is calculated for the entire record length; if the [FFT Length](#) is larger than the record length, zeros are appended to the captured data.
- "Averaging" Several overlapping FFTs are calculated for each record; the results are combined to determine the final FFT result for the record. The number of FFTs to be averaged is determined by the [Window Overlap](#) and the [Window Length](#).

Remote command:

`[SENSe:] IQ:FFT:ALGORITHM` on page 112

FFT Length ← **Advanced FFT mode / Basic settings**

Defines the number of frequency points determined by each FFT calculation. The more points are used, the higher the resolution in the spectrum becomes, but the longer the calculation takes.

In advanced FFT mode, the number of measurement points is set to the FFT length automatically.

Note: If you use the arrow keys or the rotary knob to change the FFT length, the value is incremented or decremented by powers of 2.

If you enter the value manually, any integer value from 3 to 524288 is available.

Remote command:

`[SENSe:] IQ:FFT:LENGTH` on page 112

Window Function ← **Advanced FFT mode / Basic settings**

In the I/Q analyzer you can select one of several FFT window types.

The following window types are available:

- Blackman-Harris
- Flattop
- Gauss
- Rectangular
- 5-Term

Remote command:

`[SENSe:] IQ:FFT:WINDOW:TYPE` on page 113

Window Overlap ← **Advanced FFT mode / Basic settings**

Defines the part of a single FFT window that is re-calculated by the next FFT calculation when using multiple FFT windows.

Remote command:

`[SENSe:] IQ:FFT:WINDOW:OVERlap` on page 113

Window Length ← **Advanced FFT mode / Basic settings**

Defines the number of samples to be included in a single FFT window in averaging mode. (In single mode, the window length corresponds to the ["Record Length"](#) on page 51.)

Values from 3 to 4096 are available in "Manual" mode; in "Advanced" FFT mode, values from 3 to 524288 are available.


However, the window length may not be longer than the [FFT Length](#).

Remote command:

[SENSe:] IQ:FFT:WINDow:LENGth on page 112

5.7.2 Sweep Settings

The sweep settings are configured via the SWEEP key or in the "Sweep" tab of the "Bandwidth" dialog box.

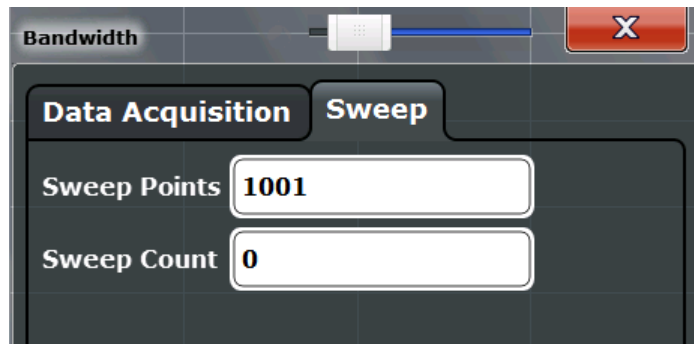

- ▶ To display this dialog box, do one of the following:
 - Select the "Bandwidth" button in the configuration "Overview" and switch to the "Sweep" tab.
 - Select the SWEEP key and then the "Sweep Config" softkey.

Sweep Points.....	54
Sweep / Average Count.....	55
Continuous Sweep/RUN CONT.....	55
Single Sweep/ RUN SINGLE.....	55
Continue Single Sweep.....	56

Sweep Points

In the I/Q Analyzer application, a specific frequency bandwidth is swept for a specified measurement time. During this time, a defined number of samples (= "Record Length") are captured. These samples are then evaluated by the applications. Therefore, in this case the number of sweep points does not define the amount of data to be acquired, but rather the number of trace points that are evaluated and displayed in the result diagrams.

Note: As opposed to previous versions of the I/Q Analyzer, the sweep settings are now window-specific. For some result displays, the sweep points may not be editable as they are determined automatically, or restrictions may apply.

For the I/Q vector result display, the number of I/Q samples to record ("Record Length") must be identical to the number of trace points to be displayed ("Sweep Points"). Thus, the sweep points are not editable for this result display. If the "Record Length" is edited, the sweep points are adapted automatically. For record lengths outside the valid range of sweep points, i.e. less than 101 points or more than 32001 points, the diagram does not show valid results.

Using fewer than 4096 sweep points with a detector other than Auto Peak may lead to wrong level results. For details see "[Combining results - trace detector](#)" on page 26.

Remote command:

[SENSe:] SWEep: POINTs on page 80

Sweep / Average Count

Defines the number of measurements to be performed in the single sweep mode. Values from 0 to 200000 are allowed. If the values 0 or 1 are set, one measurement is performed.

The sweep count is applied to all the traces in all diagrams.

If the trace modes "Average", "Max Hold" or "Min Hold" are set, this value also determines the number of averaging or maximum search procedures.

In continuous sweep mode, if sweep count = 0 (default), averaging is performed over 10 measurements. For sweep count =1, no averaging, maxhold or minhold operations are performed.

Remote command:

[SENSe:] SWEep: COUNT on page 80

TRACe: IQ: AVERAge: COUNT on page 79

Continuous Sweep/RUN CONT

After triggering, starts the sweep and repeats it continuously until stopped. This is the default setting.

While the measurement is running, the "Continuous Sweep" softkey and the RUN CONT key are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again. The results are not deleted until a new measurement is started.

Note: Sequencer. If the Sequencer is active, the "Continuous Sweep" softkey only controls the sweep mode for the currently selected channel; however, the sweep mode only has an effect the next time the Sequencer activates that channel, and only for a channel-defined sequence. In this case, a channel in continuous sweep mode is swept repeatedly.

Furthermore, the RUN CONT key controls the Sequencer, not individual sweeps. RUN CONT starts the Sequencer in continuous mode.

Remote command:

INITiate<n>: CONTinuous on page 76

Single Sweep/ RUN SINGLE

After triggering, starts the number of sweeps set in "Sweep Count". The measurement stops after the defined number of sweeps has been performed.

While the measurement is running, the "Single Sweep" softkey and the RUN SINGLE key are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again.

Note: Sequencer. If the Sequencer is active, the "Single Sweep" softkey only controls the sweep mode for the currently selected channel; however, the sweep mode only has an effect the next time the Sequencer activates that channel, and only for a channel-defined sequence. In this case, a channel in single sweep mode is swept only once by the Sequencer.

Furthermore, the RUN SINGLE key controls the Sequencer, not individual sweeps. RUN SINGLE starts the Sequencer in single mode.

If the Sequencer is off, only the evaluation for the currently displayed measurement channel is updated.

For details on the Sequencer, see the R&S FSWP User Manual.

Remote command:

`INITiate<n>[:IMMEDIATE]` on page 77

Continue Single Sweep

After triggering, repeats the number of sweeps set in "Sweep Count", without deleting the trace of the last measurement.


While the measurement is running, the "Continue Single Sweep" softkey and the RUN SINGLE key are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again.

Remote command:

`INITiate<n>:CONMeas` on page 76

5.8 Display Configuration

The captured signal can be displayed using various evaluation methods. All evaluation methods available for the current application are displayed in the evaluation bar in SmartGrid mode when you do one of the following:

- Select the  "SmartGrid" icon from the toolbar.
- Select the "Display Config" button in the "Overview".
- Select the "Display Config" softkey in the main application menu.

For a description of the available evaluation methods see [Chapter 3, "Measurement and Result Displays"](#), on page 13.

5.9 Adjusting Settings Automatically

Some settings can be adjusted by the R&S FSWP automatically according to the current measurement settings. In order to do so, a measurement is performed. The duration of this measurement can be defined automatically or manually.

To activate the automatic adjustment of a setting, select the corresponding function in the AUTO SET menu or in the configuration dialog box for the setting, where available.



MSRA operating mode

In MSRA operating mode, settings related to data acquisition can only be adjusted automatically for the MSRA Master, not the applications.



Adjusting settings automatically during triggered measurements

When you select an auto adjust function a measurement is performed to determine the optimal settings. If you select an auto adjust function for a triggered measurement, you are asked how the R&S FSWP should behave:

- (default:) The measurement for adjustment waits for the next trigger
- The measurement for adjustment is performed without waiting for a trigger. The trigger source is temporarily set to "Free Run". After the measurement is completed, the original trigger source is restored. The trigger level is adjusted as follows:
 - For IF Power and RF Power triggers:
Trigger Level = Reference Level - 15 dB
 - For Video trigger:
Trigger Level = 85 %

Remote command:

[SENSe:]ADJust:CONFigure:TRIG on page 119

Adjusting all Determinable Settings Automatically (Auto All).....	57
Adjusting the Center Frequency Automatically (Auto Freq).....	57
Setting the Reference Level Automatically (Auto Level).....	58
Resetting the Automatic Measurement Time (Meastime Auto).....	58
Changing the Automatic Measurement Time (Meastime Manual).....	58
Upper Level Hysteresis.....	58
Lower Level Hysteresis.....	58

Adjusting all Determinable Settings Automatically (Auto All)

Activates all automatic adjustment functions for the current measurement settings.

This includes:

- [Auto Frequency](#)
- [Auto Level](#)

Note: MSRA operating modes. In MSRA operating mode this function is only available for the MSRA Master, not the applications.

Remote command:

[SENSe:]ADJust:ALL on page 117

Adjusting the Center Frequency Automatically (Auto Freq)

The R&S FSWP adjusts the center frequency automatically.

The optimum center frequency is the frequency with the highest S/N ratio in the frequency span. As this function uses the signal counter, it is intended for use with sinusoidal signals.

Remote command:

[\[SENSe:\]ADJust:FREQuency](#) on page 119

Setting the Reference Level Automatically (Auto Level)

Automatically determines a reference level which ensures that no overload occurs at the R&S FSWP for the current input data. At the same time, the internal attenuators are adjusted so the signal-to-noise ratio is optimized, while signal compression and clipping are minimized.

To determine the required reference level, a level measurement is performed on the R&S FSWP.

If necessary, you can optimize the reference level further by manually decreasing the attenuation level to the lowest possible value before an overload occurs, then decreasing the reference level in the same way.

You can change the measurement time for the level measurement if necessary (see ["Changing the Automatic Measurement Time \(Meastime Manual\)"](#) on page 58).

Remote command:

[\[SENSe:\]ADJust:LEVel](#) on page 120

Resetting the Automatic Measurement Time (Meastime Auto)

Resets the measurement duration for automatic settings to the default value.

Remote command:

[\[SENSe:\]ADJust:CONFigure:DURation:MODE](#) on page 118

Changing the Automatic Measurement Time (Meastime Manual)

This function allows you to change the measurement duration for automatic setting adjustments. Enter the value in seconds.

Remote command:

[\[SENSe:\]ADJust:CONFigure:DURation:MODE](#) on page 118

[\[SENSe:\]ADJust:CONFigure:DURation](#) on page 118

Upper Level Hysteresis

When the reference level is adjusted automatically using the [Auto Level](#) function, the internal attenuators and the preamplifier are also adjusted. In order to avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines a lower threshold the signal must fall below (compared to the last measurement) before the reference level is adapted automatically.

Remote command:

[\[SENSe:\]ADJust:CONFigure:HYSTeresis:UPPer](#) on page 119

Lower Level Hysteresis

When the reference level is adjusted automatically using the [Auto Level](#) function, the internal attenuators and the preamplifier are also adjusted. In order to avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines a lower threshold the signal must fall below (compared to the last measurement) before the reference level is adapted automatically.

Remote command:

[\[SENSe:\]ADJust:CONFigure:HYSTeresis:LOWer](#) on page 118

6 Analysis

General result analysis settings concerning the trace, markers, lines etc. can be configured via the "Analysis" button in the "Overview". They are similar to the analysis functions in the Spectrum application, except for the features described here.

For more information, please refer to the R&S FSWP User Manual.

[Branch for Peak Search](#)..... 59

Branch for Peak Search

Defines which data is used for marker search functions in I/Q data.

This function is only available for the display configuration "Real/Imag (I/Q)" (see "[Real/Imag \(I/Q\)](#)" on page 15).

Note: The search settings apply to all markers, not only the currently selected one.

"Real"

Marker search functions are performed on the real trace of the I/Q measurement.

"Imag"

Marker search functions are performed on the imaginary trace of the I/Q measurement.

"Magnitude"

Marker search functions are performed on the magnitude of the I and Q data.

Remote command:

[CALCulate<n>:MARKer<m>:SEARCh](#) on page 126

7 How to Work with I/Q Data

The following step-by-step procedures demonstrate in detail how to perform various tasks when working with I/Q data.

- [How to Perform Measurements in the I/Q Analyzer Application](#)..... 60
- [How to Export and Import I/Q Data](#)..... 61

7.1 How to Perform Measurements in the I/Q Analyzer Application

The following step-by-step instructions demonstrate how to capture I/Q data on the R&S FSWP and how to analyze data in the I/Q Analyzer application.




How to perform a measurement in the time or frequency domain on I/Q data (in MSRA mode only) is described in the R&S FSWP MSRA User Manual.

- [How to Capture Baseband \(I/Q\) Data as RF Input](#).....60
- [How to Analyze Data in the I/Q Analyzer](#)..... 61

7.1.1 How to Capture Baseband (I/Q) Data as RF Input

By default, the I/Q Analyzer assumes the I/Q data is modulated on a carrier frequency and input via the RF INPUT connector on the R&S FSWP.

1. Select the MODE key and select the "I/Q Analyzer" application.
2. Select the "Overview" softkey to display the "Overview" for an I/Q Analyzer measurement.
3. Select the "Input" button to select and configure the "RF Input" signal source.
4. Select the "Amplitude" button to define the attenuation, reference level or other settings that affect the input signal's amplitude and scaling.
5. Select the "Frequency" button to define the input signal's center frequency.
6. Optionally, select the "Trigger" button and define a trigger for data acquisition, for example an IQ Power trigger to start capturing data only when a specific power is exceeded.
7. Select the "Bandwidth" button and define the bandwidth parameters for data acquisition:
 - "Sample rate" or "Analysis Bandwidth:" the span of the input signal to be captured for analysis, or the rate at which samples are captured (both values are correlated)

- "Measurement Time:" how long the data is to be captured
 - "Record Length": the number of samples to be captured (also defined by sample rate and measurement time)
8. Select the "Display Config" button and select up to six displays that are of interest to you.
Arrange them on the display to suit your preferences.
 9. Exit the SmartGrid mode.
 10. Start a new sweep with the defined settings.
 - a) Select the Sequencer icon () from the toolbar.
 - b) Set the Sequencer state to "OFF".
 - c) Select the RUN SINGLE key.

7.1.2 How to Analyze Data in the I/Q Analyzer

1. Select the MODE key and select the "I/Q Analyzer" application.
2. Select the "Overview" softkey to display the "Overview" for an I/Q Analyzer measurement.
3. Select the "Display Config" button and select up to six displays that are of interest to you.
Arrange them on the display to suit your preferences.
4. Exit the SmartGrid mode and select the "Overview" softkey to display the "Overview" again.
5. Select the "Analysis" button in the "Overview" to make use of the advanced analysis functions in the displays.
 - Configure a trace to display the average over a series of sweeps (on the "Trace" tab; if necessary, increase the "Average Count").
 - Configure markers and delta markers to determine deviations and offsets within the signal (on the "Marker" tab).


7.2 How to Export and Import I/Q Data



I/Q data can only be exported in applications that process I/Q data, such as the I/Q Analyzer or optional applications.


Capturing and exporting I/Q data

1. Press the PRESET key.

2. Press the MODE key and select the "IQ Analyzer" or any other application that supports I/Q data.
3. Configure the data acquisition.
4. Press the RUN SINGLE key to perform a single sweep measurement.
5. Select the  "Save" icon in the toolbar.
6. Select the "I/Q Export" softkey.
7. In the file selection dialog box, select a storage location and enter a file name.
8. Select "Save".

The captured data is stored to a file with the extension `.iq.tar`.

Importing I/Q data

1. Press the MODE key and select the "IQ Analyzer" or any other application that supports I/Q data.
2. If necessary, switch to single sweep mode by pressing the RUN SINGLE key.
3. Select the  "Open" icon in the toolbar.
4. Select the "I/Q Import" softkey.
5. Select the storage location and the file name with the `.iq.tar` file extension.
6. Select "Open".

The stored data is loaded from the file and displayed in the current application.

Previewing the I/Q data in a web browser

The `iq-tar` file format allows you to preview the I/Q data in a web browser.

1. Use an archive tool (e.g. WinZip® or PowerArchiver®) to unpack the `iq-tar` file into a folder.
2. Locate the folder using Windows Explorer.
3. Open your web browser.

4. Drag the I/Q parameter XML file, e.g. `example.xml`, into your web browser.

The screenshot shows a web browser window with the address bar displaying `file:///D:/xzy.xml`. The page title is `xzy.xml`. The main content area displays the following information:

xzy.xml (of .iq.tar file)

Description

Saved by	FSV IQ Analyzer
Comment	Here is a comment
Date & Time	2011-03-03 14:33:05
Sample rate	6.5 MHz
Number of samples	65000
Duration of signal	10 ms
Data format	complex, float32
Data filename	xzy.complex.1ch.float32
Scaling factor	1 V

Channel 1

Comment	Channel 1 of 1
Power vs time y-axis: 10 dB /div x-axis: 1 ms /div	
Spectrum y-axis: 20 dB /div x-axis: 500 kHz /div	

E-mail: info@rohde-schwarz.com
 Internet: <http://www.rohde-schwarz.com>
 Fileformat version: 1

8 Remote Commands for the I/Q Analyzer

The following commands are specific to performing measurements in the I/Q Analyzer application in a remote environment. The R&S FSWP must already be set up for remote operation in a network as described in the base unit manual.

• Introduction	64
• Common Suffixes	69
• Activating I/Q Analyzer Measurements	69
• Performing Measurements	74
• Retrieving Results	82
• Configuring I/Q Analyzer Measurements	90
• Analyzing Results	126
• Importing and Exporting I/Q Data	127
• Querying the Status Registers	128
• Programming Examples	129

8.1 Introduction

Commands are program messages that a controller (e.g. a PC) sends to the instrument or software. They operate its functions ('setting commands' or 'events') and request information ('query commands'). Some commands can only be used in one way, others work in two ways (setting and query). If not indicated otherwise, the commands can be used for settings and queries.

The syntax of a SCPI command consists of a header and, in most cases, one or more parameters. To use a command as a query, you have to append a question mark after the last header element, even if the command contains a parameter.

A header contains one or more keywords, separated by a colon. Header and parameters are separated by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank). If there is more than one parameter for a command, these are separated by a comma from one another.

Only the most important characteristics that you need to know when working with SCPI commands are described here. For a more complete description, refer to the User Manual of the R&S FSWP.



Remote command examples

Note that some remote command examples mentioned in this general introduction may not be supported by this particular application.

8.1.1 Conventions used in Descriptions

Note the following conventions used in the remote command descriptions:

- **Command usage**

If not specified otherwise, commands can be used both for setting and for querying parameters.

If a command can be used for setting or querying only, or if it initiates an event, the usage is stated explicitly.

- **Parameter usage**

If not specified otherwise, a parameter can be used to set a value and it is the result of a query.

Parameters required only for setting are indicated as **Setting parameters**.

Parameters required only to refine a query are indicated as **Query parameters**.

Parameters that are only returned as the result of a query are indicated as **Return values**.

- **Conformity**

Commands that are taken from the SCPI standard are indicated as **SCPI confirmed**. All commands used by the R&S FSWP follow the SCPI syntax rules.

- **Asynchronous commands**

A command which does not automatically finish executing before the next command starts executing (overlapping command) is indicated as an **Asynchronous command**.

- **Reset values (*RST)**

Default parameter values that are used directly after resetting the instrument (*RST command) are indicated as ***RST** values, if available.

- **Default unit**

This is the unit used for numeric values if no other unit is provided with the parameter.

- **Manual operation**

If the result of a remote command can also be achieved in manual operation, a link to the description is inserted.

8.1.2 Long and Short Form

The keywords have a long and a short form. You can use either the long or the short form, but no other abbreviations of the keywords.

The short form is emphasized in upper case letters. Note however, that this emphasis only serves the purpose to distinguish the short from the long form in the manual. For the instrument, the case does not matter.

Example:

`SENSe:FREQuency:CENTer` is the same as `SENS:FREQ:CENT`.

8.1.3 Numeric Suffixes

Some keywords have a numeric suffix if the command can be applied to multiple instances of an object. In that case, the suffix selects a particular instance (e.g. a measurement window).

Numeric suffixes are indicated by angular brackets (<n>) next to the keyword.

If you don't quote a suffix for keywords that support one, a 1 is assumed.

Example:

`DISPlay[:WINDow<1...4>]:ZOOM:STATe` enables the zoom in a particular measurement window, selected by the suffix at `WINDow`.

`DISPlay:WINDow4:ZOOM:STATe ON` refers to window 4.

8.1.4 Optional Keywords

Some keywords are optional and are only part of the syntax because of SCPI compliance. You can include them in the header or not.

Note that if an optional keyword has a numeric suffix and you need to use the suffix, you have to include the optional keyword. Otherwise, the suffix of the missing keyword is assumed to be the value 1.

Optional keywords are emphasized with square brackets.

Example:

Without a numeric suffix in the optional keyword:

`[SENSe:]FREQuency:CENTer` is the same as `FREQuency:CENTer`

With a numeric suffix in the optional keyword:

`DISPlay[:WINDow<1...4>]:ZOOM:STATe`

`DISPlay:ZOOM:STATe ON` enables the zoom in window 1 (no suffix).

`DISPlay:WINDow4:ZOOM:STATe ON` enables the zoom in window 4.

8.1.5 Alternative Keywords

A vertical stroke indicates alternatives for a specific keyword. You can use both keywords to the same effect.

Example:

`[SENSe:]BANDwidth|BWIDth[:RESolution]`

In the short form without optional keywords, `BAND 1MHZ` would have the same effect as `BWID 1MHZ`.

8.1.6 SCPI Parameters

Many commands feature one or more parameters.

If a command supports more than one parameter, these are separated by a comma.

Example:

`LAYout:ADD:WINDow Spectrum,LEFT,MTABLE`

Parameters may have different forms of values.

- [Numeric Values](#).....67
- [Boolean](#).....68
- [Character Data](#).....68
- [Character Strings](#).....68
- [Block Data](#).....68

8.1.6.1 Numeric Values

Numeric values can be entered in any form, i.e. with sign, decimal point or exponent. In case of physical quantities, you can also add the unit. If the unit is missing, the command uses the basic unit.

Example:

with unit: `SENSe:FREQuency:CENTer 1GHZ`

without unit: `SENSe:FREQuency:CENTer 1E9` would also set a frequency of 1 GHz.

Values exceeding the resolution of the instrument are rounded up or down.

If the number you have entered is not supported (e.g. in case of discrete steps), the command returns an error.

Instead of a number, you can also set numeric values with a text parameter in special cases.

- **MIN/MAX**
Defines the minimum or maximum numeric value that is supported.
- **DEF**
Defines the default value.
- **UP/DOWN**
Increases or decreases the numeric value by one step. The step size depends on the setting. In some cases you can customize the step size with a corresponding command.

Querying numeric values

When you query numeric values, the system returns a number. In case of physical quantities, it applies the basic unit (e.g. Hz in case of frequencies). The number of digits after the decimal point depends on the type of numeric value.

Example:

Setting: `SENSe:FREQuency:CENTer 1GHZ`

Query: `SENSe:FREQuency:CENTer?` would return `1E9`

In some cases, numeric values may be returned as text.

- **INF/NINF**
Infinity or negative infinity. Represents the numeric values 9.9E37 or -9.9E37.
- **NAN**

Not a number. Represents the numeric value 9.91E37. NAN is returned in case of errors.

8.1.6.2 Boolean

Boolean parameters represent two states. The "ON" state (logically true) is represented by "ON" or a numeric value 1. The "OFF" state (logically untrue) is represented by "OFF" or the numeric value 0.

Querying boolean parameters

When you query boolean parameters, the system returns either the value 1 ("ON") or the value 0 ("OFF").

Example:

Setting: `DISPlay:WINDow:ZOOM:STATe ON`

Query: `DISPlay:WINDow:ZOOM:STATe?` would return 1

8.1.6.3 Character Data

Character data follows the syntactic rules of keywords. You can enter text using a short or a long form. For more information see [Chapter 8.1.2, "Long and Short Form"](#), on page 65.

Querying text parameters

When you query text parameters, the system returns its short form.

Example:

Setting: `SENSe:BANDwidth:RESolution:TYPE NORMAl`

Query: `SENSe:BANDwidth:RESolution:TYPE?` would return NORM

8.1.6.4 Character Strings

Strings are alphanumeric characters. They have to be in straight quotation marks. You can use a single quotation mark (') or a double quotation mark (").

Example:

`INSTRument:DELeTe 'Spectrum'`

8.1.6.5 Block Data

Block data is a format which is suitable for the transmission of large amounts of data.

The ASCII character # introduces the data block. The next number indicates how many of the following digits describe the length of the data block. In the example the 4 following digits indicate the length to be 5168 bytes. The data bytes follow. During the transmission of these data bytes all end or other control signs are ignored until all bytes are

transmitted. #0 specifies a data block of indefinite length. The use of the indefinite format requires a NL^END message to terminate the data block. This format is useful when the length of the transmission is not known or if speed or other considerations prevent segmentation of the data into blocks of definite length.

8.2 Common Suffixes

The following common suffixes are used in remote commands specific to the I/Q Analyzer application:

Suffix	Value range	Description
<m>	1..16	Marker
<n>	1..6	Window
<t>	1..6	Trace

8.3 Activating I/Q Analyzer Measurements

I/Q Analyzer measurements require a special measurement channel on the R&S FSWP. It can be activated using the common `INSTrument:CREate[:NEW]` or `INSTrument:CREate:REPLace` commands. In this case, some - but not all - parameters from the previously selected application are passed on to the I/Q Analyzer channel. In order to retain *all* relevant parameters from the current application for the I/Q measurement, use the `TRACe:IQ[:STATe]` command to change the application of the current channel.

A measurement is started immediately with the default settings when the channel is activated.



Different remote modes available

In remote control, two different modes for the I/Q Analyzer measurements are available:

- A quick mode for pure data acquisition
This mode is activated by default with the `TRACe:IQ[:STATe]` command. The evaluation functions are not available; however, performance is slightly improved.
- A more sophisticated mode for acquisition and analysis.
This mode is activated when a new channel is opened for the I/Q Analyzer application (`INST:CRE:NEW/ INST:CRE:REPL`) or by an additional command (see `TRACe:IQ:EVAL` on page 73).

<code>CALCulate<n>:IQ:MODE</code>	70
<code>INSTrument:CREate:DUPLicate</code>	70
<code>INSTrument:CREate[:NEW]</code>	70
<code>INSTrument:CREate:REPLace</code>	71

INSTrument:DELeTe.....	71
INSTrument:LIST?.....	72
INSTrument:REName.....	72
INSTrument[:SELeCt].....	72
SYSTem:PRESet:CHANnel[:EXECute].....	73
TRACe:IQ:EVAL.....	73
TRACe:IQ:STATe].....	74

CALCulate<n>:IQ:MODE <EvalMode>

This command defines whether the captured I/Q data is evaluated directly, or if it is converted (via FFT) to spectral or time data first (<n> is irrelevant).

It is currently only available for I/Q Analyzer applications in multistandard mode (not the MSRA Master).

Parameters:

<EvalMode>

TDOMain

Evaluation in time domain (zero span).

FDOMain

Evaluation in frequency domain.

IQ

Evaluation using I/Q data.

INSTrument:CREate:DUPLicate

This command duplicates the currently selected measurement channel, i.e. creates a new measurement channel of the same type and with the identical measurement settings. The name of the new channel is the same as the copied channel, extended by a consecutive number (e.g. "IQAnalyzer" -> "IQAnalyzer2").

The channel to be duplicated must be selected first using the `INST:SEL` command.

This command is not available if the MSRA Master channel is selected.

Example:

```
INST:SEL 'PhaseNoise'
```

```
INST:CRE:DUPL
```

Duplicates the channel named 'PhaseNoise' and creates a new measurement channel named 'PhaseNoise 2'.

Usage:

Event

INSTrument:CREate[:NEW] <ChannelType>, <ChannelName>

This command adds an additional measurement channel.

The number of measurement channels you can configure at the same time depends on available memory.

Parameters:

- <ChannelType> Channel type of the new channel.
For a list of available channel types see [INSTrument:LIST?](#) on page 72.
- <ChannelName> String containing the name of the channel. The channel name is displayed as the tab label for the measurement channel.
Note: If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel (see [INSTrument:LIST?](#) on page 72).

Example:

```
INST:CRE PNO, 'PhaseNoise 2'
```

Adds an additional phase noise display named "PhaseNoise 2".

INSTrument:CREate:REPLace <ChannelName1>,<ChannelType>,<ChannelName2>

This command replaces a measurement channel with another one.

Setting parameters:

- <ChannelName1> String containing the name of the measurement channel you want to replace.
- <ChannelType> Channel type of the new channel.
For a list of available channel types see [INSTrument:LIST?](#) on page 72.
- <ChannelName2> String containing the name of the new channel.
Note: If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel (see [INSTrument:LIST?](#) on page 72).

Example:

```
INST:CRE:REPL 'PhaseNoise',PNO,'PNO2'
```

Replaces the channel named 'PhaseNoise' by a new measurement channel of type 'Phase Noise' named 'PNO2'.

Usage:

Setting only

INSTrument:DELeTe <ChannelName>

This command deletes a measurement channel.

If you delete the last measurement channel, the default "Phase Noise" channel is activated.

Parameters:

- <ChannelName> String containing the name of the channel you want to delete.
A measurement channel must exist in order to be able delete it.

Example:

```
INST:DEL 'PhaseNoise'
```

Deletes the channel with the name 'PhaseNoise'.

Usage:

Event

INSTrument:LIST?

This command queries all active measurement channels. This is useful in order to obtain the names of the existing measurement channels, which are required in order to replace or delete the channels.

Return values:

<ChannelType>, For each channel, the command returns the channel type and
<ChannelName> channel name (see tables below).

Tip: to change the channel name, use the `INSTrument:REName` command.

Example:

`INST:LIST?`

Result for 2 measurement channels:

`'PNO', 'PhaseNoise', 'PNO', 'PhaseNoise2'`

Usage:

Query only

Table 8-1: Available measurement channel types and default channel names

Application	<ChannelType> Parameter	Default Channel Name*)
Phase Noise	PNOISE	Phase Noise
Spectrum (R&S FSWP-B1)	SANALYZER	Spectrum
I/Q Analyzer (R&S FSWP-B1)	IQ	IQ Analyzer
Analog Demodulation (R&S FSWP-K7)	ADEM	Analog Demod
Noise Figure Measurements (R&S FSWP-K30)	NOISE	Noise

Note: the default channel name is also listed in the table. If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel.

INSTrument:REName <ChannelName1>, <ChannelName2>

This command renames a measurement channel.

Parameters:

<ChannelName1> String containing the name of the channel you want to rename.

<ChannelName2> String containing the new channel name.
Note that you can not assign an existing channel name to a new channel; this will cause an error.

Example:

`INST:REN 'PhaseNoise', 'PNO'`

Renames the channel with the name 'PhaseNoise' to 'PNO'.

Usage:

Setting only

INSTrument[:SElect] <ChannelType> | <ChannelName>

This command activates a new measurement channel with the defined channel type, or selects an existing measurement channel with the specified name.

Also see

- [INSTrument:CREate\[:NEW\]](#) on page 70

Parameters:

<ChannelType> Channel type of the new channel.
For a list of available channel types see [INSTrument:LIST?](#) on page 72.

<ChannelName> String containing the name of the channel.

Example:

```
INST IQ
```

Activates a measurement channel for the I/Q Analyzer application (evaluation mode).

To start a channel in the simple I/Q Analyzer mode, use [TRACe:IQ\[:STATE\]](#) .

```
INST 'MyIQSpectrum'
```

Selects the measurement channel named 'MyIQSpectrum' (for example before executing further commands for that channel).

Usage: SCPI confirmed

SYSTem:PRESet:CHANnel[:EXECute]

This command restores the default instrument settings in the current channel.

Use [INST:SEL](#) to select the channel.

Example:

```
INST 'Spectrum2'
```

Selects the channel for "Spectrum2".

```
SYST:PRESet:CHAN:EXEC
```

Restores the factory default settings to the "Spectrum2" channel.

Usage: Event

Manual operation: See "[Preset Channel](#)" on page 34

TRACe:IQ:EVAL <State>

This command turns I/Q data analysis on and off.

Before you can use this command, you have to turn on the I/Q data acquisition using [INST:CRE:NEW IQ](#) or [INST:CRE:REPL](#), or using the [TRACe:IQ\[:STATE\]](#) command to replace the current measurement channel while retaining the settings.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

```
TRAC:IQ ON
```

Enables I/Q data acquisition

```
TRAC:IQ:EVAL ON
```

Enables the I/Q data analysis mode.

TRACe:IQ:STATe] <State>

This command changes the application of the current measurement channel to I/Q Analyzer, activating the simple I/Q data acquisition mode (see [Chapter 8.3, "Activating I/Q Analyzer Measurements"](#), on page 69).

Executing this command also has the following effects:

- The sweep, amplitude, input and trigger settings from the previous application are retained
- All measurements from the previous application (e.g. Spectrum) are turned off
- All traces are set to "Blank" mode
- The I/Q data analysis mode is turned off (`TRAC:IQ:EVAL OFF`, if previous application was also I/Q Analyzer)

Note: To turn trace display back on or to enable the evaluation functions of the I/Q Analyzer, execute the `TRAC:IQ:EVAL ON` command (see [TRACe:IQ:EVAL](#) on page 73).

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

`TRAC:IQ ON`
 Switches on I/Q data acquisition

8.4 Performing Measurements



Different measurement procedures

Two different procedures to capture I/Q data remotely are available:

- Measurement and result query with one command (see [TRACe:IQ:DATA?](#) on page 82)
 This method causes the least delay between measurement and output of the result data, but it requires the control computer to wait actively for the response data.
- Setting up the instrument, starting the measurement via `INIT` and querying the result list at the end of the measurement (see [TRACe:IQ:DATA:MEMory?](#) on page 83)
 With this method, the control computer can be used for other activities during the measurement. However, the additional time needed for synchronization via service request must be taken into account.

ABORT	75
INITiate<n>:CONMeas	76
INITiate<n>:CONTInuous	76
INITiate<n>[:IMMEDIATE]	77
INITiate<n>:SEQuencer:ABORT	77

INITiate<n>:SEQuencer:IMMediate.....	77
INITiate<n>:SEQuencer:MODE.....	78
INITiate<n>:SEQuencer:REFResh[:ALL].....	78
[SENSe:]AVERAge:COUNt.....	79
TRACe:IQ:AVERAge:COUNt.....	79
[SENSe:]AVERAge<n>[:STATe<t>].....	79
TRACe:IQ:AVERAge[:STATe].....	79
[SENSe:]SWEep:COUNt.....	80
[SENSe:]SWEep:COUNt:CURRent?.....	80
[SENSe:]SWEep:POINts.....	80
[SENSe:]SWEep:TIME.....	81
SYSTem:SEQuencer.....	81

ABORt

This command aborts the measurement in the current measurement channel and resets the trigger system.

To prevent overlapping execution of the subsequent command before the measurement has been aborted successfully, use the *OPC? or *WAI command after ABOR and before the next command.

For details see the "Remote Basics" chapter in the R&S FSWP User Manual.

To abort a sequence of measurements by the Sequencer, use the INITiate<n>:SEQuencer:ABORt command.

Note on blocked remote control programs:

If a sequential command cannot be completed, for example because a triggered sweep never receives a trigger, the remote control program will never finish and the remote channel to the R&S FSWP is blocked for further commands. In this case, you must interrupt processing on the remote channel first in order to abort the measurement.

To do so, send a "Device Clear" command from the control instrument to the R&S FSWP on a parallel channel to clear all currently active remote channels. Depending on the used interface and protocol, send the following commands:

- **Visa:** viClear()
- **GPIB:** ibclr()
- **RSIB:** RSDLLibclr()

Now you can send the ABORt command on the remote channel performing the measurement.

Example: ABOR; :INIT:IMM
Aborts the current measurement and immediately starts a new one.

Example: ABOR; *WAI
 INIT:IMM
Aborts the current measurement and starts a new one once abortion has been completed.

Usage: Event
SCPI confirmed

INITiate<n>:CONMeas

This command restarts a (single) measurement that has been stopped (using `ABORT`) or finished in single measurement mode.

The measurement is restarted at the beginning, not where the previous measurement was stopped.

As opposed to `INITiate<n>[:IMMEDIATE]`, this command does not reset traces in maxhold, minhold or average mode. Therefore it can be used to continue measurements using maxhold or averaging functions.

Suffix:
<n> irrelevant

Usage: Event

Manual operation: See "[Continue Single Sweep](#)" on page 56

INITiate<n>:CONTinuous <State>

This command controls the measurement mode for an individual measurement channel.

Note that in single measurement mode, you can synchronize to the end of the measurement with `*OPC`, `*OPC?` or `*WAI`. In continuous measurement mode, synchronization to the end of the measurement is not possible. Thus, it is not recommended that you use continuous measurement mode in remote control, as results like trace data or markers are only valid after a single measurement end synchronization.

For details on synchronization see the "Remote Basics" chapter in the R&S FSWP User Manual.

If the measurement mode is changed for a measurement channel while the Sequencer is active the mode is only considered the next time the measurement in that channel is activated by the Sequencer.

Suffix:
<n> irrelevant

Parameters:
<State> ON | OFF | 0 | 1
ON | 1
Continuous measurement
OFF | 0
Single measurement
***RST:** 1

Example: `INIT:CONT OFF`
 Switches the measurement mode to single measurement.
 `INIT:CONT ON`
 Switches the measurement mode to continuous measurement.

Manual operation: See "[Continuous Sweep/RUN CONT](#)" on page 55

INITiate<n>[:IMMediate]

This command starts a (single) new measurement.

You can synchronize to the end of the measurement with `*OPC`, `*OPC?` or `*WAI`.

Suffix:

<n> irrelevant

Usage: Event

Manual operation: See "[Single Sweep/ RUN SINGLE](#)" on page 55

INITiate<n>:SEQuencer:ABORt

This command stops the currently active sequence of measurements. The Sequencer itself is not deactivated, so you can start a new sequence immediately using [INITiate<n>:SEQuencer:IMMediate](#) on page 77.

To deactivate the Sequencer use [SYSTem:SEQuencer](#) on page 81.

Suffix:

<n> irrelevant

Usage: Event

INITiate<n>:SEQuencer:IMMediate

This command starts a new sequence of measurements by the Sequencer.

Its effect is similar to the [INITiate<n>\[:IMMediate\]](#) command used for a single measurement.

Before this command can be executed, the Sequencer must be activated (see [SYSTem:SEQuencer](#) on page 81).

Suffix:

<n> irrelevant

Example: `SYST:SEQ ON`
 Activates the Sequencer.
 `INIT:SEQ:MODE SING`
 Sets single sequence mode so each active measurement will be performed once.
 `INIT:SEQ:IMM`
 Starts the sequential measurements.

Usage: Event

INITiate<n>:SEQuencer:MODE <Mode>

This command selects the way the R&S FSWP application performs measurements sequentially.

Before this command can be executed, the Sequencer must be activated (see [SYSTem:SEQuencer](#) on page 81).

A detailed programming example is provided in the "Operating Modes" chapter in the R&S FSWP User Manual.

Note: In order to synchronize to the end of a sequential measurement using *OPC, *OPC? or *WAI you must use `SINGle` Sequence mode.

For details on synchronization see the "Remote Basics" chapter in the R&S FSWP User Manual.

Suffix:

<n> irrelevant

Parameters:

<Mode>

SINGle

Each measurement is performed once (regardless of the channel's sweep mode), considering each channels' sweep count, until all measurements in all active channels have been performed.

CONTInuous

The measurements in each active channel are performed one after the other, repeatedly (regardless of the channel's sweep mode), in the same order, until the Sequencer is stopped.

CDEFined

First, a single sequence is performed. Then, only those channels in continuous sweep mode (`INIT:CONT ON`) are repeated.

*RST: CONTInuous

Example:

```
SYST:SEQ ON
```

Activates the Sequencer.

```
INIT:SEQ:MODE SING
```

Sets single sequence mode so each active measurement will be performed once.

```
INIT:SEQ:IMM
```

Starts the sequential measurements.

INITiate<n>:SEQuencer:REFResh[:ALL]

This function is only available if the Sequencer is deactivated ([SYSTem:SEQuencer](#) `SYST:SEQ:OFF`) and only in MSRA mode.

The data in the capture buffer is re-evaluated by all active MSRA applications.

(The suffix <n> is irrelevant.)

Example:

```

SYST:SEQ:OFF
Deactivates the scheduler
INIT:CONT OFF
Switches to single sweep mode.
INIT;*WAI
Starts a new data measurement and waits for the end of the
sweep.
INIT:SEQ:REFR
Refreshes the display for all channels.

```

Usage: Event

[SENSe:]AVERAge:COUNT <AverageCount>
TRACe:IQ:AVERAge:COUNT <NumberSets>

This command defines the number of I/Q data sets that the averaging is based on.

Parameters:

<NumberSets> Range: 0 to 32767
 *RST: 0

Example:

```

TRAC:IQ ON
Switches on acquisition of I/Q data.
TRAC:IQ:AVER ON
Enables averaging of the I/Q measurement data
TRAC:IQ:AVER:COUN 10
Selects averaging over 10 data sets
TRAC:IQ:DATA?
Starts the measurement and reads out the averaged data.

```

Manual operation: See "[Sweep / Average Count](#)" on page 55

[SENSe:]AVERAge<n>[:STATe<t>] <State>
TRACe:IQ:AVERAge[:STATe] <State>

This command turns averaging of the I/Q data on and off.

Before you can use the command you have to turn the I/Q data acquisition on with [TRACe:IQ\[:STATe\]](#).

If averaging is on, the maximum amount of I/Q data that can be recorded is 512kS (524288 samples).

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

```
TRAC:IQ ON
Switches on acquisition of I/Q data.
TRAC:IQ:AVER ON
Enables averaging of the I/Q measurement data.
TRAC:IQ:AVER:COUN 10
Selects averaging over 10 data sets.
TRAC:IQ:DATA?
Starts the measurement and reads out the averaged data.
```

[SENSe:]SWEep:COUNT <SweepCount>

This command defines the number of measurements that the application uses to average traces.

In case of continuous measurement mode, the application calculates the moving average over the average count.

In case of single measurement mode, the application stops the measurement and calculates the average after the average count has been reached.

Example:

```
SWE:COUN 64
Sets the number of measurements to 64.
INIT:CONT OFF
Switches to single measurement mode.
INIT;*WAI
Starts a measurement and waits for its end.
```

Usage: SCPI confirmed

Manual operation: See "[Sweep / Average Count](#)" on page 55

[SENSe:]SWEep:COUNT:CURRent?

This query returns the current number of started sweeps or measurements. This command is only available if a sweep count value is defined and the instrument is in single sweep mode.

Example:

```
SWE:COUNt 64
Sets sweep count to 64
INIT:CONT OFF
Switches to single sweep mode
INIT
Starts a sweep (without waiting for the sweep end!)
SWE:COUN:CURR?
Queries the number of started sweeps
```

Usage: Query only

[SENSe:]SWEep:POINTs <SweepPoints>

This command defines the number of measurement points to analyze after a measurement.

Example: `SWE:POIN 251`
Usage: SCPI confirmed
Manual operation: See "[Sweep Points](#)" on page 54

[SENSe:]SWEep:TIME <Time>

This command defines the measurement time.

Parameters:

<Time> refer to data sheet
 *RST: depends on current settings (determined automatically)

Example: `SWE:TIME 10s`
Usage: SCPI confirmed
Manual operation: See "[Meas Time](#)" on page 51

SYSTem:SEQuencer <State>

This command turns the Sequencer on and off. The Sequencer must be active before any other Sequencer commands (`INIT:SEQ...`) are executed, otherwise an error will occur.

A detailed programming example is provided in the "Operating Modes" chapter in the R&S FSWP User Manual.

Parameters:

<State> ON | OFF | 0 | 1
ON | 1
 The Sequencer is activated and a sequential measurement is started immediately.
OFF | 0
 The Sequencer is deactivated. Any running sequential measurements are stopped. Further Sequencer commands (`INIT:SEQ...`) are not available.
 *RST: 0

Example: `SYST:SEQ ON`
 Activates the Sequencer.
`INIT:SEQ:MODE SING`
 Sets single Sequencer mode so each active measurement will be performed once.
`INIT:SEQ:IMM`
 Starts the sequential measurements.
`SYST:SEQ OFF`

8.5 Retrieving Results

The following commands can be used to retrieve the results of the I/Q Analyzer measurement.



Storing large amounts of I/Q data

When storing large amounts of I/Q data to a file, consider the following tips to improve performance:

- If capturing and storing the I/Q data is the main goal of the measurement and evaluation functions are not required, use the basic I/Q data acquisition mode (see [TRACe: IQ\[:STATE\]](#) on page 74).
- Use a HiSlip or raw socket connection to export the data from the R&S FSWP to a PC.
- Export the data in binary format rather than ASCII format (see [Chapter A.1, "Formats for Returned Values: ASCII Format and Binary Format"](#), on page 132).
- Use the "Compatible" or "IQPair" data mode (see [Chapter A.2, "Reference: Format Description for I/Q Data Files"](#), on page 132).
- If only an extract of the available data is relevant, use the [TRACe<n>\[:DATA\]:MEMory?](#) command to store only the required section of data.

• Retrieving Captured I/Q Data	82
• Retrieving I/Q Trace Data	85
• Retrieving Marker and Peak Search Results	87

8.5.1 Retrieving Captured I/Q Data

The captured I/Q data is output in the form of a list, three different formats can be selected for this list (see [TRACe: IQ:DATA:FORMat](#) on page 83).

For details on formats refer to [Chapter A.2, "Reference: Format Description for I/Q Data Files"](#), on page 132.

TRACe:IQ:DATA?	82
TRACe:IQ:DATA:FORMat	83
TRACe:IQ:DATA:MEMory?	83

TRACe:IQ:DATA?

This command queries the captured data from measurements with the I/Q Analyzer.

To get the results, the command also initiates a measurement with the current settings of the R&S FSWP.

Note: Using the command with the *RST values for the [TRACe: IQ:SET](#) command, the following minimum buffer sizes for the response data are recommended: ASCII format 10 kBytes, binary format: 2 kBytes

Return values:

<Results> Measured voltage for I and Q component for each sample that has been captured during the measurement.
 The number of samples depends on `TRACe:IQ:SET`. In ASCII format, the number of results is 2* the number of samples.
 The data format depends on `TRACe:IQ:DATA:FORMat` on page 83.
 Default unit: V

Example:

```
TRAC:IQ:STAT ON
Enables acquisition of I/Q data
TRAC:IQ:SET NORM,10MHz,32MHz,EXT,POS,0,4096
Measurement configuration:
Sample Rate = 32 MHz
Trigger Source = External
Trigger Slope = Positive
Pretrigger Samples = 0
Number of Samples = 4096
FORMat REAL,32
Selects format of response data
TRAC:IQ:DATA?
Starts measurement and reads results
```

Usage:

Query only

TRACe:IQ:DATA:FORMat <Format>

This command selects the order of the I/Q data.

For details see [Chapter A.2, "Reference: Format Description for I/Q Data Files"](#), on page 132.

Parameters:

<Format> COMPatible | IQBLock | IQPair

COMPatible

I and Q values are separated and collected in blocks: A block (512k) of I values is followed by a block (512k) of Q values, followed by a block of I values, followed by a block of Q values etc.
 (I,I,I,I,Q,Q,Q,Q,I,I,I,I,Q,Q,Q,Q...)

IQBLock

First all I-values are listed, then the Q-values
 (I,I,I,I,I,...Q,Q,Q,Q,Q,Q)

IQPair

One pair of I/Q values after the other is listed
 (I,Q,I,Q,I,Q...).

*RST: IQBL

TRACe:IQ:DATA:MEMory? [<OffsetSamples>,<NoOfSamples>]

This command queries the I/Q data currently stored in the memory of the R&S FSWP.

By default, the command returns all I/Q data in the memory. You can, however, narrow down the amount of data that the command returns using the optional parameters.

By default, the amount of available data depends on `TRACe:IQ:SET`.

Parameters:

<code><OffsetSamples></code>	<p>Selects an offset at which the output of data should start in relation to the first data. If omitted, all captured samples are output, starting with the first sample.</p> <p>Range: 0 to <code><# of samples></code> – 1, with <code><# of samples></code> being the maximum number of captured values</p> <p>*RST: 0</p>
<code><NoOfSamples></code>	<p>Number of samples you want to query, beginning at the offset you have defined. If omitted, all captured samples (starting at offset) are output.</p> <p>Range: 1 to <code><# of samples></code> - <code><offset samples></code> with <code><# of samples></code> maximum number of captured values</p> <p>*RST: <code><# of samples></code></p>

Return values:

<code><IQData></code>	<p>Measured value pair (I,Q) for each sample that has been recorded.</p> <p>The data format depends on <code>FORMat[:DATA]</code>.</p> <p>Default unit: V</p>
-----------------------------	---

Example:

```
TRAC:IQ:STAT ON
Enables acquisition of I/Q data
TRAC:IQ:SET NORM,10MHz,32MHz,EXT,POS,100,4096
Measurement configuration:
Sample Rate = 32 MHz
Trigger Source = External
Trigger Slope = Positive
Pretrigger Samples = 100
Number of Samples = 4096
INIT;*WAI
Starts measurement and wait for sync
FORMat REAL,32
Determines output format
To read the results:
TRAC:IQ:DATA:MEM?
Reads all 4096 I/Q data
TRAC:IQ:DATA:MEM? 0,2048
Reads 2048 I/Q data starting at the beginning of data acquisition
TRAC:IQ:DATA:MEM? 2048,1024
Reads 1024 I/Q data from half of the recorded data
TRAC:IQ:DATA:MEM? 100,512
Reads 512 I/Q data starting at the trigger point (<Pretrigger
Samples> was 100)
```

Usage: Query only

8.5.2 Retrieving I/Q Trace Data

FORMat[:DATA].....	85
FORMat:DEXPort:DSEParator.....	85
TRACe<n>[:DATA]?.....	86
TRACe<n>[:DATA]:MEMory?.....	86
TRACe<n>[:DATA]:X?.....	87

FORMat[:DATA] <Format>

This command selects the data format that is used for transmission of trace data from the R&S FSWP to the controlling computer.

Note that the command has no effect for data that you send to the R&S FSWP. The R&S FSWP automatically recognizes the data it receives, regardless of the format.

Parameters:

<Format>

ASCIi

ASCIi format, separated by commas.

This format is almost always suitable, regardless of the actual data format. However, the data is not as compact as other formats may be.

REAL,32

32-bit IEEE 754 floating-point numbers in the "definite length block format".

The format setting `REAL` is used for the binary transmission of trace data.

For I/Q data, 8 bytes per sample are returned for this format setting.

*RST: ASCII

Example:

FORM REAL,32

Usage:

SCPI confirmed

FORMat:DEXPort:DSEParator <Separator>

This command selects the decimal separator for data exported in ASCII format.

Parameters:

<Separator>

COMMa

Uses a comma as decimal separator, e.g. `4,05`.

POINt

Uses a point as decimal separator, e.g. `4.05`.

*RST: *RST has no effect on the decimal separator.
Default is `POINt`.

Example:

FORM:DEXP:DSEP POIN

Sets the decimal point as separator.

TRACe<n>[:DATA]? <ResultType>

This command queries current trace data and measurement results.

The data format depends on `FORMat[:DATA]`.

Query parameters:

<ResultType> Selects the type of result to be returned.

TRACE1 | ... | TRACE6

Returns the trace data for the corresponding trace.

Return values:

<TraceData> Returns the sweep point values as shown in the result display. If you are measuring with the auto peak detector, the command returns positive peak values only. (To retrieve negative peak values, define a second trace with a negative peak detector.) For the Magnitude and Spectrum result displays in the I/Q Analyzer application, this command returns the magnitude of the I and Q values ($I+jQ$) for each sweep point (=1001 values). For the Real/Imag (I/Q) result display, the command returns first the real parts for each trace point, then the imaginary parts ($I_1, \dots, I_{1001}, Q_1, \dots, Q_{1001}$). For the I/Q Vector result display, the I and Q values for each trace point are returned (1001 pairs of I and Q values).

Example:

`TRAC? TRACE3`

Queries the data of trace 3.

Usage:

SCPI confirmed

Manual operation:

See "[Magnitude](#)" on page 13

See "[Spectrum](#)" on page 14

See "[I/Q-Vector](#)" on page 14

See "[Real/Imag \(I/Q\)](#)" on page 15

TRACe<n>[:DATA]:MEMory? <Trace>,<OffsSwPoint>,<NoOfSwPoints>

This command queries the previously captured trace data for the specified trace from the memory. As an offset and number of sweep points to be retrieved can be specified, the trace data can be retrieved in smaller portions, making the command faster than the `TRAC:DATA?` command. This is useful if only specific parts of the trace data are of interest.

If no parameters are specified with the command, the entire trace data is retrieved; in this case, the command is identical to `TRAC:DATA? TRACE1`

Query parameters:

<Trace> TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6

<OffsSwPoint> The offset in sweep points related to the start of the measurement at which data retrieval is to start.

<NoOfSwPoints> Number of sweep points to be retrieved from the trace.

Example: `TRAC:DATA:MEM? TRACE1,25,100`
Retrieves 100 sweep points from trace 1, starting at sweep point 25.

Usage: Query only

TRACe<n>[:DATA]:X? <TraceNumber>

This command queries the horizontal trace data for each sweep point in the specified window, for example the frequency in frequency domain or the time in time domain measurements.

This is especially useful for traces with non-equidistant x-values.

Query parameters:

<TraceNumber> Trace number.

TRACE1 | ... | TRACE6

Example: `TRAC3:X? TRACE1`
Returns the x-values for trace 1 in window 3.

Usage: Query only

8.5.3 Retrieving Marker and Peak Search Results

<code>CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:SORT</code>	87
<code>CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:X?</code>	87
<code>CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:Y?</code>	88
<code>CALCulate<n>:DELTAmarker<m>:X</code>	88
<code>CALCulate<n>:DELTAmarker<m>:Y?</code>	88
<code>CALCulate<n>:MARKer<m>:X</code>	89
<code>CALCulate<n>:MARKer<m>:Y?</code>	89
<code>MMEMory:STORe<n>:LIST</code>	90

CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:SORT <SortMode>

This command selects the order in which the results of a peak search are returned.

Parameters:

<SortMode> **X**
Sorts the peaks according to increasing position on the x-axis.

Y
Sorts the peaks according to decreasing position on the y-axis.

*RST: **X**

Example: `CALC:MARK:FUNC:FPE:SORT Y`
Sets the sort mode to decreasing y values

CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:X?

This command queries the position of the peaks on the x-axis.

The order depends on the sort order that has been set with `CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:SORT`.

(<n>, <m> are irrelevant.)

Return values:

<PeakPosition> Position of the peaks on the x-axis. The unit depends on the measurement.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:Y?

This command queries the position of the peaks on the y-axis.

The order depends on the sort order that has been set with `CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:SORT`.

(<n>, <m> are irrelevant.)

Return values:

<PeakPosition> Position of the peaks on the y-axis. The unit depends on the measurement.

Usage: Query only

CALCulate<n>:DELTamarker<m>:X <Position>

This command moves a delta marker to a particular coordinate on the x-axis.

If necessary, the command activates the delta marker and positions a reference marker to the peak power.

Parameters:

<Position> Numeric value that defines the marker position on the x-axis.
 Range: The value range and unit depend on the measurement and scale of the x-axis.

Example:

`CALC:DELT:X?`
 Outputs the absolute x-value of delta marker 1.

CALCulate<n>:DELTamarker<m>:Y?

This command queries the relative position of a delta marker on the y-axis.

If necessary, the command activates the delta marker first.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single measurement mode.

The unit depends on the application of the command.

Return values:

<Position> Position of the delta marker in relation to the reference marker or the fixed reference.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
INIT;*WAI
Starts a sweep and waits for its end.
CALC:DELT2 ON
Switches on delta marker 2.
CALC:DELT2:Y?
Outputs measurement value of delta marker 2.
```

Usage:

Query only

CALCulate<n>:MARKer<m>:X <Position>

This command moves a marker to a particular coordinate on the x-axis.

If necessary, the command activates the marker.

If the marker has been used as a delta marker, the command turns it into a normal marker.

Parameters:

<Position> Numeric value that defines the marker position on the x-axis. The unit depends on the result display.
Range: The range depends on the current x-axis range.

Example:

```
CALC:MARK2:X 1.7MHz
Positions marker 2 to frequency 1.7 MHz.
```

Manual operation: See ["Marker Table"](#) on page 16
See ["Marker Peak List"](#) on page 16

CALCulate<n>:MARKer<m>:Y?

This command queries the position of a marker on the y-axis.

If necessary, the command activates the marker first.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single measurement mode.

Return values:

<Result> Result at the marker position.
The unit is variable and depends on the one you have currently set.
In the Real/Imag (I/Q) result display of the I/Q Analyzer, the command returns the real part first, then the imaginary part.

Example:	<pre>INIT:CONT OFF Switches to single measurement mode. CALC:MARK2 ON Switches marker 2. INIT;*WAI Starts a measurement and waits for the end. CALC:MARK2:Y? Outputs the measured value of marker 2. In I/Q Analyzer application, for "Real/Imag (I/Q)", for example: 1.852719887E-011,0</pre>
Usage:	Query only
Manual operation:	See " Marker Table " on page 16 See " Marker Peak List " on page 16

MMEMory:STORe<n>:LIST <FileName>

This command exports the SEM and spurious emission list evaluation to a file.

The file format is *.dat.

Parameters:

<FileName> String containing the path and name of the target file.

Example:

```
MMEM:STOR:LIST 'test'
```

Stores the current list evaluation results in the test.dat file.

8.6 Configuring I/Q Analyzer Measurements

• Configuring Input Sources	90
• Configuring Outputs	93
• Configuring Level Characteristics	94
• Configuring the Attenuator	96
• Configuring the Preamplifier	97
• Scaling the Y-Axis	98
• Configuring the Frequency	100
• Configuring Trigger	102
• Configuring Trigger Output	106
• Configuring Gated Measurements	108
• Configuring Data Acquisition	110
• Automatic Configuration	117
• Configuring the Result Display	120

8.6.1 Configuring Input Sources

INPut:ATTenuation:PROTection:RESet	91
INPut:COUPling	91
INPut:FILTer:HPASs[:STATe]	91

INPut:FILTer:YIG[:STATe].....	92
INPut:IMPedance.....	92
INPut:SElect.....	92
INPut:UPORt[:VALue]?.....	93
INPut:UPORt:STATe.....	93

INPut:ATTenuation:PROTection:RESet

This command resets the attenuator and reconnects the RF input with the input mixer after an overload condition occurred and the protection mechanism intervened. The error status bit (bit 3 in the `STAT:QUES:POW` status register) and the `INPUT OVLD` message in the status bar are cleared.

The command works only if the overload condition has been eliminated first.

For details on the protection mechanism see [Chapter 4.2.1, "RF Input Protection"](#), on page 21.

Usage: Event

INPut:COUPling <CouplingType>

This command selects the coupling type of the RF input.

Parameters:

<CouplingType> **AC**
 AC coupling
 DC
 DC coupling
 *RST: AC

Example: INP:COUP DC

Usage: SCPI confirmed

Manual operation: See "[Input Coupling](#)" on page 36

INPut:FILTer:HPASs[:STATe] <State>

Activates an additional internal high-pass filter for RF input signals from 1 GHz to 3 GHz. This filter is used to remove the harmonics of the R&S FSWP in order to measure the harmonics for a DUT, for example.

This function requires an additional high-pass filter hardware option.

(Note: for RF input signals outside the specified range, the high-pass filter has no effect. For signals with a frequency of approximately 4 GHz upwards, the harmonics are suppressed sufficiently by the YIG filter.)

Parameters:

<State> ON | OFF
 *RST: OFF

- Example:** `INP:FILT:HPAS ON`
Turns on the filter.
- Usage:** SCPI confirmed
- Manual operation:** See "[High-Pass Filter 1...3 GHz](#)" on page 37

INPut:FILTer:YIG[:STATe] <State>

This command turns the YIG-preselector on and off.

Note the special conditions and restrictions for the YIG filter described in "[YIG-Preselector](#)" on page 37.

Parameters:

<State> ON | OFF | 0 | 1
*RST: OFF

- Example:** `INP:FILT:YIG OFF`
Deactivates the YIG-preselector.

Manual operation: See "[YIG-Preselector](#)" on page 37

INPut:IMPedance <Impedance>

This command selects the nominal input impedance of the RF input. In some applications, only 50 Ω are supported.

75 Ω should be selected if the 50 Ω input impedance is transformed to a higher impedance using a matching pad of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The power loss correction value in this case is 1.76 dB = 10 log (75 Ω /50 Ω).

Parameters:

<Impedance> 50 | 75
*RST: 50 Ω

- Example:** `INP:IMP 75`

Usage: SCPI confirmed

Manual operation: See "[Impedance](#)" on page 36
See "[Unit](#)" on page 40

INPut:SElect <Source>

This command selects the signal source for measurements, i.e. it defines which connector is used to input data to the R&S FSWP.

Parameters:

<Source> **RF**
Radio Frequency ("RF INPUT" connector)
*RST: RF

Manual operation: See ["Radio Frequency State"](#) on page 36

INPut:UPORt[:VALue]?

This command queries the control lines of the user ports.

For details see [OUTPut:UPORt\[:VALue\]](#) on page 94.

Return values:

<Value> bit values in hexadecimal format
 TTL type voltage levels (max. 5V)
 Range: #B00000000 to #B00111111

Example:

```
INP:UPOR?
//Result: #B00100100
Pins 5 and 7 are active.
```

Usage: Query only

INPut:UPORt:STATe <State>

This command toggles the control lines of the user ports for the **AUX PORT** connector. This 9-pole SUB-D male connector is located on the rear panel of the R&S FSWP.

See the R&S FSWP Getting Started manual for details.

Parameters:

<State> **ON | 1**
 User port is switched to INPut
OFF | 0
 User port is switched to OUTPut
 *RST: 1

8.6.2 Configuring Outputs

DIAGnostic:SERVice:NSource	93
OUTPut:UPORt[:VALue]	94
OUTPut:UPORt:STATe	94

DIAGnostic:SERVice:NSource <State>

This command turns the 28 V supply of the BNC connector labeled NOISE SOURCE CONTROL on the R&S FSWP on and off.

For details see [Chapter 4.2.3, "Input from Noise Sources"](#), on page 22.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: DIAG:SERV:NSO ON

Manual operation: See "Noise Source" on page 38

OUTPut:UPORt[:VALue] <Value>

This command sets the control lines of the user ports.

The assignment of the pin numbers to the bits is as follows:

Bit	7	6	5	4	3	2	1	0
Pin	N/A	N/A	5	3	4	7	6	2

Bits 7 and 6 are not assigned to pins and must always be 0.

The user port is written to with the given binary pattern. If the user port is programmed to input instead of output (see [INPut:UPORt:STATe](#) on page 93), the output value is temporarily stored.

Parameters:

<Value> bit values in hexadecimal format
 TTL type voltage levels (max. 5V)
 Range: #B00000000 to #B00111111

Example:

```
OUTP:UPOR #B00100100
Sets pins 5 and 7 to 5 V.
```

OUTPut:UPORt:STATe <State>

This command toggles the control lines of the user ports for the **AUX PORT** connector. This 9-pole SUB-D male connector is located on the rear panel of the R&S FSWP.

Parameters:

<State> **ON**
 User port is switched to OUTPut
 OFF
 User port is switched to INPut
 *RST: OFF

8.6.3 Configuring Level Characteristics

Commands useful to configure level characteristics described elsewhere:

- [\[SENSe:\]ADJust:LEVel](#) on page 120

CALCulate<n>:MARKer<m>:FUNctIon:REFerence	95
CALCulate<n>:UNIT:POWER	95
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel	95
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet	95
[SENSe:]POWER:NCORrection	96

CALCulate<n>:MARKer<m>:FUNCtion:REFerence

This command matches the reference level to the power level of a marker.

If you use the command in combination with a delta marker, that delta marker is turned into a normal marker.

Example: `CALC:MARK2:FUNC:REF`
Sets the reference level to the level of marker 2.

Usage: Event

CALCulate<n>:UNIT:POWER <Unit>

This command selects the unit of the y-axis.

The unit applies to all power-based measurement windows (regardless of the <n> suffix).

Parameters:
<Unit> DBM | V | A | W | DBPW | WATT | DBUV | DBMV | VOLT |
DBUA | AMPere
*RST: dBm

Example: `CALC:UNIT:POW DBM`
Sets the power unit to dBm.

Manual operation: See "Unit" on page 40

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel <ReferenceLevel>

This command defines the reference level (for all traces, <t> is irrelevant).

With a reference level offset ≠ 0, the value range of the reference level is modified by the offset.

Parameters:
<ReferenceLevel> The unit is variable.
Range: see datasheet
*RST: 0 dBm

Example: `DISP:TRAC:Y:RLEV -60dBm`

Usage: SCPI confirmed

Manual operation: See "Reference Level" on page 40

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet <Offset>

This command defines a reference level offset (for all traces, <t> is irrelevant).

Parameters:
<Offset> Range: -200 dB to 200 dB
*RST: 0dB

Example: `DISP:TRAC:Y:RLEV:OFFS -10dB`

Manual operation: See "Shifting the Display (Offset)" on page 40

[SENSe:]POWer:NCORrection <State>

This command turns noise cancellation on and off.

If noise cancellation is on, the R&S FSWP performs a reference measurement to determine its inherent noise and subtracts the result from the channel power measurement result (first active trace only).

For more information see "Noise cancellation" on page 42.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: `POW:NCOR ON`

Manual operation: See "Noise cancellation" on page 42

8.6.4 Configuring the Attenuator

INPut:ATTenuation	96
INPut:ATTenuation:AUTO	97

INPut:ATTenuation <Attenuation>

This command defines the total attenuation for RF input.

If you set the attenuation manually, it is no longer coupled to the reference level, but the reference level is coupled to the attenuation. Thus, if the current reference level is not compatible with an attenuation that has been set manually, the command also adjusts the reference level.

Parameters:

<Attenuation> Range: see data sheet
 Increment: 5 dB
 *RST: 10 dB (AUTO is set to ON)

Example: `INP:ATT 30dB`
 Defines a 30 dB attenuation and decouples the attenuation from the reference level.

Usage: SCPI confirmed

Manual operation: See "Attenuation Mode / Value" on page 41

INPut:ATTenuation:AUTO <State>

This command couples or decouples the attenuation to the reference level. Thus, when the reference level is changed, the R&S FSWP determines the signal level for optimal internal data processing and sets the required attenuation accordingly.

Parameters:

<State> ON | OFF | 0 | 1
*RST: 1

Example: INP:ATT:AUTO ON
Couples the attenuation to the reference level.

Usage: SCPI confirmed

Manual operation: See "[Attenuation Mode / Value](#)" on page 41

8.6.5 Configuring the Preamplicifier

INPut:GAIN[:VALue]	97
INPut:GAIN:STATe	97

INPut:GAIN[:VALue] <Gain>

This command selects the gain level if the preamplifier is activated (INP:GAIN:STAT ON, see [INPut:GAIN:STATe](#) on page 97).

The command requires the additional preamplifier hardware option.

Parameters:

<Gain> 15 dB | 30 dB
The availability of gain levels depends on the model of the R&S FSWP.
R&S FSWP8: 15dB and 30 dB
R&S FSWP26 or higher: 30 dB
*RST: OFF

Example: INP:GAIN:VAL 30
Switches on 30 dB preamplification.

Usage: SCPI confirmed

Manual operation: See "[Preamplifier](#)" on page 41

INPut:GAIN:STATe <State>

This command turns the preamplifier on and off. It requires the optional preamplifier hardware.

Parameters:

<State> ON | OFF
*RST: OFF

Example: `INP:GAIN:STAT ON`
Switches on 30 dB preamplification.

Usage: SCPI confirmed

Manual operation: See "Preamplifier" on page 41

8.6.6 Scaling the Y-Axis

<code>DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]</code>	98
<code>DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:AUTO ONCE</code>	98
<code>DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MODE</code>	98
<code>DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition</code>	99
<code>DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing</code>	99

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe] <Range>`

This command defines the display range of the y-axis (for all traces, <t> is irrelevant).

Parameters:

<Range> Range: 1 dB to 200 dB
 *RST: 100 dB

Example: `DISP:TRAC:Y 110dB`

Usage: SCPI confirmed

Manual operation: See "Range" on page 43
 See "Y-Axis Max" on page 43

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:AUTO ONCE`

Automatic scaling of the y-axis is performed once, then switched off again (for all traces, <t> is irrelevant).

Usage: SCPI confirmed

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MODE <Mode>`

This command selects the type of scaling of the y-axis (for all traces, <t> is irrelevant).

When the display update during remote control is off, this command has no immediate effect.

Parameters:

<Mode> **ABSolute**
 absolute scaling of the y-axis
 RELative
 relative scaling of the y-axis
 *RST: ABSolute

Example: `DISP:TRAC:Y:MODE REL`

Manual operation: See ["Scaling"](#) on page 43

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition <Position>

This command defines the vertical position of the reference level on the display grid (for all traces, <t> is irrelevant).

The R&S FSWP adjusts the scaling of the y-axis accordingly.

For measurements with the optional external generator control, the command defines the position of the reference value.

Parameters:

<Position> 0 PCT corresponds to the lower display border, 100% corresponds to the upper display border.
 *RST: 100 PCT = frequency display; 50 PCT = time display

Example: DISP:TRAC:Y:RPOS 50PCT

Usage: SCPI confirmed

Manual operation: See ["Ref Level Position"](#) on page 43

DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing <ScalingType>

This command selects the scaling of the y-axis (for all traces, <t> is irrelevant).

Parameters:

<ScalingType> **LOGarithmic**
 Logarithmic scaling.
 LINear
 Linear scaling in %.
 LDB
 Linear scaling in the specified unit.
 PERCent
 Linear scaling in %.
 *RST: LOGarithmic

Example: DISP:TRAC:Y:SPAC LIN
 Selects linear scaling in %.

Usage: SCPI confirmed

Manual operation: See ["Scaling"](#) on page 43

8.6.7 Configuring the Frequency

CALCulate<n>:MARKer<m>:FUNCtion:CENTer.....	100
[SENSe:]FREQuency:CENTer.....	100
[SENSe:]FREQuency:CENTer:STEP.....	100
[SENSe:]FREQuency:CENTer:STEP:AUTO.....	101
[SENSe:]FREQuency:OFFSet.....	101

CALCulate<n>:MARKer<m>:FUNCtion:CENTer

This command matches the center frequency to the frequency of a marker.

If you use the command in combination with a delta marker, that delta marker is turned into a normal marker.

Example: `CALC:MARK2:FUNC:CENT`
Sets the center frequency to the frequency of marker 2.

Usage: Event

[SENSe:]FREQuency:CENTer <Frequency>

This command defines the center frequency.

Parameters:

<Frequency> The allowed range and f_{\max} is specified in the data sheet.

UP

Increases the center frequency by the step defined using the `[SENSe:]FREQuency:CENTer:STEP` command.

DOWN

Decreases the center frequency by the step defined using the `[SENSe:]FREQuency:CENTer:STEP` command.

*RST: $f_{\max}/2$

Default unit: Hz

Example: `FREQ:CENT 100 MHz`
`FREQ:CENT:STEP 10 MHz`
`FREQ:CENT UP`
Sets the center frequency to 110 MHz.

Usage: SCPI confirmed

Manual operation: See "[Center frequency](#)" on page 44

[SENSe:]FREQuency:CENTer:STEP <StepSize>

This command defines the center frequency step size.

You can increase or decrease the center frequency quickly in fixed steps using the `SENS:FREQ UP AND SENS:FREQ DOWN` commands, see `[SENSe:]FREQuency:CENTer` on page 100.

Parameters:

<StepSize> f_{\max} is specified in the data sheet.
 Range: 1 to fMAX
 *RST: 0.1 x span
 Default unit: Hz

Example:

```
FREQ:CENT 100 MHz
FREQ:CENT:STEP 10 MHz
FREQ:CENT UP
```

Sets the center frequency to 110 MHz.

Manual operation: See "[Center Frequency Stepsize](#)" on page 44

[SENSe:]FREQuency:CENTer:STEP:AUTO <State>

This command couples or decouples the center frequency step size to the span.

In time domain (zero span) measurements, the center frequency is coupled to the RBW.

Parameters:

<State> ON | OFF | 0 | 1
 *RST: 1

Example:

```
FREQ:CENT:STEP:AUTO ON
```

Activates the coupling of the step size to the span.

[SENSe:]FREQuency:OFFSet <Offset>

This command defines a frequency offset.

If this value is not 0 Hz, the application assumes that the input signal was frequency shifted outside the application. All results of type "frequency" will be corrected for this shift numerically by the application.

See also "[Frequency Offset](#)" on page 44.

Note: In MSRA mode, the setting command is only available for the MSRA Master. For MSRA applications, only the query command is available.

Parameters:

<Offset> Range: -100 GHz to 100 GHz
 *RST: 0 Hz

Example:

```
FREQ:OFFS 1GHZ
```

Usage:

SCPI confirmed

Manual operation: See "[Frequency Offset](#)" on page 44

8.6.8 Configuring Trigger



*OPC should be used after requesting data. This will hold off any subsequent changes to the selected trigger source, until after the sweep is completed and the data is returned.

TRIGger[:SEQuence]:DTIME.....	102
TRIGger[:SEQuence]:HOLDoff[:TIME].....	102
TRIGger[:SEQuence]:IFPower:HOLDoff.....	102
TRIGger[:SEQuence]:IFPower:HYSteresis.....	103
TRIGger[:SEQuence]:LEVel[:EXtErnal<port>].....	103
TRIGger[:SEQuence]:LEVel:IFPower.....	104
TRIGger[:SEQuence]:LEVel:IQPower.....	104
TRIGger[:SEQuence]:LEVel:RFPower.....	104
TRIGger[:SEQuence]:SLOPe.....	104
TRIGger[:SEQuence]:SOURce.....	105
TRIGger[:SEQuence]:TIME:RINTerval.....	106

TRIGger[:SEQuence]:DTIME <DropoutTime>

Defines the time the input signal must stay below the trigger level before a trigger is detected again.

Parameters:

<DropoutTime> Dropout time of the trigger.
 Range: 0 s to 10.0 s
 *RST: 0 s

Manual operation: See "[Drop-Out Time](#)" on page 49

TRIGger[:SEQuence]:HOLDoff[:TIME] <Offset>

Defines the time offset between the trigger event and the start of the measurement.

Parameters:

<Offset> For measurements in the frequency domain, the range is 0 s to 30 s.
 For measurements in the time domain, the range is the negative measurement time to 30 s.
 *RST: 0 s

Example: TRIG:HOLD 500us

Manual operation: See "[Trigger Offset](#)" on page 48

TRIGger[:SEQuence]:IFPower:HOLDoff <Period>

This command defines the holding time before the next trigger event.

Note that this command can be used for **any trigger source**, not just IF Power (despite the legacy keyword).

Note: If you perform gated measurements in combination with the IF Power trigger, the R&S FSWP ignores the holding time for frequency sweep, FFT sweep, zero span and I/Q data measurements.

Parameters:

<Period> Range: 0 s to 10 s
 *RST: 0 s

Example:

```
TRIG:SOUR EXT
Sets an external trigger source.
TRIG:IFP:HOLD 200 ns
Sets the holding time to 200 ns.
```

Manual operation: See "[Trigger Holdoff](#)" on page 49

TRIGger[:SEQUence]:IFPower:HYSteresis <Hysteresis>

This command defines the trigger hysteresis, which is only available for "IF Power" trigger sources.

Parameters:

<Hysteresis> Range: 3 dB to 50 dB
 *RST: 3 dB

Example:

```
TRIG:SOUR IFP
Sets the IF power trigger source.
TRIG:IFP:HYST 10DB
Sets the hysteresis limit value.
```

Manual operation: See "[Hysteresis](#)" on page 49

TRIGger[:SEQUence]:LEVel[:EXTeRnal<port>] <TriggerLevel>

This command defines the level the external signal must exceed to cause a trigger event.

In the I/Q Analyzer application only EXTeRnal1 is supported.

Suffix:

<port> Selects the trigger port.
 1 = trigger port 1 (TRIGGER INPUT connector on front panel)
 2 = trigger port 2 (TRIGGER INPUT/OUTPUT connector on rear panel)

Parameters:

<TriggerLevel> Range: 0.5 V to 3.5 V
 *RST: 1.4 V

Example:

```
TRIG:LEV 2V
```

Manual operation: See "[Trigger Level](#)" on page 48

TRIGger[:SEquence]:LEVel:IFPower <TriggerLevel>

This command defines the power level at the third intermediate frequency that must be exceeded to cause a trigger event. Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

Parameters:

<TriggerLevel> For details on available trigger levels and trigger bandwidths see the data sheet.
*RST: -10 dBm

Example: TRIG:LEV:IFP -30DBM

Manual operation: See "[Trigger Level](#)" on page 48

TRIGger[:SEquence]:LEVel:IQPower <TriggerLevel>

This command defines the magnitude the I/Q data must exceed to cause a trigger event. Note that any RF attenuation or preamplification is considered when the trigger level is analyzed.

Parameters:

<TriggerLevel> Range: -130 dBm to 30 dBm
*RST: -20 dBm

Example: TRIG:LEV:IQP -30DBM

Manual operation: See "[Trigger Level](#)" on page 48

TRIGger[:SEquence]:LEVel:RFPower <TriggerLevel>

This command defines the power level the RF input must exceed to cause a trigger event. Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

The input signal must be between 500 MHz and 8 GHz.

Parameters:

<TriggerLevel> For details on available trigger levels and trigger bandwidths see the data sheet.
*RST: -20 dBm

Example: TRIG:LEV:RFP -30dBm

Manual operation: See "[Trigger Level](#)" on page 48

TRIGger[:SEquence]:SLOPe <Type>

This command selects the trigger slope.

Parameters:

<Type> POSitive | NEGative

POSitive

Triggers when the signal rises to the trigger level (rising edge).

NEGative

Triggers when the signal drops to the trigger level (falling edge).

*RST: POSitive

Example:

TRIG:SLOP NEG

Manual operation: See "Slope" on page 49**TRIGger[:SEQUence]:SOURce** <Source>

This command selects the trigger source.

Note on external triggers:

If a measurement is configured to wait for an external trigger signal in a remote control program, remote control is blocked until the trigger is received and the program can continue. Make sure this situation is avoided in your remote control programs.

Parameters:<Source> **IMMediate**
Free Run**EXT | EXT2**

Trigger signal from one of the TRIGGER INPUT/OUTPUT connectors.

Note: Connector must be configured for "Input".

RFPower

First intermediate frequency

IFPower

Second intermediate frequency

IQPower

Magnitude of sampled I/Q data

For applications that process I/Q data, such as the I/Q Analyzer or optional applications.

PSEN

External power sensor

*RST: IMMediate

Example:

TRIG:SOUR EXT

Selects the external trigger input as source of the trigger signal

Manual operation: See "Trigger Source" on page 46
 See "Free Run" on page 46
 See "Ext. Trigger 1/2" on page 46
 See "IF Power" on page 47
 See "I/Q Power" on page 47
 See "RF Power" on page 47
 See "Power Sensor" on page 48
 See "Time" on page 48

TRIGger[:SEQuence]:TIME:RINTerval <Interval>

This command defines the repetition interval for the time trigger.

Parameters:

<Interval> 2.0 ms to 5000
 Range: 2 ms to 5000 s
 *RST: 1.0 s

Example: TRIG:SOUR TIME
 Selects the time trigger input for triggering.
 TRIG:TIME:RINT 50
 The measurement starts every 50 s.

Manual operation: See "Repetition Interval" on page 48

8.6.9 Configuring Trigger Output

OUTPut:TRIGger<port>:DIRection.....	106
OUTPut:TRIGger<port>:LEVel.....	107
OUTPut:TRIGger<port>:OTYPe.....	107
OUTPut:TRIGger<port>:PULSe:IMMEDIATE.....	107
OUTPut:TRIGger<port>:PULSe:LENGth.....	108

OUTPut:TRIGger<port>:DIRection <Direction>

This command selects the trigger direction for trigger ports that serve as an input as well as an output.

Suffix:

<port> Selects the used trigger port.
 <2>: selects trigger port 2 (on the rear panel).

Parameters:

<Direction> **INPut**
 Port works as an input.
 OUTPut
 Port works as an output.
 *RST: INPut

Manual operation: See "Trigger 1/2" on page 38

OUTPut:TRIGger<port>:LEVel <Level>

This command defines the level of the signal generated at the trigger output.

This command works only if you have selected a user defined output with `OUTPut:TRIGger<port>:OTYPe`.

Suffix:

<port> Selects the trigger port to which the output is sent.
2 = trigger port 2 (rear)

Parameters:

<Level> **HIGH**
 TTL signal.
LOW
 0 V
*RST: LOW

Manual operation: See "Trigger 1/2" on page 38
 See "Level" on page 39

OUTPut:TRIGger<port>:OTYPe <OutputType>

This command selects the type of signal generated at the trigger output.

Suffix:

<port> Selects the trigger port to which the output is sent.
2 = trigger port 2 (rear panel)

Parameters:

<OutputType> **DEVice**
 Sends a trigger signal when the R&S FSWP has triggered internally.
TARMed
 Sends a trigger signal when the trigger is armed and ready for an external trigger event.
UDEFined
 Sends a user defined trigger signal. For more information see `OUTPut:TRIGger<port>:LEVel`.
*RST: DEVice

Manual operation: See "Output Type" on page 38

OUTPut:TRIGger<port>:PULSe:IMMediate

This command generates a pulse at the trigger output.

Suffix:

<port> Selects the trigger port to which the output is sent.
2 = trigger port 2 (rear)

Usage: Event

Manual operation: See "Send Trigger" on page 39

OUTPut:TRIGger<port>:PULSe:LENGth <Length>

This command defines the length of the pulse generated at the trigger output.

Suffix:

<port> Selects the trigger port to which the output is sent.
2 = trigger port 2 (rear)

Parameters:

<Length> Pulse length in seconds.

Manual operation: See "Pulse Length" on page 39

8.6.10 Configuring Gated Measurements


Usually in spectrum analysis, measurements are based on a certain length of time called the gate area. With I/Q gating, you can define the gate area using the gate length, the distance between the capture periods and the number of periods. The gate length and the distance between the capture periods are specified in samples.




I/Q gating is only available using remote commands; manual configuration is not possible.

Using I/Q gating, the gate area can be defined using the following methods:

- Edge triggered capturing
After a trigger signal, the gate period is defined by a gate length and a gate distance. All data in the gate period is captured until the required number of samples has been captured.

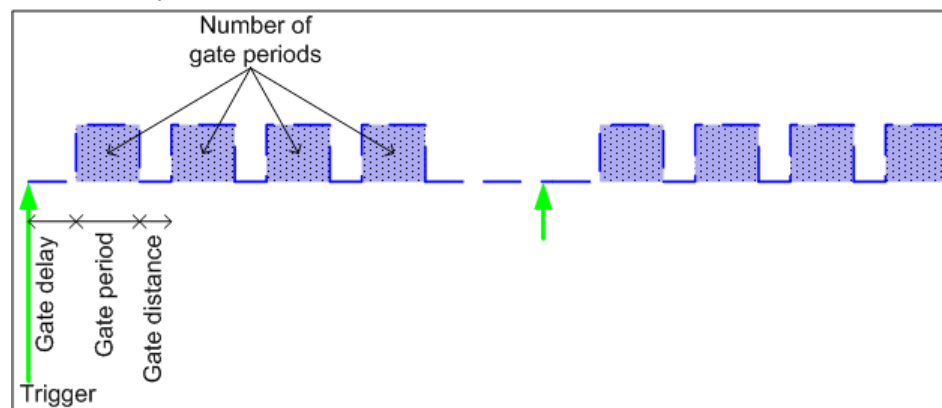

- Level triggered capturing
After a trigger signal, all data is captured in which the gate signal is set to 1, which means it has exceeded a level. In this case, the gate signal can be generated by the IFP trigger, for example: each time the IFP level is exceeded, the IFP trigger signal is set to 1 and the samples in this area are captured as gate samples.

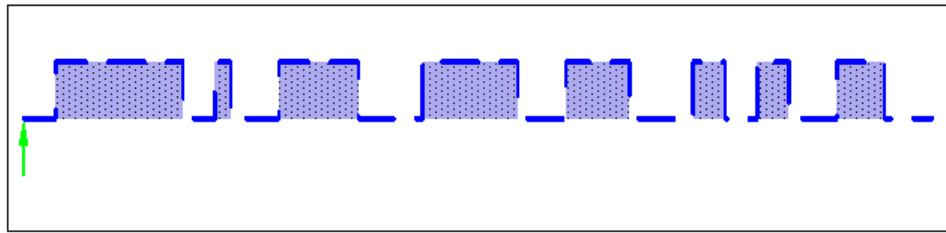

The number of complex samples to be captured prior to the trigger event can be selected (see [TRACe:IQ:SET](#) on page 114) for all available trigger sources, except for "Free Run".

TRACe:IQ:EGATe <State>

This command turns gated measurements with the I/Q analyzer on and off.

Before you can use the command you have to turn on the I/Q analyzer and select an external or IF power trigger source.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: TRAC:IQ:EGAT ON

TRACe:IQ:EGATe:GAP <Samples>

This command defines the interval between several gate periods for gated measurements with the I/Q analyzer.

Parameters:

<Samples> <numeric value>
 Max = (440 MS * sample rate/200MHz) -1
 pretrigger samples defined by [TRACe:IQ:SET](#);
 sample rate defined by [TRACe:IQ:SRATe](#))
 Range: 1...Max (samples)
 *RST: 1

Example: TRAC:IQ:EGAT:GAP 2

TRACe:IQ:EGATe:LENGth <GateLength>

This command defines the gate length for gated measurements with the I/Q analyzer.

Parameters:

<GateLength> <numeric value>
 Max = (440 MS * sample rate/200MHz) -1
 pretrigger samples defined by [TRACe:IQ:SET](#);
 sample rate defined by [TRACe:IQ:SRATe](#))
 Range: 1...Max (samples)
 *RST: 100

Example: `TRAC:IQ:EGAT:LENG 2000`

TRACe:IQ:EGATe:NOFgateperiods <Number>

This command defines the number of gate periods after the trigger signal for gated measurements with the I/Q analyzer.

Parameters:

<Number> Range: 1 to 1023
 *RST: 1

Example: `TRAC:IQ:EGAT:NOF 2`

TRACe:IQ:EGATe:TYPE <Type>

This command selects the gate mode for gated measurements with the I/Q analyzer.

Note: The IF power trigger holdoff time is ignored if you are using the "Level" gate mode in combination with an IF Power trigger.

Parameters:

<Type> **LEVEL**
 EDGE
 *RST: EDGE

Example: `TRAC:IQ:EGAT:TYPE LEV`

8.6.11 Configuring Data Acquisition

Useful commands for I/Q data acquisition described elsewhere

- [\[SENSe:\]SWEep:COUNT](#) on page 80
- [\[SENSe:\]SWEep:POINTs](#) on page 80
- [\[SENSe:\]SWEep:TIME](#) on page 81

[SENSe:]IQ:BANDwidth BWIDth:MODE	111
[SENSe:]IQ:BANDwidth BWIDth:RESolution	111
[SENSe:]IQ:FFT:ALGorithm	112
[SENSe:]IQ:FFT:LENGth	112
[SENSe:]IQ:FFT:WINDow:LENGth	112
[SENSe:]IQ:FFT:WINDow:OVERlap	113
[SENSe:]IQ:FFT:WINDow:TYPE	113
[SENSe:]SWAPiq	113
TRACe:IQ:BWIDth	114
TRACe:IQ:RLENGth	114
TRACe:IQ:SET	114
TRACe:IQ:SRATe	116
TRACe:IQ:TPISample?	116

[SENSe:]IQ:BANDwidth|BWIDth:MODE <Mode>

This command defines how the resolution bandwidth is determined.

Parameters:

<Mode>

AUTO | MANual | FFT

AUTO

(Default) The RBW is determined automatically depending on the sample rate and record length.

MANual

The user-defined RBW is used and the (FFT) window length (and possibly the sample rate) are adapted accordingly. The RBW is defined using the `[SENSe:]IQ:BANDwidth|BWIDth:RESolution` command.

FFT

The RBW is determined by the FFT parameters.

*RST: AUTO

Example:

```
IQ:BAND:MODE MAN
```

Switches to manual RBW mode.

```
IQ:BAND:RES 120000
```

Sets the RBW to 120 kHz.

Usage:

SCPI confirmed

Manual operation:

See "RBW" on page 52

[SENSe:]IQ:BANDwidth|BWIDth:RESolution <Bandwidth>

This command defines the resolution bandwidth manually if `[SENSe:]IQ:BANDwidth|BWIDth:MODE` is set to `MAN`.

Defines the resolution bandwidth. The available RBW values depend on the sample rate and record length.

For details see [Chapter 4.4.4, "Frequency Resolution of FFT Results - RBW"](#), on page 28.

Parameters:

<Bandwidth>

refer to data sheet

*RST: RBW: AUTO mode is used

Example:

```
IQ:BAND:MODE MAN
```

Switches to manual RBW mode.

```
IQ:BAND:RES 120000
```

Sets the RBW to 120 kHz.

Usage:

SCPI confirmed

Manual operation:

See "RBW" on page 52

[SENSe:]IQ:FFT:ALGORITHM <Method>

Defines the FFT calculation method.

Parameters:

<Method>

SINGLE

One FFT is calculated for the entire record length; if the FFT length is larger than the record length (see [SENSe:]IQ:FFT:LENGTH and TRACe:IQ:RLENGTH), zeros are appended to the captured data.

AVERAGE

Several overlapping FFTs are calculated for each record; the results are averaged to determine the final FFT result for the record.

The user-defined window length and window overlap are used (see [SENSe:]IQ:FFT:WINDOW:LENGTH and [SENSe:]IQ:FFT:WINDOW:OVERLAP).

*RST: AVER

Example: IQ:FFT:ALG SING

Usage: SCPI confirmed

Manual operation: See "[Transformation Algorithm](#)" on page 52

[SENSe:]IQ:FFT:LENGTH <NoOfBins>

Defines the number of frequency points determined by each FFT calculation. The more points are used, the higher the resolution in the spectrum becomes, but the longer the calculation takes.

Parameters:

<NoOfBins>

integer value

Range: 3 to 524288

*RST: 4096

Example: IQ:FFT:LENG 2048

Usage: SCPI confirmed

Manual operation: See "[FFT Length](#)" on page 53

[SENSe:]IQ:FFT:WINDOW:LENGTH <NoOfFFT>

Defines the number of samples to be included in a single FFT window when multiple FFT windows are used.

Parameters:

<NoOfFFT>

integer value

Range: 3 to 1001

*RST: 1001

Example: IQ:FFT:WIND:LENG 500

Usage: SCPI confirmed

Manual operation: See "[Window Length](#)" on page 53

[SENSe:]IQ:FFT:WINDow:OVERlap <Rate>

Defines the part of a single FFT window that is re-calculated by the next FFT calculation.

Parameters:

<Rate> double value
 Percentage rate
 Range: 0 to 1
 *RST: 0.75

Example: IQ:FFT:WIND:OVER 0.5
 Half of each window overlaps the previous window in FFT calculation.

Usage: SCPI confirmed

Manual operation: See "[Window Overlap](#)" on page 53

[SENSe:]IQ:FFT:WINDow:TYPE <Function>

In the I/Q Analyzer you can select one of several FFT window types.

Parameters:

<Function> **BLACKharris**
 Blackman-Harris
FLATtop
 Flattop
GAUSSian
 Gauss
RECTangular
 Rectangular
P5
 5-Term
 *RST: FLAT

Example: IQ:FFT:WIND:TYPE GAUS

Usage: SCPI confirmed

Manual operation: See "[Window Function](#)" on page 53

[SENSe:]SWAPiq <State>

This command defines whether or not the recorded I/Q pairs should be swapped (I<->Q) before being processed. Swapping I and Q inverts the sideband.

This is useful if the DUT interchanged the I and Q parts of the signal; then the R&S FSWP can do the same to compensate for it.

Parameters:

<State> **ON**
 I and Q signals are interchanged
 Inverted sideband, $Q+j*I$

OFF
 I and Q signals are not interchanged
 Normal sideband, $I+j*Q$

*RST: OFF

Manual operation: See "[Swap I/Q](#)" on page 51

TRACe:IQ:BWIDth

This command defines or queries the bandwidth of the resampling filter.

The bandwidth of the resampling filter depends on the sample rate.

Parameters:

<Bandwidth> For details on the maximum bandwidth see [Chapter 4.1.1, "Sample Rate and Maximum Usable I/Q Bandwidth for RF Input"](#), on page 18.

Manual operation: See "[Analysis Bandwidth](#)" on page 51

TRACe:IQ:RLENgth <NoOfSamples>

This command sets the record length for the acquired I/Q data.

Increasing the record length also increases the measurement time.

Note: Alternatively, you can define the measurement time using the `SENS:SWE:TIME` command.

Parameters:

<NoOfSamples> Number of samples to record.
 See [Chapter 4.1.1, "Sample Rate and Maximum Usable I/Q Bandwidth for RF Input"](#), on page 18.

*RST: 1001

Example: `TRAC:IQ:RLEN 256`

Manual operation: See "[Record Length](#)" on page 51

TRACe:IQ:SET NORM, 0, <SampleRate>, <TriggerMode>, <TriggerSlope>,
 <PretriggerSamp>, <NumberSamples>

This command sets up the R&S FSWP for I/Q measurements.

If you do not use this command to set up I/Q measurements, the R&S FSWP will use its current settings for I/Q measurements.

If the I/Q Analyzer has not been turned on previously, the command also switches to the I/Q Analyzer.

Note: If you use the default settings with `TRACe:IQ:DATA??`, the following minimum buffer sizes for the response data are recommended:

ASCII format: 10 kBytes

4

Binary format: 2 kBytes

Parameters:

NORM	This value is always NORM.
0	This value is always 0.
<SampleRate>	Sample rate for the data acquisition. Range: 100 Hz to 10 GHz, continuously adjustable *RST: 32000000
<TriggerMode>	Selection of the trigger source used for the measurement. IMMEDIATE EXTERNAL EXT2 EXT3 IFPOWER For IMM mode, gating is automatically deactivated. *RST: IMM
<TriggerSlope>	Used trigger slope. POSITIVE NEGATIVE *RST: POS
<PretriggerSamp>	Defines the trigger offset in terms of pretrigger samples. Negative values correspond to a trigger delay. This value also defines the interval between the trigger signal and the gate edge in samples. Range: -461373339 to 461373339 *RST: 0
<NumberSamples>	Number of measurement values to record (including the pretrigger samples). See Chapter 4.1.1, "Sample Rate and Maximum Usable I/Q Bandwidth for RF Input" , on page 18. *RST: 1001

Example:

```
TRAC:IQ:SET NORM,0,32MHz,EXT,POS,0,2048
```

Reads 2048 I/Q-values starting at the trigger point.

sample rate = 32 MHz

trigger = External

slope = Positive

```
TRAC:IQ:SET NORM,0,4 MHz,EXT,POS,1024,512
```

Reads 512 I/Q-values from 1024 measurement points before the trigger point.

filter type = NORMAL

sample rate = 4 MHz

trigger = External

slope = Positive

Manual operation: See ["Record Length"](#) on page 51

TRACe:IQ:SRATe <SampleRate>

This command sets the final user sample rate for the acquired I/Q data. Thus, the user sample rate can be modified without affecting the actual data capturing settings on the R&S FSWP.

Note: The smaller the user sample rate, the smaller the usable I/Q bandwidth, see [Chapter 4.1.1, "Sample Rate and Maximum Usable I/Q Bandwidth for RF Input"](#), on page 18.

Parameters:

<SampleRate>


The valid sample rates are described in [Chapter 4.1.1, "Sample Rate and Maximum Usable I/Q Bandwidth for RF Input"](#), on page 18.

*RST: 32 MHz

Manual operation: See ["Sample Rate"](#) on page 50

TRACe:IQ:TPISample?

This command queries the time offset between the sample start and the trigger event (trigger point in sample = TPIS). Since the R&S FSWP usually samples with a much higher sample rate than the specific application actually requires, the trigger point determined internally is much more precise than the one determined from the (down-sampled) data in the application. Thus, the TPIS indicates the offset between the sample start and the actual trigger event.

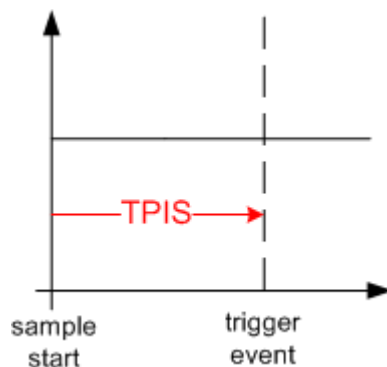

This value can only be determined in triggered measurements using external or IFPower triggers, otherwise the value is 0.

Example: `TRAC:IQ:TPIS?`
Result for a sample rate of 1 MHz: between 0 and 1/1 MHz, i.e. between 0 and 1 μ s (the duration of 1 sample).

Usage: Query only

Manual operation: See "[Trigger Offset](#)" on page 48

8.6.12 Automatic Configuration

[SENSe:]ADJust:ALL	117
[SENSe:]ADJust:CONFigure:DURation	118
[SENSe:]ADJust:CONFigure:DURation:MODE	118
[SENSe:]ADJust:CONFigure:HYSTeresis:LOWer	118
[SENSe:]ADJust:CONFigure:HYSTeresis:UPPer	119
[SENSe:]ADJust:CONFigure:TRIG	119
[SENSe:]ADJust:FREQuency	119
[SENSe:]ADJust:LEVel	120

[SENSe:]ADJust:ALL

This command initiates a measurement to determine and set the ideal settings for the current task automatically (only once for the current measurement).

This includes:

- Reference level

Example: `ADJ:ALL`

Usage: Event

Manual operation: See "[Adjusting all Determinable Settings Automatically \(Auto All\)](#)" on page 57

[SENSe:]ADJust:CONFigure:DURation <Duration>

In order to determine the ideal reference level, the R&S FSWP performs a measurement on the current input data. This command defines the length of the measurement if [\[SENSe:\]ADJust:CONFigure:DURation:MODE](#) is set to `MANual`.

Parameters:

<Duration> Numeric value in seconds
 Range: 0.001 to 16000.0
 *RST: 0.001
 Default unit: s

Example:

`ADJ:CONF:DUR:MODE MAN`
 Selects manual definition of the measurement length.
`ADJ:CONF:LEV:DUR 5ms`
 Length of the measurement is 5 ms.

Manual operation: See ["Changing the Automatic Measurement Time \(Meastime Manual\)"](#) on page 58

[SENSe:]ADJust:CONFigure:DURation:MODE <Mode>

In order to determine the ideal reference level, the R&S FSWP performs a measurement on the current input data. This command selects the way the R&S FSWP determines the length of the measurement .

Parameters:

<Mode> **AUTO**
 The R&S FSWP determines the measurement length automatically according to the current input data.
 MANual
 The R&S FSWP uses the measurement length defined by [\[SENSe:\]ADJust:CONFigure:DURation](#) on page 118.
 *RST: AUTO

Manual operation: See ["Resetting the Automatic Measurement Time \(Meastime Auto\)"](#) on page 58
 See ["Changing the Automatic Measurement Time \(Meastime Manual\)"](#) on page 58

[SENSe:]ADJust:CONFigure:HYSTeresis:LOWer <Threshold>

When the reference level is adjusted automatically using the [\[SENSe:\]ADJust:LEVe1](#) on page 120 command, the internal attenuators and the preamplifier are also adjusted. In order to avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines a lower threshold the signal must fall below (compared to the last measurement) before the reference level is adapted automatically.

Parameters:

<Threshold> Range: 0 dB to 200 dB
 *RST: +1 dB
 Default unit: dB

Example:

SENS:ADJ:CONF:HYST:LOW 2

For an input signal level of currently 20 dBm, the reference level will only be adjusted when the signal level falls below 18 dBm.

Manual operation: See "[Lower Level Hysteresis](#)" on page 58

[SENSe:]ADJust:CONFigure:HYSTerisis:UPPer <Threshold>

When the reference level is adjusted automatically using the [\[SENSe:\]ADJust:LEVel](#) on page 120 command, the internal attenuators and the preamplifier are also adjusted. In order to avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines an upper threshold the signal must exceed (compared to the last measurement) before the reference level is adapted automatically.

Parameters:

<Threshold> Range: 0 dB to 200 dB
 *RST: +1 dB
 Default unit: dB

Example:

SENS:ADJ:CONF:HYST:UPP 2

Example:

For an input signal level of currently 20 dBm, the reference level will only be adjusted when the signal level rises above 22 dBm.

Manual operation: See "[Upper Level Hysteresis](#)" on page 58

[SENSe:]ADJust:CONFigure:TRIG <State>

Defines the behaviour of the measurement when adjusting a setting automatically (using `SENS:ADJ:LEV ON`, for example).

See "[Adjusting settings automatically during triggered measurements](#)" on page 57.

Parameters:

<State> **ON | 1**
 The measurement for automatic adjustment waits for the trigger.
 OFF | 0
 The measurement for automatic adjustment is performed immediately, without waiting for a trigger.
 *RST: 1

[SENSe:]ADJust:FREQuency

This command sets the center frequency to the frequency with the highest signal level in the current frequency range.

Example:	ADJ:FREQ
Usage:	Event
Manual operation:	See " Adjusting the Center Frequency Automatically (Auto Freq) " on page 57

[SENSe:]ADJJust:LEVel

This command initiates a single (internal) measurement that evaluates and sets the ideal reference level for the current input data and measurement settings. This ensures that the settings of the RF attenuation and the reference level are optimally adjusted to the signal level without overloading the R&S FSWP or limiting the dynamic range by an S/N ratio that is too small.

Example:	ADJ:LEV
Usage:	Event
Manual operation:	See " Setting the Reference Level Automatically (Auto Level) " on page 41

8.6.13 Configuring the Result Display

DISPlay:FORMat.....	120
DISPlay[:WINDow<n>]:SIZE.....	121
LAYout:ADD[:WINDow]?.....	121
LAYout:CATalog[:WINDow]?.....	122
LAYout:IDENtify[:WINDow]?.....	122
LAYout:REMove[:WINDow].....	123
LAYout:REPLace[:WINDow].....	123
LAYout:SPLitter.....	123
LAYout:WINDow<n>:ADD?.....	125
LAYout:WINDow<n>:IDENtify?.....	125
LAYout:WINDow<n>:REMove.....	126
LAYout:WINDow<n>:REPLace.....	126

DISPlay:FORMat <Format>

This command determines which tab is displayed.

Parameters:

<Format>	SPLit Displays the MultiView tab with an overview of all active channels
	SINGle Displays the measurement channel that was previously focused.
*RST:	SING

Example:	DISP:FORM SPL
-----------------	---------------

DISPlay[:WINDow<n>]:SIZE <Size>

This command maximizes the size of the selected result display window *temporarily*. To change the size of several windows on the screen permanently, use the `LAY:SPL` command (see [LAYout:SPLitter](#) on page 123).

Parameters:

<Size>	LARGE Maximizes the selected window to full screen. Other windows are still active in the background.
	SMALI Reduces the size of the selected window to its original size. If more than one measurement window was displayed originally, these are visible again.
	*RST: SMALI

Example: `DISP:WIND2:LARG`

LAYout:ADD[:WINDow]? <WindowName>,<Direction>,<WindowType>

This command adds a window to the display in the active measurement channel.

This command is always used as a query so that you immediately obtain the name of the new window as a result.

To replace an existing window, use the `LAYout:REPLace[:WINDow]` command.

Parameters:

<WindowName>	String containing the name of the existing window the new window is inserted next to. By default, the name of a window is the same as its index. To determine the name and index of all active windows, use the <code>LAYout:CATalog[:WINDow]?</code> query.
<Direction>	LEFT RIGHT ABOVE BELOW Direction the new window is added relative to the existing window.
<WindowType>	text value Type of result display (evaluation method) you want to add. See the table below for available parameter values.

Return values:

<NewWindowName> When adding a new window, the command returns its name (by default the same as its number) as a result.

Example: `LAY:ADD? '1',LEFT,MTAB`
Result:
'2'
Adds a new window named '2' with a marker table to the left of window 1.

Usage: Query only

Manual operation: See "Magnitude" on page 13
 See "Spectrum" on page 14
 See "I/Q-Vector" on page 14
 See "Real/Imag (I/Q)" on page 15
 See "Marker Table" on page 16
 See "Marker Peak List" on page 16

Table 8-2: <WindowType> parameter values for IQ Analyzer application

Parameter value	Window type
FREQ	Spectrum
MAGN	Magnitude
MTABLE	Marker table
PEAKlist	Marker peak list
RIMAG	Real/Imag (I/Q)
VECT	I/Q Vector

LAYout:CATalog[:WINDow]?

This command queries the name and index of all active windows in the active measurement channel from top left to bottom right. The result is a comma-separated list of values for each window, with the syntax:

<WindowName_1>,<WindowIndex_1>..<<WindowName_n>,<WindowIndex_n>

Return values:

<WindowName> string
 Name of the window.
 In the default state, the name of the window is its index.

<WindowIndex> **numeric value**
 Index of the window.

Example:

LAY:CAT?

Result:

'2',2,'1',1

Two windows are displayed, named '2' (at the top or left), and '1' (at the bottom or right).

Usage: Query only

LAYout:IDENTify[:WINDow]? <WindowName>

This command queries the **index** of a particular display window in the active measurement channel.

Note: to query the **name** of a particular window, use the LAYout:WINDow<n>:IDENTify? query.

Query parameters:

<WindowName> String containing the name of a window.

Return values:

<WindowIndex> Index number of the window.

Example:

```
LAY:WIND:IDEN? '2'
```

Queries the index of the result display named '2'.

Response:

```
2
```

Usage: Query only

LAYout:REMove[:WINDow] <WindowName>

This command removes a window from the display in the active measurement channel.

Parameters:

<WindowName> String containing the name of the window.
In the default state, the name of the window is its index.

Example:

```
LAY:REM '2'
```

Removes the result display in the window named '2'.

Usage: Event

LAYout:REPLace[:WINDow] <WindowName>,<WindowType>

This command replaces the window type (for example from "Diagram" to "Result Summary") of an already existing window in the active measurement channel while keeping its position, index and window name.

To add a new window, use the [LAYout:ADD\[:WINDow\]?](#) command.

Parameters:

<WindowName> String containing the name of the existing window.
By default, the name of a window is the same as its index. To determine the name and index of all active windows in the active measurement channel, use the [LAYout:CATalog\[:WINDow\]?](#) query.

<WindowType> Type of result display you want to use in the existing window.
See [LAYout:ADD\[:WINDow\]?](#) on page 121 for a list of available window types.

Example:

```
LAY:REPL:WIND '1',MTAB
```

Replaces the result display in window 1 with a marker table.

LAYout:SPLitter <Index1>,<Index2>,<Position>

This command changes the position of a splitter and thus controls the size of the windows on each side of the splitter.

Compared to the `DISPlay[:WINDOW<n>]:SIZE` on page 121 command, the `LAYout:SPLitter` changes the size of all windows to either side of the splitter permanently, it does not just maximize a single window temporarily.

Note that windows must have a certain minimum size. If the position you define conflicts with the minimum size of any of the affected windows, the command will not work, but does not return an error.

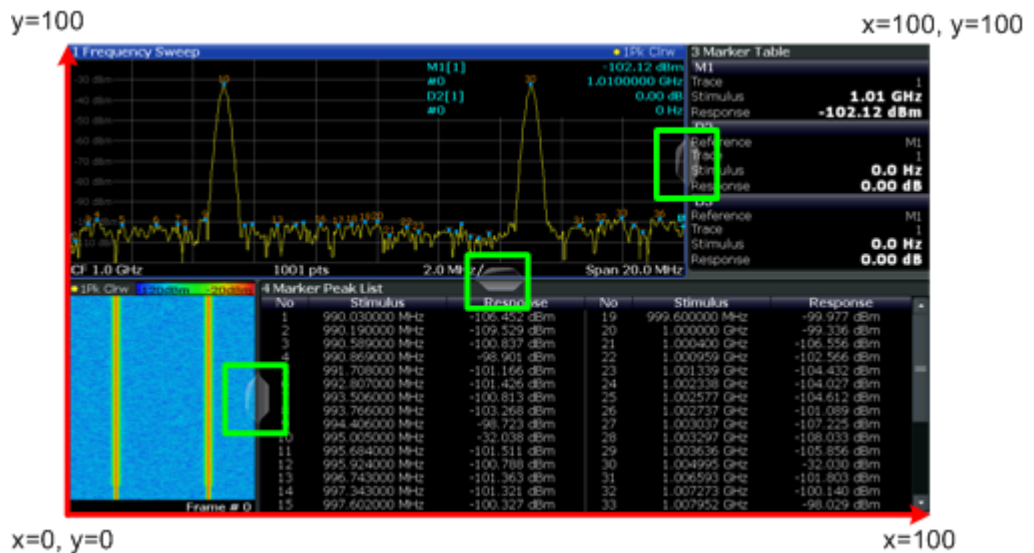


Figure 8-1: SmartGrid coordinates for remote control of the splitters

Parameters:

- <Index1> The index of one window the splitter controls.
- <Index2> The index of a window on the other side of the splitter.
- <Position> New vertical or horizontal position of the splitter as a fraction of the screen area (without channel and status bar and softkey menu).
The point of origin ($x = 0$, $y = 0$) is in the lower left corner of the screen. The end point ($x = 100$, $y = 100$) is in the upper right corner of the screen. (See Figure 8-1.)
The direction in which the splitter is moved depends on the screen layout. If the windows are positioned horizontally, the splitter also moves horizontally. If the windows are positioned vertically, the splitter also moves vertically.
- Range: 0 to 100

Example:

```
LAY:SPL 1,3,50
```

Moves the splitter between window 1 ('Frequency Sweep') and 3 ('Marker Table') to the center (50%) of the screen, i.e. in the figure above, to the left.

Example: `LAY:SPL 1,4,70`
 Moves the splitter between window 1 ('Frequency Sweep') and 3 ('Marker Peak List') towards the top (70%) of the screen. The following commands have the exact same effect, as any combination of windows above and below the splitter moves the splitter vertically.

`LAY:SPL 3,2,70`
`LAY:SPL 4,1,70`
`LAY:SPL 2,1,70`

LAYout:WINDow<n>:ADD? <Direction>,<WindowType>

This command adds a measurement window to the display. Note that with this command, the suffix <n> determines the existing window next to which the new window is added, as opposed to `LAYout:ADD[:WINDow]?`, for which the existing window is defined by a parameter.

To replace an existing window, use the `LAYout:WINDow<n>:REPLace` command.

This command is always used as a query so that you immediately obtain the name of the new window as a result.

Parameters:

<Direction> LEFT | RIGHT | ABOVE | BELOW

<WindowType> Type of measurement window you want to add.
 See `LAYout:ADD[:WINDow]?` on page 121 for a list of available window types.

Return values:

<NewWindowName> When adding a new window, the command returns its name (by default the same as its number) as a result.

Example: `LAY:WIND1:ADD? LEFT,MTAB`
 Result:
 '2'
 Adds a new window named '2' with a marker table to the left of window 1.

Usage: Query only

LAYout:WINDow<n>:IDENTify?

This command queries the **name** of a particular display window (indicated by the <n> suffix) in the active measurement channel.

Note: to query the **index** of a particular window, use the `LAYout:IDENTify[:WINDow]?` command.

Return values:

<WindowName> String containing the name of a window.
 In the default state, the name of the window is its index.

Example: `LAY:WIND2:IDEN?`
 Queries the name of the result display in window 2.
Response:
 '2'

Usage: Query only

LAYout:WINDow<n>:REMOve

This command removes the window specified by the suffix <n> from the display in the active measurement channel.

The result of this command is identical to the `LAYout:REMOve[:WINDow]` command.

Example: `LAY:WIND2:REM`
 Removes the result display in window 2.

Usage: Event

LAYout:WINDow<n>:REPLace <WindowType>

This command changes the window type of an existing window (specified by the suffix <n>) in the active measurement channel.

The result of this command is identical to the `LAYout:REPLace[:WINDow]` command.

To add a new window, use the `LAYout:WINDow<n>:ADD?` command.

Parameters:

<WindowType> Type of measurement window you want to replace another one with.
 See `LAYout:ADD[:WINDow]?` on page 121 for a list of available window types.

Example: `LAY:WIND2:REPL MTAB`
 Replaces the result display in window 2 with a marker table.

8.7 Analyzing Results

For a comprehensive description of the commands required to analyze results (trace and marker functionality), please refer to the R&S FSWP User Manual.

`CALCulate<n>:MARKer<m>:SEARch`..... 126

CALCulate<n>:MARKer<m>:SEARch <MarkReallmag>

This command selects the trace type a marker search is performed on.

(For *all* markers, <m> is irrelevant.)

Parameters:

<MarkReallmag>

REAL

Marker search functions are performed on the real trace of the "I/Q" measurement.

IMAG

Marker search functions are performed on the imaginary trace of the "I/Q" measurement.

MAGN

Marker search functions are performed on the magnitude of the I and Q data.

*RST: REAL

Example:

CALC4:MARK:SEAR IMAG

Manual operation: See "[Branch for Peak Search](#)" on page 59

8.8 Importing and Exporting I/Q Data

Alternatively to capturing I/Q data by the I/Q Analyzer itself, stored I/Q data from previous measurements or other applications can be imported to the I/Q Analyzer. Furthermore, I/Q data processed in the I/Q Analyzer can be stored to a file for further evaluation in other applications.

For details on importing and exporting I/Q data see [Chapter 4.3, "I/Q Data Import and Export"](#), on page 23.

MMEMory:LOAD:IQ:STATe	127
MMEMory:STORe<n>:IQ:COMMeNt	127
MMEMory:STORe<n>:IQ:STATe	128

MMEMory:LOAD:IQ:STATe 1,<FileName>

This command restores I/Q data from a file.

The file extension is *.iq.tar.

Parameters:

<FileName> String containing the path and name of the source file.

Example:

```
MMEM:LOAD:IQ:STAT 1, 'C:
\R_S\Instr\user\data.iq.tar'
```

Loads IQ data from the specified file.

Usage:

Setting only

Manual operation: See "[I/Q Import](#)" on page 35

MMEMory:STORe<n>:IQ:COMMeNt <Comment>

This command adds a comment to a file that contains I/Q data.

The suffix <n> is irrelevant.

Parameters:

<Comment> String containing the comment.

Example:

```
MMEM:STOR:IQ:COMM 'Device test 1b'
Creates a description for the export file.
MMEM:STOR:IQ:STAT 1, 'C:
\R_S\Instr\user\data.iq.tar'
Stores I/Q data and the comment to the specified file.
```

Manual operation: See "[I/Q Export](#)" on page 35

MMEMory:STORe<n>:IQ:STATe 1, <FileName>

This command writes the captured I/Q data to a file.

The suffix <n> is irrelevant.

The file extension is *.iq.tar. By default, the contents of the file are in 32-bit floating point format.

Secure User Mode

In secure user mode, settings that are to be stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "Memory full" error may occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

For details see "Protecting Data Using the Secure User Mode" in the "Data Management" section of the R&S FSWP User Manual.

Parameters:

1

<FileName> String containing the path and name of the target file.

Example:

```
MMEM:STOR:IQ:STAT 1, 'C:
\R_S\Instr\user\data.iq.tar'
Stores the captured I/Q data to the specified file.
```

Manual operation: See "[I/Q Export](#)" on page 35

8.9 Querying the Status Registers

The R&S FSWP-I/Q Analyzer uses the standard status registers of the R&S FSWP.

For details on the common R&S FSWP status registers refer to the description of remote control basics in the R&S FSWP User Manual.



*RST does not influence the status registers.

8.10 Programming Examples

The following programming examples demonstrate how to capture I/Q data and perform I/Q data analysis using the I/Q Analyzer in a remote environment.

- [I/Q Analysis with Graphical Evaluation](#)..... 129
- [Basic I/Q Analysis with Improved Performance](#)..... 130

8.10.1 I/Q Analysis with Graphical Evaluation

This example demonstrates how to configure and perform a basic I/Q data acquisition and analyze the data using the I/Q Analyzer in a remote environment.

```
//-----Activating the I/Q Analyzer application -----
*RST
//Reset the instrument
INST:CRE IQ,'IQANALYZER'
//Creates a new measurement channel named 'IQANALYZER'.
INIT:CONT OFF
//Switches to single sweep mode

//-----Configuring Data Acquisition-----
TRAC:IQ:SRAT 32MHZ
//Defines the sample rate.
TRAC:IQ:RLEN 1000
//Sets the record length (number of samples to capture) to 1000 samples.
TRAC:IQ:BWID?
//Queries the bandwidth of the resampling filter, determined by the sample rate
FORM:DATA REAL,32
//Formats the data as 32-byte real values.
TRAC:IQ:DATA:FORM IQP
//Lists all I values first, then all Q values in the trace results.

//-----Configuring the Trace-----
TRAC:IQ:AVER ON
//Defines averaging for the I/Q trace.
TRAC:IQ:AVER:COUN 10
//Defines an average over 10 sweeps.

DISP:TRAC1:MODE WRIT
DISP:TRAC2:MODE MAXH
DISP:TRAC3:MODE MINH
//Changes the trace modes.

//-----Performing the Measurement-----
INIT;*WAI
//Initiates a new measurement and waits until the sweep has finished.

//-----Retrieving Results-----
```

```

TRAC:DATA? TRACE1
TRAC:DATA? TRACE2
TRAC:DATA? TRACE3
//Returns the magnitude for each sweep point

LAY:REPL:WIND '1',RIMAG
//Changes the result display to Real/Imag (I/Q)

CALC:MARK:SEAR MAGN
//Configures searches to search both I and Q branches.
CALC:MARK:Y?
//Queries the result of the peak search on both branches.

TRAC:IQ:DATA:MEM? 0,500
//Returns the first 500 samples of the stored I/Q data for the measurement.
//For each sample, first the I-value, then the Q-value is listed.

TRAC:IQ:DATA:MEM? 500,500
//Returns the second half of the 1000 captured sample values.

```

8.10.2 Basic I/Q Analysis with Improved Performance

This example demonstrates how to configure and perform a basic I/Q data acquisition and analyze the data using the I/Q Analyzer in a remote environment.

```

//-----Activating the I/Q Analyzer application -----
*RST
//Reset the instrument

INIT:CONT OFF
//Switches to single sweep mode
TRACE:IQ ON
//Switches the operating mode of the current measurement channel to I/Q Analyzer
//while retaining the relevant parameters from the Spectrum mode.

//-----Configuring Data Acquisition-----
TRACE:IQ:SET NORM,0,32000000,IQP,POS,0,1000
//Configures the sample rate as 32 MHz, IQP trigger, positive trigger slope,
//no pretrigger samples, 1000 samples to capture
FORM REAL,32
//The data is formatted as real values.

//-----Configuring I/Q Gating-----
TRAC:IQ:EGAT ON
//Turns on gated measurement.
TRAC:IQ:EGAT:TYPE LEV
//Select the level gate type.

```

```
TRAC:IQ:EGAT:LENG 20
//Sets the gate length to 20 samples.
TRAC:IQ:EGAT:GAP 20
//Sets the interval between gate periods to 20 samples.
TRAC:IQ:EGAT:NOF 2
//Sets the number of gate periods after the trigger signal to 2.
TRIG:SOUR IQP
//Defines the magnitude of the sampled I/Q data to be used as a trigger.
TRIG:LEV:IQP -30dbm
//Sets the trigger level.

//-----Performing the Measurement and Retrieving Results-----
TRAC:IQ:DATA?; *WAI;
//Performs a measurement and returns the RF input voltage at each sample point
//(first 1000 I-values, then 1000 Q-values).

TRAC:IQ:DATA:MEM? 0,500
//Returns the first 500 samples of the stored trace data for the measurement.
//For each sample, first the I-value, then the Q-value is listed.

TRAC:IQ:DATA:MEM? 500,500
//Returns the second half of the 1000 captured sample values.
```

Annex

A Annex: Reference

A.1	Formats for Returned Values: ASCII Format and Binary Format.....	132
A.2	Reference: Format Description for I/Q Data Files.....	132
A.3	I/Q Data File Format (iq-tar).....	134
A.3.1	I/Q Parameter XML File Specification.....	134
A.3.2	I/Q Data Binary File.....	138

A.1 Formats for Returned Values: ASCII Format and Binary Format

When trace data is retrieved using the `TRAC:DATA` or `TRAC:IQ:DATA` command, the data is returned in the format defined using the `FORMat[:DATA]`. The possible formats are described here.

- ASCII Format (FORMat ASCII):
The data is stored as a list of comma separated values (CSV) of the measured values in floating point format.
- Binary Format (FORMat REAL,32):
The data is stored as binary data (Definite Length Block Data according to IEEE 488.2), each measurement value being formatted in 32 Bit IEEE 754 Floating-Point-Format.
The schema of the result string is as follows:
`#41024<value1><value2>...<value n>` with

#4	number of digits (= 4 in the example) of the following number of data bytes
1024	number of following data bytes (= 1024 in the example)
<Value>	4-byte floating point value



Reading out data in binary format is quicker than in ASCII format. Thus, binary format is recommended for large amounts of data.

A.2 Reference: Format Description for I/Q Data Files

This section describes how I/Q data is transferred to the memory during remote control (see `TRACe:IQ:DATA:FORMat` on page 83 command).

For details on the format of the individual values, see [Chapter A.1, "Formats for Returned Values: ASCII Format and Binary Format"](#), on page 132.

For details on the format of I/Q export files (using the "I/Q Export" function), see the R&S FSWP User Manual.

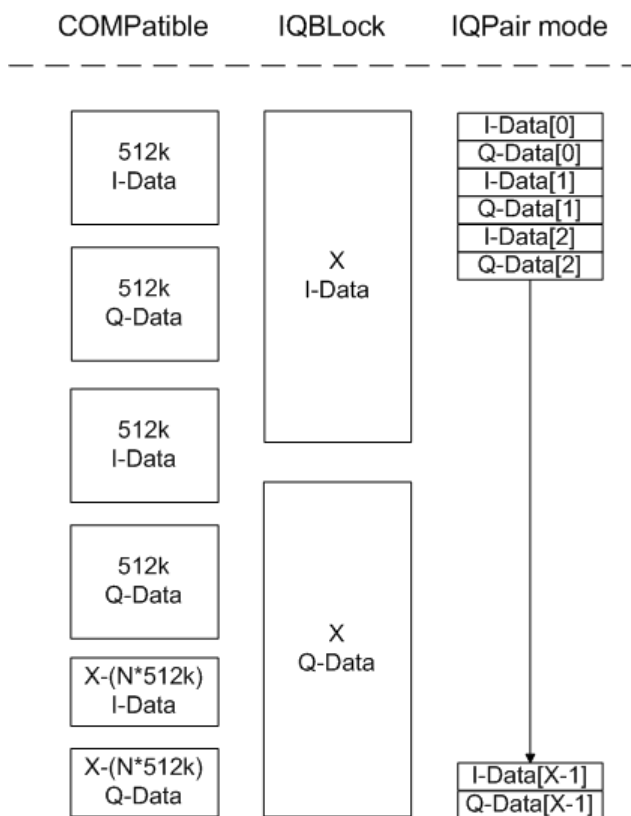


Figure A-1: I/Q data formats

Note: 512k corresponds to 524288 samples

For maximum performance, the formats "Compatible" or "IQPair" should be used. Furthermore, for large amounts of data, the data should be in binary format to improve performance.

In binary format, the number of I- and Q-data can be calculated as follows:

$$\# \text{ of } I\text{-Data} = \# \text{ of } Q\text{-Data} = \frac{\# \text{ of } DataBytes}{8}$$

For the format "QBLock", the offset of Q-data in the output buffer can be calculated as follows:

$$Q\text{-Data - Offset} = \frac{(\# \text{ of } DataBytes)}{2} + LengthIndicatorDigits$$

with "LengthIndicatorDigits" being the number of digits of the length indicator including the #. In the example above (#41024...), this results in a value of 6 for "LengthIndicatorDigits" and the offset for the Q-data results in 512 + 6 = 518.

A.3 I/Q Data File Format (iq-tar)

I/Q data is packed in a file with the extension `.iq.tar`. An iq-tar file contains I/Q data in binary format together with meta information that describes the nature and the source of data, e.g. the sample rate. The objective of the iq-tar file format is to separate I/Q data from the meta information while still having both inside one file. In addition, the file format allows you to preview the I/Q data in a web browser, and allows you to include user-specific data.

The iq-tar container packs several files into a single `.tar` archive file. Files in `.tar` format can be unpacked using standard archive tools (see http://en.wikipedia.org/wiki/Comparison_of_file_archivers) available for most operating systems. The advantage of `.tar` files is that the archived files inside the `.tar` file are not changed (not compressed) and thus it is possible to read the I/Q data directly within the archive without the need to unpack (untar) the `.tar` file first.

Contained files

An iq-tar file must contain the following files:

- **I/Q parameter XML file**, e.g. `xyz.xml`
Contains meta information about the I/Q data (e.g. sample rate). The filename can be defined freely, but there must be only one single I/Q parameter XML file inside an iq-tar file.
- **I/Q data binary file**, e.g. `xyz.complex.float32`
Contains the binary I/Q data of all channels. There must be only one single I/Q data binary file inside an iq-tar file.

Optionally, an iq-tar file can contain the following file:

- **I/Q preview XSLT file**, e.g. `open_IqTar_xml_file_in_web_browser.xslt`
Contains a stylesheet to display the I/Q parameter XML file and a preview of the I/Q data in a web browser.
A sample stylesheet is available at http://www.rohde-schwarz.com/file/open_IqTar_xml_file_in_web_browser.xslt.

A.3.1 I/Q Parameter XML File Specification



The content of the I/Q parameter XML file must comply with the XML schema `RsIqTar.xsd` available at: <http://www.rohde-schwarz.com/file/RsIqTar.xsd>.

In particular, the order of the XML elements must be respected, i.e. iq-tar uses an "ordered XML schema". For your own implementation of the iq-tar file format make sure to validate your XML file against the given schema.

The following example shows an I/Q parameter XML file. The XML elements and attributes are explained in the following sections.

Sample I/Q parameter XML file: xyz.xml

```

<?xml version="1.0" encoding="UTF-8"?>
<?xml-stylesheet type="text/xsl"
href="open_IqTar_xml_file_in_web_browser.xslt"?>
<RS_IQ_TAR_FileFormat fileFormatVersion="1"
xsi:noNamespaceSchemaLocation="RsIqTar.xsd"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">
  <Name>FSV-K10</Name>
  <Comment>Here is a comment</Comment>
  <DateTime>2011-01-24T14:02:49</DateTime>
  <Samples>68751</Samples>
  <Clock unit="Hz">6.5e+006</Clock>
  <Format>complex</Format>
  <DataType>float32</DataType>
  <ScalingFactor unit="V">1</ScalingFactor>
  <NumberOfChannels>1</NumberOfChannels>
  <DataFilename>xyz.complex.float32</DataFilename>
  <UserData>
    <UserDefinedElement>Example</UserDefinedElement>
  </UserData>
  <PreviewData>...</PreviewData>
</RS_IQ_TAR_FileFormat>

```

Element	Description
RS_IQ_TAR_File-Format	The root element of the XML file. It must contain the attribute <code>fileFormatVersion</code> that contains the number of the file format definition. Currently, <code>fileFormatVersion "2"</code> is used.
Name	Optional: describes the device or application that created the file.
Comment	Optional: contains text that further describes the contents of the file.
DateTime	Contains the date and time of the creation of the file. Its type is <code>xs:dateTime</code> (see <code>RsIqTar.xsd</code>).
Samples	Contains the number of samples of the I/Q data. For multi-channel signals all channels have the same number of samples. One sample can be: <ul style="list-style-type: none"> • A complex number represented as a pair of I and Q values • A complex number represented as a pair of magnitude and phase values • A real number represented as a single real value See also <code>Format</code> element.
Clock	Contains the clock frequency in Hz, i.e. the sample rate of the I/Q data. A signal generator typically outputs the I/Q data at a rate that equals the clock frequency. If the I/Q data was captured with a signal analyzer, the signal analyzer used the clock frequency as the sample rate. The attribute <code>unit</code> must be set to "Hz".
Format	Specifies how the binary data is saved in the I/Q data binary file (see <code>DataFilename</code> element). Every sample must be in the same format. The format can be one of the following: <ul style="list-style-type: none"> • <code>complex</code>: Complex number in cartesian format, i.e. I and Q values interleaved. I and Q are unitless • <code>real</code>: Real number (unitless) • <code>polar</code>: Complex number in polar format, i.e. magnitude (unitless) and phase (rad) values interleaved. Requires <code>DataType = float32</code> or <code>float64</code>

Element	Description
DataType	<p>Specifies the binary format used for samples in the I/Q data binary file (see <code>DataFilename</code> element and Chapter A.3.2, "I/Q Data Binary File", on page 138).</p> <p>The following data types are allowed:</p> <ul style="list-style-type: none"> • <code>int8</code>: 8 bit signed integer data • <code>int16</code>: 16 bit signed integer data • <code>int32</code>: 32 bit signed integer data • <code>float32</code>: 32 bit floating point data (IEEE 754) • <code>float64</code>: 64 bit floating point data (IEEE 754)
ScalingFactor	<p>Optional: describes how the binary data can be transformed into values in the unit Volt. The binary I/Q data itself has no unit. To get an I/Q sample in the unit Volt the saved samples have to be multiplied by the value of the <code>ScalingFactor</code>. For polar data only the magnitude value has to be multiplied. For multi-channel signals the <code>ScalingFactor</code> must be applied to all channels.</p> <p>The attribute <code>unit</code> must be set to "v".</p> <p>The <code>ScalingFactor</code> must be > 0. If the <code>ScalingFactor</code> element is not defined, a value of 1 V is assumed.</p>
NumberOfChannels	<p>Optional: specifies the number of channels, e.g. of a MIMO signal, contained in the I/Q data binary file. For multi-channels, the I/Q samples of the channels are expected to be interleaved within the I/Q data file (see Chapter A.3.2, "I/Q Data Binary File", on page 138). If the <code>NumberOfChannels</code> element is not defined, one channel is assumed.</p>
DataFilename	<p>Contains the filename of the I/Q data binary file that is part of the iq-tar file.</p> <p>It is recommended that the filename uses the following convention: <code><xyz>.<Format>.<Channels>ch.<Type></code></p> <ul style="list-style-type: none"> • <code><xyz></code> = a valid Windows file name • <code><Format></code> = complex, polar or real (see <code>Format</code> element) • <code><Channels></code> = Number of channels (see <code>NumberOfChannels</code> element) • <code><Type></code> = float32, float64, int8, int16, int32 or int64 (see <code>DataType</code> element) <p>Examples:</p> <ul style="list-style-type: none"> • xyz.complex.1ch.float32 • xyz.polar.1ch.float64 • xyz.real.1ch.int16 • xyz.complex.16ch.int8
UserData	<p>Optional: contains user, application or device-specific XML data which is not part of the iq-tar specification. This element can be used to store additional information, e.g. the hardware configuration. User data must be valid XML content.</p>
PreviewData	<p>Optional: contains further XML elements that provide a preview of the I/Q data. The preview data is determined by the routine that saves an iq-tar file (e.g. R&S FSWP). For the definition of this element refer to the <code>RsIqTar.xsd</code> schema. Note that the preview can be only displayed by current web browsers that have JavaScript enabled and if the XSLT stylesheet <code>open_IqTar_xml_file_in_web_browser.xslt</code> is available.</p>

Example: ScalingFactor

Data stored as `int16` and a desired full scale voltage of 1 V

$$\text{ScalingFactor} = 1 \text{ V} / \text{maximum int16 value} = 1 \text{ V} / 2^{15} = 3.0517578125\text{e-}5 \text{ V}$$

Scaling Factor	Numerical value	Numerical value x ScalingFactor
Minimum (negative) int16 value	$-2^{15} = -32768$	-1 V
Maximum (positive) int16 value	$2^{15}-1 = 32767$	0.999969482421875 V

Example: PreviewData in XML

```

<PreviewData>
  <ArrayOfChannel length="1">
    <Channel>
      <PowerVsTime>
        <Min>
          <ArrayOfFloat length="256">
            <float>-134</float>
            <float>-142</float>
            ...
            <float>-140</float>
          </ArrayOfFloat>
        </Min>
        <Max>
          <ArrayOfFloat length="256">
            <float>-70</float>
            <float>-71</float>
            ...
            <float>-69</float>
          </ArrayOfFloat>
        </Max>
      </PowerVsTime>
      <Spectrum>
        <Min>
          <ArrayOfFloat length="256">
            <float>-133</float>
            <float>-111</float>
            ...
            <float>-111</float>
          </ArrayOfFloat>
        </Min>
        <Max>
          <ArrayOfFloat length="256">
            <float>-67</float>
            <float>-69</float>
            ...
            <float>-70</float>
            <float>-69</float>
          </ArrayOfFloat>
        </Max>
      </Spectrum>
      <IQ>
        <Histogram width="64" height="64">0123456789...0</Histogram>
      </IQ>
    </Channel>
  </ArrayOfChannel>
</PreviewData>

```

A.3.2 I/Q Data Binary File

The I/Q data is saved in binary format according to the format and data type specified in the XML file (see `Format` element and `DataType` element). To allow reading and writing of streamed I/Q data, all data is interleaved, i.e. complex values are interleaved pairs of I and Q values and multi-channel signals contain interleaved (complex) samples for channel 0, channel 1, channel 2 etc. If the `NumberOfChannels` element is not defined, one channel is presumed.

Example: Element order for real data (1 channel)

```
I[0],           // Real sample 0
I[1],           // Real sample 1
I[2],           // Real sample 2
...
```

Example: Element order for complex cartesian data (1 channel)

```
I[0], Q[0],     // Real and imaginary part of complex sample 0
I[1], Q[1],     // Real and imaginary part of complex sample 1
I[2], Q[2],     // Real and imaginary part of complex sample 2
...
```

Example: Element order for complex polar data (1 channel)

```
Mag[0], Phi[0], // Magnitude and phase part of complex sample 0
Mag[1], Phi[1], // Magnitude and phase part of complex sample 1
Mag[2], Phi[2], // Magnitude and phase part of complex sample 2
...
```

Example: Element order for complex cartesian data (3 channels)

Complex data: I[channel no][time index], Q[channel no][time index]

```
I[0][0], Q[0][0], // Channel 0, Complex sample 0
I[1][0], Q[1][0], // Channel 1, Complex sample 0
I[2][0], Q[2][0], // Channel 2, Complex sample 0

I[0][1], Q[0][1], // Channel 0, Complex sample 1
I[1][1], Q[1][1], // Channel 1, Complex sample 1
I[2][1], Q[2][1], // Channel 2, Complex sample 1

I[0][2], Q[0][2], // Channel 0, Complex sample 2
I[1][2], Q[1][2], // Channel 1, Complex sample 2
I[2][2], Q[2][2], // Channel 2, Complex sample 2
...
```

Example: Element order for complex cartesian data (1 channel)

This example demonstrates how to store complex cartesian data in float32 format using MATLAB®.

```
% Save vector of complex cartesian I/Q data, i.e. iqiqiq...
N = 100
iq = randn(1,N)+1j*randn(1,N)
fid = fopen('xyz.complex.float32','w');
for k=1:length(iq)
    fwrite(fid, single(real(iq(k))), 'float32');
    fwrite(fid, single(imag(iq(k))), 'float32');
end
fclose(fid)
```

List of Remote Commands (I/Q Analyzer)

[SENSe:]ADJust:ALL.....	117
[SENSe:]ADJust:CONFigure:DURation.....	118
[SENSe:]ADJust:CONFigure:DURation:MODE.....	118
[SENSe:]ADJust:CONFigure:HYSteresis:LOWer.....	118
[SENSe:]ADJust:CONFigure:HYSteresis:UPPer.....	119
[SENSe:]ADJust:CONFigure:TRIG.....	119
[SENSe:]ADJust:FREQuency.....	119
[SENSe:]ADJust:LEVel.....	120
[SENSe:]AVERAge:COUNT.....	79
[SENSe:]AVERAge<n>[:STATe<t>].....	79
[SENSe:]FREQuency:CENTer.....	100
[SENSe:]FREQuency:CENTer:STEP.....	100
[SENSe:]FREQuency:CENTer:STEP:AUTO.....	101
[SENSe:]FREQuency:OFFSet.....	101
[SENSe:]IQ:BANDwidth BWIDth:MODE.....	111
[SENSe:]IQ:BANDwidth BWIDth:RESolution.....	111
[SENSe:]IQ:FFT:ALGorithm.....	112
[SENSe:]IQ:FFT:LENGth.....	112
[SENSe:]IQ:FFT:WINDow:LENGth.....	112
[SENSe:]IQ:FFT:WINDow:OVERlap.....	113
[SENSe:]IQ:FFT:WINDow:TYPE.....	113
[SENSe:]POWer:NCORrection.....	96
[SENSe:]SWAPiq.....	113
[SENSe:]SWEep:COUNT.....	80
[SENSe:]SWEep:COUNT:CURRent?.....	80
[SENSe:]SWEep:POINts.....	80
[SENSe:]SWEep:TIME.....	81
ABORT.....	75
CALCulate<n>:DELTAmarker<m>:X.....	88
CALCulate<n>:DELTAmarker<m>:Y?.....	88
CALCulate<n>:IQ:MODE.....	70
CALCulate<n>:MARKer<m>:FUNCTion:CENTer.....	100
CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:SORT.....	87
CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:X?.....	87
CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:Y?.....	88
CALCulate<n>:MARKer<m>:FUNCTion:REFerence.....	95
CALCulate<n>:MARKer<m>:SEARCh.....	126
CALCulate<n>:MARKer<m>:X.....	89
CALCulate<n>:MARKer<m>:Y?.....	89
CALCulate<n>:UNIT:POWer.....	95
DIAGnostic:SERVice:NSORce.....	93
DISPlay:FORMat.....	120
DISPlay[:WINDow<n>]:SIZE.....	121
DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing.....	99
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE].....	98
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:AUTO ONCE.....	98
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:MODE.....	98

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel.....	95
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet.....	95
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition.....	99
FORMat:DEXPort:DSEParator.....	85
FORMat[:DATA].....	85
INITiate<n>:CONMeas.....	76
INITiate<n>:CONTinuous.....	76
INITiate<n>:SEQuencer:ABORt.....	77
INITiate<n>:SEQuencer:IMMediate.....	77
INITiate<n>:SEQuencer:MODE.....	78
INITiate<n>:SEQuencer:REFResh[:ALL].....	78
INITiate<n>[:IMMediate].....	77
INPut:ATTenuation.....	96
INPut:ATTenuation:AUTO.....	97
INPut:ATTenuation:PROTection:RESet.....	91
INPut:COUPling.....	91
INPut:FILTer:HPASs[:STATe].....	91
INPut:FILTer:YIG[:STATe].....	92
INPut:GAIN:STATe.....	97
INPut:GAIN[:VALue].....	97
INPut:IMPedance.....	92
INPut:SElect.....	92
INPut:UPORt:STATe.....	93
INPut:UPORt[:VALue]?.....	93
INSTRument:CREate:DUPLicate.....	70
INSTRument:CREate:REPLace.....	71
INSTRument:CREate[:NEW].....	70
INSTRument:DELeTe.....	71
INSTRument:LIST?.....	72
INSTRument:REName.....	72
INSTRument[:SElect].....	72
LAYout:ADD[:WINDow]?.....	121
LAYout:CATalog[:WINDow]?.....	122
LAYout:IDENtify[:WINDow]?.....	122
LAYout:REMOve[:WINDow].....	123
LAYout:REPLace[:WINDow].....	123
LAYout:SPLitter.....	123
LAYout:WINDow<n>:ADD?.....	125
LAYout:WINDow<n>:IDENtify?.....	125
LAYout:WINDow<n>:REMOve.....	126
LAYout:WINDow<n>:REPLace.....	126
MMEMory:LOAD:IQ:STATe.....	127
MMEMory:STORe<n>:IQ:COMMeNt.....	127
MMEMory:STORe<n>:IQ:STATe.....	128
MMEMory:STORe<n>:LIST.....	90
OUTPut:TRIGger<port>:DIRection.....	106
OUTPut:TRIGger<port>:LEVel.....	107
OUTPut:TRIGger<port>:OTYPe.....	107
OUTPut:TRIGger<port>:PULSe:IMMediate.....	107
OUTPut:TRIGger<port>:PULSe:LENGth.....	108

OUTPut:UPORt:STATe.....	94
OUTPut:UPORt[:VALue].....	94
SYSTem:PRESet:CHANnel[:EXECute].....	73
SYSTem:SEQuencer.....	81
TRACe:IQ:AVERAge:COUNT.....	79
TRACe:IQ:AVERAge[:STATe].....	79
TRACe:IQ:BWIDth.....	114
TRACe:IQ:DATA:FORMat.....	83
TRACe:IQ:DATA:MEMory?.....	83
TRACe:IQ:DATA?.....	82
TRACe:IQ:EGATe.....	109
TRACe:IQ:EGATe:GAP.....	109
TRACe:IQ:EGATe:LENGth.....	109
TRACe:IQ:EGATe:NOFGateperiods.....	110
TRACe:IQ:EGATe:TYPE.....	110
TRACe:IQ:EVAl.....	73
TRACe:IQ:RENGth.....	114
TRACe:IQ:SET.....	114
TRACe:IQ:SRATe.....	116
TRACe:IQ:TPISAmple?.....	116
TRACe:IQ[:STATe].....	74
TRACe<n>[:DATA]:MEMory?.....	86
TRACe<n>[:DATA]:X?.....	87
TRACe<n>[:DATA]?.....	86
TRIGger[:SEQuence]:DTIME.....	102
TRIGger[:SEQuence]:HOLDoff[:TIME].....	102
TRIGger[:SEQuence]:IFPower:HOLDoff.....	102
TRIGger[:SEQuence]:IFPower:HYSTeresis.....	103
TRIGger[:SEQuence]:LEVel:IFPower.....	104
TRIGger[:SEQuence]:LEVel:IQPower.....	104
TRIGger[:SEQuence]:LEVel:RFPower.....	104
TRIGger[:SEQuence]:LEVel[:EXTernal<port>].....	103
TRIGger[:SEQuence]:SLOPe.....	104
TRIGger[:SEQuence]:SOURce.....	105
TRIGger[:SEQuence]:TIME:RINTerval.....	106

Index

Symbols

*OPC 102

A

Aborting
 Sweep 55, 56
 AC/DC coupling 36
 Activating
 I/Q Analyzer (remote) 69
 Amplitude
 Scaling 43
 Analysis
 Bandwidth 51
 Bandwidth, definition 18
 Interval (MSRA) 50
 Analysis line 31
 Applications
 I/Q Analyzer (remote) 69
 Att (hardware setting) 11
 Attenuation
 Auto 41
 Manual 41
 Protective 21
 Protective (remote) 91
 Auto adjustment
 Triggered measurement 119
 Auto all 57
 Auto frequency 57
 Auto level
 Hysteresis 58
 Reference level 41, 58
 Softkey 41, 58
 Auto settings
 Meastime Auto 58
 Meastime Manual 58
 Average count 55

B

Bandwidth
 Analysis 51
 Extension options 19
 I/Q Analyzer 18
 Maximum usable 18
 Relationship to sample rate 19
 Settings 49
 Branch for peak search
 I/Q Analyzer 59

C

Capture time
 see also Measurement time 81
 Capturing
 I/Q data, see Data acquisition 74
 Center frequency 44
 Automatic configuration 57
 Displayed 11
 Softkey 44
 Step size 44

Closing
 Channels (remote) 71
 Windows (remote) 123, 126
 Configuring
 Data acquisition (remote) 110
 I/Q Analyzer (remote) 90
 Continue single sweep
 Softkey 56
 Continuous sweep
 Softkey 55
 Conventions
 SCPI commands 64
 Copying
 Measurement channel (remote) 70
 Coupling
 Input (remote) 91
 CP/ACLR
 Noise cancellation 42

D

Data acquisition
 Configuring (remote) 110
 I/Q Analyzer 17
 I/Q data (remote) 74
 MSRA 50
 Settings 49
 Data format
 ASCII 132
 Binary 132
 Remote 85
 Decimation
 Data processing 17
 Demodulation
 Display 56
 Diagram area
 Hardware settings 11
 Diagram footer information 12
 Display configuration
 Softkey 56
 Drop-out time
 Trigger 49
 Duplicating
 Measurement channel (remote) 70

E

Edge
 Triggered gate 108
 Electronic input attenuation 41
 Equalizer
 Data processing 17
 Errors
 IF OVLD 40
 Evaluation methods
 Remote 121
 Exporting
 I/Q data 23, 32, 35, 61, 134, 138
 Softkey 35
 External trigger 46
 Level (remote) 103

- F**
- FFT
 - Fundamentals 25
 - Measurement speed 28
 - Window functions 25, 53
 - Files
 - Format, I/Q data 134
 - I/Q data binary XML 138
 - I/Q data input 21
 - I/Q parameter XML 134
 - Filters
 - Bandwidth, I/Q data 51
 - Equalizer 17
 - High-pass (remote) 91
 - High-pass (RF input) 37
 - YIG (remote) 92
 - Format
 - Data 132
 - Data (remote) 85
 - I/Q data files 132
 - Free Run
 - Trigger 46
 - Frequency
 - Configuration (softkey) 44
 - Offset 44
- G**
- Gating
 - I/Q data 108
 - Source 46
- H**
- Hardware settings
 - Displayed 11
 - High-pass filter
 - Remote 91
 - RF input 37
 - Hysteresis
 - Lower (Auto level) 58
 - Trigger 49
 - Upper (Auto level) 58
- I**
- I/Q Analyzer
 - Data acquisition 17
 - Evaluation 13
 - I/Q Vector evaluation 14
 - Magnitude evaluation 13
 - Maximum bandwidth 18
 - Modes 69
 - Programming example 129, 130
 - Real/Imag (I/Q) evaluation 15
 - Results 13
 - Sample rate 18
 - Spectrum evaluation 14
 - I/Q data
 - Analog, processing 17
 - Export file binary data description 138
 - Export file parameter description 134
 - Exporting 32, 35
 - Exporting/Importing 61
 - File format description 132
 - Importing 32, 35
 - Importing/Exporting 23
 - Input files 21
 - Maximum bandwidth 18
 - Sample rate 18
 - Trigger point in sample (TPIS) 116
 - Working with 60
 - I/Q gating
 - Edge triggered 108
 - Level triggered 108
 - I/Q measurements
 - Methods 74
 - I/Q Power
 - Trigger 47
 - Trigger level (remote) 104
 - I/Q Vector
 - Evaluation method 14
 - I/Q Analyzer 14
 - Y-axis scaling 43
 - IF Power
 - Trigger 47
 - Trigger level (remote) 104
 - Impedance
 - Remote 92
 - Setting 36
 - Importing
 - I/Q data 23, 32, 35, 61, 134
 - Softkey 35
 - Inherent noise
 - Cancellation 42
 - Input
 - Coupling 36
 - Coupling (remote) 91
 - Overload 21
 - Overload (remote) 91
 - RF 36
 - Signal, parameters 21
 - Input sample rate (ISR)
 - Definition 18
 - Input sources
 - I/Q data files 21
 - Installation 9
 - IQBlock
 - I/Q data files 132
 - IQPair
 - I/Q data files 132
- K**
- Keys
 - LINES (not used) 32
 - RUN CONT 55
 - RUN SINGLE 55, 56
- L**
- Level
 - Triggered gate 108
 - Lower Level Hysteresis 58
- M**
- Magnitude
 - Evaluation method 13
 - I/Q Analyzer 13
 - Marker table
 - Evaluation method 16

- Markers
 - Querying position (remote) 89
 - Retrieving results (remote) 87
 - Table (evaluation method) 16
- Maximizing
 - Windows (remote) 121
- Meas Time (hardware setting) 11
- Measurement channel
 - Creating (remote) 70, 71, 72
 - Deleting (remote) 71
 - Duplicating (remote) 70
 - Querying (remote) 72
 - Renaming (remote) 72
 - Replacing (remote) 71
 - Selecting (remote) 72
- Measurement time
 - Auto settings 58
 - Displayed 11
 - I/Q data 51
 - Remote 81
- Modulation
 - Inverted (I/Q, remote) 113
 - Inverted (I/Q) 51
- MSRA
 - Analysis interval 50
 - Operating mode 30
- Multiple
 - Measurement channels 10
- N**
- Noise
 - Cancellation (CP/ACLR) 42
 - Cancellation (remote control) 96
 - Cancellation (softkey) 42
 - Correction, see Cancellation 42
 - Source 22, 38
- O**
- Offset
 - Displayed 11
 - Frequency 44
 - Reference level 40
- Options
 - Bandwidth extension 19
 - High-pass filter 37, 91
 - Preamplifier 41
- Output
 - Noise source 22, 38
 - Parameters 21
 - Sample rate, definition 18
 - Trigger 38
- Overload
 - RF input 21
 - RF input (remote) 91
- Overview
 - Configuration 32
- P**
- Parameters
 - Input signal 21
 - Output 21
- Peak list
 - Evaluation method 16
- Peak search
 - Retrieving results (remote) 87
- Performance
 - FFT parameters 28
- Performing
 - I/Q Analyzer measurement 60
- Ports
 - User 94
- Power sensors
 - Trigger mode 48
- Preamplifier
 - Setting 41
 - Softkey 41
- Presetting
 - Channels 34
- Pretrigger 48
- Programming examples
 - I/Q Analyzer 129, 130
- Protection
 - RF input 21
 - RF input (remote) 91
- R**
- Range 43
- RBW (hardware setting) 12
- Real/Imag (I/Q)
 - Evaluation method 15
 - I/Q Analyzer 15
- Rec Length (hardware setting) 11
- Record length
 - Definition 18
 - I/Q data 51
 - Relationship to sample rate 19
- Ref Level (hardware setting) 11
- Reference level 40
 - Auto level 41, 58
 - Offset 40
 - Position 43
 - Unit 40
 - Value 40
- Remote commands
 - Basics on syntax 64
 - Boolean values 68
 - Capitalization 65
 - Character data 68
 - Data blocks 68
 - Numeric values 67
 - Optional keywords 66
 - Parameters 66
 - Strings 68
 - Suffixes 65
- Remote control
 - Modes 69
- Repetition interval 48
- Resampler
 - Data processing 17
- Resetting
 - RF input protection 21, 91
- Restoring
 - Channel settings 34
- Result displays
 - I/Q Vector 14
 - Magnitude 13
 - Marker table 16
 - Peak list 16

Real/Imag (I/Q)	15
Spectrum	14
Results	
Data format (remote)	85
I/Q Analyzer (remote)	82
Retrieving (remote)	82
RF attenuation	
Auto	41
Manual	41
RF input	
Overload protection	21
Overload protection (remote)	91
Remote	92
RF Power	
Trigger	47
Trigger level (remote)	104
RUN CONT	
Key	55
RUN SINGLE	
Key	55, 56
S	
Sample rate	
Definition	18
Displayed	12
I/Q Analyzer	18
I/Q data	50
Maximum	18
Relationship to bandwidth	19
Remote	116
Scaling	
Y-axis	43
Y-axis (remote control)	99
Search settings	
I/Q Analyzer	59
Sequencer	10
Aborting (remote)	77
Activating (remote)	77
Mode (remote)	78
Remote	76
Signal processing	
Diagram	18
Signal source	
Remote	92
Single sweep	
Softkey	55
Slope	
Trigger	49, 104
Softkeys	
Auto All	57
Auto Level	41, 58
Center	44
Continue Single Sweep	56
Continuous Sweep	55
Display Config	56
Export	35
External	46
Free Run	46
Frequency Config	44
I/Q Power	47
IF Power	47
Import	35
IQ Export	35
IQ Import	35
Lower Level Hysteresis	58
Meastime Auto	58
Meastime Manual	58
Noise cancellation	42
Power Sensor	48
Preamp	41
Ref Level	40
Ref Level Offset	40
RF Atten Auto	41
RF Atten Manual	41
RF Power	47
Single Sweep	55
Sweep count	55
Time	48
Trigger Config	45
Trigger Offset	48
Upper Level Hysteresis	58
Specifics for	
Configuration	34
Spectrum	
I/Q Analyzer	14
I/Q Evaluation method	14
SRate (hardware setting)	12
Status registers	
Querying (remote)	128
STAT:QUES:POW	91
Suffixes	
Common	69
Remote commands	65
Swap I/Q	
Remote	113
Swap IQ	51
Sweep	
Aborting	55, 56
Count	55
Performing (remote)	74
Points (I/Q Analyzer)	54
Settings	54
Time (remote)	81
T	
Time trigger	
Repetition interval	48
Softkey	48
TPIS	
I/Q data	116
Traces	
Retrieving (remote)	82
Trigger	
Configuration (softkey)	45
Drop-out time	49
External (remote)	105
Holdoff	49
Hysteresis	49
Offset	48
Output	38
Slope	49, 104
Trigger level	48
External trigger (remote)	103
I/Q Power (remote)	104
IF Power (remote)	104
RF Power (remote)	104
Trigger source	46
External	46
Free Run	46
I/Q Power	47
IF Power	47
Power Sensor	48

RF Power	47
Time	48
Troubleshooting	
Input overload	91

U

Units	
Reference level	40
Upper Level Hysteresis	58
Usable I/Q bandwidth	
Definition	18
User manuals	6
User ports	
Remote control	94
User sample rate	
Definition	18

W

Window functions	
Characteristics	25
FFT	25
Window title bar information	12
Windows	
Adding (remote)	121
Closing (remote)	123, 126
Configuring	34
Layout (remote)	123
Maximizing (remote)	121
Querying (remote)	122
Replacing (remote)	123
Splitting (remote)	121
Types (remote)	121

Y

Y-axis	
Scaling	43
Scaling (I/Q Vector)	43
YIG-preselector	
Activating/Deactivating	37
Activating/Deactivating (remote)	92