

ZVB battery replacement

When the CMOS-Bios battery gets empty, the booting sequence is interrupted. Pressing DEL enters in BIOS to set date and time.


Changing the CMOS battery is very easy. Don't remove the device cover, the CPU board is behind the front panel ! Provide a new **CR2032** Li coin battery.

Remove side handles (Torx-#20)




Remove the small cross screw in the middle of front panel. Then remove carefully the front panel.

With a Torx-#8 screwdriver, remove the two screws on the top and on the bottom. Remove each two screws at the two N ports.

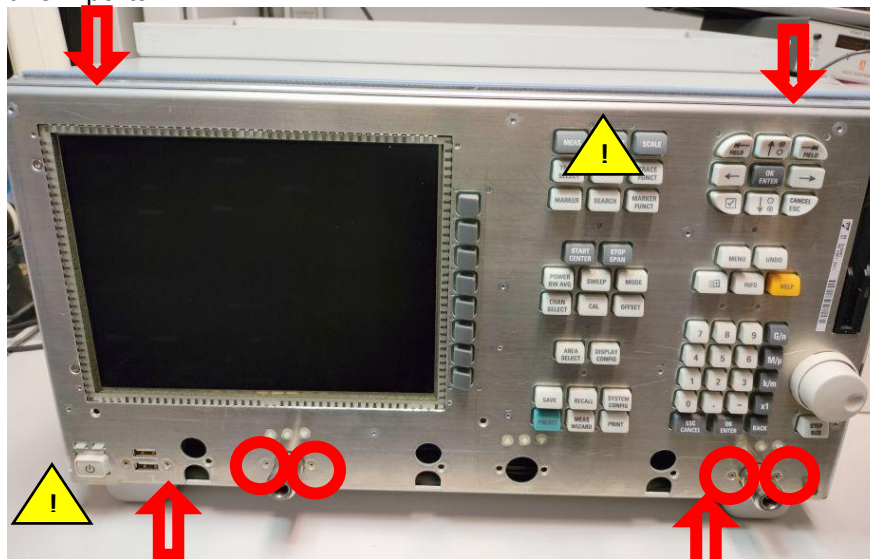

Pull carefully the front panel, first just release 1-2 cm to see the flex PCB behind and the power switch harness! Opening more the panel can access to the CMOS battery holder. Remove by pulling on the plastic beak. Insert the new battery.

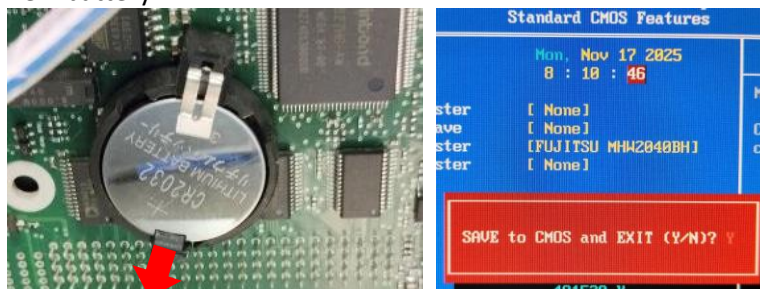

Process in reverse order to mount the panel.

At boot press many times DEL to access to BIOS setup. Select first menu "Standard CMOS Features". Set time and date, save and exit !