



4 Troubleshooting

4-1 No Power

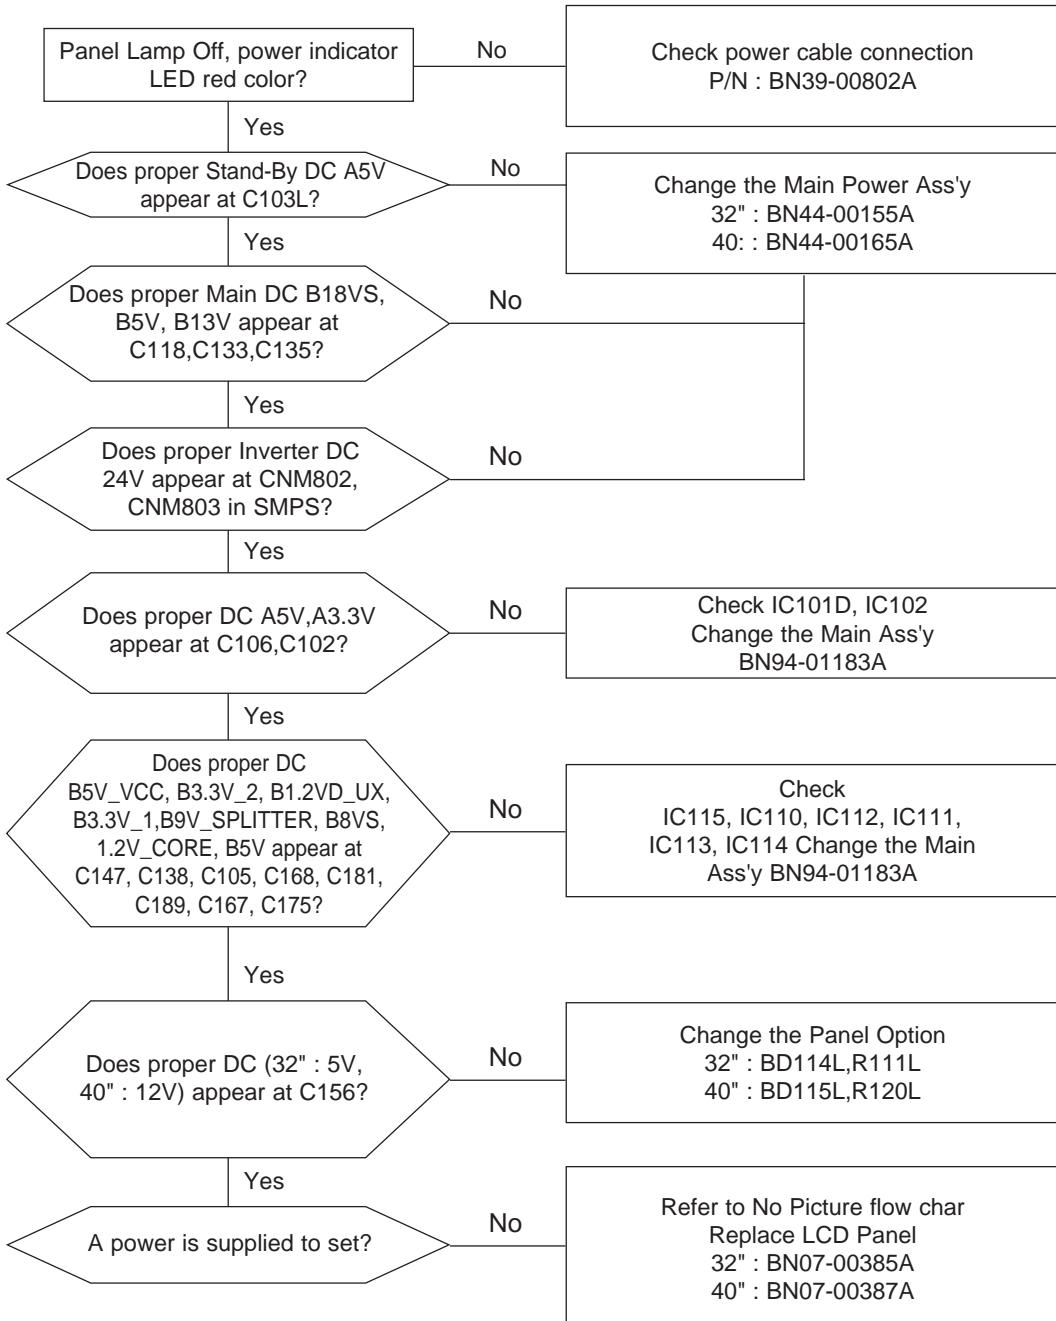


4-2 No Video (Analog PC Signal)

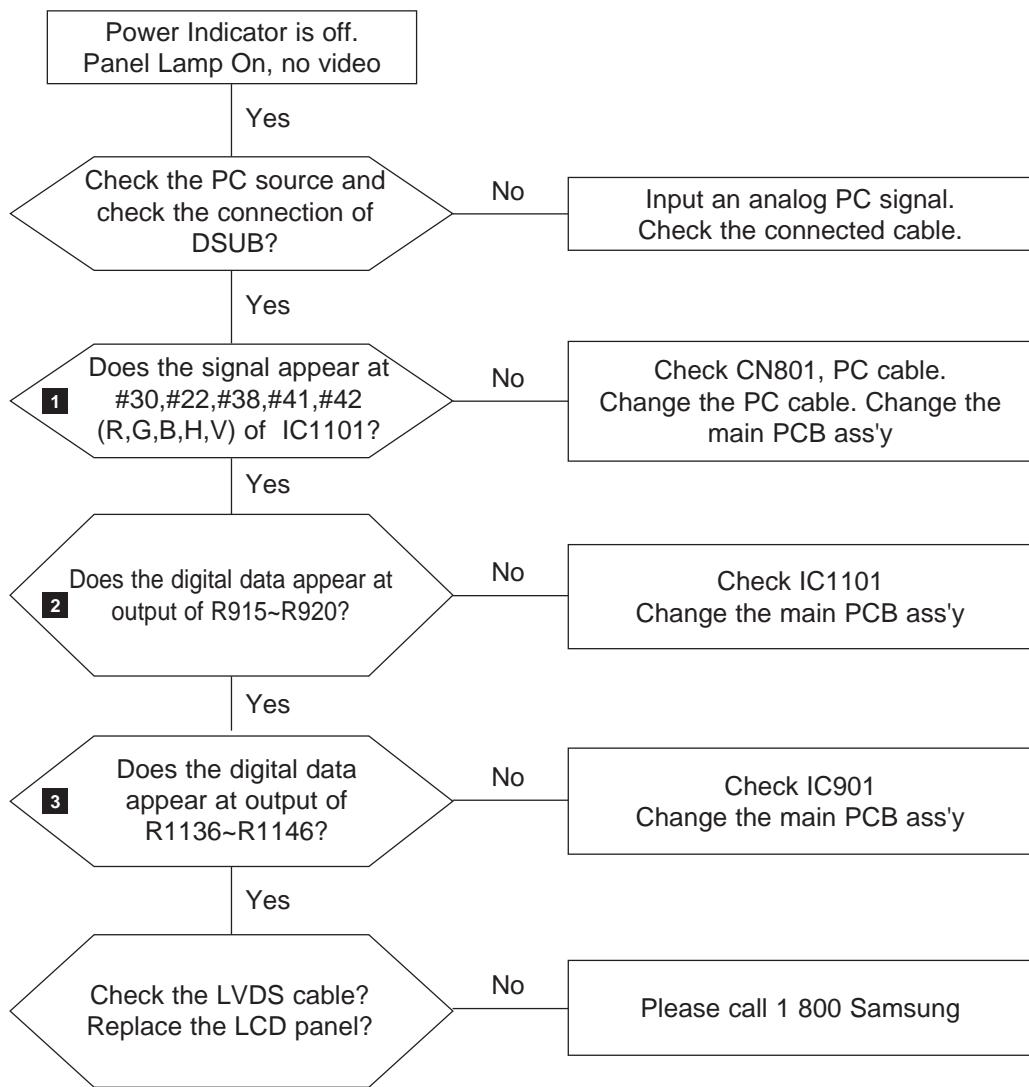


WAVEFORMS


1 2 PC Input (V-Sync, H-Sync)

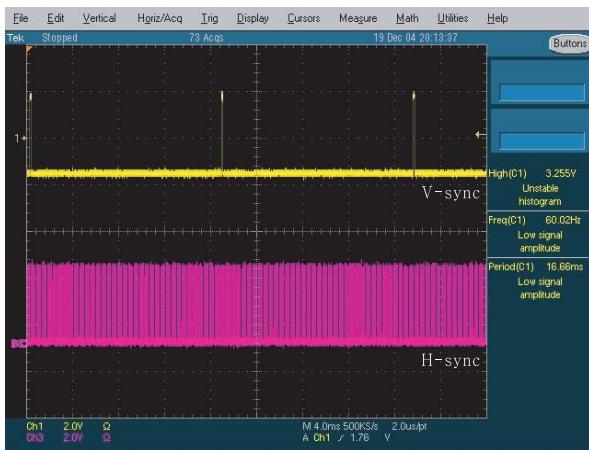

3 LVDS Out (CLK + / -)

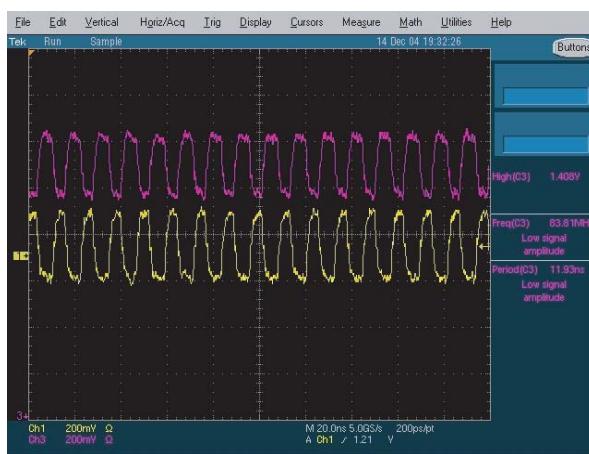


4-3 No Video (HDMI - Digital Signal)

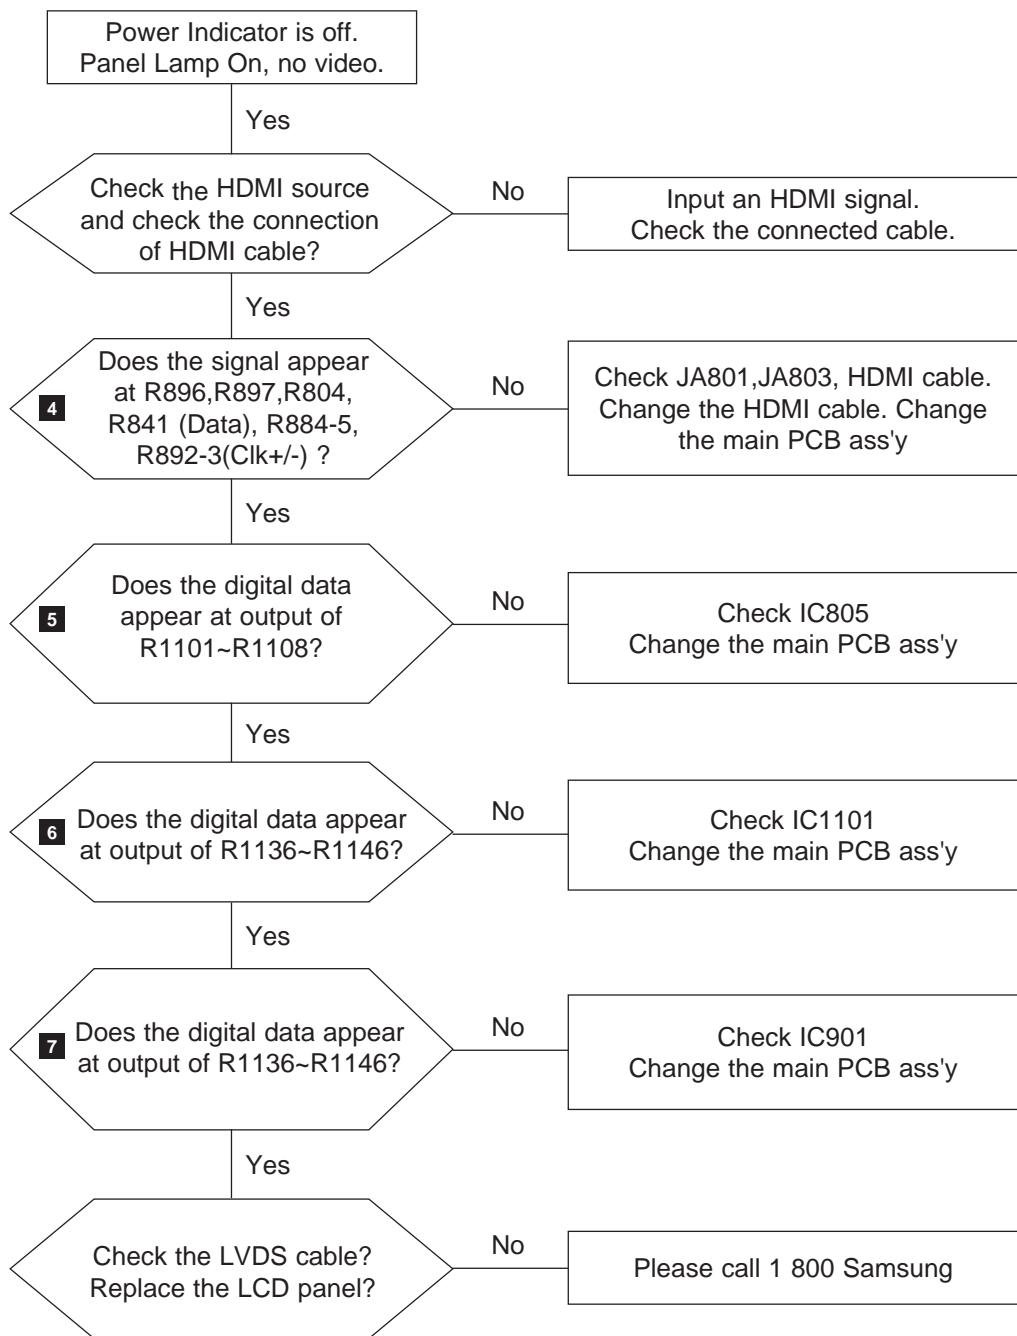


WAVEFORMS

4 | 5 HDMI Input (CLK + / -)

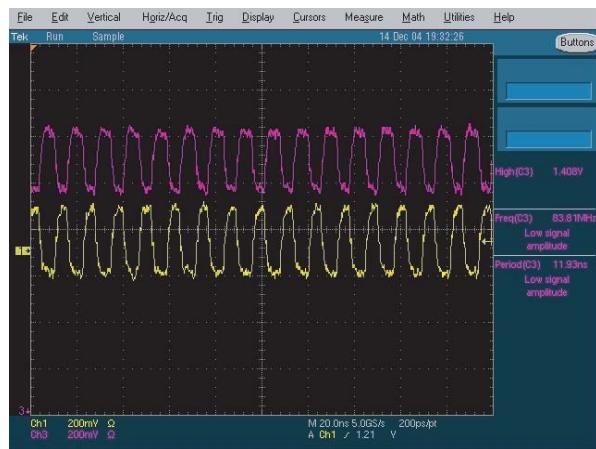


4-4 No Picture (Tuner_CVBS)

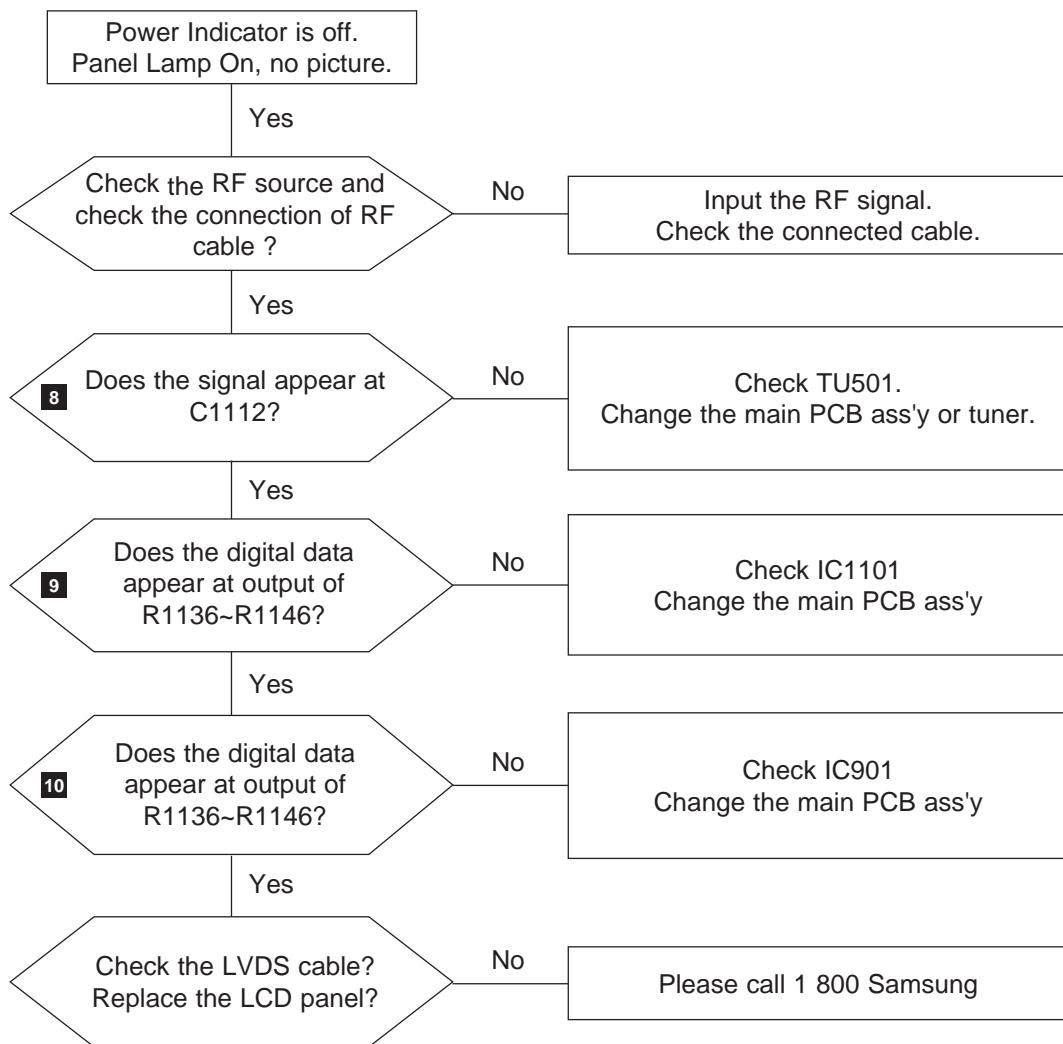


WAVEFORMS

6 Tuner CVBS Out (Pattern: Grey Bar)

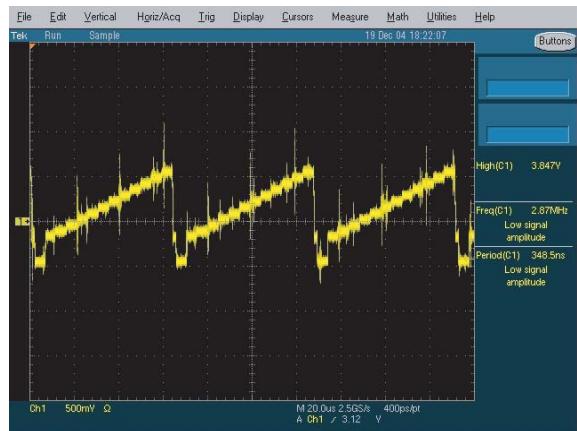


4-5 No Picture (Tuner DTV TS)

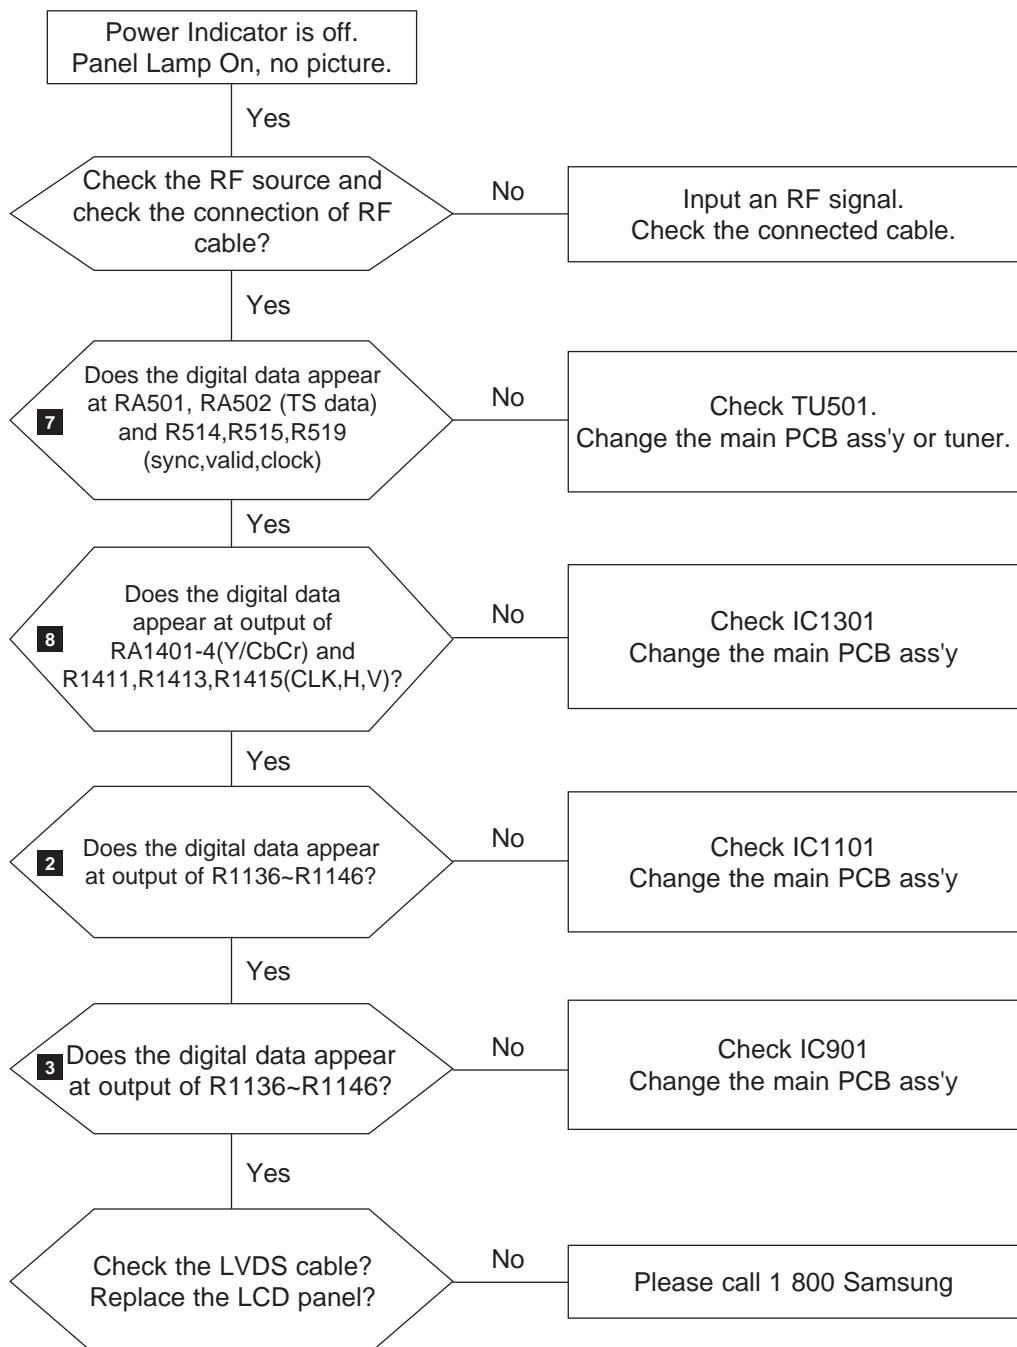


WAVEFORMS


7 TS DATA Out (Clk, Data [0])

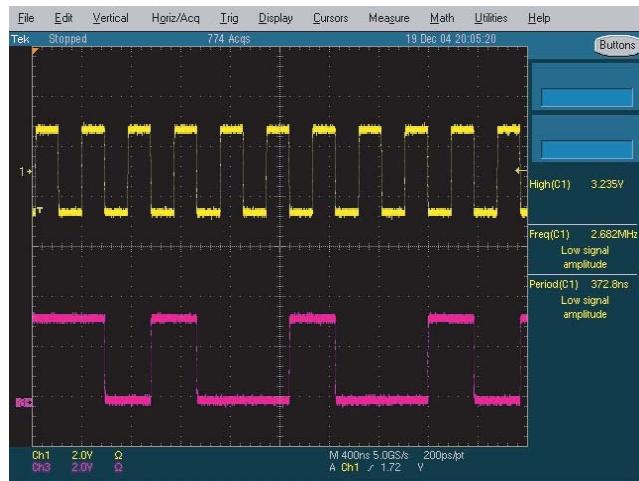


8 Eagle+ Out (Clk, H-Sync)

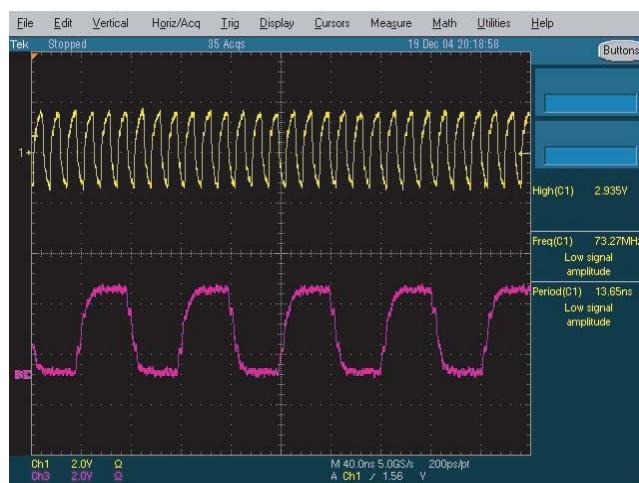

4-6 No Picture(Video CVBS)

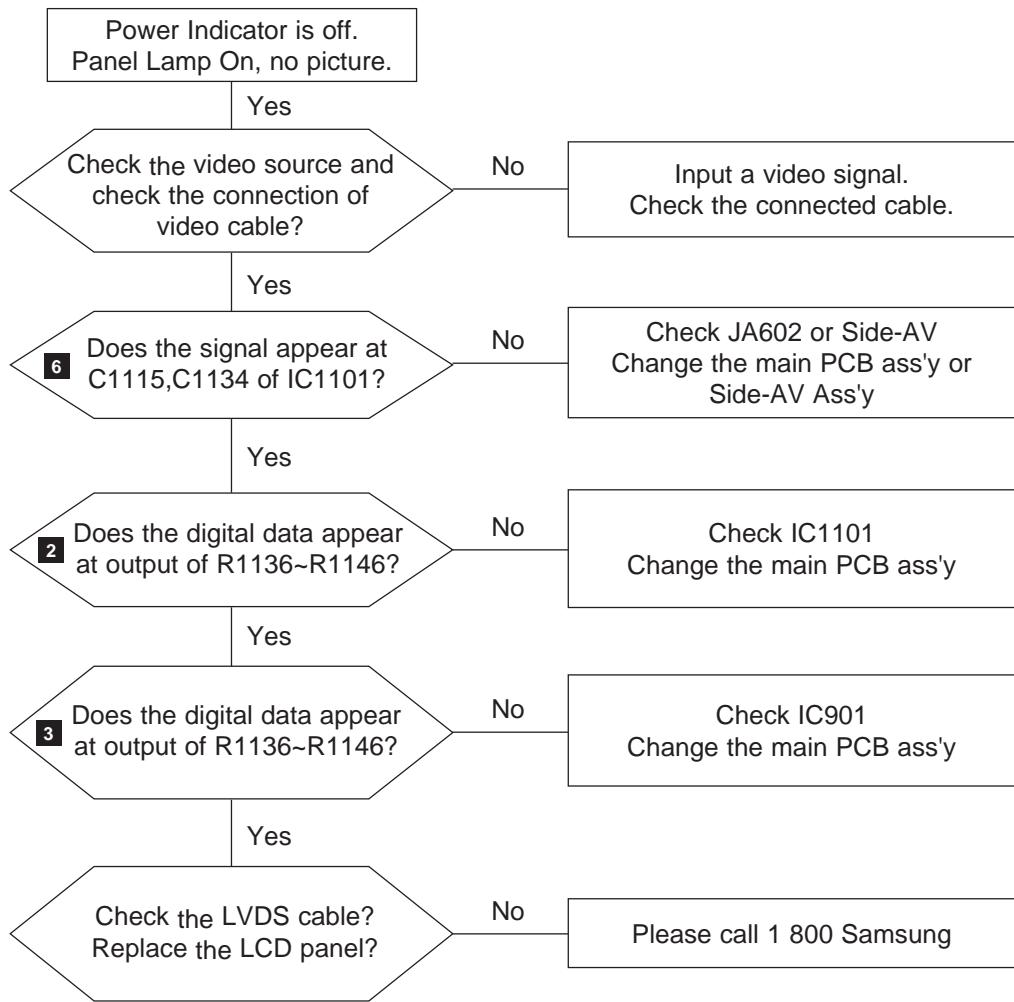

4-7 No Picture(S-Video Y/C)

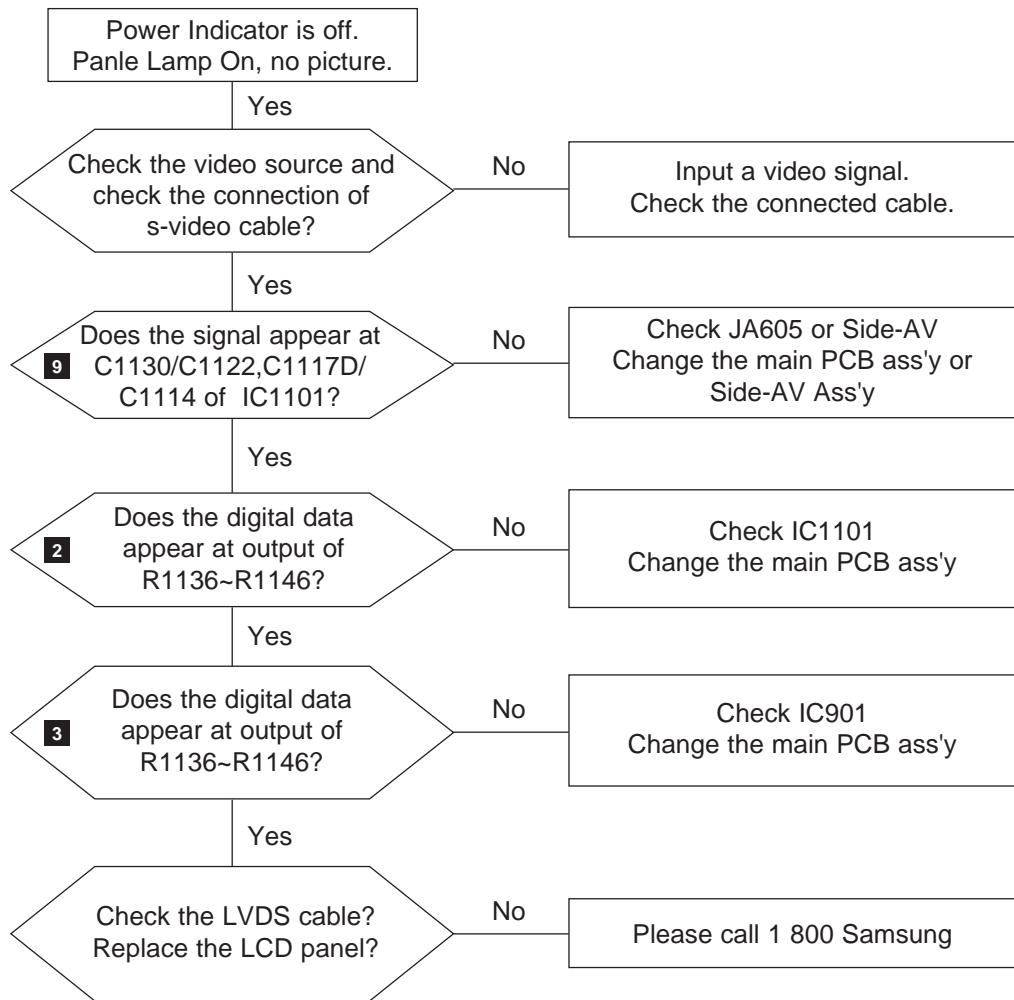


4 Troubleshooting

WAVEFORMS

9 S-VIDEO Input (Y/C)



4-8 No Picture(Component1, 2 : 480i, 480p, 720p, 1080i[Y, Pb, Pr])

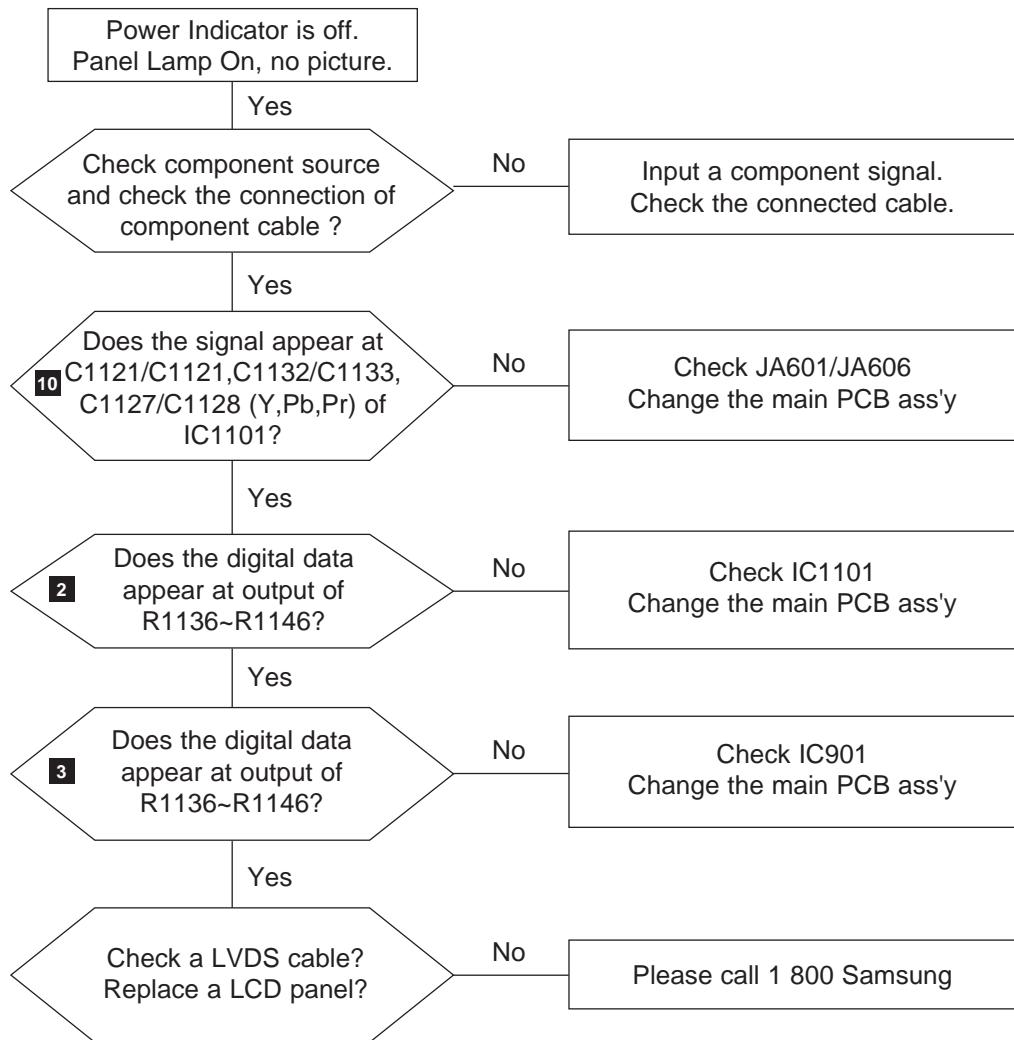


WAVEFORMS

10 Component Input (Y/Pb)




4-9 No Sound

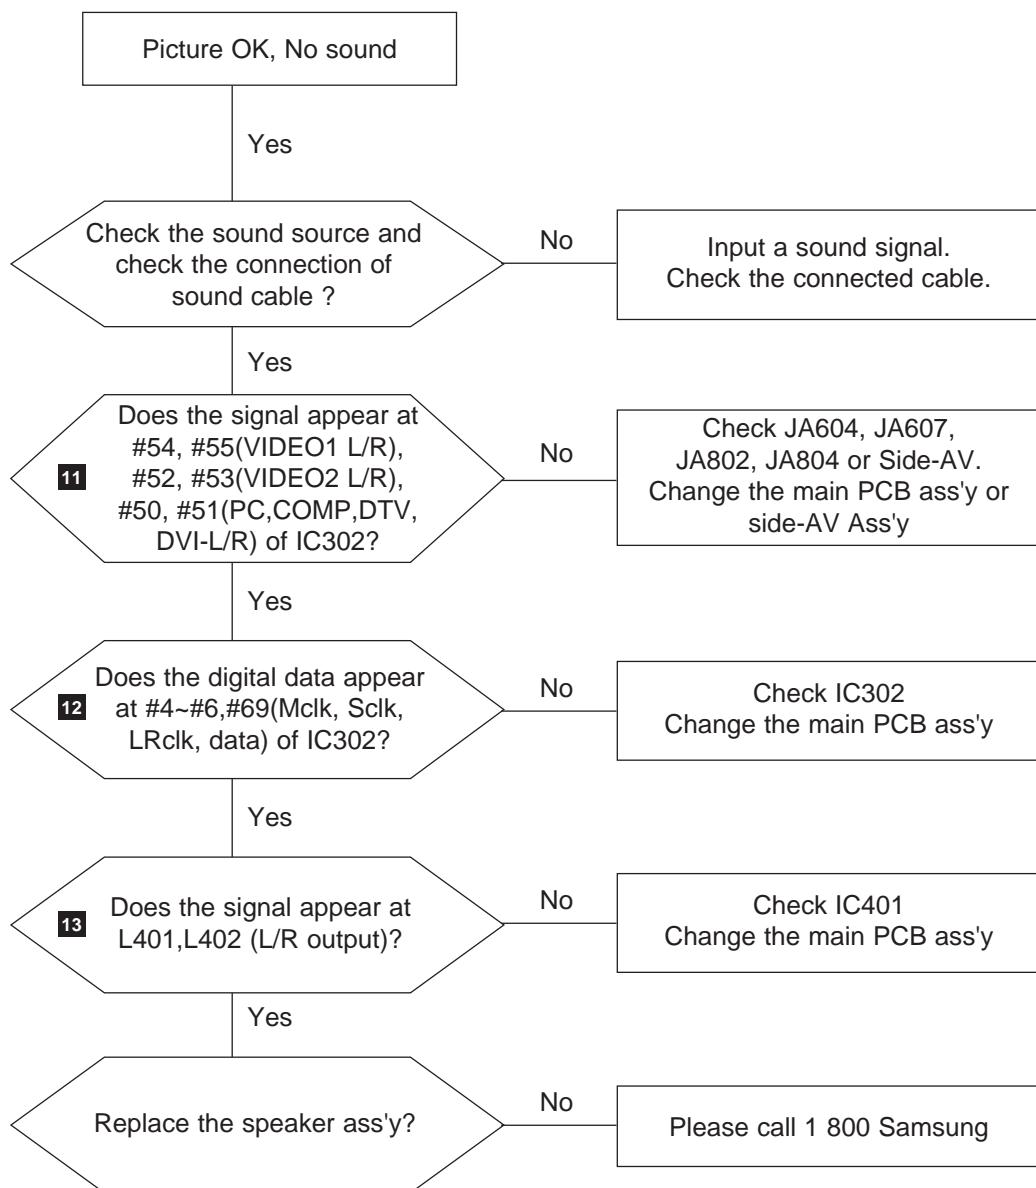

4 Troubleshooting

WAVEFORMS

11 Audio Input (Sign Wave)

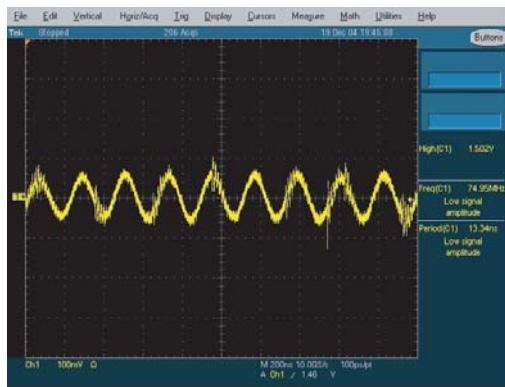

12 12S Input (Clk, Data)



13 Audio Amp Out (Sign Wave)

