


IR REMOTE CONTROL CIRCUIT DIAGRAM

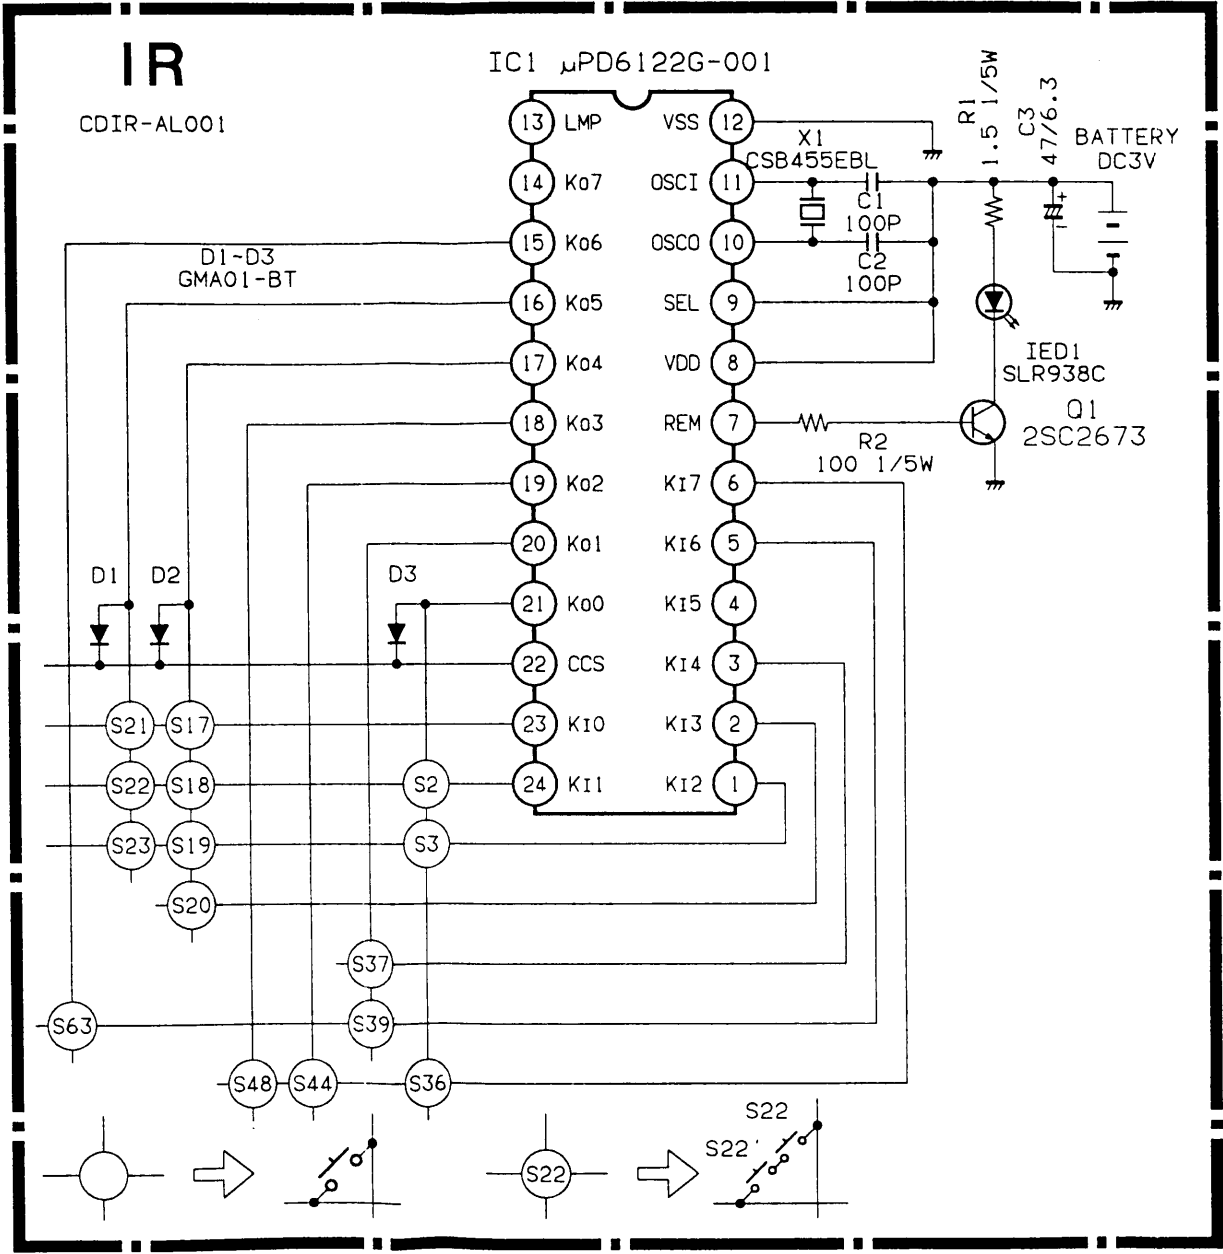

AVAILABLE KEY FUNCTION
OF REMOTE CONTROL UNIT

KEY NO	FUNCTION	
S2	→	USE
S3	←	USE
S17	⏻/■ STOP	USE
S18	⏸ PAUSE STILL	USE
S19	⏮ REW	USE
S20	FF ⏭	USE
S21	PLAY	USE
S22	● REC	USE
S23	REW-PLAY	USE
S36	MEMORY REPEAT	USE
S37	RESET	USE
S39	PROG	USE
S44	OK	USE
S48	VPS	
S63	SP/LP	