# PRIMETEST 250 PATBAG

The ultimate manual PAT testing kit



The PrimeTest 250 PATBag offers an all-in-one solution to those with a manual PAT testing regime and includes the new PrimeTest 250, a comprehensive handheld tester.

Inside this rugged and lightweight carry bag you'll find everything you need for your PAT testing, including a PrimeTest 250 tester capable of all electrical tests required by the IEE Code of Practice including 3 phase\* and RCD trip time.

## Each PATBag comprises:

- PrimeTest 250 The most comprehensive manual PAT tester on the market
- Rugged and lightweight PATBag carry case with compartments for all of your PAT accessories and labels
- PATGuard Elements manual data-entry software (optional)
- A Seaward PAT Business Builder A CD-rom and booklet resource pack for those running or starting up a PAT service business
- A full length PAT Training DVD with online exam and personalised certificate
- A Seaward Guide to Portable Appliance Testing
- A handy PAT reference look-up card with recommended test frequencies and limits
- PAT register and test record for keeping a record of results
- 500 pass labels
- 500 fail labels
- A quick start video guide to your PrimeTest 50 PAT tester
- 110V adaptor

### **PATGuard Elements**

The PrimeTest 250 PATBag can optionally include PATGuard Elements, a manual data-entry software program made for ease and speed of use. PATGuard Elements enables you to maintain a full test history for each appliance you test and has the option to print professional reports and invoices if required.

\* Seaward 3 Phase leakage adaptor required

# **Key Features**

- Includes the most comprehensive manual tester on the market
- Everything required for a manual PAT testing regime
- Lightweight and functional carry bag
- PATGuard Elements PAT software option
- Array of useful reference materials
- Video quick start guide
- PAT testing training DVD with online exam and personalised certificate

## Ideal Users

- Hotels & Leisure
- Service
- Maintenance
- Electrical Contractors
- Facility Managers



Bracken Hill,
South West Industrial Estate,
Peterlee, SR8 2SW
Tel: +44 (0) 191 5863511

**Fax:** +44 (0) 191 5860227



Web: www.seaward.co.uk Email: sales@seaward.co.uk

## PRIMETEST 250 PATBAG

## **PrimeTest 250 Specification**

#### Earth continuity

200mA minimum into  $2\Omega$ Output Current: Test Voltage (o/c): 9V DC nominal

Test Duration (Class I Test): 2s nominal 0.01 ohm to 19.99 ohm Display Range

Pass Value (Class I Test): 0.2Ω

#### Insulation resistance

Test Voltage: Test Duration (Class I or II):

Display Range: 0.01 Mohm to 19.99 Mohm

Pass Value: 1.0 MΩ Class I

2.0 MΩ Class II

250/500VDC @1mA nominal, < 2mA (s/c)

#### Equivalent leakage

40V Nominal AC 50Hz Open Circuit Test Voltage:

Test Duration: 2s – 30s nominal Display Range: 0.1 mA to 19.99mA Pass Value: 0.75mA CLI / 0.25mA CL II

#### IEC lead test

Test voltage: 5V DC nominal Test Duration:

Time for test (2s max)
Live / Neutral Checks for o/c, s/c and crossed Test:

#### **Protective Conductor Current**

Test Voltage: Supply Voltage, max current 13A

Test Duration: 30s maximum 0.15 mA to 9.99 mA Display Range:

0.75mA/3.5mA (user selectable with 0.75mA as default) Pass Value:

#### Touch current

Supply Voltage, max current 13A Test Voltage:

Test Duration: 30s maximum Display Range: 0.10 mA to 5.00 mA

Pass Value:

## 3 phase leakage current \*Requires 3 phase adaptor accessory

Test Voltage: 3 phase supply voltage Test Duration: Continuous measurement Display Range: 0.10 mA to 9.99 mA

Pass Value: 3.5mA

## RCD trip time

Test Voltage: Mains supply voltage Test Current: 30mA rms sinusoidal

Test Current Phase: 0°/180° auto switched on alternate tests

0ms - 500ms Measuring Range: Pass Value: 200ms

## Power socket check

Input voltage range: Indicates configuration of voltage potential:-

225 - 254V AC max current 13A UK

Line potential phase to earth Line potential phase to neutral Line potential neutral to earth

## **PATGuard Elements System Requirements**

■ IBM Compatible PC

Processor Speed 500Mhz or higher
 Microsoft Windows XP/VISTA/Windows 7

■ 32 & 64 bit operating systems

■ 512Mb RAM

■ 50Mb available hard disk space

Colour monitor with 32 bit colour or greater video card

CD ROM drive

## Optional Accessories

- PATGuard Elements (387A910)
- NTB-1 RCD Isolator (372A953)
- 3 Phase Leakage and earth continuity adaptor (391A910)
- Rhinotags Ultra durable PAT testing pass labels (91B309)
- Rechargeable batteries + charger (339A950)
- PAT Checkbox (227A910)
- PowerCheck 1557 (369A910)

## Also Available

- PrimeTest 50 PATBag (345A929)
- PrimeTest 50 PATBag with PATGuard Elements (345A930)
- PrimeTest 100 PATBag (345A925)
- PrimeTest 100 PATBag with PATGuard Elements (345A926)

PrimeTest 250 PATBag Part No: 345A927

PrimeTest 250 PATBag with PATGuard Elements Part No: 345A928



Web: www.seaward.co.uk Email: sales@seaward.co.uk

Seaward Bracken Hill,

South West Industrial Estate,

Peterlee, SR8 2SW

**Tel:** +44 (0) 191 5863511 Fax: +44 (0) 191 5860227