



③① Deck 1 cassette holder open button (▲ OPEN)

③② Deck 1

③③ Fast forward/rewind, TPS buttons (◀◀, ▶▶)

③④ Deck 2

③⑤ Deck 2 cassette holder open button (▲ OPEN)

③⑥ Counter reset, display buttons
(COUNTER, RESET, DISPLAY)

③⑦ Deck 1/deck 2 select button (DECK 1/2)

③⑧ Playback buttons and indicators (◁, ▷)

The color of the indicators depends on the operation taking place.

If stopped, fast forwarding or rewinding: orange

If playing or recording: green

While carrying out TPS or recording is on standby: flashes

③⑨ Stop button (■)

④① Dolby noise reduction button (DOLBY NR)

④② Reverse mode button (REV MODE)

④③ Tape edit button (TAPE EDIT)

④④ Record pause button (● REC PAUSE)