



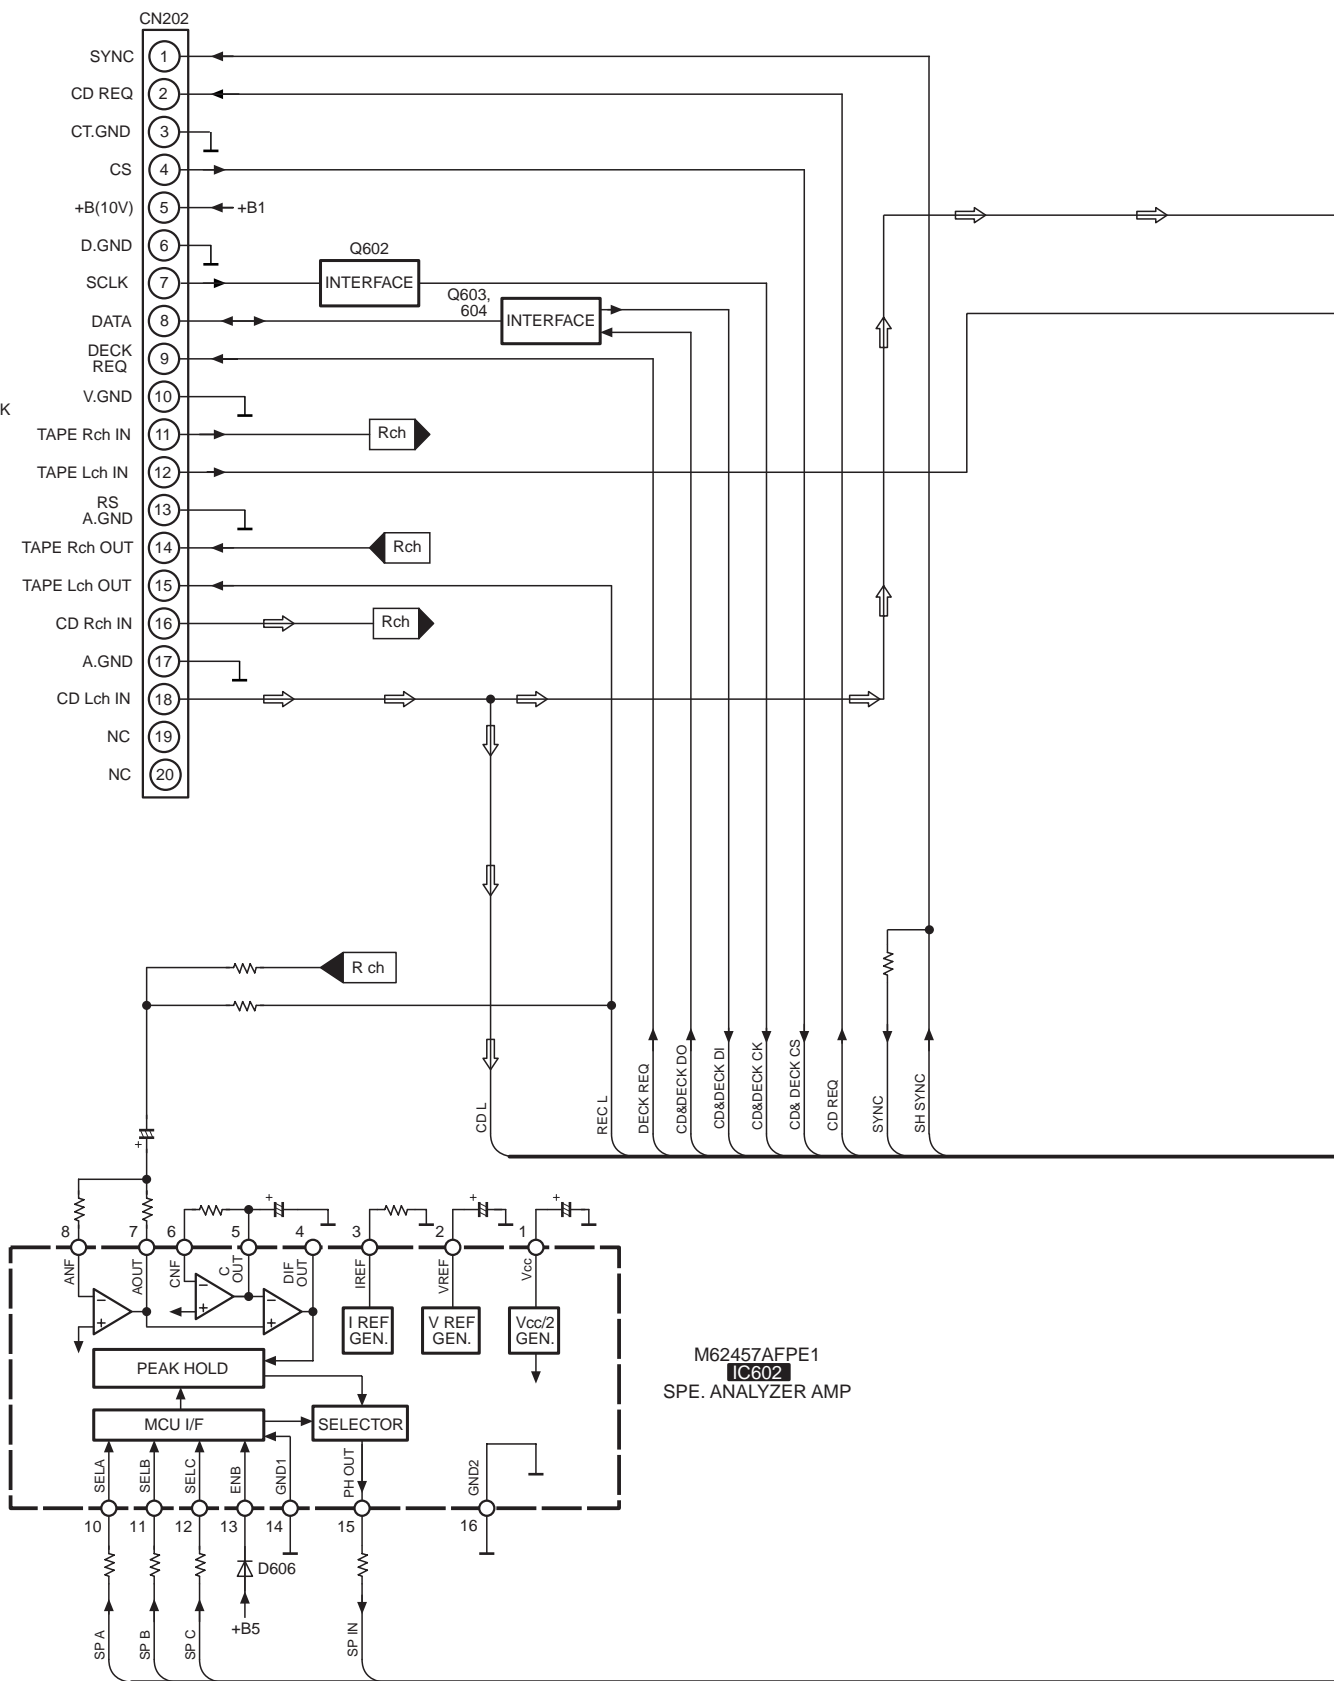


To CD PLAYER
(SL-EH570)
& CASSETTE DECK
(RS-DV250)
BLOCK DIAGRAM

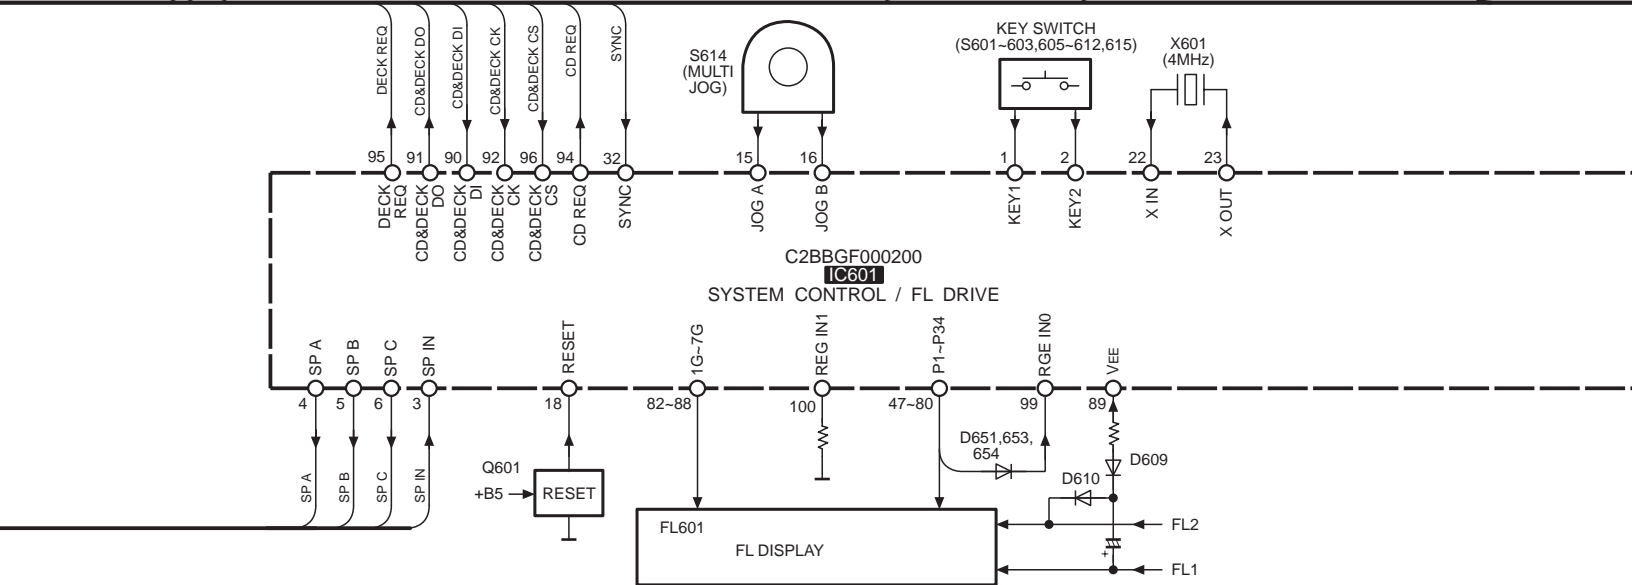

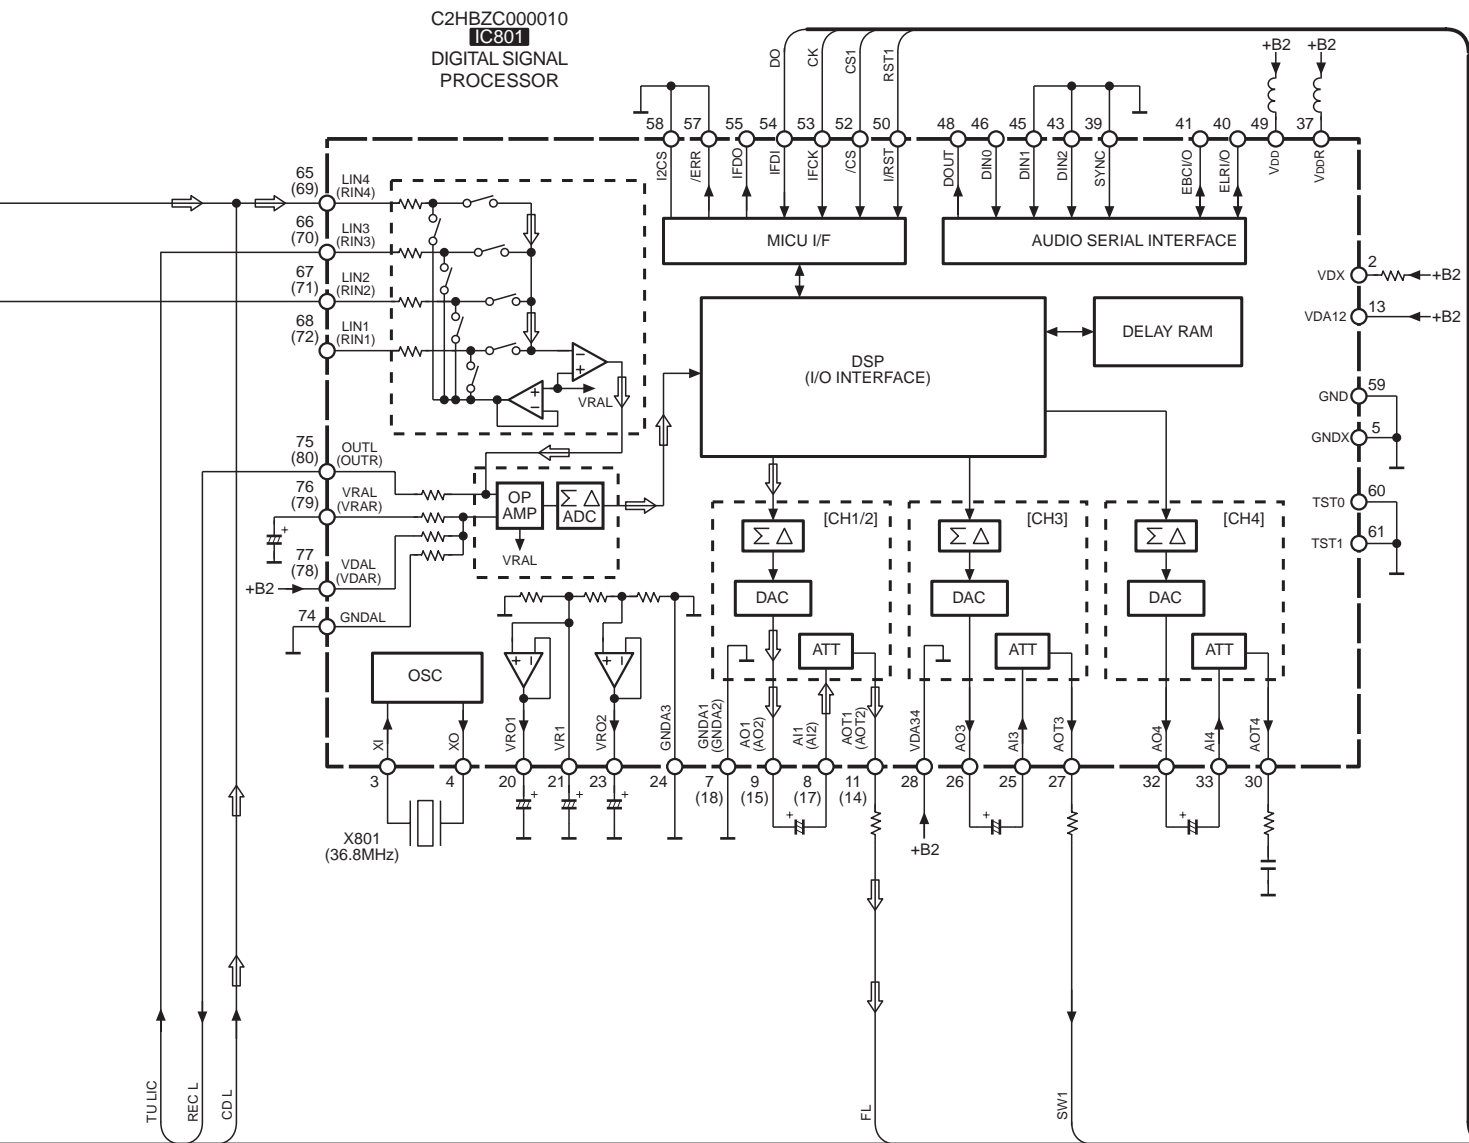

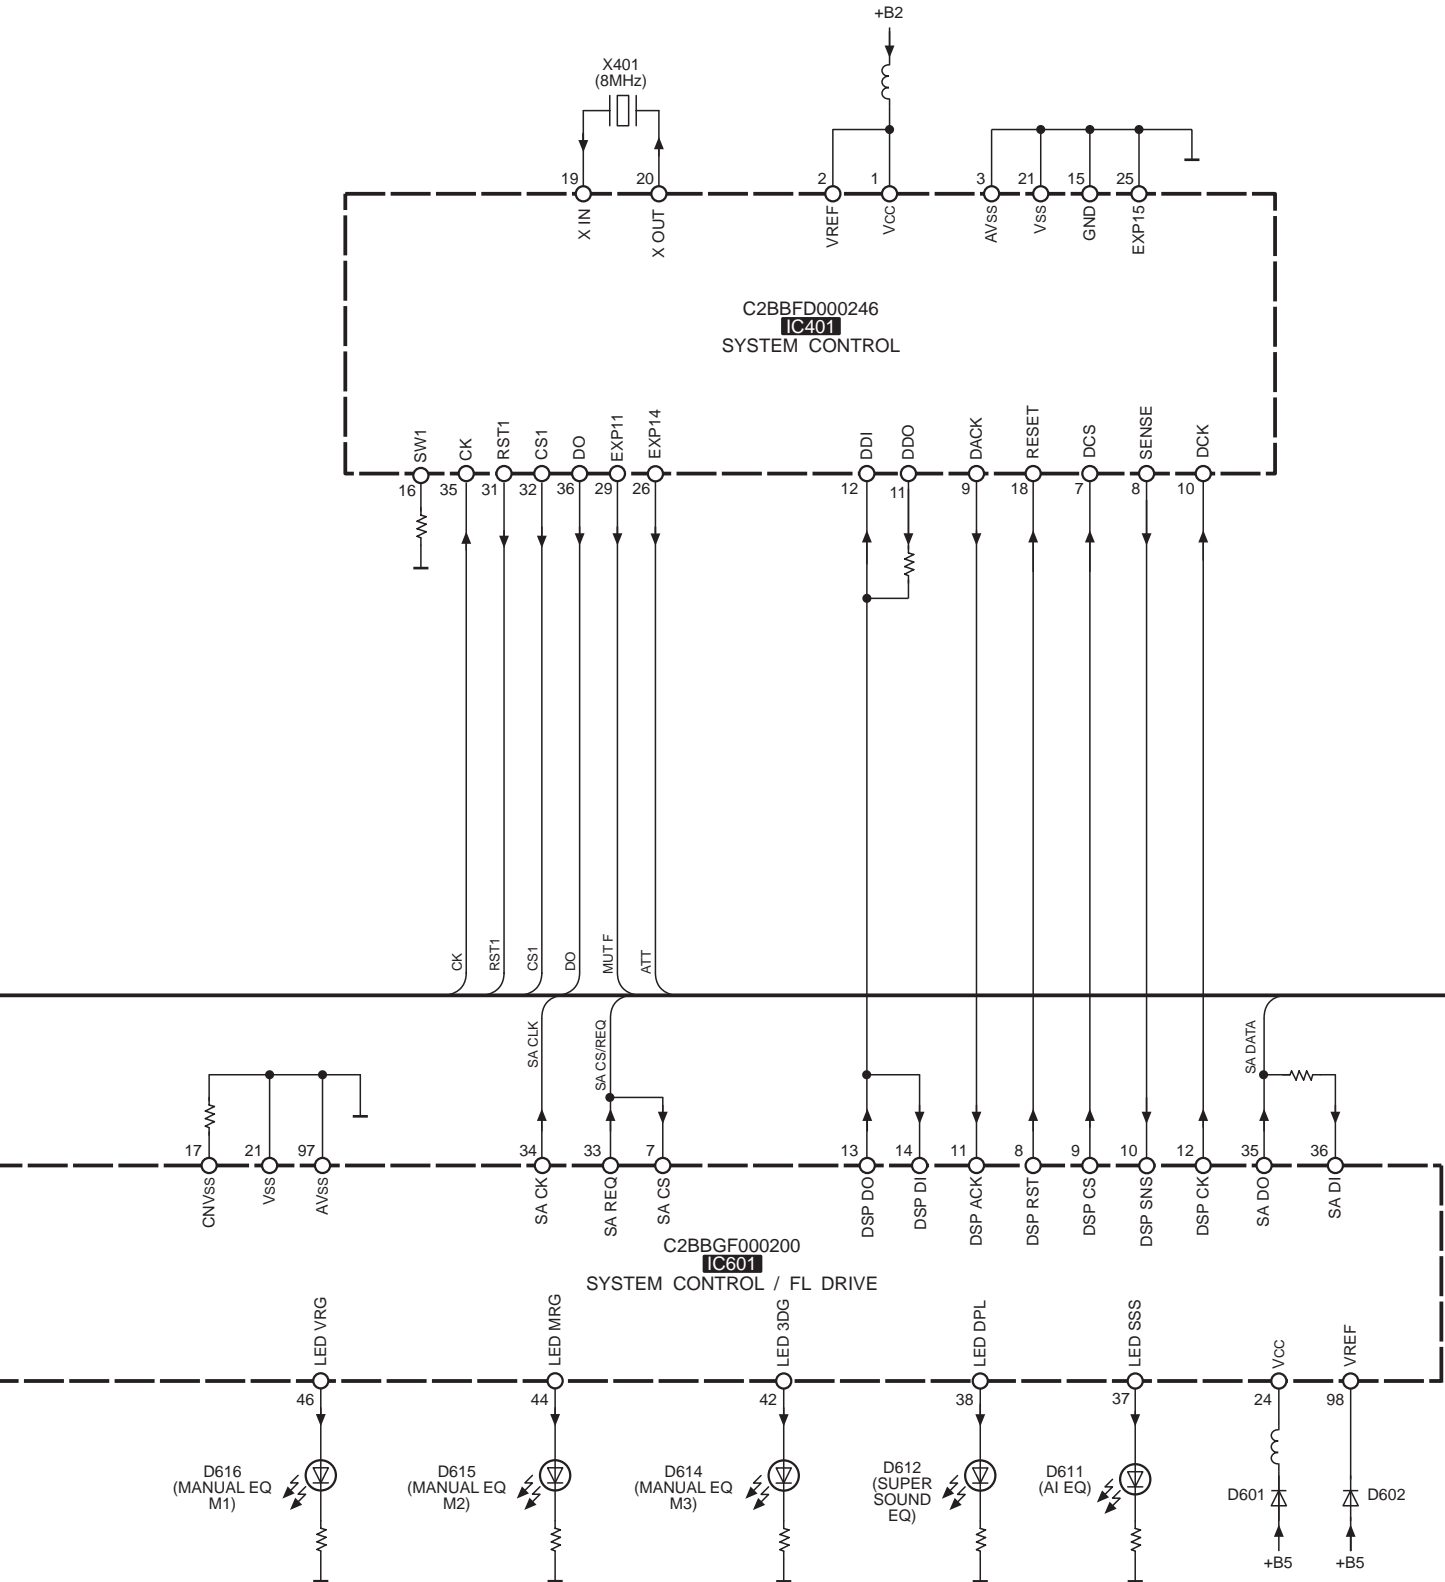

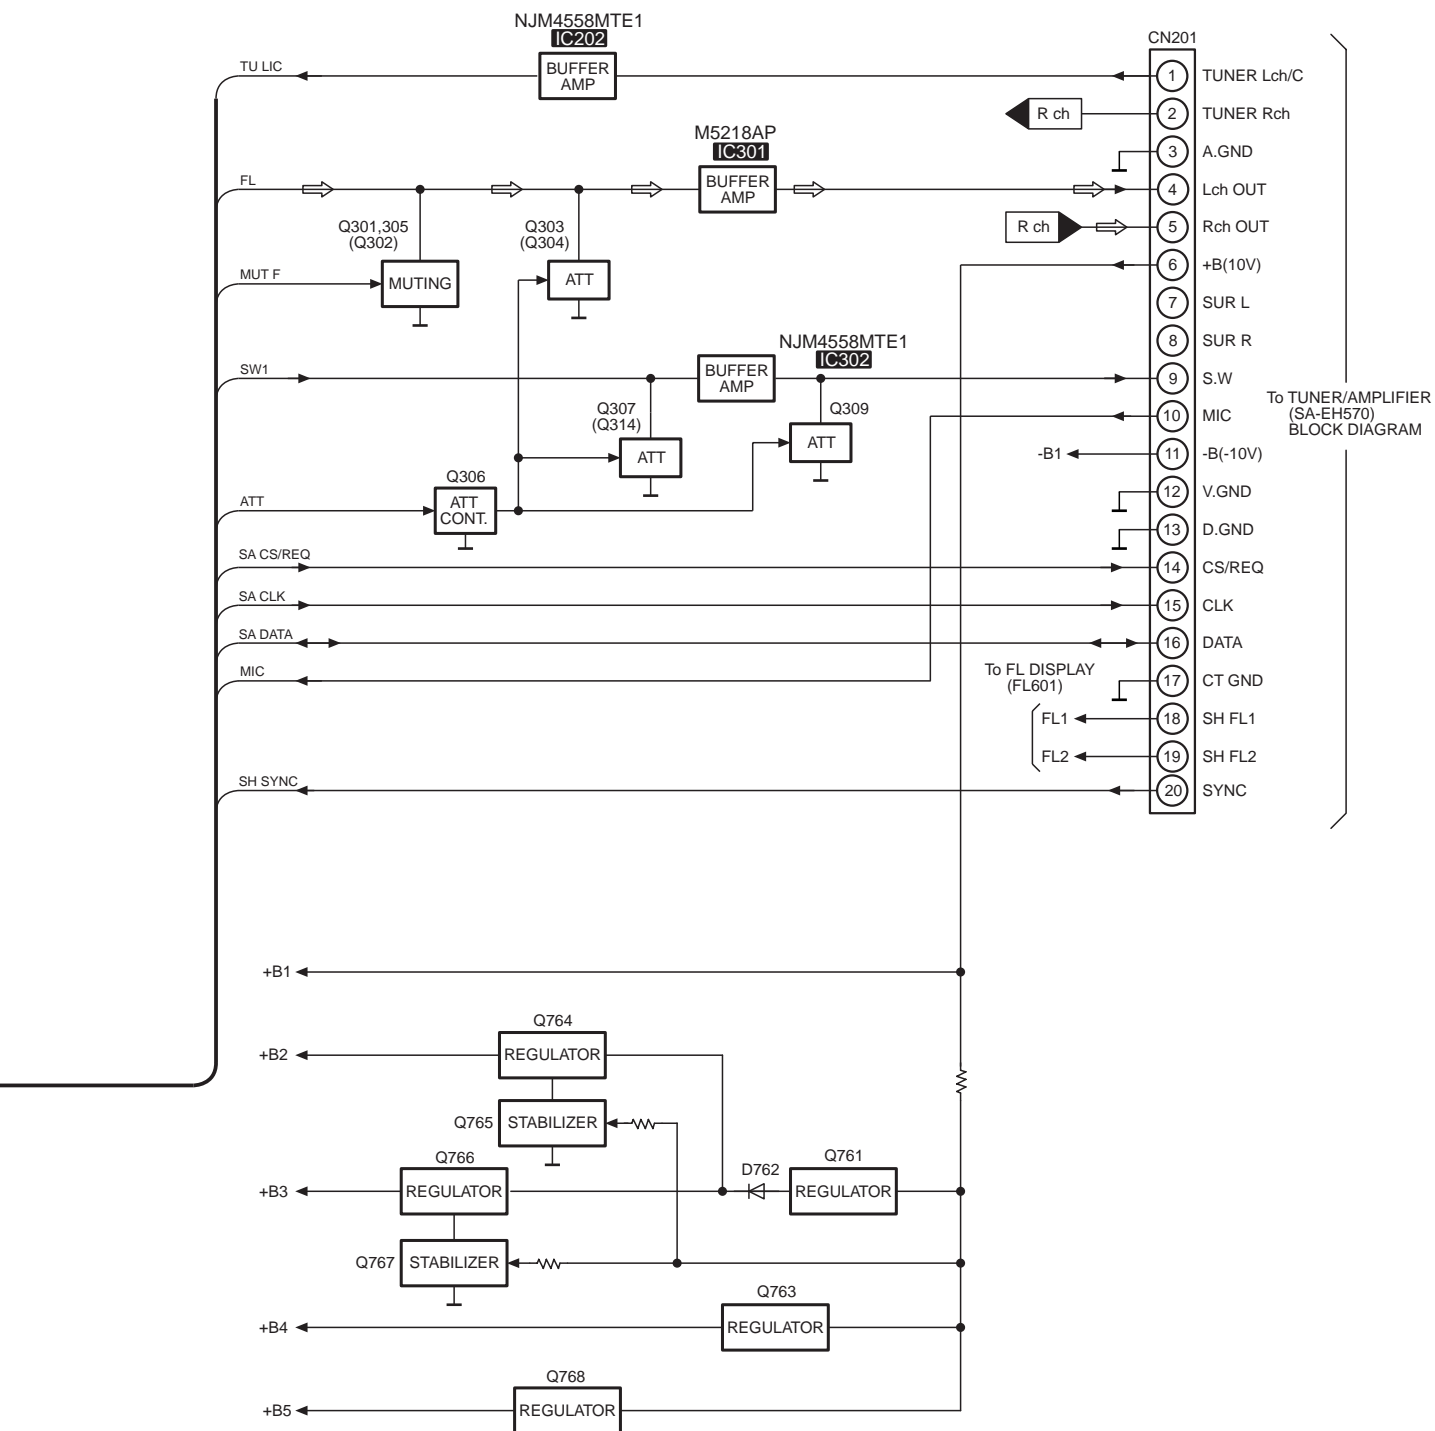

NOTES • \Rightarrow : CD PLAYBACK SIGNAL LINE
• () indicates pin No. Right channel.