

A B C D E F

1

A FL P.C.B.

2

3


4

5

6

7

8

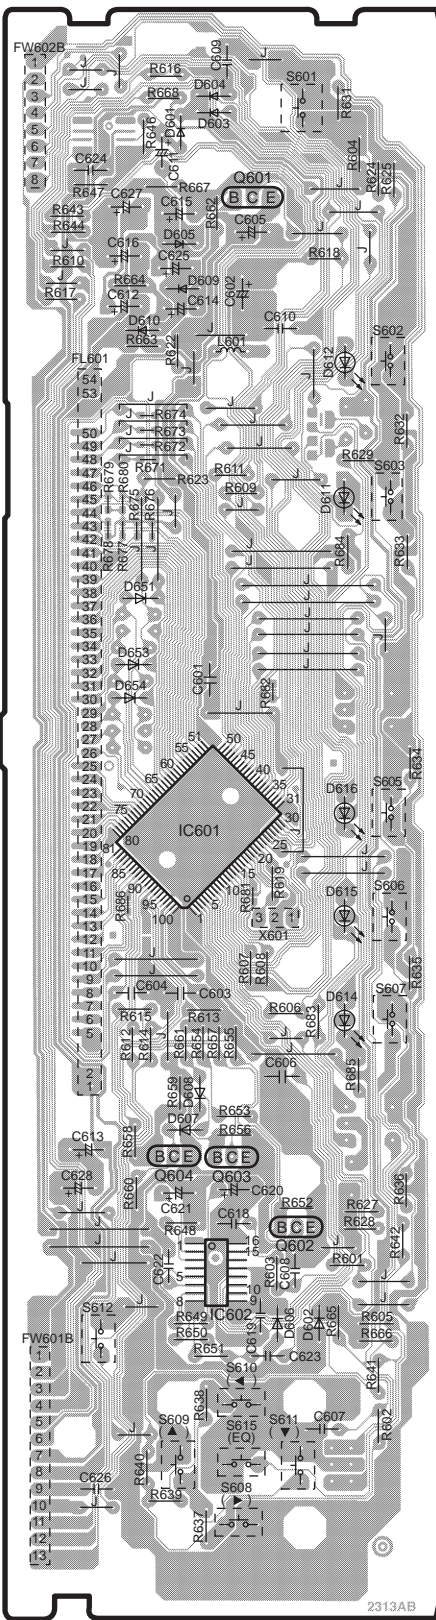

DISPLAY
MODE

SUPER
SOUND EQ

AI EQ

M1

M2

M3

MANUAL EQ

FLAT

B MAIN P.C.B.

AUX(DVD)

To CD PLAYER & CASSETTE DECK

To TUNER/AMPLIFIER

