



TEGAM's Phase Sequence Indicators show installers and servicemen the correct way to make three-phase connections and prevent costly damage.

Working where power is on, TEGAM's Phase Sequence Indicators instantly and clearly identify A/B/C circuits. There's no more guesswork, no more damage to motors, machinery, switchgear or accessories. TEGAM indicators have both an ABC lamp and a BAC lamp. Just connect the Red/White/Blue test leads to the three phase circuit. When correctly connected, the ABC lamp glows. A reversed sequence lights the BAC lamp. An open phase lights both lamps at 200 volts. It's that easy, that fast.

TEGAM's Motor Rotation Indicator prevents costly motor damage by showing rotation direction before connections are made.

TEGAM's Motor Rotation Indicator (MR-1) eliminates guessing and the unsafe, damaging practice of "bumping" to determine which way a three-phase motor shaft rotates. Just connect the Motor Rotation Indicator's Red/White/Blue (ABC) test clips to the motor and turn the shaft in the direction you want it to rotate. Push the test button and the ABC or BAC light comes on, showing the correct way to connect the motor to the power source.

- Saves time; no need to disconnect drive shaft couplings
- Eliminates guesswork; protects user and equipment
- Identifies open windings
- Reliable, solid state components
- Test clips open 1/2" to fit most terminals
- Shirt-pocket size
- One-year warranty

SPECIFICATIONS AND ORDERING INFORMATION

MODEL: T-470	RANGE: 115 TO 700V, 400Hz
T-471	115 to 700V, 50/60Hz
MR-1	9V Maximum
DIMENSIONS:	(All PSIs) 1.25" x 1.50" x 2". Net weight 4 oz.
MR-1	2.125" x 3.25" x 1.125". Net weight 4 oz.
LEADS:	24" leads with 1/2" heavy duty test clips
ACCESSORIES SUPPLIED:	Instructions
ACCESSORIES AVAILABLE:	8668 vinyl carrying case

TEN TEGAM WAY • GENEVA, OHIO 44041

PHONE 440-466-6100 • FAX 440-466-6110

www.tegam.com • e-mail sales@tegam.com

Call 1-800-666-1010 for application assistance.