

**DPO4000 Series
Digital Phosphor Oscilloscopes
Programmer Manual**

Copyright © Tektronix. All rights reserved. Licensed software products are owned by Tektronix or its subsidiaries or suppliers, and are protected by national copyright laws and international treaty provisions.

Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supersedes that in all previously published material. Specifications and price change privileges reserved.

TEKTRONIX and TEK are registered trademarks of Tektronix, Inc.

Contacting Tektronix

Tektronix, Inc.
14200 SW Karl Braun Drive
P.O. Box 500
Beaverton, OR 97077
USA

For product information, sales, service, and technical support:

- In North America, call 1-800-833-9200.
- Worldwide, visit www.tektronix.com to find contacts in your area.

Table of Contents

Getting Started	1-1
Setting Up Remote Communications	1-1
Command Syntax	2-1
Command and Query Structure	2-1
Clearing the Instrument	2-3
Command Entry	2-4
Constructed Mnemonics	2-6
Argument Types	2-7
Command Groups	2-11
Acquisition Command Group	2-11
Alias Command Group	2-11
Bus Command Group	2-12
Calibration and Diagnostic Command Group	2-13
Cursor Command Group	2-14
Display Command Group	2-15
Ethernet Command Group	2-16
File System Command Group	2-17
Hard Copy Command Group	2-18
Horizontal Command Group	2-18
Mark Command Group	2-19
Math Command Group	2-20
Measurement Command Group	2-21
Miscellaneous Command Group	2-24
Save and Recall Command Group	2-26
Search Command Group	2-27
Status and Error Command Group	2-30
Trigger Command Group	2-31
Vertical Command Group	2-36
Waveform Transfer Command Group	2-39
Zoom Command Group	2-44
Commands Listed in Alphabetical Order	2-47
Status and Events	3-1
Registers	3-1
Queues	3-4
Event Handling Sequence	3-5
Synchronization Methods	3-7
Appendix A: Character Set	A-1
Index	

 
Getting Started

This manual explains the use of commands for remotely controlling your instrument. With this information, you can write computer programs to perform functions such as setting the front-panel controls, taking measurements, performing statistical calculations, and exporting data for use in other programs.

Setting Up Remote Communications

You can remotely communicate between your oscilloscope and PC via the Ethernet, USB, and, GPIB (with the TEK-USB-488 Adapter).

Ethernet If you are using Ethernet, start by connecting an appropriate Ethernet cable to the Ethernet port (RJ-45 connector) on the rear panel of your oscilloscope. This connects the oscilloscope to a 10/100 Base-T local area network.

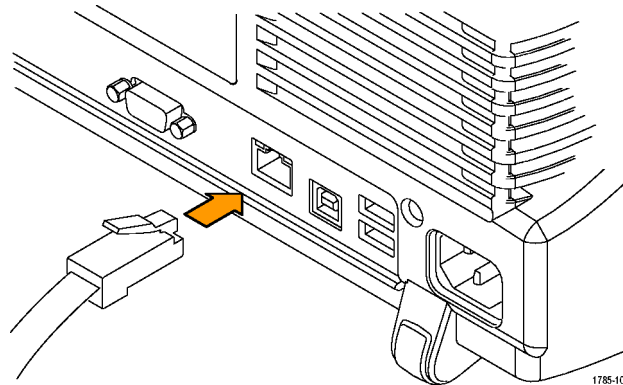


To change the Ethernet settings on your oscilloscope, do the following:

1. Push **Utility**.
2. Push **System** repeatedly to select **I/O**.
3. Push **Ethernet Network Settings**.

On the side-bezel menu, if you are on a DHCP Ethernet network and using a through cable, set DHCP to **On**. If you are using a cross-over cable, set it to **Off** and set a hard coded TCP/IP address.

 USB If you are using USB, start by connecting an appropriate USB cable to the USB 2.0 high speed device port on the rear panel of your oscilloscope.

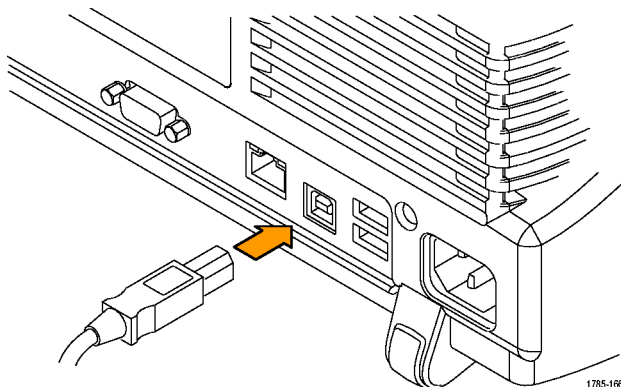

With USB, the system automatically sets itself up for you. To check if USB is enabled:

1. Push **Utility**.
2. Push **System** repeatedly to select **I/O**.
3. Check **USB** on the bottom-bezel menu to be sure that USB is enabled. If it is not enabled, push **USB**. Then push **Enabled** on the side-bezel menu.

After connection, the host will list the oscilloscope as a USB device with these parameters. (See Table 1-1.)

Table 1-1: USB Device Parameters

Parameter	Value
Manufacturer ID	0x0699 (decimal 1689)
Product ID	0x0401 (decimal 1025)
Serial number	Serial number
Manufacturer description	"Tektronix"
Interface description	"USBTMC-USB488"

 
GPIB To use GPIB, start by connecting an appropriate USB cable to the USB 2.0 high speed device port on the rear panel of your oscilloscope. Connect the other end to the TEK-USB-488 Adapter host port. Then connect a GPIB cable from the TEK-USB-488 Adapter to your PC.

Supply power to the Adapter in either of these two ways:

1. Use the optional 5 V_{DC} power adapter connected to the 5 V_{DC} power input on the Adapter.
2. Use an appropriate USB cable connected to a powered USB host port on your PC and the Device port on the TEK-USB-488 Adapter.

The oscilloscope has a USB 2.0 High speed device port to control the oscilloscope through USBTMC or GPIB with a TEK-USB-488 Adapter. The USBTMC

protocol allows USB devices to communication using IEEE488 style messages. This lets you run your GPIB software applications on USB hardware.

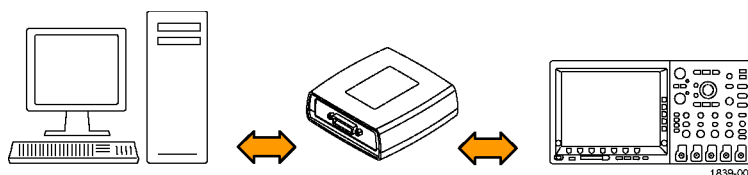

Before setting up the instrument for remote communication using the electronic (physical) GPIB interface, you should familiarize yourself with the following GPIB requirements:

- A unique device address must be assigned to each device on the bus. No two devices can share the same device address.
- No more than 15 devices can be connected to any one line.
- One device should be connected for every 6 feet (2 meters) of cable used.
- No more than 65 feet (20 meters) of cable should be used to connect devices to a bus.
- At least two-thirds of the devices on the network should be powered on while using the network.
- Connect the devices on the network in a star or linear configuration. Do not use loop or parallel configurations.

To function correctly, your instrument must have a unique device address. The default settings for the GPIB configuration is:

- GPIB Address 1

To change the GPIB address settings, do the following:

1. Push **Utility**.
2. Push **System** repeatedly to select **I/O**.
3. Push **GPIB**.
4. Enter the GPIB address on the side-bezel menu, using a multipurpose knob. This will set the GPIB address on an attached TEK-USB-488 Adapter

The instrument is now set up for bidirectional communication with your controller.

Documentation

The following documents are available for download on the Manuals Finder site at www.tektronix.com:

DPO4000 Series Digital Phosphor Oscilloscopes User Manual. Information about installing and operating the instrument.

Getting Started with OpenChoice™ Solutions Manual. Options for getting data from your instrument into any one of several available analysis tools.

DPO4000 Series Digital Phosphor Oscilloscopes Technical Reference. Instrument specifications and a performance verification procedure.

TekVISA Programmer Manual. Description of TekVISA, the Tektronix implementation of the VISA Application Programming Interface (API). TekVISA is industry-compliant software for writing interoperable instrument drivers in a variety of Application Development Environments (ADEs).

Command Syntax

You can control the operations and functions of the instrument through the Ethernet port or the USB 2.0 device port using commands and queries. The related topics listed below describe the syntax of these commands and queries. The topics also describe the conventions that the instrument uses to process them. See the *Command Groups* topic in the table of contents for a listing of the commands by command group, or use the index to locate a specific command.

Backus-Naur Form Notation

This documentation describes the commands and queries using Backus-Naur Form (BNF) notation. Refer to the following table for the symbols that are used.

Table 2-1: Symbols for Backus-Naur Form

Symbol	Meaning
< >	Defined element
::=	Is defined as
	Exclusive OR
{ }	Group; one element is required
[]	Optional; can be omitted
. . .	Previous element(s) may be repeated
()	Comment

Command and Query Structure

Commands consist of set commands and query commands (usually called commands and queries). Commands modify instrument settings or tell the instrument to perform a specific action. Queries cause the instrument to return data and status information.

Most commands have both a set form and a query form. The query form of the command differs from the set form by its question mark on the end. For example, the set command `ACQuire:MODE` has a query form `ACQuire:MODE?`. Not all commands have both a set and a query form. Some commands have set only and some have query only.

Messages

A command message is a command or query name followed by any information the instrument needs to execute the command or query. Command messages may contain five element types, defined in the following table.

Table 2-2: Command Message Elements

Symbol	Meaning
<Header>	This is the basic command name. If the header ends with a question mark, the command is a query. The header may begin with a colon (:) character. If the command is concatenated with other commands, the beginning colon is required. Never use the beginning colon with command headers beginning with a star (*).
<Mnemonic>	This is a header subfunction. Some command headers have only one mnemonic. If a command header has multiple mnemonics, a colon (:) character always separates them from each other.
<Argument>	This is a quantity, quality, restriction, or limit associated with the header. Some commands have no arguments while others have multiple arguments. A <space> separates arguments from the header. A <comma> separates arguments from each other.
<Comma>	A single comma is used between arguments of multiple-argument commands. Optionally, there may be white space characters before and after the comma.
<Space>	A white space character is used between a command header and the related argument. Optionally, a white space may consist of multiple white space characters.

Commands

Commands cause the instrument to perform a specific function or change one of the settings. Commands have the structure:

[:] <Header> [<Space> <Argument> [<Comma> <Argument>] . . .]

A command header consists of one or more mnemonics arranged in a hierarchical or tree structure. The first mnemonic is the base or root of the tree and each subsequent mnemonic is a level or branch off the previous one. Commands at a higher level in the tree may affect those at a lower level. The leading colon (:) always returns you to the base of the command tree.

Queries Queries cause the instrument to return status or setting information. Queries have the structure:


- [:] <Header>
- [:] <Header> [<Space> <Argument> [<Coma> <Argument>] . . .]

You can specify a query command at any level within the command tree unless otherwise noted. These branch queries return information about all the mnemonics below the specified branch or level. For example, HISTogram:STATistics:STDdev? returns the standard deviation of the histogram, while HISTogram:STATistics? returns all the histogram statistics, and HISTogram? returns all the histogram parameters.

Headers Use the HEADer command to control whether the instrument returns headers as part of the query response. If header is on, the query response returns command headers, then formats itself as a valid set command. When header is off, the response includes only the values. This may make it easier to parse and extract the information from the response. The table below shows the difference in responses.

Table 2-3: Comparison of Header Off and Header On Responses

Query	Header Off	Header On
TIME?	"14:30:00	:TIME"14:30:00
ACQuire:NUMAVg?	100	:ACQUIRE:NUMAVG 100

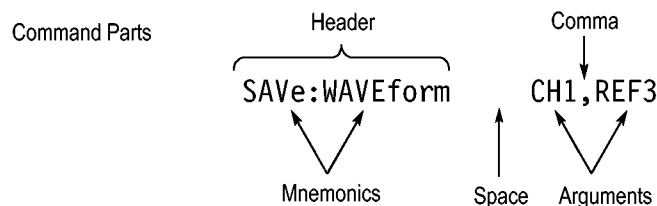 

Clearing the Instrument

You can clear the Output Queue and reset the instrument to accept a new command or query by using the selected Device Clear (DCL) function.

Command Entry

The following rules apply when entering commands:

- You can enter commands in upper or lower case.
- You can precede any command with white space characters. White space characters include any combination of the ASCII control characters 00 through 09 and 0B through 20 hexadecimal (0 through 9 and 11 through 32 decimal).
- The instrument ignores commands consisting of any combination of white space characters and line feeds.

Abbreviating

You can abbreviate many instrument commands. Each command in this documentation shows the minimum acceptable abbreviations in capitals. For example, you can enter the command `ACQUIRE:NUMAVG` simply as `ACQ:NUMA` or `acq:numa`.

Abbreviation rules may change over time as new instrument models are introduced. Thus, for the most robust code, use the full spelling.

If you use the `HEADER` command to have command headers included as part of query responses, you can further control whether the returned headers are abbreviated or are full-length with the `VERBOSE` command.

Concatenating

You can concatenate any combination of set commands and queries using a semicolon (;). The instrument executes concatenated commands in the order received.

When concatenating commands and queries, you must follow these rules:

1. Separate completely different headers by a semicolon and by the beginning colon on all commands except the first one. For example, the commands `TRIGGER:MODE NORMAL` and `ACQUIRE:NUMAVG 8`, can be concatenated into the following single command:

```
TRIGGER:MODE NORMAL;ACQUIRE:NUMAVG 8
```

2. If concatenated commands have headers that differ by only the last mnemonic, you can abbreviate the second command and eliminate the beginning colon. For example, you can concatenate the commands `ACQUIRE:MODE ENVELOPE` and `ACQUIRE:NUMAVG 8` into a single command:

```
ACQUIRE:MODE ENVELOPE; NUMAVG 8
```

The longer version works equally well:

```
ACQUIRE:MODE ENVELOPE;ACQUIRE:NUMAVG 8
```

3. Never precede a star (*) command with a colon:

```
ACQUIRE:MODE ENVELOPE;*OPC
```

Any commands that follow will be processed as if the star command was not there so the commands, `ACQUIRE:MODE ENVELOPE;*OPC;NUMAVG 8` will set the acquisition mode to envelope and set the number of acquisitions for averaging to 8.

4. When you concatenate queries, the responses to all the queries are concatenated into a single response message. For example, if the display graticule is set to Full and the display style is set to dotonly, the concatenated query `DISPlay:GRAticule?;STYle:DOTsonly?` will return the following.

If the header is on:

```
DISPLAY:GRATICULE FULL;:DISPLAY:STYLE:DOTSONLY 1
```

If the header is off:

```
FULL;1
```

5. Set commands and queries may be concatenated in the same message. For example,

```
ACQUIRE:MODE SAMPLE;NUMAVG?;STATE?
```

is a valid message that sets the acquisition mode to sample. The message then queries the number of acquisitions for averaging and the acquisition state. Concatenated commands and queries are executed in the order received.

Here are some invalid concatenations:

```
DISPlay:STYle:NORMAl;ACQUIRE:NUMAVG 8 (no colon before ACQUIRE)
```

```
DISPlay:GRAticule FULL;:DOTSONLY OFF (extra colon before DOTSONLY. You could use DISPlay:DOTsonly OFF instead)
```

```
DISPlay:GRAticule FULL;:*TRG (colon before a star (*) command)
```

```
MATH:HORizontal:SCALE 1.0e-1;HORizontal:POSITION 5.0e1  
(levels of the mnemonics are different; either remove the second use of  
HORizontal: or place :MATH in front of HORizontal:POSITION)
```

Terminating

This documentation uses <EOM> (End of message) to represent a message terminator.

Table 2-4: End of Message Terminator

Symbol	Meaning
<EOM>	Message terminator

The end-of-message terminator must be the END message (EOI asserted concurrently with the last data byte). The last data byte may be an ASCII linefeed (LF) character.

This instrument does not support ASCII LF only message termination. The instrument always terminates outgoing messages with LF and EOI.

Constructed Mnemonics

Some header mnemonics specify one of a range of mnemonics. For example, a channel mnemonic can be CH1, CH2, CH3, or CH4. You use these mnemonics in the command just as you do any other mnemonic. For example, there is a CH1:POSITION command, and there is also a CH2:POSITION command. In the command descriptions, this list of choices is abbreviated as CH<x>.

Cursor Position Mnemonics

When cursors are displayed, commands may specify which cursor of the pair to use.

Table 2-5: Channel Mnemonics

Symbol	Meaning
CH<x>	A channel specifier; <x> is 1 through 4.

Table 2-6: Cursor Mnemonics

Symbol	Meaning
CURSOR<x>	A cursor selector; <x> is either 1 or 2.
POSITION<x>	A cursor selector; <x> is either 1 or 2.
HPOS<x>	A cursor selector; <x> is either 1 or 2.

Math Specifier Mnemonics

Commands can specify the mathematical waveform to use as a mnemonic in the header.

Table 2-7: Math Specifier Mnemonics

Symbol	Meaning
Math<x>	A math waveform specifier; <x> is 1.

Measurement Specifier Mnemonics

Commands can specify which measurement to set or query as a mnemonic in the header. Up to eight automated measurements may be displayed.

Table 2-8: Measurement Specifier Mnemonics

Symbol	Meaning
MEAS<x>	A measurement specifier; <x> is 1 through 4.

Channel Mnemonics

Commands specify the channel to use as a mnemonic in the header.

Reference Waveform Mnemonics

Commands can specify the reference waveform to use as a mnemonic in the header.

Table 2-9: Reference Waveform Mnemonics

Symbol	Meaning
REF<x>	A reference waveform specifier; <x> is 1, 2, 3, or 4 for 4-channel instruments and 1 or 2 for 2-channel instruments.

Argument Types

Numeric

Many instrument commands require numeric arguments. The syntax shows the format that the instrument returns in response to a query. This is also the preferred format when sending the command to the instrument though any of the formats will be accepted. This documentation represents these arguments as follows:

Table 2-10: Numeric Arguments

Symbol	Meaning
<NR1>	Signed integer value
<NR2>	Floating point value without an exponent
<NR3>	Floating point value with an exponent
<bin>	Digital data in binary format

Most numeric arguments will be automatically forced to a valid setting, either by rounding or truncating, when an invalid number is input unless otherwise noted in the command description.

Quoted String

Some commands accept or return data in the form of a quoted string, which is simply a group of ASCII characters enclosed by a single quote (') or double quote ("). The following is an example of a quoted string: "This is a quoted string". This documentation represents these arguments as follows:

Table 2-11: Quoted String Argument

Symbol	Meaning
<QString>	Quoted string of ASCII text

A quoted string can include any character defined in the 7-bit ASCII character set. Follow these rules when you use quoted strings:

1. Use the same type of quote character to open and close the string. For example: "this is a valid string".
2. You can mix quotation marks within a string as long as you follow the previous rule. For example, "this is an 'acceptable' string".
3. You can include a quote character within a string by repeating the quote. For example: "here is a "" mark".
4. Strings can have upper or lower case characters.
5. If you use a GPIB network, you cannot terminate a quoted string with the END message before the closing delimiter.
6. A carriage return or line feed embedded in a quoted string does not terminate the string, but is treated as just another character in the string.
7. The maximum length of a quoted string returned from a query is 1000 characters.

Here are some invalid strings:


- "Invalid string argument' (quotes are not of the same type)
- "test<EOI>" (termination character is embedded in the string)

Block Several instrument commands use a block argument form (see the following table).

Table 2-12: Block Argument

Symbol	Meaning
<NZDig>	A nonzero digit character in the range of 1–9
<Dig>	A digit character, in the range of 0–9
<DChar>	A character with the hexadecimal equivalent of 00 through FF (0 through 255 decimal)
<Block>	A block of data bytes defined as: <Block> ::= {#<NZDig><Dig>[<Dig>...][<DChar>...] #0[<DChar>...]<terminator>}
 
<NZDig> specifies the number of <Dig> elements that follow. Taken together, the <NZDig> and <Dig> elements form a decimal integer that specifies how many <DChar> elements follow.

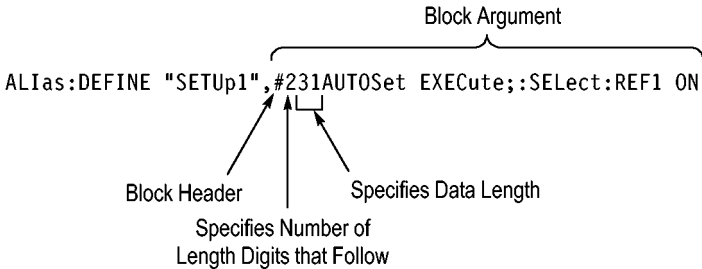

Command Groups

This manual lists DPO4000 Series commands in two ways. First, it presents them by functional groups. Then, it lists them alphabetically. The functional group list starts below. The alphabetical list provides more detail on each command. (See page 2-47, *Commands Listed in Alphabetical Order*.)

Acquisition Command Group

Use the commands in the Acquisition Command Group to set up the modes and functions that control how the instrument acquires the signals you input to the channels and processes them into waveforms.

Using these commands for acquiring waveforms, you can do the following:

- Start and stop acquisitions.
- Control whether each waveform is simply acquired, averaged, or enveloped over successive acquisitions of that waveform.
- Set the controls or conditions that start and stop acquisitions.
- Control acquisition of channel waveforms.
- Set acquisition parameters.

Table 2-13: Acquisition Commands

Command	Description
ACQUIRE?	Returns acquisition parameters
ACQUIRE:MAXSAMPLERATE?	Returns the maximum real-time sample rate
ACQUIRE:MODE	Sets or returns the acquisition mode
ACQUIRE:NUMACQ?	Returns number of acquisitions that have occurred
ACQUIRE:NUMAVG	Sets or returns number of acquisitions for an averaged waveform
ACQUIRE:STATE	Starts or stops the acquisition system
ACQUIRE:STOPAFTER	Sets or returns whether the acquisition is continuous or single sequence

Alias Command Group

Use Alias commands to define new commands as a sequence of standard commands. You may find this useful when repeatedly using the same commands to perform certain tasks like setting up measurements.

Aliases are similar to macros but do not include the capability to substitute parameters into alias bodies. The alias mechanism obeys the following rules:

- The alias name must consist of a valid IEEE 488.2 message unit, which may not appear in a message preceded by a colon, comma, or a command or query program header.
- The alias name may not appear in a message followed by a colon, comma, or question mark.
- An alias name must be distinct from any keyword or keyword short form.
- An alias name cannot be redefined without first being deleted using one of the alias deletion functions.
- Alias names do not appear in response messages.

Table 2-14: Alias Commands

Command	Description
ALias	Sets or returns the alias state
ALias:CATalog?	Returns a list of the currently defined alias labels
ALias:DEFine	Assigns a sequence of program messages to an alias label
ALias:DELEte	Removes a specified alias
ALias:DELEte:ALL	Deletes all existing aliases
ALias:DELEte[:NAME]	Removes a specified alias
ALias[:STATE]	Sets or returns the alias state

Bus Command Group

Use the Bus commands when working with serial bus measurements. Install the DPOEMBD application module when working with I²C or SPI bus signals and the DPO4AUTO module when working with CAN bus signals.

Table 2-15: Bus Commands

Commands	Description
BUS	Returns the parameters for each bus
BUS:B<x>:CAN:BITRate	Sets or returns the bit rate for the CAN bus
BUS:B<x>:CAN:PRObe	Sets or returns the probing method used to probe the CAN bus
BUS:B<x>:CAN:SAMPLEpoint	Sets or returns the sample point (in %) to sample during each bit period
BUS:B<x>:CAN:SOUrce	Sets or returns the CAN data source

Table 2-15: Bus Commands, (cont.)

Commands	Description
BUS:B<x>:DISPLAY:FORMAT	Sets the display format for the numerical information in the bus waveform
BUS:B<x>:DISPLAY:TYPE	Sets the display type for the bus
BUS:B<x>:I2C{:CLOCK SCLK}:SOURCE	Sets or returns the I2C SCLK source
BUS:B<x>:I2C{:DATA SDATA}:SOURCE	Sets or returns the I2C SDATA source
BUS:B<x>:POSITION	Sets or returns the position of the bus waveforms
BUS:B<x>:SPI{:CLOCK SCLK}:POLARITY	Sets or returns the SPI SCLK polarity
BUS:B<x>:SPI{:CLOCK SCLK}:SOURCE	Sets or returns the SPI SCLK source
BUS:B<x>:SPI{:DATA{:IN :MISO}:POLARITY	Sets or returns the SPI MISO polarity
BUS:B<x>:SPI{:DATA{:IN :MISO}:SOURCE	Sets or returns the SPI MISO source
BUS:B<x>:SPI{:DATA{:OUT :MOSI}:POLARITY	Sets or returns the SPI MOSI polarity
BUS:B<x>:SPI{:DATA{:OUT :MOSI}:SOURCE	Sets or returns the SPI MOSI source
BUS:B<x>:SPI{:SElect SS}:POLARITY	Sets or returns the SPI SS polarity
BUS:B<x>:SPI{:SElect SS}:SOURCE	Sets or returns the SPI SS source
BUS:B<x>:STATE	Turns the bus on and off
BUS:B<x>:TYPE	Sets or returns the bus type
BUS:THReshold:CH<x>	Sets or returns the threshold for a channel

Calibration and Diagnostic Command Group

Use the Calibration and Diagnostic commands to provide information about the current state of instrument calibration and allow you to initiate internal signal path calibration (SPC) or execute diagnostic tests. Commands that are specific to factory calibration are not described in this manual; however, they are described in the service manual (located on your DPO4000 Documentation CD-ROM in PDF format). You can also order a printed copy.

Table 2-16: Calibration and Diagnostic Commands

Command	Description
*CAL?	Instructs the instrument to perform self-calibration and returns the oscilloscope self calibration status
CAL?	Returns the internal and factory calibration status and the calibration due date
CALibrate:FACTory	Starts and stops the factory calibration process

Table 2-16: Calibration and Diagnostic Commands, (cont.)

Command	Description
CALibrate:FACTory:STATus?	Returns the factory calibration status value saved in nonvolatile memory
CALibrate:FACTory:STEPSTatus?	Returns information to synchronize programmed factory calibration steps
CALibrate:FACTory:STEPSTIMulus?	Returns information about an input signal required for calibration
CALibrate:INTERNAL	Starts the internal signal path calibration
CALibrate:INTERNAL:START	Starts the internal signal path calibration
CALibrate:INTERNAL:STATus?	Returns the current status of the internal signal path calibration
CALibrate:RESults?	Returns the status of all calibration subsystems without performing an SPC operation
CALibrate:RESults:SPC?	Returns the results of the last SPC operation
CALibrate:RESults:FACTory?	Returns the status of internal and factory calibration
DIAG:LOOP:OPTion	Sets the self-test loop option
DIAG:LOOP:OPTion:NTIMes	Sets the self-test loop option to run N times
DIAG:LOOP:STOP	Stops the self-test at the end of the current loop
DIAG:RESUlt:FLAg?	Returns the pass/fail status from the last self-test sequence execution
DIAG:RESUlt:LOG?	Returns the internal results log from the last self-test sequence execution
DIAG:SElect:ALL	Selects all available self-tests
DIAG:SElect:<function>	Selects one of the available self-test areas
DIAG:STATE	Sets the instrument operating state

Cursor Command Group

Use the commands in the Cursor Command Group to control the cursor display and readout. You can use these commands to control the setups for cursor 1 and cursor 2, such as cursor position.

You can also use the commands to select one of the following cursor functions:

- **Off.** Turns off the display of all cursors.
- **Waveform Cursors.** Consists of two cursors. Waveform cursors enable you to conveniently measure waveform amplitude and time.
- **Screen Cursors.** Consists of two pairs of independent horizontal and vertical cursors. You can use these cursors to indicate an arbitrary position within the waveform display area.

Table 2-17: Cursor Commands

Command	Description
CURSor?	Returns all cursor settings
CURSor:FUNcTION	Sets or returns the cursor type
CURSor:HBArs?	Returns hbar cursor settings
CURSor:HBArs:DELta?	Returns hbars cursors vertical difference
CURSor:HBArs:POSITION<x>	Sets or returns the hbar cursor<x> vertical position
CURSor:HBArs:UNIts	Returns hbar cursor units
CURSor:HBArs:USE	Sets the horizontal bar cursor measurement scale
CURSor:MODE	Sets or returns whether cursors move in unison or separately
CURSor:VBArS?	Sets or returns the position of vertical bar cursors
CURSor:VBArS:DELta?	Returns the difference between vbar cursors
CURSor:VBArS:HPOS<x>?	Returns the horizontal value of the specified vertical bar ticks
CURSor:VBArS:POSITION<x>	Sets or returns the vbar cursor<x> horizontal position
CURSor:VBArS:UNIts	Sets or returns the units for vbar cursors
CURSor:VBArS:USE	Sets the vertical bar cursor measurement scale
CURSor:VBArS:VDELta?	Returns the vertical difference between the two vertical bar cursor ticks

Display Command Group

Use the commands in the Display Command Group to change the graticule style, the displayed intensities, and to set the characteristics of the waveform display.

Use the commands to set the style that best displays your waveforms and graticule display properties. Note that the mode you choose globally affects all displayed waveforms.

Table 2-18: Display Commands

Command	Description
DISplay?	Returns current display settings
DISplay:CLOCK	Sets or returns the display of the date/time stamp
DISplay:GRAticule	Sets or returns the type of graticule that is displayed
DISplay:INTENSITY?	Returns all display intensity settings
DISplay:INTENSITY:BACKLight	Sets or returns the backlight intensity for the display
DISplay:INTENSITY:GRAticule	Sets or returns the graticule intensity for the display
DISplay:INTENSITY:WAVEform	Sets or returns the intensity of the waveforms
DISplay:PERsistence	Sets or returns display persistence setting
DISplay:STYLE:DOTsonly	Sets a dots-only display

Ethernet Command Group

Use the commands in the Ethernet Command Group to set up the Ethernet remote interface.

Table 2-19: Ethernet Commands

Command	Description
ETHERnet:DHCPbootp	Sets or returns the network initialization search for a DHCP/BOOTP server
ETHERnet:DNS:IPADdress	Sets or returns the network Domain Name Server (DNS) IP address
ETHERnet:DOMAINname	Sets or returns the network domain name
ETHERnet:ENET:ADdress?	Returns the Ethernet address value assigned to the oscilloscope
ETHERnet:GATEWay:IPADdress	Sets or returns the remote interface gateway IP address
ETHERnet:HTTTPort	Sets or returns the remote interface HTTP port value
ETHERnet:IPADdress	Sets or returns the IP address assigned to the oscilloscope
ETHERnet:NAME	Sets or returns the network name assigned to the oscilloscope
ETHERnet:PASSWord	Sets or returns the Ethernet access password
ETHERnet:PING	Causes the oscilloscope to ping the gateway IP address

Table 2-19: Ethernet Commands, (cont.)

Command	Description
<code>ETHERnet:PING:STATUS?</code>	Returns the results from pinging the gateway IP address
<code>ETHERnet:SUBNETMask</code>	Sets or returns the remote interface subnet mask value

File System Command Group

Use the commands in the File System Command Group to help you use CompactFlash and USB media. You can use the commands to do the following:

- List the contents of a directory
- Create and delete directories
- Create, read, rename, or delete a file
- Format media

When using these commands, keep the following points in mind:

- File arguments are always enclosed within double quotes:
"D:/MYDIR/TEK00001.SET"
- File names follow the non-case sensitive, MSDOS format:
[DRIVE:][\PATH]filename
- Path separators may be either forward slashes (/) or back slashes (\)

NOTE. *Using back slash as a path separator may produce some unexpected results, depending on how your application treats escaped characters. Many applications recognize the sequence of back slash followed by an alphabetic character as an escaped character, and, as such, interpret that alphabetic character as a control character. For example, the sequence "\n" may be interpreted as a newline character; "\t" may be interpreted as a tab character. To ensure that this interpretation does not occur, you can use double back slashes. For example, "D:\\testfile.txt".*

- Some FILESystem commands may fail because a file has read-only attributes. You will not be able to delete or replace such files until this attribute is removed.

Table 2-20: File System Commands

Command	Description
FILESystem?	Returns the file system state
FILESystem:CWD	Sets or returns the current working directory for FILESystem commands.
FILESystem:DELEte	Deletes a named file or directory
FILESystem:DIR?	Returns a list of directory contents
FILESystem:FORMat	Formats a named drive
FILESystem:FREESpace?	Returns the number of bytes of free space on the current drive
FILESystem:MKDir	Creates a new directory
FILESystem:REName	Assigns a new name to an existing file
FILESystem:RMDir	Deletes a named directory

Hard Copy Command Group

Use the commands in the Hard Copy Command Group to make hard copies.

Table 2-21: Hard Copy Commands

Command	Description
HARDCopy	Sends a copy of the screen display to the selected printer
HARDCopy:ACTIVeprinter	Sets or returns the currently active printer
HARDCopy:INKSaver	Changes hard copy output to print color traces and graticule on a white background
HARDCopy:LAYout	Sets or returns the page orientation for hard copy
HARDCopy:PREVIEW	Previews the current screen contents with the InkSaver palette applied
HARDCopy:PRINTer:ADD	Adds a network printer to the list of available printers
HARDCopy:PRINTer:DELeTe	Removes a network printer from the list of available printers
HARDCopy:PRINTer:LIST?	Returns the list of currently attached printers
HARDCopy:PRINTer:REName	Renames a network printer in the list of available printers

Horizontal Command Group

Use the commands in the Horizontal Command Group to control the time bases of the instrument. You can set the time per division of the main time base. You can

use the Horizontal commands to set the scale, horizontal position and reference of the time base

Table 2-22: Horizontal Commands

Command	Description
HORizontal?	Returns settings for the horizontal commands
HORizontal:ACQLENGTH?	Returns the record length
HORizontal:MAIn?	Returns the time per division of the time base
HORizontal[:MAIn]:DELay:MODE	Sets or returns the main time base trigger delay mode
HORizontal[:MAIn]:DELay:STATe	Sets or returns the time base trigger delay mode
HORizontal[:MAIn]:DELay:TIME	Sets or returns the main time base trigger delay time
HORizontal[:MAIn]:POSition?	Sets or returns the waveform horizontal position on the display
HORizontal:MAIn:SAMPLERate?	Sets the horizontal sample rate to the desired number of samples per second Or returns the current horizontal sample rate
HORizontal[:MAIn]:SCALE	Sets time per division for the main time base Or returns the main time base horizontal scale
HORizontal:MAIn:SECdiv	Sets time per division for the main time base Or returns the main time base horizontal scale
HORizontal:MAIn:UNIts?	Returns the units for the horizontal main time base
HORizontal:MAIn:UNIts:STRing?	Sets or returns the units string for the horizontal main time base
HORizontal:PREViewstate?	Returns whether or not the acquisition system is in the preview state
HORizontal:RECOrdlength	Sets the horizontal record length to the number of data points in each frame Or returns the current horizontal record length

Mark Command Group

Use the commands in the Mark Command Group to identify areas of the acquired waveform that warrant further investigation.

Mark Commands

Command	Description
MARK	Move to the next or previous mark on the waveform or returns all learnable settings from the mark commands
MARK:CREATE	Creates a mark on a particular waveform or all waveforms in a column
MARK:DELEte	Deletes a mark on a particular waveform, all waveforms in a column, or all marks
MARK:FREE?	Returns how many marks are free to be used
MARK:SElected:END?	Returns the end of the selected mark, in terms of 0 to 100% of the waveform
MARK:SElected:FOCUS?	Returns the focus of the selected mark, in terms of 0 to 100% of the waveform
MARK:SElected:MARKSINCOLumn?	Returns how many marks are in the current zoom pixel column
MARK:SElected:OWNer?	Returns the owner of the selected mark
MARK:SElected:SOURCE?	Returns the source waveform of the selected mark
MARK:SElected:START?	Returns the start of the selected mark, in terms of 0 to 100% of the waveform
MARK:SElected:STATe?	Returns the on or off state of the selected mark
MARK:SElected:ZOOM:POSition?	Returns the position of the selected mark, in terms of 0 to 100% of the upper window
MARK:TOTal?	Returns how many marks are used

Math Command Group

Use the commands in the Math Command Group to create and define a math waveform. Use the available math functions to define your math waveform.

The math waveform you create depends on sources listed in the math expression. If you change these sources, the math waveform you previously defined will be affected.

Math expressions can be simple, containing no mathematical computation, such as CH1, which specifies that a waveform shows the signal source of channel 1. Math expressions can also be complex, consisting of up to 128 characters and comprising many sources, functions, and operands.

The acquisition of a live waveform can stop for several reasons: You can turn off the channel, stop the waveform, or stop the trigger. When you turn off the channel, math continues and data is acquired but is not displayed. When you

stop either the waveform or the trigger, the math calculation stops, and the last math calculation performed is displayed.

When a live waveform update or reference waveform is altered, math waveforms containing those waveforms as sources are also updated to reflect the changes. Also, sources must exist but do not need to be displayed to be used in and to update math waveforms.

Table 2-23: Math Commands

Command	Description
MATH[1]?	Returns the definition of the math waveform
MATH[1]:DEFine	Sets or returns the math<x> waveform definition
MATH[1]:HORizontal:POSition	Sets or returns the math horizontal display position for non-live and FFT math waveforms
MATH[1]:HORizontal:SCALE	Sets or returns the math horizontal display scale for non-live and FFT math waveforms
MATH[1]:HORizontal:UNITS	Sets or returns the math waveform horizontal measurement unit value
MATH[1]:SPECTral:MAG	Sets or returns the units of the SpectralMag function in the specified math string
MATH[1]:SPECTral:WINDow	Sets or returns the window function used to multiply the input data to the spectral analyzer
MATH[1]:TYPE	Sets or returns the math waveform mode type
MATH[1]:VERTical:POSition	Sets or returns the math waveform vertical position
MATH[1]:VERTical:SCALE	Sets or returns the math waveform vertical scale (per div)
MATH[1]:VERTical:UNITS	Sets or returns the units used for the math waveform
MATHVAR?	Returns all numerical values used within math expressions
MATHVAR:VAR<x>	Sets or returns numerical values you can use within math expressions

Measurement Command Group

Use the commands in the Measurement Command Group to control the automated measurement system.

Up to four automated measurements can be displayed on the screen. In the commands, these measurement readouts are named MEAS<x>, where <x> can be 1 through 4.

In addition to the four displayed measurements, the measurement commands let you specify an additional measurement, IMMEd. The immediate measurement has no front-panel equivalent. Immediate measurements are never displayed. Because they are computed only when needed, immediate measurements slow the waveform update rate less than displayed measurements.

Whether you use displayed or immediate measurements, use the VALue query to obtain measurement results.

Measurement commands can set and query measurement parameters. You can assign some parameters, such as waveform sources, differently for each measurement. Other parameters, such as reference levels, have only one value, which applies to all measurements.

Table 2-24: Measurement Commands

Command	Description
MEASUrement?	Returns all measurement parameters
MEASUrement:CLEARSNAPSHOT	Removes the measurement snapshot display
MEASUrement:GATing	Sets or returns the measurement gating
MEASUrement:IMMEd?	Returns all immediate measurement setup parameters
MEASUrement:IMMEd:DELay?	Returns information about the immediate delay measurement
MEASUrement:IMMEd:DELay:DIREction	Sets or returns the search direction to use for immediate delay measurements
MEASUrement:IMMEd:DELay:EDGE<x>	Sets or returns the slope of the edge used for immediate delay “from” and “to” waveform measurements
MEASUrement:IMMEd:SOUrce	Sets or returns the “from” source for all single channel immediate measurements
MEASUrement:IMMEd:SOUrce2	Sets or returns the source to measure “to” for phase or delay immediate measurements
MEASUrement:IMMEd:TYPe	Sets or returns the type of the immediate measurement
MEASUrement:IMMEd:UNIts?	Returns the units of the immediate measurement
MEASUrement:IMMEd:VALue?	Returns the value of the immediate measurement
MEASUrement:INDICators?	Returns all measurement indicator parameters
MEASUrement:INDICators:HORZ<x>?	Returns the position of the specified horizontal measurement indicator

Table 2-24: Measurement Commands, (cont.)

Command	Description
MEASUrement:INDICators:NUMHORZ?	Returns the number of horizontal measurement indicators currently being displayed
MEASUrement:INDICators:NUMVERT?	Returns the number of vertical measurement indicators currently being displayed
MEASUrement:INDICators:STATE	Set or returns the state of visible measurement indicators
MEASUrement:INDICators:VERT<x>?	Returns the value of the specified vertical measurement indicator
MEASUrement:MEAS<x>?	Returns all measurement parameters
MEASUrement:MEAS<x>:COUNT?	Returns the number of values accumulated since the last statistical reset
MEASUrement:MEAS<x>:DElay?	Returns the delay measurement parameters for the specified measurement
MEASUrement:MEAS<x>:DElay:DIREction	Sets or returns the search direction to use for delay measurements
MEASUrement:MEAS<x>:DElay:EDGE<x>	Sets or returns the slope of the edge to use for delay "from" and "to" waveform measurements
MEASUrement:MEAS<x>:MAXimum?	Returns the maximum value found since the last statistical reset
MEASUrement:MEAS<x>:MEAN?	Returns the mean value accumulated since the last statistical reset
MEASUrement:MEAS<x>:MINimum?	Returns the minimum value found since the last statistical reset
MEASUrement:MEAS<x>:SOURCE[1]	Sets or returns the channel from which measurements are taken
MEASUrement:MEAS<x>:SOURCE2	Sets or returns the channel to which measurements are sent
MEASUrement:MEAS<x>:STATE	Sets or returns whether the specified measurement slot is computed and displayed
MEASUrement:MEAS<x>:STDdev?	Returns the standard deviation of values accumulated since the last statistical reset
MEASUrement:MEAS<x>:TYPE	Sets or returns the measurement<x> type
MEASUrement:MEAS<x>:UNIts?	Returns measurement<x> units
MEASUrement:MEAS<x>:VALue?	Returns the value of measurement<x>
MEASUrement:MEthod	Sets or returns the method used for calculating reference levels
MEASUrement:REFLevel?	Returns the current reference level parameters

Table 2-24: Measurement Commands, (cont.)

Command	Description
MEASUrement:REFLevel:ABSolute:HIGH	Sets or returns the top reference level for rise time
MEASUrement:REFLevel:ABSolute:LOW	Sets or returns the low reference level for rise time
MEASUrement:REFLevel:ABSolute:MID	Sets or returns the mid reference level for measurements
MEASUrement:REFLevel:ABSolute:MID2	Sets or returns the mid reference level for delay "to" measurements
MEASUrement:REFLevel:METHod	Sets or returns the method for assigning high and low reference levels
MEASUrement:REFLevel:PERCent:HIGH	Sets or returns the top reference percent level for rise time
MEASUrement:REFLevel:PERCent:LOW	Sets or returns the low reference percent level for rise time
MEASUrement:REFLevel:PERCent:MID	Sets or returns the mid reference percent level for waveform measurements
MEASUrement:REFLevel:PERCent:MID2	Sets or returns the mid reference percent level for second waveform measurements
MEASUrement:SNAPShot	Displays the measurement snapshot list
MEASUrement:STATistics:MODE	Turns measurement statistics on or off
MEASUrement:STATistics	Clears or returns all of the statistics accumulated for all period measurements (MEAS1 through MEAS4)
MEASUrement:STATistics:WEIghting	Controls the responsiveness of the mean and standard deviation to waveform changes

Miscellaneous Command Group

Use the commands in the Miscellaneous Command Group for actions that do not fit into other categories.

Several commands and queries are common to all 488.2-1987 devices on the GPIB bus. The 488.2-1987 standard defines these commands. The common commands begin with an asterisk (*) character.

Table 2-25: Miscellaneous Commands

Command	Description
AUTOSet	Sets the vertical, horizontal and trigger controls to provide a stable display of the selected waveform
AUXOut?	Returns the auxiliary out setup

Table 2-25: Miscellaneous Commands, (cont.)

Command	Description
CLEARMenu	Clears the current menu from the display
DATE	Sets or returns the date displayed by the instrument
*DDT	Sets or returns the commands that will be executed by the group execute trigger
FPanel:PRESS	Simulates the action of pressing a specified front-panel button
FPanel:TURN	Duplicates the action of turning a specified front-panel control knob
HDR	Sets or returns the Response Header Enable State
HEADer	Sets or returns the Response Header Enable State
ID?	Returns identifying information about the instrument and its firmware
*IDN?	Returns the same information as the ID? command except the data is formatted according to Tektronix Codes & Formats
LANGuage	Sets or returns the user interface display language
LOCK	Sets or returns the front panel lock state
*LRN?	Returns a listing of instrument settings
NEWpass	Changes the password for user protected data
PASSWord	Enables the *PUD and NEWpass set commands
REM	Specifies a comment, which is ignored by the instrument
SET?	Returns a listing of instrument settings
SETUP<x>:DATE?	Returns the date when the specified instrument setup was saved
SETUP<x>:LABEL	Sets or returns the specified instrument setup label
SETUP<x>:TIME?	Returns the time when the specified instrument setup was saved
TEKSecure	Initializes both waveform and setup memories
TIME	Sets or returns the time displayed by the instrument
TOTaluptime?	Returns the total number of hours that the oscilloscope has been turned on since the nonvolatile memory was last programmed

Table 2-25: Miscellaneous Commands, (cont.)

Command	Description
*TRG	Performs the group execute trigger (GET)
*TST?	Tests the GPIB interface and returns status
UNLock	Unlocks front panel
VERBose	Sets or returns the verbose state

Save and Recall Command Group

Use the commands in the Save and Recall Command Group to store and retrieve internal waveforms and settings. When you save a setup, you save all the settings of the instrument. When you recall a setup, the instrument restores itself to the state that it was in when you originally saved that setting.

Table 2-26: Save and Recall Commands

Command	Description
FACTory	Resets the instrument to factory default settings
*RCL	Recalls saved instrument settings
RECALL:SETUp	Recalls saved instrument settings
RECALL:WAVEform	Recalls a stored waveform to a reference location
*SAV	Stores the state of the instrument to a specified memory location
SAVE:ASSIgn:TYPE	Sets or returns the assignment of the data to be saved
SAVE:EVENTable:BUS	Saves bus data into the specified file.
SAVE:IMAGe	Saves a capture of the screen image into the specified file
SAVE:IMAGe:FILEFormat	Sets or returns the file format to use for saving screen images when the file type cannot be determined from the given file name or when screen images are captured by using the front panel
SAVE:IMAGe:LAYout	Sets or returns the layout to use for saved screen images
SAVE:SETUp	Saves the state of the instrument to a specified memory location or file

Table 2-26: Save and Recall Commands, (cont.)

Command	Description
SAVe:WAVEform	Saves a waveform to one of four reference memory locations or a file
SAVe:WAVEform:FILEFormat	Sets or returns the format for saved waveforms

Search Command Group

Use the commands in the Search Commands Group to seek out information in waveform records.

Search Commands

Command	Description
SEARCH?	Returns all search-related settings
SEARCH:SEARCH<x>:COpy	Copies the search criteria to the trigger, or the trigger criteria to the search.
SEARCH:SEARCH<x>:STATE	Sets the search state to on or off
SEARCH:SEARCH<x>:TOTAL?	Returns the total amount of matches for this search
SEARCH:SEARCH<x>:TRIGger:A:BUS?	Sets or queries the serial search type
SEARCH:SEARCH<x>:TRIGger:A:BUS: B<x>:CAN:CONDition	Sets or queries the search condition for CAN search
SEARCH:SEARCH<x>:TRIGger:A:BUS: B<x>:CAN:DATA:DIRection	Sets or queries the CAN search condition to be valid on a READ, WRITE or either
SEARCH:SEARCH<x>:TRIGger:A:BUS: B<x>:CAN:DATA:QUALifier	Sets or queries the CAN data qualifier
SEARCH:SEARCH<x>:TRIGger:A:BUS: B<x>:CAN:DATA:SIZE	Sets or queries the length of the data string in bytes to be used for CAN search
SEARCH:SEARCH<x>:TRIGger:A:BUS: B<x>:CAN:DATA:VALue	Sets or queries the binary data string to be used for CAN search
SEARCH:SEARCH<x>:TRIGger:A:BUS: B<x>:CAN:FRAMEType	Sets or queries the CAN Frame Type to be used
SEARCH:SEARCH<x>:TRIGger:A:BUS: B<x>:CAN{:IDentifier}:ADDRess}:MODE	Sets or queries the CAN addressing mode to standard or extended format
SEARCH:SEARCH<x>:TRIGger:A:BUS: B<x>:CAN{:IDentifier}:ADDRess}:VALue	Sets or queries the binary address string to be used for CAN search
SEARCH:SEARCH<x>:TRIGger:A:BUS: B<x>:I2C:ADDRess:MODE	Sets or queries the I2C address mode to 7 or 10-Bit
SEARCH:SEARCH<x>:TRIGger:A:BUS: B<x>:I2C:ADDRess:TYPE	Sets or queries the I2C address type to I2C special addresses

Search Commands, (cont.)

Command	Description
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDRess:VALue	Sets or queries the binary address string to be used for I2C search
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:CONDition	Sets or queries the search condition for I2C search
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:DIRection	Sets or queries the I2C search condition to be valid on a READ, WRITE or either
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:SIZE	Sets or queries the length of the data string in bytes to be used for I2C search
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:VALue	Sets or queries the binary data string to be used for I2C search
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:CONDition	Sets or queries the search condition for SPI search
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA{MISO IN}:VALue	Sets or queries the binary data string to be used for SPI search if
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA{MOSI OUT}:VALue	Sets or queries the binary data string to be used for SPI search
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA:SIZE	Sets or queries the length of the data string in bytes to be used for SPI search
SEARCH:SEARCH<x>:TRIGger:A:BUS:SOUrce	Sets or queries the bus for a serial search
SEARCH:SEARCH<x>:TRIGger:A:EDGE:SLOpe	Sets or returns the slope for an edge search
SEARCH:SEARCH<x>:TRIGger:A:EDGE:SOUrce	Sets or returns the source waveform for an edge search
SEARCH:SEARCH<x>:TRIGger:A:LEVel	Sets or queries the level for an edge search
SEARCH:SEARCH<x>:TRIGger:A:LEVel:CH<x>	Sets or queries the level for edge search for the selected channel
SEARCH:SEARCH<x>:TRIGger:A:LEVel:MATH	Sets or queries the math waveform level for edge search
SEARCH:SEARCH<x>:TRIGger:A:LEVel:REF<x>	Sets or queries the reference waveform level for edge search
SEARCH:SEARCH<x>:TRIGger:A:LOGIc:FUNCTion	Sets or queries the logic operator for the logic search
SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPUt:CH<x>	Sets or queries the Boolean logic criteria for the logic search
SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPUt:CLOCK:EDGE	Sets or queries whether the clock edge is rise or fall for a logic search
SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPUt:CLOCK:SOUrce	Sets or queries the clock source definition for logic search
SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPUt:MATH	Sets or queries the Boolean logic criteria for the logic search

Search Commands, (cont.)

Command	Description
SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:REF<x>	Sets or queries the Boolean logic criteria for the logic search
SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:CH<x>	Sets or queries the Boolean logic criteria for the logic search
SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:MATH	Sets or returns the Boolean logic criteria for the logic search
SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:REF<x>	Sets or returns the Boolean logic criteria for the logic search
SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn	Sets or returns the condition for generating a logic pattern search
SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:LESSLimit	Sets or returns the maximum time that the selected pattern may be true
SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:MORELimit	Sets or returns the minimum time that the selected pattern may be true
SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:CH<x>	Sets or returns the channel threshold level for an edge search
SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:MATH	Sets or returns the math waveform threshold level for edge search
SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:REF<x>	Sets or returns the reference waveform threshold level for edge search
SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:CH<x>	Sets or returns the channel waveform lower threshold level for a transition search
SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:MATH	Sets or returns the math waveform lower threshold level for a transition search
SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:REF<x>	Sets or returns the reference waveform lower threshold level for a transition search
SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:POLarity	Sets or returns the polarity for a pulse search
SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:SOUrce	Sets or returns the source waveform for a pulse search
SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:WHEn	Sets or returns the condition for generating a pulse width search
SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:WIDth	Sets or returns the pulse width setting for a pulse width search
SEARCH:SEARCH<x>:TRIGger:A:RUNT:POLarity	Sets or returns the polarity setting for a runt search
SEARCH:SEARCH<x>:TRIGger:A:RUNT:SOUrce	Sets or returns the source setting for a runt search
SEARCH:SEARCH<x>:TRIGger:A:RUNT:WHEn	sets or returns the condition setting for a runt search
SEARCH:SEARCH<x>:TRIGger:A:RUNT:WIDth	Sets or returns the width setting for a runt search

Search Commands, (cont.)

Command	Description
SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:EDGE	Sets or returns the clock slope setting for a setup/hold search
SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:SOURce	Sets or returns the clock source setting for an setup/hold search
SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:THReshold	Sets or returns the clock threshold setting for an setup/hold search
SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATA:SOURce	Sets or returns the data source setting for an setup/hold search
SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATA:THReshold	Sets or returns the data threshold setting for an setup/hold search
SEARCH:SEARCH<x>:TRIGger:A:SETHold:HOLDTime	Sets or returns the hold time setting for an setup/hold search
SEARCH:SEARCH<x>:TRIGger:A:SETHold:SETTime	Sets or returns the setup time setting for an setup/hold search
SEARCH:SEARCH<x>:TRIGger:A:TRANSition :RISEFall :DELtAtime	Sets or returns the transition time setting for an transition search
SEARCH:SEARCH<x>:TRIGger:A:TRANSition :RISEFall :POLarity	Sets or returns the polarity setting for an transition search
SEARCH:SEARCH<x>:TRIGger:A:TRANSition :RISEFall :SOURce	Sets or returns the source setting for an transition search
SEARCH:SEARCH<x>:TRIGger:A:TRANSition :RISEFall :WHEN	Sets or returns the condition setting for an transition search
SEARCH:SEARCH<x>:TRIGger:A:TYPe	Sets or returns the trigger type setting for a search
SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:CH<x>	Sets or returns the channel waveform upper threshold level for a transition search
SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:MATH	Sets or returns the math waveform upper threshold level for a transition search
SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:REF<x>	Sets or returns the reference waveform upper threshold level for a transition search

Status and Error Command Group

Use the commands in the Status and Error Command Group to determine the status of the instrument and control events.

Several commands and queries used with the instrument are common to all devices on the GPIB bus. The IEEE Std 488.2-1987 defines these commands and queries. The common commands begin with an asterisk (*) character.

Table 2-27: Status and Error Commands

Command	Description
ALLEV?	Returns all events and their messages
BUSY?	Returns instrument status
*CLS	Clears status
DESE	Sets or returns the bits in the Device Event Status Enable Register
*ESE	Sets or returns the bits in the Event Status Enable Register
*ESR?	Returns the contents of the Standard Event Status Register
EVENT?	Returns event code from the event queue
EVMsg?	Returns event code, message from the event queue
EVQty?	Return number of events in the event queue
*OPC	Generates the operation complete message in the standard event status register when all pending operations are finished Or returns "1" when all current operations are finished
*PSC	Sets or returns the power on status flag
*PUD	Sets or returns a string of protected user data
*RST	Resets the instrument to factory default settings
*SRE	Sets or returns the bits in the Service Request Enable Register
*STB?	Returns the contents of the Status Byte Register
*WAI	Prevents the instrument from executing further commands until all pending operations finish

Trigger Command Group

Use the commands in the Trigger Command Group to control all aspects of triggering for the instrument.

There are two triggers: A and B. Where appropriate, the command set has parallel constructions for each trigger.

You can set the A or B triggers to edge mode. Edge triggering lets you display a waveform at or near the point where the signal passes through a voltage level of your choosing.

You can also set A triggers to pulse, logic or video modes. With pulse triggering, the instrument triggers whenever it detects a pulse of a certain width or height. Logic triggering lets you logically combine the signals on one or more channels. The instrument then triggers when it detects a certain combination of signal levels. Video triggering enables you to trigger on the most common Standard Definition video standards.

Table 2-28: Trigger Commands

Command	Description
TRIGger	Forces a trigger event to occur
TRIGger:A	Sets A trigger level to 50% or returns current A trigger parameters
TRIGger:A:BUS:B<x>:CAN:CONDition	Sets or returns the CAN condition
TRIGger:A:BUS:B<x>:CAN:DATA:DIRection	Sets or queries the CAN trigger condition to be valid on a READ, WRITE, or either
TRIGger:A:BUS:B<x>:CAN:DATA:QUALifier	Sets or returns the CAN data qualifier
TRIGger:A:BUS:B<x>:CAN:DATA:SIZE	Sets or returns the length of the data string in bytes to be used for CAN trigger
TRIGger:A:BUS:B<x>:CAN:DATA:VALue	Sets or returns the binary data string to be used for CAN trigger
TRIGger:A:BUS:B<x>:CAN:FRAMEtype	Sets or queries the CAN trigger frame type
TRIGger:A:BUS:B<x>:CAN{:IDentifier :ADDRESS}:MODE	Sets or returns the CAN addressing mode
TRIGger:A:BUS:B<x>:CAN{:IDentifier :ADDRESS}:VALue	Sets or queries the binary address string used for the CAN trigger
TRIGger:A:BUS:B<x>:I2C:ADDRESS:MODE	Sets or queries the I2C address mode to 7 or 10-bit
TRIGger:A:BUS:B<x>:I2C:ADDRESS:TYPE	Sets or returns the I2C address type to USER
TRIGger:A:BUS:B<x>:I2C:ADDRESS:VALue	Sets or queries the binary address string used for the I2C trigger
TRIGger:A:BUS:B<x>:I2C:CONDition	Sets or returns the trigger condition for I2C trigger
TRIGger:A:BUS:B<x>:I2C:DATA:DIRection	Sets or queries the I2C trigger condition valid on a READ, WRITE, or either
TRIGger:A:BUS:B<x>:I2C:DATA:SIZE	Sets or returns the length of the data string in bytes to be used for I2C trigger
TRIGger:A:BUS:B<x>:I2C:DATA:VALue	Sets or queries the binary data string used for I2C triggering
TRIGger:A:BUS:B<x>:SPI:CONDition	Sets or queries the trigger condition for SPI triggering
TRIGger:A:BUS:B<x>:SPI:DATA{:IN :MISO}:VALue	Sets or returns the binary data string to be used for SPI trigger
TRIGger:A:BUS:B<x>:SPI:DATA{:OUT :MOSI}:VALue	Sets or queries the binary data string used for the SPI trigger

Table 2-28: Trigger Commands, (cont.)

Command	Description
TRIGger:A:BUS:B<x>:SPI:DATA:SIZE	Sets or returns the length of the data string in bytes to be used for SPI trigger
TRIGger:A:BUS:SOURce	Sets or queries the source for a bus trigger
TRIGger:A:EDGE?	Returns the source, coupling and source for the A edge trigger
TRIGger:A:EDGE:COUPling	Sets or returns the type of coupling for the A edge trigger
TRIGger:A:EDGE:SLOpe	Sets or returns the slope for the A edge trigger
TRIGger:A:EDGE:SOURce	Sets or returns the source for the A edge trigger
TRIGger:A:HOLDoff?	Returns the A trigger holdoff parameters
TRIGger:A:HOLDoff:TIME	Sets or returns the A trigger holdoff time
TRIGger:A:LEVel	Sets or returns the level for the A trigger
TRIGger:A:LEVel:CH<x>	Specifies or returns the input settings for the specified trigger channel
TRIGger:A:LOGic?	Returns all A trigger logic settings
TRIGger:A:LOGic:CLAss	Sets or returns the type of A trigger logic
TRIGger:A:LOGic:FUNcTION	Sets or returns the logical combination of the input channels for the A logic trigger
TRIGger:A:LOGic:INPut?	Returns the logic input values for all channels
TRIGger:A:LOGic:INPut:CH<x>	Specifies or returns the logic setting for the specified channel
TRIGger:A:LOGic:INPut:CLOCK:EDGE	Sets the polarity of the clock channel.
TRIGger:A:LOGic:INPut:CLOCK:SOURce	Sets or returns the channel to use as the clock source
TRIGger:A:LOGic:PATtern?	Returns the conditions for generating an A logic pattern trigger
TRIGger:A:LOGic:PATtern:DELTAtime	Sets or returns the pattern trigger time value
TRIGger:A:LOGic:PATtern:INPut:CH<x>	Specifies or returns the logic setting for the specified channel
TRIGger:A:LOGic:PATtern:WHEn	Sets or returns the condition for generating the A logic pattern trigger
TRIGger:A:LOGic:PATtern:WHEn:LESSLimit	Sets or returns the maximum time that the selected pattern may be true and still generate an A logic pattern trigger
TRIGger:A:LOGic:PATtern:WHEn:MORELimit	Sets or returns the minimum time that the selected pattern may be true and still generate an A logic pattern trigger

Table 2-28: Trigger Commands, (cont.)

Command	Description
TRIGger:A:SETHold?	Returns clock edge polarity, voltage threshold and source; data voltage threshold and source; and setup/hold times for violation triggering
TRIGger:A:SETHold:CLOCK?	Returns clock edge polarity, voltage threshold and source input for setup/hold triggering
TRIGger:A:SETHold:DATA?	Returns the voltage threshold and data source for the setup/hold trigger
TRIGger:A:LOGic:THReshold?	Returns the threshold voltage for all channels in A logic trigger
TRIGger:A:LOGic:THReshold:CH<x>	Sets or returns the A logic trigger threshold voltage for the specified channel
TRIGger:A:LOWerthreshold:CH<x>	Sets or returns the lower threshold for the channel selected
TRIGger:A:MODE	Sets or returns the A trigger mode
TRIGger:A:PULse?	Returns the A pulse trigger parameters
TRIGger:A:PULse:CLAss	Sets or returns the type of pulse on which to trigger
TRIGger:A:RUNT?	Returns the current A runt pulse trigger logic parameters
TRIGger:A{:TRANSition}:RISEFall)?	Returns the delta time, polarity, and both upper and lower threshold limits for the transition time trigger
TRIGger:A:PULSEWIDTH?	Returns the trigger A pulse width parameters
TRIGger:A:PULSEWidth:POLarity	Sets or returns the polarity for the A pulse width trigger
TRIGger:A:PULSEWidth:SOUrce	Sets or returns the source for the pulse width trigger
TRIGger:A:PULSEWidth:WHEn	Sets or returns the criteria for width specification of pulse width trigger events
TRIGger:A:PULSEWidth:WIDth	Sets or returns the width setting for the pulse width trigger
TRIGger:A:RUNT:POLarity	Sets or returns the polarity for the A pulse runt trigger
TRIGger:A:RUNT:SOUrce	Sets or returns the source for the A pulse trigger
TRIGger:A:RUNT:WHEn	Sets or returns the type of pulse width the trigger checks for when it uncovers a runt
TRIGger:A:RUNT:WIDth	Sets or returns the minimum width for A pulse runt trigger
TRIGger:A:SETHold:CLOCK:EDGE	Sets or returns the clock edge polarity for setup and hold triggering

Table 2-28: Trigger Commands, (cont.)

Command	Description
TRIGger:A:SETHold:CLOCK:SOURce	Sets or returns the clock source for the A logic trigger setup and hold input
TRIGger:A:SETHold:CLOCK:THReshold	Sets or returns the clock voltage threshold for setup and hold trigger
TRIGger:A:SETHold:DATA:SOURce	Sets or returns the data source for the setup and hold trigger
TRIGger:A:SETHold:DATA:THReshold	Sets or returns the data voltage threshold for setup and hold trigger
TRIGger:A:SETHold:HOLDTime	Sets or returns the hold time for the setup and hold violation triggering
TRIGger:A:SETHold:SETTime	Sets or returns the setup time for setup and hold violation triggering
TRIGger:A{:TRANSition :RISEFall}:DELTAtime	Sets or returns the delta time used in calculating the transition value
TRIGger:A{:TRANSition :RISEFall}:POLarity	Sets or returns the polarity for the A pulse transition trigger
TRIGger:A{:TRANSition :RISEFall}:SOURce	Sets or returns the source for transition trigger
TRIGger:A{:TRANSition :RISEFall}:WHEN	Sets or returns the relationship of delta time to transitioning signal
TRIGger:A:TYPE	Sets or queries the type of A trigger
TRIGger:A:UPPerthreshold:CH<x>	Sets the upper threshold for the channel selected
TRIGger:A:VIDeo?	Returns the video parameters for the A trigger
TRIGger:A:VIDeo:LINE	Sets or returns the video line number on which the instrument triggers
TRIGger:A:VIDeo:SOURce	Sets or returns the polarity of the video trigger
TRIGger:A:VIDeo:STANdard	Sets or returns the video standard
TRIGger:A:VIDeo{:SYNC :FIELD}	Sets or returns the video field trigger
TRIGger:B	Sets the B trigger level to 50% or returns the B trigger parameters
TRIGger:B:BY	Sets or returns B trigger time or event qualifiers
TRIGger:B:EDGE?	Returns B trigger edge type parameters
TRIGger:B:EDGE:COUPling	Sets or returns the type of B trigger coupling
TRIGger:B:EDGE:SLOpe	Sets or returns the B edge trigger slope
TRIGger:B:EDGE:SOURce	Sets or returns the B edge trigger source
TRIGger:B:EVENTS?	Returns the current B trigger events parameter

Table 2-28: Trigger Commands, (cont.)

Command	Description
TRIGger:B:EVENTS:COUNT	Sets or returns the number of events that must occur before the B trigger occurs
TRIGger:B:LEVel	Sets or returns the level for the B trigger
TRIGger:B:LEVel:CH<x>	Sets or returns the level for the B trigger for a specific channel
TRIGger:B:LOWerthreshold:CH<x>	Sets or returns the B trigger lower threshold for the channel selected
TRIGger:B:STATE	Returns the current state of the B trigger
TRIGger:B:TIME	Sets or returns the B trigger delay time
TRIGger:B:TYPe	Sets or returns the type of B trigger
TRIGger:B:UPPerthreshold:CH<x>	Sets or returns the B trigger upper threshold for the channel selected
TRIGger:EXTerナル?	Returns all external trigger parameters
TRIGger:EXTerナル:PRObe	Sets or returns the attenuation factor value of the external probe connector
TRIGger:EXTerナル:YUNIts?	Returns the external trigger vertical (Y) units value
TRIGger:STATE?	Returns the current state of the triggering system
TRIGger:A:VIDeo:LINE	Sets or returns the video line number on which the instrument triggers

Vertical Command Group

Use the commands in the Vertical Command Group to control the vertical setup of all live (channel) waveforms for acquisition and to control the display of channel, reference, and math waveforms.

Table 2-29: Vertical Commands

Command	Description
AUXIn?	Returns all auxiliary input parameters
AUXIn:PRObe:AUTOZero	Sets the TekVPI probe attached to the auxiliary input to autozero
AUXIn:PRObe:DEGAUss	Starts a degauss/autozero cycle on a TekVPI current probe attached to the auxiliary input
AUXIn:PRObe:DEGAUss:STATE?	Returns the degauss state of the TekVPI current probe attached to the auxiliary input
AUXIn:PRObe:FORCEDRange	Sets or returns the range of the TekVPI probe attached to the auxiliary input

Table 2-29: Vertical Commands, (cont.)

Command	Description
AUXIn:PRObe:GAIN	Sets or returns the gain factor of the probe that is attached to the auxiliary input
AUXIn:PRObe:ID:SERnumber?	Returns the serial number of the probe that is attached to the auxiliary input
AUXIn:PRObe:ID:TYPE?	Returns the type of probe that is attached to the auxiliary input
AUXIn:PRObe:RESistance?	Returns the resistance of the probe that is attached to the auxiliary input
AUXIn:PRObe:UNIts?	Returns the units of measure of the probe that is attached to the auxiliary input
CH<x>?	Returns vertical parameters for the specified channel
CH<x>:BANdwidth	Sets or returns the bandwidth of the specified channel
CH<x>:COUPling	Sets or returns the coupling setting for the specified channel
CH<x>:DESKew	Sets or returns the deskew time for the specified channel
CH<x>:INVert	Sets or returns the invert function for the specified channel
CH<x>:OFFSet	Sets or returns the channel offset
CH<x>:POSition	Sets or returns the channel vertical position
CH<x>:PRObe?	Returns the gain, resistance, units, and ID of the probe that is attached to the specified channel
CH<x>:PRObe:AUTOZero	Sets the TekVPI probe attached to the specified channel input to autozero
CH<x>:PRObe:DEGAUss	Starts a degauss/autozero cycle on a TekVPI current probe attached to the specified channel input
CH<x>:PRObe:DEGAUss:STATE?	Returns the state of the probe degauss
CH<x>:PRObe:FORCEDRange	Sets or returns the range on a TekVPI probe attached to the specified channel
CH<x>:PRObe:GAIN	Sets or returns the gain factor of the probe that is attached to the specified channel
CH<x>:PRObe:ID?	Returns the type and serial number of the probe that is attached to the specified channel
CH<x>:PRObe:ID:SERnumber?	Returns the serial number of the probe that is attached to the specified channel
CH<x>:PRObe:ID:TYPE?	Returns the type of probe that is attached to the specified channel

Table 2-29: Vertical Commands, (cont.)

Command	Description
CH<x>:PRObe:RESistance?	Returns the resistance of the probe that is attached to the specified channel
CH<x>:PRObe:UNIts?	Returns the units of measure of the probe that is attached to the specified channel
CH<x>:SCAlE	Sets or returns the vertical scale of the specified channel
CH<x>:TERmination	Sets or returns channel input termination
CH<x>:YUNits	Sets or returns the units for the specified channel to a custom string
REF<x>:DATE?	Returns the date that a reference waveform was stored
REF<x>:HORizontal:DELay:TIME	Sets or returns the horizontal position of the specified reference waveform in percent of the waveform that is displayed to the right of the center vertical graticule
REF<x>:HORizontal:SCAlE	Sets or returns the horizontal scale for a reference waveform
REF<x>:LABel	Sets or returns the specified reference waveform label
REF<x>:TIME?	Returns the time that a reference waveform was stored
REF<x>:VERTical:POSition	Sets or returns the vertical position of the specified reference waveform
REF<x>:VERTical:SCAlE	Sets or returns the reference waveform vertical scale in vertical units/div
SElect?	Returns information on which waveforms are on or off and which waveform is selected.
SElect:BUS<x>	Turns on or off the specified bus waveform Or returns whether the specified bus channel is on or off
SElect:CH<x>	Turns on or off the specified waveform Or returns whether the specified channel is on or off
SElect:CONTROI	Sets or returns the waveform that is selected as the implied recipient of channel-related commands

Table 2-29: Vertical Commands, (cont.)

Command	Description
<code>SElect:MATH[1]</code>	Turns on or off the math waveform Or returns whether the math waveform is on or off
<code>SElect:REF<x></code>	Turns on or off the specified reference waveform Or returns whether the specified reference waveform is on or off

Waveform Transfer Command Group

Use the commands in the Waveform Transfer Command Group to transfer waveform data points to and from the instrument. Waveform data points are a collection of values that define a waveform. One data value usually represents one data point in the waveform record. When working with envelope waveforms, each data value is either the minimum or maximum of a min/max pair.

Before you transfer waveform data, you must specify the data format, record length, and waveform source or destination.

Data Formats

Acquired waveform data uses eight or more bits to represent each data point. The number of bits used depends on the acquisition mode specified when you acquired the data. Data acquired in `SAMple`, `PEAKdetect`, or `ENVELOpe` mode uses eight bits per waveform data point. Data acquired in `AVERage` or `HIREs` mode uses up to 14 bits per point.

The `DATA:WIDTH` command lets you specify the number of bytes per data point when transferring data to and from the oscilloscope. If you specify two bytes for data, the acquired waveform data is left-shifted to be left-justified in the 16-bit (2 byte) data quantity. If you specify one byte for data, the least significant bit(s) are ignored.

The instrument can transfer waveform data in either ASCII or binary format. You specify the format with the `DATA:ENCdg` command. The instrument uses signed, 4 byte integers and floating point values; it does not support unsigned floating point values.

ASCII Data. ASCII data is represented by signed integer values. The range of the values depends on the byte width specified. One byte wide data ranges from -128 to 127. Two byte wide data ranges from -32768 to 32767.

Each data value requires two to seven characters. This includes one to five characters to represent the value, another character, if the value is negative, to represent a minus sign, and a comma to separate the data points.

An example ASCII waveform data string may look like this:

CURVE<space>-110, -109, -110, -110, -109, -107, -109, -107, -106, -105, -103, -100, -97, -90, -84, -80

Use ASCII to obtain more readable and easier to format output than binary. However, the oscilloscope may require more bytes to send the same values with ASCII than it does with binary. This may reduce transmission speeds.

Binary Data. Binary data is represented by signed integer or positive integer values. The range of the values depends on the byte width specified. When the byte width is one, signed integer data ranges from -128 to 127, and positive integer values range from 0 to 255. When the byte width is two, the values range from -32768 to 32767. and positive integer values range from 0 to 65,535.

Table 2-30: Binary data ranges

Byte width	Signed integer range	Positive integer range
1	-128 to 127	0 to 255
2	32,768 to 32,767	0 to 65,535

The defined binary formats also specify the order in which the bytes are transferred. The four binary formats are RIBinary, RPBinary, SRIBinary, and SRPBinary.

RIBinary is signed integer where the most significant byte is transferred first, and RPBinary is positive integer where the most significant byte is transferred first. SRIBinary and SRPBinary correspond to RIBinary and RPBinary respectively but use a swapped byte order where the least significant byte is transferred first. The byte order is ignored when DATA:WIDTH is set to 1.

Waveform Data and Record Lengths

You can transfer multiple points for each waveform record. You can transfer a portion of the waveform or you can transfer the entire record. You can use the DATA:START and DATA:STOP commands to specify the first and last data points of the waveform record.

When transferring data into the instrument, you must first specify the record length of the destination waveform record. You do this with the WFMInpre:NR_Pt command. Next, specify the first data point within the waveform record. For example, when you set DATA:START to 1, data points will be stored starting with the first point in the record. The instrument will ignore the value set by DATA:STOP when reading in data. It will stop reading data when there is no more data to read or when it has reached the specified record length.

When transferring data from the instrument, you must specify the first and last data points in the waveform record. Setting DATA:START to 1 and DATA:STOP to the record length will always return the entire waveform.

Waveform Data Locations and Memory Allocation	<p>The DATA:SOURce command specifies the waveform source when transferring a waveform from the instrument. You can only transfer one waveform at a time. Waveforms sent to the instrument are always stored in one of the reference memory locations. Use the DATA:DESTination command to specify a reference memory location.</p>
Waveform Preamble	<p>Each waveform that you transfer has an associated waveform preamble that contains information such as the horizontal scale, the vertical scale, and other settings in effect when the waveform was created. Refer to the individual WFMInpre and WFMOutpre commands for more information.</p>
Scaling Waveform Data	<p>Once you transfer the waveform data to the controller, you can convert the data points into voltage values for analysis using information from the waveform preamble.</p>
Transferring Waveform Data from the Instrument	<p>You can transfer waveforms from the instrument to an external controller using the following sequence:</p> <ol style="list-style-type: none">1. Select the waveform source(s) using DATA:SOURce.2. Specify the waveform data format using DATA:ENCdg.3. Specify the number of bytes per data point using WFMOutpre:BYT_Nr.4. Specify the portion of the waveform that you want to transfer using DATA:STARt and DATA:STOP.5. Transfer waveform preamble information using the WFMOutpre? query.6. Transfer waveform data from the instrument using the CURVe? query.
Transferring Waveform Data to the Instrument	<ol style="list-style-type: none">1. Specify the reference waveform using DATA:DESTination.2. Specify the record length of the reference waveform using WFMPre:NR_Pt.3. Specify the waveform data format using WFMInpre:ENCdg.4. Specify the number of bytes per data point using WFMInpre:BYT_Nr.5. Specify first data point in the waveform record using DATA:STARt.6. Transfer waveform preamble information using WFMInpre.7. Transfer waveform data to the oscilloscope using CURVe.

Table 2-31: Waveform Transfer Commands

Command	Description
CURVe	The command format transfers waveform data to the instrument (reference waveform specified by DATA:DESTination) The query format transfers waveform data from instrument specified by the DATA:SOURce command
DATA	Sets the format and location of the waveform data that is transferred with the CURVe Command Or returns the format and location of the waveform data that is transferred with the CURVe? command
DATA:DESTination	Sets or returns the reference waveform for storing waveform data sent to the instrument
DATA:ENCdg	Sets or returns the format of outgoing waveform data
DATA:SOURce	Sets or returns the location of waveform data transferred from the instrument
DATA:START	Sets or returns the starting point in waveform transfer
DATA:STOP	Sets or returns the ending data point in waveform transfer
DATA:WIDTH	Sets or returns the byte width of waveform points
WAVFrm?	Returns a branch query containing waveform data in either binary or ASCII format, waveform formatting data, and the location of the waveform data source
WFMInpre?	Returns the waveform formatting specification to be applied to the next incoming CURVE command data
WFMInpre:BIT_Nr	Sets or returns the number of bits per binary waveform point for the incoming waveform
WFMInpre:BN_Fmt	Sets or returns the format of binary data for the incoming waveform
WFMInpre:BYT_Nr	Sets or returns the data width for the incoming waveform
WFMInpre:BYT_Or	Sets or returns the byte order of waveform points for the incoming waveform
WFMInpre:ENCdg	Sets or returns the type of encoding for incoming waveform data
WFMInpre:NR_Pt	Sets or returns the number of points in the incoming waveform record

Table 2-31: Waveform Transfer Commands, (cont.)

Command	Description
WFMinpre:PT_Fmt	Sets or returns the point format of incoming waveform data
WFMinpre:PT_Off	Included for backwards compatibility
WFMinpre:WFId	Set is ignored. No query form. Included for backwards compatibility
WFMinpre:XINcr	Sets or returns the horizontal sampling interval between incoming waveform points
WFMinpre:XUNit	Sets or returns the horizontal units of the incoming waveform
WFMinpre:XZEro	Sets or returns the time of the first point in the incoming waveform
WFMinpre:YMUit	Sets or returns the vertical scale factor, per digitizing level, of the incoming waveform points
WFMinpre:YOFF	Sets or returns the vertical position of the incoming waveform in digitizing levels
WFMinpre:YUNit	Sets or returns the vertical units of the incoming waveform
WFMinpre:YZEro	Sets or returns the vertical offset of the incoming waveform
WFMOutpre?	Returns the waveform formatting data for the waveform specified by the DATA:SOURCE command
WFMOutpre:BIT_Nr	Sets or returns the number of bits per waveform point that outgoing waveforms contain
WFMOutpre:BN_Fmt	Sets or returns the format of binary data for the outgoing waveform
WFMOutpre:BYT_Nr	Sets or returns the data width for the outgoing waveform
WFMOutpre:BYT_Or	Sets or returns the byte order of waveform points for the outgoing waveform
WFMOutpre:ENCdg	Sets or returns the type of encoding for outgoing waveforms
WFMOutpre:NR_Pt?	Returns the number of points for the waveform transmitted in response to a CURVe? query
WFMOutpre:PT_Fmt?	Returns the point format for the outgoing waveform
WFMOutpre:PT_Off?	Returns zero. Included for backwards compatibility

Table 2-31: Waveform Transfer Commands, (cont.)

Command	Description
WFMOutpre:PT_ORDER?	Always returns LINEAr. Included for backwards compatibility
WFMOutpre:WFId?	Returns a string describing the acquisition parameters for the outgoing waveform
WFMOutpre:XINcr?	Returns the horizontal sampling interval for the outgoing waveform
WFMOutpre:XUNit?	Returns the horizontal units for the outgoing waveform
WFMOutpre:XZEro?	Returns the time of the first point in the outgoing waveform
WFMOutpre:YMUIt?	Returns the vertical scale factor per digitizing level for the outgoing waveform
WFMOutpre:YOFf?	Returns the vertical position in digitizing levels for the outgoing waveform
WFMOutpre:YUNit?	Returns the vertical units for the outgoing waveform
WFMOutpre:YZEro?	Returns the vertical offset for the outgoing waveform

Zoom Command Group

Use the commands in the Zoom Command Group to expand and position the waveform display horizontally and vertically, without changing the time base or vertical settings.

Table 2-32: Zoom Commands

Command	Description
ZOOm?	Returns the current vertical and horizontal positioning and scaling of the display
ZOOm:GRAticule:SIZE?	Sets or returns the size of the zoom graticule
ZOOm:GRAticule:SPLit?	Sets or returns the sizes of the acquisition and zoom windows when Zoom is selected.
ZOOm{:MODE :STATE}	Sets or returns the zoom mode
ZOOm:ZOOM<x>?	Returns the current vertical and horizontal positioning and scaling of the display
ZOOm:ZOOM<x>:FACtor?	Returns the zoom factor of a particular zoom box
ZOOm:ZOOM<x>:HORizontal:POSition	Sets or returns the horizontal zoom position for the specified waveform in the specified zoom

Table 2-32: Zoom Commands, (cont.)

Command	Description
ZOOm:ZOOM<x>:HORizontal:SCAle	Sets or returns the horizontal zoom scale of the specified waveform in the specified zoom
ZOOm:ZOOM<x>:POSition	Sets or returns the horizontal zoom position for the specified waveform in the specified zoom
ZOOm:ZOOM<x>:SCAle	Sets or returns the horizontal zoom scale of the specified waveform in the specified zoom
ZOOm:ZOOM<x>:STATE	Specifies or returns a trace as zoomed, on or off

Commands Listed in Alphabetical Order

ACQUIRE? (Query Only)

Returns the following current acquisition parameters:

- Stop after
- Acquisition state
- Mode
- Number of averages
- Sampling mode

Group Acquisition

Syntax ACQUIRE?

Related Commands [ACQUIRE:MODE](#), [ACQUIRE:NUMACQ?](#), [ACQUIRE:NUMAVG](#),
[ACQUIRE:STOPAFTER](#)

ACQUIRE:MAXSAMPLERATE? (Query Only)

Returns the maximum real-time sample rate which varies from model to model.

Group Acquisition

Syntax ACQUIRE:MAXSAMPLERATE?

Examples ACQUIRE:MAXSAMPLERATE? might return 2.5000E+9 in a DPO4034 indicating the maximum real-time sample rate is 2.5GS/s.

ACQUIRE:MODE

Sets or returns the acquisition mode of the instrument. This affects all live waveforms. This command is equivalent to pushing **Acquire** from the front panel, **Mode** from the lower-bezel menu, and then choosing the desired mode from the side-bezel menu.

Waveforms are the displayed data point values taken from acquisition intervals. Each acquisition interval represents a time duration set by the horizontal scale

(time per division). The instrument sampling system always samples at the maximum rate and so an acquisition interval may include more than one sample.

The acquisition mode (which you set using this ACQUIRE:MODE command) determines how the final value of the acquisition interval is generated from the many data samples.

Group Acquisition

Syntax ACQUIRE:MODE {SAMPLE|PEAKdetect|HIRES|AVERAGE|ENVELOPE}
ACQUIRE:MODE?

Related Commands [ACQUIRE:NUMAVg](#), [CURVe](#)

Arguments **SAMPLE** specifies that the displayed data point value is the first sampled value that is taken during the acquisition interval. In sample mode, all waveform data has 8 bits of precision. You can request 16 bit data with a [CURVe](#) query but the lower-order 8 bits of data will be zero. **SAMPLE** is the default mode.

PEAKdetect specifies the display of high-low range of the samples taken from a single waveform acquisition. The high-low range is displayed as a vertical column that extends from the highest to the lowest value sampled during the acquisition interval. **PEAKdetect** mode can reveal the presence of aliasing or narrow spikes.

HIRES specifies Hi Res mode where the displayed data point value is the average of all the samples taken during the acquisition interval. This is a form of averaging, where the average comes from a single waveform acquisition. The number of samples taken during the acquisition interval determines the number of data values that compose the average.

AVERAGE specifies averaging mode, in which the resulting waveform shows an average of **SAMPLE** data points from several separate waveform acquisitions. The instrument processes the number of waveforms you specify into the acquired waveform, creating a running exponential average of the input signal. The number of waveform acquisitions that go into making up the average waveform is set or queried using the [ACQUIRE:NUMAVg](#) command.

ENVELOPE specifies envelope mode, where the resulting waveform shows the **PEAKdetect** range of data points from every waveform acquisition.

Examples **ACQUIRE:MODE ENVELOPE** sets the acquisition mode to display a waveform that is an envelope of many individual waveform acquisitions.

ACQUIRE:MODE? might return **ACQUIRE:MODE AVERAGE** indicating that the displayed waveform is the average of the specified number of waveform acquisitions.

ACQUIRE:NUMACQ? (Query Only)

Returns the number of waveform acquisitions that have occurred since starting acquisition with the ACQUIRE:STATE RUN command. This value is reset to zero when any acquisition, horizontal, or vertical arguments that affect the waveform are changed. The maximum number of acquisitions that can be counted is $2^{32}-1$. The instrument stops counting when this number is reached.

Group Acquisition

Syntax ACQUIRE:NUMACQ?

Related Commands [ACQUIRE:STATE](#)

Examples ACQUIRE:NUMACQ? might return :ACQUIRE:NUMACQ 350 indicating that 350 acquisitions have occurred since executing an ACQUIRE:STATE RUN command.

ACQUIRE:NUMAVG

Sets or returns the number of waveform acquisitions that make up an averaged waveform. Use the ACQUIRE:MODE command to enable the Average mode. Sending this command is equivalent to turning a multipurpose knob to enter the number of waveform acquisitions to average.

Group Acquisition

Syntax ACQUIRE:NUMAVG <NR1>
ACQUIRE:NUMAVG?

Related Commands [ACQUIRE:MODE](#)

Arguments NR1 is the number of waveform acquisitions to average. The range of values is from 2 to 128 in powers of two.

Examples ACQUIRE:NUMAVG 16 specifies that 16 waveform averages will be performed before exponential averaging starts.

ACQUIRE:NUMAVG? might return :ACQUIRE:NUMAVG 64 indicating that there are 64 acquisitions specified for averaging.

ACQuire:STATE

Starts or stops acquisitions. When state is set to ON or RUN, a new acquisition will be started. If the last acquisition was a single acquisition sequence, a new single sequence acquisition will be started. If the last acquisition was continuous, a new continuous acquisition will be started.

If RUN is issued in the middle of completing a single sequence acquisition (for example, averaging or enveloping), the acquisition sequence is restarted, and any accumulated data is discarded. Also, the instrument resets the number of acquisitions. If the RUN argument is issued while in continuous mode, acquisition continues.

Sending this command is equivalent to pressing the front-panel **Run/Stop** button.

Group Acquisition

Syntax ACQuire:STATE {OFF|ON|RUN|STOP|<NR1>}
ACQuire:STATE?

Related Commands [ACQuire:STOPAfter](#)

Arguments OFF stops acquisitions.
STOP stops acquisitions.
ON starts acquisitions.
RUN starts acquisitions.
NR1 = 0 stops acquisitions; any other value starts acquisitions.

Examples ACQUIRE:STATE RUN starts the acquisition of waveform data and resets the count of the number of acquisitions.

ACQUIRE:STATE? might return:ACQUIRE:STATE 0 indicating that the acquisition is stopped.

ACQuire:STOPAfter

Sets or returns whether the instrument continually acquires acquisitions or acquires a single sequence. This command is equivalent to pressing **Single** from the front panel.

Group Acquisition

Syntax ACQUIRE:STOPAfter {RUNSTOP|SEQUENCE}
ACQUIRE:STOPAfter?

Related Commands [ACQUIRE:STATE](#)

Arguments RUNSTOP specifies that the instrument will continually acquire data, if ACQUIRE:STATE is turned on.
SEQUENCE specifies that the next acquisition will be a single-sequence acquisition.

Examples ACQUIRE:STOPAFTER RUNSTOP sets the instrument to continually acquire data.
ACQUIRE:STOPAFTER? might return:ACQUIRE:STOPAFTER SEQUENCE indicating that the next acquisition the instrument makes will be of the single-sequence type.

ALias

Sets or returns the state of alias functionality.

Use Alias commands to define new commands as a sequence of standard commands. You may find this useful when repeatedly using the same commands to perform certain tasks like setting up measurements. Aliases are similar to macros but do not include the capability to substitute parameters into alias bodies.

To use Alias commands, first define the alias, then turn on the alias state.

Group Alias

Syntax ALIAS {OFF|ON|<NR1>}
ALIAS?

Related Commands [ALIAS:DEFine](#)
[ALIAS\[:STATE\]](#)

Arguments OFF turns alias expansion off. If a defined alias is sent when ALIAS is off, a command error (110) will be generated.
ON turns alias expansion on. When a defined alias is received, the specified command sequence is substituted for the alias and executed.

NR1=0 disables alias mode; any other value enables alias mode.

Examples ALIAS ON turns the alias feature on. When a defined alias is received, the specified command sequence is substituted for the alias and executed.

ALIAS? might return :ALIAS 1 indicating that the alias feature is on.

ALias:CATalog? (Query Only)

Returns a list of the currently defined alias labels, separated by commas. If no aliases are defined, the query returns the string "".

Group Alias

Syntax ALIAs:CATa log?

Examples ALIAS:CATALOG? might return the string :ALIAS:CATALOG "SETUP1", "TESTMENU1", "DEFAULT" showing that there are three aliases named SETUP1, TESTMENU1, and DEFAULT.

ALias:DEFine

Assigns a sequence of program messages to an alias label. These messages are then substituted for the alias whenever it is received as a command or query, provided that ALias:STATE has been turned on. The query form of this command returns the definitions of a selected alias.

NOTE. *Attempting to give two aliases the same name causes an error. To give a new alias the name of an existing alias, the existing alias must first be deleted.*

Group Alias

Syntax ALIAs:DEFine <QString><,>{<QString>|<Block>}
ALIAs:DEFine? <QString>

Related Commands [ALias\[:STATE\]](#)

Arguments The first <QString> is the alias label.

This label cannot be a command name. Labels must start with a letter and can contain only letters, numbers, and underscores; other characters are not allowed. The label must be less than or equal to 12 characters.

The second <QString> or <Block> is a complete sequence of program messages.

The messages can contain only valid commands that must be separated by semicolons and must follow all rules for concatenating commands. The sequence must be less than or equal to 256 characters.

Examples ALIAS:DEFINE "ST1",":RECALL:SETUP 5;:AUTOSET EXECUTE;:SELECT:CH1 ON" defines an alias named "ST1" that sets up the instrument.

ALIAS:DEFINE? "ST1" returns :ALIAS:DEFINE "ST1",#246 :RECALL:SETUP 5;:AUTOSET EXECUTE;:SELECT:CH1 ON

ALias:DELEte (No Query Form)

Removes a specified alias and is identical to ALias:DELEte:NAME. An error message is generated if the named alias does not exist.

Group Alias

Syntax ALIas:DELEte <QString>

Related Commands [*ESR?](#), [ALIAS:DELEte:ALL](#)

Arguments <QString> is the name of the alias to be removed. Using ALIas:DELEte without specifying an alias causes an execution error. <QString> must be a previously defined value.

Examples ALIAS:DELETE "SETUP1" deletes the alias named SETUP1.

ALias:DELEte:ALL (No Query Form)

Deletes all existing aliases.

Group Alias

Syntax ALIAS:DELETE:ALL

Related Commands [ALIAS:DELETE](#), [ALIAS:DELETE\[:NAME\]](#)

Examples ALIAS:DELETE:ALL deletes all existing aliases.

ALIAS:DELETE[:NAME] (No Query Form)

Removes a specified alias. This command is identical to [ALIAS:DELETE](#)

Group Alias

Syntax ALIAS:DELETE[:NAME] <QString>

Arguments <QString> is the name of the alias to remove. Using ALIAS:DELETE[:NAME] without specifying an alias causes an execution error. <QString> must be an existing alias.

Examples ALIAS:DELETE[:NAME] "STARTUP" deletes the alias named STARTUP.

ALIAS[:STATE]

Turns aliases on or off. This command is identical to the [ALIAS](#) command.

Group Alias

Syntax ALIAS[:STATE] {<NR1>|OFF|ON}
ALIAS[:STATE]?

Arguments OFF or <NR1> = 0 turns alias expansion off. If a defined alias is sent when ALIAS:STATE is OFF, a command error (102) is generated.

ON or <NR1> ≠ 0 turns alias expansion on. When a defined alias is received, the specified command sequence is substituted for the alias and executed.

Examples ALIAS[:STATE] OFF turns the command alias feature off.

ALIAS[:STATE]? returns 0 when the alias feature is off.

ALLEV? (Query Only)

Prompts the instrument to return all events and their messages (delimited by commas), and removes the returned events from the Event Queue. Use the *ESR? query to enable the events to be returned. This command is similar to repeatedly sending *EVMsg? queries to the instrument.

Group Status and Error

Syntax ALLEV?

Related Commands [*ESR?](#), [EVMsg?](#)

Examples ALLEV? might return :ALLEV 2225,"Measurement error, No waveform to measure; "420,"Query UNTERMINATED;"

AUTOSet (No Query Form)

Sets the vertical, horizontal, and trigger controls of the instrument to automatically acquire and display the selected waveform. This is equivalent to pressing the front-panel **Autoset** button.

Group Miscellaneous

Syntax AUTOSet {EXECute|UNDO}

Arguments EXECute autosets the displayed waveform. This is equivalent to pressing the front-panel **Autoset** button.

UNDO restores the oscilloscope settings to those present prior to the autoset execution.

Examples AUTOSet EXECUTE vertical, horizontal, and trigger controls of the instrument to automatically acquire and display the selected waveform.

AUXIn? (Query Only)

Returns all auxiliary input parameters.

Group Vertical

Syntax AUXIn?

AUXIn:PRObe:AUTOZero (No Query Form)

Sets the TekVPI probe attached to the Aux In input to autozero. The oscilloscope will ignore this command if the auxiliary input didn't have a TekVPI probe connected to it.

Group Vertical

Syntax AUXIn:PRObe:AUTOZero {EXECute}

Arguments EXECute sets the probe to autozero.

Examples AUXIN:PROBE:AUTOZERO EXECUTE

AUXIn:PRObe:DEGAUss (No Query Form)

Starts a degauss/autozero cycle on a TekVPI current probe attached to the Aux In input. If you send this command to a probe which doesn't support this function, it is ignored

Group Vertical

Syntax AUXIn:PRObe:DEGAUss EXECute

Arguments EXECute starts a probe degauss cycle.

Examples AUXIN:PROBE:DEGAUSS EXECUTE degausses the probe attached to the Aux In input.

AUXIn:PRObe:DEGAUss:STATE? (Query Only)

Returns the state of the probe degauss (NEEDED, RECOMMENDED, PASSED, FAILED, RUNNING). The command will return PASSED for probes that do not support degauss operations.

Group Vertical

Syntax AUXIn:PRObe:DEGAUss:STATE?

Examples AUXIN:PROBE:DEGAUSS:STATE? might return:
AUXIN:PROBE:DEGAUSS:STATE PASSED indicating that the probe has been degaussed.

AUXIn:PRObe:FORCEDRange

Changes or returns the range on a TekVPI probe attached to the Aux In input.

Group Vertical

Syntax AUXIn:PRObe:FORCEDRange <NR3>
AUXIn:PRObe:FORCEDRange?

AUXIn:PRObe:GAIN

Sets or returns the gain factor of the probe that is attached to the Aux In input.

Group Vertical

Syntax AUXIn:PRObe:GAIN <NR3>
AUXIn:PRObe:GAIN?

Examples AUXIN:PROBE:GAIN? might return :AUXIN:PROBE:GAIN 100.0000E-3 indicating that the attached 10x probe delivers 0.1 V to the Aux In BNC for every 1.0 V applied to the probe input.

AUXIn:PRObe:ID:SERnumber? (Query Only)

Returns the serial number of the probe that is attached to the auxiliary input.

Group Vertical

Syntax AUXIn:PRObe:ID:SERnumber?

AUXIn:PRObe:ID:TYPE? (Query Only)

Returns the type of probe that is attached to the auxiliary input.

Group Vertical

Syntax AUXIn:PRObe:ID:TYPE?

AUXIn:PRObe:RESistance? (Query Only)

Returns the resistance of the probe that is attached to the Aux In input.

Group Vertical

Syntax AUXIn:PRObe:RESistance?

Examples AUXIN:PROBE:RESISTANCE? might return :AUXIN:PROBE:RESISTANCE 1.0000E+6 indicating that the input resistance of the probe attached to the Aux In input is 1 MΩ.

AUXIn:PRObe:UNIts? (Query Only)

Returns a string describing the units of measure of the probe attached to the Aux In input.

Group Vertical

Syntax AUXIn:PRObe:UNIts?

Examples AUXIN:PROBE:UNITS? might return: :AUXIN:PROBE:UNITS "V" indicating that the units of measure for the attached probe are volts.

AUXOut? (Query Only)

Returns the auxiliary output setup.

Group Miscellaneous

Syntax AUXOut?

Examples AUXOUT? might return :AUXOUT:SOURCE ATRIGGER;EDGE RISING indicating that the source at the BNC connector is set to the A trigger and the polarity is set to the rising edge of the trigger output signal.

BUS

Sets or returns the parameters for each bus. These parameters either affect Serial Trigger Setup, or affect the Bus Display.

Conditions This command requires a DPO4AUTO or DPO4EMBD application module.

Group Bus

Syntax BUS

BUS:B<x>:CAN:BITRate

Sets or returns the bit rate for the CAN bus.

Conditions This command requires a DPO4AUTO application module.

Group Bus

Syntax BUS:B<x>:CAN:BITRate
 {RATE10K | RATE20K | RATE33K | RATE50K | RATE62K | RATE83K | RATE100K |
 RATE125K | RATE250K | RATE500K | RATE800K | RATE1M}
 BUS:B<x>:CAN:BITRate?

Arguments RATE10K sets the bit rate to 10 kbps.

RATE20K sets the bit rate to 20 kbps.

RATE33K sets the bit rate to 33 kbps.

RATE50K sets the bit rate to 50 kbps.

RATE62K sets the bit rate to 62 kbps.

RATE83K sets the bit rate to 83 kbps.

RATE100K sets the bit rate to 100 kbps.

RATE125K sets the bit rate to 125 kbps.

RATE250K sets the bit rate to 250 kbps.

RATE500K sets the bit rate to 500 kbps.

RATE800K sets the bit rate to 800 kbps.

RATE1M sets the bit rate to 1 Mbps.

BUS:B<x>:CAN:PRObe

Sets or returns the probing method used to probe the CAN bus.

Conditions This command requires a DPO4AUTO application module.

Group Bus

Syntax `BUS:B<x>:CAN:PRObe {CANH|CANL|RX|TX|DIFFerential}`
`BUS:B<x>:CAN:PRObe?`

Arguments CANH specifies the single-ended CANH signal, as specified by the CAN standard.
CANL specifies the single-ended CANL signal, as specified by the CAN standard.
RX specifies the receive signal on the bus side of the CAN transceiver.
TX specifies the transmit signal.
DIFFerential specifies the differential CAN signal.

BUS:B<x>:CAN:SAMPLEpoint

Sets or returns the sample point (in %) to sample during each bit period.

Conditions This command requires a DPO4AUTO application module.

Group Bus

Syntax BUS:B<x>:CAN:SAMPLEpoint <NR3>
BUS:B<x>:CAN:SAMPLEpoint?

Arguments <NR3> is the sample point in percent.

BUS:B<x>:CAN:SOURce

Sets or returns the CAN data source.

Conditions This command requires a DPO4AUTO application module.

Group Bus

Syntax BUS:B<x>:CAN:SOURce {CH1|CH2|CH3|CH4}
BUS:B<x>:CAN:SOURce?

Arguments CH<x> is the channel to use as the data source.

BUS:B<x>:DISPLAY:FORMAT

Sets the display format for the numerical information in the bus waveform.

Conditions This command requires a DPO4AUTO or DPO4EMBD application module.

Group Bus

Syntax BUS:B<x>:DISPLAY:FORMAT {BINary|HEXadecimal}
BUS:B<x>:DISPLAY:FORMAT?

Arguments BINary specifies a binary data display.
HEXadecimal specifies a hexadecimal data display.

BUS:B<x>:DISPLAY:TYPE

Sets the display type for the bus. The bus can be set up to display the protocol information, the logic waveforms that comprise the bus, or both.

Conditions This command requires a DPO4AUTO or DPO4EMBD application module.

Group Bus

Syntax BUS:B<x>:DISPLAY:TYPE {BUS|WAVEFORMS|BOTH}
 BUS:B<x>:DISPLAY:TYPE?

Arguments BUS specifies to display the bus waveforms only.
 WAVEFORMS specifies to display the logic waveforms only.
 BOTH specifies to display both the bus and logic waveforms.

BUS:B<x>:I2C{:CLOCK|:SCLK}:SOURCE

Sets or returns the I2C SCLK source.

Conditions This command requires a DPO4EMBD application module.

Group Bus

Syntax BUS:B<x>:I2C{:CLOCK|:SCLK}:SOURCE {CH1|CH2|CH3|CH4}
 BUS:B<x>:I2C{:CLOCK|:SCLK}:SOURCE?

Arguments CH<x> is the channel to use as the I2C SCLK source.

BUS:B<x>:I2C{:DATA|:SDATA}:SOURCE

Sets or returns the I2C SDATA source.

Conditions This command requires a DPO4EMBD application module.

Group Bus

Syntax `BUS:B<x>:I2C{:DATA|:SDATA}:SOURCE {CH1|CH2|CH3|CH4}`
`BUS:B<x>:I2C{:DATA|:SDATA}:SOURCE?`

Arguments CH<x> is the channel to use as the I2C SDATA source.

BUS:B<x>:POSITION

Sets or returns the position of the bus waveform.

Conditions This command requires a DPO4AUTO or DPO4EMBD application module.

Group Bus

Syntax `BUS:B<x>:POSITION <NR3>`
`BUS:B<x>:POSITION?`

Arguments <NR3> specifies the position.

BUS:B<x>:SPI{:CLOCK|:SCLK}:POLARITY

Sets or returns the SPI SCLK polarity.

Conditions This command requires a DPO4EMBD application module.

Group Bus

Syntax `BUS:B<x>:SPI{:CLOCK|:SCLK}:POLARITY {FALL|RISe}`
`BUS:B<x>:SPI{:CLOCK|:SCLK}:POLARITY?`

Arguments FALL specifies the falling edge.
 RISe specifies the rising edge.

BUS:B<x>:SPI{:CLOCK|:SCLK}:SOURCE

Sets or returns the SPI SCLK source.

Conditions This command requires a DPO4EMBD application module.

Group Bus

Syntax BUS:B<x>:SPI{ :CLOCK | :SCLK } :SOURce {CH1 | CH2 | CH3 | CH4}
 BUS:B<x>:SPI{ :CLOCK | :SCLK } :SOURce?

Arguments CH<x> is the channel to use as the SPI SCLK source.

BUS:B<x>:SPI:DATA{:IN|:MISO}:POLARity

Sets or returns the SPI MISO polarity.

Conditions This command requires a DPO4EMBD application module.

Group Bus

Syntax BUS:B<x>:SPI:DATA{:IN|:MISO}:POLARity {LOW | HIGH}
 BUS:B<x>:SPI:DATA{:IN|:MISO}:POLARity?

Arguments LOW specifies an active low polarity.
 HIGH specifies an active high polarity.

BUS:B<x>:SPI:DATA{:IN|:MISO}:SOURce

Sets or returns the SPI MISO source.

Conditions This command requires a DPO4EMBD application module.

Group Bus

Syntax BUS:B<x>:SPI:DATA{:IN|:MISO}:SOURce {CH1 | CH2 | CH3 | CH4 | OFF}
 BUS:B<x>:SPI:DATA{:IN|:MISO}:SOURce?

Arguments CH<x> is the channel to use as the SPI MISO source.
 OFF specifies no source.

BUS:B<x>:SPI:DATA{:OUT|:MOSI}:POLARity

Sets or returns the SPI MOSI polarity.

Conditions This command requires a DPO4EMBD application module.

Group Bus

Syntax `BUS:B<x>:SPI:DATA{:OUT|:MOSI}:POLARity {LOW|HIGH}`
`BUS:B<x>:SPI:DATA{:OUT|:MOSI}:POLARity?`

Arguments LOW specifies an active low polarity.
 HIGH specifies an active high polarity.

BUS:B<x>:SPI:DATA{:OUT|:MOSI}:SOURce

Sets or returns the SPI MOSI source.

Conditions This command requires a DPO4EMBD application module.

Group Bus

Syntax `BUS:B<x>:SPI:DATA{:OUT|:MOSI}:SOURce {CH1|CH2|CH3|CH4|OFF}`
`BUS:B<x>:SPI:DATA{:OUT|:MOSI}:SOURce?`

Arguments CH<x> is the channel to use as the SPI MOSI source.
 OFF specifies no source.

BUS:B<x>:SPI{:SElect|:SS}:POLARity

Sets or returns the SPI SS polarity.

Conditions This command requires a DPO4EMBD application module.

Group Bus

Syntax `BUS:B<x>:SPI{:SElect|:SS}:POLARity {LOW|HIGH}`
`BUS:B<x>:SPI{:SElect|:SS}:POLARity?`

Arguments LOW specifies an active low polarity.
HIGH specifies an active high polarity.

BUS:B<x>:SPI{:SElect|:SS}:SOURCE

Sets or returns the SPI SS source.

Conditions This command requires a DPO4EMBD application module.

Group Bus

Syntax `BUS:B<x>:SPI{:SElect|:SS}:SOURCE {CH1|CH2|CH3|CH4}`
`BUS:B<x>:SPI{:SElect|:SS}:SOURCE?`

Arguments CH<x> is the channel to use as the SPI SS source.

BUS:B<x>:STATE

Turns the bus on and off.

Conditions This command requires a DPO4AUTO or DPO4EMBD application module.

Group Bus

Syntax `BUS:B<x>:STATE {<NR1>|OFF|ON}`
`BUS:B<x>:STATE?`

Related Commands [SElect:BUS<x>](#)

Arguments ON or <NR1> ≠ 0 turns on the bus.
OFF or <NR1> = 0 turns off the bus.

BUS:B<x>:TYPE

Sets or returns the bus type: I2C, SPI or CAN.

Conditions This command requires a DPO4AUTO or DPO4EMBD application module.

Group Bus

Syntax `BUS:B<x>:TYPE {I2C|SPI|CAN}`
`BUS:B<x>:TYPE?`

Arguments I2C specifies the Inter-IC bus.
 SPI specifies the Serial Peripheral Interface bus (not available on two-channel models).
 CAN specifies the Controller Area Network bus.

BUS:THReshold:CH<x>

Sets or returns the threshold for a channel. This setting applies to all trigger types that use the channel.

Conditions This command requires a DPO4AUTO or DPO4EMBD application module.

Group Bus

Syntax `BUS:THReshold:CH<x> {<NR3>}`
`BUS:THReshold:CH<x>?`

Arguments <NR3> specifies the threshold level, in volts.

BUSY? (Query Only)

Returns the status of the instrument. This command allows you to synchronize the operation of the instrument with your application program.

Group Status and Error

Syntax BUSY?

Related Commands [*OPC](#), [*WAI](#)

Returns <NR1> = 0 means that the instrument is not busy processing a command whose execution time is extensive.
 <NR1> = 1 means that the instrument is busy processing one of the commands listed in the table below.

Commands that affect BUSY? response

Operation	Command
Single sequence acquisition	ACQUIRE:STATE ON or ACQUIRE:STATE RUN or ACQUIRE:STATE 1 (when ACQUIRE:STOPAfter is set to SEQUENCE)
Hard copy operation	HARDCOPY STArt
Calibration step	Refer to the optional instrument Service Manual.

Examples BUSY? might return :BUSY 1 indicating that the instrument is currently busy.

CAL? (Query Only)

Returns the status of instrument calibration, including internal signal path calibration, factory calibration, and probe calibration. Refer to the service manual for factory calibration command descriptions.

Group Calibration and Diagnostic

Syntax CAL?

Related Commands [CALibrate:RESults:SPC?](#)

*CAL? (Query Only)

Runs an internal self-calibration and returns the oscilloscope calibration status.

NOTE. *Disconnect or otherwise remove all input signals prior to starting self-calibration. The self-calibration can take several minutes to complete.*

No other commands are executed until calibration is complete.

Group	Calibration and Diagnostic
Syntax	*CAL?
Returns	<NR1> = 1 indicates that the calibration did not complete successfully. <NR1> = 0 indicates that the calibration completed without errors.
Examples	*CAL? starts the internal signal path calibration and might return 0 to indicate that the calibration was successful.

CALibrate:FACTory (No Query Form)

Provides the controls for starting and stopping the factory calibration process. The factory calibration process consists of a series of steps.

Group	Calibration and Diagnostic
Syntax	CALibrate:FACTory {START CONTInue PREVIOUS ABOrt}
Arguments	<p>START initializes the factory calibration sequence and starts the first calibration step.</p> <p>CONTInue begins the next factory calibration step.</p> <p>PREVIOUS tries to run the most recent factory calibration step again.</p> <p>ABOrt stops the calibration process.</p>
Examples	CALIBRATE:FACTORY START starts the calibration process.

CALibrate:FACTory:STATus? (Query Only)

Returns the factory calibration status value saved in nonvolatile memory.

Group	Calibration and Diagnostic
--------------	----------------------------

Syntax CALibrate:FACTory:STATUS?

Examples CALIBRATE:FACTORY:STATUS? might return CALIBRATE:FACTORY:STATUS PASS indicating that factory calibration passed.

CALibrate:FACTory:STEPSTATUS? (Query Only)

Returns pass during oscilloscope power on without regard to actual calibration status. Returns pass or fail for the factory calibration step that most recently executed when factory calibration is in progress. Use this query to synchronize programmed factory calibration steps.

Group Calibration and Diagnostic

Syntax CALibrate:FACTory:STEPSTATUS?

Examples CALIBRATE:FACTORY:STEPSTATUS? might return CALIBRATE:FACTORY:STEPSTATUS FAIL if the last oscilloscope calibration step did not pass.

CALibrate:FACTory:STEPSTIMulus? (Query Only)

Returns information about an input signal required for calibration.

Group Calibration and Diagnostic

Syntax CALibrate:FACTory:STEPSTIMulus?

Returns Six items in the following order:

1. Voltage
2. Frequency
3. Channel
4. Termination
5. Signal type
6. Token

Signal types are as follows:

- 0 = No signal
- 1 = DC
- 2 = Sin
- 3 = Square wave
- 4 = Deskew signal (fast edge to all channels)
- 5 = Time marks

Examples CALIBRATE:FACTORY:STEPSTIMULUS? might return "0.500000,625.000000,1,5e+01,5,T01", indicating 0.5V pk-pk, 625Hz, Channel 1 5e+01 (50) Ohm termination Signal type 5 (Time Marks) The test token is T01.

CALibrate:INTERNAL (No Query Form)

Starts the internal signal path calibration (SPC) of the instrument. You can use the [CALibrate:INTERNAL:STATUS?](#) query to return the current status of the internal signal path calibration of the instrument.

Group Calibration and Diagnostic

Syntax CALibrate:INTERNAL

Related Commands [CALibrate:RESults:SPC?](#)

Examples CALIBRATE:INTERNAL starts the internal signal path calibration of the instrument.

CALibrate:INTERNAL:START (No Query Form)

Starts the internal signal path calibration (SPC) of the instrument. This command is the same as the [CALibrate:INTERNAL](#) command. You can use the [CALibrate:INTERNAL:STATUS?](#) query to return the current status of the internal signal path calibration of the instrument.

Group Calibration and Diagnostic

Syntax CALibrate:INTERNAL:START

Related Commands [CALibrate:RESults:SPC?](#)

Examples CALIBRATE:INTERNAL:START starts the internal signal path calibration of the instrument.

CALibrate:INTERNAL:STATus? (Query Only)

Returns the current status of the instrument internal signal path calibration for the last SPC operation.

Group Calibration and Diagnostic

Syntax CALibrate:INTERNAL:STATus?

Related Commands [CAL?](#)

Returns This query will return one of the following:

- INIT indicates the instrument has not had internal signal path calibration run.
- PASS indicates that the signal path calibration completed successfully.
- FAIL indicates that the signal path calibration did not complete successfully.
- RUNNING indicates that the signal path calibration is currently running.

Examples CALIBRATE:INTERNAL:STATUS? might return
:CALIBRATE:INTERNAL:STATUS INIT indicating that the
current status of the internal signal path calibration is that it has not been run.

CALibrate:RESults? (Query Only)

Returns the status of internal and factory calibrations, without performing any calibration operations. The results returned do not include the calibration status of attached probes. The CALibrate:RESults? query is intended to support GO/NoGO testing of the oscilloscope calibration readiness: all returned results should indicate PASS status if the instrument is "fit for duty". It is quite common, however, to use uncalibrated probes (particularly when the instrument inputs are connected into a test system with coaxial cables).

Group Calibration and Diagnostic

Syntax `CALibrate:RESuLts?`

Related Commands [CAL?](#)

CALibrate:RESuLts:FACTory? (Query Only)

Returns the status of internal and factory calibration, without performing any calibration operations.

Group Calibration and Diagnostic

Syntax `CALibrate:RESuLts:FACTory?`

CALibrate:RESuLts:SPC? (Query Only)

Returns the status of the SPC operation. However, this query does not cause an SPC to be run.

Group Calibration and Diagnostic

Syntax `CALibrate:RESuLts:SPC?`

Related Commands [CAL?](#)

Returns INIT indicates that SPC has never successfully completed.
 PASS indicates that the last SPC operation passed.
 FAIL indicates that the last SPC operation failed.
 RUNNING indicates that the SPC operation is running.

Examples `CALIBRATE:RESULTS:SPC?` returns the results of the last SPC operation: either PASS or FAIL.

CH<x>? (Query Only)

Returns the vertical parameters for the specified channel. The channel is specified by x. The value of x can range from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments.

Group Vertical

Syntax CH<x>?

CH<x>:BANdwidth

Sets or returns the selectable low-pass bandwidth limit filter of the specified channel. The channel is specified by x. The value of x can range from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments. This is equivalent to pushing the channel **1**, **2**, **3**, or **4** front-panel buttons, then **Bandwidth** from the lower-bezel menu, and the desired bandwidth from the resulting side-bezel menu.

Group Vertical

Syntax CH<x>:BANdwidth {TWEnty|TWOfi fty|FUL1|<NR3>}
CH<x>:BANdwidth?

Arguments TWEnty sets the upper bandwidth limit to 20 MHz.

TWOfi fty sets the upper bandwidth limit to 250 MHz.

FUL1 disables any optional bandwidth limiting. The specified channel operates at its maximum attainable bandwidth.

<NR3> argument is a double-precision ASCII string. The instrument rounds this value to an available bandwidth using geometric rounding and then uses this value to set the upper bandwidth limit.

NOTE. Other values may be possible depending on the attached probes.

Examples CH1: BANDWIDTH TWENTY sets the bandwidth of channel 1 to 20 MHz.

CH<x>:COUPLing

Sets or returns the input attenuator coupling setting for the specified channel. The channel is specified by x. The value of x can range from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments. This command is equivalent to pushing the front-panel channel **1**, **2**, **3**, or **4** buttons, **Coupling** from the lower-bezel menu, and the desired coupling setting from the resulting side-bezel menu.

Group	Vertical
Syntax	CH<x>:COUPLing {AC DC GND} CH<x>:COUPLing?
Arguments	AC sets the specified channel to AC coupling. DC sets the specified channel to DC coupling. GND sets the specified channel to ground. Only a flat, ground-level waveform will be displayed.
Examples	CH2:COUPLING GND sets channel 2 to ground. CH3:COUPLing? might return :CH3:COUPLing DC indicating that channel 3 is set to DC coupling.

CH<x>:DESKew

Sets or returns the deskew time for the specified channel. The channel is specified by x. The value of x can range from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments. This command is equivalent to pushing the front-panel channel **1**, **2**, **3**, or **4** buttons (or with TekVPI probe, push the **Menu** button on the probe itself), then push **Probe Setup** from the lower-bezel menu, and viewing or adjusting the deskew value on the resulting side-bezel menu.

You can adjust the deskew time to add an independent, channel-based delay time to the delay (set by the horizontal position control and common to all channels) from the common trigger point to first sample taken for each channel. This lets you compensate individual channels for different delays introduced by their individual input hook ups.

Group	Vertical
--------------	----------

Syntax CH<x>:DESKew <NR3>
CH<x>:DESKew?

Arguments <NR3> is the deskew time for this channel, ranging from -100 ns to +100 ns with a resolution of 1 ps.

Examples CH4:DESKew 5.0E-9 sets the deskew time for channel 4 to 5 ns.
CH2:DESKew? might return :CH2:DESKEW 2.0000E-09 indicating that the deskew time for channel 2 is set to 2 ns.

CH<x>:INVert

Sets or returns the invert function for the specified channel. The channel is specified by x. The value of x can range from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments. When on, the invert function inverts the waveform for the specified channel. This command is equivalent to pushing the front-panel channel **1**, **2**, **3**, or **4** button, **Invert** from the lower-bezel menu, and **Off** or **On** from the resulting side-bezel menu.

NOTE. *This command inverts the waveform for display purposes only. The instrument does not use an inverted waveform for triggers or trigger logic inputs.*

Group Vertical

Syntax CH<x>:INVert {ON|OFF}
CH<x>:INVert?

Arguments OFF argument turns off the invert function for the specified channel.
ON argument turns on the invert function for the specified channel.

Examples CH4:INVert ON inverts the waveform on channel 4.
CH2:INVert? might return :CH2:INVERT 0 indicating that channel 2 is not inverted.

CH<x>:OFFSet

Sets or returns the vertical offset for the specified channel. The channel is specified by x. The value of x can range from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments. This command is

equivalent to pushing the front-panel channel **1**, **2**, **3**, or **4** button, **Offset** from the lower-bezel menu, reading the current offset value in the side-bezel menu, and turning a multipurpose knob to change the value.

This command offsets the vertical acquisition window (moves the level at the vertical center of the acquisition window) for the specified channel. Visualize offset as scrolling the acquisition window towards the top of a large signal for increased offset values, and scrolling towards the bottom for decreased offset values. The resolution of the vertical window sets the offset increment for this control.

Offset adjusts only the vertical center of the acquisition window for channel waveforms to help determine what data is acquired. The instrument always displays the input signal minus the offset value.

The channel offset range depends on the vertical scale factor.

Table 2-33: Channel Offset Range

V/Div Setting	Offset range	
	1 M Ω Input	50 Ω Input
1 mV/div — 50 mV/div	± 1 V	± 1 V
50.5 mV/div — 99.5 mV/div	± 0.5 V	± 0.5 V
100 mV/div — 500 mV/div	± 10 V	± 5 V
505 mV/div — 995 mV/div	± 5 V	± 5 V
1 V/div — 5 V/div 1	± 100 V	± 5 V
5.05 V/div — 10 V/div 1	± 50 V	N/A

¹ For 50 Ω input, 1 V/div is the maximum setting.

NOTE. The above table describes instrument behavior only when no probe is attached, and when the external attenuation factor is 1.0.

Group Vertical

Syntax CH<x>:OFFSet <NR3>
CH<x>:OFFSet?

Related Commands CH<x>:POSition

Arguments <NR3> is the offset value for the specified channel.

Examples CH3:OFFSet 2.0E-3 sets the offset for channel 3 to 2 mV.
 CH4:OFFSet? might return :CH4:OFFSET 1.0000E-03 indicating that the offset for channel 4 is set to 1 mV.

CH<x>:POSition

Sets or returns the vertical position of the specified channel. The channel is specified by x. The value of x can range from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments. The position value is applied to the signal before it is digitized. This command is equivalent to pushing the front-panel channel **1**, **2**, **3**, or **4** button, **Position** from the lower-bezel menu, reading the value on the resulting side-bezel menu, and adjusting the value with a multipurpose knob.

Increasing the position value of a waveform causes the waveform to move up, and decreasing the position value causes the waveform to move down. The position value determines the vertical graticule coordinate at which input signal values, minus the present offset setting for that channel, are displayed. For example, if the position for Channel 3 is set to 2.0 and the offset is set to 3.0, then input signals equal to 3.0 units are displayed 2.0 divisions above the center of the screen (at 1 V/div).

Group Vertical

Syntax CH<x>:POSition <NR3>
 CH<x>:POSition?

Related Commands CH<x>:OFFSet, REF<x>:VERTical:POSition, MATH[1]:VERTical:POSition

Arguments <NR3> is the position value, in divisions from the center graticule, ranging from 8 to -8 divisions.

Examples CH2:POSition 1.3 positions the Channel 2 input signal 1.3 divisions above the center graticule.

CH1:POSition? might return :CH1:POSITION -1.3000 indicating that the current position of Channel 1 is 1.3 divisions below the center graticule.

CH<x>:PRObe? (Query Only)

Returns all information concerning the probe that is attached to the specified channel. The channel is specified by x. The value of x can range from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments.

Group Vertical

Syntax CH<x>:PRObe?

CH<x>:PRObe:AUTOZero (No Query Form)

Sets the TekVPI probe attached to the specified channel input to autozero.

Group Vertical

Syntax CH<x>:PRObe:AUTOZero EXECute

CH<x>:PRObe:DEGAUss (No Query Form)

Starts a degauss/autozero cycle on a TekVPI current probe attached to the specified channel input.

Group Vertical

Syntax CH<x>:PRObe:DEGAUss EXECute

CH<x>:PRObe:DEGAUss:STATE? (Query Only)

Returns the state of the probe degauss. The command will return PASSED for probes that do not support degauss operations.

Group Vertical

Syntax CH<x>:PRObe:DEGAUss:STATE?

Returns NEEDED indicates that the probe should be degaussed before taking measurements.

RECOMMENDED indicates that measurement accuracy might be improved by degaussing the probe.

PASSED indicated that the probe is degaussed.

FAILED indicates that the degauss operation failed.

RUNNING indicates that the probe degauss operation is currently in progress.

CH<x>:PRObe:FORCEDRange

Sets or returns the range on a TekVPI probe attached to the specified channel.

Group Vertical

Syntax CH<x>:PRObe:FORCEDRange <NR3>
CH<x>:PRObe:FORCEDRange?

CH<x>:PRObe:GAIN

Sets or returns the gain factor of the probe that is attached to the specified channel. The channel is specified by x. The value of x can range from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments. The "gain" of a probe is the output divided by the input transfer ratio. For example, a common 10x probe has a gain of 0.1.

Group Vertical

Syntax CH<x>:PRObe:GAIN <NR3>
CH<x>:PRObe:GAIN?

Related Commands [CH<x>:SCAle](#)

Arguments <NR3> is the probe gain. Allowed values depend on the specific probe.

Examples CH2:PROBE:GAIN? might return :CH2:PROBE:GAIN 0.1000E+00 indicating that the attached 10x probe delivers 0.1 V to the channel 2 BNC for every 10 V applied to the probe input.

CH<x>:PRObe:ID? (Query Only)

Returns the type and serial of the probe that is attached to the specified channel. The channel is specified by x. The value of x can range from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments.

Group Vertical

Syntax CH<x>:PRObe:ID?

Examples CH2:PROBE:ID? might return :CH2:PROBE:ID:TYPE "10X";SERNUMBER "N/A" indicating that a passive 10x probe of unknown serial number is attached to channel 2.

CH<x>:PRObe:ID:SERnumber? (Query Only)

Returns the serial number of the probe that is attached to the specified channel. The channel is specified by x. The value of x can range from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments.

NOTE. For Level 0 and 1 probes, the serial number will be "".

Group Vertical

Syntax CH<x>:PRObe:ID:SERnumber?

Examples CH1:PROBE:ID:SERNUMBER? might return :CH1:PROBE:ID:SERNUMBER "B010289" indicating that the serial number of the probe attached to channel 1 is B010289.

CH<x>:PRObe:ID:TYPE? (Query Only)

Returns the type of probe that is attached to the specified channel. The channel is specified by x. The value of x can range from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments. Level 2 (or higher) probes supply their exact product nomenclature; for Level 0 or 1 probes, a generic "No Probe Detected" message is returned.

Group Vertical

Syntax CH<x>:PRObe:ID:TYPE?

Examples CH1:PROBE:ID:TYPE? might return :CH1:PROBE:ID:TYPE "P6203" indicating that P6203-type probe is attached to channel 1.

CH<x>:PRObe:RESistance? (Query Only)

Returns the resistance factor of the probe that is attached to the specified channel. The channel is specified by x. The value of x can range from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments.

Group Vertical

Syntax CH<x>:PRObe:RESistance?

Examples CH2:PROBE:RESISTANCE? might return :CH2:PROBE:RESISTANCE 10.0000E+06 indicating that the input resistance of the probe attached to Channel 2 is 1 MΩ.

CH<x>:PRObe:UNIts? (Query Only)

Returns a string describing the units of measure of the probe attached to the specified channel. The channel is specified by x. The value of x can range from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments.

Group Vertical

Syntax CH<x>:PRObe:UNIts?

Examples CH4:PROBE:UNITS? might return :CH4:PROBE:UNITS "V" indicating that the units of measure for the probe attached to channel 4 are volts.

CH<x>:SCAle

Sets or returns the vertical scale of the specified channel. The channel is specified by x. The value of x can range from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments. This command is equivalent to pushing the front-panel channel **1**, **2**, **3**, or **4** button, **Fine Scale** from the lower-bezel menu,

reading the value on the resulting side-bezel menu, and adjusting the value with a multipurpose knob.

Each waveform has a vertical scale parameter. For a signal with constant amplitude, increasing the Scale causes the waveform to be displayed smaller. Decreasing the scale causes the waveform to be displayed larger.

Scale affects all waveforms, but affects channel waveforms differently from other waveforms:

- For channel waveforms, this setting controls the vertical size of the acquisition window as well as the display scale. The range and resolution of scale values depends on the probe attached and any other external factors you have specified.
- For reference and math waveforms, this setting controls the display only, graphically scaling these waveforms and having no affect on the acquisition hardware.

Group Vertical

Syntax CH<x>:SCALE <NR3>
CH<x>:SCALE?

Related Commands CH<x>:OFFSet, CH<x>:POSition, REF<x>:VERTical:SCALE, MATH[1]:VERTical:SCALE

Arguments <NR3> is the vertical channel scale in units per division. The value entered here is truncated to three significant digits.

Examples CH4:SCALE 100E-03 sets the channel 4 scale to 100 mV per division.
CH2:SCALE? might return :CH2:SCALE 1.0000 indicating that the current scale setting of channel 2 is 1 V per division.

CH<x>:TERmination

Sets the connected/disconnected status of a 50 Ω resistor, which may be connected between the specified channel's coupled input and instrument ground. The channel is specified by x. The value of x can range from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments. There is also a corresponding query that requests the termination parameter and translates this enumeration into one of the two float values. This command is equivalent to pushing the front-panel channel **1**, **2**, **3**, or **4** button, **Coupling** from the

lower-bezel menu, reading the value on the resulting side-bezel menu, and pushing Ω as many times as needed to select either 50 Ω or 1 M Ω .

Group Vertical

Syntax CH<x>:TERmination {FIFTy|MEG|<NR3>}
CH<x>:TERmination?

Arguments FIFTy sets the channel input resistance to 50 Ω .
MEG sets the channel input resistance to 1 M Ω .
NR3 specifies the channel input resistance numerically.

Examples CH4:TERMINATION 50.0E+0 establishes 50 Ω impedance on channel 1.
CH2:TERMINATION? might return :CH2:TERMINATION 50.0E+0 indicating that channel 2 is set to 50 Ω impedance.

CH<x>:YUNits

Sets or returns the units for the specified channel to a custom string. String arguments are case insensitive and any unsupported units will generate an error.

Supported units are: %, /Hz, A, A/A, A/V, A/W, A/dB, A/s, AA, AW, AdB, As, B, Hz, IRE, S/s, V, V/A, V/V, V/W, V/dB, V/s, VV, VW, VdB, Volts, Vs, W, W/A, W/V, W/W, W/dB, W/s, WA, WV, WW, WdB, Ws, dB, dB/A, dB/V, dB/W, dB/dB, dBA, dBV, dBW, dBdB, day, degrees, div, hr, min, ohms, percent, s

Group Vertical

Syntax CH<x>:YUNits <QString>
CH<x>:YUNits?

CLEARMenu (No Query Form)

Clears the current menu from the display. This command is equivalent to pressing the front panel **Menu Off** button.

Group Miscellaneous

Syntax CLEARMenu

*CLS (No Query Form)

Clears the following:

- Event Queue
- Standard Event Status Register
- Status Byte Register (except the MAV bit)

If the *CLS command immediately follows an <EOI>, the Output Queue and MAV bit (Status Byte Register bit 4) are also cleared. The MAV bit indicates that information is in the output queue. The device clear (DCL) GPIB control message will clear the output queue and thus MAV. *CLS does not clear the output queue or MAV.

*CLS can suppress a Service Request that is to be generated by an *OPC. This will happen if a single sequence acquisition operation is still being processed when the *CLS command is executed.

Group Status and Error

Syntax *CLS

Related Commands DESE, *ESE, *ESR?, EVENT?, EVMsg?, *SRE, *STB?

Examples *CLS clears the instrument status data structures.

CURSor?

Returns all of the current cursor settings.

Group Cursor

Syntax CURSor?

Examples CURSOR? might return the following as the current cursor settings:
 :CURSOR:FUNCTION SCREEN;HBARS:POSITION1 0.0000;POSITION2
 0.0000;UNITS BASE;:CURSOR:MODE INDEPENDENT;VBARS:POSITION1
 -19.0006E-6;POSITION2 -18.9994E-6;UNITS SECONDS

CURSor:FUNcTion

Sets or returns the cursor type. Cursors are attached to the selected waveform in WAVEFORM mode and are attached to the display area in SCREEN mode.

Pushing the front-panel **Cursor** button performs in a similar way in that it lets the user rotate through the choices of WAVEFORM, SCREEN, and OFF

Group Cursor

Syntax CURSor:FUNcTion {OFF|SCREEN|WAVEform}
CURSor:FUNcTion?

Arguments OFF removes the cursors from the display but does not change the cursor type.

SCREEN specifies both horizontal and vertical bar cursors, which measure the selected waveform in horizontal and vertical units. Use these cursors to measure anywhere in the waveform display area.

WAVEform specifies paired cursors in YT display format for measuring waveform amplitude and time.

Examples CURSOR:FUNCTION WAVEFORM selects the paired cursors for measuring waveform amplitude and time.

CURSOR:FUNCTION? might return :CURSor:FUNcTion SCREEN indicating that the screen cursors are currently selected.

CURSor:HBARS? (Query Only)

Returns the current settings for the horizontal bar cursors.

Group Cursor

Syntax CURSor:HBARS?

Examples CURSOR:HBARS? might return the horizontal bar setting as :CURSOR:HBARS:POSITION1 320.0000E-03;POSITION2-320.0000E-03;UNITS BASE

CURSor:HBARS:DELTA? (Query Only)

Returns the vertical difference between the two horizontal bar cursors.

Group Cursor

Syntax CURSor:HBARS:DELTA?

Related Commands [CURSor:HBARS:UNITS](#)

Returns A floating point value with an exponent.

Examples CURSOR:HBARS:DELTA? might return :CURSOR:HBARS:DELTA 5.0800E+00 indicating that the difference between the two cursors is 5.08.

CURSor:HBARS:POSITION<x>

Sets or returns the horizontal bar cursor position relative to ground, which is expressed in vertical units (usually volts). The cursor is specified by x, which can be 1 or 2. The set command is the equivalent to selecting the appropriate cursor mode with the front-panel **Cursor** button and turning the appropriate multipurpose knob.

Group Cursor

Syntax CURSor:HBARS:POSITION<x> <NR3>
CURSor:HBARS:POSITION<x>?

Related Commands [CURSor:FUNCTION](#)

Arguments <NR3> specifies the cursor position relative to ground.

Examples CURSOR:HBARS:POSITION1 25.0E-3 positions Cursor 1 of the horizontal cursors at 25 mV.

CURSOR:HBARS:POSITION2? might return :CURSOR:HBARS:POSITION2 -64.0000E-03 indicating that Cursor 2 of the horizontal bar cursors is at -64 mV.

CURSor:HBArS:UNItS

Sets or returns the units for the horizontal bar cursors.

Group Cursor

Syntax CURSor:HBArS:UNItS {BASE|PERcent}
CURSor:HBArS:UNItS?

Arguments BASE selects the vertical units for the selected waveform.
PERcent selects ratio cursors.

Examples CURSOR:HBARS:UNITS might return :CURSOR:HBARS:UNITS BASE indicating that the units for the horizontal bar cursors are base.

CURSor:HBArS:USE (No Query Form)

Sets the horizontal bar cursor measurement scale. This command is only applicable when ratio cursors are on.

Group Cursor

Syntax CURSor:HBArS:USE {CURrent|FIVEDivs}

Related Commands [CURSor:HBArS:UNItS](#)

Arguments CURrent sets the H Bar measurement scale so that 0% is the current position of the lowest H Bar cursor and 100% is the current position of the highest H Bar cursor.
FIVEDivs sets H Bar measurement scale so that 5 screen major divisions is 100%, where 0% is -2.5 divisions and 100% is +2.5 divisions from the center horizontal graticule.

Examples CURSOR:HBARS:USE FIVEDIVS sets the H Bar measurement scale so that 5 screen major divisions equals 100%.

CURSor:MODE

Sets or returns whether the two cursors move linked together in unison or separately. This applies to the Waveform cursors display mode.

The front-panel equivalent, when using Waveform cursors, is to toggle the front-panel **Select** button to turn tracking on and off.

Conditions This command is only applicable when waveform cursors are displayed.

Group Cursor

Syntax CURSor:MODE {TRACK|INdependent}
CURSor:MODE?

Arguments TRACK ties the navigational functionality of the two cursors together. For cursor 1 adjustments, this ties the movement of the two cursors together; however, cursor 2 continues to move independently of cursor 1.

INdependent allows independent adjustment of the two cursors.

Examples CURSOR:MODE TRACK specifies that the cursor positions move in unison.

CURSOR:MODE? might return :CURSOR:MODE TRACK indicating that the two cursors move in unison.

CURSor:VBARS? (Query Only)

Returns the current settings for the vertical bar cursors.

Group Cursor

Syntax CURSor:VBARS?

Examples CURSOR:VBARS? might return the following vertical bar settings
:CURSOR:VBARS:UNITS SECONDS;POSITION1 1.0000E-06;POSITION2
9.0000E-06

CURSOR:VBARS:DELTA? (Query Only)

Returns the horizontal difference between the two vertical bar cursors. The units are specified by the CURSOR:VBARS:UNITS command.

This is equivalent to watching the cursor readout in the display while using the appropriate cursor mode.

Group Cursor

Syntax CURSOR:VBARS:DELTA?

Related Commands [CURSOR:VBARS:UNITS](#)

Returns <NR3>

Examples CURSOR:VBARS:DELTA? might return :CURSOR:VBARS:DELTA 1.0640E+00 indicating that the time between the vertical bar cursors is 1.064 s.

CURSOR:VBARS:HPOS<x>? (Query Only)

Returns the horizontal value of the specified vertical bar ticks.

Group Cursor

Syntax CURSOR:VBARS:HPOS<x>?

Related Commands [CURSOR:VBARS:UNITS](#)

Arguments <x> specifies the cursor. Valid values are 1 and 2.

Returns <NR3> indicates the value of one of the ticks. The units are specified by the CURSOR:VBARS:UNITS command.

Examples CURSOR:VBARS:HPOS2? might return CURSOR:VBARS:HPOS2 100E-3, indicating the value of one vertical bar tick.

CURSor:VBArS:POSITION<x>

Sets or returns the horizontal position for the specified vertical bar cursor. The cursor is specified by x, which can be 1 or 2. Values are with respect to trigger position or the zero reference point for the designated waveform (if horizontal units are not set to time). Use the CURSor:VBArS:UNIts command to specify units.

This command is equivalent to turning a multipurpose knob to move the respective vertical bar cursor.

Group Cursor

Syntax CURSor:VBArS:POSITION<x> <NR3>
CURSor:VBArS:POSITION<x>?

Related Commands [CURSor:VBArS:UNIts](#)

Arguments <NR3> specifies the cursor position.

Returns A floating point value with an exponent.

Examples CURSor:VBArS:POSITION2 9.00E-6 positions the cursor2 vertical bar cursor at 9 ms.

CURSor:VBArS:POSITION1? this command might return
:CURSor:VBArS:POSITION1 1.0000E-06 indicating that the
cursor1 vertical bar is positioned at 1 μ s.

CURSor:VBArS:UNIts

Sets or returns the units for the vertical bar cursors.

Group Cursor

Syntax CURSor:VBArS:UNIts {SECOndS|HERtZ|DEGRees|PERCent}
CURSor:VBArS:UNIts?

Arguments SECOndS sets the units of the vertical bar cursors for the time domain (seconds).

HERtZ sets the units of the vertical bar cursors for the frequency domain (Hertz).

DEGREES sets the units to degrees for use with an XY display.

PERCENT sets the units to percent for use with ratio cursors.

Returns SECONDS, HERTZ, DEGREES, or PERCENT, depending on the current vertical bar cursor units.

Examples `CURSOR:VBARS:UNITS HERTZ` sets the units of the VBARS cursors to 1/seconds.
`CURSOR:VBARS:UNITS?` might return `:CURSOR:VBARS:UNITS SECONDS` indicating that the units for the vertical bar cursor are currently set to seconds.

CURSOR:VBARS:USE (No Query Form)

Sets the vertical bar cursor measurement scale.

Conditions This command is only applicable when ratio cursors are on.

Group Cursor

Syntax `CURSOR:VBARS:USE {CURRENT|FIVEDIVS}`

Related Commands [CURSOR:VBARS:UNITS](#)

Arguments **CURRENT** sets the V Bar measurement scale so that 0% is the current position of the left-most V Bar cursor and 100% is the current position of the right-most V Bar cursor.

FIVEDIVS sets V Bar measurement scale so that 5 screen major divisions is 100%, where 0% is -2.5 divisions and 100% is +2.5 divisions from the center vertical graticule.

Examples `CURSOR:VBARS:USE CURRENT` sets the V Bar measurement scale to use the current cursor positions as 0% and 100% of scale if units are set to %.

CURSOR:VBARS:VDELTA? (Query Only)

Returns the vertical difference between the two vertical bar cursor ticks.

This is equivalent to viewing the cursor readout while using the appropriate cursors.

Group	Cursor
Syntax	CURSOR:VBARS:VDELTA?
Related Commands	CURSOR:HBArs:UNIts
Returns	<NR3> indicates the horizontal difference between the two vertical bar cursors.
Examples	CURSOR:VBARS:VDELTA? might return CURSOR:VBARS:VDELTA 1.064E+0, indicating that the vertical difference between the vertical bar cursors ticks is 1.064 units.

CURVe

Transfers waveform data to and from the instrument in binary or ASCII format. Each waveform that is transferred has an associated waveform preamble that contains information such as data format and scale.

The CURVe? query transfers data from the instrument. The data source is specified by the [DATA:SOURce](#) command. The first and last data points are specified by the [DATA:STARt](#) and [DATA:STOP](#) commands.

The system returns data from the last acquisition if the source is a channel waveform that is being previewed. The data does not reflect the acquisition preview parameters. The user should always follow acquisition parameter changes with a single sequence OPC command prior to CURVe? to ensure the return data reflects the new acquisition parameters.

The CURVe command transfers waveform data to the instrument. The data is stored in the reference memory location specified by [DATA:DESTination](#), starting with the data point specified by [DATA:STARt](#). Only one waveform can be transferred at a time. The waveform will only be displayed if the reference is displayed.

NOTE. *Transferring large volumes of data to or from the oscilloscope takes time. ASCII waveform transfer is very inefficient.*

Group	Waveform Transfer
Syntax	CURVe {<Block> <asc curve>} CURVe?

Related Commands [DATA:DESTination](#), [DATA:SOUrce](#), [DATA:STARt](#), [DATA:STOP](#), [WFMImpre?](#), [WFMImpre:BYT_Nr](#), [WFMOupre?](#)

Arguments <Block> is the waveform data in binary format. The waveform is formatted as: #<x><yyy><data><newline>, where:

 <x> is the number of y bytes. For example, if <yyy>=500, then <x>=3)

 <yyy> is the number of bytes to transfer. If width is 1, then all bytes on the bus are single data points. If width is 2, then all bytes on the bus are 2-bytes wide. Use the [WFMImpre:BYT_Nr](#) command to set the width for waveforms transferred into the oscilloscope. Use [WFMOupre:BYT_Nr](#) to set the width for waveforms transferred out from the oscilloscope.

 <data> is the curve data.

 <newline> is a single byte new line character at the end of the data.

 <asc curve> is the waveform data in ASCII format. The format for ASCII data is <NR1>[,<NR1>...], where each <NR1> represents a data point.

Examples CURVE? with ASCII encoding, start and stop of 1 and 10 respectively, and a width set to 1 might return :CURVE 61,62,61,60,60,-59,-59,-58,-58,-59

NOTE. Curve data is transferred from the instrument asynchronously and, dependent upon the length of the curve record, such transfers can require several seconds to complete. During this time, the instrument will not respond to user controls. You can interrupt these asynchronous data transfers by sending a device clear message to the instrument or by interrupting the query with another command or query. In order to verify that curve data has been completely transferred, it is recommended that you follow such queries with an **ESR?* query and verify that the error bit returned and, if set, check the event queue to ascertain the reason for the error. If the error was caused by an interrupted query, then the asynchronous data transfer had not completed when the **ESR?* query was sent. In this case, you may need increase your program's time-out value in order to ensure that all data is transferred and read.

DATA

Sets or returns the format and location of the waveform data that is transferred with the [CURVe?](#) query or [CURVe](#) command.

Group Waveform Transfer

Syntax DATA {INIT|SNAP}
DATA?

Related Commands CURVe, DATA:START, DATA:STOP, DATA:ENCdg, WFMInpre:NR_Pt, WFMOutpre:NR_Pt?

Arguments INIT initializes the waveform data parameters to their factory defaults except for DATA:STOP, which is set to the current acquisition record length.

SNAP sets DATA:START and DATA:STOP to match the current waveform cursor positions.

Examples DATA? might return :DATA:DESTINATION REF1:ENCDG RIBINARY;SOURCE CH1;START 1;STOP 500;WIDTH 1

DATA INIT initializes the waveform data parameters to their factory defaults.

DATA:DESTination

Sets or returns the reference memory location for storing waveform data that is transferred into the instrument by the CURVe command.

Group Waveform Transfer

Syntax DATA:DESTination REF<x>
DATA:DESTination?

Related Commands CURVe

Arguments REF<x> is the reference where the waveform will be stored. The reference number is specified by x, which ranges from 1 through 4 for 4-channel models and 1 through 2 for 2-channel models.

Examples DATA:DESTINATION? might return :DATA:DESTINATION REF3 indicating that reference 3 is the currently selected reference memory location for incoming waveform data. DATA:DESTINATION REF1 indicates that incoming waveform data be stored in reference 1.

DATA:ENCdg

Sets or returns the format of outgoing waveform data. This command is equivalent to setting [WFMOutpre:ENCdg](#), [WFMOutpre:BN_Fmt](#), and [WFMOutpre:BYT_Or](#). Setting the DATA:ENCdg value causes the corresponding WFMOutpre values to be updated and vice versa.

NOTE. *This command/query does not apply to incoming waveform data.*

Group Waveform Transfer

Syntax DATA:ENCdg {ASCIi|FASTest|RIBinary|RPBinary|SRIBinary|SRPbinary}
DATA:ENCdg?

Related Commands [WFMOutpre:ENCdg](#), [WFMOutpre:BN_Fmt](#), [WFMOutpre:BYT_Or](#)

- Arguments**
- **ASCIi** specifies the ASCII representation for waveform data points. If ASCII is the value, then :BN_Fmt and :BYT_Or are ignored.
 - **FASTest** specifies that the data be sent in the fastest possible manner consistent with maintaining accuracy and is interpreted with respect to the waveform specified by [DATA:SOUrce](#).
 - **RIBINARY** specifies signed integer data point representation with the most significant byte transferred first.

When :BYT_Nr is 1, the range is from -128 through 127. When :BYT_Nr is 2, the range is from -32,768 through 32,767. Center screen is 0 (zero). The upper limit is the top of the screen and the lower limit is the bottom of the screen. This is the default argument.
 - **RPBinary** specifies the positive integer data-point representation, with the most significant byte transferred first.

When :BYT_Nr is 1, the range from 0 through 255. When :BYT_Nr is 2, the range is from 0 to 65,535. The center of the screen is 127. The upper limit is the top of the screen and the lower limit is the bottom of the screen.
 - **SRIBinary** is the same as **RIBinary** except that the byte order is swapped, meaning that the least significant byte is transferred first. This format is useful when transferring data to IBM compatible PCs.
 - **SRPbinary** is the same as **RPBinary** except that the byte order is swapped, meaning that the least significant byte is transferred first. This format is useful when transferring data to PCs.

Table 2-34: DATA and WFMOupre Parameter Settings

DATA:ENCdg Setting	WFMOupre Settings			
	:ENCdg	:BN_Fmt	:BYT_Or	:BYT_NR
AScii	ASC	N/A	N/A	1,2
FAStest	BIN	RI	MSB	1,2
RIBinary	BIN	RI	MSB	1,2
RPBinary	BIN	RP	MSB	1,2
SRIbinary	BIN	RI	LSB	1,2
SRPbinary	BIN	RP	LSB	1,2

Examples DATA:ENCDG? might return :DATA:ENCDG SRPBINARY for the format of the outgoing waveform data.

DATA:ENCDG RPBinary sets the data encoding format to be a positive integer where the most significant byte is transferred first.

DATA:SOURce

Sets or returns the location of waveform data that is transferred from the instrument by the CURVe? Query.

Group Waveform Transfer

Syntax DATA:SOURce <wfm>
DATA:SOURce?

Related Commands CURVe

Arguments <wfm> is the location of the waveform data that will be transferred from the instrument to the controller.

Examples DATA:SOURCE? might return :DATA:SOURCE REF3 indicating that the source for the waveform data which is transferred using a CURVe? query is reference 3.

DATA:SOURCE CH1 specifies that the CH1 waveform will be transferred in the next CURVe? query.

DATA:START

Sets or returns the starting data point for incoming or outgoing waveform transfer. This command allows for the transfer of partial waveforms to and from the instrument.

Group Waveform Transfer

Syntax DATA:START <NR1>
DATA:START?

Related Commands [CURVe](#), [DATA](#), [DATA:STOP](#), [WFMIpre:NR_Pt](#), [WFMOupre:NR_Pt?](#)

Arguments <NR1> is the first data point that will be transferred, which ranges from 1 to the record length. Data will be transferred from <NR1> to DATA:STOP or the record length, whichever is less. If <NR1> is greater than the record length, the last data point in the record is transferred.

DATA:START and DATA:STOP are order independent. When DATA:STOP is greater than DATA:START, the values will be swapped internally for the CURVe? query.

Examples DATA:START? might return :DATA:START 214 indicating that data point 214 is the first waveform data point that will be transferred.

DATA:START 10 specifies that the waveform transfer will begin with data point 10.

DATA:STOP

Sets or returns the last data point that will be transferred when using the [CURVe?](#) query. This command allows for the transfer of partial waveforms from the instrument.

Changes to the record length value are not automatically reflected in the DATA:STOP value. As record length is varied, the DATA:STOP value must be explicitly changed to ensure the entire record is transmitted. In other words, curve results will not automatically and correctly reflect increases in record length if the distance from [DATA:START](#) to DATA:STOP stays smaller than the increased record length.

Group Waveform Transfer

Syntax DATA:STOP <NR1>
DATA:STOP?

Related Commands [CURVe](#), [DATA](#), [DATA:START](#), [WFMinpre:NR_Pt](#), [WFMOuppre:NR_Pt?](#)

Arguments <NR1> is the last data point that will be transferred, which ranges from 1 to the record length. If <NR1> is greater than the record length, then data will be transferred up to the record length. If both DATA:START and DATA:STOP are greater than the record length, the last data point in the record is returned.

DATA:START and DATA:STOP are order independent. When DATA:STOP is less than DATA:START, the values will be swapped internally for the CURVE? query.

If you always want to transfer complete waveforms, set DATA:START to 1 and DATA:STOP to the maximum record length, or larger.

Examples DATA:STOP? might return :DATA:STOP 14900 indicating that 14900 is the last waveform data point that will be transferred.

DATA:STOP 15000 specifies that the waveform transfer will stop at data point 15000.

DATA:WIDTH

Sets or returns the number of bytes per data point in the waveform transferred using the CURVe command.

Group Waveform Transfer

Syntax DATA:WIDTH <NR1>
DATA:WIDTH?

Related Commands [CURVe](#)

Arguments <NR1> = 1 specifies that there is 1 byte (8 bits) per point.

<NR1> = 2 specifies that there are 2 bytes (16 bits) per point. This format is useful for AVErage waveforms.

Examples DATA:WIDTH 1
sets the data width to 1 byte per data point for CURVe data.

DATE

Sets or returns the date that the instrument can display. This command is equivalent to pushing the front-panel **Utility** button, then selecting **System** in the lower-bezel menu repeatedly until you select **Config** from the pop-up menu. Push **Set Date & Time** from the lower-bezel button. Enter the date by pushing the appropriate side-menu **Month**, **Day**, and **Year** items and turning a multipurpose knob or knobs as required.

Group Miscellaneous

Syntax DATE <QString>
DATE?

Related Commands [TIME](#)

Arguments <QString> is a date in the form "yyyy-mm-dd" where yyyy refers to a four-digit year number, mm refers to a two-digit month number from 01 to 12, and dd refers to a two-digit day number in the month.

Examples DATE "2006-01-24" specifies that the date is set to January 24, 2006.
DATE? might return :DATE 2006-01-24 indicating the current date is set to January 24, 2006.

*DDT

Allows you to specify a command or a list of commands that are executed when the instrument receives a [*TRG](#) command or the GET GPIB interface message. Define Device Trigger ([*DDT](#)) is a special alias that the [*TRG](#) command uses.

Group Miscellaneous

Syntax *DDT {<Block>|<QString>}
*DDT?

Related Commands [ALias](#), [*TRG](#)

Arguments <Block> is a complete sequence of program messages. The messages can contain only valid commands that must be separated by semicolons and must follow all

rules for concatenating commands. The sequence must be less than or equal to 80 characters. The format of this argument is always returned as a query.

<QString> is a complete sequence of program messages. The messages can contain only valid commands that must be separated by semicolons and must follow all rules for concatenating commands. The sequence must be less than or equal to 80 characters.

Examples *DDT #OACQUIRE:STATE RUN specifies that the acquisition system will be started each time a *TRG command is sent.

DESE

Sets and queries the bits in the Device Event Status Enable Register (DESER). The DESER is the mask that determines whether events are reported to the Standard Event Status Register (SESR), and entered into the Event Queue. For a more detailed discussion of the use of these registers, see Registers.

Group Status and Error

Syntax DESE <NR1>
DESE?

Related Commands *CLS, *ESE, *ESR?, EVENT?, EVMsg?, *SRE, *STB?

Arguments <NR1> The binary bits of the DESER are set according to this value, which ranges from 1 through 255. For example, DESE 209 sets the DESER to the binary value 11010001 (that is, the most significant bit in the register is set to 1, the next most significant bit to 1, the next bit to 0, etc.).

The power-on default for DESER is all bits set if *PSC is 1. If *PSC is 0, the DESER maintains the previous power cycle value through the current power cycle.

NOTE. *Setting the DESER and ESER to the same value allows only those codes to be entered into the Event Queue and summarized on the ESB bit (bit 5) of the Status Byte Register. Use the *ESE command to set the ESER.*

Examples DESE 209 sets the DESER to binary 11010001, which enables the PON, URQ, EXE and OPC bits.

DESE? might return :DESE 186, showing that the DESER contains the binary value 10111010.

DIAG:LOOP:OPTion

Sets the self-test loop option.

Group Calibration and Diagnostic

Syntax `DIAG:LOOP:OPTion {ALWAYS|FAIL|ONFAIL|ONCE|NTIMES}`

Arguments ALWAYS continues looping until the self tests (diagnostics) are stopped via the front panel or by an instrument command.

FAIL causes looping until the first self test (diagnostic) failure or until self tests (diagnostics) are stopped.

ONFAIL causes looping on a specific test group as long as a FAIL status is returned from the test.

ONCE executes self test (diagnostics test) sequence once.

NTIMES runs n number of loops.

Examples `DIAG:LOOP:OPTION ONCE` runs one loop of self tests.

DIAG:LOOP:OPTion:NTIMes

Sets the self-test loop option to run N times.

Group Calibration and Diagnostic

Syntax `DIAG:LOOP:OPTion:NTIMes <NR1>`
`DIAG:LOOP:OPTion:NTIMes?`

Arguments <NR1> is the number of self-test loops.

Examples `DIAG:LOOP:OPTION:NTIMES 3` sets the self-test loop to run three times.

`DIAG:LOOP:OPTION:NTIMES?` might return `:DIAG:LOOP:OPTION:NTIMES 5`, indicating the self-test loop is set to run five times.

DIAG:LOOP:STOP (No Query Form)

Stops the self test at the end of the current loop.

Group	Calibration and Diagnostic
Syntax	DIAG:LOOP:STOP
Examples	DIAG:LOOP:STOP stops the self test at the end of the current loop.

DIAG:RESULT:FLAG? (Query Only)

Returns the pass/fail status from the last self-test sequence execution. Use this query to determine which test(s) has failed.

Group	Calibration and Diagnostic
Syntax	DIAG:RESUlT:FLAg?
Related Commands	DIAG:RESUlT:LOG?
Returns	PASS indicating that all of the selected self (diagnostic) tests have passed. FAIL indicating that at least one of the selected self (diagnostic) tests has failed.
Examples	DIAG:RESULT:FLAG? returns either DIAG:RESULT:FLAG PASS or FAIL.

DIAG:RESULT:LOG? (Query Only)

Returns the internal results log from the last self-test sequence execution. The list contains all modules and module interfaces that were tested along with the pass/fail status of each.

Group	Calibration and Diagnostic
Syntax	DIAG:RESUlT:LOG?
Related Commands	DIAG:RESUlT:FLAg?
Returns	<QString> in the following format: <Status>--<Module name>[, <Status>--<Module name>...]

Examples `DIAG:RESULT:LOG?` might return `:DIAG:RESULT:LOG "NOT RUN--CPU,NOT RUN--DISPLAY,NOT RUN--FPANEL,NOT RUN--IO,NOT RUN--ACQ,NOT RUN--ROM,NOT RUN--APPKEY"`

DIAG:SElect:ALL (No Query Form)

This command (no query form) selects all available subsystems.

Group Calibration and Diagnostic

Syntax `DIAG:SElect:ALL`

Examples `DIAG:SELECT:ALL` selects all available subsystems.

DIAG:SElect:<function> (No Query Form)

Sets the oscilloscope to run self tests on the specified system subsystem.

Group Calibration and Diagnostic

Syntax `DIAG:SElect:<function>`

Arguments `<function>` specifies a single oscilloscope subsystem on which to run self tests (diagnostics). Valid values are:

ACQ test the acquisition system.

APPKey tests the application keys.

CPU tests the CPU.

DISpLay tests the display.

FPAnel tests the front panel controls.

IO tests the IO ports.

ROM tests the system read only memory.

Examples `DIAG:SELECT:CPU` sets the oscilloscope to run just CPU tests.

DIAG:STATE (No Query Form)

This command (no query form) either starts or stops the oscilloscope self test. Depending on the argument, self-test capabilities are either turned on or off.

This command is equivalent to pushing the front-panel **Utility** button, the lower-bezel **System** button repeated to select **Self Test**, the lower-bezel **Self Test** button, and the side-bezel **OK Run Self Test** button.

Group Calibration and Diagnostic

Syntax DIAG:STATE {EXECUTE|ABORT}

Arguments EXECUTE starts diagnostics.

ABORT stops diagnostics at the end of the current loop.

Examples DIAG:STATE EXECUTE starts diagnostics.

DISplay? (Query Only)

Returns the current display settings.

Group Display

Syntax DISplay?

DISplay:CLOCK

Sets or returns whether the oscilloscope displays the date and time.

This command is equivalent to pushing the front-panel **Utility** button, then selecting **System** in the lower-bezel menu repeatedly until you select **Config** from the pop-up menu. Push **Set Date & Time** from the lower-bezel button. Push the side-bezel menu **Display Date & Time** item as many times as needed to select either **On** or **Off**. The query form of this command returns an ON (1) or an OFF (0).

Group Display

Syntax `DISplay:CLOCK {ON|OFF|<NR1>}`
`DISplay:CLOCK?`

Related Commands [DATE](#), [TIME](#)

Arguments ON enables display of date and time.
OFF disables display of date and time.
<NR1> = 0 disables display of date and time; any other value enables display of date and time.

Examples `DISPLAY:CLOCK ON` enables display of date and time.
`DISPLAY:CLOCK?` might return `:DISPLAY:CLOCK 1` indicating that the display of date and time is currently enabled.

DISplay:GRAticule

Selects or queries the type of graticule that is displayed.

This command is equivalent to pushing the front-panel **Utility** button, pushing the lower-bezel **System** button repeatedly until you select **Display** from the pop-up menu, pushing the lower-bezel **Graticule** button, and choosing the side-bezel **Full**, **Grid**, **Cross Hair**, or **Frame** button.

Group Display

Syntax `DISplay:GRaticule {CROSSHair|FRame|FULl|GRId}`
`DISplay:GRaticule?`

Arguments `CROSSHair` specifies a frame and cross hairs.
`FRame` specifies a frame only.
`FULl` specifies a frame, a grid and cross hairs.
`GRId` specifies a frame and grid only.

Examples `DISPLAY:GRATICULE FRame` sets the graticule type to display the frame only.
`DISPLAY:GRATICULE?` might return `:DISPLAY:GRATICULE FULL` indicating that all graticule elements are selected.

DISplay:INTENSITy? (Query Only)

Returns the display intensity settings. This command is equivalent to pushing the front-panel **Intensity** button and viewing the waveform and graticule intensity values in the intensity readout.

Group	Display
Syntax	DISplay:INTENSITy?
Arguments	None
Examples	DISPLAY:INTENSITy? might return: :DISPLAY:INTENSITy:WAVEFORM 30;GRATICULE 75;BACKLIGHT HIGH

DISplay:INTENSITy:BACKLight

Sets and returns the waveform backlight intensity settings. This command is equivalent to pushing the front-panel **Utility** button, pushing the lower-bezel menu item **System** repeatedly until you select **Display** from the pop-up menu, pushing **Backlight Intensity** from the lower-bezel button, and choosing **High**, **Medium**, or **Low** from the side-bezel menu.

Group	Display
Syntax	DISplay:INTENSITy:BACKLight {LOW MEDIum HIGH} DISplay:INTENSITy:BACKLight?
Examples	DISPLAY:INTENSITy:BACKLIGHT? might return DISPLAY:INTENSITy:BACKLIGHT HIGH

DISplay:INTENSITy:GRATICule

Sets and returns the display graticule intensity settings. This command is equivalent to pushing the front-panel **Intensity** button, viewing the graticule intensity values in the intensity readout, and setting the value with a multipurpose knob.

Group	Display
--------------	---------

Syntax DISplay:INTENSITY:GRaticule <NR1>
 DISplay:INTENSITY:GRaticule?

Arguments <NR1> is the graticule intensity and ranges from 0 to 100 percent.

Examples DISPLAY:INTENSITY:GRATICULE? might return
 DISPLAY:INTENSITY:GRATICULE 30

DISplay:INTENSITY:WAVEform

Sets and returns the display waveform intensity settings. This command is equivalent to pushing the front-panel **Intensity** button, viewing the waveform intensity values in the intensity readout, and setting the value with a multipurpose knob.

Group Display

Syntax DISplay:INTENSITY:WAVEform <NR1>
 DISplay:INTENSITY:WAVEform?

Arguments <NR1> is the waveform intensity and ranges from 1 to 100 percent.

Examples DISPLAY:INTENSITY:WAVEFORM? might return
 DISPLAY:INTENSITY:WAVEFORM 60

as the intensity of the waveforms.

DISplay:PERsistence

Sets or returns the display persistence. This affects the display only.

It is equivalent to pushing the front-panel **Acquire** button and then pushing the lower-bezel menu **Waveform Display** button. You can clear persistence or set persistence to Auto by pushing an appropriate side-bezel menu item. You can enter a persistence value by turning a multipurpose knob. You can read the current value on the side-bezel menu.

NOTE. *When Persistence is set to Infinite, it does not mean that the brightness of any pixel should never decrease. The brightness of a pixel is proportionally dependent on the ratio between its intensity (which does NOT decrease at Infinite Persistence) and the maximum value of intensity of any pixel on the screen. So if a particular pixel get hit less often than others, its brightness will decrease over time. It will become less bright relative to the pixels that get hit more often.*

Group Display

Syntax DISplay:PERSistence {<NR3>|CLEAR|AUTO|MINIMUM|INFINITE}
DISplay:PERSistence?

Arguments <NR3> specifies the time of the persistence.

CLEAR resets the persist time count down and clears the display of acquired points.

INFINITE displays waveform points until a control change resets the acquisition system. When persistence is set to infinite, it does not mean that the brightness of any pixel should never decrease. The brightness of a pixel is proportionally dependent on the ratio between its intensity, which does NOT decrease at infinite persistence, and the maximum value of intensity of any pixel on the screen. Thus, if a particular pixel gets hit less often than others, its brightness will decrease over time. It will become less bright relative to the pixels that get hit more often.

AUTO specifies that the oscilloscope automatically determines the best waveform persistence based on the value of waveform intensity (DISPLAY:INTENSITY:WAVEFORM)

MINIMUM specifies that the waveform persistence is set to the minimum value of 0.0E0.

Examples DISPLAY:PERSISTENCE 3 specifies that the waveform points are displayed fading for 3 seconds before they completely disappear.

DISplay:STyle:DOTsonly

Turns on or off the dots-only mode for the waveform display.

This is equivalent to pushing the front-panel **Acquire** button, the lower-bezel **Waveform Display** button, and, as needed, the side-bezel **Dots Only** button.

Group Display

Syntax DISplay:STyle:DOTsonly {<NR1>|OFF|ON}
 DISplay:STyle:DOTsonly?

Arguments ON or <NR1> ≠ 0 turns on the dots-only display.
 OFF or <NR1> = 0 turns off the dots-only display.

*ESE

Sets and queries the bits in the Event Status Enable Register (ESER). The ESER prevents events from being reported to the Status Byte Register (STB). For a more detailed discussion of the use of these registers, see Registers.

Group Status and Error

Syntax *ESE <NR1>
 *ESE?

Related Commands *CLS, DESE, *ESR?, EVENT?, EVMsg?, *SRE, *STB?

Arguments <NR1> specifies the binary bits of the ESER according to this value, which ranges from 0 through 255.

The power-on default for the ESER is 0 if *PSC is 1. If *PSC is 0, the ESER maintains the previous power cycle value through the current power cycle.

NOTE. *Setting the DESER and the ESER to the same values allows only those codes to be entered into the Event Queue and summarized on the ESB bit (bit 5) of the Status Byte Register. Use the DESE command to set the DESER.*

Examples *ESE 209 sets the ESER to binary 11010001, which enables the PON, URQ, EXE, and OPC bits.

*ESE? might return 186, showing that the ESER contains the binary value 10111010.

*ESR? (Query Only)

Returns the contents of the Standard Event Status Register (SESR). *ESR? also clears the SESR (since reading the SESR clears it). For a more detailed discussion of the use of these registers, see Registers.

Group Status and Error

Syntax *ESR?

Related Commands ALLEv?, *CLS, DESE, *ESE, EVENT?, EVMsg?, *SRE, *STB?

Examples *ESR? might return 213, showing that the SESR contains the binary value 11010101.

ETHERnet:DHCPbootp

Sets or returns the network initialization search for a DHCP/BOOTP server.

Group Ethernet

Syntax ETHERnet:DHCPbootp {ON|OFF}
ETHERnet:DHCPbootp?

Arguments ON enables the oscilloscope to search the network for a DHCP or BOOTP server in order to automatically assign a dynamic IP address to the oscilloscope.

NOTE. Do not use DHCP/BOOTP searching if your oscilloscope has been assigned a static address on a network. If you set this command to ON, the DHCP/BOOTP search will delete or change your static IP address information.

OFF disables the oscilloscope to search the network for a DHCP or BOOTP server.

Examples ETHERNET:DHCPBOOTP ON sets the oscilloscope to search for a DHCP or BOOTP server and assign a dynamic IP address to the oscilloscope.

ETHERnet:DNS:IPADdRESS

Sets or returns the network Domain Name Server (DNS) IP address.

Group Ethernet

Syntax ETHERnet:DNS:IPADDRESS <QString>
 ETHERnet:DNS:IPADDRESS?

Arguments <QString> is a standard IP address value, enclosed in quotes.

Examples ETHERNET:DNS:IPADDRESS "128.196.13.352" sets the DNS IP address that the oscilloscope uses to communicate with the network.

ETHERnet:DOMAINname

Sets or returns the network domain name.

Group Ethernet

Syntax ETHERnet:DOMAINname <Qstring>
 ETHERnet:DOMAINname?

Arguments <QString> is the network domain name, enclosed in quotes.

Examples ETHERNET:DOMAINNAME "Alpha1.Mycorp.com" sets the domain name that the oscilloscope uses to communicate with the network.

ETHERnet:ENET:ADDRESS? (Query Only)

Returns the Ethernet address value assigned to the oscilloscope. This is assigned at the factory and can not be changed.

Group Ethernet

Syntax ETHERnet:ENET:ADDRESS?

Examples ETHERNET:ENET:ADDRESS? returns an Ethernet address such as 08:00:11:01:02:03

ETHERnet:GATEWay:IPADDRESS

Sets or returns the remote interface gateway IP address.

Group	Ethernet
Syntax	ETHERnet:GATEWay:IPADDRESS <QString> ETHERnet:GATEWay:IPADDRESS?
Arguments	<QString> is a standard IP address value, enclosed in quotes.
Examples	ETHERNET:GATEWAY:IPADDRESS "128.143.16.1" sets the gateway IP address.

ETHERnet:HTTPPort

Sets or returns the remote interface HTTP port value.

Group	Ethernet
Syntax	ETHERnet:HTTPPort <QString> ETHERnet:HTTPPort?
Arguments	<QString> is an integer port number, enclosed in quotes.

NOTE. Consider the following if you are using the e*Scope™ control software. If you don't enter a port address in the URL, then the ETHERnet:HTTPPort value must be set to "80", which is the default port for HTTP protocol. If you use a URL with a port address (for example: http://DPO4104-04WKL4:1234), the port number is specified by the number after the colon. Set the ETHERnet:HTTPPort value to this same number.

Examples	ETHERNET:HTTPPORT "80" sets the HTTP port value to 80.
-----------------	--

ETHERnet:IPADDRESS

Sets or returns the IP address assigned to the oscilloscope.

Group	Ethernet
Syntax	ETHERnet:IPADDRESS <QString> ETHERnet:IPADDRESS?

Arguments <QString> is a standard IP address value, enclosed in quotes.

Examples ETHERNET:IPADDRESS "123.121.13.214" sets the oscilloscope's IP address.

ETHERnet:NAME

Sets or returns the network name assigned to the oscilloscope.

Group Ethernet

Syntax ETHERnet:NAME <QString>
ETHERnet:NAME?

Arguments <QString> is the network name assigned to the oscilloscope, enclosed in quotes.

Examples ETHERNET:NAME "labscope1" sets the oscilloscope's network name.

ETHERnet:PASSWORD

Sets or returns the HTTP Ethernet access password. If a password is set, the user must enter the password before the user's Web browser can access the oscilloscope.

Group Ethernet

Syntax ETHERnet:PASSWORD <new>
ETHERnet:PASSWORD?

Arguments <new> is a new password, enclosed in quotes.

Examples ETHERNET:PASSWORD "ZEN53" replaces the current Ethernet password with the new password ZEN53.

ETHERNET:PASSWORD? might return :ETHERNET:PASSWORD "ZEN53".

ETHERnet:PING (No Query Form)

Causes the oscilloscope to ping the gateway IP address.

Group	Ethernet
Syntax	ETHERnet:PING EXECute
Examples	ETHERNET:PING EXECUTE causes the oscilloscope to ping the gateway IP address.

ETHERnet:PING:STATUS? (Query Only)

Returns the results from sending the [ETHERnet:PING](#) command to ping the gateway IP address.

Group	Ethernet
Syntax	ETHERnet:PING:STATUS?
Returns	OK if the computer at the gateway IP address answers. NORESPONSE if the computer at the gateway IP address does not answer. INPROGRESS if the ping operation is still executing.

ETHERnet:SUBNETMask

Sets or returns the remote interface subnet mask value.

Group	Ethernet
Syntax	ETHERnet:SUBNETMask <QString> ETHERnet:SUBNETMask?
Arguments	<QString> is the subnet mask value, enclosed in quotes.
Examples	ETHERNET:SUBNETMASK "255.255.255.0" sets the subnet mask value using standard IP address notation format.

EVENT? (Query Only)

Returns an event code from the Event Queue that provides information about the results of the last [*ESR?](#) read. EVENT? also removes the returned value from the Event Queue.

Group Status and Error

Syntax EVENT?

Related Commands [ALLEv?](#), [*CLS](#), [DESE](#), [*ESE](#), [*ESR?](#), [EVMsg?](#), [*SRE](#), [*STB?](#)

Examples EVENT? might return :EVENT 110, showing that there was an error in a command header. (See page 3-13, *Messages*.)

EVMsg? (Query Only)

Removes a single event code from the Event Queue that is associated with the results of the last [*ESR?](#) read and returns the event code along with an explanatory message. For more information, see Event Handling.

Group Status and Error

Syntax EVMsg?

Related Commands [ALLEv?](#)
[*CLS](#), [DESE](#), [*ESE](#), [*ESR?](#), [EVENT?](#), [*SRE](#), [*STB?](#)

Returns The event code and message in the following format:
 <Event Code><Comma><QString>[<Event Code><Comma><QString>...]<QString>::= <Message>;[<Command>]
 where <Command> is the command that caused the error and may be returned when a command error is detected by the instrument. As much of the command will be returned as possible without exceeding the 60 character limit of the <Message> and <Command> string combined. The command string is right-justified.

Examples EVMSG? might return :EVMSG 110,"Command header error".

EVQty? (Query Only)

Returns the number of event codes that are in the Event Queue. This is useful when using the [ALLEv?](#) query, since it lets you know exactly how many events will be returned.

Group Status and Error

Syntax EVQty?

Related Commands [ALLEv?](#), [EVENT?](#), [EVMsg?](#)

Examples EVQTY? might return :EVQTY 3, indicating the number of event codes in the Event Queue.

FACTory (No Query Form)

Resets the instrument to its factory default settings.

This command resets the instrument settings to factory defaults:

- Clears the Event Status Enable Register
- Clears the Service Request Enable Register
- Sets the Device Event Status Enable Register to 255
- Purges all defined aliases
- Enables all Command Headers
- Sets the macro defined by *DDT to a "zero-length field."
- Clears the pending operation flag and associated operations

This command does not reset the following:

- Communication settings
- Calibration data that affects device specifications
- Protected user data
- Stored settings
- The current password (if you set one)
- The Power On Status Clear Flag

Group	Save and Recall
Syntax	FACTory
Related Commands	*PSC , *RCL , RECALL:SETUp , *RST , *SAV , SAVE:SETUp
Arguments	None
Examples	FACTORY resets the instrument to its factory default settings.

FILESystem? (Query Only)

Returns the directory listing of the current working directory and the number of bytes of free space available. This query is the same as the [FILESystem:DIR?](#) query and the [FILESystem:FREESpace?](#) query.

Group	File System
Syntax	FILESystem?
Related Commands	FILESystem:CWD , FILESystem:DELEte , FILESystem:DIR? , FILESystem:REName
Arguments	None.
Examples	FILESYSTEM? might return

```
: FILESYSTEM:DIR
"tek00000.bmp", "elusiveGlitch1.png", "TEMP.TMP", "file1.wfm", "file2.wfm",
REF1.wfm", "REF2.wfm";FREESPACE 30212096
```

FILESystem:CWD

Sets or returns the current working directory for FILESystem commands. The default working directory is "D:". Anytime that you use this command to change the directory, the directory that you specify is retained as the current working directory until you either change the directory or you delete the directory. If you delete the current working directory, the instrument resets current working

directory to the default directory (D:) the next time the instrument is powered on or the next time you execute a file system command.

This command supports the permutations of file and directory names that are supported by Microsoft Windows:

- Relative path names; for example, "./Temp"
- Absolute path names; for example, "D:/MyWaveform"
- Implied relative path names; for example "newfile.txt" becomes "D:/TekScope/newfile.txt" if the current working directory is "D:/TekScope"

Group	File System
Syntax	FILESystem:CWD {<new working directory path>}
Arguments	<new working directory path> is a quoted string that defines the current working; a directory name can be up to 128 characters.
Examples	<p>FILESYSTEM:CWD "D:/TekScope/images" sets the current working directory to images.</p> <p>FILESYSTEM:CWD ? might return :FILESYSTEM:CWD "D:/TekScope/waveforms" indicating that the current working directory is set to Waveforms.</p>

FILESystem:DELEte (No Query Form)

This command (no query form) deletes a named file. If you specify a directory name, it will delete the directory and all of its contents, the same as the RMDir command. You can also specify the filename as *.* to delete all of the files in the current or specified directory.

Group	File System
Syntax	FILESystem:DELEte <file path>
Related Commands	<p>FILESystem:CWD</p> <p>FILESystem:RMDir</p>

Arguments <file path> is a quoted string that defines the file name and path. If the file path is within the current working directory, you need only specify the file name.
The argument *.* will delete all files and subdirectories within the current working directory.

Examples FILESYSTEM:DELETE "NOT_MINE.SET" deletes the file named NOT_MINE.SET from the current working directory.

FILESystem:DIR? (Query Only)

Returns a list of quoted strings. Each string contains the name of a file or directory in the current working directory.

Group File System

Syntax FILESystem:DIR?

Related Commands [FILESystem:CWD](#), [FILESystem:MKDir](#)

Arguments None

Examples FILESYSTEM:DIR? returns a list of files and directories in the current working directory.

FILESystem:FORMat (No Query Form)

Formats a named drive

Group File System

Syntax FILESystem:FORMat

Arguments <drive name> is a quoted string that defines the disk drive to format.

Examples FILESYSTEM:FORMAT "D:"
formats the media on the D drive (CompactFlash drive).

FILESystem:FREEspace? (Query Only)

Returns the number of bytes of free space on the current drive.

Group File System

Syntax FILESystem:FREEspace?

Related Commands [FILESystem:FREEspace?](#)

FILESystem:MkDir (No Query Form)

Creates a new directory.

Group File System

Syntax FILESystem:MkDir <directory path>

Related Commands [FILESystem:CWD](#), [FILESystem:DIR?](#)

Arguments <directory path> is a quoted string that specifies the directory to create

Examples FILESYSTEM:MKDIR "D:/NewDirectory" creates the directory named *NewDirectory* at the root of the D drive.

These two commands create the directory MyNewSubDirectory within the existing directory MyDirectory at the root of the D drive:

```
FILESYSTEM:CWD "D:/MyDirectory"; FILESYSTEM:MKDIR  
"MyNewSubDirectory"
```

This, of course, assumes that *D:/MyDirectory* already existed and was not a read-only directory.

FILESystem:REName (No Query Form)

Assigns a new name to an existing file.

Group File System

Syntax FILESystem:REName <old file path>,<new file path>

Related Commands [FILESystem:CWD](#)

Arguments <old file path> is a quoted string that defines the file name and path. If the file path is within the current working directory, you need only specify the file name.

 <new file path> is a quoted string that defines the file name and path. If the file path is within the current working directory, you need only specify the file name.

Examples FILESYSTEM:RENAME "D:/TEK00000.SET", "D:/MYSETTING.SET" gives the file named TEK00000.SET the new name of MYSETTING.SET. The file remains in the root directory on the D drive.

FILESystem:RMDir (No Query Form)

Deletes a named directory. The command will cause the deletion of the directory and all of its contents. The directory must not be a read-only directory.

Group File System

Syntax FILESystem:RMDir <directory path>

Related Commands [FILESystem:CWD](#)

Arguments <directory path> is a quoted string that defines the file name and path. If the file path is within the current working directory, you need only specify the file name.

Examples FILESYSTEM:RMDIR "D:/OldDirectory" removes the directory named OldDirectory from the root of the D drive.

FPAnel:PRESS (No Query Form)

Simulates the action of pressing a specified front-panel button.

When the front panel is locked, neither physical front-panel button nor front-panel knob operations nor the `FPAnel:PRESS` nor the `:FPAnel:TURN` command will work. You can work around this by using the appropriate programmatic interface commands, instead of the front-panel commands.

Group Miscellaneous

Syntax FPanel:PRESS <button>

Arguments <button> is a name of a front-panel button. Most of the argument names associate directly with their front panel button. For example, AUTOSet is for the **Autoset** button. The few commands that do not have obvious associations are listed below.

Table 2-35: FPanel:PRESS arguments

Argument	Description
ACQUIRE	Acquire button
AUTOset	Autoset button
BMENU<x>	Screen bottom menu buttons, where <x>=1 for the left-most bottom menu button and <x>=7 for the right-most bottom menu button
B<x>	Bus select buttons, where <x> = 1 or 2.
CH<x>	Channel select button, where <x>=1 for channel 1, <x>=2 for channel 2, and so on
CURsor	Cursors button
DEFaultsetup	Default Setup button
FINE	Fine button
FORCetrig	Force Trig button
HARDcopy	Hardcopy button
INTensity	Intensity button
MAGnify	Magnify (zoom) button (not the zoom/pan knob)
MARK	Mark Set/Clear button
MATH	M button
MENUOff	Menu Off button
MEASurement	Measure button
NEXt	Next arrow button
PAUse	Play/pause button
PREv	Previous arrow button
REF	R button
RMENU<x>	Screen side menu buttons, where <x>=1 for the top-most side menu button and <x>=5 for the bottom-most side menu button
RUNStop	Run/Stop button
SAVEBUtton	Save button
SAVERecall	Save/Recall Menu button

Table 2-35: FPanel:PRESS arguments, (cont.)

Argument	Description
SEArch	Search button
SElect	Select button
SETTO50	Set to 50% button
SINGleseq	Single button
TEST	Test button
TRIGger	Trigger Menu button
UTILity	Utility button

Examples `FPANEL : PRESS AUTOSET` executes the oscilloscope Autoset function.

FPanel:TURN (No Query Form)

Simulates the action of turning a specified front-panel control knob.

When the front panel is locked, neither physical front-panel button nor front-panel knob operations nor the `:FPanel:PRESS` nor the `FPANEL :TURN` command will work. They will not generate an error event. They just will not work. You can work around this by using the appropriate programmatic interface commands, instead of the front-panel commands. For example, to set the trigger level to 50%, you could use `TRIGGER:A:SETLevel`. To force a trigger, you could use `TRIGGER FORCE`.

Group Miscellaneous

Syntax `FPANEL :TURN <knob> , <n>`

Arguments `<knob>` is the name for a rotating control.

, (comma) separates the control knob argument from the numeric rotation value argument. You do not need a white space between the arguments and the comma.

`<n>` represents the rotation direction and magnitude of rotation. Negative values represent a counterclockwise knob rotation, and positive values represent a clockwise rotation. The magnitude of `<n>` specifies the amount of the turn, where `<n> = 1` represents turning the knob one unit, `<n> = 2` represents turning the knob two units, `<n> = 5` represents turning the knob five units, and so on. The range of units depends on which front panel knob is specified.

Table 2-36: FPanel:TURN arguments

Argument	Description
GPKNOB1	Multipurpose a knob
GPKNOB2	Multipurpose b knob
HORZPos	Horizontal Position knob
HORZScale	Horizontal Scale knob
PANKNOB1	Outer pan knob
TRIGLevel	Trigger Level knob
VERTPOS<n>	Vertical Position knob
VERTSCALE<n>	Vertical Scale knob
ZOOM	Inner zoom knob

Examples FPanel:TURN TRIGLEVEL,10 duplicates turning the front panel Trigger **Level** knob clockwise by 10 units.

HARDCopy (No Query Form)

Sends a copy of the screen display to the active printer using the current ink saver and layout settings. This command is equivalent to pressing the Hardcopy button on the front panel.

Group Hard Copy

Syntax HARDCopy

Related Commands *WAI, *CLS

Examples HARDCOPY initiates a screen copy to the active printer.

HARDCopy:ACTIVEprinter

Sets or returns the currently active printer. When a hard copy operation is performed, the output will be sent to this printer. One of two methods of specifying the printer can be used: an index value obtained from looking at the list of attached printers, or by specifying the printer name.

Group Hard Copy

Syntax HARDCopy:ACTIVEprinter {<NR1>|<name>}
HARDCopy:ACTIVEprinter?

Arguments <NR1> is the index of the desired printer as returned from [HARDCopy:PRINTER:LIST?](#)

<name> is the name of the printer as specified in the printer list. This name is case sensitive and must be entered exactly as shown in the list.

HARDCopy:INKSaver

Changes hard copy output to print traces and graticule on a white background while retaining waveform color information (except for channel 1, which prints as dark blue because yellow does not show up well and is difficult to see on a white background). This option can significantly reduce print time and quantities of ink required compared with WYSIWYG dark background images.

Group Hard Copy

Syntax HARDCopy:INKSaver?

Arguments ON or <NR1> ≠ 0 sets the ink saver mode on.
OFF or <NR1> = 0 sets the ink saver mode off.

Examples HARDCOPY:INKSAVER ON will cause subsequent hard copy output to display the screen on a white background.

HARDCopy:LAYout

Sets or returns the page orientation for hard copy.

If you set the layout to LANdscape, the printer will print hard copies in landscape mode where the long edge of the screen will print to the long edge of the sheet of paper. If you set the layout to PORTRait, the printer will print hard copies in portrait mode.

Group Hard Copy

Syntax HARDCopy:LAYout {PORTRait|LANDscape}
HARDCopy:LAYout?

Arguments PORTRait orients the screen image vertically on the printed page.
LANDscape orients the screen image horizontally on the printed page.

Examples HARDCOPY:LAYOUT LANDSCAPE sets the hard copy page orientation to Landscape.
HARDCOPY:LAYOUT? might return :HARDCOPY:LAYOUT PORTRAIT indicating that the hard copy page orientation is set to portrait.

HARDCopy:PREVIEW (No Query Form)

Causes a preview of the current screen contents with the InkSaver palette applied to be displayed.

Group Hard Copy

Syntax HARDCopy:PREVIEW {ON|OFF|<NR1>}

Arguments ON or <NR1> ≠ 0 turns preview mode on.
OFF or <NR1> = 0 turns preview mode off.

HARDCopy:PRINTer:ADD (No Query Form)

Adds a network printer to the list of available printers. All three arguments must be present, but only one of server name or server IP address may be specified. An empty string can be used for blank arguments.

Group Hard Copy

Syntax HARDCopy:PRINTer:ADD <name>,<server>,<address>

Arguments <name> - The name of the network printer queue.
<server> - The host name of the print (LPR) server.

<address> - The IP address of the print server.

HARDCopy:PRINTer:DELeTe (No Query Form)

Removes a network printer from the list of available printers. Either the index from [HARDCopy:PRINTer:LIST?](#) or the printer name can be used as an argument. The printer name is case-sensitive.

Group Hard Copy

Syntax HARDCopy:PRINTer:DELeTe {<index>|<name>}

Arguments <index> is the index of the printer to be deleted
<name> is the name of the printer to be deleted.

HARDCopy:PRINTer:LIST? (Query Only)

Returns the list of currently attached printers.

Group Hard Copy

Syntax HARDCopy:PRINTer:LIST?

HARDCopy:PRINTer:REName (No Query Form)

Renames a network printer on the list of available printers, replacing the currently stored settings with the settings specified in the command. Either the index from [HARDCopy:PRINTer:LIST?](#) or the printer name can be used as the first argument. Four arguments must be present, but the arguments may be empty strings if the value for a field is to be deleted.

Group Hard Copy

Syntax HARDCopy:PRINTer:REName
{<index>|<name>}, <new_name>, <new_server>, <new_address>

- Arguments**
- <index> is the index of the printer to be deleted.
 - <name> is the name of the printer to be deleted.
 - <new_name> is the new name for this printer.
 - <new_server> is the new print server for this printer.
 - <new_address> is the new IP address for the server.

HDR

This command is identical to the HEADer query and is included for backward compatibility purposes.

Group Miscellaneous

Syntax HDR {OFF|ON|<NR1>}
HDR?

Related Commands [HEADer](#), [VERBose](#)

- Arguments**
- OFF sets the Response Header Enable State to false. This causes the instrument to omit headers on query responses, so that only the argument is returned.
 - ON sets the Response Header Enable State to true. This causes the instrument to include headers on applicable query responses. You can then use the query response as a command.
 - <NR1> = 0 causes the instrument to omit headers. Non-zero values cause the headers to be included.

- Examples**
- HDR OFF specifies that the instrument omits headers on query responses, so that only the argument is returned.
 - HDR? might return :HEADER 1, indicating that the instrument is including headers on applicable query responses.

HEADer

Sets or returns the Response Header Enable State that causes the instrument to either include or omit headers on query responses.

NOTE. *This command does not affect IEEE Std 488.2-1987 Common Commands (those starting with an asterisk); these commands never return headers. This command does make a corresponding change in the Response Header Enable State of the opposite interface (physical or virtual GPIB interface). Refer to Introduction for more information.*

Group	Miscellaneous
Syntax	HEADer {OFF ON <NR1>} HEADer?
Related Commands	HDR , VERBoSe
Arguments	<p>OFF sets the Response Header Enable State to false. This causes the instrument to omit headers on query responses, so that only the argument is returned.</p> <p>ON sets the Response Header Enable State to true. This causes the instrument to include headers on applicable query responses. You can then use the query response as a command.</p> <p><NR1> = 0 sets the Response Header Enable State to false; any other value sets this state to true.</p>
Examples	<p>HEADER OFF specifies that the instrument omits headers on query responses, so that only the argument is returned.</p> <p>HEADER? might return :HEADER 1 indicating that the instrument is including headers on applicable query responses.</p>

HORizontal? (Query Only)

Returns all settings for the horizontal commands.

Group	Horizontal
Syntax	HORizontal?
Examples	<p>HORIZONTAL? might return the following horizontal settings</p> <pre>:HORIZONTAL:DELAY:MODE 1;TIME 0.0000;:HORIZONTAL:MAIN:SCALE 20.0000E-9;SAMPLERATE 5.0000E+9;UNITS "s";UNITS:STRING "s";:HORIZONTAL:SAMPLERATE 5.0000E+9;RECORDLENGTH 1000000</pre>

HORizontal:ACQLENGTH? (Query Only)

Returns the record length.

Group Horizontal

Syntax HORizontal:ACQLENGTH?

Related Commands [HORizontal:RECOrdlength](#)

HORizontal:MAIn? (Query Only)

Returns all the main time base parameters.

Group Horizontal

Syntax HORizontal:MAIn?

Examples HORizontal:MAIn? might return :HORizontal:MAIn:SCALE
4.0000E-6;SAMPLERATE 250.0000E+6;UNITS "s";UNITS:STRING "s"

HORizontal[:MAIn]:DELAy:MODE

Sets or returns the time base trigger delay mode. This command always returns ON. It is included for backward compatibility only.

Group Horizontal

Syntax HORizontal[:MAIn]:DELAy:MODE {ON|OFF|<NR1>}
HORizontal[:MAIn]:DELAy:MODE?

Related Commands [HORizontal\[:MAIn\]:DELAy:TIME](#)

HORizontal[:MAIn]:DELAy:STATE

HORizontal[:MAIn]:DELAy:STATE is always ON. This command is included for backward compatibility only.

Group Horizontal

Syntax `HORizontal[:MAIN]:DElay:STATE {ON|OFF|<NR1>}`
`HORizontal[:MAIN]:DElay:STATE?`

Related Commands [HORizontal\[:MAIN\]:DElay:TIME](#)

HORizontal[:MAIN]:DElay:TIME

Sets or returns the time base trigger delay time.

Group Horizontal

Syntax `HORizontal[:MAIN]:DElay:TIME <NR3>`
`HORizontal[:MAIN]:DElay:TIME?`

Arguments <NR3> specifies the time base trigger delay time setting, typically represented in seconds.

Examples `HORIZONTAL:DELAY:TIME 5.0E-3` sets the time base trigger delay time to 5 ms.
`HORIZONTAL:DELAY:TIME?` might return `:HORIZONTAL:MAIN:DELAY 5.0000E-05` indicating that the time delay setting is 5 μ s.

HORizontal[:MAIN]:POSition? (Query Only)

Always returns a horizontal position of 50%. This command is included for backward compatibility only.

Group Horizontal

Syntax `HORizontal[:MAIN]:POSition?`

Examples `HORIZONTAL:MAIN:POSITION?` returns `:HORIZONTAL:MAIN:POSITION 5.0000E+01` indicating that the horizontal position of the waveform on the screen is currently set to 50 percent.

HORizontal:MAIn:SAMPLERate? (Query Only)

Returns the current horizontal sample rate.

Group Horizontal

Syntax HORizontal:MAIn:SAMPLERate?

Related Commands [HORizontal:RECOrdlength](#)

Examples HORIZONTAL:MAIN:SAMPLERATE? might return
:HORIZONTAL:MAIN:SAMPLERATE 2.5000E+09 indicating that
the sample rate is currently set to 2.5 GS/s.

HORizontal[:MAIn]:SCALE

Sets the time per division for the time base or returns its horizontal scale on the display and is identical to the [HORizontal:MAIn:SECdiv](#) command. The specified scale value is rounded to a valid scale setting. This command is equivalent to turning the **Horizontal Scale** knob.

Group Horizontal

Syntax HORizontal[:MAIn]:SCALE
HORizontal[:MAIn]:SCALE?

Arguments <NR3> is the time per division. The range is from 400 ps (1 ns) through 1000 s, depending on the record length.

Examples HORIZONTAL[:MAIN]:SCALE 2E-6 sets the main scale to 2 μ s per division.
HORIZONTAL[:MAIN]:SCALE? might return :HORIZONTAL:MAIN:SCALE
2.0000E-06 indicating that the main scale is currently set to 2 μ s per division.

HORizontal:MAIn:SECdiv

Sets the time per division for the time base or returns its horizontal scale on the display and is identical to the [HORizontal\[:MAIn\]:SCALE](#) command. The specified scale value is rounded to a valid scale setting. This command is equivalent to turning the **Horizontal Scale** knob.

Group	Horizontal
Syntax	HORizontal:MAIn:SECdiv HORizontal:MAIn:SECdiv?
Arguments	<NR3> is the time per division. The range is from 400 ps (1 ns) through 1000 s, depending on the record length.
Examples	HORIZONTAL:MAIN:SECDIV 2E-6 sets the main scale to 2µs per division. HORIZONTAL:MAIN:SECDIV? might return :HORIZONTAL:MAIN:SCALE 2.0000E-06 indicating that the main scale is currently set to 2 µs per division.

HORizontal:MAIn:UNIts? (Query Only)

Returns the units string for the horizontal time base. It is equivalent to [HORizontal:MAIn:UNIts:STRing?](#).

Group	Horizontal
Syntax	HORizontal:MAIn:UNIts?
Related Commands	HORizontal:MAIn:UNIts:STRing?
Examples	HORIZONTAL:MAIN:UNITS? might return :HORIZONTAL:MAIN:UNITS STRING "HZ".

HORizontal:MAIn:UNIts:STRing? (Query Only)

Returns the units string for the horizontal time base. It is equivalent to [HORizontal:MAIn:UNIts?](#).

Group	Horizontal
Syntax	HORizontal:MAIn:UNIts:STRing?
Related Commands	HORizontal:MAIn:UNIts?

Examples `HORIZONTAL:MAIN:UNITS:STRING?` might return
`:HORIZONTAL:MAIN:UNITS:STRING "Hz"` indicating that the
horizontal units string is set to Hertz.

HORizontal:PREViewstate? (Query Only)

Returns a boolean value to indicate whether the acquisition system is in the preview state.

Group Horizontal

Syntax `HORizontal:PREViewstate?`

Returns `<NR1> = 1` if the acquisition system is in the preview state.
`<NR1> = 0` if the acquisition system is not in the preview state.

HORizontal:RECOrdlength

Sets the horizontal record length to the number of data points in each frame. The query form of this command returns the current horizontal record length. This command is equivalent to pushing the front-panel **Acquire** button, the lower-bezel menu **Record Length** button, and the side-bezel menu **1000 points**, **10k points**, **100k points**, **1M points**, and **10M points**.

Group Horizontal

Syntax `HORizontal:RECOrdlength <NR1>`
`HORizontal:RECOrdlength?`

Arguments `<NR1>` represents the supported values for horizontal record lengths, which are: 1000, 10000, 100000, 1000000, or 10000000.

Examples `HORIZONTAL:RECORDLENGTH 10000` specifies that 10000 data points will be acquired for each record.

`HORIZONTAL:RECORDLENGTH?` might return `:HORIZONTAL:RECORDlength 1000` indicating that the horizontal record length is equal to 1000 data points.

ID? (Query Only)

Returns identifying information about the instrument and related firmware.

Group Miscellaneous

Syntax ID?

Related Commands [*IDN?](#)

Examples ID? might return TEK/DPO4034 , CF : 91 . 1CT , FV : v1 . 0000 . This indicates the instrument model number, configured format, and firmware version number.

*IDN? (Query Only)

Returns the instrument identification code.

Group Miscellaneous

Syntax *IDN?

Related Commands [ID?](#)

Examples *IDN? might return :TEKTRONIX , DPO4034 , SN123456789 , CF : 91 . 1CT FV : v1 . 00000 indicating the instrument model number, serial number, configured number, and firmware version number.

LANGuage

Sets or returns the user interface display language. This command only affects the oscilloscope displayed language. Remote commands and their responses are always in English.

Group Miscellaneous

Syntax LANGuage
{ENGLISH|FRENCH|GERMAN|ITALIAN|SPANISH|PORTUGUESE|JAPANESE|KOREAN|RUSSIAN|SIMPLIFIEDCHINESE|TRADITIONALCHINESE}

LANGUage?

Examples LANGUAGE? might return :LANGUAGE ENGLISH.

LOCK

Enables or disables all front-panel buttons and knobs. There is no front panel equivalent.

When the front panel is locked, neither the :FPAnel:PRESS nor the :FPAnel:TURN command will work. They will not generate an error event. They just will not work. You can work around this by using the appropriate programmatic interface commands, instead of the front-panel commands. For example, to set the trigger level to 50%, you could use TRIGger:A:SETLevel. To force a trigger, you could use TRIGger FORCe.

Group Miscellaneous

Syntax LOCK {ALL|NONE}
LOCK?

Related Commands [UNLock](#)

Arguments ALL disables all front panel controls.

NONE enables all front panel controls. This is equivalent to the UNLock ALL command.

Examples LOCK ALL locks the front panel controls.

LOCK? might return :LOCK NONE indicating that the front panel controls are enabled by this command.

*LRN? (Query Only)

Returns the commands that list the instrument settings except for configuration information for the calibration values, the [WFMInpre?](#) query, and the [WFMOutpre?](#) query. This query allows you to record or "learn" the current instrument settings. You can use these commands to return the instrument to the state it was in when you made the *LRN? query. This command is identical to the [SET?](#) Command.

Group Miscellaneous

Syntax *LRN?

Related Commands [SET?](#)

Examples *LRN? might return a long response, part of which could be as follows:

```
:ACQUIRE:STOPAFTER RUNSTOP;STATE 1;MODE SAMPLE;NUMENV
INFINITE;NUMAVG 16;SAMPLINGMODE RT;;HEADER 1;;LOCK
NONE;;LANGUAGE ENGLISH;;VERBOSE 1;;ALIAS:STATE
0;;DISPLAY:COLOR:PALETTE NORMAL;;DISPLAY:STYLE:DOTSONLY
0;;DISPLAY:PERSISTENCE 0.0000;CLOCK 1;GRATICULE
FULL;INTENSITY:WAVEFORM 30;GRATICULE 75;BACKLIGHT
HIGH;;HARDCOPY :INKSAVER OFF;LAYOUT LANDSCAPE;PREVIEW
0;;SAVE:IMAGE:FILEFORMAT BMP;;SAVE:WAVEFORM:FILEFORMAT
INTERNAL;;SAVE:ASSIGN:TYPE SETUP;;TRIGGER:A:MODE
AUTO;TYPE EDGE;LE VEL 20.0000E-3;LEVEL:CH1
20.0000E-3;CH2 0.0000;CH3 0.0000;CH4 0.0000;;TRIGGER:A:
UPPERTHRESHOLD:CH1 1.4000;CH2 800.0000E-3;CH3
800.0000E-3;CH4 800.0000E-3;;TRIGGER:A:LOWERTHRESHOLD:CH1
20.0000E-3;CH2 0.0000;CH3 0.0000;CH4 0.0000;;TRIGGER:A:H
OLDOFF:TIME 20.0000E-9;;TRIGGER:A:EDGE:SOURCE
CH1;COUPLING DC;SLOPE RISE;;TRIGGER:A:LOGIC:CLASS
SETHOLD;FUNCTION AND;THRESHOLD:CH1 20.0000E-3;CH2
0.0000;CH3 0.0000;CH4 0.0000;;TRIGGER:A:LOGIC:INPUT:CH1
X;CH2 X;CH3 X;CH4 X;CLOCK:SOURCE NONE; EDGE
RISE;;TRIGGER:A:LOGIC:PATTERN:INPUT:CH1 X;CH2
X;CH3 X;CH4 X;;TRIGGER:A:LOGIC:PATTERN:WHEN
TRUE;WHEN:LESSLIMIT 4.0000E-9;MORELIMIT
4.0000E-9;;TRIGGER:A:SETHOLD:CLOCK:SOURCE CH1;EDGE
RISE;THRESHOLD 20.0000E-3;;TRIGGER:A:SETHOLD:DATA:SOURCE
CH2;THRESHOLD 0.0000;;TRIGGER:A:SETHOLD:HOLDTIME
4.0000E-9;SETTIME 4.0000E-9; :TRIGGER:A:PULSE:CLASS
TRANSITION;;TRIGGER:A:PULSEWIDTH:SOURCE
CH1;POLARITY POSITIVE;WHEN LESSTHAN;WIDTH
4.0000E-9;;TRIGGER:A:RUNT:SOURCE CH1;POLARITY POSITIVE; WHEN
OCCURS;WIDTH 4.0000E-9;;TRIGGER:A:TRANSITION:SOURCE CH1
...
```

MARK

Move to the next or previous mark on the waveform. Return all Mark relevant information.

Group	Mark
Syntax	MARK {NEXT PREVIOUS} MARK?
Examples	MARK? might return: :MARK:SELECTED:STATE 0;START 9.9100E+37;FOCUS 9.9100E+37;ZOOM:POSITION 9.9100E+37;:MARK:SELECTED:END 9.9100E+37;SOURCE CH1;OWNER USER;MARKSINCOLUMN 0;:MARK:FREE 1024;TOTAL 0

MARK:CREATE (No Query Form)

Creates a mark on a particular waveform or all waveforms in a column.

Group	Mark
Syntax	MARK:CREATE {CH<x> REF<x> MATH COLUMN}
Arguments	<p>CH<x> creates the mark on a channel waveform, where <x> is the channel number.</p> <p>REF<x> creates the mark on a reference waveform, where <x> is the reference waveform number.</p> <p>MATH creates the mark on the math waveform.</p> <p>COLUMN creates marks on all waveforms in the current zoom pixel column.</p>

MARK:DELEte (No Query Form)

Deletes a mark on a particular waveform, all waveforms in a column, the selected mark, or all marks.

Group	Mark
Syntax	MARK:DELEte {CH<x> REF<x> MATH COLUMN SELECTED ALL}
Arguments	<p>CH<x> deletes the marks on a channel waveform, where <x> is the channel number.</p> <p>REF<x> deletes the marks on a reference waveform, where <x> is the reference waveform number.</p>

MATH deletes the marks on the math waveform.

COLUMN deletes the marks on all waveforms in the current zoom pixel column.

SELECTED deletes the selected mark.

ALL deletes all marks.

MARK:FREE? (Query Only)

Returns how many marks are free to be used.

Group Mark

Syntax MARK:FREE?

MARK:SElected:END? (Query Only)

Returns the end of the selected mark, in terms of 0 to 100% of the waveform.

Group Mark

Syntax MARK:SElected:END?

MARK:SElected:FOCUS? (Query Only)

Returns the focus of the selected mark, in terms of 0 to 100% of the waveform.

Group Mark

Syntax MARK:SElected:FOCUS?

MARK:SElected:MARKSINCOLUMN? (Query Only)

Returns how many marks are in the current zoom pixel column.

Group Mark

Syntax MARK:SElected:MARKSINCOLUMN?

MARK:SElected:OWNer? (Query Only)

Returns the owner of the selected mark.

Group Mark

Syntax MARK:SElected:OWNer?

Returns <QString> is the owner of the mark.

Examples MARK:SELECTED:OWNER? might return: USER, SEARCH1

MARK:SElected:SOURCE? (Query Only)

Returns the source waveform of the selected mark.

Group Mark

Syntax MARK:SElected:SOURCE?

MARK:SElected:START? (Query Only)

Returns the start of the selected mark, in terms of 0 to 100% of the waveform.

Group Mark

Syntax MARK:SElected:START?

MARK:SElected:STATE? (Query Only)

Returns the on or off state of the selected mark. The selected mark is at or near the center of the screen. When you press the front-panel **Set/Clear** button, this mark will disappear.

Group Mark

Syntax MARK:SELEcted:STATE?

MARK:SELEcted:ZOOM:POSition? (Query Only)

Returns the position of the selected mark, in terms of 0 to 100% of the zoom overview window.

Group Mark

Syntax MARK:SELEcted:ZOOM:POSition?

MARK:TOTal? (Query Only)

Returns how many marks are used.

Group Mark

Syntax MARK:TOTal?

MATH[1]? (Query Only)

Returns the definition of the math waveform. The returned data depends on the setting of the MATH[1]:TYPE command.

Group Math

Syntax MATH[1]??

Related Commands [MATH\[1\]:TYPE](#)

Examples MATH? or MATH1? might return :MATH:TYPE DUAL;DEFINE "CH1+CH2";VERTICAL:SCALE 100.0000E-3;POSITION 0.0000;UNITS "V";:MATH:HORIZONTAL:SCALE 4.0000E-6;POSITION 50.0000;UNITS "s";:MATH:SPECTRAL:MAG DB;WINDOW HANNING

MATH[1]:DEFIne

Sets or returns the current math function as a text string.

Dual math is defined if the string is of the form `<wfm> <operation> <wfm>`, where the `<wfm>`s are any combination of live channels or reference waveforms, `<operation>` is any of `+`, `-`, `*` or `/`, and the [MATH\[1\]:TYPE](#) is DUAL.

FFT math is defined if the string is in the form `FFT(<wfm>)`, where `<wfm>` is any live channel or reference waveform, and the [MATH\[1\]:TYPE](#) is FFT.

Advanced math is defined if the contents of the string can be parsed by the advanced math parser without errors and the [MATH\[1\]:TYPE](#) is ADVanced.

On the front panel, the Dual Wfm Math, FFT and Advanced Math menus contain controls that allow building equivalent math expressions to those described above.

Group	Math
Syntax	MATH[1]:DEFIne <QString> MATH[1]:DEFIne?

Related Commands [MATHVAR:VAR<x>](#)
[MATH\[1\]:TYPE](#)

Arguments `<QString>` quoted string argument is the mathematical expression that defines the waveform.

Table 2-37: Advanced Math expression elements

Expression	Description
CH1-CH4, REF1-REF4	Specifies a waveform data source.
FFT(, INTG(, DIFF(Executes a Fast Fourier Transform, integration, or differentiation operation on the expression that follows. The FFT operator must be the first (left-most) operator in an expression. All these operations must end with a right parenthesis.
AMplitude(, AREa(, BURst(, CAREa(, CMEan(, CRMs(, DELay(, FALL(, FREQuency(, HIGH(, LOW(, MAXimum(, MEAN(, MINImum(, NDuty(, NOVershoot(, NWIdth(, PDUTy(, PERIod(, PHAse(, PK2pk(, POVershoot(, PWIdth(, RISE(, RMS(, !(Executes the selected measurement operation on the waveform (active or reference) that follows. All these operations must end with a right parenthesis.

Table 2-37: Advanced Math expression elements, (cont.)

Expression	Description
LOG(, EXP(, SQRT(, SINE(, COSINE(, TANGENT(Executes trigonometric and other functions. All these operations must end with a right parenthesis.
VAR1, VAR2	Adds the user-defined variable to the expression. Refer to the MATHVAR<x> command.
+, -, *, /	Executes an addition, subtraction, multiplication, or division operation on the following expression. + and - are also unary; use - to negate the expression that follows.
<, >, <=, >=, ==, !=, , &&	Executes relational and logical operations.
(), ,	Parentheses provide a way to control evaluation order in an expression. The comma is used to separate the "from" and "to" waveforms in Delay and Phase measurement operations.
1-0, ., E	Specifies a numeric value in (optional) scientific notation.

Examples MATH1:DEFINE" CH1+CH2" adds the Ch 1 waveform and Ch 2 waveform, storing the results in Math 1.

MATH:DEFINE? might return :MATH1:DEFINE "CH2*REF2" as the expression that defines Math 1.

MATH[1]:HORizontal:POSition

Sets or returns the math horizontal display position for FFT or math waveforms that only have reference waveform source waveforms.

The front-panel equivalent for FFT math or other math containing no live components is to turn a multipurpose knob. For any non-FFT math containing live waveform components, the front-panel equivalent for the math horizontal position is determined by the horizontal position of the input waveform(s).

Group Math

Syntax MATH[1]:HORizontal:POSition <NR3>
MATH[1]:HORizontal:POSition?

Arguments <NR3> is the % of the math waveform that precedes center screen. It can vary from 0.0 to 100.0.

Examples MATH:HORIZONTAL:POSITION 10 sets the horizontal position to 10% pretrigger

MATH[1]:HORizontal:SCALE

Sets or returns the math horizontal display scale for FFT or for dual math waveforms that have source waveforms that are reference waveforms. The horizontal scale of a dual math waveform with a channel source waveform is set through the HORizontal:SCALE command.

The front-panel equivalent for FFT math or other math containing no live components is to turn a multipurpose knob. For any non-FFT math containing live waveform components, the front-panel equivalent for the math horizontal scale is determined by the horizontal scale of the input waveform(s).

Group Math

Syntax MATH[1]:HORizontal:SCALE <NR3>
MATH[1]:HORizontal:SCALE?

Arguments <NR3> is the math horizontal scale in seconds.

Examples MATH:HORIZONTAL:SCALE? might return MATH:HORIZONTAL:SCALE 2.0E-4 indicating that the math horizontal scale is 200 μ

MATH[1]:HORizontal:UNITs (Query Only)

Returns the math waveform horizontal measurement unit value.

Group Math

Syntax MATH[1]:HORizontal:UNITs?

Examples MATH:HORIZONTAL:UNITs? might return MATH:HORIZONTAL:UNITs "?" indicating that the math horizontal unit label for unknown values is the default question mark unit.

MATH[1]:SPECTral:MAG

Sets or returns the units of the SpectralMag function in the math string.

Group Math

Syntax MATH[1]:SPECTral:MAG {LINEAR|DB}
MATH[1]:SPECTral:MAG?

Arguments LINEAR sets the SpectralMag units to linear.
DB sets the SpectralMag units to decibels.

Examples MATH1:SPECTRAL:MAG DB sets the SpectralMag units for Math1 to decibels.
MATH1:SPECTRAL:MAG? might return :MATH1:SPECTRAL:MAG DB indicating that the SpectralMag units for Math1 are set to decibels.

MATH[1]:SPECTral:WINDow

Sets or returns the window function used to multiply the spectral analyzer input data for the specified math waveform. A spectral window determines what the filter shape of the spectral analyzer will be in the frequency domain. It can be described by a mathematical function that is multiplied point-by-point times the input data to the spectral analyzer.

This command is equal to pushing the front-panel **M** button, the lower-bezel menu's **FFT** button, and repeatedly pressing the side-bezel **Window** button until you select the window type of interest.

Group Math

Syntax MATH[1]:SPECTral:WINDow
{RECTangular|HAMming|HANning|BLACKmanharris}
MATH[1]:SPECTral:WINDow?

Arguments RECTangular window function is equivalent to multiplying all gate data by one.
HAMming window function is based on a cosine series.
HANning window function is based on a cosine series.
BLACKmanharris window function is based on a cosine series.

Examples `MATH1:SPECTRAL:WINDOW HANNING` applies a Hanning window to the spectral analyzer input data.

`MATH1:SPECTRAL:WINDOW?` might return `:MATH1:SPECTRAL:WINDOW HAMMING` indicating that the window function used to multiply the spectral analyzer input data is the Hamming window.

MATH[1]:TYPE

Sets or returns the math waveform mode type.

This is equivalent to pushing the front-panel **M** button, and either **Dual Wfm Math**, **FFT**, or **Advanced Math** from the resulting lower-bezel menu.

Group Math

Syntax `MATH[1]:TYPE {ADVANCED|DUAL|FFT}`
`MATH[1]:TYPE?`

Arguments `ADVANCED` sets the math waveform mode to advanced math.
`DUAL` sets the math waveform mode to dual waveform math.
`FFT` sets the math waveform mode to FFT math.

Examples `MATH:TYPE FFT` sets the math waveform mode to FFT.

`MATH:TYPE FFT;:MATH:DEFINE "FFT(CH1)"` sets the math type to FFT and displays an FFT waveform of the channel 1 waveform, using the current FFT scale and window settings.

`MATH:TYPE ADVANCED;:MATH:DEFINE "INTG(REF1*CH3)+DELAY(CH1,CH2)"` sets the math type to FFT and displays an advanced math waveform that is the integration of the product of REF1 and CH3 plus the result of the delay measurement between channel 1 and 2.

MATH[1]:VERTical:POSITION

Sets or returns the vertical position of the currently selected math type.

This command is equivalent to pushing the front-panel **M** button and turning a multipurpose knob to adjust the vertical position of the waveform.

Group Math

Syntax MATH[1]:VERTical:POSITION <NR3>
MATH[1]:VERTical:POSITION?

Related Commands CH<x>:POSition, REF<x>:VERTical:POSition

Arguments <NR3> is the desired position in divisions from the center graticule.

Examples MATH1:VERTICAL:POSITION 1.3E+00 positions the Math 1 input signal 1.3 divisions higher than a position of 0.
MATH1:VERTICAL:POSITION? might return :MATH1:VERTICAL:POSITION -1.3000E+00 indicating that the current position of Math 1 is 1.3 divisions below the center graticule.

MATH[1]:VERTical:SCAle

Sets or returns the vertical scale of the currently selected math type.

This command is equivalent to pushing the front-panel **M** button and turning the a multipurpose knob to adjust the vertical scale of the waveform.

Group Math

Syntax MATH[1]:VERTical:SCAle <NR3>
MATH[1]:VERTical:SCAle?

Related Commands CH<x>:SCAle, REF<x>:VERTical:SCAle

Arguments <NR3> is the scale per division in the current math vertical units. The range is from 1.0E-12 through 500.0E+12.

Examples MATH1:VERTICAL:SCALE 100E-03 sets the Math scale to 100 mV per division.
MATH:VERTICAL:SCALE? might return :MATH:VERTICAL:SCALE 1.0000E+00 indicating that the current scale setting of Math is 1 V per division.

MATH[1]:VERTical:UNITs (Query Only)

Returns the math waveform vertical measurement unit value.

Group	Math
Syntax	MATH[1]:VERTICAL:UNITS?
Examples	MATH:VERTICAL:UNITS? might return MATH:VERTICAL:UNITS "joules" indicating that the math vertical unit label for unknown values is joules.

MATHVAR? (Query Only)

Queries both numerical values you can use within math expressions.

Group	Math
Syntax	MATHVAR?
Related Commands	MATHVAR:VAR<x> MATH[1]:DEFine
Returns	<NR3> are the stored numerical values.
Examples	MATHVAR? returns the values of all variables stored in locations 1 through 2.

MATHVAR:VAR<x>

Sets or returns one of two different numerical values you can use within math expressions. These values can range from -10.0e-18 to 1.0e+15; the default values are 0.0. <x> specifies the location, 1 or 2, in which you can store values. Stored math variables can be referenced within math expressions as VAR1 and VAR2.

For example, the following command defines MATH1 as the product of Channel 1 and math variable 1: MATH1:DEFINE "CH1 * VAR1".

Group	Math
Syntax	MATHVAR:VAR<x> <NR3> MATHVAR:VAR<x>?

Related Commands [MATHVAR:VAR<x>](#)
 [MATH\[1\]:DEFIne](#)

Arguments <NR3> specifies the numerical value to be stored in location x <1 through 2>.

Examples MATHVAR:VAR2 -2.43E-5 stores the value -2.43e-5 in the second math variable location.

MATHVAR:VAR2? might return :MATHVAR:VAR2 24.3000E-6 for the expression stored in location 2.

MEASUREMENT? (Query Only)

Returns all measurement parameters.

Group Measurement

Syntax MEASUREMENT?

Examples MEASUREMENT? might return :MEASUREMENT:IMMED:DELAY:DIRECTION FORWARDS;EDGE1 RISE;EDGE2 RISE;:MEASUREMENT:IMMED:TYPE PERIOD;UNITS "s";SOURCE1 CH1;SOURCE2 CH2;:MEASUREMENT:MEAS1:DELAY:DIRECTION FORWARDS;EDGE1 RISE;EDGE2 RISE;:MEASUREMENT:MEAS1:STATE 1;TYPE FREQUENCY;UNITS "Hz";SOURCE1 CH1;SOURCE2 CH2;COUNT 0;MAXIMUM 0.0000;MEAN 0.0000;MINIMUM 0.0000;STDDEV 0.0000;:MEASUREMENT:MEAS2:DELAY:DIRECTION FORWARDS;EDGE1 RISE;EDGE2 RISE;:MEASUREMENT:MEAS2:STATE 1;TYPE PERIOD;UNITS "s";SOURCE1 CH1;SOURCE2 CH2;COUNT 0;MAXIMUM 0.0000;MEAN 0.0000;MINIMUM 0.0000;STDDEV 0.0000;:MEASUREMENT:MEAS3:DELAY:DIRECTION FORWARDS;EDGE1 RISE;EDGE2 RISE;:MEASUREMENT:MEAS3:STATE 1;TYPE PK2PK;UNITS "V";SOURCE1 CH1;SOURCE2 CH2;COUNT 0;MAXIMUM 0.0000;MEAN 0.0000;MINIMUM 0.0000;STDDEV 0.0000;:MEASUREMENT:MEAS4:DELAY:DIRECTION FORWARDS;EDGE1 RISE;EDGE2 RISE;:MEASUREMENT:MEAS4:STATE 0;TYPE PERIOD;UNITS "s";SOURCE1 CH1;SOURCE2 CH2;COUNT 0;MAXIMUM 0.0000;MEAN 0.0000;MINIMUM 0.0000;STDDEV 0.0000;:MEASUREMENT:METHOD AUTO;REFLEVEL:METHOD PERCENT;ABSOLUTE:HIGH 0.0000;LOW 0.0000;MID1 0.0000;MID2 0.0000;:MEASUREMENT:REFLEVEL:PERCENT:HIGH 90.0000;LOW 10.0000;MID1 50.0000;MID2 50.0000;:MEASUREMENT:INDICATORS:STATE

```
OFF;NUMHORZ 0;NUMVERT 0;HORZ1 99.0000E +36;HORZ2
99.0000E+36;HORZ3 99.0000E+36;HORZ4 99.0000E+36;VERT1
99.0000E+36;VERT2 99.0000E+36;VERT3 99.0000E+36;VERT4
99.0000E+36;:MEASUREMENT:STATISTICS:MODE OFF;WEIGHTING
32;:MEASUREMENT:GATING SCREEN.
```

MEASUREMENT:CLEARSnapshot (No Query Form)

Removes the measurement snapshot display.

Group Measurement

Syntax MEASUREMENT:CLEARSnapshot

Related Commands [CLEARMenu](#)

Examples

MEASUREMENT:GATING

Specifies or returns the measurement gating setting. This command is equivalent to pushing the front-panel **Measure** button, the lower-bezel menu **Gating** button, and the appropriate side-bezel menu button.

Group Measurement

Syntax MEASUREMENT:GATING {OFF|SCREEN|CURSOR}
MEASUREMENT:GATING?

Arguments OFF turns off measurement gating (full record).

SCREEN turns on gating, using the left and right edges of the screen.

CURSOR limits measurements to the portion of the waveform between the vertical bar cursors, even if they are off screen.

Examples MEASUREMENT:GATING CURSOR turns on measurement gating using the cursors as limits.

MEASUREMENT:GATING? might return :MEASUREMENT:GATING CURSOR indicating that measurements are limited to the portion of the waveform between the vertical bar cursors.

MEASUREMENT:IMMED? (Query Only)

Returns all immediate measurement setup parameters.

Group Measurement

Syntax MEASUREMENT:IMMED?

Examples MEASUREMENT:IMMED? might return
 :MEASUREMENT:IMMED:DELAY:DIRECTION FORWARDS;EDGE1 RISE;EDGE2
 RISE;;MEASUREMENT:IMMED:TYPE PERIOD;UNITS "s";SOURCE1
 CH1;SOURCE2 CH2

MEASUREMENT:IMMED:DELAY? (Query Only)

Returns information about the immediate delay measurement. This command is equivalent to viewing the delay measurement settings on the measurement readout.

Group Measurement

Syntax MEASUREMENT:IMMED:DELAY?

Examples MEASUREMENT:IMMED:DELAY? might return
 :MEASUREMENT:IMMED:DELAY:DIRECTION FORWARDS;
 EDGE1 RISE;EDGE2 RISE

MEASUREMENT:IMMED:DELAY:DIRECTION

Sets or returns the starting point and direction that determines the delay "to" edge when taking an immediate delay measurement. Use the [MEASUREMENT:IMMED:SOURCE2](#) command to specify the delay "to" waveform.

Group Measurement

Syntax MEASUREMENT:IMMED:DELAY:DIRECTION {BACKWARDS|FORWARDS}
 MEASUREMENT:IMMED:DELAY:DIRECTION?

Related Commands [MEASUREMENT:IMMED:SOURCE2](#)

Arguments **BACKwards** starts the search at the end of the waveform and looks for the last rising or falling edge in the waveform.

FORwards starts the search at the beginning of the waveform and looks for the first rising or falling edge in the waveform.

Examples **MEASUREMENT:IMMED:DELAY:DIRECTION FORWARDS** starts searching from the beginning of the waveform record and looks for the first rising or falling edge.

MEASUREMENT:IMMED:DELAY:DIRECTION? might return
:MEASUREMENT:IMMED:DELAY:DIRECTION BACKWARDS indicating that searching begins at the end of the waveform record and looks for the last rising or falling edge.

MEASUREMENT:IMMED:DELAY:EDGE<x>

Sets or returns the slope of the edge that is used for the delay "from" or "to" waveform when taking an immediate delay measurement.

Group Measurement

Syntax **MEASUREMENT:IMMED:DELAY:EDGE<x>** {FALL|RISE}
MEASUREMENT:IMMED:DELAY:EDGE<x>?

Related Commands [MEASUREMENT:IMMED:SOURCE](#)
[MEASUREMENT:IMMED:SOURCE2](#)

Arguments <x> specifies which waveform to use, where <x> = 1 is the "from" waveform, and <x> = 2 is the "to" waveform.

FALL specifies the falling edge.

RISE specifies the rising edge.

Examples **MEASUREMENT:IMMED:DELAY:EDGE1 RISE** specifies that the "from" waveform rising edge be used for the immediate delay measurement.

MEASUREMENT:IMMED:DELAY:EDGE1? returns either RISE or FALL.

MEASUrement:IMMed:SOURce[1]

Sets or returns the source for all single source immediate measurements and specifies the source to measure "from" when taking an immediate delay measurement or phase measurement.

NOTE. *If you do not specify a numerical suffix, the source is assumed to be SOURCE 1.*

Group Measurement

Syntax MEASUREMENT:IMMED:SOURCE[1] {CH<x>|MATH<y>|REF<x>}
MEASUREMENT:IMMED:SOURCE?

Related Commands [MEASUREMENT:IMMED:SOURCE2](#)

Arguments CH<x> is an input channel waveform. The x variable can be expressed as an integer ranging from 1 through 4 for 4-channel models and 1 to 2 for 2-channel models.

MATH<y> is a math waveform. The y variable can be expressed as an integer of 1.

REF<x> is a reference waveform. The x variable can be expressed as an integer ranging from 1 through 4 for 4-channel models and 1 to 2 for 2-channel models.

Examples MEASUREMENT:IMMED:SOURCE 1 MATH1
specifies Math1 as the immediate measurement source.

MEASUREMENT:IMMED:SOURCE? might return
:MEASUREMENT:IMMED:SOURCE1 CH3 indicating that channel 3
is the immediate measurement source.

MEASUrement:IMMed:SOURce2

Sets or returns the source to measure "to" for phase or delay immediate measurements.

Tip: Source2 measurements only apply to phase and delay measurement types, which require both a target (Source1) and reference (Source2) source.

Group Measurement

Syntax MEASUREMENT:IMMED:SOURCE2 {CH<x>|MATH<y>|REF<x>}
MEASUREMENT:IMMED:SOURCE2?

Related Commands [MEASUREMENT:IMMED:SOURCE](#)

Arguments CH<x> is an input channel waveform. The x variable can be expressed as an integer ranging from 1 through 4 for 4-channel models and 1 to 2 for 2-channel models.

MATH<y> is a math waveform. The y variable can be expressed as an integer of 1.

REF<x> is a reference waveform. The x variable can be expressed as an integer ranging from 1 through 4 for 4-channel models and 1 to 2 for 2-channel models.

Examples MEASUREMENT:IMMED:SOURCE2 REF3 sets the waveform in reference memory location 3 as the delay "to" source when making delay measurements.

MEASUREMENT:IMMED:SOURCE2? might return
:MEASUREMENT:IMMED:SOURCE2 MATH1 indicating that Math1 is the immediate measurement source.

MEASUREMENT:IMMED:TYPE

Sets or returns the immediate measurement type.

Group Measurement

Syntax MEASUREMENT:IMMED:TYPE
{AMPLITUDE|AREa|BURSt|CAREa|CMEan|CRMS|DELay|FALL|FREQUENCY|HIGH|LOW|MAXimum|MEAN|MINimum|NDuty|NOVershoot|NWidth|PDuty|PERIOD|PHase|PK2Pk|POVershoot|PWidth|RISe|RMS}
MEASUREMENT:IMMED:TYPE?

Arguments AMPLITUDE measures the amplitude of the selected waveform. In other words, it measures the high value less the low value measured over the entire waveform or gated region.

$$\textit{Amplitude} = \textit{High} - \textit{Low}$$

AREa measures the voltage over time. The area is over the entire waveform or gated region and is measured in volt-seconds. The area measured above the ground is positive, while the area below ground is negative.

BURSt measures the duration of a burst. The measurement is made over the entire waveform or gated region.

CARea (cycle area) measures the voltage over time. In other words, it measures, in volt-seconds, the area over the first cycle in the waveform or the first cycle in the gated region. The area measured above the common reference point is positive, while the area below the common reference point is negative.

CMEan (cycle mean) measures the arithmetic mean over the first cycle in the waveform or the first cycle in the gated region.

CRMS (cycle rms) measures the true Root Mean Square voltage over the first cycle in the waveform or the first cycle in the gated region.

DELAy measures the time between the middle reference (default = 50%) amplitude point of the source waveform and the destination waveform.

FALL measures the time taken for the falling edge of the first pulse in the waveform or gated region to fall from a high reference value (default is 90%) to a low reference value (default is 10%).

FREQUency measures the first cycle in the waveform or gated region. Frequency is the reciprocal of the period and is measured in hertz (Hz), where 1 Hz = 1 cycle per second.

HIGH measures the High reference (100% level, sometimes called Topline) of a waveform.

LOW measures the Low reference (0% level, sometimes called Baseline) of a waveform.

MAXimum finds the maximum amplitude. This value is the most positive peak voltage found. It is measured over the entire waveform or gated region. When histogram is selected with the **MEASUREMENT:METHOD** command, the maximum measurement measures the voltage of the highest nonzero bin in vertical histograms or the time of the right-most bin in horizontal histograms.

MEAN amplitude measurement finds the arithmetic mean over the entire waveform or gated region. When histogram is selected with the **MEASUREMENT:METHOD** command, the mean measurement measures the average of all acquired points within or on the histogram.

MINIMUM finds the minimum amplitude. This value is typically the most negative peak voltage. It is measured over the entire waveform or gated region. When histogram is selected with the **MEASUREMENT:METHOD** command, the minimum measurement measures the lowest nonzero bin in vertical histograms or the time of the left-most nonzero bin in the horizontal histograms.

NDUTy (negative duty cycle) is the ratio of the negative pulse width to the signal period, expressed as a percentage. The duty cycle is measured on the first cycle in the waveform or gated region.

$$\text{Negative Duty Cycle} = ((\text{Negative Width}) / \text{Period}) \times 100\%$$

NOVershoot (negative overshoot) finds the negative overshoot value over the entire waveform or gated region.

$$\text{Negative Overshoot} = ((\text{Low} - \text{Minimum}) / \text{Amplitude}) \times 100\%$$

NWIdth (negative width) measurement is the distance (time) between the middle reference (default = 50%) amplitude points of a negative pulse. The measurement is made on the first pulse in the waveform or gated region.

PDuty (positive duty cycle) is the ratio of the positive pulse width to the signal period, expressed as a percentage. It is measured on the first cycle in the waveform or gated region.

$$\text{Positive Duty Cycle} = ((\text{Positive Width}) / \text{Period}) \times 100\%$$

PERIOD is the time required to complete the first cycle in a waveform or gated region. Period is the reciprocal of frequency and is measured in seconds.

PHASE measures the phase difference (amount of time a waveform leads or lags the reference waveform) between two waveforms. The measurement is made between the middle reference points of the two waveforms and is expressed in degrees, where 360° represents one waveform cycle.

PK2Pk (peak-to-peak) finds the absolute difference between the maximum and minimum amplitude in the entire waveform or gated region. When histogram is selected with the **MEASUREMENT:METHOD** command, the PK2Pk measurement measures the histogram peak to peak difference.

POvershoot is the positive overshoot value over the entire waveform or gated region.

$$\text{Positive Overshoot} = ((\text{Maximum} - \text{High}) / \text{Amplitude}) \times 100\%$$

PWIdth (positive width) is the distance (time) between the middle reference (default = 50%) amplitude points of a positive pulse. The measurement is made on the first pulse in the waveform or gated region.

RISe timing measurement finds the rise time of the waveform. The rise time is the time it takes for the leading edge of the first pulse encountered to rise from a low reference value (default is 10%) to a high reference value (default is 90%).

RMS amplitude measurement finds the true Root Mean Square voltage in the entire waveform or gated region.

Examples

MEASUREMENT:IMMED:TYPE FREQUENCY defines the immediate measurement to be a frequency measurement.

MEASUREMENT:IMMED:TYPE? might return **:MEASUREMENT:IMMED:TYPE RMS** indicating that the immediate measurement is the true Root Mean Square voltage.

MEASUREMENT:IMMED:UNITS? (Query Only)

Returns the units of the immediate measurement.

Group	Measurement
Syntax	MEASUREMENT:IMMED:UNITs?
Examples	MEASUREMENT:IMMED:UNITs? might return :MEASUREMENT:IMMED:UNITs "s" indicating that units for the immediate measurement are in seconds.

MEASUREMENT:IMMED:VALue? (Query Only)

Returns the value of the measurement specified by the [MEASUREMENT:IMMED:TYPE](#) command. The measurement is immediately taken on the source(s) specified by a [MEASUREMENT:IMMED:SOURce](#) command.

NOTE. *A change to [HORIZONTAL:MAIN:SCALE](#) or [CH<x>:SCALE](#) will not necessarily have taken affect if immediately followed by this command.*

Group	Measurement
Syntax	MEASUREMENT:IMMED:VALue?
Related Commands	MEASUREMENT:IMMED:TYPE , MEASUREMENT:IMMED:SOURce , *ESR? , ALLEv?
Examples	MEASUREMENT:IMMED:VALue? might return :MEASUREMENT:IMMED:VALue 9.9000E+37. If the measurement has an error or warning associated with it, then an item is added to the error queue. The error can be checked for with the *ESR? and ALLEv? commands.

MEASUREMENT:INDICators? (Query Only)

Returns all measurement indicator parameters.

Group	Measurement
Syntax	MEASUREMENT:INDICators?

Examples MEASUREMENT:INDICATORS? might return
 MEASUREMENT:INDICATORS:STATE MEAS1;NUMHORZ
 0;NUMVERT 4;HORZ1 7.5E0;HORZ2 -3.40000095367E0;HORZ3
 0.0E0;HORZ4 0.0E0;VERT1 -6.351123E-6;VERT2
 -3.179753E-6;VERT3 -6.40943E-6;VERT4 -6.403E-6

MEASUREMENT:INDICATORS:HORIZ<x>? (Query Only)

Returns the position of the specified horizontal measurement indicator <x>, where <x> can be 1, 2, 3, or 4.

Group Measurement

Syntax MEASUREMENT:INDICATORS:HORIZ<x>?

Examples MEASUREMENT:INDICATORS:HORIZ1? might return
 MEASUREMENT:INDICATORS:HORIZ1 -2.0E-3 indicating that horizontal
 indicator1 has a value of -2mV.

MEASUREMENT:INDICATORS:NUMHORZ? (Query Only)

Returns the number of horizontal measurement indicators currently being displayed.

Group Measurement

Syntax MEASUREMENT:INDICATORS:NUMHORZ?

Examples MEASUREMENT:INDICATORS:NUMHORZ? might return
 MEASUREMENT:INDICATORS:NUMHORZ 2 indicating that there are currently 2
 horizontal lines drawn on the graticule showing where the measurement specified
 by [MEASUREMENT:INDICATORS:STATE](#) is being performed.

MEASUREMENT:INDICATORS:NUMVERT? (Query Only)

Returns the number of vertical measurement indicators currently being displayed.

Group Measurement

Syntax MEASUREMENT:INDICATORS:NUMVERT?

Examples MEASUREMENT:INDICATORS:NUMVERT? might return
MEASUREMENT:INDICATORS:NUMVERT 2 indicating that there are currently 2
vertical lines drawn on the graticule showing where the measurement specified by
[MEASUREMENT:INDICATORS:STATE](#) is being performed.

MEASUREMENT:INDICATORS:STATE

Set or returns the state of visible measurement indicators. Performs the same operations as the front panel Measurement Indicators menu.

Group Measurement

Syntax MEASUREMENT:INDICATORS:STATE {OFF|MEAS<x>}
MEASUREMENT:INDICATORS:STATE?

Arguments OFF turns off visible measurement indicators.

MEAS<x> turns on the display of visible measurement indicators for measurement <x>, where <x> can be 1, 2, 3, or 4. There must be an active measurement before you can activate an indicator for a specified measurement.

Examples MEASUREMENT:INDICATORS:STATE MEAS2 turns on the display of visible measurement indicators for measurement 2.

MEASUREMENT:INDICATORS:STATE? might return
MEASUREMENT:INDICATORS:STATE OFF indicating that no measurement indicators are active.

MEASUREMENT:INDICATORS:VERT<x>? (Query Only)

Returns the value of the specified vertical measurement indicator <x> from the trigger point, where <x> can be 1, 2, 3, or 4. A negative value means that the indicator is positioned earlier in the waveform record than the trigger point.

Group Measurement

Syntax MEASUREMENT:INDICATORS:VERT<x>?

Examples MEASUREMENT:INDICATORS:VERT2? might return
MEASUREMENT:INDICATORS:VERT2 -3.724507E-6 indicating that the
second measurement indicator is positioned 3.72 μ s before the trigger point.

MEASUREMENT:MEAS<x>? (Query Only)

Returns all measurement parameters for the specified active measurement <x>.

Group Measurement

Syntax MEASUREMENT:MEAS<x>?

MEASUREMENT:MEAS<x>:COUNT? (Query Only)

Returns the number of values accumulated for this measurement since the last statistical reset. Some values may have been ignored because they generated an error. Measurements are specified by x, which ranges from 1 through 4.

Group Measurement

Syntax MEASUREMENT:MEAS<x>:COUNT?

Examples MEASUREMENT:MEAS3:COUNT? might return :MEASUREMENT:MEAS3:COUNT
3247.

MEASUREMENT:MEAS<x>:DELAY? (Query Only)

Returns the delay measurement parameters for the measurement specified by <x>, which ranges from 1 through 4.

Group Measurement

Syntax MEASUREMENT:MEAS<x>:DELAY?

Examples MEASUREMENT:MEAS1? might return
:MEASUREMENT:MEAS1:DELAY:DIRECTION FORWARDS;EDGE1 RISE;EDGE2
RISE.

MEASUrement:MEAS<x>:DELay:DIREction

Sets or returns the starting point and direction that determines the delay "to" edge when taking a delay measurement. Use the [MEASUrement:MEAS<x>:SOURCE2](#) command to specify the waveform.

Group Measurement

Syntax MEASUrement:MEAS<x>:DELay:DIREction {BACKwards|FORwards}
MEASUrement:MEAS<x>:DELay:DIREction?

Related Commands [MEASUrement:MEAS<x>:SOURCE2](#)

Arguments BACKwards means that the search starts at the end of the waveform and looks for the last rising or falling edge in the waveform. Use the [MEASUrement:MEAS<x>:DELay:EDGE<x>](#) command to specify the slope of the edge.

FORwards means that the search starts at the beginning of the waveform and looks for the first rising or falling edge in the waveform. Use the [MEASUrement:MEAS<x>:DELay:EDGE<x>](#) command to specify the slope of the edge.

Examples MEASUREMENT:MEAS<x>:DELAY:DIRECTION BACKWARDS starts searching from the end of the waveform record.

MEASUREMENT:MEAS<x>:DELAY:DIRECTION? might return
:MEASUREMENT:MEAS3:DELAY:DIRECTION BACKWARDS indicating that the current search direction is backwards.

MEASUrement:MEAS<x>:DELay:EDGE<x>

Sets or returns the slope of the edge that is used for the delay "from" or "to" waveform when taking an immediate delay measurement. The waveform is specified by [MEASUrement:MEAS<x>:SOURCE\[1\]](#).

Group Measurement

Syntax MEASUrement:MEAS<x>:DELay:EDGE<x> {FALL|RISe}
MEASUrement:MEAS<x>:DELay:EDGE<x>?

Arguments <x> specifies which waveform to use, where <x> = 1 is the "from" waveform, and <x> = 2 is the "to" waveform.

FALL specifies the falling edge.

RISe specifies the rising edge.

Examples MEASUREMENT:MEAS1:DELAY:EDGE1 RISE specifies that the "from" waveform rising edge be used for the immediate delay measurement.

MEASUREMENT:MEAS1:DELAY:EDGE1? returns either RISE or FALL.

MEASUREMENT:MEAS<x>:MAXIMUM? (Query Only)

Returns the maximum value found for this measurement since the last statistical reset. Measurements are specified by x, which ranges from 1 through 4.

Group Measurement

Syntax MEASUREMENT:MEAS<x>:MAXIMUM?

Examples MEASUREMENT:MEAS3:MAXIMUM? might return
:MEASUREMENT:MEAS3:MAXIMUM 4.18E-9.

MEASUREMENT:MEAS<x>:MEAN? (Query Only)

Returns the mean value accumulated for this measurement since the last statistical reset. Measurements are specified by x, which ranges from 1 through 4.

Group Measurement

Syntax MEASUREMENT:MEAS<x>:MEAN?

Examples MEASUREMENT:MEAS1:MEAN? might return :MEASUREMENT:MEAS1:MEAN
514.71E-09.

MEASUREMENT:MEAS<x>:MINIMUM? (Query Only)

Returns the minimum value found for this measurement since the last statistical reset. Measurements are specified by x, which ranges from 1 through 4.

Group	Measurement
Syntax	MEASUREMENT:MEAS<x>:MINIMUM?
Examples	MEASUREMENT:MEAS1:MINIMUM? might return :MEASUREMENT:MEAS1:MINIMUM 1.75E-09.

MEASUREMENT:MEAS<x>:SOURCE[1]

Sets or returns the source for all single source measurements and specifies the source to measure "from" when taking a delay measurement or phase measurement. Measurements are specified by x, which ranges from 1 through 4.

Group	Measurement
Syntax	MEASUREMENT:MEAS<x>:SOURCE[1] {CH<x> MATH<y> REF<x>} MEASUREMENT:MEAS<x>:SOURCE[1]?
Arguments	<p>CH<x> is an input channel waveform. The x variable can be expressed as an integer ranging from 1 through 4 for 4-channel models and 1 to 2 for 2-channel models.</p> <p>MATH<y> is a math waveform. The y variable can be expressed as an integer ranging from 1 through 4 for 4-channel models and 1 to 2 for 2-channel models.</p> <p>REF<x> is a reference waveform. The x variable can be expressed as an integer ranging from 1 through 4 for 4-channel models and 1 to 2 for 2-channel models.</p>
Examples	<p>MEASUREMENT:MEAS2:SOURCE1 MATH1 specifies Math 1 as the measurement 2 source.</p> <p>MEASUREMENT:MEAS1:SOURCE1? might return :MEASUREMENT:MEAS1:SOURCE[1] MATH1 indicating that Math1 is the measurement 2 source.</p>

MEASUREMENT:MEAS<x>:SOURCE2

Sets or returns the reference source to measure "to" when taking a delay measurement or phase measurement. Measurements are specified by x, which ranges from 1 through 4.

Tip: Source2 measurements only apply to phase and delay measurement types, which require both a target (Source1) and reference (Source2) source.

Group	Measurement
Syntax	MEASUREMENT:MEAS<x>:SOURCE2 {CH<x> MATH<y> REF<x>} MEASUREMENT:MEAS<x>:SOURCE2?
Related Commands	MEASUREMENT:MEAS<x>:TYPE
Arguments	<p>CH<x> is an input channel waveform. The x variable can be expressed as an integer ranging from 1 through 4 for 4-channel models and 1 to 2 for 2-channel models.</p> <p>MATH<y> is a math waveform. The y variable can be expressed as an integer ranging from 1 through 4 for 4-channel models and 1 to 2 for 2-channel models.</p> <p>REF<x> is a reference waveform. The x variable can be expressed as an integer ranging from 1 through 4 for 4-channel models and 1 to 2 for 2-channel models.</p>
Examples	<p>MEASUREMENT:MEAS4:SOURCE2 CH1 specifies CH1 as the delay "to" source when making delay measurement.</p> <p>MEASUREMENT:MEAS2:SOURCE2? might return :MEASUREMENT:MEAS2:SOURCE2 MATH1 indicating that Math 1 is the measurement 2 source.</p>

MEASUREMENT:MEAS<x>:STATE

Sets or returns whether the specified measurement slot is computed and displayed. The measurement slot is specified by x, which ranges from 1 through 4.

For a measurement to display, you must have selected a source waveform and defined the measurement you want to take and display. You select the measurement using the [MEASUREMENT:MEAS<x>:SOURCE\[1\]](#) command. You define the measurement type using the [MEASUREMENT:MEAS<x>:TYPE](#) command.

Group	Measurement
Syntax	MEASUREMENT:MEAS<x>:STATE {OFF ON <NR1>} MEASUREMENT:MEAS<x>:STATE?
Related Commands	MEASUREMENT:MEAS<x>:SOURCE[1] , MEASUREMENT:MEAS<x>:TYPE

Arguments OFF disables calculation and display of the specified measurement slot.
 ON enables calculation and display of the specified measurement slot.
 <NR1> = 0 disables calculation and display of the specified measurement slot; any other value enables calculation and display of the specified measurement slot.

Examples MEASUREMENT:MEAS2:STATE ON computes and displays the measurement defined as measurement 2.
 MEASUREMENT:MEAS1:STATE? might return :MEASUREMENT:MEAS1:STATE 0 indicating that measurement defined for measurement slot 1 is disabled.

MEASUREMENT:MEAS<x>:STDdev? (Query Only)

Returns the standard deviation of values accumulated for this measurement since the last statistical reset. Measurements are specified by x, which ranges from 1 through 4.

Group Measurement

Syntax MEASUREMENT:MEAS<x>:STDdev?

Examples MEASUREMENT:MEAS1:STDDEV? might return :MEASUREMENT:MEAS1:STDDEV 21.0E-12.

MEASUREMENT:MEAS<x>:TYPE

Sets or returns the measurement type defined for the specified measurement slot. The measurement slot is specified by x, which ranges from 1 through 4. This command is equivalent to pushing the front-panel Measure button, the lower-bezel Select Measurement button, and the desired measurement type from the side-bezel menu.

Group Measurement

Syntax MEASUREMENT:MEAS<x>:TYPE
 {AMP|it|ude|AREa|BURst|CAREa|CMEan|CRMs|DELay|FALL|FREQUency
 |HIGH|LOW|MAXimum|MEAN|MINImum|NDUty|NOVershoot|NWI|dth|PDUty
 |PERIod|PHase|PK2Pk|POVershoot|PWI|dth|RISe|RMS}
 MEASUREMENT:MEAS<x>:TYPE?

Arguments

AMPli tude measures the amplitude of the selected waveform. In other words, it measures the high value less the low value measured over the entire waveform or gated region.

$$\textit{Amplitude} = \textit{High} - \textit{Low}$$

AREa measures the voltage over time. The area is over the entire waveform or gated region and is measured in volt-seconds. The area measured above the ground is positive, while the area below ground is negative.

BURSt measures the duration of a burst. The measurement is made over the entire waveform or gated region.

CAREa (cycle area) measures the voltage over time. In other words, it measures, in volt-seconds, the area over the first cycle in the waveform or the first cycle in the gated region. The area measured above the common reference point is positive, while the area below the common reference point is negative.

CMEan (cycle mean) measures the arithmetic mean over the first cycle in the waveform or the first cycle in the gated region.

CRMS (cycle rms) measures the true Root Mean Square voltage over the first cycle in the waveform or the first cycle in the gated region.

DELay measures the time between the middle reference (default = 50%) amplitude point of the source waveform and the destination waveform.

FALL measures the time taken for the falling edge of the first pulse in the waveform or gated region to fall from a high reference value (default is 90%) to a low reference value (default is 10%).

FREQUency measures the first cycle in the waveform or gated region. Frequency is the reciprocal of the period and is measured in hertz (Hz), where 1 Hz = 1 cycle per second.

HIGH measures the High reference (100% level, sometimes called Topline) of a waveform.

LOW measures the Low reference (0% level, sometimes called Baseline) of a waveform.

MAXimum finds the maximum amplitude. This value is the most positive peak voltage found. It is measured over the entire waveform or gated region. When histogram is selected with the **MEASUREMENT:METHOD** command, the maximum measurement measures the voltage of the highest nonzero bin in vertical histograms or the time of the right-most bin in horizontal histograms.

MEAN amplitude measurement finds the arithmetic mean over the entire waveform or gated region. When histogram is selected with the **MEASUREMENT:METHOD** command, the mean measurement measures the average of all acquired points within or on the histogram.

MINimum finds the minimum amplitude. This value is typically the most negative peak voltage. It is measured over the entire waveform or gated region. When

histogram is selected with the **MEASUREMENT:METHOD** command, the minimum measurement measures the lowest nonzero bin in vertical histograms or the time of the left-most nonzero bin in the horizontal histograms.

NDuty (negative duty cycle) is the ratio of the negative pulse width to the signal period, expressed as a percentage. The duty cycle is measured on the first cycle in the waveform or gated region.

$$\text{Negative Duty Cycle} = ((\text{Negative Width}) / \text{Period}) \times 100\%$$

NOvershoot (negative overshoot) finds the negative overshoot value over the entire waveform or gated region.

$$\text{Negative Overshoot} = ((\text{Low} - \text{Minimum}) / \text{Amplitude}) \times 100\%$$

NWidth (negative width) measurement is the distance (time) between the middle reference (default = 50%) amplitude points of a negative pulse. The measurement is made on the first pulse in the waveform or gated region.

PDuty (positive duty cycle) is the ratio of the positive pulse width to the signal period, expressed as a percentage. It is measured on the first cycle in the waveform or gated region.

$$\text{Positive Duty Cycle} = ((\text{Positive Width}) / \text{Period}) \times 100\%$$

PERIOD is the time required to complete the first cycle in a waveform or gated region. Period is the reciprocal of frequency and is measured in seconds.

PHASE measures the phase difference (amount of time a waveform leads or lags the reference waveform) between two waveforms. The measurement is made between the middle reference points of the two waveforms and is expressed in degrees, where 360° represents one waveform cycle.

PK2Pk (peak-to-peak) finds the absolute difference between the maximum and minimum amplitude in the entire waveform or gated region. When histogram is selected with the **MEASUREMENT:METHOD** command, the PK2Pk measurement measures the histogram peak to peak difference.

POvershoot is the positive overshoot value over the entire waveform or gated region.

$$\text{Positive Overshoot} = ((\text{Maximum} - \text{High}) / \text{Amplitude}) \times 100\%$$

PWidth (positive width) is the distance (time) between the middle reference (default = 50%) amplitude points of a positive pulse. The measurement is made on the first pulse in the waveform or gated region.

RISE timing measurement finds the rise time of the waveform. The rise time is the time it takes for the leading edge of the first pulse encountered to rise from a low reference value (default is 10%) to a high reference value (default is 90%).

RMS amplitude measurement finds the true Root Mean Square voltage in the entire waveform or gated region.

- Examples** MEASUREMENT:MEAS2:TYPE FREQUENCY defines measurement 2 as a measurement of the frequency of a waveform.
- MEASUREMENT:MEAS1:TYPE? might return :MEASUREMENT:MEAS1:TYPE RMS indicating that measurement 1 is defined to measure the RMS value of a waveform.

MEASUREMENT:MEAS<x>:UNITS? (Query Only)

Returns the units associated with the specified measurement. Measurements are specified by x, which ranges from 1 through 4.

Group Measurement

Syntax MEASUREMENT:MEAS<x>:UNITS?

Related Commands [MEASUREMENT:MEAS<x>:TYPE](#)

- Examples** MEASUREMENT:MEAS1:UNITS? might return :MEASUREMENT:MEAS1:UNITS % indicating units for measurement 1 are set to percent.

MEASUREMENT:MEAS<x>:VALUE? (Query Only)

Returns the value that has been calculated for the measurement specified by <x>, which ranges from 1 through 4. This command is equivalent to viewing the measurement readout on the screen.

NOTE. *This is the displayed value in the on-screen display. If measurement statistics are enabled, a new value is calculated with every waveform. In addition, this value is updated about every 1/3 second. If you are acquiring a long acquisition record, the instrument may take longer to update.*

Group Measurement

Syntax MEASUREMENT:MEAS<x>:VALUE?

Related Commands [MEASUREMENT:MEAS<x>:UNITS?](#), [*ESR?](#), [ALLEV?](#)

- Examples** MEASUREMENT:MEAS1:VALUE? might return :MEASUREMENT:MEAS1:VALUE 2.8740E-06. If the measurement has an error or warning associated with it,

then an item is added to the error queue. The error can be checked for with the `*ESR?` and `ALLEV?` commands.

MEASUREMENT:METHOD

Sets or returns the method used to calculate the 0% and 100% reference level. This command is equivalent to pushing the front-panel **Measure** button, the lower-bezel menu **Reference Levels** button, and the appropriate side-bezel menu choice.

Group Measurement

Syntax MEASUREMENT:METHOD {Auto|HISTogram|MINMax}
MEASUREMENT:METHOD?

Related Commands [MEASUREMENT:REFLevel:PERCent:HIGH](#), [MEASUREMENT:REFLevel:PERCent:LOW](#), [MEASUREMENT:REFLevel:PERCent:MID](#), [MEASUREMENT:REFLevel:PERCent:MID2](#)

Arguments HISTogram sets the high and low reference levels to the most common values either above or below the mid point, depending on where the high reference point or the low reference point has been defined. Because the statistical approach ignores short-term aberrations, such as overshoot or ringing, the histogram method is the best setting for examining pulses.

MINMax uses the highest and lowest values of the waveform record. This selection is best for examining waveforms with no large, flat portions of a common value, such as sine waves and triangle waves.

Auto chooses the best method (histogram or minmax) for each dataset.

Examples MEASUREMENT:METHOD HISTOGRAM specifies that the high and low reference levels are set statistically.

MEASUREMENT:METHOD? might return :MEASUREMENT:METHOD MINMAX indicating that the reference levels are set to MIN and MAX.

MEASUREMENT:REFLevel? (Query Only)

Returns the current reference level parameters. This command is equivalent to pushing the front-panel **Measure** button, the lower-bezel menu **Reference Levels** button, and reading values on the side-bezel menu.

Group	Measurement
Syntax	MEASUREMENT:REFLEVEL?
Examples	<p>MEASUREMENT:REFLEVEL? might return these reference level settings</p> <pre> :MEASUREMENT:REFLEVEL:METHOD PERCENT;ABSOLUTE:HIGH 0.0000;LOW 0.0000;MID1 0.0000 ;MID2 0.0000;:MEASUREMENT:REFLEVEL:PERCENT:HIGH 90.0000;LOW 10.0000;MID1 50.0000 ;MID2 50.0000 </pre>

MEASUREMENT:REFLEVEL:ABSOLUTE:HIGH

Sets or returns the high reference level, and is the upper reference level when [MEASUREMENT:REFLEVEL:METHOD](#) is set to Absolute. This command affects the results of rise and fall measurements. It is equivalent to pushing the front-panel **Measure** button, the lower-bezel menu **Reference Levels** button, and the appropriate side-bezel menu item.

NOTE. *this command affects the associated reference level parameter for all MEASUREMENTS:IMMED and the four periodic measurements.*

Group	Measurement
Syntax	<pre> MEASUREMENT:REFLEVEL:ABSOLUTE:HIGH <NR3> MEASUREMENT:REFLEVEL:ABSOLUTE:HIGH? </pre>
Related Commands	MEASUREMENT:REFLEVEL:METHOD , MEASUREMENT:IMMED:TYPE , MEASUREMENT:MEAS<x>:TYPE
Arguments	<NR3> is the high reference level, in volts. The default is 0.0 V.
Examples	<p>MEASUREMENT:REFLEVEL:ABSOLUTE:HIGH 1.71 sets the high reference level to 1.71 V.</p> <p>MEASUREMENT:REFLEVEL:ABSOLUTE:HIGH? might return</p> <pre> :MEASUREMENT:REFLEVEL:ABSOLUTE:HIGH 1.7100E+00 </pre> <p>indicating that the absolute high reference level is set to 1.71 V.</p>

MEASUREMENT:REFLEVEL:ABSOLUTE:LOW

Sets or returns the low reference level, and is the lower reference level when [MEASUREMENT:REFLEVEL:METHOD](#) is set to Absolute. This command affects the results of rise and fall measurements. It is equivalent to pushing the front-panel **Measure** button, the lower-bezel menu **Reference Levels** button, and the appropriate side-bezel menu item.

NOTE. *this command affects the associated reference level parameter for all MEASUREMENTS:IMMED and the four periodic measurements.*

Group	Measurement
Syntax	MEASUREMENT:REFLEVEL:ABSOLUTE:LOW <NR3> MEASUREMENT:REFLEVEL:ABSOLUTE:LOW?
Related Commands	MEASUREMENT:REFLEVEL:METHOD , MEASUREMENT:IMMED:TYPE , MEASUREMENT:MEAS<x>:TYPE
Arguments	<NR3> is the low reference level, in volts. The default is 0.0 V.
Examples	MEASUREMENT:REFLEVEL:ABSOLUTE:LOW 0.0 sets the low reference level to 0.0 V. MEASUREMENT:REFLEVEL:ABSOLUTE:LOW? might return :MEASUREMENT:REFLEVEL:ABSOLUTE:LOW 0.0000E+00 indicating that the absolute low reference level is set to 0.0 V.

MEASUREMENT:REFLEVEL:ABSOLUTE:MID[1]

Sets or returns the mid reference level, and is the 50% reference level when [MEASUREMENT:REFLEVEL:METHOD](#) is set to Absolute. This command affects the results of period, frequency, delay, and all cyclic measurements. It is equivalent to pushing the front-panel **Measure** button, the lower-bezel menu **Reference Levels** button, and the appropriate side-bezel menu item.

NOTE. *this command affects the associated reference level parameter for all MEASUREMENTS:IMMED and the four periodic measurements.*

Group	Measurement
--------------	-------------

Syntax MEASUREMENT:REFLEVEL:ABSOLUTE:MID[1] <NR3>
MEASUREMENT:REFLEVEL:ABSOLUTE:MID[1]?

Related Commands [MEASUREMENT:REFLEVEL:METHOD](#)

Arguments <NR3> is the mid reference level, in volts. The default is 0.0 V.

Examples MEASUREMENT:REFLEVEL:ABSOLUTE:MID 1 .71 sets the mid reference level to .71 V.

MEASUREMENT:REFLEVEL:ABSOLUTE:MID? might return
:MEASUREMENT:REFLEVEL:ABSOLUTE:MID 0.7100E+00 indicating
that the absolute mid1 reference level is set to .71 V.

MEASUREMENT:REFLEVEL:ABSOLUTE:MID2

Sets or returns the mid reference level for the "to" waveform when taking a delay measurement, and is the 50% reference level when [MEASUREMENT:REFLEVEL:METHOD](#) is set to Absolute. This command affects the results of delay measurements. It is equivalent to pushing the front-panel **Measure** button, the lower-bezel menu **Reference Levels** button, and the appropriate side-bezel menu item.

NOTE. *this command affects the associated reference level parameter for all MEASUREMENTS:IMMED and the four periodic measurements.*

Group Measurement

Syntax MEASUREMENT:REFLEVEL:ABSOLUTE:MID2 <NR3>
MEASUREMENT:REFLEVEL:ABSOLUTE:MID2?

Related Commands [MEASUREMENT:REFLEVEL:METHOD](#)

Arguments <NR3> is the mid reference level, in volts. The default is 0.0 V.

Examples MEASUREMENT:REFLEVEL:ABSOLUTE:MID2 0.5 sets the mid reference level for the delay waveform to 0.5 V.

MEASUREMENT:REFLEVEL:ABSOLUTE:MID2? might return
 :MEASUREMENT:REFLEVEL:ABSOLUTE:MID2 0.5000E+00 indicating that the
 absolute mid2 reference level is set to 0.5 V.

MEASUREMENT:REFLEVEL:METHOD

Specifies or queries the reference level units used for measurement calculations. It is equivalent to pushing the front-panel **Measure** button, the lower-bezel menu **Reference Levels** button, and pushing the side-bezel menu **Set Levels In** button if needed to select either **%** or **units**.

NOTE. *this command affects the associated reference level parameter for all MEASUREMENTS:IMMED and the eight periodic measurements. To change the parameter for individual measurements, use the MEASUREMENT:MEAS<x>:REFLEVEL commands.*

Group Measurement

Syntax MEASUREMENT:REFLEVEL:METHOD {ABSOLUTE|PERCENT}
 MEASUREMENT:REFLEVEL:METHOD?

Arguments ABSOLUTE specifies that the reference levels are set explicitly using the MEASUREMENT:REFLEVEL:ABSOLUTE commands. This method is useful when precise values are required (for example, when designing to published interface specifications, such as RS-232-C).

PERCENT specifies that the reference levels are calculated as a percent relative to HIGH and LOW. The percentages are defined using the MEASUREMENT:REFLEVEL:PERCENT commands.

Examples MEASUREMENT:REFLEVEL:METHOD ABSOLUTE specifies that explicit user-defined values are used for the reference levels.

MEASUREMENT:REFLEVEL:METHOD? might return
 :MEASUREMENT:REFLEVEL:METHOD PERCENT indicating that
 the reference level units used are calculated as a percent relative to HIGH and LOW.

MEASUREMENT:REFLEVEL:PERCENT:HIGH

Sets or returns the percent (where 100% is equal to HIGH) that is used to calculate the high reference level when MEASUREMENT:REFLEVEL:METHOD is set to Percent. This command affects the results of rise and fall measurements. It is

equivalent to pushing the front-panel **Measure** button, the lower-bezel menu **Reference Levels** button, and the appropriate side-bezel menu items.

NOTE. *this command affects the associated reference level parameter for all MEASurements:IMMed and the four periodic measurements.*

Group	Measurement
Syntax	MEASUREMENT:REFLevel1:PERCent:HIGh <NR3> MEASUREMENT:REFLevel1:PERCent:HIGh?
Related Commands	MEASUREMENT:REFLevel:METhod, MEASUREMENT:IMMed:TYPe, MEASUREMENT:MEAS<x>:TYPe
Arguments	<NR3> is the high reference level, ranging from 0 to 100%. The default high reference level is 90%.
Examples	MEASUREMENT:REFLEVEL:PERCENT:HIGH 95 sets the high reference level to 95% of HIGH. MEASUREMENT:REFLEVEL:PERCENT:HIGH? might return :MEASUREMENT:REFLEVEL:PERCENT:HIGH 90 indicating that the percentage high reference level is set to 90% of HIGH.

MEASUREMENT:REFLevel:PERCent:LOW

Sets or returns the percent (where 100% is equal to HIGH) that is used to calculate the low reference level when [MEASUREMENT:REFLevel:METhod](#) is set to Percent. This command affects the results of rise and fall measurements. It is equivalent to pushing the front-panel **Measure** button, the lower-bezel menu **Reference Levels** button, and the appropriate side-bezel menu items.

NOTE. *this command affects the associated reference level parameter for all MEASurements:IMMed and the four periodic measurements.*

Group	Measurement
Syntax	MEASUREMENT:REFLevel1:PERCent:LOW <NR3> MEASUREMENT:REFLevel1:PERCent:LOW?

Related Commands	MEASUREMENT:REFLevel:METHOD , MEASUREMENT:IMMed:TYPE , MEASUREMENT:MEAS<x>:TYPE
Arguments	<NR3> is the low reference level, ranging from 0 to 100%. The default low reference level is 10%.
Examples	MEASUREMENT:REFLEVEL:PERCENT:LOW 15 sets the high reference level to 15% of HIGH. MEASUREMENT:REFLEVEL:PERCENT:LOW? might return :MEASUREMENT:REFLEVEL:PERCENT:LOW 10 indicating that the percentage high reference level is set to 10% of HIGH.

MEASUREMENT:REFLevel:PERCent:MID[1]

Sets or returns the percent (where 100% is equal to HIGH) that is used to calculate the mid reference level when MEASUREMENT:REFLevel:METHOD is set to Percent. This command affects the results of period, frequency, delay, and all cyclic measurements. It is equivalent to pushing the front-panel **Measure** button, the lower-bezel menu **Reference Levels** button, and the appropriate side-bezel menu items.

NOTE. *this command affects the associated reference level parameter for all MEASUREMENTS:IMMed and the four periodic measurements.*

Group	Measurement
Syntax	MEASUREMENT:REFLevel:PERCENT:MID[1] <NR3> MEASUREMENT:REFLevel:PERCENT:MID[1]?
Related Commands	MEASUREMENT:REFLevel:METHOD
Arguments	<NR3> is the mid reference level, ranging from 0 to 100%. The default mid reference level is 50%.
Examples	MEASUREMENT:REFLEVEL:PERCENT:MID 1 60 sets the mid reference level to 60% of HIGH. MEASUREMENT:REFLEVEL:PERCENT:MID? might return :MEASUREMENT:REFLEVEL:PERCENT:MID 65 indicating that the percentage mid reference level is set to 65% of HIGH.

MEASUREMENT:REFLEVEL:PERCENT:MID2

Sets or returns the percent (where 100% is equal to HIGH) that is used to calculate the mid reference level for the second waveform specified when [MEASUREMENT:REFLEVEL:METHOD](#) is set to Percent. This command affects the results of delay measurements. It is equivalent to pushing the front-panel **Measure** button, the lower-bezel menu **Reference Levels** button, and the appropriate side-bezel menu items.

NOTE. *this command affects the associated reference level parameter for all MEASUREMENTS:IMMED and the four periodic measurements.*

Group Measurement

Syntax MEASUREMENT:REFLEVEL:PERCENT:MID2 <NR3>
MEASUREMENT:REFLEVEL:PERCENT:MID2?

Related Commands [MEASUREMENT:REFLEVEL:METHOD](#)

Arguments <NR3> is the mid reference level, ranging from 0 to 100%. The default mid reference level is 50%.

Examples MEASUREMENT:REFLEVEL:PERCENT:MID2 40 sets the mid2 reference level to 40% of HIGH.

MEASUREMENT:REFLEVEL:PERCENT:MID2? might return
:MEASUREMENT:REFLEVEL:PERCENT:MID2 45 indicating that the percentage mid2 reference level is set to 45% of HIGH.

MEASUREMENT:SNAPSHOT (No Query Form)

Displays the measurement snapshot list on the oscilloscope screen, which is a list of the immediate values of all available measurements for the active signal. It is equivalent to pushing the front-panel **Measure** button, the lower-bezel menu **Select Measurement** button, and the side-bezel menu **Snapshot All Measurements** item.

Group Measurement

Syntax MEASUREMENT:SNAPSHOT

MEASUREMENT:STATISTICS

Clears all of the statistics accumulated for all periodic measurements (MEAS1 through MEAS4).

The query form returns statistic settings.

Group Measurement

Syntax MEASUREMENT:STATISTICS RESET
MEASUREMENT:STATISTICS?

MEASUREMENT:STATISTICS:MODE

Controls the operation and display of management statistics.

This command is equivalent to pushing the front-panel **Measure** button, the lower-bezel menu **Statistics** button, and, if needed, the side-bezel menu **Measurement Statistics** button to select whether to turn the feature on or off.

Group Measurement

Syntax MEASUREMENT:STATISTICS:MODE {OFF|ALL}
MEASUREMENT:STATISTICS:MODE?

Related Commands [MEASUREMENT:STATISTICS](#)

Arguments OFF turns all measurements off. This is the default value.
ALL turns on statistics and displays all statistics for each measurement.

Examples MEASUREMENT:STATISTICS:MODE OFF turns statistic measurements off.
MEASUREMENT:STATISTICS:MODE? might return
:MEASUREMENT:STATISTICS:MODE ALL indicating that
measurement statistics are turned on and all statistics are being displayed for
each measurement.

MEASUREMENT:STATISTICS:WEIGHTING

Sets or returns the time constant for mean and standard deviation statistical accumulations.

Group Measurement

Syntax MEASUREMENT:STATISTICS:WEIGHTING <NR1>
MEASUREMENT:STATISTICS:WEIGHTING?

Related Commands [MEASUREMENT:STATISTICS:MODE](#)

Arguments <NR1> is the number of samples used for the mean and standard deviation statistical accumulations.

Examples MEASUREMENT:STATISTICS:WEIGHTING 4 sets statistical weighting to four samples.

MEASUREMENT:STATISTICS:WEIGHTING? might return
:MEASUREMENT:STATISTICS:WEIGHTING 4 indicating that
measurement statistics weighting is currently set to 4 samples.

NEWpass (No Query Form)

This command (no query form) changes the password that enables access to password protected data. The PASSWORD command must be successfully executed before using this command or an execution error will be generated.

Group Miscellaneous

Syntax NEWpass <QString>

Related Commands [*PUD](#)
[PASSWORD](#)

Arguments <QString> is the new password, which can contain up to 16 characters.

Examples NEWPASS "mypassword" creates a new password (mypassword) for accessing your protected data.

*OPC

Generates the operation complete message in the Standard Event Status Register (SESR) when all pending commands that generate an OPC message are complete. The *OPC? query places the ASCII character "1" into the output queue when all such OPC commands are complete. The *OPC? response is not available to read until all pending operations finish. (See page 3-1, *Status and Events*.)

The *OPC command allows you to synchronize the operation of the instrument with your application program. (See page 3-7, *Synchronization Methods*.)

Table 2-38: Commands the Generate an OPC Message

Operation	Command
Single sequence acquisition	ACQUIRE:STATE ON or ACQUIRE:STATE RUN or ACQUIRE:STATE 1 (when ACQUIRE:STOPAfter is set to SEQUENCE)
Hard copy operation	HARDCOPY START
Calibration step	Refer to the optional Service Manual.

Group Status and Error

Syntax *OPC
*OPC?

Related Commands BUSY?, *WAI

Examples *OPC generates the operation complete message in the SESR at the completion of all pending OPC operations.

*OPC? might return 1 to indicate that all pending OPC operations are finished.

PASSWord(No Query Form)

Enables the *PUD and NEWpass set commands. Sending PASSWord without any arguments disables these same commands. Once the password is successfully entered, the *PUD and NEWpass commands are enabled until the oscilloscope is powered off, or until the FACTORY command, the PASSWord command with no arguments, or the *RST command is issued.

To change the password, you must first enter the valid password with the PASSWord command and then change to your new password with the NEWpass command. Remember that the password is case sensitive.

Group Miscellaneous

Syntax PASSWORD <QString>

Related Commands [NEWpass](#), [*PUD](#)

Arguments <QString> is the password and can include up to 10 characters. The factory default password is “XYZZY” and is always valid.

Examples PASSWORD “XYZZY” enables the *PUD and NEWpass set commands.
PASSWORD disables the *PUB and NEWpass set commands. You can still use the query version of *PUD.

*PSC

Sets and queries the power-on status flag that controls the automatic power-on handling of the DESER, SRER, and ESER registers. When *PSC is true, the DESER register is set to 255 and the SRER and ESER registers are set to 0 at power-on. When *PSC is false, the current values in the DESER, SRER, and ESER registers are preserved in nonvolatile memory when power is shut off and are restored at power-on.

Group Status and Error

Syntax *PSC <ON|OFF|NR1>
*PSC?

Related Commands [DESE](#), [*ESE](#), [FACTory](#), [*RST](#), [*SRE](#)

Arguments <NR1> = 0 sets the power-on status clear flag to false, disables the power-on clear and allows the instrument to possibly assert SRQ after power-on; any other value sets the power-on status clear flag to true, enabling the power-on status clear and prevents any SRQ assertion after power on.

Examples *PSC 0 sets the power-on status clear flag to false.
*PSC? might return 1 to indicate that the power-on status clear flag is set to true.

*PUD

Sets or returns a string of Protected User Data. This data is protected by the `PASSWord` command. You can modify it only by first entering the correct password. This password is not necessary to query the data.

Group Status and Error

Syntax `*PUD {<Block>|<QString>}`
`*PUD?`

Related Commands [PASSWord](#)

Arguments `<Block>` is a block containing up to 300 ASCII characters.
`<QString>` is a string containing up to 300 ASCII characters.

Examples `*PUD #229This instrument belongs to me` stores the string "This instrument belongs to me" in the user protected data area.
`*PUD?` might return `#221PROPERTY OF COMPANY X`

*RCL (No Query Form)

This command (no query form) restores the state of the instrument from a copy of the settings stored in memory (The settings are stored using the `*SAV` command).

Group Save and Recall

Syntax `*RCL <NR1>`

Related Commands [FACTory](#), [*LRN?](#), [RECALL:SETUp](#), [*RST](#), [*SAV](#), [SAVE:SETUp](#)

Arguments `<NR1>` is a value in the range from 1 to 10, which specifies a saved setup storage location.

Examples `*RCL 3` restores the instrument from a copy of the settings stored in memory location 3.

RECALL:SETUp (No Query Form)

Restores the state of the oscilloscope from a copy of the settings stored in memory. The settings are stored using the *SAV command.

This is equivalent to pressing the front-panel Save/Recall **Menu** button, the lower-bezel **Recall Setup** button, and the appropriate side-bezel button.

Group Save and Recall

Syntax RECALL:SETUp {FACTory|<NR1>|<file path>}

Related Commands [FACTory](#), [*RCL](#), [*RST](#), [*SAV](#), [SAVe:SETUp](#), [FILESystem:CWD](#)

Arguments FACTory restores the factory setup.

<NR1> is a value in the range from 1 to 10, which specifies a saved setup storage location.

<file path> specifies a location for an instrument setup file. <file path> is a quoted string that defines the file name and path. Input the file path using the form <drive>:/<dir>/<filename>.<extension> and one or more <dir>s are optional. If you do not specify them, the instrument will read the file from the default directory (see [FILESystem:CWD](#)). <filename> stands for a filename; the use of wildcard characters in filenames is not supported. Filename extensions are not required, but highly recommended.

Examples RECALL:SETUP FACTORY recalls (and makes current) the instrument setup to its factory defaults.

RECALL:SETUP 2 recalls the instrument setup from setup storage location 2.

RECALL:SETUP "TEK00000.SET" recalls the setup from the file TEK00000.SET in the default directory for setups (D:/TekScope/setups).

RECALL:WAVEform (No Query Form)

This command (no query form) recalls a stored waveform to a reference location. This command is equivalent to the front-panel **Save/Recall Menu** button, **Recall Waveform** from the lower-bezel menu, and the appropriate side-bezel menu item.

Group Save and Recall

Syntax RECALL:WAVEform <file path>,REF<x>

Related Commands [SAVE:WAVEform](#), [FILESystem:CWD](#), [FILESystem?](#)

Arguments REF<x> specifies a location in internal reference memory. Reference memory location values range from 1 through 4.

<file path> specifies a location for an instrument setup file. <file path> is a quoted string that defines the file name and path. Input the file path using the form <drive>:/<dir>/<filename>.<extension> and one or more <dir>s are optional. If you do not specify them, the instrument will read the file from the default directory (see [FILESystem:CWD](#)). <filename> stands for a filename; the use of wildcard characters in filenames is not supported. Filename extensions are not required, but highly recommended.

Examples RECALL:WAVEFORM "TEK00000.ISF",REF1 recalls the waveform stored in the file named TEK00000.ISF from the current directory for waveforms to the reference location 1.

REF<x>:DATE? (Query Only)

Returns the date that a reference waveform data was copied into the internal reference memory.

Group Vertical

Syntax REF<x>:DATE?

REF<x>:HORIZONTAL:DELAY:TIME

Set or queries the horizontal delay time for reference waveforms. The delay time is expressed in seconds and is limited to ± 5 times the reference horizontal scale.

Group Vertical

Syntax REF<x>:HORIZONTAL:DELAY:TIME <NR3>
REF<x>:HORIZONTAL:DELAY:TIME?

Arguments <NR3> is the delay time in seconds.

Examples REF2:HORIZONTAL:DELAY:TIME 4.0E-6 sets the horizontal delay time for the REF2 waveform to 4 μ s.

REF<x>:HORizontal:SCAle

Sets or returns the horizontal scale of the specified reference waveform. This command is equivalent to pushing the front-panel **R** button, one of the resulting lower-bezel menu R buttons, **Horizontal** from the side-bezel menu, and turning a multipurpose knob to select the actual value.

Group Vertical

Syntax REF<x>:HORizontal:SCAle <NR3>
REF<x>:HORizontal:SCAle?

Examples REF1:HORIZONTAL:SCALE? might return REF1:HORIZONTAL:SCALE 4.0E-4.

REF<x>:LABel

Sets or returns the specified reference waveform label.

Group Vertical

Syntax REF<x>:LABel <Qstring>
REF<x>:LABel?

Arguments <Qstring> is a string, enclosed in quotes, that contains the label text.

Examples REF4:LABEL? might return :REF4:LABEL "Clk wfm 2".

REF<x>:TIME? (Query Only)

Returns the time that a reference waveform data was copied into the internal reference memory.

Group Vertical

Syntax REF<x>:TIME?

Examples REF4:TIME? might return "16:54:05".

REF<x>:VERTical:POSition

Sets or returns the vertical position of the specified reference waveform. The reference waveform is specified by x. The value of x can range from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments.

Increasing the position value of a waveform causes the waveform to move up, and decreasing the position value causes the waveform to move down. Position adjusts only the display position of a waveform. The position value determines the vertical graticule coordinate at which signal values are displayed. For example, if the position for Reference 3 is set to 2.0, the signal represented by that reference will be displayed at 2.0 divisions above the center of the screen.

This command is equivalent to pushing the front-panel **R** button, one of the resulting lower-bezel menu R buttons, **Vertical** from the side-bezel menu, and turning a multipurpose knob to select the actual value.

Group Vertical

Syntax REF<x>:VERTical:POSition <NR3>
REF<x>:VERTical:POSition?

Related Commands CH<x>:POSition, MATH[1]:VERTical:POSition

Arguments <NR3> is the desired position, in divisions from the center horizontal graticule. The range is from -5.0 to 5.0 divisions.

Examples REF2:VERTICAL:POSITION 1.3E+00 positions the Reference 2 input signal 1.3 divisions above the center horizontal graticule.

REF1:VERTICAL:POSITION? might return :REF1:VERTICAL:POSITION -1.3000E+00 indicating that the current position of Reference 1 is 1.3 divisions below the center horizontal graticule.

REF<x>:VERTical:SCALE

Sets or returns the vertical scale of the specified reference waveform. The reference waveform is specified by x. The value of x can range from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments. This command is equivalent to pushing the front-panel **R** button, one of the resulting lower-bezel menu R buttons, **Vertical** from the side-bezel menu, and turning a multipurpose knob to select the actual value.

Each waveform has a vertical scale parameter. For a signal with constant amplitude, increasing the Scale causes the waveform to be displayed smaller. Decreasing the scale causes the waveform to be displayed larger.

Scale affects all waveforms, but affects reference and math waveforms differently from channel waveforms:

- For reference and math waveforms, this setting controls the display only, graphically scaling these waveforms and having no affect on the acquisition hardware.
- For channel waveforms, this setting controls the vertical size of the acquisition window as well as the display scale. The range and resolution of scale values depends on the probe attached and any other external factors you have specified.

Group Vertical

Syntax REF<x>:VERTICAL:SCALE <NR3>
REF<x>:VERTICAL:SCALE?

Related Commands CH<x>:SCALE, MATH[1]:VERTICAL:SCALE

Arguments <NR3> is the gain in user units per division.

Examples REF4:VERTICAL:SCALE 100E-03 sets the Reference 4 scale to 100 mV per division.

REF4:VERTICAL:SCALE? might return :REF2:VERTICAL:SCALE 1.0000e+00 indicating that the current vertical scale setting for Reference 2 is 1 V per division.

REM (No Query Form)

Embeds a comment within programs as a means of internally documenting the programs. The instrument ignores these embedded comment lines.

Group Miscellaneous

Syntax REM <QString>

Arguments <QString> is a string that can contain a maximum of 80 characters.

Examples REM "This is a comment" is a comment string that the instrument will ignore.

*RST (No Query Form)

Resets the instrument to the factory default settings. The *RST command does not alter the following:

- Calibration data that affect device specifications
- The Output Queue
- The Service Request Enable Register setting
- The Power-on status clear flag setting
- Alias definitions
- Stored settings
- The *PUD? Response
- Any of the values associated with the DATA command.

This command is equivalent to pressing the **Default Setup** button on the front panel.

Group Status and Error

Syntax *RST

Related Commands [FACTory](#), [RECALL:SETUp](#), [SAVE:SETUp](#), [*PSC](#), [*RCL](#), [*SAV](#)

Arguments None

Examples *RST resets the instrument settings to factory defaults.

*SAV (No Query Form)

Stores the state of the instrument to a specified memory location. You can later use the *RCL command to restore the instrument to this saved state.

This is equivalent to pressing the front-panel Save/Recall **Menu** button, the lower-bezel **Save Setup** button, and the appropriate side-bezel menu item.

Group	Save and Recall
Syntax	*SAV <NR1>
Related Commands	*RCL, RECALL:SETUp, SAVe:SETUp
Arguments	<NR1> specifies a location in which to save the state of the instrument. Location values range from 1 through 10. Using an out-of-range location value causes an execution error. Any settings that have been stored previously at this location will be overwritten.
Examples	*SAV 2 saves the current instrument state in memory location 2.

SAVE:ASSIgn:TYPE

Sets or returns the assignment of the data to be saved when the front-panel **Save** button is pressed.

This is equivalent to pressing the front-panel Save/Recall **Menu** button and the lower-bezel **Assign Save to** button.

Group	Save and Recall
Syntax	SAVE:ASSIgn:TYPE {IMAGE WAVEform SETUp} SAVE:ASSIgn:TYPE?
Arguments	IMAGE assigns the Save button to save screen images. WAVEform assigns the Save button to save waveforms. SETUp assigns the Save button to save setups.

SAVE:EVENTtable:BUS

Saves the specified bus data into the filename specified.

Group	Save and Recall
Syntax	SAVE:EVENTtable:BUS <file path>

Arguments <file path> is a filename, including path, where the event table will be saved. If you do not specify a directory, the oscilloscope will store the file in the current working directory. File name extensions are not required but are highly recommended. Event table files should have a .csv extension.

Examples SAVE:EVENTTABLE:BUS D:/foo.csv
will save an event table to the file “foo.csv” on the Compact Flash card.

SAVE:IMAGe (No Query Form)

Saves a capture of the screen image into the specified file. Supported image formats are PNG, Windows Bitmap and TIFF. If an extension for a supported file type is added to the file name, then the corresponding format will be used. If no supported extension is added to the file, the format to use will be determined by the value obtained from the :SAVE:IMAGe:FILEFormat? query.

This command is equivalent to pressing the front-panel **Save/Recall Menu** button, **Save Screen Image** from the lower-bezel menu, and the appropriate side-bezel menu item.

Group Save and Recall

Syntax SAVE:IMAGe <file path>

Related Commands [SAVE:ASSIgn:TYPe](#)

Arguments <file path> is a filename, including path, where the image will be saved. If you do not specify a directory, the oscilloscope will store the file in the current working directory. File name extensions are not required but are highly recommended. The path “D:/foo.png” will save an image to the file “foo.png” on the Compact Flash card.

SAVE:IMAGe:FILEFormat

Sets or returns the file format to use for saving screen images when the file type cannot be determined from the given file name or when screen images are captured by using the front panel.

This is equivalent to pressing the front-panel Save/Recall **Menu** button, the lower-bezel button **Save Screen Image** button, and the side-bezel **File Format** button.

Group Save and Recall

Syntax SAVE:IMAGe:FILEFormat {PNG|BMP|TIFF}
SAVE:IMAGe:FILEFormat?

Related Commands [SAVe:IMAGe](#)

Arguments PNG saves the file in Portable Network Graphics format.
BMP saves the file in Microsoft Windows bitmap format.
TIFF saves the file in Tagged Image File Format.

SAVe:IMAGe:LAYout

Sets or returns the layout to use for saved screen images.

This is equivalent to pressing the front-panel Save/Recall **Menu** button, the lower-bezel **Save Screen Image** button, and then pressing the **Orientation** button on the side-bezel menu to toggle between the two orientations.

Group Save and Recall

Syntax SAVE:IMAGe:LAYout {LANDscape|PORTRait}
SAVE:IMAGe:LAYout?

SAVe:SETUp (No Query Form)

Stores the state of the oscilloscope to a specified memory location. You can later use the *RCL command to restore the oscilloscope to this saved state.

This command is equivalent to pushing the front-panel Save/Recall **Menu** button, **Save Setup** from the lower-bezel menu, and the appropriate side-bezel menu item.

Group Save and Recall

Syntax SAVE:SETUp {<file path>|<NR1>}

Related Commands [*RCL](#), [RECALL:SETUp](#), [*SAV](#)

Arguments <file path> is the target location for storing the setup file. <file path> is a quoted string that defines the file name and path. Input the file path using the form <drive>:<dir>/<filename>. <extension> and one or more <dir>s are optional. If you do not specify them, the instrument will store the file in the current working directory. <filename> stands for a filename. (Use of wildcard characters in filenames is not supported.) Filename extensions are not required but are highly recommended. For setups, use the extension ".SET".

<NR1> specifies a location for saving the current front-panel setup. The front-panel setup value ranges from 1 to 10. Using an out-of-range value causes an execution error. Any settings that have been stored previously at this location will be overwritten.

Examples SAVE:SETUP 5 saves the current instrument setup in memory location 5.

SAVE:SETUP "TEK00000.SET" saves the current instrument setup in the file TEK00000.SET in the current working directory.

SAVE:WAVEform (No Query Form)

This command (no query form) saves a waveform to one of four reference memory locations or a file.

This command is equivalent to pressing the front-panel Save/Recall **Menu** button, **Save Waveform** from the lower-bezel menu, and the appropriate side-bezel menu item.

Group Save and Recall

Syntax SAVE:WAVEform <wfm>,{<file path>|REF<x>}

Related Commands [RECALL:WAVEform](#)

Arguments <wfm> is the waveform that will be saved. Valid waveforms include CH<x>, MATH<y>, and REF<x>.

REF<x> specifies the location in internal reference memory to where the waveform is stored.

<file path> is the location to where the waveform is stored. <file path> is a quoted string that defines the file name and path. Input the file path using the form <drive>/<dir>/<filename>. <extension> and one or more <dir>s are optional. If

you do not specify them, the instrument will read the waveform from the default directory. <filename> stands for a filename of up to 125 characters, followed by a period (".") and the three-character extension. Waveform files should have a .ISF extension for internal file format files or a .CSV extension for comma-separated spreadsheet format files.

- Examples** `SAVE:WAVEFORM MATH1, REF2` saves the Math1 waveform in reference memory location2.
- `SAVE:WAVEFORM MATH1, "TEK0000.ISF"` saves the Math1 waveform to the file TEK00000.ISF in the default directory and on the default drive.

SAVe:WAVEform:FILEFormat

Specifies or returns the file format for saved waveforms. Waveform header and timing information is included in the resulting file of non-internal formats. The instrument saves DPO waveforms as a 500 x 200 matrix, with the first row corresponding to the most recently acquired data. The values specified by [DATA:STARt](#) and [DATA:STOP](#) determine the range of waveform data to output. In the event that [DATA:STOP](#) value is greater than the current record length, the current record length determines the last output value.

This command is equivalent to pushing the front-panel **Save/Recall Menu** button, the **Save Waveform** lower-bezel menu button, the **To File** side-bezel menu button, and the **Internal File Format (.isf)** or the **Spreadsheet File Format (.csv)** side-menu buttons.

Group Save and Recall

Syntax `SAVe:WAVEform:FILEFormat {INTERNA1|SPREADSheet}`
`SAVe:WAVEform:FILEFormat?`

Related Commands [CURVe](#), [DATA](#), [DATA:STARt](#), [DATA:STOP](#), [SAVe:WAVEform](#), [WFMinpre:NR_Pt](#), [WFMOutpre:NR_Pt?](#)

Arguments `INTERNA1` specifies that waveforms are saved in an internal format, using a .isf filename extension. These files can be recalled as reference waveforms. When this argument is specified, the settings specified via the `DATA:STARt` and `DATA:STOP` commands have no meaning as the entire waveform is saved.

`SPREADSheet` specifies that waveform data is saved in a format that contains comma delimited values. These waveform data files are named using the .csv filename extension. Saving waveforms in CSV format enables spreadsheet programs to import the data.

Examples SAVE:WAVEFORM:FILEFORMAT INTERNAL specifies that the internal file format is the format used for saving waveforms.

SAVE:WAVEFORM:FILEFORMAT? might return :SAVE:WAVEFORM:FILEFORMAT INTERNAL indicating that waveforms are saved using the internal format.

SEARCH? (Query Only)

Returns all search-related settings.

Group Search

Syntax SEARCH?

Examples SEARCH? might return:

```
:SEARCH:SEARCH1:TRIG:A:BUS:B1:SPI:COND SS;DAT:MOSI:VAL
"XXXXXXXX";:SEARCH:SEARCH1:TRIG:A:BUS:B1:SPI:DAT:MISO:VAL
"XXXXXXXX";:SEARCH:SEARCH1:TRIG:A:BUS:B1:SPI:DAT:SIZ
1;:SEARCH:SEARCH1:TRIG:A:BUS:B1:I2C:COND
STAR;DAT:VAL "XXXXXXXX";SIZ 1;DIR
NOCARE;:SEARCH:SEARCH1:TRIG:A:BUS:B1:I2C:ADDR:MOD ADDR7;TYP
USER;VAL "XXXXXXXX";:SEARCH:SEARCH1:TRIG:A:BUS:B1:CAN:COND
SOF;FRAME DATA;DAT:VAL "XXXXXXXX";SIZ 1;D IR
NOCARE;QUAL EQU;:SEARCH:SEARCH1:TRIG:A:BUS:B1:CAN:ID:MOD
ST;VAL "XXXXXXXXXXXX";:SEARCH:SEARCH1:TRI
G:A:BUS:B2:SPI:COND SS;DAT:MOSI:VAL
"XXXXXXXX";:SEARCH:SEARCH1:TRIG:A:BUS:B2:SPI:DAT:MISO:VAL
"XXXXX XXX";:SEARCH:SEARCH1:TRIG:A:BUS:B2:SPI:DAT:SIZ
1;:SEARCH:SEARCH1:TRIG:A:BUS:B2:I2C:COND
STAR;DAT:VAL "XXXXXXXX";SIZ 1;DIR
NOCARE;:SEARCH:SEARCH1:TRIG:A:BUS:B2:I2C:ADDR:MOD ADDR7;TYP
USER;VAL "XXXXXXXX";:SEARCH:SEARCH1:TRIG:A:BUS:B2:CAN:COND
SOF;FRAME DATA;DAT:VAL "XXXXXXXX";SIZ 1;DIR NOCARE;QUAL
EQU;:SEARCH:SEARCH1:TRIG:A:BUS:B2:CAN:ID:MOD ST;VAL
"XXXXXXXXXXXX";:SEARCH:SEARCH1:TRIG:A:BUS:SOU B1;:SEA
RCH:SEARCH1:TRIG:A:TYP EDG;LEV 0.0000;LEV:CH1
0.0000;CH2 0.0000;CH3 0.0000;CH4 0.0000;MATH
0.0000;RE F1 0.0000;REF2 0.0000;REF3 0.0000;REF4
0.0000;:SEARCH:SEARCH1:TRIG:A:UPP:CH1 800.0000E-3;CH2
800.000 0E-3;CH3 800.0000E-3;CH4 800.0000E-3;MATH
800.0000E-3;REF1 800.0000E-3;REF2 800.0000E-3;REF3 800.000
0E-3;REF4 800.0000E-3;:SEARCH:SEARCH1:TRIG:A:LOW:CH1
0.0000;CH2 0.0000;CH3 0.0000;CH4 0.0000;MATH 0.
0000;REF1 0.0000;REF2 0.0000;REF3 0.0000;REF4
```

```
0.0000;:SEARCH:SEARCH1:TRIG:A:EDGE:SOU CH1;SLO
RIS;:SE ARCH:SEARCH1:TRIG:A:LOGI:FUNC AND;THR:CH1
0.0000;CH2 0.0000;CH3 0.0000;CH4 0.0000;MATH
0.0000;REF1 0 .0000;REF2 0.0000;REF3 0.0000;REF4
0.0000;:SEARCH:SEARCH1:TRIG:A:LOGI:INP:CH1 X;CH2 X;CH3
X;CH4 X;MA TH X;REF1 X;REF2 X;REF3 X;REF4 X;CLOC:SOU
NONE;EDGE RIS;:SEARCH:SEARCH1:TRIG:A:LOGI:PAT:INP:CH1
X;CH 2 X;CH3 X;CH4 X;MATH X;REF1 X;REF2 X;REF3 X;REF4
X;:SEARCH:SEARCH1:TRIG:A:LOGI:PAT:WHE TRU;WHE:LESSL
8.0000E-9;MOREL 8.0000E-9;:SEARCH:SEARCH1:TRIG:A:PULSEW:SOU
CH1;POL POS;WHE LESS;WID 8.0000E-9;:SEA
RCH:SEARCH1:TRIG:A:RUNT:SOU CH1;POL POS;WHE OCCURS;WID
8.0000E-9;:SEARCH:SEARCH1:TRIG:A:TRAN:SOU CH1 ;POL POS;WHE
SLOW;DELT 8.0000E-9;:SEARCH:SEARCH1:TRIG:A:SETH:CLOC:SOU
CH1;EDGE RIS;THR 0.0000;:SEARC H:SEARCH1:TRIG:A:SETH:DAT:SOU
CH2;THR 0.0000;:SEARCH:SEARCH1:TRIG:A:SETH:HOLDT
8.0000E-9;SETT 8.0000 E-9;:SEARCH:SEARCH1:STATE 0
```

SEARCH:SEARCH<x>:COPY (No Query Form)

This command copies the search criteria to the trigger, or the trigger criteria to the search.

Group Search

Syntax SEARCH:SEARCH<x>:COPY {SEARCHtotrigger|TRIGgertosearch}

Arguments SEARCHtotrigger copies the search criteria to the trigger
TRIGgertosearch copies the trigger criteria to the search

SEARCH:SEARCH<x>:STATE

Sets the search state to on or off. The query form returns the search state.

Group Search

Syntax SEARCH:SEARCH<x>:STATE {<NR1>|OFF|ON}
SEARCH:SEARCH<x>:STATE?

Arguments OFF or <NR1> = 0 sets the search state to off.
ON or <NR1> ≠ 0 sets the search state to on.

SEARCH:SEARCH<x>:TOTAL? (Query Only)

Returns the total number of matches for this search, which may be more than the number of marks placed if the mark limit has been exceeded.

Group Search

Syntax SEARCH:SEARCH<x>:TOTAL?

Returns <NR1> is the total number of matches.

SEARCH:SEARCH<x>:TRIGger:A:BUS? (Query Only)

Returns the serial search type. There are two serial buses B1 and B2. Each can be one of three serial search types: I2C, CAN or SPI.

Conditions This command requires a DPO4AUTO or DPO4EMBD application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS?

Returns I2C specifies the Inter-IC bus.
SPI specifies the Serial Peripheral Interface bus.
CAN specifies the Controller Area Network bus.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:CONDition

Sets or queries the search condition for CAN search.

Conditions This command requires a DPO4AUTO application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:CONDition
 {SOF|FRAMetype|IDentifier|DATA|IDANDDATA|EOF|ACKMISS}
 SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:CONDition?

Arguments SOF specifies a search based on start of frame.
 FRAMetype specifies a search based on frame type.
 IDentifier specifies a search based on frame identifier.
 DATA specifies a search based on frame data.
 IDANDDATA specifies a search based on frame identifier and data.
 EOF specifies end of frame.
 ACKMISS specifies a search based on the missing the ACK field.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:DIRection

Sets or queries the CAN search condition to be valid on a READ, WRITE or either. This only applies if the search condition is Identifier.

Conditions This command requires a DPO4AUTO application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:DIRection
 {READ|WRITE|NOCARE}
 SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:DIRection?

Arguments READ specifies a read condition.
 WRITE specifies a write condition.
 NOCARE specifies either a read or write condition.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:QUALifier

Sets or queries the CAN data qualifier. This only applies if the trigger condition is IDANDDATA or DATA.

Conditions This command requires a DPO4AUTO application module.

Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:QUALifier {LESSThan MOREThan EQUa1 UNEQUa1} SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:QUALifier?
Related Commands	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:VALue
Arguments	<p>LESSThan specifies to search for bus data is less than the specified value specified by SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:VALue.</p> <p>MOREThan specifies to search for bus data is more than the specified value specified by SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:VALue.</p> <p>EQUa1 specifies to search for bus data is equal to the specified value specified by SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:VALue.</p> <p>UNEQUa1 specifies to search for bus data is not equal to the specified value specified by SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:VALue.</p>

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:SIZE

Sets or queries the length of the data string in bytes to be used for CAN search, if search condition is DATA or IDANDDATA.

Conditions	This command requires a DPO4AUTO application module.
Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:SIZE <NR1> SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:SIZE?
Arguments	<NR1> is the data string length in bytes.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:VALue

Sets or queries the binary data string to be used for CAN search if search condition is ID or IDANDDATA.

Conditions	This command requires a DPO4AUTO application module.
-------------------	--

Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:VALue <bin> SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:VALue?
Related Commands	SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:DATA:QUALifier
Arguments	<bin> is the data in binary format.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:FRAMetype

Sets or queries the CAN Frame Type to be used if the search condition is FrameType.

Conditions This command requires a DPO4AUTO application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:FRAMetype
{DATA|REMOte|ERRor|OVERLoad}
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN:FRAMetype?

Arguments DATA specifies a data frame.
REMOte specifies a remote frame.
ERRor specifies an error frame.
OVERLoad specifies an overload frame.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN{:IDentifier|:ADDRess}:MODE

Sets or queries the CAN addressing mode to standard or extended format.

Conditions This command requires a DPO4AUTO application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN{:IDentifier|:
ADDRess}:MODE {STandard|EXTended}

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN{:IDentifier|:ADDRESS}:MODE?

- Arguments** STANDARD specifies an 11-bit identifier field.
 EXTENDED specifies a 29-bit identifier field.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN{:IDentifier|:ADDRESS}:VALue

Sets or queries the binary address string to be used for CAN search if search condition is ID or IDANDDATA.

- Conditions** This command requires a DPO4AUTO application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN{:IDentifier|:ADDRESS}:VALue <bin>
 SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:CAN{:IDentifier|:ADDRESS}:VALue?

- Arguments** <bin> is the address in binary format.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDRESS:MODE

Sets or queries the I2C address mode to 7 or 10-Bit.

- Conditions** This command requires a DPO4EMBD application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDRESS:MODE {ADDR7|ADDR10}
 SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDRESS:MODE?

- Arguments** ADDR7 specifies 7-bit addresses.
 ADDR10 specifies 10-bit addresses.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDResS:TYPe

Sets or queries the I2C address type. Provided for compatibility. The only supported address type is USER.

Conditions This command requires a DPO4EMBD application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDResS:TYPe {USER}
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDResS:TYPe?

Arguments USER specifies a user address.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDResS:VALue

Sets or queries the binary address string to be used for I2C search if search condition is ADDR or ADDRANDDATA.

Conditions This command requires a DPO4EMBD application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDResS:VALue <bin>
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:ADDResS:VALue?

Arguments <bin> is the address in binary format.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:CONDition

Sets or queries the search condition for I2C search.

Conditions This command requires a DPO4EMBD application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:CONDition
 {START|STOP|REPEATstart|ACKMISS|ADDRESS|DATA|ADDRANDDATA}
 SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:CONDition?

Arguments START specifies a search based on start condition.
 STOP specifies a search based on stop condition.
 REPEATstart specifies a search based on repeat of start condition.
 ACKMISS specifies a search based on missing acknowledgement condition.
 ADDRESS specifies a search based on address.
 DATA specifies a search based on data.
 ADDRANDDATA specifies a search based on address and data.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:DIRection

Sets or queries the I2C search condition to be valid on a READ, WRITE or either.

Conditions This command requires a DPO4EMBD application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:DIRection
 {READ|WRITE|NOCARE}
 SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:DIRection?

Arguments READ specifies a read condition.
 WRITE specifies a write condition.
 NOCARE specifies either a read or write condition.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:SIZE

Sets or queries the length of the data string in bytes to be used for I2C search, if search condition is DATA or ADDRANDDATA.

Conditions This command requires a DPO4EMBD application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:SIZE <NR1>
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:SIZE?

Arguments <NR1> is the data string length in bytes.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:VALue

Sets or queries the binary data string to be used for I2C search if search condition is DATA or ADDRANDDATA.

Conditions This command requires a DPO4EMBD application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:VALue <bin>
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:DATA:VALue?

Arguments <bin> is the data in binary format.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:CONDition

Sets or queries the search condition for SPI search.

Conditions This command requires a DPO4EMBD application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:CONDition
{SS|MISO|MOSI|MISOMOSI}
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:CONDition?

Arguments SS specifies the Slave Selection condition.
MISO specifies the Master-In Slave-Out condition.
MOSI specifies the Master-Out Slave-In condition.
MISOMOSI specifies the Master-In Slave-Out and Master-Out Slave-In conditions.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA{:MISO|IN}:VALue

Sets or queries the binary data string to be used for SPI search if search condition is MISO, MISOMOSI.

Conditions This command requires a DPO4EMBD application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA{:MISO|IN}:
VALue <bin>
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA{:MISO|IN}:
VALue?

Arguments <bin> is the data in binary format.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA{:MOSI|OUT}:VALue

Sets or queries the binary data string to be used for SPI search if search condition is MOSI, or MISOMOSI.

Conditions This command requires a DPO4EMBD application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA{:MOSI|OUT}:
VALue <bin>
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA{:MOSI|OUT}:
VALue?

Arguments <bin> is the data in binary format.

SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA:SIZE

Sets or queries the length of the data string in bytes to be used for SPI search, if search condition is MISO, MOSI or MISOMOSI.

Conditions This command requires a DPO4EMBD application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA:SIZE <NR1>
SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:DATA:SIZE?

Arguments <NR1> is the data string length in bytes.

SEARCH:SEARCH<x>:TRIGger:A:BUS:SOUrce

Sets or queries the bus for a serial search.

Conditions This command requires a DPO4AUTO or DPO4EMBD application module.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:BUS:SOUrce {B1|B2}
SEARCH:SEARCH<x>:TRIGger:A:BUS:SOUrce?

Arguments B1 specifies the bus 1 source.
B2 specifies the bus 2 source.

SEARCH:SEARCH<x>:TRIGger:A:EDGE:SLOpe

Sets or returns the slope for an edge search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:EDGE:SLOpe {RISe|FALL}
SEARCH:SEARCH<x>:TRIGger:A:EDGE:SLOpe?

Arguments RISe specifies a rising edge.
FALL specifies a falling edge.

SEARCH:SEARCH<x>:TRIGger:A:EDGE:SOUrce

Sets or returns the source waveform for an edge search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:EDGE:SOURce
{CH1|CH2|CH3|CH4|MATH}
SEARCH:SEARCH<x>:TRIGger:A:EDGE:SOURce?

Arguments CH<x> specifies one input channel as the edge source, where <x> = 1, 2, 3 or 4.
MATH specifies the math waveform as the search source.
REF specifies the reference waveform as the search source.

SEARCH:SEARCH<x>:TRIGger:A:LEVel

Sets or queries the level for an edge search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LEVel {<NR3>|TTL}
SEARCH:SEARCH<x>:TRIGger:A:LEVel?

Arguments <NR3> specifies the trigger level, in volts.
TTL specifies a 1.4 V trigger level.

SEARCH:SEARCH<x>:TRIGger:A:LEVel:CH<x>

Sets or queries the level for edge search for the specified channel to determine where to place a mark. Each channel can have an independent level.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LEVel:CH<x> {<NR3>|TTL}
SEARCH:SEARCH<x>:TRIGger:A:LEVel:CH<x>?

Arguments <NR3> specifies the trigger level, in volts.
TTL specifies a 1.4 V trigger level.

SEARCH:SEARCH<x>:TRIGger:A:LEVel:MATH[1]

Sets or queries the math waveform level for edge search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LEVel:MATH {TTL}
SEARCH:SEARCH<x>:TRIGger:A:LEVel:MATH?

Arguments TTL specifies a 1.4 V trigger level.

SEARCH:SEARCH<x>:TRIGger:A:LEVel:REF<x>

Sets or queries the specified reference waveform level for edge search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LEVel:REF<x> {TTL}
SEARCH:SEARCH<x>:TRIGger:A:LEVel:REF<x>?

Arguments TTL specifies a 1.4 V trigger level.

SEARCH:SEARCH<x>:TRIGger:A:LOGIc:FUNcTION

Sets or queries the logic operator for the logic search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGIc:FUNcTION {AND|NAND|NOR|OR}
SEARCH:SEARCH<x>:TRIGger:A:LOGIc:FUNcTION?

Arguments AND specifies to place a mark if all conditions are true.

NAND specifies to place a mark if any of the conditions are false.

NOR specifies to place a mark if all conditions are false.

OR specifies to place a mark if any of the conditions are true.

SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPut:CH<x>

Sets or queries the Boolean logic criteria for the logic search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPut:CH<x> {HIGH|LOW|X}
SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPut:CH<x>?

Arguments HIGH specifies the logic high.
LOW specifies the logic low.
X specifies a "don't care" state.

SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPut:CLOCK:EDGE

Sets or queries whether the clock edge is rise or fall for a logic search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPut:CLOCK:EDGE
{FALL|RISe}
SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPut:CLOCK:EDGE?

Arguments RISe specifies a rising edge.
FALL specifies a falling edge.

SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPut:CLOCK:SOUrce

Sets or queries the clock source definition for logic search. If a clock source is defined, then the logic search is determined by the state of the other inputs at the clock transition. If no clock source is defined, then the logic search is determined only by the state of the inputs.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:CLOCK:SOUrce
 {CH1|CH2|CH3|CH4|MATH|REF|NONE}
 SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:CLOCK:SOUrce?

Arguments CH<x> specifies a channel input as the clock source, where <x> = 1, 2, 3, or 4.
 MATH specifies the math waveform as the clock source.
 REF specifies the reference waveform as the clock source.
 NONE specifies no clock source.

SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:MATH

Sets or queries the Boolean logic criteria for the logic search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:MATH {HIGH|LOW|X}
 SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:MATH?

Arguments HIGH specifies a high logic level.
 LOW specifies a low logic level.
 X specifies a “don’t care” condition.

SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:REF<x>

Sets or queries the Boolean logic criteria for the logic search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:REF<x> {HIGH|LOW|X}
 SEARCH:SEARCH<x>:TRIGger:A:LOGic:INPut:REF<x>?

Arguments HIGH specifies a high logic level.
 LOW specifies a low logic level.
 X specifies a “don’t care” condition.

SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:INPut:CH<x>

Sets or queries the Boolean logic criteria for the logic search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:INPut:CH<x>
{HIGH|LOW|X}
SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:INPut:CH<x>?

Arguments HIGH specifies a high logic level.
LOW specifies a low logic level.
X specifies a “don’t care” condition.

SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:INPut:MATH

Sets or returns the Boolean logic criteria for the logic search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:INPut:MATH
{HIGH|LOW|X}
SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:INPut:MATH?

Arguments HIGH specifies a high logic level.
LOW specifies a low logic level.
X specifies a “don’t care” condition.

SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:INPut:REF<x>

Sets or returns the Boolean logic criteria for the logic search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:REF<x>
{HIGH|LOW|X}
SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:INPut:REF<x>?

Arguments HIGH specifies a high logic level.
LOW specifies a low logic level.
X specifies a “don’t care” condition.

SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn

Sets or returns the condition for generating a logic pattern search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn
{TRUE|FALSE|LESSThan|MOREThan|EQUal|UNEQUal}
SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn?

Arguments TRUE argument sets the instrument to place a mark when the pattern becomes true.
FALSE argument sets the instrument to place a mark when the pattern becomes false.
LESSThan argument sets the instrument to place a mark if the specific pattern is true less than the time set by the [SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:LESSLimit](#) command.
MOREThan argument sets the instrument to place a mark if the specific pattern is true longer than the specified time set by the [SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:MORELimit](#) command.
EQUal argument sets the instrument to place a mark if the specific pattern is true longer than the time set by the [SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:LESSLimit](#) command, but less than the specified time set by the [SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:MORELimit](#) command.
UNEQUal argument sets the instrument to place a mark if the specific pattern is true less than the time set by the [SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:LESSLimit](#) command, or longer than the specified time set by the [SEARCH:SEARCH<x>:TRIGger:A:LOGic:PATtern:WHEn:MORELimit](#) command.

SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:WHEn:LESSLimit

Sets or returns the maximum time that the selected pattern may be true and still generate an A logic pattern search to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:WHEn:LESSLimit
<NR3>
SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:WHEn:LESSLimit?

Arguments <NR3> specifies the maximum amount of time to hold the pattern true.

SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:WHEn:MORELimit

Sets or returns the minimum time that the selected pattern may be true and still generate an A logic pattern search to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:WHEn:MORELimit
<NR3>
SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:WHEn:MORELimit?

Arguments <NR3> specifies the minimum amount of time to hold the pattern true.

SEARCH:SEARCH<x>:TRIGger:A:LOGIc:THReshold:CH<x>

Sets or returns the channel threshold level for a search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGIc:THReshold:CH<x> {<NR3>|TTL}
SEARCH:SEARCH<x>:TRIGger:A:LOGIc:THReshold:CH<x>?

Arguments <NR3> specifies the trigger level, in volts.

TTL specifies a 1.4 V trigger level.

SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:MATH

Sets or returns the math waveform threshold level for edge search to determine where to place a mark

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:MATH {TTL}
SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:MATH?

Arguments TTL specifies a 1.4 V trigger level.

SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:REF<x>

Sets or returns the reference waveform threshold level for edge search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:REF<x> {TTL}
SEARCH:SEARCH<x>:TRIGger:A:LOGic:THReshold:REF<x>?

Arguments TTL specifies a 1.4 V trigger level.

SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:CH<x>

Sets or returns the channel waveform lower threshold level for a transition search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:CH<x> {TTL}
SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:CH<x>?

Arguments TTL specifies a 1.4 V trigger level.

SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:MATH

Sets or returns the math waveform lower threshold level for a transition search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:MATH {TTL}
SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:MATH?

Arguments TTL specifies a 1.4 V trigger level.

SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:REF<x>

Sets or returns the reference waveform lower threshold level for a transition search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:REF<x> {TTL}
SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:REF<x>?

Arguments TTL specifies a 1.4 V trigger level.

SEARCH:SEARCH<x>:TRIGger:A:PULSEwidth:POLarity

Sets or returns the polarity for a pulse search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:PULSEwidth:POLarity
{NEGative|POSitive}
SEARCH:SEARCH<x>:TRIGger:A:PULSEwidth:POLarity?

Arguments POSITIVE specifies that the instrument will only place a mark when the polarity of the pulse is positive.

NEGative specifies that the instrument will only place a mark when the polarity of the pulse is negative.

SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:SOURce

Sets or returns the source waveform for a pulse search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:PULSEwidth:SOURce
{CH1|CH2|CH3|CH4|MATH|REF}
SEARCH:SEARCH<x>:TRIGger:A:PULSEwidth:SOURce?

Arguments CH<x> specifies one input channel as the edge source, where <x> = 1, 2, 3 or 4.
MATH specifies the math waveform as the search source.
REF specifies the reference waveform as the search source.

SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:WHEn

Sets or returns the condition for generating a pulse width search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:PULSEwidth:WHEn
{LESSThan|MOREthan|EQUal|UNEQUal}
SEARCH:SEARCH<x>:TRIGger:A:PULSEwidth:WHEn?

Arguments LESSThan argument sets the instrument to place a mark if the pulse width is less than the time set by the [SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:WIDTH](#) command.

MOREThan argument sets the instrument to place a mark if the pulse width is true longer than the specified time set by the [SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:WIDTH](#) command.

EQUal argument sets the instrument to place a mark if the pulse width is equal to the time set by the [SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:WIDTH](#) command within a tolerance of $\pm 5\%$.

UNEQUal argument sets the instrument to place a mark if the pulse width is unequal to the time set by the [SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:WIDTH](#) command within a tolerance of $\pm 5\%$.

SEARCH:SEARCH<x>:TRIGger:A:PULSEwidth:WIDth

Sets or returns the pulse width setting for a pulse width search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:PULSEwidth:WIDth <NR3>
SEARCH:SEARCH<x>:TRIGger:A:PULSEwidth:WIDth?

Arguments <NR3> is the pulse width.

SEARCH:SEARCH<x>:TRIGger:A:RUNT:POLarity

Sets or returns the polarity setting for a runt search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:RUNT:POLarity
{EITHer|NEGative|POSitive}
SEARCH:SEARCH<x>:TRIGger:A:RUNT:POLarity?

Arguments POSitive indicates that the rising edge crosses the low threshold and the falling edge re-crosses the low threshold without either edge ever crossing the high threshold.

NEGative indicates that the falling edge crosses the high threshold and the rising edge re-crosses the high threshold without either edge ever crossing the low threshold.

EITHer finds on a runt of either polarity.

SEARCH:SEARCH<x>:TRIGger:A:RUNT:SOUrce

Sets or returns the source setting for a runt search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:RUNT:SOURce
 {CH1|CH2|CH3|CH4|MATH|REF}
 SEARCH:SEARCH<x>:TRIGger:A:RUNT:SOURce?

Arguments CH<x> specifies one input channel as the edge source, where <x> = 1, 2, 3 or 4.
 MATH specifies the math waveform as the search source.
 REF specifies the reference waveform as the search source.

SEARCH:SEARCH<x>:TRIGger:A:RUNT:WHEn

Sets or returns the condition setting for a runt search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:RUNT:WHEn
 {LESSthan|MOREthan|EQua1|UNEQua1|OCCURS}
 SEARCH:SEARCH<x>:TRIGger:A:RUNT:WHEn?

Arguments OCCURS argument specifies a trigger event if a runt of any detectable width occurs.
 LESSthan argument sets the instrument to trigger if the a runt pulse is detected with width less than the time set by the [SEARCH:SEARCH<x>:TRIGger:A:RUNT:WIDth](#) command.
 MOREthan argument sets the instrument to trigger if the a runt pulse is detected with width more than the time set by the [SEARCH:SEARCH<x>:TRIGger:A:RUNT:WIDth](#) command.
 EQua1 argument sets the instrument to trigger when the pattern is true for a time period equal to the time period specified in [SEARCH:SEARCH<x>:TRIGger:A:RUNT:WIDth](#) within a ±5% tolerance.
 NOTEQua1 argument sets the instrument to trigger when the pattern is true for a time period greater than or less than (but not equal) the time period specified in [SEARCH:SEARCH<x>:TRIGger:A:RUNT:WIDth](#) within a ±5% tolerance.

SEARCH:SEARCH<x>:TRIGger:A:RUNT:WIDth

Sets or returns the width setting for a runt search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:RUNT:WIDTh <NR3>
SEARCH:SEARCH<x>:TRIGger:A:RUNT:WIDTh?

Arguments <NR3> specifies the minimum width, in seconds.

SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:EDGE

Sets or returns the clock slope setting for a setup/hold search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:EDGE {FALL|RISe}
SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:EDGE?

Arguments FALL specifies polarity as the clock falling edge.
RISe specifies polarity as the clock rising edge.

SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:SOURce

Sets or returns the clock source setting for an setup/hold search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:SOURce
{CH1|CH2|CH3|CH4|MATH|REF}
SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:SOURce?

Arguments CH<x> specifies one input channel as the edge source, where <x> = 1, 2, 3 or 4.
MATH specifies the math waveform as the search source.
REF specifies the reference waveform as the search source.

SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:THReshold

Sets or returns the clock threshold setting for an setup/hold search to determine where to place a mark.

Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:THReshold {<NR3> TTL} SEARCH:SEARCH<x>:TRIGger:A:SETHold:CLOCK:THReshold?
Arguments	TTL specifies a preset TTL high level of 1.4 V. <NR3> is the clock level, in volts.

SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATA:SOURce

Sets or returns the data source setting for an setup/hold search to determine where to place a mark.

Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATA:SOURce {CH1 CH2 CH3 CH4 MATH REF} SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATA:SOURce?
Arguments	CH<x> specifies one input channel as the edge source, where <x> = 1, 2, 3 or 4. MATH specifies the math waveform as the search source. REF specifies the reference waveform as the search source.

SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATA:THReshold

Sets or returns the data threshold setting for an setup/hold search to determine where to place a mark.

Group	Search
Syntax	SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATA:THReshold {<NR3> TTL} SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATA:THReshold?
Arguments	TTL specifies a preset TTL high level of 1.4 V. <NR3> is the clock level, in volts.

SEARCH:SEARCH<x>:TRIGger:A:SETHold:HOLDTime

Sets or returns the hold time setting for an setup/hold search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:SETHold:HOLDTime <NR3>
SEARCH:SEARCH<x>:TRIGger:A:SETHold:HOLDTime?

Arguments <NR3> specifies the hold time setting in seconds. Positive values for hold time occur after the clock edge. Negative values occur before the clock edge.

SEARCH:SEARCH<x>:TRIGger:A:SETHold:SETTime

Sets or returns the setup time setting for an setup/hold search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:SETHold:SETTime <NR3>
SEARCH:SEARCH<x>:TRIGger:A:SETHold:SETTime?

Arguments <NR3> specifies the setup time for setup and hold violation triggering.

SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:DELTatime

Sets or returns the transition time setting for an transition search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:DELTatime <NR3>
SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:DELTatime?

Arguments <NR3> specifies the transition time, in seconds.

SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:POLarity

Sets or returns the polarity setting for an transition search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:POLarity
{EITHer|NEGative|POSitive}
SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:POLarity?

Arguments POSitive indicates that a pulse edge must traverse from the lower (most negative) to higher (most positive) level for transition triggering to occur.
NEGative indicates that a pulse edge must traverse from the upper (most positive) to lower (most negative) level for transition triggering to occur.
EITHer indicates either positive or negative polarity.

SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:SOURce

Sets or returns the source setting for an transition search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:SOURce
{CH1|CH2|CH3|CH4|MATH}
SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:SOURce?

Arguments CH<x> specifies one input channel as the edge source, where <x> = 1, 2, 3 or 4.
MATH specifies the math waveform as the search source.

SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:RISEFall}:WHEn

Sets or returns the condition setting for an transition search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A{TRANSition|RISEFall}:WHEn
 {SLOWer|FASTER|EQua1|UNEQua1}
 SEARCH:SEARCH<x>:TRIGger:A{TRANSition|RISEFall}:WHEn?

Arguments FASTER sets the trigger to occur when the transitioning signal is faster than the set volts/second rate.

SLOWer sets the trigger to occur when the transitioning signal is slower than the set volts/second rate.

EQua1 sets the trigger to occur when the transitioning signal is equal to the set volts/second rate within a $\pm 5\%$ tolerance.

UNEQua1 sets the trigger to occur when the transitioning signal is not equal to the set volts/second rate $\pm 5\%$.

SEARCH:SEARCH<x>:TRIGger:A:TYPE

Sets or returns the trigger type setting for a search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:TYPE
 {EDGE|SETHold|PULSEwidth|RUNT|TRANSition|LOGIc|BUS (with the appropriate application module installed)}
 SEARCH:SEARCH<x>:TRIGger:A:TYPE?

Arguments RUNT triggers when a pulse crosses the first preset voltage threshold but does not cross the second preset threshold before recrossing the first. The thresholds are set with the [SEARCH:SEARCH<x>:TRIGger:A:LOWerthreshold:CH<x>](#) and [SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:CH<x>](#) commands.

PULSEwidth triggers when a pulse is found that has the specified polarity and is either inside or outside the limits as specified by [SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:WHEn:LESSLimit](#) and [SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:WHEn:MORELimit](#). The polarity is selected using the [SEARCH:SEARCH<x>:TRIGger:A:RUNT:POLarity](#) command.

TRANSition triggers when a pulse crosses both thresholds in the same direction as the specified polarity and the transition time between the two threshold crossings is greater or less than the specified time delta.

SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:CH<x>

Sets or returns the channel waveform upper threshold level for a transition search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:CH<x> {TTL}
SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:CH<x>?

Arguments TTL specifies a preset TTL high level of 1.4 V.

SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:MATH

Sets or returns the math waveform upper threshold level for a transition search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:MATH {TTL}
SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:MATH?

Arguments TTL specifies a preset TTL high level of 1.4 V.

SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:REF<x>

Sets or returns the reference waveform upper threshold level for a transition search to determine where to place a mark.

Group Search

Syntax SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:REF<x> {TTL}
SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:REF<x>?

Arguments TTL specifies a preset TTL high level of 1.4 V.

SElect? (Query Only)

Returns the selected waveform that is affected by the front-panel controls and the display status (on or off) of all waveforms.

Group	Vertical
Syntax	SElect?
Examples	SELECT? might return information as :SELECT:BUS1 0;BUS2 0;CH1 1;CH2 0;CH3 0;CH4 0;MATH 0;REF1 0;REF2 0;REF3 0;REF4 0;CONTROL CH1

SElect:BUS<x>

Turns on and off the display of the specified Bus waveform. The query returns whether the specified Bus waveform is on or off but does not indicate whether it is the selected waveform. The value of <x> can be 1 or 2.

Group	Vertical
Syntax	SElect:BUS<x> {<NR1> OFF ON} SElect:BUS<x>?
Arguments	ON turns on the display of the specified waveform. This waveform also becomes the selected waveform. OFF turns off the display of the specified waveform. <NR1> = 0 turns off the display of the specified waveform; any other value turns on the display of the specified waveform.
Examples	SELECT:BUS1 ON turns the Bus 1 waveform display on, and selects it. SELECT:BUS1? might return :SELECT:BUS1 1 indicating that Bus 1 waveform is being displayed.

SElect:CH<x>

This command turns on and off the display of a specified waveform and also resets the acquisition. The query returns whether the channel is on or off but does not indicate whether it is the selected waveform.

Group	Vertical
Syntax	SElect:CH<x> {ON OFF <NR1>} SElect:CH<x>?
Arguments	<p>ON turns on the display of the specified waveform. This waveform also becomes the selected waveform.</p> <p>OFF turns off the display of the specified waveform.</p> <p><NR1> = 0 turns off the display of the specified waveform; any other value turns on the display of the specified waveform.</p>
Examples	<p>SELECT:CH2 ON turns the channel 2 waveform display on, and selects channel 2.</p> <p>SELECT:CH1? might return :SELECT:CH1 1 indicating that channel 1 is being displayed.</p>

SElect:CONTROI <wfm>

Sets or returns the waveform that is selected as the implied recipient of channel-related commands, such as cursor commands. The command form also performs the equivalent of a SElect:CH<x> ON command, as well as the Math, Reference, and Bus variations of that command.

Group	Vertical
Syntax	SElect:CONTROI {CH<x> MATH REF<x> BUS<x>} SElect:CONTROI?
Arguments	<p>CH<x> selects the specified channel waveform as the waveform that is affected by the front-panel controls. The x variable can be expressed as an integer ranging from 1 through 4 for 4-channel models and 1 to 2 for 2-channel models.</p> <p>MATH selects the math waveform as the waveform that is affected by the front-panel controls.</p> <p>REF selects the specified reference waveform as the waveform that is affected by the front-panel controls.</p> <p>BUS selects the specified bus waveform as the waveform that is affected by the front-panel controls.</p>
Returns	NONE if all the channels are turned off. NONE is ignored on input.

- Examples** `SELECT:CONTROL CH2` resets acquisition displays on channel 2, and causes the selected waveform to be the implied object of waveform commands.
- `SELECT:CONTROL?` might return `:SELECT:CONTROL MATH` indicating that math is the implied object of waveform commands.

SElect:MATH[1]

This command turns on and off the display of the math waveform. The query returns whether the math waveform is on or off but does not indicate whether it is the selected waveform.

Group Vertical

Syntax `SElect:MATH[1] {ON|OFF|<NR1>}`
`SElect:MATH[1]?`

- Arguments** `ON` turns on the display of the specified waveform. This waveform also becomes the selected waveform.
- `OFF` turns off the display of the specified waveform.
- `<NR1> = 0` turns off the display of the specified waveform; any other value turns on the display of the specified waveform.

- Examples** `SELECT:MATH ON` turns the math waveform display on, and selects it.
- `SELECT:MATH?` might return `:SELECT:MATH 1` indicating that the math waveform is being displayed.

SElect:REF<x>

This command turns on and off the display of a specified reference waveform. The query returns whether the channel is on or off.

Group Vertical

Syntax `SElect:REF<x> {ON|OFF|<NR1>}`
`SElect:REF<x>?`

- Arguments** `ON` turns on the display of the specified waveform. This waveform also becomes the selected waveform.

OFF turns off the display of the specified waveform.

<NR1> = 0 turns off the display of the specified waveform; any other value turns on the display of the specified waveform.

Examples SELECT:REF2 ON turns the channel 2 waveform display on, and selects reference waveform 2.

SELECT:REF2? might return :SELECT:REF2 1 indicating that reference waveform 2 is being displayed.

SET? (Query Only)

Returns the commands that list the instrument settings except for configuration information for the calibration values, the [WFMInpre?](#) query, and the [WFMOutpre?](#) query. This query allows you to record or "learn" the current instrument settings. You can use these commands to return the instrument to the state it was in when you made the SET? query. The SET? query always returns command headers, regardless of the setting of the [HEADer](#) command. This is because the returned commands are intended to be sent back to the instrument as a command string. The [VERBose](#) command can still be used to specify whether the returned headers should be abbreviated or full-length.

This command is identical to the [*LRN?](#) command.

Group Miscellaneous

Syntax SET?

Related Commands [HEADer](#), [*LRN?](#), [VERBose](#)

Examples SET? returns a long response, part of which could be as follows: :SET :ACQUIRE:STOPAFTER RUNSTOP;STATE 1;MODE SAMPLE;NUMENV INFINITE;NUMAVG 16;SAMPLINGMODE RT;:HEADER 1;:LOCK NONE;:LANGUAGE ENGLISH;:VERBOSE 1;:ALIAS:STATE 0;: DISPLAY:COLOR:PALETTE NORMAL;:DISPLAY:STYLE:DOTONLY 0;:DISPLAY:PERSISTENCE 0.0000;CLOCK 1;GRATICULE FULL;INTENSITY:WAVEFORM 30;GRATICULE 75;BACKLIGHT HIGH;:HARDCOPY:INKSAVER OFF;LAYOUT LANDSCAPE;PREVIEW 0; :SAVE:IMAGE:FILEFORMAT BMP;:SAVE:WAVEFORM:FILEFORMAT INTERNAL;:SAVE:ASSIGN:TYPE SETUP;:TRIGGER:A:MODE AUTO;TYPE EDGE;LEVEL 20.0000E-3;LEVEL:CH1 20.0000E-3;CH2 0.0000;CH3 0.0000;CH4 0.0000;:TRIGGER:A:UPPERTHRESHOLD:CH1 1.4000;CH2 800.0000E-3;CH3 800.0000E-3;CH4 800.0000E-3;:

```
TRIGGER:A:LOWERTHRESHOLD:CH1 20.0000E-3;CH2
0.0000;CH3 0.0000;CH4 0.0000;:TRIGGER:A:HOLDOFF:TIME
20.0000E-9;:TRIGGER:A:EDGE:SOURCE CH1;COUPLING
DC;SLOPE RISE;:TRIGGER:A:LOGIC:CLASS SETHOLD;FUNCTION
AND;THRESHOLD:CH1 20.0000E-3;CH2 0.0000;CH3
0.0000;CH4 0.0000;:TRIGGER:A:LOGIC:INPUT:CH1
X;CH2 X;CH3 X;CH4 X;CLOCK:SOURCE NONE;EDGE
RISE;:TRIGGER:A:LOGIC:PATTERN:INPUT:CH1 X;CH2
X;CH3 X;CH4 X;:TRIGGER:A :LOGIC:PATTERN:WHEN
TRUE;WHEN:LESSLIMIT 4.0000E-9;MORELIMIT 4.0000E-9;:TRIGGER:A
:SETHOLD:CLOCK:SOURCE CH1;EDGE RISE;THRESHOLD
20.0000E-3;:TRIGGER:A:SETHOLD:DATA:SOURCE CH2;
```

SETUP<x>:DATE? (Query Only)

Returns the date when the specified instrument setup was saved. <x> is in the range of 1 to 10.

Group Miscellaneous

Syntax SETUP<x>:DATE?

Examples SETUP4:DATE? might return SETUP4:DATE "04-18-06".

SETUP<x>:LABEL

Sets or returns the specified instrument setup label. <x> is in the range of 1 to 10.

Group Miscellaneous

Syntax SETUP<x>:LABEL

Examples SETUP4:LABEL? might return SETUP4:LABEL "Test 2"

SETUP<x>:TIME? (Query Only)

Returns the time that the specified instrument setup was saved. <x> is in the range of 1 to 10.

Group Miscellaneous

Syntax SETUP<x>:TIME?

Examples SETUP2:TIME? might return "SETUP2:TIME "15:24:07"

*SRE

The *SRE (Service Request Enable) command sets and queries the bits in the Service Request Enable Register. For more information, refer to Registers.

Group Status and Error

Syntax *SRE <NR1>
*SRE?

Related Commands [*CLS](#), [DESE](#), [*ESE](#), [*ESR?](#), [EVENT?](#), [EVMsg?](#), [FACTory](#), [*STB?](#)

Arguments <NR1> is a value in the range from 0 through 255. The binary bits of the SRER are set according to this value. Using an out-of-range value causes an execution error. The power-on default for SRER is 0 if *PSC is 1. If *PSC is 0, the SRER maintains the previous power cycle value through the current power cycle.

Examples *SRE 48 sets the bits in the SRER to binary 00110000.
*SRE? might return 32, showing that the bits in the SRER have the binary value of 00100000.

*STB? (Query Only)

The *STB? (Read Status Byte) query returns the contents of the Status Byte Register (SBR) using the Master Summary Status (MSS) bit. For more information, refer to Registers.

Group Status and Error

Syntax *STB?

Related Commands	*CLS, DESE, *ESE, *ESR?, EVENT?, EVMsg?, FACTory, *SRE
Returns	<NR1>
Examples	*STB? might return 96, showing that the SBR contains the binary value 01100000.

TEKSecure (No Query Form)

This command initializes both waveform and setup memories, overwriting any previously stored data. These are the [WFMinpre?](#), [WFMOupre?](#), and [DATA](#) command values after the TEKSecure operation.

```
:WFMOUPRE:BYT_NR 1 :WFMOUPRE:BIT_NR 8 :WFMOUPRE:ENCDG
BIN :WFMOUPRE:BN_FMT RI :WFMOUPRE:BYT_OR MSB
:WFMOUPRE:WFID "Ch1, DC coupling, 100.0mV/div,
4.000us/div, 10000 points, Sample mode" :WFMOUPRE:NR_PT
10000 :WFMOUPRE:PT_FMT Y :WFMOUPRE:XUNIT "s"
:WFMOUPRE:XINCR 4.0000E-9 :WFMOUPRE:XZERO -20.0000E-6
:WFMOUPRE:PT_OFF 0 :WFMOUPRE:YUNIT "V" :WFMOUPRE:YMULT
4.0000E-3 :WFMOUPRE:YOFF 0.0000 :WFMOUPRE:YZERO 0.0000
:WFMINPRE:BYT_NR 1 :WFMINPRE:BIT_NR 8 :WFMINPRE:ENCDG
BIN :WFMINPRE:BN_FMT RI :WFMINPRE:BYT_OR MSB
:WFMINPRE:NR_PT 10000 :WFMINPRE:PT_FMT Y :WFMINPRE:XUNIT
"s" :WFMINPRE:XINCR 4.0000E-9 :WFMINPRE:XZERO 0.0000
:WFMINPRE:PT_OFF 0 :WFMINPRE:YUNIT "V" :WFMINPRE:YMULT
4.0000E-3 :WFMINPRE:YOFF 0.0000 :WFMINPRE:YZERO 0.0000
DATA:DESTINATION REF1 DATA:ENCDG RIBINARY DATA:SOURCE CH1
DATA:START 1 DATA:STOP 10000 DATA:WIDTH 1
```

NOTE. *TEKSecure takes a while to complete. For more details, see the note that pops up when you press the lower-bezel TekSecure Memory button in the Utility→System→Config menu.*

Group	Miscellaneous
Syntax	TEKSecure
Examples	<p>TEKSECURE initializes both waveform and setup memories.</p> <p>This is a program example of how to generate an SRQ when TEKSECURE completes:</p> <pre># Bit 0 of the DESE (Device Event Status Enable Register)</pre>

```
# enables OPC to be reported to the SESR (Standard Event
# Status Register)
DESE 255
# Bit 0 of the ESER (Event Status Enable Register)
# enables OPC to be summarized in the ESB (Event Status #
Bit) of the SBR (Status Byte Register)
*ESE 255
# Bit 5 of the SRE (Service Request Enable Register)
enables
# the generation of SRQ when the ESB bit of the SBR
becomes # TRUE
*SRE 32
TEKSECURE;*OPC
```

When the TEKSECURE operation has completed, the OPC bit of the SESR will be TRUE and SRQ will have been generated.

TIME

Sets or returns the time that the instrument displays. This command is equivalent to pushing the front-panel **Utility** button, the lower-bezel **Set Date & Time** button, and the appropriate side-bezel menu items.

Group Miscellaneous

Syntax TIME <QString>
TIME?

Related Commands [DATE](#)

Arguments <QString> is a time in the form "hh:mm:ss" where hh refers to a two-digit hour number, mm refers to a two-digit minute number from 00 to 59, and ss refers to a two-digit second number from 00 to 59.

Examples TIME "14:00:00" sets the time to exactly 2:00 p.m.

TIME? might return :TIME "14:05:17" indicating the current time is set to 2:05 p.m. and 17 seconds.

TOTALuptime? (Query Only)

This command returns the total number of hours that the oscilloscope has been on since the nonvolatile memory was last programmed (usually since the initial manufacturing process).

Group Miscellaneous

Syntax TOTALuptime?

*TRG (No Query Form)

Performs the group execute trigger on commands defined by *DDT.

Group Miscellaneous

Syntax *TRG

Related Commands [*DDT](#)

Examples *TRG immediately executes all commands that have been defined by *DDT.

TRIGger

Forces a trigger event to occur.

Group Trigger

Syntax TRIGger FORCE
TRIGger?

Arguments FORCE creates a trigger event. If TRIGger:STATE is set to READY, the acquisition will complete. Otherwise, this command will be ignored.

Examples TRIGGER FORCE forces a trigger event to occur.

TRIGger:A

Sets the A trigger level automatically to 50% of the range of the minimum and maximum values of the trigger input signal. The query returns current A trigger parameters. The trigger level is the voltage threshold through which the trigger source signal must pass to generate a trigger event. This command works for the following cases: Edge Trigger (when source is Not Line), Logic Trigger (when Clock Source is not Off or Logic Pattern is Don't Care), and Pulse Width Trigger.

Group Trigger

Syntax TRIGger:A SETLevel
TRIGger:A?

Related Commands [TRIGger:A:EDGE?](#), [TRIGger:A:LOGic?](#), [TRIGger:A:PULse?](#)

Arguments SETLevel sets the A trigger level to 50% of the range of the minimum and maximum values of the trigger input signal.

Examples TRIGGER:A SETLEVEL sets the A trigger level to 50% of the range of the minimum and maximum values of the trigger input signal.

```
TRIGGER:A? might return a long response with A trigger parameters,
some of which could be as follows: :TRIGGER:A:MODE AUTO;TYPE
EDGE;LEVEL 20.0000E-3;LEVEL:CH1 20.0000E-3;CH2 0.0000;
CH3 0.0000;CH4 0.0000;:TRIGGER:A:UPPERTHRESHOLD:CH1
1.4000;CH2 800.0000E-3;CH3 8 00.0000E-3;CH4
800.0000E-3;:TRIGGER:A:LOWERTHRESHOLD:CH1 20.0000E-3;CH2
0.0000;CH3 0.0000;CH4 0.0000;:TRIGGER:A:HOLDOFF:TIME
20.0000E-9;:TRIGGER:A:EDGE:SOURCE CH1;COUPLING
DC;SLOPE RISE;:TRIGGER:A:LOGIC:CLASS SETHOLD;FUNCTION
AND;THRESHOLD: CH1 20.0000E-3;CH2 0.0000;CH3
0.0000;CH4 0.0000;:TRIGGER:A:LOGIC:INPUT:CH1
X;CH2 X;CH3 X;CH4 X;CLOCK:SOURCE NONE;EDGE
RISE;:TRIGGER:A:LOGIC:PATTERN:INPUT:CH1 X; CH2
X;CH3 X;CH4 X;:TRIGGER:A:LOGIC:PATTERN:WHEN
TRUE;WHEN:LESSLIMIT 4.0000E-9;MO RELIMIT
4.0000E-9;:TRIGGER:A:SETHOLD:CLOCK:SOURCE CH1;EDGE
RISE;THRESHOLD 20.000 0E-3;:TRIGGER:A:SETHOLD:DATA:SOURCE
CH2;THRESHOLD 0.0000;:TRIGGER:A:SETHOLD:HOLD TIME
4.0000E-9;SETTIME 4.0000E-9;:TRIGGER:A:PULSE:CLASS
TRANSITION;:TRIGGER:A:PULSEWIDTH:SOURCE
CH1;POLARITY POSITIVE;WHEN LESSTHAN;WIDTH
4.0000E-9;:TRIGGER:A:RUNT:SOURCE CH1;POLARITY POSITIVE;WHEN
```

```
OCCURS;WIDTH 4.0000E-9;:TRIGGER:A:TRANSITION:SOURCE
CH1;POLARITY POSITIVE;WHEN SLOWER;DELTATIME
4.0000E-9;:TRIGGER:A:VIDEO :POLARITY POSITIVE;SOURCE
CH1;STANDARD NTSC;SYNC ALLLINES;HOLDOFF:FIELD 0.0000;:
TRIGGER:A:VIDEO:CUSTOM:FORMAT PROGRESSIVE;SCAN
RATE15K;:TRIGGER:A:VIDEO:LINE 1;H DTV:FORMAT
HD1080I60;:TRIGGER:A:BUS:SOURCE B1;B1:I2C:CONDITION
START;DATA:VALUE "XXXXXXXX";SIZE 1;START 0.0000;DIRECTION
NOCARE;:TRIGGER:A:BUS:B1:I2C:ADDRESS:MODE
ADDR7;TYPE USER;VALUE
"XXXXXXXX";:TRIGGER:A:BUS:B1:SPI:CONDITION MOSI;DATA:OUT
:VALUE "XXXXXXXX";:TRIGGER:A:BUS:B1:SPI:DATA:IN:VALUE
"XXXXXXXX";:TRIGGER:A:BUS: B1:SPI:DATA:SIZE 1;START 0.0000;:
```

TRIGger:A:BUS:B<x>:CAN:CONDition

Sets or returns the CAN trigger condition.

Conditions	Requires a DPO4AUTO application module.
Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:CAN:CONDition {SOF FRAMEtype IDentifier DATA IDANDDATA EOF ACKMISS} TRIGger:A:BUS:B<x>:CAN:CONDition?
Arguments	SOF enables triggering on the start of frame. FRAMEtype enables triggering on the type of frame. IDentifier enables triggering on a matching identifier. DATA enables triggering on matching data. IDANDDATA enables triggering on a matching identifier and matching data. EOF enables triggering on the end of frame. ACKMISS enables triggering on a missing acknowledge.
Examples	TRIGGER:A:BUS:B1:CAN:CONDITION? might return :TRIGGER:A:BUS:B1:CAN:CONDITION EOF indication an end of file condition. TRIGGER:A:BUS:B1:CAN:CONDITION DATA enables triggering on matching CAN data.

TRIGger:A:BUS:B<x>:CAN:DATA:DIRection

Sets or queries the CAN trigger condition to be valid on a READ, WRITE, or either. This only applies if the trigger condition is ID.

Conditions	Requires a DPO4AUTO application module.
Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:CAN:DATA:DIRection {READ WRITE NOCARE} TRIGger:A:BUS:B<x>:CAN:DATA:DIRection?
Arguments	READ sets the CAN data direction to READ. WRITE sets the CAN data direction to WRITE. NOCARE sets the CAN data direction to either.
Examples	TRIGGER:A:BUS:B1:CAN:DATA:DIRECTION WRITE sets the CAN data direction to Write.

TRIGger:A:BUS:B<x>:CAN:DATA:QUALifier

Sets or returns the CAN data qualifier. This only applies if the trigger condition is IDANDDATA or DATA.

Conditions	Requires a DPO4AUTO application module.
Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:CAN:DATA:QUALifier {LESSThan MOREThan EQUal UNEQUal LESSEQUal MOREEQUal} TRIGger:A:BUS:B<x>:CAN:DATA:QUALifier?
Arguments	LESSThan sets the oscilloscope to trigger when the data is less than the qualifier value. MOREThan sets the oscilloscope to trigger when the data is more than the qualifier value. EQUal sets the oscilloscope to trigger when the data is equal to the qualifier value.

UNEQUAL sets the oscilloscope to trigger when the data is not equal to the qualifier value.

LESSEQUAL sets the oscilloscope to trigger when the data is less than or equal to the qualifier value.

MOREEQUAL sets the oscilloscope to trigger when the data is more than or equal to the qualifier value.

Examples TRIGGER:A:BUS:B1:CAN:DATA:QUALIFIER LESSTHAN sets the oscilloscope to trigger when the data is less than the qualifier value.

TRIGGER:A:BUS:B1:CAN:DATA:QUALIFIER? might return
:TRIGGER:A:BUS:B1:CAN:DATA:QUALIFIER MORETHAN, indicating that the oscilloscope is set to trigger when the data is more than the qualifier value.

TRIGger:A:BUS:B<x>:CAN:DATA:SIZE

Sets or returns the length of the data string in bytes to be used for CAN trigger, if trigger condition is DATA or IDANDDATA.

Conditions This command requires a DPO4AUTO application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:CAN:DATA:SIZE <NR3>
TRIGger:A:BUS:B<x>:CAN:DATA:SIZE?

Arguments <NR3> is the length of the data string in bytes.

TRIGger:A:BUS:B<x>:CAN:DATA:VALue

Sets or returns the binary data string to be used for CAN trigger if trigger condition is ID or IDANDDATA.

Conditions This command requires a DPO4AUTO application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:CAN:DATA:VALue <QString>
TRIGger:A:BUS:B<x>:CAN:DATA:VALue?

Arguments <QString> is the CAN data value in binary format. The only allowed characters in the QString are 0, 1, and X.

Examples TRIGGER:A:BUS:B1:CAN:DATA:VALUE 1011 sets the CAN data value to 1011.

TRIGger:A:BUS:B<x>:CAN:FRAMEtype

Sets or queries the CAN trigger frame type.

Conditions This command requires a DPO4AUTO application module. This command is only valid when the [TRIGger:A:BUS:B<x>:CAN:CONDition](#) is FRAMETYPE.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:CAN:FRAMEtype
{DATA|REMOte|ERRor|OVERLoad}
TRIGger:A:BUS:B<x>:CAN:FRAMEtype?

Arguments DATA specifies a data frame type.
REMOte specifies a remote frame type.
ERRor specifies an error frame type.
OVERLo1d specifies an overload frame type.

Examples TRIGGER:A:BUS:B1:CAN:FRAMETYPE DATA sets the CAN trigger frame type to DATA.

TRIGger:A:BUS:B<x>:CAN{:IDentifier|:ADDRess}:MODE

Sets or returns the CAN addressing mode to standard or extended format. This is used in the following cases: 1. Trigger on ID. 2. Trigger in IDANDDATA.

Conditions This command requires a DPO4AUTO application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:CAN{:IDentifier|:ADDRess}:MODE
{STandard|EXTended}

TRIGger:A:BUS:B<x>:CAN{:IDentifier|:ADDRESS}:MODE?

- Arguments** STandard specifies the standard addressing mode.
 EXTended specifies the extended addressing mode.

TRIGger:A:BUS:B<x>:CAN{:IDentifier|:ADDRESS}:VALue

Sets or queries the binary address string used for the CAN trigger if the trigger condition is ID or IDANDDATA.

- Conditions** This command requires a DPO4AUTO application module.
- Group** Trigger
- Syntax** TRIGger:A:BUS:B<x>:CAN{:IDentifier|:ADDRESS}:VALue <QString>
 TRIGger:A:BUS:B<x>:CAN{:IDentifier|:ADDRESS}:VALue?
- Arguments** <QString> is up to 29 bits specifying the binary CAN identifier value. The only allowed characters in the QString are 0, 1, and X.
- Examples** TRIGGER:A:BUS:B1:CAN:IDENTIFIER:VALUE 1011 sets the CAN trigger identifier value to 1011.

TRIGger:A:BUS:B<x>:I2C:ADDRESS:MODE

Sets or queries the I²C address mode to 7 or 10-bit.

- Conditions** This command requires a DPO4EMBD application module.
- Group** Trigger
- Syntax** TRIGger:A:BUS:B<x>:I2C:ADDRESS:MODE {ADDR7|ADDR10}
 TRIGger:A:BUS:B<x>:I2C:ADDRESS:MODE?
- Arguments** ADDR7 specifies the 7-bit I²C address mode.
 ADDR10 specifies the 10-bit I²C address mode.

Examples TRIGGER:A:BUS:B1:I2C:ADDRESS:MODE ADDR10 sets the I2C address mode to 10-bit.

TRIGger:A:BUS:B<x>:I2C:ADDResS:TYPe

Sets or returns the I²C address type. Provided for compatibility. The only supported address type is USER.

Conditions This command requires a DPO4EMBD application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:I2C:ADDResS:TYPe {USER}
TRIGger:A:BUS:B<x>:I2C:ADDResS:TYPe?

Arguments USER specifies a user address.

TRIGger:A:BUS:B<x>:I2C:ADDResS:VALue

Sets or queries the binary address string used for the I²C trigger if the trigger condition is ADDRESS or ADDRANDDATA.

Conditions This command requires a DPO4EMBD application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:I2C:ADDResS:VALue <QString>
TRIGger:A:BUS:B<x>:I2C:ADDResS:VALue?

Arguments <QString> is up to 7 or 10-bits depending on the address mode that specifies the address. The only allowed characters in the QString are 0, 1, and X.

Examples TRIGGER:A:BUS:B1:I2C:ADDRESS:VALUE 1011 sets the I²C address value to XXX1011.

TRIGger:A:BUS:B<x>:I2C:CONDition

Sets or returns the trigger condition for I²C trigger.

Conditions	This command requires a DPO4EMBD application module.
Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:I2C:CONDition {START STOP REPEATstart ACKMISS ADDRESS DATA ADDRANDDATA} TRIGger:A:BUS:B<x>:I2C:CONDition?
Arguments	<p>START specifies a search based on start condition.</p> <p>STOP specifies a search based on stop condition.</p> <p>REPEATstart specifies a search based on repeat of start condition.</p> <p>ACKMISS specifies a search based on missing acknowledgement condition.</p> <p>ADDRESS specifies a search based on address.</p> <p>DATA specifies a search based on data.</p> <p>ADDRANDDATA specifies a search based on address and data.</p>
Examples	TRIGGER:A:BUS:B1:I2C:CONDITION START specifies start as the I ² C trigger condition.

TRIGger:A:BUS:B<x>:I2C:DATA:DIRection

Sets or queries the I²C trigger condition valid on a READ, WRITE, or either. The read or write is indicated by the R/W bit in the I²C protocol.

Conditions	This command requires a DPO4EMBD application module.
Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:I2C:DATA:DIRection {READ WRITE NOCARE} TRIGger:A:BUS:B<x>:I2C:DATA:DIRection?
Arguments	<p>READ specifies read as the data direction.</p> <p>WRITE specifies write as the data direction.</p> <p>NOCARE specifies either as the data direction.</p>

Examples TRIGGER:A:BUS:B1:I2C:DATA:DIRECTION WRITE specifies write as the I²C data direction.

TRIGger:A:BUS:B<x>:I2C:DATA:SIZE

Sets or returns the length of the data string in bytes to be used for I2C trigger if the trigger condition is DATA or ADDRANDDATA.

Conditions This command requires a DPO4EMBD application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:I2C:DATA:SIZE <NR1>
TRIGger:A:BUS:B<x>:I2C:DATA:SIZE?

Arguments <NR1> is the length of the data string in bytes.

TRIGger:A:BUS:B<x>:I2C:DATA:VALue

Sets or queries the binary data string used for I2C triggering if the trigger condition is DATA or ADDRANDDATA.

Conditions This command requires a DPO4EMBD application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:I2C:DATA:VALue <QString>
TRIGger:A:BUS:B<x>:I2C:DATA:VALue?

Arguments <QString> is the binary data string with the number of bits specified by the [TRIGger:A:BUS:B<x>:I2C:DATA:SIZE](#) command. The only allowed characters in the QString are 0, 1, and X.

TRIGger:A:BUS:B<x>:SPI:CONDition

Sets or queries the trigger condition for SPI triggering.

Conditions This command requires a DPO4EMBD application module.

Group	Trigger
Syntax	TRIGger:A:BUS:B<x>:SPI:CONDition {SS MISO MOSI MISOMOSI} TRIGger:A:BUS:B<x>:SPI:CONDition?
Arguments	SS specifies the Slave Selection condition. MISO specifies the Master-In Slave-Out condition. MOSI specifies the Master-Out Slave-In condition. MISOMOSI specifies the Master-In Slave-Out and Master-Out Slave-In conditions.

TRIGger:A:BUS:B<x>:SPI:DATA{:IN|MISO}:VALue

Sets or returns the binary data string to be used for SPI trigger if trigger condition is MISO or MISOMOSI.

Conditions This command requires a DPO4EMBD application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:SPI:DATA{:IN|MISO}:VALue <QString>
TRIGger:A:BUS:B<x>:SPI:DATA{:IN|MISO}:VALue?

Arguments <QString> is the binary data string with the number of bits specified by the [TRIGger:A:BUS:B<x>:SPI:DATA:SIZE](#) command. The only allowed characters in the QString are 0, 1, and X.

TRIGger:A:BUS:B<x>:SPI:DATA{:OUT|MOSI}:VALue

Sets or queries the binary data string used for the SPI trigger if the trigger condition is set to MOSI or MISOMOSI.

Conditions This command requires a DPO4EMBD application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:SPI:DATA{:OUT|MOSI}:VALue <QString>
TRIGger:A:BUS:B<x>:SPI:DATA{:OUT|MOSI}:VALue?

Arguments <QString> is the binary data string with the number of bits specified by the **TRIGger:A:BUS:B<x>:SPI:DATA:SIZE** command. The only allowed characters in the QString are 0, 1, and X.

TRIGger:A:BUS:B<x>:SPI:DATA:SIZE

Sets or returns the length of the data string in bytes to be used for SPI trigger, if trigger condition is MISO, MOSI or MISOMOSI.

Conditions This command requires a DPO4EMBD application module.

Group Trigger

Syntax TRIGger:A:BUS:B<x>:SPI:DATA:SIZE <NR3>
TRIGger:A:BUS:B<x>:SPI:DATA:SIZE?

Arguments <NR3> is the length of the data string in bytes.

TRIGger:A:BUS:SOURce

Sets or queries the source for a bus trigger.

Conditions This command requires a DPO4AUTO or DPO4EMBD application module.

Group Trigger

Syntax TRIGger:A:BUS:SOURce {B1|B2}
TRIGger:A:BUS:SOURce?

Arguments B1 specifies the bus 1 source.

B2 specifies the bus 2 source.

TRIGger:A:EDGE? (Query Only)

Returns the trigger source, coupling, and slope for the A edge trigger. This command is equivalent to pushing the front-panel **Trigger** button, pushing the lower-bezel **Type** button as many times as needed to select **Edge** from the resulting pop-up menu, and viewing the values in the lower-bezel menu.

Group	Trigger
Syntax	TRIGger:A:EDGE?
Related Commands	TRIGger:A:PULse? , TRIGger:A:LOGic?
Examples	TRIGGER:A:EDGE? might return :TRIGGER:A:EDGE:SOURCE CH1;COUPLING DC; SLOPE RISE indicating the trigger source, coupling, and slope for the A edge trigger.

TRIGger:A:EDGE:COUPling

Sets or returns the type of coupling for the A edge trigger. This command is equivalent to pushing the front-panel **Trigger** button, pushing the lower-bezel **Type** button as many times as needed to select **Edge** from the resulting pop-up menu, **Coupling** from the lower-bezel menu, and the appropriate side-bezel menu item.

Group	Trigger
Syntax	TRIGger:A:EDGE:COUPling {DC HFRej LFRej NOISerej} TRIGger:A:EDGE:COUPling?
Related Commands	TRIGger:A:EDGE:SOUrce , TRIGger:A:EDGE:SLOpe
Arguments	<p>DC selects DC trigger coupling, which passes all input signals to the trigger circuitry.</p> <p>HFRej coupling attenuates signals above 50 kHz before passing the signals to the trigger circuitry.</p> <p>LFRej coupling attenuates signals below 50 kHz before passing the signals to the trigger circuitry.</p> <p>NOISerej coupling provides stable triggering by increasing the trigger hysteresis. Increased hysteresis reduces the trigger sensitivity to noise but may require greater trigger signal amplitude.</p>
Examples	<p>TRIGGER:A:EDGE:COUPLING DC sets the A edge trigger coupling to DC.</p> <p>TRIGGER:A:EDGE:COUPLING? might return :TRIGGER:A:EDGE:COUPLING DC indicating that the A edge trigger coupling is set to DC.</p>

TRIGger:A:EDGE:SLOpe

Sets or returns the slope for the A edge trigger. This command is equivalent to pushing the front-panel **Trigger** button, pushing the lower-bezel **Type** button as many times as needed to select **Edge** from the resulting pop-up menu, **Slope** from the lower-bezel menu, and the appropriate side-bezel menu item.

Group Trigger

Syntax TRIGger:A:EDGE:SLOpe {RISe|FALL}
TRIGger:A:EDGE:SLOpe?

Related Commands [TRIGger:A:EDGE:SOUrce](#), [TRIGger:A:EDGE:COUPling](#)

Arguments RISE specifies to trigger on the rising or positive edge of a signal.
FALL specifies to trigger on the falling or negative edge of a signal.

Examples TRIGGER:A:EDGE:SLOPE RISE sets the A edge trigger slope to positive, which triggers on the rising edge of the signal.
TRIGGER:A:EDGE:SLOPE? might return :TRIGGER:A:EDGE:SLOPE FALL indicating that the A edge trigger slope is negative.

TRIGger:A:EDGE:SOUrce

Sets or returns the source for the A edge trigger. This command is equivalent to pushing the front-panel **Trigger** button, pushing the lower-bezel **Type** button as many times as needed to select **Edge** from the resulting pop-up menu, **Source** from the lower-bezel menu, and the appropriate side-bezel menu item.

Group Trigger

Syntax TRIGger:A:EDGE:SOUrce {CH<x>|EXT|LINE}
TRIGger:A:EDGE:SOUrce?

Related Commands [TRIGger:A:EDGE:SLOpe](#), [TRIGger:A:EDGE:COUPling](#)

Arguments CH<x> specifies one input channel as the A edge trigger source.

EXT specifies an external trigger using the Aux In connector located on the front panel of the instrument.

LINE specifies AC line signal.

Examples TRIGGER:A:EDGE:SOURCE CH1 sets channel 1 as the A edge trigger source.

TRIGGER:A:EDGE:SOURCE? might return :TRIGGER:A:EDGE:SOURCE CH1 indicating that channel 1 is the A edge trigger source.

TRIGger:A:HOLDoff? (Query Only)

Returns the A trigger holdoff parameters. These parameters specify the time period during which the trigger circuitry is not looking to generate a trigger event. This command is equivalent to pushing the front-panel **Trigger** button, **Mode & Holdoff** from the lower-bezel menu, and viewing the value in the side-bezel menu item labelled **Holdoff**.

Group Trigger

Syntax TRIGger:A:HOLDoff?

Related Commands [TRIGger:A:HOLDoff:TIME](#)

Examples TRIGGER:A:HOLDOFF? might return :TRIGGER:A:HOLDOFF:TIME 900.0000E-09;BY DEFAULT indicating that the A edge trigger holdoff time (by default) is 900 ns.

TRIGger:A:HOLDoff:TIME

Sets or returns the A trigger holdoff time. This command is equivalent to pushing the front-panel **Trigger** button, **Mode & Holdoff** from the lower-bezel menu, and entering the value with a multipurpose knob.

Group Trigger

Syntax TRIGger:A:HOLDoff:TIME <NR3>
TRIGger:A:HOLDoff:TIME?

Arguments <NR3> specifies the holdoff time in seconds. The range is from 20 ns through 8.0 s.

Examples TRIGGER:A:HOLDOFF:TIME ? might return :TRIGGER:A:HOLDOFFTIME 1.2000E-06 indicating that the A trigger holdoff time is set to 1.2 μ s.
TRIGGER:A:HOLDOFF:TIME 10 sets the A trigger holdoff time to 10 s.

TRIGger:A:LEVel

Sets or returns the level for the A trigger. This command is equivalent to pushing the front-panel **Trigger Level** knob.

Group Trigger

Syntax TRIGger:A:LEVel {TTL|<NR3>}
TRIGger:A:LEVel?

Arguments TTL specifies the TTL high level.
<NR3> specifies the trigger level in user units (usually volts).

Examples TRIGGER:A:LEVEL? might return :TRIGGER:A:LEVEL 1.3000E+00 indicating that the A edge trigger is set to 1.3 V.
TRIGGER:A:LEVEL TTL sets the A edge trigger to TTL high level, which is 1.4 V.

TRIGger:A:LEVel:CH<x>

Sets or returns the level for the specified channel. Each channel can have an independent Level.

Group Trigger

Syntax TRIGger:A:LEVel:CH<x> {<NR3>|TTL}
TRIGger:A:LEVel:CH<x>?

Arguments TTL specifies the TTL high level.
<NR3> specifies the trigger level in user units (usually volts).

Examples TRIGGER:A:LEVEL:CH2? might return :TRIGGER:A:LEVEL:CH2
1.3000E+00 indicating that the A edge trigger is set to 1.3 V for channel 2.

TRIGGER:A:LEVEL:CH3 TTL sets the A edge trigger to TTL high level for channel 3.

TRIGger:A:LOGIc? (Query Only)

Returns all of the A logic trigger parameters.

Group Trigger

Syntax TRIGger:A:LOGIc?

Related Commands [TRIGger:A:LOGIc:CLAss](#)

Examples TRIGGER:A:LOGIC? might return :TRIGGER:A:LOGIC:CLASS
SETHOLD;FUNCTION AND;THRESHOLD:CH1 20.0000E-3;CH2
0.0000; CH3 0.0000;CH4 0.0000;:TRIGGER:A:LOGIC:INPUT:CH1
X;CH2 X;CH3 X;CH4 X;CLOCK:SOURCE NONE;EDGE
RISE;:TRIGGER:A:LOGIC:PATTERN:INPUT:CH1 X;CH2
X;CH3 X;CH4 X;:TRIGGER :A:LOGIC:PATTERN:WHEN
TRUE;WHEN:LESSLIMIT 4.0000E-9;MORELIMIT
4.0000E-9;:TRIGGER:A:LOGIC:PATTERN:DELTATIME
4.0000E-9

TRIGger:A:LOGIc:CLAss

Sets or returns the class of the Logic Trigger. This command is used in conjunction with the [TRIGger:A:TYPe](#) command.

Group Trigger

Syntax TRIGger:A:LOGIc:CLAss {LOGIC|SETHo1d}
TRIGger:A:LOGIc:CLAss?

Related Commands [TRIGger:A:TYPe](#), [TRIGger:A:PULse:CLAss](#)

Arguments	<p>LOGIC sets the instrument to trigger on logical combinations of the channels.</p> <p>When the TRIGger:A:LOGic:INPut:CLOCK:SOUrce is NONE, LOGIC sets the instrument to trigger when the specified logical combinations of channels 1, 2, 3, and 4 are met on four-channel instruments. On two-channel instruments, only channel 1 and channel 2 are available.</p> <p>When the TRIGger:A:LOGic:INPut:CLOCK:SOUrce is set to one of the channels, LOGIC sets the instrument to trigger when the specified logical combinations of the remaining channels is true during a transition on the clock channel.</p> <p>SETHold sets the instrument to trigger on setup and hold violations between a data source and a clock source. Use one channel input as the clock signal and a second channel input as the data input. The clocking and data levels are used to determine if a clock or data transition has occurred.</p>
Examples	<p>TRIGGER:A:LOGIC:CLASS? might return :TRIGGER:A:LOGIC:CLASS LOGIC</p> <p>TRIGGER:A:LOGIC:CLASS LOGIC sets the trigger A logic class to LOGIC, which causes the instrument to trigger when the specified logical combinations of channels 1, 2, 3, and 4 are met.</p>

TRIGger:A:LOGic:FUNcTion

Sets or returns the logical combination of the input channels for the A pattern and A state logic triggers. This command is equivalent to pushing the front-panel **Trigger** button, pushing the lower-bezel **Type** button as many times as needed to select **Logic** from the resulting pop-up menu, **Define Logic** from the lower-bezel menu, and the appropriate side-bezel menu item.

Group	Trigger
Syntax	<p>TRIGger:A:LOGic:FUNcTion {AND NAND NOR OR}</p> <p>TRIGger:A:LOGic:FUNcTion?</p>
Related Commands	<p>TRIGger:A:LOGic:PATtern:WHEn, TRIGger:A:LOGic:INPut:CH<x>, TRIGger:A:LOGic:THReshold:CH<x></p>
Arguments	<p>AND specifies to trigger if all conditions are true.</p> <p>NAND specifies to trigger if any of the conditions is false.</p> <p>NOR specifies to trigger if all conditions are false.</p> <p>OR specifies to trigger if any of the conditions is true.</p>

Examples TRIGGER:A:LOGIC:FUNCTION? might return :TRIGGER:A:LOGIC:FUNCTION NAND

which indicates that the instrument will trigger if the AND logic conditions are false.

TRIGGER:A:LOGIC:FUNCTION AND sets the logical combination of channels to be true when all conditions are true.

TRIGger:A:LOGIc:INPut? (Query Only)

Returns the logic input values for all channels. If a clock channel is defined, it returns the clock source and edge.

Group Trigger

Syntax TRIGger:A:LOGIc:INPut?

Related Commands [TRIGger:A:LOGIc:PATtern:INPut:CH<x>](#)

Examples TRIGGER:A:LOGIC:INPUT? might return :TRIGGER:A:LOGIC:INPUT:CH1 HIGH;CH2 X;CH3 X indicating that a logic high is expected on channel 1 while channel 2 and channel three are “don’t care.”

TRIGger:A:LOGIc:INPut:CH<x>

Sets or returns the logical input condition (high, low, or don’t care) for the channel specified by x.

This command is equivalent to pushing the front-panel **Trigger** button, pushing the lower-bezel **Type** button as many times as needed to select **Logic** from the resulting pop-up menu, **Define Inputs** from the lower-bezel menu, and then setting or viewing the appropriate side-bezel menu items.

Group Trigger

Syntax TRIGger:A:LOGIc:INPut:CH<x> {HIGH|LOW|X}
TRIGger:A:LOGIc:INPut:CH<x>?

Related Commands [TRIGger:A:LOGIc:PATtern:INPut:CH<x>](#)

- Arguments** HIGH specifies the logic high.
 LOW specifies the logic low.
 X specifies a "don't care" state.
- Examples** TRIGGER:A:LOGIC:INPUT:CH1? might return :TRIGGER:LOGIC:INPUT:CH1 X indicating that the setting for the A logic trigger input to channel 1 does not matter.
 TRIGGER:A:LOGIC:INPUT:CH2 HIGH sets the A logic trigger input to logic HIGH for channel 2.

TRIGger:A:LOGIc:INPut:CLOCK:EDGE

Sets the polarity of the clock channel.

- Group** Trigger
- Syntax** TRIGger:A:LOGIc:INPut:CLOCK:EDGE {FALL|RISe}
 TRIGger:A:LOGIc:INPut:CLOCK:EDGE?
- Arguments** RISe specifies to trigger on the rising or positive edge of a signal.
 FALL specifies to trigger on the falling or negative edge of a signal.

TRIGger:A:LOGIc:INPut:CLOCK:SOUrce

Sets or returns channel to use as the clock source. The Clock can be selected as 'NONE'. A selection of none implies pattern trigger. Any other selection implies state trigger.

- Group** Trigger
- Syntax** TRIGger:A:LOGIc:INPut:CLOCK:SOUrce {CH1|CH2|CH3|CH4|NONE}
 TRIGger:A:LOGIc:INPut:CLOCK:SOUrce?
- Arguments** CH<x> specifies the input channel, which ranges from 1 through 4 for four-channel instruments or 1 through 2 for two channel instruments.
 NONE specifies a Pattern trigger.

TRIGger:A:LOGIc:PATtern? (Query Only)

Returns the conditions used for generating an A logic pattern trigger, with respect to the defined input pattern, and identifies the time that the selected pattern may be true and still generate the trigger.

Group Trigger

Syntax TRIGger:A:LOGIc:PATtern?

Related Commands [TRIGger:A:LOGIc:PATtern:WHEn](#), [TRIGger:A:LOGIc:PATtern:WHEn:MORELimit](#)

Examples TRIGGER:A:LOGIC:PATTERN? might return
:TRIGGER:A:LOGIC:PATTERN:INPUT:CH1 HIGH;CH2
LOW;CH3 X;CH4 X;:TRIGGER:A:LOGIC:PATTERN:WHEN
LESSTHAN;WHEN:LESSLIMIT 16.0000E-9;MORELIMIT
16.0000E-9;:TRIGGER:A:LOGIC:PATTERN:DELTATIME 16.0000E-9

TRIGger:A:LOGIc:PATtern:DELTatime

Sets or returns the pattern trigger time value. The time value is used as part of the pattern trigger condition to determine if the duration of a logic pattern meets the specified time constraints.

Group Trigger

Syntax TRIGger:A:LOGIc:PATtern:DELTatime <NR3>
TRIGger:A:LOGIc:PATtern:DELTatime?

Related Commands [TRIGger:A:LOGIc:PATtern:WHEn](#)

Arguments <NR3> is a floating point value with an exponent that sets the pattern trigger time value.

TRIGger:A:LOGIc:PATtern:INPut:CH<x>

Sets or returns the logical input condition (high, low, or don't care) for the channel specified by x. This command is the same as [TRIGger:A:LOGIc:INPut:CH<x>](#), and is provided for backward compatibility.

Group	Trigger
Syntax	TRIGger:A:LOGIC:PATtern:INPut:CH<x> {HIGH LOW X} TRIGger:A:LOGIC:PATtern:INPut:CH<x>?
Related Commands	TRIGger:A:LOGIC:FUNcTION, TRIGger:A:LOGIC:INPut:CH<x>, TRIGger:A:LOGIC:THReshold:CH<x>
Arguments	HIGH specifies the logic high. LOW specifies the logic low. X specifies a "don't care" state.
Examples	TRIGGER:A:LOGIC:PATTERN:INPUT:CH<x> HIGH sets the A logic trigger input to logic high for channel 2 when the logic class is set to PATtern. When the threshold level is detected, HIGH places a 1 on the channel 2 input to the selected function. TRIGGER:A:LOGIC:PATTERN:INPUT:CH<x>? might return :TRIGGER:A:LOGIC:PATTERN:INPUT:CH2 HIGH indicating that the logic input for channel 2 is logic high.

TRIGger:A:LOGIC:PATtern:WHEn

Sets or returns the condition for generating an A logic pattern trigger with respect to the defined input pattern.

Group	Trigger
Syntax	TRIGger:A:LOGIC:PATtern:WHEn {TRUE FALSE LESSThan MOREThan EQUa1 UNEQUa1} TRIGger:A:LOGIC:PATtern:WHEn?
Related Commands	TRIGger:A:LOGIC:FUNcTION, TRIGger:A:LOGIC:INPut?, TRIGger:A:LOGIC:THReshold?,
Arguments	TRUE argument sets the instrument to trigger when the pattern becomes true. FALSE argument sets the instrument to trigger when the pattern becomes false. LESSThan argument sets the instrument to trigger if the specific pattern is true less than the time set by the command.

MOREThan argument sets the instrument to trigger if the specific pattern is true longer than the specified time set by the command.

EQUa1 argument sets the instrument to trigger when the pattern is true for a time period equal to the time period specified in [TRIGger:A:LOGic:PATtern:DELtAtime](#) within a $\pm 5\%$ tolerance.

NOTEQUa1 argument sets the instrument to trigger when the pattern is true for a time period greater than or less than (but not equal) the time period specified in [TRIGger:A:LOGic:PATtern:DELtAtime](#) within a $\pm 5\%$ tolerance.

Examples `TRIGGER:A:LOGIC:PATTERN:WHEN FALSE` specifies to trigger the A logic pattern when the pattern becomes false.

`TRIGGER:A:LOGIC:PATTERN:WHEN?` might return `:TRIGGER:A:LOGIC:PATTERN:WHEN TRUE` indicating that the A logic pattern will trigger when the pattern becomes true.

TRIGger:A:LOGic:PATtern:WHEn:LESSLimit

Sets or returns the condition for generating an A logic pattern trigger with respect to the defined input pattern. This command, provided for backward compatibility, is identical to [TRIGger:A:LOGic:PATtern:DELtAtime](#).

Group Trigger

Syntax `TRIGger:A:LOGic:PATtern:WHEn:LESSLimit <NR3>`
`TRIGger:A:LOGic:PATtern:WHEn:LESSLimit?`

Related Commands [TRIGger:A:LOGic:PATtern:DELtAtime](#)

Arguments `<NR3>` specifies the amount of time to hold the pattern true.

Examples `TRIGGER:A:LOGIC:PATTERN:WHEN:LESSLIMIT 10.0E+00` sets the time limit for pattern duration triggering to 10 s.

`TRIGGER:A:LOGIC:PATTERN:WHEN:LESSLIMIT?` might return `:TRIGGER:A:LOGIC:PATTERN:WHEN:LESSLIMIT 5.0000E-09` indicating that the time limit for pattern duration triggering to 5 ns.

TRIGger:A:LOGic:PATtern:WHEn:MORELimit

Sets or returns the condition for generating an A logic pattern trigger with respect to the defined input pattern. This command, provided for backward compatibility, is identical to [TRIGger:A:LOGic:PATtern:DELTime](#).

Group	Trigger
Syntax	TRIGger:A:LOGic:PATtern:WHEn:MORELimit <NR3> TRIGger:A:LOGic:PATtern:WHEn:MORELimit?
Related Commands	TRIGger:A:LOGic:PATtern:DELTime
Arguments	<NR3> specifies the amount of time to hold the pattern true.
Examples	TRIGGER:A:LOGIC:PATTERN:WHEN:MORELIMIT 10.0E+00 sets the time limit for pattern duration triggering to 10 s. TRIGGER:A:LOGIC:PATTERN:WHEN:MORELIMIT? might return :TRIGGER:A:LOGIC:PATTERN:WHEN:MORELIMIT 5.0000E-09 indicating that the time limit for pattern duration triggering to 5 ns.

TRIGger:A:LOGic:THReshold? (Query Only)

Returns the threshold voltage for all channels in an A logic trigger. This command is provided for compatibility with other Tektronix instruments. See the [TRIGger:A:LOWerthreshold:CH<x>](#) command.

Group	Trigger
Syntax	TRIGger:A:LOGic:THReshold?

TRIGger:A:LOGic:THReshold:CH<x>

Sets or returns the A logic trigger threshold voltage for the channel, specified by x, which ranges from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments. This command is provided for compatibility with other Tektronix instruments. See the [TRIGger:A:LOWerthreshold:CH<x>](#) command.

Group	Trigger
--------------	---------

Syntax TRIGger:A:LOGIC:THReshoLd:CH<x> {TTL | <NR3>}

TRIGger:A:LOWerthreshold:CH<x>

Sets or returns the lower threshold for the channel selected. Each channel can have an independent level. Used in runt and slew rate as the lower threshold. Used for all other trigger types as the single level/threshold.

Group Trigger

Syntax TRIGger:A:LOWerthreshold:CH<x> {<NR3> | TTL}
TRIGger:A:LOWerthreshold:CH<x>?

Arguments TTL specifies a preset TTL high level of 1.4 V.
<NR3> is the clock level, in volts.

Examples TRIGGER:A:LOWERTHRESHOLD:CH2 50E-3 sets the lower limit threshold for CH2 of the pulse runt trigger to 50 mV.
TRIGGER:A:LOWERTHRESHOLD:CH2? might return :TRIGGER:A:LOWERTHRESHOLD:CH2 1.2000E-01 indicating that the lower limit threshold for CH2 of the pulse runt trigger is set to 120 mV.

TRIGger:A:MODE

Sets or returns the A trigger mode.

This command is equivalent to pushing the front-panel **Trigger** button, pushing the lower-bezel **Type** button as many times as needed to select the desired trigger type from the resulting pop-up menu, pushing **Mode Auto & Holdoff** from the lower-bezel menu, and the appropriate side-bezel menu items.

Group Trigger

Syntax TRIGger:A:MODE {AUTO | NORMa}
TRIGger:A:MODE?

Related Commands [TRIGger:A:LEVel](#)

Arguments AUTO generates a trigger if one is not detected within a specified time period.
 NORMAl waits for a valid trigger event.

Examples TRIGGER:A:MODE NORMAL specifies that a valid trigger event must occur before a trigger is generated.
 TRIGGER:A:MODE ? might return :TRIGGER:A:MODE NORMAL indicating that a valid trigger event must occur before a trigger is generated.

TRIGger:A:PULse? (Query Only)

Returns the A pulse trigger parameters.

Group Trigger

Syntax TRIGger:A:PULse?

Related Commands [TRIGger:A:EDGE?](#), [TRIGger:A:LOGic?](#)

Examples TRIGGER:A:PULSE? might return :TRIGGER:A:PULSE:CLASS TRANSITION

TRIGger:A:PULse:CLass

Sets or returns the type of pulse on which to trigger.

Group Trigger

Syntax TRIGger:A:PULse:CLass {RUNt|WIDth|TRANSition}
 TRIGger:A:PULse:CLass?

Related Commands [TRIGger:A:RUNT?](#), [TRIGger:A:PULSEWIDth?](#), [TRIGger:A{:TRANSition}:RISEFall}?](#), [TRIGger:A:TYPE](#)

Arguments RUNt triggers when a pulse crosses the first preset voltage threshold but does not cross the second preset threshold before recrossing the first.
 WIDth triggers when a pulse is found that has the specified polarity and is either inside or outside the specified time limits.

TRANSITION triggers when a pulse crosses both thresholds in the same direction as the specified polarity and the transition time between the two threshold crossings is greater or less than the specified time delta.

Examples TRIGGER:A:PULSE:CLASS WIDTH specifies a width pulse for the A trigger.
TRIGGER:A:PULSE:CLASS? might return :TRIGGER:A:PULSE:CLASS WIDTH indicating that a pulse was found that is of the specified polarity and width.

TRIGger:A:PULSEWIDth? (Query Only)

Returns the width parameters for the pulse width trigger.

Group Trigger

Syntax TRIGger:A:PULSEWIDth?

Examples TRIGGER:A:PULSEWIDth? might return
:TRIGGER:A:PULSEWIDth:POLARITY POSITIVE;WHEN
LESSTHAN;WIDTH 8.0000E-9

TRIGger:A:PULSEWIDth:POLARity

Sets or returns the polarity for the width trigger.

Group Trigger

Syntax TRIGger:A:PULSEWIDth:POLARity {NEGative|POSitive}
TRIGger:A:PULSEWIDth:POLARity?

Arguments NEGative specifies a negative pulse.
POSitive specifies a positive pulse.

Examples TRIGGER:A:PULSEWIDth:POLARITY NEGATIVE sets the pulse polarity to negative.
TRIGGER:A:PULSEWIDth:POLARITY? might return
:TRIGGER:A:WIDTH:POLARITY POSITIVE indicating a positive pulse.

TRIGger:A:PULSEWidth:SOURce

Sets or returns the source for the pulse width trigger.

Group	Trigger
Syntax	TRIGger:A:PULSEwidth:SOURce {CH1 CH2 CH3 CH4 LINE EXT} TRIGger:A:PULSEwidth:SOURce?
Arguments	CH<x> specifies one input channel as the A edge trigger source. EXT specifies an external trigger using the Auxiliary Trigger Input connector located on the rear panel of the instrument. LINE specifies AC line voltage.
Examples	TRIGGER:A:PULSEWIDTH:SOURCE CH1 sets channel 1 as the pulse width source. TRIGGER:A:PULSEWIDTH:SOURCE? might return :TRIGGER:A:PULSEWIDTH:SOURCE CH1 indicating that channel 1 is the pulse width source.

TRIGger:A:PULSEWidth:WHEn

Sets or returns whether to trigger on a pulse that meets, falls outside, or within the specified range of limits.

Group	Trigger
Syntax	TRIGger:A:PULSEwidth:WHEn {LESSthan MOREthan EQUal UNEQUal} TRIGger:A:PULSEwidth:WHEn?
Related Commands	TRIGger:A:PULSEWidth:WIDth
Arguments	LESSthan argument sets the instrument to trigger if a pulse is detected with width less than the time set by the TRIGger:A:PULSEWidth:WIDth command. MOREthan argument sets the instrument to trigger if a pulse is detected with width more than the time set by the TRIGger:A:PULSEWidth:WIDth command. EQUal argument sets the instrument to trigger if a pulse is detected with width equal to the time period specified in TRIGger:A:PULSEWidth:WIDth within a $\pm 5\%$ tolerance.

NOTEQUAL argument sets the instrument to trigger if a pulse is detected with width greater than or less than (but not equal) the time period specified in [TRIGGER:A:PULSEWidth:WIDTH](#) within a $\pm 5\%$ tolerance.

- Examples** `TRIGGER:A:PULSEWIDTH:WHEN LESSTHAN` specifies that the duration of the A pulse will fall within defined high and low limits.
- `TRIGGER:A:PULSEWIDTH:WHEN?` might return `:TRIGGER:A:PULSEWIDTH:WHEN MORETHAN` indicating the conditions for generating a width trigger.

TRIGGER:A:PULSEWidth:WIDTH

Sets or returns the width setting for the pulse width trigger.

Group Trigger

Syntax `TRIGGER:A:PULSEwidth:WIDTH <NR3>`
`TRIGGER:A:PULSEwidth:WIDTH?`

Related Commands [TRIGGER:A:PULSEWidth:WHEn](#)

Arguments `<NR3>` specifies the pulse width in seconds.

- Examples** `TRIGGER:A:PULSEWIDTH:WIDTH 5.0E-6` sets the pulse width to 5 μ s.
- `TRIGGER:A:PULSEWIDTH:WIDTH?` might return `:TRIGGER:A:PULSEWIDTH:WIDTH 2.0000E-9` indicating that the pulse width is set to 2 ns.

TRIGGER:A:RUNT? (Query Only)

Returns the current A runt trigger parameters. This command query is equivalent to pushing the front-panel **Trigger** button, pushing the lower-bezel **Type** button as many times as needed to select **Runt** from the resulting pop-up menu, and then viewing the settings on the display menus.

Group Trigger

Syntax `TRIGGER:A:RUNT?`

Examples TRIGGER:A:RUNT? might return :TRIGGER:A:RUNT:SOURCE CH1;POLARITY POSITIVE;WHEN OCCURS;WIDTH 4.0000E-9.

TRIGger:A:RUNT:POLarity

Sets or returns the polarity for the runt trigger. This command is equivalent to pushing the front-panel **Trigger** button, pushing the lower-bezel **Type** button as many times as needed to select **Runt** from the resulting pop-up menu, **Polarity** from the lower-bezel menu, and the appropriate side-bezel menu items.

Group Trigger

Syntax TRIGger:A:RUNT:POLarity {EITHer|NEGative|POSitive}
TRIGger:A:RUNT:POLarity?

Arguments POSitive indicates that the rising edge crosses the low threshold and the falling edge re-crosses the low threshold without either edge ever crossing the high threshold.

NEGative indicates that the falling edge crosses the high threshold and the rising edge re-crosses the high threshold without either edge ever crossing the low threshold.

EITHer triggers on a runt of either polarity.

Examples TRIGGER:A:RUNT:POLARITY NEGATIVE specifies that the polarity of the A pulse runt trigger is negative.

TRIGGER:A:RUNT:POLARITY? might return :TRIGGER:A:RUNT:POLARITY POSITIVE indicating that the polarity of the A pulse runt trigger is positive.

TRIGger:A:RUNT:SOURce

Sets or returns the source for the A runt trigger.

Group Trigger

Syntax TRIGger:A:RUNT:SOURce {CH1|CH2|CH3|CH4}
TRIGger:A:RUNT:SOURce?

Arguments CH<x> specifies one of the input channels, which range from 1 through 4 for four-channel instruments and 1 through 2 for two-channel instruments.

- Examples** TRIGGER:A:RUNT:SOURCE CH4 sets channel 4 as the source for the A pulse trigger.
- TRIGGER:A:RUNT:SOURCE? might return :TRIGGER:A:RUNT:SOURCE CH2 indicating that channel 2 is the source for the A pulse trigger.

TRIGger:A:RUNT:WHEn

Sets or returns the type of pulse width the trigger checks for when it detects a runt.

Group Trigger

Syntax TRIGger:A:RUNT:WHEn {LESSthan|MOREthan|EQua1|UNEQua1|OCCURS}
TRIGger:A:RUNT:WHEn?

Related Commands [TRIGger:A:RUNT:WIDth](#)

- Arguments** OCCURS argument specifies a trigger event if a runt of any detectable width occurs.
- LESSthan argument sets the instrument to trigger if the a runt pulse is detected with width less than the time set by the [TRIGger:A:RUNT:WIDth](#) command.
- MOREthan argument sets the instrument to trigger if the a runt pulse is detected with width more than the time set by the [TRIGger:A:RUNT:WIDth](#) command.
- EQua1 argument sets the instrument to trigger if a runt pulse is detected with width equal to the time period specified in [TRIGger:A:RUNT:WIDth](#) within a $\pm 5\%$ tolerance.
- NOTEQua1 argument sets the instrument to trigger if a runt pulse is detected with width greater than or less than (but not equal to) the time period specified in [TRIGger:A:RUNT:WIDth](#) within a $\pm 5\%$ tolerance.

- Examples** TRIGGER:A:RUNT:WHEN MORETHAN sets the runt trigger to occur when the instrument detects a runt in a pulse wider than the specified width.
- TRIGGER:A:RUNT:WHEN? might return :TRIGGER:A:PULSE:RUNT:WHEN OCCURS indicating that a runt trigger will occur if the instrument detects a runt of any detectable width.

TRIGger:A:RUNT:WIDth

Sets or returns the width for a runt trigger.

Group	Trigger
Syntax	TRIGger:A:RUNT:WIDTH <NR3> TRIGger:A:RUNT:WIDTH?
Related Commands	TRIGger:A:RUNT:WHEn
Arguments	<NR3> specifies the minimum width, in seconds.
Examples	TRIGGER:A:RUNT:WIDTH 15E-6 sets the minimum width of the pulse runt trigger to 15 μ s. TRIGGER:A:RUNT:WIDTH? might return :TRIGGER:A:PULSE:RUNT:WIDTH 2.0000E-09 indicating that the minimum width of a pulse runt trigger is 2 ns.

TRIGger:A:SETHold? (Query Only)

Returns the clock edge polarity, voltage threshold and source input; data voltage threshold and source; and both setup and hold times for setup and hold violation triggering.

Group	Trigger
Syntax	TRIGger:A:SETHold?
Examples	TRIGGER:A:SETHOLD? might return :TRIGGER:A:SETHOLD:CLOCK:SOURCE CH1;EDGE RISE;THRESHOLD 100.0000E-3;;:TRIGGER:A:SETHOLD:DATA:SOURCE CH2;THRESHOLD 80.0000E-3;;:TRIGGER:A:SETHOLD:HOLDTIME 20.0000E-9;SETTIME 8.0000E-9

TRIGger:A:SETHold:CLOCK? (Query Only)

Returns the clock edge polarity, voltage threshold and source input for setup and hold triggering.

Group	Trigger
Syntax	TRIGger:A:SETHold:CLOCK?

Examples TRIGGER:A:SETHOLD:CLOCK? might return
:TRIGGER:A:SETHOLD:CLOCK:SOURCE EXT;EDGE FALL;THRESHOLD
1.4000

TRIGger:A:SETHold:CLOCK:EDGE

Sets or returns the clock edge polarity for setup and hold triggering.

Group Trigger

Syntax TRIGger:A:SETHold:CLOCK:EDGE {FALL|RISe}
TRIGger:A:SETHold:CLOCK:EDGE?

Arguments FALL specifies polarity as the clock falling edge.
RISe specifies polarity as the clock rising edge.

Examples TRIGGER:A:SETHOLD:CLOCK:EDGE RISE specifies the polarity as the clock rising edge.
TRIGGER:A:SETHOLD:CLOCK:EDGE? might return :TRIGGER:A:SETHOLD:CLOCK:EDGE RISE indicating that polarity is specified as the clock rising edge.

TRIGger:A:SETHold:CLOCK:SOURce

Sets or returns the clock source for the setup and hold triggering.

Group Trigger

Syntax TRIGger:A:SETHold:CLOCK:SOURce {CH1|CH2|CH3|CH4|EXT}
TRIGger:A:SETHold:CLOCK:SOURce?

Arguments CH<x> specifies the input channel, which ranges from 1 through 4 for four-channel instruments or 1 through 2 for two channel instruments.
EXT specifies an external trigger using the Auxiliary Trigger Input connector located on the rear panel of the instrument.

Examples TRIGGER:A:SETHOLD:CLOCK:SOURCE CH1 specifies channel 1 as the clock input for setup and hold input.

TRIGGER:A:SETHOLD:CLOCK:SOURCE? might return :TRIGGER:A:SETHOLD:CLOCK:SOURCE CH4 indicating that channel 4 is the clock source for the setup and hold trigger input.

TRIGger:A:SETHold:CLOCK:THReshold

Sets or returns the clock voltage threshold for the setup and hold trigger.

Group	Trigger
Syntax	TRIGger:A:SETHold:CLOCK:THReshold {<NR3> TTL} TRIGger:A:SETHold:CLOCK:THReshold?
Arguments	TTL specifies a preset TTL high level of 1.4 V. <NR3> is the clock level, in volts.
Examples	TRIGGER:A:SETHOLD:CLOCK:THRESHOLD TTL specifies the preset TTL value of 1.4 V as the clock threshold for the setup and hold trigger. TRIGGER:A:SETHOLD:CLOCK:THRESHOLD? might return :TRIGGER:A:LOGIC:SETHOLD:CLOCK:THRESHOLD 1.2000E+00 indicating that the clock threshold for the setup and hold trigger is 1.2 V.

TRIGger:A:SETHold:DATA? (Query Only)

Returns the voltage threshold and data source for the setup and hold trigger. This command is equivalent to pushing the front-panel **Trigger** button, pushing the lower-bezel **Type** button as many times as needed to select **Setup & Hold** from the resulting pop-up menu, and viewing the appropriate menu items.

Group	Trigger
Syntax	TRIGger:A:SETHold:DATA?
Related Commands	TRIGger:A:SETHold:CLOCK?
Examples	TRIGGER:A:SETHOLD:DATA? might return :TRIGGER:A:SETHOLD:DATA:SOURCE CH2;THRESHOLD 80.0000E-3

TRIGger:A:SETHold:DATA:SOURce

Sets or returns the data source for the setup and hold trigger.

Group	Trigger
Syntax	TRIGger:A:SETHold:DATA:SOURce {CH1 CH2 CH3 CH4 EXT} TRIGger:A:SETHold:DATA:SOURce?
Arguments	CH<x> specifies the input channel, which ranges from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments. EXT specifies an external trigger using the Auxiliary Trigger Input connector located on the rear panel of the instrument.
Examples	TRIGGER:A:SETHOLD:DATA:SOURCE CH1 sets channel 1 as the clock source for the setup and hold trigger. TRIGGER:A:SETHOLD:DATA:SOURCE? might return :TRIGGER:A:LOGIC:SETHOLD:DATA:SOURCE CH2 indicating that channel 2 is the current clock source for the setup and hold trigger.

TRIGger:A:SETHold:DATA:THReshold

Sets or returns the data voltage threshold for setup and hold trigger.

Group	Trigger
Syntax	TRIGger:A:SETHold:DATA:THReshold {<NR3> TTL} TRIGger:A:SETHold:DATA:THReshold?
Arguments	TTL specifies the preset TTL high level of 1.4 V. <NR3> is the setup and hold data level, in V.
Examples	TRIGGER:A:SETHOLD:DATA:THRESHOLD TTL specifies the preset high level of 1.4 V as the current data voltage level for the setup and hold trigger. TRIGGER:A:SETHOLD:DATA:THRESHOLD? might return :TRIGGER:A:SETHOLD:DATA:THRESHOLD 1.2000E+00 indicating that 1.2 V is the current data voltage level for the setup and hold trigger.

TRIGger:A:SETHold:HOLDTime

Sets or returns the hold time for setup and hold violation triggering.

Group	Trigger
Syntax	TRIGger:A:SETHold:HOLDTime <NR3> TRIGger:A:SETHold:HOLDTime?
Arguments	<NR3> specifies the hold time setting in seconds. Positive values for hold time occur after the clock edge. Negative values occur before the clock edge.
Examples	TRIGGER:A:SETHOLD:HOLDTIME 3.0E-3 sets the hold time for the setup and hold trigger to 3 ms. TRIGGER:A:SETHOLD:HOLDTIME? might return :TRIGGER:A:SETHOLD:HOLDTIME 2.0000E-09 indicating that the current hold time for the setup and hold trigger is 2 ns.

TRIGger:A:SETHold:SETTime

Sets or returns the setup time for setup and hold violation triggering.

Group	Trigger
Syntax	TRIGger:A:SETHold:SETTime <NR3> TRIGger:A:SETHold:SETTime?
Arguments	<NR3> specifies the setup time for setup and hold violation triggering.
Examples	TRIGGER:A:SETHOLD:SETTIME 3.0E-6 specifies that the current setup time for setup and hold trigger is 3 μ s. TRIGGER:A:SETHOLD:SETTIME? might return :TRIGGER:A:LOGIC:SETHOLD:SETTIME 2.0000E-09 indicating that the current setup time for setup and hold trigger is 2 ns.

TRIGger:A{:TRANSition|:RISEFall}? (Query Only)

Returns transition time trigger parameters.

Group	Trigger
Syntax	TRIGger:A{:TRANSition :RISEFall}?
Examples	TRIGGER:A::TRANSITION? might return :TRIGGER:A:TRANSITION:POLARITY POSITIVE;WHEN SLOWER;DELTATIME 8.0000E-9

TRIGger:A{:TRANSition|:RISEFall}:DELTatime

Sets or returns the delta time used in calculating the transition value for the transition trigger.

Group	Trigger
Syntax	TRIGger:A{:TRANSition :RISEFall}:DELTatime <NR3> TRIGger:A{:TRANSition :RISEFall}:DELTatime?
Arguments	<NR3> specifies the delta time, in seconds.
Examples	TRIGGER:A:TRANSITION:DELTATIME 15E-6 sets the delta time of the transition trigger to 15 μ s. TRIGGER:A:TRANSITION:DELTATIME? might return :TRIGGER:A:TRANSITION:DELTATIME 2.0000E-09 indicating that the delta time of the transition trigger is set to 2 ns.

TRIGger:A{:TRANSition|:RISEFall}:POLarity

Sets or returns the polarity for the transition trigger.

Group	Trigger
Syntax	TRIGger:A{:TRANSition :RISEFall}:POLarity {EITHer NEGative POSitive} TRIGger:A{:TRANSition :RISEFall}:POLarity?
Arguments	POSitive indicates that a pulse edge must traverse from the lower (most negative) to higher (most positive) level for transition triggering to occur.

NEGative indicates that a pulse edge must traverse from the upper (most positive) to lower (most negative) level for transition triggering to occur.

EITHer indicates either positive or negative polarity.

Examples `TRIGGER:A:TRANSITION:POLARITY NEGATIVE` sets the transition polarity to negative.

`TRIGGER:A:TRANSITION:POLARITY?` might return `:TRIGGER:A:TRANSITION:POLARITY EITHER` indicating that the polarity can be either positive or negative.

TRIGger:A{:TRANSition|:RISEFall}:SOURce

Sets or returns the source for transition trigger.

Group Trigger

Syntax `TRIGger:A{:TRANSition|:RISEFall}:SOURce {CH1|CH2|CH3|CH4}`
`TRIGger:A{:TRANSition|:RISEFall}:SOURce?`

Arguments CH<x> specifies one of the input channels, which range from 1 through 4 for four-channel instruments and 1 through 2 for two-channel instruments.

Examples `TRIGGER:A:TRANSITION:SOURCE CH4` sets channel 4 as the source for the transition trigger.

`TRIGGER:A:TRANSITION:SOURCE?` might return `:TRIGGER:A:TRANSITION:SOURCE CH2` indicating that channel 2 is the source for the A transition trigger.

TRIGger:A{:TRANSition|:RISEFall}:WHEn

Sets or returns whether to check for a transitioning signal that is faster or slower than the specified delta time.

Group Trigger

Syntax `TRIGger:A{:TRANSition|:RISEFall}:WHEn`
`{SLOWer|FASTER|EQual|UNEQual}`
`TRIGger:A{:TRANSition|:RISEFall}:WHEn?`

Arguments **FASTER** sets the trigger to occur when the signal transition time is faster than the time set by `TRIGGER:A{TRANSITION|RISEFALL}:DELTAtime`.

SLOWER sets the trigger to occur when the signal transition time is slower than the time set by `.TRIGGER:A{TRANSITION|RISEFALL}:DELTAtime`.

EQUAL sets the trigger to occur when the signal transition time is equal to the time set by `TRIGGER:A{TRANSITION|RISEFALL}:DELTAtime`.

UNEQUAL sets the trigger to occur when the signal transition time is not equal to the time set by `TRIGGER:A{TRANSITION|RISEFALL}:DELTAtime`.

Examples `TRIGGER:A:TRANSITION:WHEN SLOWER` sets the trigger to occur when the signal transition time is slower than the time set by `.TRIGGER:A{TRANSITION|RISEFALL}:DELTAtime`.

`TRIGGER:A:TRANSITION:WHEN?` might return `:TRIGGER:A:TRANSITION:WHEN FASTER`

TRIGGER:A:TYPE

Sets or returns the type of A trigger. The five types of triggers are of Edge, Logic, Pulse, Serial, and Video. Logic and Pulse triggers contain classes. Logic triggers consist of State, Pattern, and SetHold classes; Pulse triggers consist of Runt, Width, and Transition logic classes. Once you have set the trigger type, you may also need to identify the associated trigger class. For details on selecting Logic and Pulse trigger classes, see [TRIGGER:A:LOGIC:CLASS](#) and [TRIGGER:A:PULSE:CLASS](#) respectively.

Group Trigger

Syntax `TRIGGER:A:TYPE {EDGE|LOGIC|PULSE|BUS|VIDEO}`
`TRIGGER:A:TYPE?`

Related Commands [TRIGGER:A:EDGE?](#), [TRIGGER:A:LOGIC:CLASS](#), [TRIGGER:A:PULSE:CLASS](#)

Arguments **EDGE** is a normal trigger. A trigger event occurs when a signal passes through a specified voltage level in a specified direction and is controlled by the [TRIGGER:A:EDGE?](#) commands.

LOGIC specifies that a trigger occurs when specified conditions are met and is controlled by the [TRIGGER:A:LOGIC?](#) commands.

PULSE specifies that a trigger occurs when a specified pulse is found and is controlled by the [TRIGGER:A:PULSE?](#) commands.

BUS specifies that a trigger occurs when a communications signal is found. Supports CAN, I²C, and SPI communications signals.

VIDEo specifies that the trigger occurs when a video signal is found.

- Examples** `TRIGGER:A:TYPE EDGE` sets the A trigger type to EDGE.
- `TRIGGER:A:TYPE?` might return `:TRIGGER:A:TYPE PULSE` indicating that the A trigger type is a pulse trigger.

TRIGger:A:UPPerthreshold:CH<x>

Sets the upper threshold for the channel selected. Each channel can have an independent level. Used for the following trigger types: runt, slew rate.

- Group** Trigger
- Syntax** `TRIGger:A:UPPerthreshold:CH<x> {<NR3>|TTL}`
`TRIGger:A:UPPerthreshold:CH<x>?`
- Arguments** TTL specifies a preset TTL high level of 1.4 V.
 <NR3> is the clock level, in volts.
- Examples** `TRIGGER:A:UPPERTHRESHOLD:CH2 50E-3` sets the upper limit of the pulse runt trigger to 50 mV for channel 2.
- `TRIGGER:A:UPPERTHRESHOLD:CH2?` might return `:TRIGGER:A:UPPERTHRESHOLD:CH2 1.2000E-01` indicating that the upper limit of the pulse runt trigger is set to 120 mV.

TRIGger:A:VIDEo? (Query Only)

Returns the A trigger video parameters.

- Group** Trigger
- Syntax** `TRIGger:A:VIDEo?`
- Examples** `TRIGGER:A:VIDEO?` might return `:TRIGGER:A:VIDEO:POLARITY POSITIVE;SOURCE CH1;STANDARD NTSC;SYNC`

```
ALLLINES;HOLDOFF:FIELD 0.0000;:TRIGGER:A:VIDEO:CUSTOM:FORMAT
PROGRESSIVE;SCANRATE15K;:TRIGGER:A:VIDEO:LINE 1;HDTV:FORMAT
HD1080I60
```

TRIGger:A:VIDeo:LINE

Sets or returns the video line number on which the instrument triggers. Use the [TRIGger:A:VIDeo{:SYNC|:FIELD}](#) command to actually trigger the instrument on the line that you specify with this command.

Conditions This command requires a DPO4VID application module.

Group Trigger

Syntax TRIGger:A:VIDeo:LINE <NR1>
TRIGger:A:VIDeo:LINE?

Related Commands [TRIGger:A:VIDeo{:SYNC|:FIELD}](#)

Arguments <NR1> argument is an integer that sets the video line number on which the instrument triggers. The following table lists the valid choices, depending on the active video standard.

Table 2-39: Video Line Numbering Ranges

Video Standard	Line Number Range
525/NTSC	1–525
625/PAL, SECAM	1–625
SECAM	1–625

Examples TRIGGER:A:VIDEO:LINE 23 sets the instrument to trigger on the line 23.

TRIGGER:A:VIDEO:LINE ? might return :TRIGger:A:VIDeo:LINE 10 indicating that the instrument is set to trigger on line 10.

TRIGger:A:VIDeo:SOUrce

Sets or returns the source for the A video trigger. This command is equivalent to pushing the front-panel **Trigger** button, pushing the lower-bezel **Type** button as many times as needed to select **Video** from the resulting pop-up menu, **Source** from the lower-bezel menu, and setting the appropriate side-bezel menu items.

Group	Trigger
Syntax	TRIGger:A:VIDeo:SOURce {CH<x>} TRIGger:A:VIDeo:SOURce?
Arguments	CH<x> argument specifies one of the input channels of the instrument as the A video trigger. The value of x ranges from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments.
Examples	TRIGGER:A:VIDEO:SOURCE CH1 sets the source for A video trigger to Channel 1. TRIGGER:A:VIDEO:SOURCE? might return :TRIGger:A:VIDeo:SOURce CH2 indicating that the source for the A video trigger is set to Channel 2.

TRIGger:A:VIDeo:STANdard

Sets or returns the video standard.

Group	Trigger
Syntax	TRIGger:A:VIDeo:STANdard {NTSC PAL SECAM} TRIGger:A:VIDeo:STANdard?
Arguments	NTSC argument sets the instrument to trigger on video signals that meet the NTSC 525/60/2:1 standard (a line rate of 525 lines per frame and a field rate of 60 Hz). PAL argument sets the instrument to trigger on video signals that meet the NTSC 625/50/2:1 standard (a line rate of 625 lines per frame and a field rate of 50 Hz). SECAM argument sets the instrument to trigger on video signals that meet the SECAM standard.
Examples	TRIGGER:A:VIDEO:STANDARD NTSC sets the instrument to trigger on NTSC-standard video signals. TRIGGER:A:VIDEO:STANDARD? might return :TRIGger:A:VIDeo:STANdard HDTV indicating that the instrument is set to trigger on an HDTV format.

TRIGger:A:VIDeo{:SYNC|:FIELD}

Sets or returns the video field or line that the trigger detects.

Group	Trigger
Syntax	TRIGger:A:VIDeo{:SYNC :FIELD} {ODD EVEN ALLFiElds ALLLines} TRIGger:A:VIDeo{:SYNC :FIELD}?
Arguments	<p>ODD argument sets the instrument to trigger on interlaced video odd fields.</p> <p>EVEN argument sets the instrument to trigger on interlaced video even fields.</p> <p>ALLFiElds argument sets the instrument to trigger on all fields.</p> <p>ALLLines argument sets the instrument to trigger on all video lines.</p>
Examples	<p>TRIGGER:A:VIDEO:FIELD EVEN sets the A video trigger so that it will trigger on even fields.</p> <p>TRIGGER:A:VIDEO:FIELD? might return :TRIGGER:A:VIDEO:FIELD ALLFIELDS indicating that the A video will trigger on all video fields.</p>

TRIGger:B

Sets the B trigger level to 50% of minimum and maximum. The query form of this command returns the B trigger parameters. This command is similar to selecting B Event (Delayed) Trigger Setup from the Trig menu and then viewing the current setups.

Group	Trigger
Syntax	TRIGger:B SETLeve1 TRIGger:B?
Related Commands	TRIGger:A
Arguments	SETLeve1 sets the B trigger level to 50% of MIN and MAX.
Examples	<p>TRIGGER:B SETLEVEL sets the B trigger level to 50% of MIN and MAX.</p> <p>TRIGGER:B? might return the following B trigger parameters: :TRIGGER:B:STATE 0;TYPE EDGE; LEVEL -220.0000E-3;BY TIME;EDGE:SOURCE CH1;SLOPE RISE;COUPLING DC; :TRIGGER:B:TIME 16.0000E-9;EVENTS:COUNT 2</p>

TRIGger:B:BY

Selects or returns whether the B trigger occurs after a specified number of events or a specified period of time after the A trigger.

Group Trigger

Syntax TRIGger:B:BY {EVENTS|TIME}
TRIGger:B:BY?

Related Commands [TRIGger:B:EVENTS:COUNT](#), [TRIGger:B:TIME](#), [HORizontal\[:MAIn\]:DELay:MODE](#), [HORizontal\[:MAIn\]:DELay:TIME](#)

Arguments EVENTS sets the B trigger to take place following a set number of trigger events after the A trigger occurs. The number of events is specified by TRIGger:B:EVENTS:COUNT.

TIME sets the B trigger to occur a set time after the A trigger event. The time period is specified by TRIGger:B:TIME.

Examples TRIGGER:B:BY TIME sets the B trigger to occur at a set time after the A trigger event.

TRIGGER:B:BY? might return :TRIGGER:B:BY EVENTS indicating that the B trigger takes place following a set number of trigger events after the A trigger occurs.

TRIGger:B:EDGE? (Query Only)

Returns the source, slope, and coupling for B trigger.

Group Trigger

Syntax TRIGger:B:EDGE?

Related Commands [TRIGger:B:EDGE:COUPLing](#), [TRIGger:B:EDGE:SLOPe](#), [TRIGger:B:EDGE:SOURce](#)

Examples TRIGGER:B:EDGE? might return :TRIGGER:B:EDGE:SOURCE CH1; SLOPE RISE; COUPLING DC

TRIGger:B:EDGE:COUPling

Sets or returns the type of coupling for the B trigger.

Group Trigger

Syntax TRIGger:B:EDGE:COUPling {DC|HFRej|LFRej|NOISErej}
TRIGger:B:EDGE:COUPling?

Related Commands [TRIGger:B:EDGE?](#)

Arguments DC selects DC trigger coupling.
HFRej selects high-frequency reject coupling.
LFRej selects low-frequency reject coupling.
NOISErej selects DC low sensitivity.

Examples TRIGGER:B:EDGE:COUPLING DC selects DC for the B trigger coupling.
TRIGGER:B:EDGE:COUPLING? might return :TRIGGER:B:EDGE:COUPLING
ATRIGGER for the B trigger coupling.

TRIGger:B:EDGE:SLOpe

Sets or returns the slope for the B trigger.

Group Trigger

Syntax TRIGger:B:EDGE:SLOpe {RISe|FALL}
TRIGger:B:EDGE:SLOpe?

Related Commands [TRIGger:B:EDGE?](#)

Arguments RISe argument specifies the trigger on the rising or positive edge of a signal.
FALL argument specifies the trigger on the falling or negative edge of a signal.

Examples TRIGGER:B:EDGE:SLOPE FALL sets the B edge trigger to occur on the falling slope.

TRIGGER:B:EDGE:SLOPE? might return :TRIGGER:B:EDGE:SLOPE RISE indicating that the B edge trigger occurs on the rising slope.

TRIGger:B:EDGE:SOUrce

Sets or returns the source for the B trigger.

Group Trigger

Syntax TRIGger:B:EDGE:SOUrce {CH<x>|EXT|LINE}
TRIGger:B:EDGE:SOUrce?

Related Commands [TRIGger:B:EDGE?](#)

Arguments CH<x> specifies one of the input channels as the B trigger source. Input channels are specified by x, which can range from 1 through 4 for four-channel instruments or 1 through 2 for two-channel instruments.

EXT specifies an external trigger (using the Auxiliary Trigger Input connector, located on the rear panel of the instrument) as the B trigger source.

LINE specifies the power line as the B trigger source.

Examples TRIGGER:B:EDGE:SOURCE CH4 sets channel 4 as the input source for the B trigger.

TRIGGER:B:EDGE:SOURCE? might return :TRIGGER:B:EDGE:SOURCE CH1 indicating that the current input source for the B trigger is channel 1.

TRIGger:B:EVENTS? (Query Only)

Returns the current B trigger events parameter.

Group Trigger

Syntax TRIGger:B:EVENTS?

Related Commands [TRIGger:B:EVENTS:COUNt](#)

Examples TRIGGER:B:EVENTS? might return
:TRIGGER:B:EVENTS:COUNT 2
indicating that 2 events must occur before the B trigger occurs.

TRIGger:B:EVENTS:COUNT

Sets or returns the number of events that must occur before the B trigger (when TRIG:DElay:BY is set to EVENTS).

Group Trigger

Syntax TRIGger:B:EVENTS:COUNT <NR1>
TRIGger:B:EVENTS:COUNT?

Related Commands [TRIGger:B:EVENTS?](#)

Arguments <NR1> is the number of B trigger events, which can range from 1 to 10,000,000.

Examples TRIGGER:B:EVENTS:COUNT 4 specifies that the B trigger will occur four trigger events after the A trigger.
TRIGGER:B:EVENTS:COUNT? might return :TRIGGER:B:EVENTS:COUNT 2 indicating that two events must occur after the A trigger before the B trigger can occur.

TRIGger:B:LEVel

Sets or returns the level for the B trigger.

Group Trigger

Syntax TRIGger:B:LEVel {TTL|<NR3>}
TRIGger:B:LEVel?

Related Commands [TRIGger:A:LEVel](#), [TRIGger:B](#), [TRIGger:B:EDGE:SOUrce](#)

Arguments TTL specifies a preset TTL level of 1.4 V.
<NR3> is the B trigger level, in volts.

Examples TRIGGER:B:LEVEL TTL sets the B trigger level to 1.4 V.
 TRIGGER:B:LEVEL? might return :TRIGGER:B:LEVEL 173.0000E-03 indicating that the B trigger level is currently set at 173 mV.

TRIGger:B:LEVel:CH<x>

Sets or returns the B trigger level for the specified channel. Each Channel can have an independent Level.

Group Trigger

Syntax TRIGger:B:LEVel:CH<x> {<NR3>|TTL}
 TRIGger:B:LEVel:CH<x>?

Arguments TTL specifies the TTL high level.
 <NR3> specifies the trigger level in user units (usually volts).

Examples TRIGGER:B:LEVEL:CH2? might return :TRIGGER:B:LEVEL:CH2 1.3000E+00 indicating that the B edge trigger is set to 1.3 V for channel 2.
 TRIGGER:B:LEVEL:CH3 TTL sets the B edge trigger to TTL high level for channel 3.

TRIGger:B:LOWerthreshold:CH<x>

Sets or returns the B trigger lower threshold for the channel selected. Each channel can have an independent level.

Group Trigger

Syntax TRIGger:B:LOWerthreshold:CH<x> {<NR3>|TTL}
 TRIGger:B:LOWerthreshold:CH<x>?

Arguments TTL specifies a preset TTL high level of 1.4 V.
 <NR3> is the clock level, in volts.

TRIGger:B:STATE

Sets or returns the state of B trigger activity. If the B trigger state is on, the B trigger is part of the triggering sequence. If the B trigger state is off, then only the A trigger causes the trigger event.

Group Trigger

Syntax TRIGger:B:STATE {ON|OFF|<NR1>}
TRIGger:B:STATE?

Related Commands [TRIGger:A:MODE](#)

Arguments ON argument indicates that the B trigger is active and in causes trigger events conjunction with the A trigger.

OFF argument indicates that only the A trigger causes trigger events.

<NR1>

A 0 turns off the B trigger; any other value activates the B trigger.

Examples TRIGGER:B:STATE ON sets the B trigger to active, making it capable of causing trigger events.

TRIGGER:B:STATE? might return :TRIGGER:B:STATE 0 indicating that the B trigger is inactive and that only the A trigger causes trigger events.

TRIGger:B:TIME

Sets or returns B trigger delay time. The B Trigger time applies only if TRIGger:B:BY is set to TIME.

Group Trigger

Syntax TRIGger:B:TIME <NR3>
TRIGger:B:TIME?

Related Commands [TRIGger:B:BY](#), [TRIGger:B:EVENTS:COUNt](#)

Arguments <NR3> is the B trigger delay time in seconds.

Examples TRIGGER:B:TIME 4E-6 sets the B trigger delay time to 4 μ s.
 TRIGGER:B:TIME? might return :TRIGGER:B:TIME 16.0000E-9 indicating that the B trigger time is set to 16 ns.

TRIGger:B:TYPe

Sets or returns the type of B trigger. The only supported B trigger type is EDGE.

Group Trigger

Syntax TRIGger:B:TYPe EDGE
 TRIGger:B:TYPe?

Related Commands [TRIGger:A:TYPe](#)

Arguments EDGE sets the B trigger type to edge.

Examples TRIGGER:B:TYPE EDGE sets the B trigger type to edge.
 TRIGGER:B:TYPE? might return :TRIGGER:B:TYPE EDGE.

TRIGger:B:UPPerthreshold:CH<x>

Sets the upper threshold for the channel selected. Each channel can have an independent level.

Group Trigger

Syntax TRIGger:B:UPPerthreshold:CH<x> {<NR3>|TTL}
 TRIGger:B:UPPerthreshold:CH<x>?

Arguments TTL specifies a preset TTL high level of 1.4 V.
 <NR3> is the clock level, in volts.

TRIGger:EXTeRnal? (Query Only)

Returns all external trigger parameters.

Group Trigger

Syntax TRIGger:EXTeRna1?

TRIGger:EXTeRna1:PRObe

Sets or returns the attenuation factor value of the external probe connector.

Group Trigger

Syntax TRIGger:EXTeRna1:PRObe <NR3>
TRIGger:EXTeRna1:PRObe?

Arguments <NR3> is the attenuation factor of the probe.

Examples TRIGGER:EXTERNAL:PROBE? might return :TRIGGER:EXTERNAL:PROBE
1.0E1 for a 10X probe.

TRIGger:EXTeRna1:YUNIts? (Query Only)

Returns the external trigger vertical (Y) units value.

Group Trigger

Syntax TRIGger:EXTeRna1:YUNIts?

Examples TRIGGER:EXTERNAL:YUNITS? might return TRIGGER:EXTERNAL:YUNITS
"V" if the vertical unit is volts.

TRIGger:STATE? (Query Only)

Returns the current state of the triggering system.

Group Trigger

Syntax TRIGger:STATE?

Related Commands [TRIGger:A:MODE](#)

Returns ARMED indicates that the instrument is acquiring pretrigger information.
 AUTO indicates that the instrument is in the automatic mode and acquires data even in the absence of a trigger.
 READY indicates that all pretrigger information has been acquired and that the instrument is ready to accept a trigger.
 SAVE indicates that the instrument is in save mode and is not acquiring data.
 TRIGGER indicates that the instrument triggered and is acquiring the post trigger information.

Examples TRIGGER:STATE? might return :TRIGGER:STATE ARMED indicating that the pretrigger data is being acquired.

*TST? (Query Only)

Tests (self-test) the interface and returns a 0.

Group Miscellaneous

Syntax *TST?

Examples *TST? always returns 0.

UNLock (No Query Form)

Unlocks the front panel. The command is equivalent to LOCK NONE.

Group Miscellaneous

Syntax UNLOCK ALL

Related Commands [LOCK](#)

Arguments ALL specifies that all front-panel buttons and knobs are unlocked.

Examples UNLOCK ALL unlocks all front-panel buttons and knobs.

VERBose

Sets or returns the Verbose state that controls the length of keywords on query responses. Keywords can be both headers and arguments.

NOTE. *This command does not affect IEEE Std 488.2-1987 Common Commands (those starting with an asterisk). However, this command does make a corresponding change in the Response Header Enable State of the opposite interface (virtual GPIB interface). Refer to Introduction for more information.*

Group Miscellaneous

Syntax VERBose {OFF|ON|<NR1>}

Related Commands [HEADer](#), [*LRN?](#), [SET?](#)

Arguments OFF sets the Verbose state to false, which returns minimum-length keywords for applicable setting queries.

ON sets the Verbose state to true, which returns full-length keywords for applicable setting queries.

<NR1>

A 0 returns minimum-length keywords for applicable setting queries; any other value returns full-length keywords.

Examples VERBOSE ON enables the Verbose state.

VERBOSE ? might return :VERB 0 indicating that the Verbose state is disabled.

*WAI (No Query Form)

Prevents the oscilloscope from executing further commands or queries until all pending commands that generate an OPC message are complete. This command allows you to synchronize the operation of the instrument with your application program. (See page 3-7, *Synchronization Methods*.)

Group Status and Error

Syntax *WAI

Related Commands [BUSY?](#), [*OPC](#)

Examples *WAI prevents the oscilloscope from executing any further commands or queries until all pending commands that generate an OPC message are complete.

WAVFrm? (Query Only)

Returns WFMOutpre? and CURVe? data for the waveform as specified by the DATA:SOURce command. This command is equivalent to sending both WFMOutpre? and CURVe?, with the additional provision that the response to WAVFrm? is guaranteed to provide a synchronized preamble and curve. The source waveform, as specified by :DATA:SOURCE, must be active or the query will not return any data and will set an error event so indicating.

Group Waveform Transfer

Syntax WAVFrm?

Related Commands [CURVe](#), [DATA:SOURce](#), [WFMOutpre?](#)

Examples WAVFRM? might return the waveform data as: :WFMOUTPRE:BYT_NR 1;BIT_NR 8;ENCDG ASCII;BN_FMT RI;BYT_OR MSB;WFID "Ch1, DC coupling, 100.0mV/div, 4.000us/div, 10000 points, Sample mode";NR_PT 20;PT_FMT Y;XUNIT "s";XINCR 4.0000E-9;XZERO -20.0000E-6;PT_OFF 0;YUNIT "V";YMULT 4.0000E-3;YOFF 0.0000;YZERO 0.0000;:CURVE 2,1,4,2,4,3,0,3,3,3,3,3,3,4,3,5,6,6,7,3

WFMinpre? (Query Only)

Returns the waveform formatting and scaling specifications to be applied to the next incoming CURVe command data.

Group Waveform Transfer

Syntax WFMinpre?

Related Commands [WFMOutpre?](#)

Examples WFMINPRE? might return the waveform formatting as :WFMINPRE:BIT_NR 8;BN_FMT RI;BYT_NR 1; BYT_OR MSB;ENCDG BIN;NR_PT 500;PT_FMT Y; PT_OFF 0;XINCR 2.0000E-6;XZERO 1.7536E-6; XUNIT "s";YMULT 1.0000E-3;YOFF 0.0000; YZERO 0.0000;YUNIT "v"

WFMInpre:BIT_Nr

Sets or returns the number of bits per binary waveform point for the incoming waveform. Changing the value of [WFMInpre:BIT_Nr](#) also changes the value of [WFMInpre:BYT_Nr](#).

Group Waveform Transfer

Syntax WFMInpre:BIT_Nr <NR1>
WFMInpre:BIT_Nr?

Related Commands [WFMInpre:BYT_Nr](#)

Arguments <NR1> number of bits per data point can be 8 or 16.

Examples WFMINPRE:BIT_NR 16 sets the number of bits per waveform point to 16, for incoming data.

WFMINPRE:BIT_NR? might return :WFMINPRE:BIT_NR 8 indicating that incoming waveform data uses 8 bits per waveform point.

WFMInpre:BN_Fmt

Sets or returns the format of binary data for incoming waveforms.

Group Waveform Transfer

Syntax WFMInpre:BN_Fmt {RI|RP}
WFMInpre:BN_Fmt?

Related Commands [WFMOutpre:BN_Fmt](#)

Arguments RI specifies signed integer data point representation.
 RP specifies positive integer data point representation.

Examples WFMINPRE:BN_FMT RP specifies positive integer data point representation.
 WFMINPRE:BN_FMT? might return :WFMINPRE:BN_FMT RI indicating that the incoming data is currently interpreted as signed integers.

WFMInpre:BYT_Nr

Sets or returns the data width for the incoming waveform. Changing the value of [WFMInpre:BYT_Nr](#) also changes the value of [WFMInpre:BIT_Nr](#).

Group Waveform Transfer

Syntax WFMInpre:BYT_Nr <NR1>
 WFMInpre:BYT_Nr?

Related Commands [WFMInpre:BIT_Nr](#)

Arguments <NR1> is the number of bytes per data point and can be 1 or 2.

Examples WFMINPRE:BYT_NR 1 sets the number of bytes per incoming waveform data point to 1, which is the default setting.
 WFMINPRE:BYT_NR? might return :WFMINPRE:BYT_NR 2 indicating that there are 2 bytes per incoming waveform data point.

WFMInpre:BYT_Or

Sets or returns which byte of binary waveform data is expected first for incoming waveform data when data points require more than one byte. This specification only has meaning when [WFMInpre:ENCdg](#) is set to BIN and [WFMInpre:BYT_Nr](#) is 2.

Group Waveform Transfer

Syntax WFMInpre:BYT_Or {LSB|MSB}
 WFMInpre:BYT_Or?

Related Commands	WFMinpre:ENCdg , WFMinpre:BYT_Nr , WFMOupre:BYT_Or
Arguments	LSB specifies that the least significant byte will be expected first. MSB specifies that the most significant byte will be expected first.
Examples	WFMINPRE:BYT_OR MSB sets the most significant incoming byte of incoming waveform data to be expected first. WFMINPRE:BYT_OR? might return :WFMINPRE:BYT_OR LSB indicating that the least significant incoming CURVe data byte will be expected first.

WFMinpre:ENCdg

Sets or returns the type of encoding for incoming waveform data.

Group Waveform Transfer

Syntax WFMinpre:ENCdg {ASCIi|BINary}
WFMinpre:ENCdg?

Related Commands [WFMOupre:ENCdg](#)

Arguments ASCIi specifies that the incoming data is in ASCII format.
BINary specifies that the incoming data is in a binary format whose further interpretation requires knowledge of BYT_NR, BIT_NR, BN_FMT, and BYT_OR.

Examples WFMINPRE:ENCDG ASC sets the format of incoming waveform data to ASCII format.
WFMINPRE:ENCDG ? might return :WFMINPRE:ENCDG BIN indicating that the incoming waveform data is in binary format.

WFMinpre:NR_Pt

Sets or returns the number of data points that are in the incoming waveform record.

Group Waveform Transfer

Syntax WFMInpre:NR_Pt <NR1>
WFMInpre:NR_Pt?

Related Commands [CURVe](#), [DATA](#), [DATA:START](#), [DATA:STOP](#), [SAVE:WAVEform](#), [SAVE:WAVEform:FILEFormat](#), [WFMOutpre:NR_Pt?](#)

Arguments <NR1> is the number of data points if WFMInpre:PT_Fmt is set to Y. It is the number of min-max pairs if WFMInpre:PT_Fmt is set to ENV.

Examples WFMINPRE:NR_PT 10000 specifies that 10000 data points will be expected.
WFMINPRE:NR_PT ? might return :WFMINPRE:NR_PT 10000 indicating that there are 10000 data points in the expected incoming waveform record.

WFMInpre:PT_Fmt

Sets or returns the point format of the incoming waveform data. Regardless of the argument used, the scale, offset, and so on are interpreted similarly. When ENV is used, waveform data is interpreted over the min-max pair; when Y is used, it is interpreted over a single point.

Group Waveform Transfer

Syntax WFMInpre:PT_Fmt {ENV|Y}
WFMInpre:PT_Fmt?

Related Commands [WFMOutpre:PT_Fmt?](#)

Arguments ENV specifies that the waveform is transmitted in envelope mode as maximum and minimum point pairs. Only Y values are explicitly transmitted. Absolute coordinates are given by:

$$X_n = XZERO + XINcr (n - PT_Off)$$

$$Y_{nmax} = YZERO + YMULT (ynmax - YOFf)$$

$$Y_{nmin} = YZERO + YMULT (ynmin - YOFf)$$

Y specifies a normal waveform where one ASCII or binary data point is transmitted for each point in the waveform record. Only Y values are explicitly transmitted. Absolute coordinates are given by:

$$X_n = XZERO + XINcr (n - PT_Off)$$

$$Y_n = YZERO + YMULT (yn - YOFf)$$

- Examples** `WFMINPRE:PT_FMT ENV` sets the incoming waveform data point format to enveloped.
- `WFMINPRE:PT_FMT?` might return `:WFMINPRE:PT_FMT ENV` indicating that the waveform is transmitted as maximum and minimum point pairs.

WFMinpre:PT_Off

The set form of this command is ignored. The query form always returns a 0. This command is listed for compatibility with other Tektronix oscilloscopes.

- Group** Waveform Transfer
- Syntax** `WFMinpre:PT_Off`
`WFMinpre:PT_Off?`
- Related Commands** [DATA:DESTination](#), [WFMinpre:PT_Off?](#)
- Arguments** Arguments are ignored.

WFMinpre:WFId (No Query Form)

This command (no query form) is accepted but ignored. This command is listed for compatibility with other Tektronix oscilloscopes.

- Group** Waveform Transfer
- Syntax** `WFMinpre:WFId <QString>`
- Related Commands** [DATA:DESTination](#), [WFMinpre:BN_Fmt](#), [WFMinpre:ENCdg](#),
[WFMinpre:WFId?](#)
- Arguments** `<QString>` must be a valid IEEE-488.2 string (but the contents are ignored).
- Examples** `WFMINPRE:WFID "CH1, DC COUPLING, 2.000V/DIV, 400.0NS/DIV, 500 POINTS, SAMPLE MODE"` is a syntactically correct command.

WFMInpre:XINcr

Sets or returns the horizontal interval between incoming waveform points in units specified by WFMInpre:XUNit.

Group Waveform Transfer

Syntax WFMInpre:XINcr <NR3>
WFMInpre:XINcr?

Related Commands [WFMInpre:XUNit](#), [WFMOutpre:XINcr?](#)

Arguments <NR3> is the horizontal interval representation.

Examples WFMInpre:XINcr 3E-3 sets the interval between incoming waveform points to 3 ms.

WFMInpre:XINcr ? might return :WFMInpre:XINcr 1.0000E-3 indicating that if WFMInpre:XUNit is set to "s", there is a 1 ms interval between incoming waveform points.

WFMInpre:XUNit

Sets or returns the horizontal units of the incoming waveform.

Supported units are: %, /Hz, A, A/A, A/V, A/W, A/dB, A/s, AA, AW, AdB, As, B, Hz, IRE, S/s, V, V/A, V/V, V/W, V/dB, V/s, VV, VW, VdB, Volts, Vs, W, W/A, W/V, W/W, W/dB, W/s, WA, WV, WW, WdB, Ws, dB, dB/A, dB/V, dB/W, dB/dB, dBA, dBV, dBW, dBdB, day, degrees, div, hr, min, ohms, percent, s

Group Waveform Transfer

Syntax WFMInpre:XUNit <QString>
WFMInpre:XUNit?

Related Commands [WFMOutpre:XUNit?](#)

Arguments <QString> contains a maximum of three alpha characters that represent the horizontal unit of measure for the incoming waveform.

- Examples** `WFMINPRE:XUNIT "HZ"` specifies that the horizontal units for the incoming waveform are hertz.
- `WFMINPRE:XUNIT?` might return `:WFMINPRE:XUNIT "s"` indicating that the horizontal units for the incoming waveform are seconds.

WFMinpre:XZEro

Sets or returns the position value, in XUNits, of the first sample of the incoming waveform.

Group Waveform Transfer

Syntax `WFMinpre:XZEro <NR3>`
`WFMinpre:XZEro?`

Related Commands [WFMinpre:PT_Off](#), [WFMinpre:XINcr](#), [WFMinpre:XUNit](#), [WFMinpre:XZEro?](#)

Arguments `<NR3>` argument is the floating point value of the position, in XUNits, of the first sample in the incoming waveform. If XUNits is “s”, `<NR3>` is the time of the first sample in the incoming waveform.

- Examples** `WFMINPRE:XZERO 5.7E-6`, which indicates the trigger occurred 5.7 μs before the first sample in the waveform.
- `WFMINPRE:XZERO?` might return `:WFMINPRE:XZEro -7.5000E-6` indicating that the trigger occurs 7.5 μs after the first sample in the waveform.

WFMinpre:YMUlt

Sets or returns the vertical scale factor of the incoming waveform, expressed in YUNits per waveform data point level. For one byte waveform data, there are 256 data point levels. For two byte waveform data there are 65,536 data point levels.

YMUlt, YOFF, and YZEro are used to convert waveform record values to YUNit values using the following formula (where dl is the data level; curve_in_dl is a data point in CURVe):

$$\text{value_in_units} = ((\text{curve_in_dl} - \text{YOFF_in_dl}) * \text{YMUlt}) + \text{YZero_in_units}$$

NOTE. For a given waveform record, YMUlt, YOFF, and YZEro have to be a consistent set, otherwise vertical cursor readouts and vertical measurements may give incorrect results.

Group	Waveform Transfer
Syntax	WFMInpre:YMUlt <NR3> WFMInpre:YMUlt?
Related Commands	DATA:DESTination , WFMInpre:BYT_Nr , WFMInpre:YUNit
Arguments	<NR3> is the vertical scale factor per digitizing level of the incoming waveform points.
Examples	<p>WFMINPRE:YMULT? might return :WFMINPRE:YMULT 40.0000E-3, which (if YUNit is "V") indicates that the vertical scale is 40 mV/digitizing level (1V/div for 8-bit data).</p> <p>WFMINPRE:YMULT 20E-3 specifies that (if WFMInpre:YUNit is "V" and WFMInpre:BYT_Nr is 1), the vertical scale is 20 mV/digitizing level (500 mV/div).</p>

WFMInpre:YOff

Sets or returns the vertical position of the incoming waveform in digitizing levels. Variations in this number are analogous to changing the vertical position of the waveform.

YMUlt, YOff, and YZEro are used to convert waveform record values to YUNit values using the following formula (where dl is the data level; curve_in_dl is a data point in CURVe):

$$\text{value_in_units} = ((\text{curve_in_dl} - \text{YOff_in_dl}) * \text{YMUlt}) + \text{YZEro_in_units}$$

NOTE. For a given waveform record, YMUlt, YOff, and YZEro have to be a consistent set, otherwise vertical cursor readouts and vertical measurements may give incorrect results.

Group	Waveform Transfer
Syntax	WFMInpre:YOff <NR3> WFMInpre:YOff?
Related Commands	WFMInpre:BYT_Nr , WFMInpre:YMUlt , WFMOutpre:YOff?

Arguments <NR3> is the vertical offset in digitizing levels.

Examples WFMINPRE:YOFF 50 specifies that the zero reference point for the incoming waveform is 50 digitizing levels (2 divisions, for 8-bit data) above the center of the data range.

WFMINPRE:YOFF? might return :WFMINPRE:YOFF 25 indicating the vertical position of the incoming waveform in digitizing levels.

WFMInpre:YUNit

Sets or returns the vertical units of the incoming waveform.

Supported units are: %, /Hz, A, A/A, A/V, A/W, A/dB, A/s, AA, AW, AdB, As, B, Hz, IRE, S/s, V, V/A, V/V, V/W, V/dB, V/s, VV, VW, VdB, Volts, Vs, W, W/A, W/V, W/W, W/dB, W/s, WA, WV, WW, WdB, Ws, dB, dB/A, dB/V, dB/W, dB/dB, dBA, dBV, dBW, dBdB, day, degrees, div, hr, min, ohms, percent, s

Group Waveform Transfer

Syntax WFMInpre:YUNit <QString>
WFMInpre:YUNit?

Related Commands [WFMOutpre:YUNit?](#)

Arguments <QString> contains a maximum of three alpha characters that represent the vertical unit of measure for the incoming waveform.

Examples WFMINPRE:YUNIT? might return :WFMINPRE:YUNIT "V" indicating the vertical units for the incoming waveform are volts.

WFMINPRE:YUNIT "A" specifies that the vertical units for the incoming waveform are Amperes.

WFMInpre:YZEro

Sets or returns the vertical offset of the incoming waveform in units specified by WFMInpre:YUNit. Variations in this number are analogous to changing the vertical offset of the waveform.

YMUlt, YOFF, and YZEro are used to convert waveform record values to YUNit values using the following formula (where dl is the data level; curve_in_dl is a data point in CURVe):

$$\text{value_in_units} = ((\text{curve_in_dl} - \text{YOff_in_dl}) * \text{YMUlt}) + \text{YZero_in_units}$$

NOTE. For a given waveform record, *YMUlt*, *YOFf*, and *YZero* have to be a consistent set, otherwise vertical cursor readouts and vertical measurements may give incorrect results.

Group	Waveform Transfer
Syntax	WFMInpre:YZero <NR3> WFMInpre:YZero?
Related Commands	WFMInpre:YUNit , WFMOutpre:YZero?
Arguments	<NR3> is the offset in YUNits.
Examples	<p>WFMINPRE:YZERO 1.5E+0 specifies that the zero reference point for the incoming waveform is 1.5 V below the center of the data range (given that WFMInpre:YUNit is set to V).</p> <p>WFMINPRE:YZERO? might return :WFMINPRE:YZero 7.5000E-6 indicating that the zero reference for the incoming waveform is 7.5 μV below the center of the data range (given that WFMInpre:YUNit is set to V).</p>

WFMOutpre? (Query Only)

Returns waveform transmission and formatting parameters for the waveform specified by [DATA:SOURce](#) command. If the waveform specified by the [DATA:SOURce](#) command is not displayed, the oscilloscope returns only the waveform transmission parameters (BYT_Nr, BIT_Nr, ENCDg, BN_Fmt, BYT_Or).

Group	Waveform Transfer
Syntax	WFMOutpre?
Examples	<p>WFMOUTPRE? ? might return the waveform formatting data as:</p> <pre>:WFMOUTPRE:BYT_NR 2;BIT_NR 16;ENCDG ASCII;BN_FMT RI;BYT_OR MSB;WFID "Ch1, DC coupling, 100.0mV/div, 4.000us/div, 10000 points, Sample mode";NR_PT 10000;PT_FMT Y;XUNIT "s";XINCR</pre>

```
4.0000E-9;XZERO - 20.0000E-6;PT_OFF 0;YUNIT "V";YMULT
15.6250E-6;YOFF : "6.4000E+3;YZERO 0.0000
```

WFMOutpre:BIT_Nr

Sets and returns the number of bits per waveform point that outgoing waveforms contain, as specified by the [DATA:SOURce](#) command. Changing the value of [WFMOutpre:BIT_Nr](#) also changes the values of [WFMOutpre:BYT_Or](#) and [DATA:WIDTH](#).

Group Waveform Transfer

Syntax WFMOutpre:BIT_Nr <NR1>
WFMOutpre:BIT_Nr?

Related Commands [DATA:SOURce](#), [DATA:WIDTH](#), [WFMOutpre:BN_Fmt](#)

Arguments <NR1> number of bits per data point can be 8 or 16.

Examples WFMOUTPRE:BIT_NR 16 sets the number of bits per waveform point to 16 for outgoing waveforms.

WFMOUTPRE:BIT_NR? might return :WFMOUTPRE:BIT_NR 8 indicating that outgoing waveforms use 8 bits per waveform point.

WFMOutpre:BN_Fmt

Sets or returns the format of binary data for outgoing waveforms specified by the [DATA:SOURce](#) command. Changing the value of [WFMOutpre:BN_Fmt](#) also changes the value of [DATA:ENCdg](#).

Group Waveform Transfer

Syntax WFMOutpre:BN_Fmt {RI|RP}
WFMOutpre:BN_Fmt?

Related Commands [DATA:ENCdg](#), [DATA:SOURce](#)

- Arguments** RI specifies signed integer data point representation.
 RP specifies positive integer data point representation.
- Examples** WFMOUTPRE:BN_FMT RP specifies that outgoing waveform data will be in positive integer format.
 WFMOUTPRE:BN_FMT? might return :WFMOUTPRE:BN_FMT RI indicating that the outgoing waveform data is currently in signed integer format.

WFMOutpre:BYT_Nr

Sets or returns the data width for the outgoing waveform specified by the [DATA:SOUrce](#) command. Changing [WFMOutpre:BYT_Nr](#) also changes [WFMOutpre:BIT_Nr](#) and [DATA:WIDth](#).

Group Waveform Transfer

Syntax WFMOutpre:BYT_Nr <NR1>
 WFMOutpre:BYT_Nr?

Related Commands [DATA:SOUrce](#), [DATA:WIDth](#), [WFMOutpre:BIT_Nr](#)

Arguments <NR1> is the number of bytes per data point and can be 1 or 2.

Examples WFMOUTPRE:BYT_NR 1 sets the number of bytes per outgoing waveform data point to 1, which is the default setting.
 WFMOUTPRE:BYT_NR? might return :WFMOUTPRE:BYT_NR 2 indicating that there are 2 bytes per outgoing waveform data point.

WFMOutpre:BYT_Or

Sets or returns which byte of binary waveform data is transmitted first, during a waveform data transfer, when data points require more than one byte. This specification only has meaning when [WFMOutpre:ENCdg](#) is set to BIN and [WFMOutpre:BYT_Nr](#) is 2. Changing [WFMOutpre:BYT_Or](#) also changes [DATA:ENCdg](#) (if [DATA:ENCdg](#) is not ASCII).

Group Waveform Transfer

Syntax WFMOutpre:BYT_Or {LSB|MSB}
WFMOutpre:BYT_Or?

Related Commands [WFMOutpre:ENCdg](#), [WFMOutpre:BYT_Nr](#)

Arguments LSB specifies that the least significant byte will be transmitted first.
MSB specifies that the most significant byte will be transmitted first.

Examples WFMOUTPRE:BYT_OR MSB sets the most significant outgoing byte of waveform data to be transmitted first.
WFMOUTPRE:BYT_OR? might return :WFMOUTPRE:BYT_OR LSB indicating that the least significant data byte will be transmitted first.

WFMOutpre:ENCdg

Sets and queries the type of encoding for outgoing waveforms.

Group Waveform Transfer

Syntax WFMOutpre:ENCdg {ASCIi|BINary}
WFMOutpre:ENCdg?

Related Commands [DATA:ENCdg](#), [WFMOutpre:BYT_Nr](#), [WFMOutpre:BYT_Or](#), [WFMOutpre:BIT_Nr](#), [WFMOutpre:BN_Fmt](#)

Arguments ASCIi specifies that the outgoing data is to be in ASCII format. Waveforms will be sent as <NR1> numbers.

BINary specifies that outgoing data is to be in a binary format whose further specification is determined by [WFMOutpre:BYT_Nr](#), [WFMOutpre:BIT_Nr](#), [WFMOutpre:BN_Fmt](#) and [WFMOutpre:BYT_Or](#).

Examples WFMOUTPRE:ENCDG? might return :WFMOUTPRE:ENCDG BIN indicating that outgoing waveform data will be sent in binary format.

WFMOUTPRE:ENCDG ASC specifies that the outgoing waveform data will be sent in ASCII format.

WFMOutpre:NR_Pt? (Query Only)

Returns the number of points for the [DATA:SOURce](#) waveform that will be transmitted in response to a [CURVe?](#) query. The query command will time out and an error will be generated if the waveform specified by [DATA:SOURce](#) is not turned on.

Group Waveform Transfer

Syntax WFMOutpre:NR_Pt?

Related Commands [CURVe](#), [DATA](#), [DATA:START](#), [DATA:STOP](#), [SAVE:WAVEform](#), [SAVE:WAVEform:FILEFormat](#), [WFMInpre:NR_Pt](#)

Examples WFMOUTPRE:NR_PT? might return :WFMOUTPRE:NR_PT 10000 indicating that there are 10000 data points to be sent.

WFMOutpre:PT_Fmt? (Query Only)

Returns the point format for the outgoing waveform specified by the [DATA:SOURce](#) command. Returned values are either ENV, which indicates envelope mode format in which the data is returned as a series of min/max pairs, or Y, which indicates normal waveform points. The query command will time out and an error will be generated if the waveform specified by [DATA:SOURce](#) is not turned on.

Group Waveform Transfer

Syntax WFMOutpre:PT_Fmt?

Related Commands [CURVe](#), [DATA:SOURce](#)

Examples WFMOUTPRE:PT_FMT? might return :WFMOutpre:PT_Fmt ENV indicating that the waveform data is a series of min-max pairs.

WFMOutpre:PT_Off? (Query Only)

Always returns a 0 if the waveform specified by [DATA:SOURce](#) is on or displayed. If the waveform is not displayed, the query form generates an error and returns

event code 2244. This command is listed for compatibility with other Tektronix oscilloscopes.

Group Waveform Transfer

Syntax WFMOutpre:PT_Off?

Related Commands [DATA:SOURce](#)

WFMOutpre:PT_ORder? (Query Only)

Always returns LINEAr. This command is listed for compatibility with other Tektronix oscilloscopes. The query command will time out and an error will be generated if the waveform specified by [DATA:SOURce](#) is not turned on.

Group Waveform Transfer

Syntax WFMOutpre:PT_ORder?

Related Commands [DATA:SOURce](#)

WFMOutpre:WFId? (Query Only)

Returns a string describing several aspects of the acquisition parameters for the waveform specified by the [DATA:SOURce](#) command. The query command will time out and an error will be generated if the waveform specified by [DATA:SOURce](#) is not turned on.

Group Waveform Transfer

Syntax WFMOutpre:WFId?

Related Commands [DATA:SOURce](#)

Returns <QString> comprises the following comma-separated fields documented in the tables below:

Table 2-40: Waveform Suffixes

Field	Description	Examples
Source	The source identification string as it appears in the front-panel scale factor readouts.	"CH1-4" "Math1" "Ref1-4"
Coupling	A string describing the vertical coupling of the waveform (the Source1 waveform in the case of Dual Waveform Math).	"AC coupling" "DC coupling" "GND coupling"
Vert Scale	A string containing the vertical scale factor of the unzoomed waveform. The numeric portion will always be four digits. The examples cover all known internal units.	"100.0 mV/div" "20.00 dB/div" "45.00 deg/div" "785.4 mrad/div" "500.0 μ Vs/div" "10.00 kV/s/div" "200.0 mV/div" "50.00 unk/div"
Horiz Scale	A string containing the horizontal scale factor of the unzoomed waveform. The numeric portion will always be four digits. The examples cover all known internal units.	"100 ms/div" "10.00 kHz/div"
Record Length	A string containing the number of waveform points available in the entire record. The numeric portion is given as an integer.	"1000 points" "1000000 points"
Acquisition Mode	A string describing the mode used to acquire the waveform.	"Sample mode" "Pk Detect mode" "Envelope mode" "Average mode"

Examples WFMOUTPRE:WFID? might return :WFMOUTPRE:WFID "Ch1, DC coupling,100.0mvolts/div,500.0 μ s/div, 1000 points, Sample mode"

WFMOutpre:XINcr? (Query Only)

Returns the horizontal point spacing in units of WFMOutpre:XUNit for the waveform specified by the [DATA:SOURce](#) command. This value corresponds to the sampling interval. The query command will time out and an error will be generated if the waveform specified by [DATA:SOURce](#) is not turned on.

Group Waveform Transfer

Syntax WFMOutpre:XINcr?

Related Commands [DATA:SOURce](#), [WFMOUtpre:XUNit?](#)

Examples `WFMOUtpre:XINCR?` might return `:WFMOUtpre:XINCR 10.0000E-6` indicating that the horizontal sampling interval is 10 μ s/point.

WFMOUtpre:XUNit? (Query Only)

Returns the horizontal units for the waveform specified by the [DATA:SOURce](#) command. The query command will time out and an error will be generated if the waveform specified by [DATA:SOURce](#) is not turned on.

Group Waveform Transfer

Syntax `WFMOUtpre:XUNit?`

Related Commands [DATA:SOURce](#)

Examples `WFMOUtpre:XUNIT?` might return `:WFMOUtpre:XUNIT "HZ"` indicating that the horizontal units for the waveform are in Hertz.

WFMOUtpre:XZErO? (Query Only)

Returns the time coordinate of the first point in the outgoing waveform.

This value is in units of [WFMOUtpre:XUNit?](#). The query command will time out and an error will be generated if the waveform specified by [DATA:SOURce](#) is not turned on.

Group Waveform Transfer

Syntax `WFMOUtpre:XZErO?`

Related Commands [DATA:SOURce](#), [WFMOUtpre:XUNit?](#)

Examples `WFMOUtpre:XZERO?` might return `:WFMOUtpre:XZERO 5.6300E-9` indicating that the trigger occurred 5.63 ns before the first sample in the waveform record.

WFMOutpre:YMUlt? (Query Only)

Returns the vertical scale factor per digitizing level in units specified by WFMOutpre:YUNit for the waveform specified by the [DATA:SOURce](#) command. The query command will time out and an error is generated if the waveform specified by [DATA:SOURce](#) is not turned on.

See the description of [WFMInpre:YMUlt](#) to see how this scale factor is used to convert waveform sample values to volts.

Group Waveform Transfer

Syntax WFMOutpre:YMUlt?

Related Commands [DATA:SOURce](#), [WFMInpre:YMUlt](#)

Examples WFMOUTPRE:YMULT? might return :WFMOUTPRE:YMULT 4.0000E-3 indicating that the vertical scale for the corresponding waveform is 100 mV/div (for 8-bit waveform data).

WFMOutpre:YOFF? (Query Only)

Returns the vertical position in digitizing levels for the waveform specified by the [DATA:SOURce](#) command. The query command will time out and an error will be generated if the waveform specified by [DATA:SOURce](#) is not turned on.

See the description of [WFMInpre:YOFF](#) to see how this position is used to convert waveform sample values to volts.

Group Waveform Transfer

Syntax WFMOutpre:YOFF?

Related Commands [DATA:SOURce](#), [WFMOutpre:BYT_Nr](#)

Examples WFMOUTPRE:YOFF? might return :WFMOUTPRE:YOFF -50.0000E+0 indicating that the position indicator for the waveform was 50 digitizing levels (2 divisions) below center screen (for 8-bit waveform data).

WFMOutpre:YUNit? (Query Only)

Returns the vertical units for the waveform specified by the [DATA:SOURce](#) command. The query command will time out and an error will be generated if the waveform specified by [DATA:SOURce](#) is not turned on.

Group Waveform Transfer

Syntax WFMOutpre:YUNit?

Related Commands [DATA:SOURce](#)

Examples WFMOUTPRE:YUNIT? might return :WFMOUTPRE:YUNIT "dB" indicating that the vertical units for the waveform are measured in decibels.

WFMOutpre:YZEro? (Query Only)

Returns the vertical offset in units specified by [WFMOutpre:YUNit?](#) for the waveform specified by the [DATA:SOURce](#) command. The query command will time out and an error will be generated if the waveform specified by [DATA:SOURce](#) is not turned on.

See the description of [WFMinpre:YZEro](#) to see how this offset is used to convert waveform sample values to volts.

Group Waveform Transfer

Syntax WFMOutpre:YZEro?

Related Commands [DATA:SOURce](#), [WFMOutpre:YUNit?](#)

Examples WFMOUTPRE:YZERO? might return :WFMOUTPRE:YZERO -100.0000E-3 indicating that vertical offset is set to -100 mV.

ZOOM? (Query Only)

Returns the current vertical and horizontal positioning and scaling of the display.

Group Zoom

Syntax ZOOM?

Examples ZOOM? might return :ZOOM:MODE 1;GRATICULE:SIZE 80;SPLIT EIGHTYTWENTY;;ZOOM:ZOOM1:STATE 1;SCALE 400. 0000E-12;POSITION 46.8986;FACTOR 50.0000E+3;HORIZONTAL:POSITION 46.8986;SCALE 40 0.0000E-12

ZOOM:GRATICULE:SIZE? (Query Only)

Returns the size, in percent, of the Zoom (lower) graticule. The query always returns 80.

Group Zoom

Syntax ZOOM:GRATICULE:SIZE?

Examples ZOOM:GRATICULE:SIZE? always returns :ZOOM:GRATICULE:SIZE 80 indicating that the zoom graticule size is set to 80%.

ZOOM:GRATICULE:SPLIT? (Query Only)

Returns the sizes of the acquisition and zoom windows when Zoom is selected. The query always returns EIGHTYTWENTY.

Group Zoom

Syntax ZOOM:GRATICULE:SPLIT?

Related Commands [ZOOM{:MODE|:STATE}](#)

Examples ZOOM:GRATICULE:SPLIT? always returns :ZOOM:GRATICULE:SPLIT EIGHTYTWENTY, indicating that the display area is divided 80%/20% between the zoomed graticule and the acquisition graticule.

ZOOM{:MODE|:STATE}

Turns Zoom mode on or off. The Zoom query returns the current state of Zoom mode. This command is equivalent to pressing the zoom button located on the front panel.

Group Zoom

Syntax ZOOM{:MODE|:STATE} {ON|OFF|<NR1>}
ZOOM{:MODE|:STATE}

Arguments ON turns on Zoom mode.
OFF turns off Zoom mode.
<NR1> = 0 turns off Zoom mode; any other value turns on Zoom mode.

Examples ZOOM:MODE OFF turns off Zoom mode.
ZOOM:MODE? might return :ZOOM:MODE 1 indicating that Zoom mode is currently turned on.

ZOOM:ZOOM<x>? (Query Only)

Returns the current vertical and horizontal positioning and scaling of the display. <x> can only be 1.

Group Zoom

Syntax ZOOM:ZOOM<x>?

Examples ZOOM:ZOOM1? might return :ZOOM:ZOOM1:STATE 1;SCALE
400.0000E-12;POSITION 46.8986;FACTOR 50.0000E+3;HORIZO
NTAL:POSITION 46.8986;SCALE 400.0000E-12.

ZOOM:ZOOM<x>:FACTOR? (Query Only)

Returns the zoom factor of a particular zoom box. <x> can only be 1.

Group Zoom

Syntax ZOOM:ZOOM<x>:FACTOR?

Returns <NR1> is the zoom factor of a zoom box.

ZOOM:ZOOM<x>:HORIZONTAL:POSITION

Sets or returns the horizontal position for the specified zoom, where x is the integer 1 representing the single zoom window. <x> can only be 1.

Group Zoom

Syntax ZOOM:ZOOM<x>:HORIZONTAL:POSITION <NR3>
ZOOM:ZOOM<x>:HORIZONTAL:POSITION?

Arguments <NR3> is a value from 0 to 100.00 and is the percent of the upper window that is to the left of screen center, when the zoom factor is 1× or greater.

Examples ZOOM:ZOOM1:HORIZONTAL:POSITION 50 sets the Zoom1 reference pointer at 50% of acquired waveform.

ZOOM:ZOOM1:HORIZONTAL:POSITION? might return
:ZOOM1:HORIZONTAL:POSITION 50.0000 indicating that the Zoom1 reference pointer is currently set at 50% of acquired waveform.

ZOOM:ZOOM<x>:HORIZONTAL:SCALE

Sets or returns the zoom horizontal scale factor for the specified zoom, where x is the integer 1 representing the single zoom window. <x> can only be 1.

Group Zoom

Syntax ZOOM:ZOOM<x>:HORIZONTAL:SCALE <NR3>
ZOOM:ZOOM<x>:HORIZONTAL:SCALE?

Arguments <NR3> is the amount of expansion in the horizontal direction in 1-2 -5 increments.

Examples ZOOM:ZOOM1:HORIZONTAL:SCALE 5 sets the horizontal scale to 5 seconds.
ZOOM:ZOOM2:HORIZONTAL:SCALE? might return
:ZOOM2:HORIZONTAL:SCALE 1, indicating that the horizontal
scale is 1 second.

ZOOM:ZOOM<x>:POSITION

Sets the horizontal position of the zoom box, in terms of 0 to 100.0% of upper window. <x> can only be 1.

Group Zoom

Syntax ZOOM:ZOOM<x>:POSITION <NR3>
ZOOM:ZOOM<x>:POSITION?

Arguments <NR3> is the horizontal position as a percent of the upper window.

ZOOM:ZOOM<x>:SCALE

Sets or returns the horizontal scale of the zoom box. <x> can only be 1.

Group Zoom

Syntax ZOOM:ZOOM<x>:SCALE <NR3>
ZOOM:ZOOM<x>:SCALE?

Arguments <NR3> is the horizontal scale of the zoom box.

ZOOM:ZOOM<x>:STATE

Sets or returns the specified zoom on or off, where x is the integer 1 representing the single zoom window. <x> can only be 1.

Group Zoom

Syntax ZOOM:ZOOM<x>:STATE {ON|OFF|<NR1>}
ZOOM:ZOOM<x>:STATE?

Arguments ON turns Zoom 1 on.
 OFF turns Zoom 1 off.
 <NR1> = 0 disables the specified zoom; any other value enables the specified zoom.

Examples ZOOM:ZOOM<x>:STATE ON turns Zoom1 on.
 ZOOM:ZOOM<x>:STATE? might return :ZOOM:ZOOM1:STATE 1 indicating that Zoom1 is on.

Status and Events

The instrument provides a status and event reporting system for the Ethernet, GPIB (with the TEK-USB-488 Adapter), and USB interfaces. This system informs you of certain significant events that occur within the instrument.

The instrument status handling system consists of five 8-bit registers and two queues for each interface. The remaining Status subtopics describe these registers and components. They also explain how the event handling system operates.

Registers

Overview The registers in the event handling system fall into two functional groups:

- Status Registers contain information about the status of the instrument. They include the Standard Event Status Register (SESR).
- Enable Registers determine whether selected types of events are reported to the Status Registers and the Event Queue. They include the Device Event Status Enable Register (DESER), the Event Status Enable Register (ESER), and the Service Request Enable Register (SRER).

Status Registers

The Standard Event Status Register (SESR) and the Status Byte Register (SBR) record certain types of events that may occur while the instrument is in use. IEEE Std 488.2-1987 defines these registers.

Each bit in a Status Register records a particular type of event, such as an execution error or message available. When an event of a given type occurs, the instrument sets the bit that represents that type of event to a value of one. (You can disable bits so that they ignore events and remain at zero. See Enable Registers). Reading the status registers tells you what types of events have occurred.

The Standard Event Status Register (SESR). The SESR records eight types of events that can occur within the instrument. Use the *ESR? query to read the SESR register. Reading the register clears the bits of the register so that the register can accumulate information about new events.

NOTE. *TekVISA applications use SESR bit 6 to respond to any of several events, including some front panel actions.*

7	6	5	4	3	2	1	0
PON	URQ	CME	EXE	DDE	QYE	RQC	OPC

Figure 3-1: The Standard Event Status Register (SESR)

Table 3-1: SESR Bit Functions

Bit	Function	
7 (MSB)	PON	Power On. Shows that the oscilloscope was powered on. On completion, the diagnostic self tests also set this bit.
6	URQ	User Request. Indicates that an application event has occurred. *See note.
5	CME	Command Error. Shows that an error occurred while the oscilloscope was parsing a command or query.
4	EXE	Execution Error. Shows that an error executing a command or query.
3	DDE	Device Error. Shows that a device error occurred.
2	QYE	Query Error. Either an attempt was made to read the Output Queue when no data was present or pending, or that data in the Output Queue was lost.
1	RQC	Request Control. This is not used.
0 (LSB)	OPC	Operation Complete. Shows that the operation is complete. This bit is set when all pending operations complete following an *OPC command.

The Status Byte Register (SBR). Records whether output is available in the Output Queue, whether the instrument requests service, and whether the SESR has recorded any events.

Use a Serial Poll or the *STB? query to read the contents of the SBR. The bits in the SBR are set and cleared depending on the contents of the SESR, the Event Status Enable Register (ESER), and the Output Queue. When you use a Serial Poll to obtain the SBR, bit 6 is the RQS bit. When you use the *STB? query to obtain the SBR, bit 6 is the MSS bit. Reading the SBR does not clear the bits.

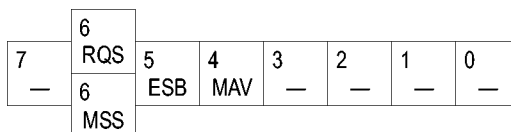 


Figure 3-2: The Status Byte Register (SBR)

Table 3-2: SBR Bit Functions

Bit	Function	
7 (MSB)	—	Not used.
6	RQS	Request Service. Obtained from a serial poll. Shows that the oscilloscope requests service from the GPIB controller.
6	MSS	Master Status Summary. Obtained from *STB? query. Summarizes the ESB and MAV bits in the SBR.
5	ESB	Event Status Bit. Shows that status is enabled and present in the SESR.

Table 3-2: SBR Bit Functions, (cont.)

Bit	Function
4	MAV Message Available. Shows that output is available in the Output Queue.
3	———— Not used.
2	———— Not used.
1-0	———— Not used.

Enable Registers

DESER, ESER, and SRER allow you to select which events are reported to the Status Registers and the Event Queue. Each Enable Register acts as a filter to a Status Register (the DESER also acts as a filter to the Event Queue) and can prevent information from being recorded in the register or queue.

Each bit in an Enable Register corresponds to a bit in the Status Register it controls. In order for an event to be reported to a bit in the Status Register, the corresponding bit in the Enable Register must be set to one. If the bit in the Enable Register is set to zero, the event is not recorded.

Various commands set the bits in the Enable Registers. The Enable Registers and the commands used to set them are described below.

The Device Event Status Enable Register (DESER). This register controls which types of events are reported to the SESR and the Event Queue. The bits in the DESER correspond to those in the SESR.

Use the DESE command to enable and disable the bits in the DESER. Use the DESE? query to read the DESER.

7	6	5	4	3	2	1	0
PON	URQ	CME	EXE	DDE	QYE	RQC	OPC

Figure 3-3: The Device Event Status Enable Register (DESER)

The Event Status Enable Register (ESER). This register controls which types of events are summarized by the Event Status Bit (ESB) in the SBR. Use the *ESE command to set the bits in the ESER. Use the *ESE? query to read it.

7	6	5	4	3	2	1	0
PON	URQ	CME	EXE	DDE	QYE	RQC	OPC

Figure 3-4: The Event Status Enable Register (ESER)

The Service Request Enable Register (SRER). This register controls which bits in the SBR generate a Service Request and are summarized by the Master Status Summary (MSS) bit.

Use the *SRE command to set the SRER. Use the *SRE? query to read the register. The RQS bit remains set to one until either the Status Byte Register is read with a Serial Poll or the MSS bit changes back to a zero.

7	6	5	4	3	2	1	0
—	—	ESB	MAV	—	—	—	—

Figure 3-5: The Service Request Enable Register (SRER)

***PSC Command** The *PSC command controls the Enable Registers contents at power-on. Sending *PSC 1 sets the Enable Registers at power on as follows:

- DESER 255 (equivalent to a DESe 255 command)
- ESER 0 (equivalent to an *ESE 0 command)
- SRER 0 (equivalent to an *SRE 0 command)

Sending *PSC 0 lets the Enable Registers maintain their values in nonvolatile memory through a power cycle.

Note: To enable the PON (Power On) event to generate a Service Request, send *PSC 0, use the DESe and *ESE commands to enable PON in the DESER and ESER, and use the *SRE command to enable bit 5 in the SRER. Subsequent power-on cycles will generate a Service Request.

Queues

The *PSC command controls the Enable Registers contents at power-on. Sending *PSC 1 sets the Enable Registers at power on as follows:

Output Queue The instrument stores query responses in the Output Queue and empties this queue each time it receives a new command or query message after an <EOM>. The controller must read a query response before it sends the next command (or query) or it will lose responses to earlier queries.



CAUTION. When a controller sends a query, an <EOM>, and a second query, the instrument normally clears the first response and outputs the second while reporting a Query Error (QYE bit in the ESER) to indicate the lost response. A fast controller, however, may receive a part or all of the first response as well. To avoid this situation, the controller should always read the response immediately after sending any terminated query message or send a DCL (Device Clear) before sending the second query.

Event Queue The Event Queue stores detailed information on up to 33 events. If more than 32 events stack up in the Event Queue, the 32nd event is replaced by event code 350, "Queue Overflow."

Read the Event Queue with the `EVENT?` query (which returns only the event number), with the `EVMSG?` query (which returns the event number and a text description of the event), or with the `ALLEV?` query (which returns all the event numbers along with a description of the event). Reading an event removes it from the queue.

Before reading an event from the Event Queue, you must use the `*ESR?` query to read the summary of the event from the SESR. This makes the events summarized by the `*ESR?` read available to the `EVENT?` and `EVMSG?` queries, and empties the SESR.

Reading the SESR erases any events that were summarized by previous `*ESR?` reads but not read from the Event Queue. Events that follow an `*ESR?` read are put in the Event Queue but are not available until `*ESR?` is used again.

Event Handling Sequence

The figure below shows how to use the status and event handling system. In the explanation that follows, numbers in parentheses refer to numbers in the figure.

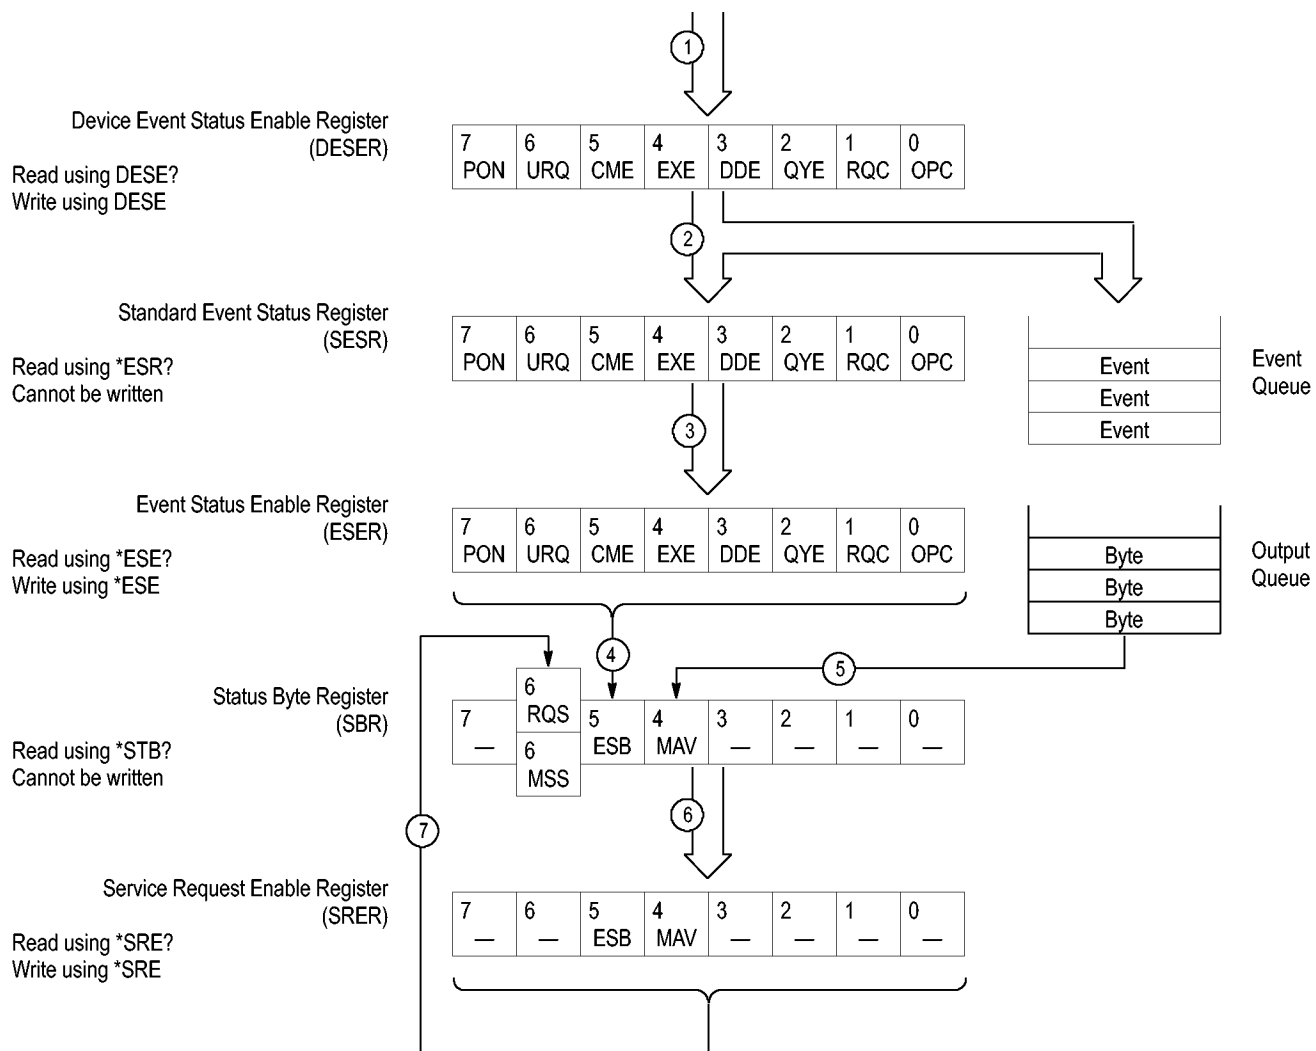


Figure 3-6: Status and Event Handling Process

When an event occurs, a signal is sent to the DESER (1). If that type of event is enabled in the DESER (that is, if the bit for that event type is set to 1), the appropriate bit in the SESR is set to one, and the event is recorded in the Event Queue (2). If the corresponding bit in the ESER is also enabled (3), then the ESB bit in the SBR is set to one (4).

When output is sent to the Output Queue, the MAV bit in the SBR is set to one (5).

When a bit in the SBR is set to one and the corresponding bit in the SRER is enabled (6), the MSS bit in the SBR is set to one and a service request is generated (7).

Synchronization Methods

Overview Although most commands are completed almost immediately after being received by the instrument, some commands start a process that requires more time. For example, once a single sequence acquisition command is executed, depending upon the applied signals and trigger settings, it may be a few seconds before the acquisition is complete. Rather than remain idle while the operation is in process, the instrument will continue processing other commands. This means that some operations will not be completed in the order that they were sent.

Sometimes the result of an operation depends on the result of an earlier operation. A first operation must complete before the next one gets processed. The instrument status and event reporting system provides ways to do this.

The Operation Complete (OPC) bit of the Standard Event Status Register (SESR) can be programmed to indicate when certain oscilloscope operations have completed and, by setting the Event Status Enable Register (ESER) to report OPC in the Event Status Bit (ESB) of the Status Byte Register (SBR) and setting the Service Request Enable Register (SRER) to generate service request upon a positive transition of the ESB, a service request (SRQ) interrupt can be generated when certain operations complete as described in this section.

The following oscilloscope operations can generate OPC:

- :ACQUIRE:STATE <non-zero nr1> | ON | RUN only when in single sequence acquisition mode
- :CALIBRATE:INTERNAL
:CALIBRATE:INTERNAL:START
- :CALIBRATE:FACTORY START
:CALIBRATE:FACTORY CONTINUE
:CALIBRATE:FACTORY PREVIOUS
- :HARDCOPY
:HARDCOPY START
- :DIAG:INDIVIDUAL ON
:DIAG:STATE EXECUTE
- :SAVE:IMAGE <file as quoted string>
- :SAVE:SETUP <file as quoted string>
- :RECALL:SETUP <file as quoted string>
- :SAVE:WAVEFORM <file as quoted string>
- :RECALL:WAVEFORM <file as quoted string>
- :CH<1-4>:PROBE:DEGAUSS EXECUTE
:CH<1-4>:PROBE:AUTOZERO EXECUTE
:AUXIN:PROBE:DEGAUSS EXECUTE
:AUXIN:PROBE:AUTOZERO EXECUTE
- TEKSecure

For example, a typical application might involve acquiring a single-sequence waveform and then taking a measurement on the acquired waveform. You could use the following command sequence to do this:

```

/** Set up conditional acquisition */
ACQUIRE:STATE OFF
SELECT:CH1 ON
HORIZONTAL:RECORDLENGTH 1000
ACQUIRE:MODE SAMPLE
ACQUIRE:STOPAFTER SEQUENCE
/** Acquire waveform data */
ACQUIRE:STATE ON
/** Set up the measurement parameters */
MEASUREMENT:IMMED:TYPE AMPLITUDE
MEASUREMENT:IMMED:SOURCE CH1
/** Take amplitude measurement */

```

MEASUREMENT: MEAS1:VALUE

The acquisition of the waveform requires extended processing time. It may not finish before the instrument takes an amplitude measurement (see the following figure). This can result in an incorrect amplitude value.

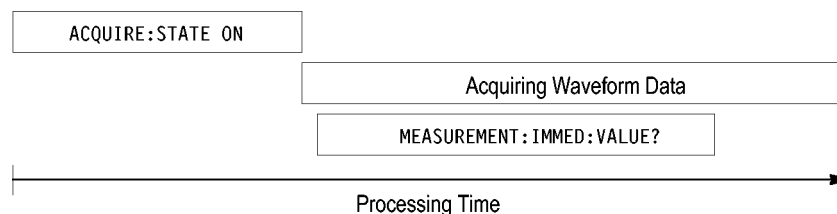 


Figure 3-7: Command Processing Without Using Synchronization

To ensure the instrument completes waveform acquisition before taking the measurement on the acquired data, you can synchronize the program.

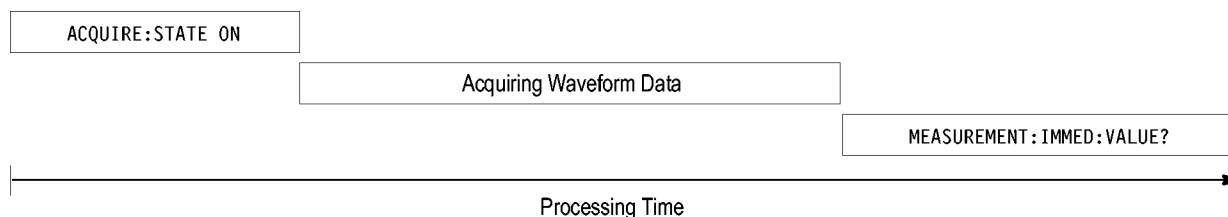 


Figure 3-8: Processing Sequence With Synchronization

You can use four commands to synchronize the operation of the instrument with your application program: *WAI, BUSY, *OPC, and *OPC

Using the *WAI Command

The *WAI command forces completion of previous commands that generate an OPC message. No commands after the *WAI are processed before the OPC message(s) are generated

The same command sequence using the *WAI command for synchronization looks like this:

```

/* Set up conditional acquisition */
ACQUIRE:STATE OFF
SELECT:CH1 ON
HORIZONTAL:RECORDLENGTH 1000
ACQUIRE:MODE SAMPLE
ACQUIRE:STOPAFTER SEQUENCE
/* Acquire waveform data */
ACQUIRE:STATE ON
/* Set up the measurement parameters */
MEASUREMENT:IMMED:TYPE AMPLITUDE
MEASUREMENT:IMMED:SOURCE CH1

```

```

/* wait until the acquisition is complete before taking
the measurement*/
*/
*WAI
/* Take amplitude measurement */
MEASUREMENT:IMMED:VALUE

```

The controller can continue to write commands to the input buffer of the instrument, but the commands will not be processed by the instrument until all OPC operations in process are complete. If the input buffer becomes full, the controller will be unable to write more commands to the buffer. This can cause a time-out.

Using the BUSY Query

The BUSY? query allows you to find out whether the instrument is busy processing a command that has an extended processing time such as single-sequence acquisition.

The same command sequence, using the BUSY? query for synchronization, looks like this:

```

/* Set up conditional acquisition */
ACQUIRE:STATE OFF
SELECT:CH1 ON
HORIZONTAL:RECORDLENGTH 1000
ACQUIRE:MODE SAMPLE
ACQUIRE:STOPAFTER SEQUENCE
/* Acquire waveform data */
ACQUIRE:STATE ON
/* Set up the measurement parameters */
MEASUREMENT:IMMED:TYPE AMPLITUDE
MEASUREMENT:IMMED:SOURCE CH1
/* wait until the acquisition is complete before taking
the measurement */
while BUSY keep looping
/* Take amplitude measurement */
MEASUREMENT:IMMED:VALUE

```

This sequence lets you create your own wait loop rather than using the *WAI command. The BUSY? query helps you avoid time-outs caused by writing too many commands to the input buffer. The controller is still tied up though, and the repeated BUSY? query will result in more bus traffic.

Using the *OPC Command

If the corresponding status registers are enabled, the *OPC command sets the OPC bit in the Standard Event Status Register (SESR) when an operation is complete. You achieve synchronization by using this command with either a serial poll or service request handler.

Serial Poll Method: Enable the OPC bit in the Device Event Status Enable Register (DESER) and the Event Status Enable Register (ESER) using the DESE and *ESE commands.

When the operation is complete, the OPC bit in the Standard Event Status Register (SESR) will be enabled and the Event Status Bit (ESB) in the Status Byte Register will be enabled.

The same command sequence using the *OPC command for synchronization with serial polling looks like this:

```
/* Set up conditional acquisition */
ACQUIRE:STATE OFF
SELECT:CH1 ON
HORIZONTAL:RECORDLENGTH 1000
ACQUIRE:MODE SAMPLE
ACQUIRE:STOPAFTER SEQUENCE
/* Enable the status registers */
DESE 1
*ESE 1
*SRE 0
/* Acquire waveform data */
ACQUIRE:STATE ON
/* Set up the measurement parameters */
MEASUREMENT:IMMED:TYPE AMPLITUDE
MEASUREMENT:IMMED:SOURCE CH1
/* wait until the acquisition is complete before taking the
measurement.*/
*OPC
while serial poll = 0, keep looping
/* Take amplitude measurement */
MEASUREMENT:IMMED:VALUE
```

This technique requires less bus traffic than did looping on BUSY.

Service Request Method: Enable the OPC bit in the Device Event Status Enable Register (DESER) and the Event Status Enable Register (ESER) using the DESE and *ESE commands.

You can also enable service requests by setting the ESB bit in the Service Request Enable Register (SRER) using the *SRE command. When the operation is complete, a Service Request will be generated.

The same command sequence using the *OPC command for synchronization looks like this

```
/* Set up conditional acquisition */
ACQUIRE:STATE OFF
SELECT:CH1 ON
HORIZONTAL:RECORDLENGTH 1000
ACQUIRE:MODE SAMPLE
```

```

ACQUIRE:STOPAFTER SEQUENCE
/* Enable the status registers */
DESE 1
*ESE 1
*SRE 32
/* Acquire waveform data */
ACQUIRE:STATE ON
/* Set up the measurement parameters */
MEASUREMENT:IMMED:TYPE AMPLITUDE
MEASUREMENT:IMMED:SOURCE CH1
/* wait until the acquisition is complete before taking the
measurement*/
*OPC

```

The program can now do different tasks such as talk to other devices. The SRQ, when it comes, interrupts those tasks and returns control to this task.

```

/* Take amplitude measurement */
MEASUREMENT:IMMED:VALUE

```

This technique is more efficient but requires more sophisticated programming.

Using the *OPC? Query

The *OPC? query places a 1 in the Output Queue once an operation that generates an OPC message is complete. A time out could occur if you try to read the output queue before there is any data in it.

The same command sequence using the *OPC? query for synchronization looks like this:

```

/* Set up conditional acquisition */
ACQUIRE:STATE OFF
SELECT:CH1 ON
HORIZONTAL:RECORDLENGTH 1000
ACQUIRE:MODE SAMPLE
ACQUIRE:STOPAFTER SEQUENCE
/* Acquire waveform data */
ACQUIRE:STATE ON
/* Set up the measurement parameters */
MEASUREMENT:IMMED:TYPE AMPLITUDE
MEASUREMENT:IMMED:SOURCE CH1
/* wait until the acquisition is complete before taking the
measurement*/
*OPC

```

Wait for read from Output Queue.

```

/* Take amplitude measurement */
MEASUREMENT:IMMED:VALUE

```

This is the simplest approach. It requires no status handling or loops. However, you must set the controller time-out for longer than the acquisition operation.

Messages The information contained in the topic tabs above covers all the programming interface messages the instrument generates in response to commands and queries.

For most messages, a secondary message from the instrument gives more detail about the cause of the error or the meaning of the message. This message is part of the message string and is separated from the main message by a semicolon.

Each message is the result of an event. Each type of event sets a specific bit in the SESR and is controlled by the equivalent bit in the DESER. Thus, each message is associated with a specific SESR bit. In the message tables, the associated SESR bit is specified in the table title, with exceptions noted with the error message text.

No Event The following table shows the messages when the system has no events or status to report. These have no associated SESR bit.

Table 3-3: No Event Messages

Code	Message
0	No events to report; queue empty
1	No events to report; new events pending *ESR?

Command Error The following table shows the command error messages generated by improper syntax. Check that the command is properly formed and that it follows the rules in the section on command Syntax.

Table 3-4: Command Error Messages (CME Bit 5)

Code	Message
100	Command error
101	Invalid character
102	Syntax error
103	Invalid separator
104	Data type error
105	GET not allowed
108	Parameter not allowed
109	Missing parameter
110	Command header error
112	Program mnemonic too long
113	Undefined header
120	Numeric data error
121	Invalid character in numeric
123	Exponent too large
124	Too many digits
130	Suffix error

Table 3-4: Command Error Messages (CME Bit 5), (cont.)

Code	Message
131	Invalid suffix
134	Suffix too long
140	Character data error
141	Invalid character data
144	Character data too long
150	String data error
151	Invalid string data
152	String data too long
160	Block data error
161	Invalid block data
170	Command expression error
171	Invalid expression

Execution Error

The following table lists the execution errors that are detected during execution of a command.

Table 3-5: Execution Error Messages (EXE Bit 4)

Code	Message
200	Execution error
221	Settings conflict
222	Data out of range
224	Illegal parameter value
241	Hardware missing
250	Mass storage error
251	Missing mass storage
252	Missing media
253	Corrupt media
254	Media full
255	Directory full
256	File name not found
257	File name error
258	Media protected
259	File name too long
270	Hardcopy error
271	Hardcopy device not responding
272	Hardcopy is busy

Table 3-5: Execution Error Messages (EXE Bit 4), (cont.)

Code	Message
273	Hardcopy aborted
274	Hardcopy configuration error
280	Program error
282	Insufficient network printer information
283	Network printer not responding
284	Network printer server not responding
286	Program runtime error
287	Print server not found
2200	Measurement error, Measurement system error
2201	Measurement error, Zero period
2202	Measurement error, No period, second waveform
2203	Measurement error, No period, second waveform
2204	Measurement error, Low amplitude, second waveform
2205	Measurement error, Low amplitude, second waveform
2206	Measurement error, Invalid gate
2207	Measurement error, Measurement overflow
2208	Measurement error, No backwards Mid Ref crossing
2209	Measurement error, No second Mid Ref crossing
2210	Measurement error, No Mid Ref crossing, second waveform
2211	Measurement error, No backwards Mid Ref crossing
2212	Measurement error, No negative crossing
2213	Measurement error, No positive crossing
2214	Measurement error, No crossing, target waveform
2215	Measurement error, No crossing, second waveform
2216	Measurement error, No crossing, target waveform
2217	Measurement error, Constant waveform
2219	Measurement error, No valid edge - No arm sample
2220	Measurement error, No valid edge - No arm cross
2221	Measurement error, No valid edge - No trigger cross
2222	Measurement error, No valid edge - No second cross
2223	Measurement error, Waveform mismatch
2224	Measurement error, WAIT calculating
2225	Measurement error, No waveform to measure
2226	Measurement error, Null Waveform
2227	Measurement error, Positive and Negative Clipping
2228	Measurement error, Positive Clipping
2229	Measurement error, Negative Clipping

Table 3-5: Execution Error Messages (EXE Bit 4), (cont.)

Code	Message
2230	Measurement error, High Ref < Low Ref
2231	Measurement error, No statistics available
2233	Requested waveform is temporarily unavailable
2235	Math error, invalid math description
2240	Invalid password
2241	Waveform requested is invalid
2244	Source waveform is not active
2245	Saveref error, selected channel is turned off
2250	Reference error, the reference waveform file is invalid
2253	Reference error, too many points received
2254	Reference error, too few points received
2259	File too big
2270	Alias error
2271	Alias syntax error
2273	Illegal alias label
2276	Alias expansion error
2277	Alias redefinition not allowed
2278	Alias header not found
2285	TekSecure(R) Pass
2286	TekSecure(R) Fail
2500	Setup error, file does not look like a setup file
2501	Setup warning, could not recall all values from external setup
2620	Mask error, too few points received
2760	Mark limit reached
2761	No mark present
2762	Search copy failed

Device Error

The following table lists the device errors that can occur during instrument operation. These errors may indicate that the instrument needs repair.

Table 3-6: Device Error Messages (DDE Bit 3)

Code	Message
310	System error
311	Memory error

Table 3-6: Device Error Messages (DDE Bit 3), (cont.)

Code	Message
312	PUD memory lost
314	Save/recall memory lost

System Event The following table lists the system event messages. These messages are generated whenever certain system conditions occur.

Table 3-7: System Event Messages

Code	Message
400	Query event
401	Power on (PON bit 7 set)
402	Operation complete (OPC bit 0 set)
403	User request (URQ bit 6 set)
404	Power fail (DDE bit 3 set)
405	Request control
410	Query INTERRUPTED (QYE bit 2 set)
420	Query UNTERMINATED (QYE bit 2 set)
430	Query DEADLOCKED (QYE bit 2 set)
440	Query UNTERMINATED after indefinite response (QYE bit 2 set)
468	Knob/Keypad value changed
472	Application variable changed

Execution Warning The following table lists warning messages that do not interrupt the flow of command execution. These notify you that you may get unexpected results.

Table 3-8: Execution Warning Messages (EXE Bit 4)

Code	Message
528	Parameter out of range
532	Curve data too long, Curve truncated
533	Curve error, Preamble values are inconsistent
540	Measurement warning, Uncertain edge
541	Measurement warning, Low signal amplitude
542	Measurement warning, Unstable histogram
543	Measurement warning, Low resolution
544	Measurement warning, Uncertain edge
545	Measurement warning, Invalid in minmax
546	Measurement warning, Need 3 edges

Table 3-8: Execution Warning Messages (EXE Bit 4), (cont.)

Code	Message
547	Measurement warning, Clipping positive/negative
548	Measurement warning, Clipping positive
549	Measurement warning, Clipping negative

Table 3-9: Execution Warning Messages (EXE Bit 4)

Code	Message
540	Measurement warning
541	Measurement warning, Low signal amplitude
542	Measurement warning, Unstable histogram
543	Measurement warning, Low resolution
544	Measurement warning, Uncertain edge
545	Measurement warning, Invalid min max
546	Measurement warning, Need 3 edges
547	Measurement warning, Clipping positive/negative
548	Measurement warning, Clipping positive
549	Measurement warning, Clipping negative

Internal Warning

The following table shows internal errors that indicate an internal fault in the instrument.


Table 3-10: Internal Warning Messages

Code	Message
630	Internal warning, 50Ω overload

Appendix A: Character Set

B7 B6 B5 BITS B4 B3 B2 B1	0 0	0 0 1	0 1 0	0 1 1	1 0 0	1 0 1	1 1 0	1 1 1
	CONTROL		NUMBERS SYMBOLS		UPPER CASE		LOWER CASE	
0 0 0 0	0 NUL	20 DLE	40 SP	60 0	100 @	120 P	140 ' SA0	160 p SA16
0 0 0 1	1 SOH	21 DC1	41 !	61 1	101 A	121 Q	141 a SA1	161 q SA17
0 0 1 0	2 STX	22 DC2	42 "	62 2	102 B	122 R	142 b SA2	162 r SA18
0 0 1 1	3 ETX	23 DC3	43 #	63 3	103 C	123 S	143 c SA3	163 s SA19
0 1 0 0	4 EOT	24 DC4	44 \$	64 4	104 D	124 T	144 d SA4	164 t SA20
0 1 0 1	5 ENQ	25 NAK	45 %	65 5	105 E	125 U	145 e SA5	165 u SA21
0 1 1 0	6 ACK	26 SYN	46 &	66 6	106 F	126 V	146 f SA6	166 v SA22
0 1 1 1	7 BEL	27 ETB	47 ' LA7	67 7	107 G	127 W	147 g SA7	167 w SA23
1 0 0 0	8 BS	30 CAN	50 (LA8	70 8	110 H	130 X	150 h SA8	170 x SA24
1 0 0 1	9 HT	31 EM	51) LA9	71 9	111 I	131 Y	151 i SA9	171 y SA25
1 0 1 0	A LF	32 SUB	52 * LA10	72 :	112 J	132 Z	152 j SA10	172 z SA26
1 0 1 1	B VT	33 ESC	53 + LA11	73 ; LA27	113 K	133 [153 k SA11	173 { SA27
1 1 0 0	C FF	34 FS	54 , LA12	74 < LA28	114 L	134 \	154 l SA12	174 SA28
1 1 0 1	D CR	35 GS	55 - LA13	75 = LA29	115 M	135]	155 m SA13	175 } SA29
1 1 1 0	E SO	36 RS	56 . LA14	76 > LA30	116 N	136 ^	156 n SA14	176 ~ SA30
1 1 1 1	F SI	37 US	57 / LA15	77 ? UNL	117 O	137 -	157 o SA15	177 RUBOUT (DEL)
	ADDRESSED COMMANDS	UNIVERSAL COMMANDS	LISTEN ADDRESSES	TALK ADDRESSES	SECONDARY ADDRESSES OR COMMANDS			

 KEY



Tektronix

REF: ANSI STD X3.4-1977
IEEE STD 488.1-1987
ISO STD 646-2973

Index

A

ACQUIRE:MAXSAMPLERATE?, 2-47
ACQUIRE?, 2-47
ACQUIRE:MODE, 2-47
ACQUIRE:NUMACQ?, 2-49
ACQUIRE:NUMAVG, 2-49
ACQUIRE:STATE, 2-50
ACQUIRE:STOPAFTER, 2-50
Acquisition Command Group, 2-11
Alias Command Group, 2-11
ALIAS, 2-51
ALIAS[:STATE], 2-54
ALIAS:CATALOG?, 2-52
ALIAS:DEFINE, 2-52
ALIAS:DELETE, 2-53
ALIAS:DELETE[:NAME], 2-54
ALIAS:DELETE:ALL, 2-53
ALLEV?, 2-55
AUTOSet, 2-55
AUXIN:PROBE:AUTOZERO, 2-56
AUXIN:PROBE:DEGAUSS:STATE?, 2-57
AUXIN:PROBE:FORCEDRANGE, 2-57
AUXIN:PROBE:ID:SERNUMBER?, 2-57
AUXIN:PROBE:ID:TYPE?, 2-58
AUXIN:PROBE:RESISTANCE?, 2-58
AUXIN?, 2-55
AUXIN:PROBE:DEGAUSS, 2-56
AUXIN:PROBE:GAIN, 2-57
AUXIN:PROBE:UNITS?, 2-58
AUXOUT?, 2-59

B

BUS, 2-59
BUS:B<x>:CAN:BITRATE, 2-59
BUS:B<x>:CAN:PROBE, 2-60
BUS:B<x>:CAN:SAMPLEPOINT, 2-60
BUS:B<x>:CAN:SOURCE, 2-61
BUS:B<x>:DISPLAY:FORMAT, 2-61
BUS:B<x>:DISPLAY:TYPE, 2-62
BUS:B<x>:I2C{:CLOCK|:SCLK}:SOURCE, 2-62
BUS:B<x>:I2C{:DATA|:SDATA}:SOURCE, 2-62
BUS:B<x>:POSITION, 2-63
BUS:B<x>:SPI:DATA{:IN|:MISO}:POLARITY, 2-64

BUS:B<x>:SPI:DATA{:IN|:MISO}:SOURCE, 2-64
BUS:B<x>:SPI:DATA{:OUT|:MOSI}:
POLARITY, 2-65
BUS:B<x>:SPI:DATA{:OUT|:MOSI}:SOURCE, 2-65
BUS:B<x>:SPI{:CLOCK|:SCLK}:POLARITY, 2-63
BUS:B<x>:SPI{:CLOCK|:SCLK}:SOURCE, 2-63
BUS:B<x>:SPI{:SELECT|:SS}:POLARITY, 2-65
BUS:B<x>:SPI{:SELECT|:SS}:SOURCE, 2-66
BUS:B<x>:STATE, 2-66
BUS:B<x>:TYPE, 2-67
BUS:THRESHOLD:CH<x>, 2-67
BUSY?, 2-67

C

CAL?, 2-68
*CAL?, 2-68
CALIBRATE:FACTORY:STATUS?, 2-69
CALIBRATE:FACTORY:STEPSTATUS?, 2-70
CALIBRATE:FACTORY:STEPSTIMULUS?, 2-70
CALIBRATE:INTERNAL:START, 2-71
CALIBRATE:INTERNAL:STATUS?, 2-72
CALIBRATE:RESULTS:FACTORY?, 2-73
CALIBRATE:RESULTS:SPC?, 2-73
CALIBRATE:FACTORY, 2-69
CALIBRATE:INTERNAL, 2-71
CALIBRATE:RESULTS?, 2-72
Calibration and Diagnostic Command Group, 2-13
CH<x>:BANDWIDTH, 2-74
CH<x>:COUPLING, 2-75
CH<x>:DESKew, 2-75
CH<x>:INVERT, 2-76
CH<x>:OFFSET, 2-76
CH<x>:POSITION, 2-78
CH<x>:PROBE:AUTOZERO, 2-79
CH<x>:PROBE:DEGAUSS, 2-79
CH<x>:PROBE:DEGAUSS:STATE?, 2-79
CH<x>:PROBE:FORCEDRANGE, 2-80
CH<x>:PROBE:GAIN, 2-80
CH<x>:PROBE:ID:SERNUMBER?, 2-81
CH<x>:PROBE:ID:TYPE?, 2-81
CH<x>:PROBE:ID?, 2-81
CH<x>:PROBE:RESISTANCE?, 2-82
CH<x>:PROBE:UNITS?, 2-82

CH<x>:PRObe?, 2-79
CH<x>:SCALE, 2-82
CH<x>:TERmination, 2-83
CH<x>:YUNits, 2-84
CH<x>?, 2-74
CLEARMenu, 2-84
*CLS, 2-85
Command Groups, 2-11
Cursor Command Group, 2-14
CURSor:HBArS:POSITION<x>, 2-87
CURSor:VBArS:HPOS<x>?, 2-90
CURSor:VBArS:POSITION<x>, 2-91
CURSor:VBArS:VDELtA?, 2-92
CURSor?, 2-85
CURSor:FUNcTION, 2-86
CURSor:HBArS?, 2-86
CURSor:HBArS:DELtA?, 2-87
CURSor:HBArS:UNItS, 2-88
CURSor:HBArS:USE, 2-88
CURSor:MODE, 2-89
CURSor:VBArS?, 2-89
CURSor:VBArS:DELtA?, 2-90
CURSor:VBArS:UNItS, 2-91
CURSor:VBArS:USE, 2-92
CURVe, 2-93

D

DATA, 2-94
DATA:DESTination, 2-95
DATA:ENCdg, 2-96
DATA:SOURce, 2-97
DATA:START, 2-98
DATA:STOP, 2-98
DATA:WIDth, 2-99
DATE, 2-100
*DDT, 2-100
DESE, 2-101
DIAG:LOOP:OPTion:NTIMes, 2-102
DIAG:SELEct:<function>, 2-104
DIAG:LOOP:OPTion, 2-102
DIAG:LOOP:STOP, 2-102
DIAG:RESUlt:FLAg?, 2-103
DIAG:RESUlt:LOG?, 2-103
DIAG:SELEct:ALL, 2-104
DIAG:STATE, 2-105
Display Command Group, 2-15
DISPlay:INTENSITy:BACKLIght, 2-107

DISPlay:INTENSITy:GRATICule, 2-107
DISPlay:INTENSITy:WAVEform, 2-108
DISPlay:STYle:DOTsonly, 2-109
DISPlay?, 2-105
DISPlay:CLOCK, 2-105
DISPlay:GRATICule, 2-106
DISPlay:INTENSITy?, 2-107
DISPlay:PERSistence, 2-108

E

*ESE, 2-110
*ESR?, 2-110
Ethernet Command Group, 2-16
ETHERnet:DNS:IPADDRESS, 2-111
ETHERnet:ENET:ADDRESS?, 2-112
ETHERnet:GATEWay:IPADDRESS, 2-112
ETHERnet:PING:STATUS?, 2-115
ETHERnet:DHCPbootp, 2-111
ETHERnet:DOMAINname, 2-112
ETHERnet:HTTpport, 2-113
ETHERnet:IPADDRESS, 2-113
ETHERnet:NAME, 2-114
ETHERnet:PASSWord, 2-114
ETHERnet:PING, 2-114
ETHERnet:SUBNETMask, 2-115
EVENT?, 2-116
EVMsg?, 2-116
EVQty?, 2-117

F

FACTory, 2-117
File System Command Group, 2-17
FILESystem:FREESpace?, 2-121
FILESystem?, 2-118
FILESystem:CWD, 2-118
FILESystem:DELEte, 2-119
FILESystem:DIR?, 2-120
FILESystem:FORMAt, 2-120
FILESystem:MKDir, 2-121
FILESystem:REName, 2-121
FILESystem:RMDir, 2-122
FPAnel:PRESS, 2-122
FPAnel:TURN, 2-124

H

Hard copy Command Group, 2-18

HARDCopy, 2-125
 HARDCopy:ACTIVeprinter, 2-125
 HARDCopy:PRINTer:ADD, 2-127
 HARDCopy:PRINTer:DELeTe, 2-128
 HARDCopy:PRINTer:LIST?, 2-128
 HARDCopy:PRINTer:REName, 2-128
 HARDCopy:INKSaver, 2-126
 HARDCopy:LAYout, 2-126
 HARDCopy:PREVIEW, 2-127
 HDR, 2-129
 HEADer, 2-129
 Horizontal Command Group, 2-18
 HORizontal:[MAIn]:DELay:STATe, 2-131
 HORizontal:ACQLENGTH?, 2-131
 HORizontal:MAIn:SAMPLERate?, 2-133
 HORizontal:MAIn:SECdiv, 2-133
 HORizontal:MAIn:UNIts:STRing?, 2-134
 HORizontal:MAIn:UNIts?, 2-134
 HORizontal:PREViewstate?, 2-135
 HORizontal:RECOrdlength, 2-135
 HORizontal?, 2-130
 HORizontal[:MAIn]:DELay:MODE, 2-131
 HORizontal[:MAIn]:DELay:TIME, 2-132
 HORizontal[:MAIn]:POSition?, 2-132
 HORizontal[:MAIn]:SCALE, 2-133
 HORizontal:MAIn?, 2-131

I

ID?, 2-136
 *IDN?, 2-136

L

LANGUage, 2-136
 LOCK, 2-137
 *LRN?, 2-137

M

Mark Command Group, 2-19
 MARK, 2-138
 MARK:SELeCted:FOCUS?, 2-140
 MARK:SELeCted:MARKSINCOLumn?, 2-140
 MARK:SELeCted:OWNer?, 2-141
 MARK:SELeCted:SOURCE?, 2-141
 MARK:SELeCted:START?, 2-141
 MARK:SELeCted:STATe?, 2-141
 MARK:SELeCted:ZOOm:POSition?, 2-142

MARK:CREATE, 2-139
 MARK:DELEte, 2-139
 MARK:FREE?, 2-140
 MARK:SELeCted:END?, 2-140
 MARK:TOTal?, 2-142
 Math Command Group, 2-20
 MATH[1]:HORizontal:POSition, 2-144
 MATH[1]:HORizontal:SCALE, 2-145
 MATH[1]:HORizontal:UNITS, 2-145
 MATH[1]:SPECTral:MAG, 2-146
 MATH[1]:SPECTral:WINDow, 2-146
 MATH[1]:VERTical:POSition, 2-147
 MATH[1]:VERTical:SCALE, 2-148
 MATH[1]:VERTical:UNITS, 2-148
 MATH[1]?, 2-142
 MATH[1]:DEFIne, 2-143
 MATH[1]:TYPE, 2-147
 MATHVAR:VAR<x>, 2-149
 MATHVAR?, 2-149
 Measurement Command Group, 2-21
 MEASUrement:CLEARSNapshot, 2-151
 MEASUrement:IMMed:DELay:DIREction, 2-152
 MEASUrement:IMMed:DELay:EDGE<x>, 2-153
 MEASUrement:IMMed:DELay?, 2-152
 MEASUrement:IMMed:SOURce, 2-154
 MEASUrement:IMMed:SOURce2, 2-154
 MEASUrement:IMMed:TYPE, 2-155
 MEASUrement:IMMed:UNIts?, 2-157
 MEASUrement:IMMed:VALue?, 2-158
 MEASUrement:INDICators:HORZ<x>?, 2-159
 MEASUrement:INDICators:NUMHORZ?, 2-159
 MEASUrement:INDICators:NUMVERT?, 2-159
 MEASUrement:INDICators:STATE, 2-160
 MEASUrement:INDICators:VERT<x>?, 2-160
 MEASUrement:INDICators?, 2-158
 MEASUrement:MEAS<x>:COUNT?, 2-161
 MEASUrement:MEAS<x>:DELay:DIREction, 2-162
 MEASUrement:MEAS<x>:DELay:EDGE<x>, 2-162
 MEASUrement:MEAS<x>:DELay?, 2-161
 MEASUrement:MEAS<x>:MAXimum?, 2-163
 MEASUrement:MEAS<x>:MEAN?, 2-163
 MEASUrement:MEAS<x>:MINimum?, 2-163
 MEASUrement:MEAS<x>:SOURCE[1], 2-164
 MEASUrement:MEAS<x>:SOURCE2, 2-164
 MEASUrement:MEAS<x>:STATE, 2-165
 MEASUrement:MEAS<x>:STDdev?, 2-166
 MEASUrement:MEAS<x>:TYPE, 2-166

MEASUREMENT:MEAS<x>:UNITS?, 2-169
 MEASUREMENT:MEAS<x>:VALUE?, 2-169
 MEASUREMENT:MEAS<x>?, 2-161
 MEASUREMENT:REFLEVEL:ABSOLUTE:HIGH, 2-171
 MEASUREMENT:REFLEVEL:ABSOLUTE:LOW, 2-172
 MEASUREMENT:REFLEVEL:ABSOLUTE:MID, 2-172
 MEASUREMENT:REFLEVEL:ABSOLUTE:MID2, 2-173
 MEASUREMENT:REFLEVEL:METHOD, 2-174
 MEASUREMENT:REFLEVEL:PERCENT:HIGH, 2-174
 MEASUREMENT:REFLEVEL:PERCENT:LOW, 2-175
 MEASUREMENT:REFLEVEL:PERCENT:MID, 2-176
 MEASUREMENT:REFLEVEL:PERCENT:MID2, 2-177
 MEASUREMENT:REFLEVEL?, 2-170
 MEASUREMENT:SNAPSHOT, 2-177
 MEASUREMENT:STATISTICS, 2-178
 MEASUREMENT:STATISTICS:MODE, 2-178
 MEASUREMENT:STATISTICS:WEIGHTING, 2-178
 MEASUREMENT?, 2-150
 MEASUREMENT:GATING, 2-151
 MEASUREMENT:IMMED?, 2-152
 MEASUREMENT:METHOD, 2-170
 Miscellaneous Command Group, 2-24

N

NEWPASS, 2-179

O

*OPC, 2-180

P

PASSWORD, 2-180
 *PSC, 2-181
 *PUD, 2-182

R

*RCL, 2-182
 RECALL:SETUP, 2-183
 RECALL:WAVEFORM, 2-183
 REF<x>:DATE?, 2-184
 REF<x>:HORIZONTAL:DELAY:TIME, 2-184
 REF<x>:HORIZONTAL:SCALE, 2-185
 REF<x>:LABEL, 2-185
 REF<x>:TIME?, 2-185
 REF<x>:VERTICAL:POSITION, 2-186
 REF<x>:VERTICAL:SCALE, 2-186

REM, 2-187
 *RST, 2-188

S

*SAV, 2-188
 Save and Recall Command Group, 2-26
 SAVE:IMAGE:FILEFORMAT, 2-190
 SAVE:WAVEFORM:FILEFORMAT, 2-193
 SAVE:ASSIGN:TYPE, 2-189
 SAVE:EVENTTABLE:BUS, 2-189
 SAVE:IMAGE, 2-190
 SAVE:IMAGE:LAYOUT, 2-191
 SAVE:SETUP, 2-191
 SAVE:WAVEFORM, 2-192
 Search Commands Group, 2-27
 SEARCH:SEARCH<x>:COPY, 2-195
 SEARCH:SEARCH<x>:STATE, 2-195
 SEARCH:SEARCH<x>:TOTAL?, 2-196
 SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:
 CAN:CONDITION, 2-196
 SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:
 CAN:DATA:DIIRECTION, 2-197
 SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:
 CAN:DATA:QUALIFIER, 2-197
 SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:
 CAN:DATA:SIZE, 2-198
 SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:
 CAN:DATA:VALUE, 2-198
 SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:
 CAN:FRAMETYPE, 2-199
 SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:
 CAN{:IDENTIFIER|:ADDRESS}:MODE, 2-199
 SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:
 CAN{:IDENTIFIER|:ADDRESS}:VALUE, 2-200
 SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:I2C:
 ADDRESS:MODE, 2-200
 SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:I2C:
 ADDRESS:TYPE, 2-201
 SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:I2C:
 ADDRESS:VALUE, 2-201
 SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:I2C:
 CONDITION, 2-201
 SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:I2C:
 DATA:DIIRECTION, 2-202
 SEARCH:SEARCH<x>:TRIGGER:A:BUS:B<x>:I2C:
 DATA:SIZE, 2-202

- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:I2C:
DATA:VALue, 2-203
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:
CONDition, 2-203
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:
DATA:SIZE, 2-204
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:
DATA{MISO|IN}:VALue, 2-204
- SEARCH:SEARCH<x>:TRIGger:A:BUS:B<x>:SPI:
DATA{MOSI|OUT}:VALue, 2-204
- SEARCH:SEARCH<x>:TRIGger:A:BUS:
SOUrce, 2-205
- SEARCH:SEARCH<x>:TRIGger:A:BUS?, 2-196
- SEARCH:SEARCH<x>:TRIGger:A:EDGE:
SLOpe, 2-205
- SEARCH:SEARCH<x>:TRIGger:A:EDGE:
SOUrce, 2-205
- SEARCH:SEARCH<x>:TRIGger:A:LEVel, 2-206
- SEARCH:SEARCH<x>:TRIGger:A:LEVel:
CH<x>, 2-206
- SEARCH:SEARCH<x>:TRIGger:A:LEVel:
MATH, 2-207
- SEARCH:SEARCH<x>:TRIGger:A:LEVel:
REF<x>, 2-207
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:
FUNction, 2-207
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPut:
CH<x>, 2-208
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPut:
CLOCK:EDGE, 2-208
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPut:
CLOCK:SOUrce, 2-208
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPut:
MATH, 2-209
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:INPut:
REF<x>, 2-209
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:
INPut:CH<x>, 2-210
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:
INPut:MATH, 2-210
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:
INPut:REF<x>, 2-210
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:
WHEn, 2-211
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:
WHEn:LESSLimit, 2-212
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:PATtern:
WHEn:MORELimit, 2-212
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:
THReshold:CH<x>, 2-212
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:
THReshold:MATH, 2-213
- SEARCH:SEARCH<x>:TRIGger:A:LOGIc:
THReshold:REF<x>, 2-213
- SEARCH:SEARCH<x>:TRIGger:A:
LOWerthreshold:CH<x>, 2-213
- SEARCH:SEARCH<x>:TRIGger:A:
LOWerthreshold:MATH, 2-214
- SEARCH:SEARCH<x>:TRIGger:A:
LOWerthreshold:REF<x>, 2-214
- SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:
POLarity, 2-214
- SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:
SOUrce, 2-215
- SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:
WHEn, 2-215
- SEARCH:SEARCH<x>:TRIGger:A:PULSEWidth:
WIDTH, 2-216
- SEARCH:SEARCH<x>:TRIGger:A:RUNT:
POLarity, 2-216
- SEARCH:SEARCH<x>:TRIGger:A:RUNT:
SOUrce, 2-216
- SEARCH:SEARCH<x>:TRIGger:A:RUNT:
WHEn, 2-217
- SEARCH:SEARCH<x>:TRIGger:A:RUNT:
WIDTH, 2-217
- SEARCH:SEARCH<x>:TRIGger:A:SETHold:
CLOCK:EDGE, 2-218
- SEARCH:SEARCH<x>:TRIGger:A:SETHold:
CLOCK:SOUrce, 2-218
- SEARCH:SEARCH<x>:TRIGger:A:SETHold:
CLOCK:THReshold, 2-218
- SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATA:
SOUrce, 2-219
- SEARCH:SEARCH<x>:TRIGger:A:SETHold:DATA:
THReshold, 2-219
- SEARCH:SEARCH<x>:TRIGger:A:SETHold:
HOLDTime, 2-220
- SEARCH:SEARCH<x>:TRIGger:A:SETHold:
SETTime, 2-220
- SEARCH:SEARCH<x>:TRIGger:A:TYPE, 2-222
- SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:
CH<x>, 2-223

- SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:
MATH, 2-223
- SEARCH:SEARCH<x>:TRIGger:A:UPPerthreshold:
REF<x>, 2-223
- SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:
RISEFall}:DELtAtime, 2-220
- SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:
RISEFall}:POLarity, 2-221
- SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:
RISEFall}:SOUrce, 2-221
- SEARCH:SEARCH<x>:TRIGger:A{:TRANSition|:
RISEFall}:WHEN, 2-221
- SEARCH?, 2-194
- SElect:BUS<x>, 2-224
- SElect:CH<x>, 2-224
- SElect:REF<x>, 2-226
- SElect?, 2-224
- SElect:CONTROL, 2-225
- SElect:MATH[1], 2-226
- SET?, 2-227
- SETUP<x>:DATE?, 2-228
- SETUP<x>:LABEL, 2-228
- SETUP<x>:TIME?, 2-228
- *SRE, 2-229
- Status and Error Command Group, 2-30
- *STB?, 2-229
- T**
- TEKSecure, 2-230
- TIME, 2-231
- TOtaluptime?, 2-232
- *TRG, 2-232
- Trigger Command Group, 2-31
- TRIGger, 2-232
- TRIGger:A:BUS:B<x>:CAN:CONDition, 2-234
- TRIGger:A:BUS:B<x>:CAN:DATA:DIRection, 2-235
- TRIGger:A:BUS:B<x>:CAN:DATA:QUALifier, 2-235
- TRIGger:A:BUS:B<x>:CAN:DATA:SIZE, 2-236
- TRIGger:A:BUS:B<x>:CAN:DATA:VALue, 2-236
- TRIGger:A:BUS:B<x>:CAN:FRAMetype, 2-237
- TRIGger:A:BUS:B<x>:CAN{:IDentifier|:ADDRes}:
MODE, 2-237
- TRIGger:A:BUS:B<x>:CAN{:IDentifier|:ADDRes}:
VALue, 2-238
- TRIGger:A:BUS:B<x>:I2C:ADDRes:MODE, 2-238
- TRIGger:A:BUS:B<x>:I2C:ADDRes:TYPE, 2-239
- TRIGger:A:BUS:B<x>:I2C:ADDRes:VALue, 2-239
- TRIGger:A:BUS:B<x>:I2C:CONDition, 2-239
- TRIGger:A:BUS:B<x>:I2C:DATA:DIRection, 2-240
- TRIGger:A:BUS:B<x>:I2C:DATA:SIZE, 2-241
- TRIGger:A:BUS:B<x>:I2C:DATA:VALue, 2-241
- TRIGger:A:BUS:B<x>:SPI:CONDition, 2-241
- TRIGger:A:BUS:B<x>:SPI:DATA:SIZE, 2-243
- TRIGger:A:BUS:B<x>:SPI:DATA{:IN|:MISO}:
VALue, 2-242
- TRIGger:A:BUS:B<x>:SPI:DATA{:OUT|:MOSI}:
VALue, 2-242
- TRIGger:A:BUS:SOUrce, 2-243
- TRIGger:A:EDGE:COUpling, 2-244
- TRIGger:A:EDGE:SLOpe, 2-245
- TRIGger:A:EDGE:SOUrce, 2-245
- TRIGger:A:HOLDoff:TIME, 2-246
- TRIGger:A:LEVel:CH<x>, 2-247
- TRIGger:A:LOGIc:CLAss, 2-248
- TRIGger:A:LOGIc:FUNcTION, 2-249
- TRIGger:A:LOGIc:INPut:CH<x>, 2-250
- TRIGger:A:LOGIc:INPut:CLOCK:EDGE, 2-251
- TRIGger:A:LOGIc:INPut:CLOCK:SOUrce, 2-251
- TRIGger:A:LOGIc:INPut?, 2-250
- TRIGger:A:LOGIc:PATtern:DELtAtime, 2-252
- TRIGger:A:LOGIc:PATtern:INPut:CH<x>, 2-252
- TRIGger:A:LOGIc:PATtern:WHEN, 2-253
- TRIGger:A:LOGIc:PATtern:WHEN:
LESSLimit, 2-254
- TRIGger:A:LOGIc:PATtern:WHEN:
MORELimit, 2-255
- TRIGger:A:LOGIc:PATtern?, 2-252
- TRIGger:A:LOGIc:THReshold:CH<x>, 2-255
- TRIGger:A:LOGIc:THReshold?, 2-255
- TRIGger:A:LOWerthreshold:CH<x>, 2-256
- TRIGger:A:PULse:CLAss, 2-257
- TRIGger:A:PULSEWidth:POLarity, 2-258
- TRIGger:A:PULSEWidth:SOUrce, 2-259
- TRIGger:A:PULSEWidth:WHEN, 2-259
- TRIGger:A:PULSEWidth:WIDth, 2-260
- TRIGger:A:PULSEWIDth?, 2-258
- TRIGger:A:RUNT:POLarity, 2-261
- TRIGger:A:RUNT:SOUrce, 2-261
- TRIGger:A:RUNT:WIDth, 2-262
- TRIGger:A:SETHold:CLOCK:EDGE, 2-264
- TRIGger:A:SETHold:CLOCK:SOUrce, 2-264
- TRIGger:A:SETHold:CLOCK:THReshold, 2-265
- TRIGger:A:SETHold:CLOCK?, 2-263
- TRIGger:A:SETHold:DATA:SOUrce, 2-266

TRIGger:A:SETHold:DATA:THReshold, 2-266
 TRIGger:A:SETHold:DATA?, 2-265
 TRIGger:A:SETHold:HOLDTime, 2-267
 TRIGger:A:SETHold:SETTime, 2-267
 TRIGger:A:UPPerthreshold:CH<x>, 2-271
 TRIGger:A:VIDeo:LINE, 2-272
 TRIGger:A:VIDeo:SOURce, 2-272
 TRIGger:A:VIDeo:STANdard, 2-273
 TRIGger:A:VIDeo{:SYNC|:FIELD}, 2-273
 TRIGger:A{:TRANsition|:RISEFall}:
 DELtAtime, 2-268
 TRIGger:A{:TRANsition|:RISEFall}:POLarity, 2-268
 TRIGger:A{:TRANsition|:RISEFall}:SOURce, 2-269
 TRIGger:A{:TRANsition|:RISEFall}:WHEn, 2-269
 TRIGger:A{:TRANsition|:RISEFall}?, 2-267
 TRIGger:B:EDGE:COUPling, 2-276
 TRIGger:B:EDGE:SLOpe, 2-276
 TRIGger:B:EDGE:SOURce, 2-277
 TRIGger:B:EVENTS:COUNt, 2-278
 TRIGger:B:LEVel:CH<x>, 2-279
 TRIGger:B:LOWerthreshold:CH<x>, 2-279
 TRIGger:B:UPPerthreshold:CH<x>, 2-281
 TRIGger:EXTErnal:PRObe, 2-282
 TRIGger:EXTErnal:YUNIts?, 2-282
 TRIGger:A, 2-233
 TRIGger:A:EDGE?, 2-243
 TRIGger:A:HOLDoff?, 2-246
 TRIGger:A:LEVel, 2-247
 TRIGger:A:LOGIc?, 2-248
 TRIGger:A:MODE, 2-256
 TRIGger:A:PULse?, 2-257
 TRIGger:A:RUNT?, 2-260
 TRIGger:A:RUNT:WHEn, 2-262
 TRIGger:A:SETHold?, 2-263
 TRIGger:A:TYPe, 2-270
 TRIGger:A:VIDeo?, 2-271
 TRIGger:B, 2-274
 TRIGger:B:BY, 2-275
 TRIGger:B:EDGE?, 2-275
 TRIGger:B:EVENTS?, 2-277
 TRIGger:B:LEVel, 2-278
 TRIGger:B:STATE, 2-280
 TRIGger:B:TIME, 2-280
 TRIGger:B:TYPe, 2-281
 TRIGger:EXTErnal?, 2-281
 TRIGger:STATE?, 2-282
 *TST?, 2-283

U

UNLock, 2-283

V

VERBose, 2-284

Vertical Command Group, 2-36

W

*WAI, 2-284

Waveform Transfer Command Group, 2-39

WAVFrm?, 2-285

WFMInpre?, 2-285

WFMInpre:BIT_Nr, 2-286

WFMInpre:BN_Fmt, 2-286

WFMInpre:BYT_Nr, 2-287

WFMInpre:BYT_Or, 2-287

WFMInpre:ENCdg, 2-288

WFMInpre:NR_Pt, 2-288

WFMInpre:PT_Fmt, 2-289

WFMInpre:PT_Off, 2-290

WFMInpre:WFId, 2-290

WFMInpre:XINcr, 2-291

WFMInpre:XUNit, 2-291

WFMInpre:XZEro, 2-292

WFMInpre:YMUlt, 2-292

WFMInpre:YOff, 2-293

WFMInpre:YUNit, 2-294

WFMInpre:YZEro, 2-294

WFMOutpre?, 2-295

WFMOutpre:BIT_Nr, 2-296

WFMOutpre:BN_Fmt, 2-296

WFMOutpre:BYT_Nr, 2-297

WFMOutpre:BYT_Or, 2-297

WFMOutpre:ENCdg, 2-298

WFMOutpre:NR_Pt?, 2-299

WFMOutpre:PT_Fmt?, 2-299

WFMOutpre:PT_Off?, 2-299

WFMOutpre:PT_ORDER?, 2-300

WFMOutpre:WFId?, 2-300

WFMOutpre:XINcr?, 2-301

WFMOutpre:XUNit?, 2-302

WFMOutpre:XZEro?, 2-302

WFMOutpre:YMUlt?, 2-303

WFMOutpre:YOff?, 2-303

WFMOutpre:YUNit?, 2-304

WFMOutpre:YZEro?, 2-304

Z

Zoom Command Group, 2-44

ZOOM:GRATICULE:SIZE?, 2-305

ZOOM:GRATICULE:SPLIT?, 2-305

ZOOM:ZOOM<x>:FACTOR?, 2-306

ZOOM:ZOOM<x>:HORIZONTAL:POSITION, 2-307

ZOOM:ZOOM<x>:HORIZONTAL:SCALE, 2-307

ZOOM:ZOOM<x>:POSITION, 2-308

ZOOM:ZOOM<x>:SCALE, 2-308

ZOOM:ZOOM<x>:STATE, 2-308

ZOOM:ZOOM<x>?, 2-306

ZOOM?, 2-304

ZOOM{:MODE|:STATE}, 2-306