

Please make the following alterations to the User's Manual IM701210-05E(see underlined text).

■ Page 12-17 "Output Format"

You can select the output format that is sent to the USB printer from the following six types.

-
- ESC-PR (Applies to Firmware Version 6.21 or Later)
This is an output format for Seiko-Epson printers. If you choose this format you must select either Normal (for 4 x 6 printers) or Small (for Letter size printers).
-

■ Page 12-17 "Notes When Printing on the USB Printer"

- Images may not print properly on some printers. Use USB printers that have been tested for compatibility.
For details on USB printers that have been tested for compatibility, contact your nearest YOKOGAWA dealer.
-
- Connect only the printers that are allowed.

■ Page 16-15 "Setting the Action"

.....

3. Press the Mode soft key to select On Trigger.

.....

