

### NorCal Keyer Function Table - Keypress Combinations

Keys Used	PAR (press and release)	PAH (press and hold)
Mem switch	Send memory 3	Record memory 3, O? Beacons: BE and BA
Mem + dit	Send speed	Paddle set of speed, pot options, main menu
Mem + dah	Send memory 2	Record memory 2: M?
Mem + both	Send memory 1	Record memory 1: T?

### NorCal Keyer Menus

CW	Menu Item	Pressing a dit	Pressing a dah
<b>Memory + Dit Menu</b> (PAR mem to advance to the next menu)			
S	Speed set from paddle	Increase speed 1 wpm	Decrease speed 1 wpm
P	Pot / paddle speed control	Selects pot speed control	Selects paddle speed control
C	Calibrate pot speed control	Enters the calibration routine	Restores default pot calibration
B	Bug / straight key mode	Enables bug mode (dah = key)	Disables bug mode (default)
A	Iambic mode A or B	Enables iambic mode A	Enables mode B (default)
R	Reverse paddle mode	Reverse dit and dah switches	Reverse did and dah switches
AU	Autospace on / off	Turns on character autospace	Turns off autospace (default)
<b>Memory + Dah Menu</b> (PAR mem to exit)			
M?	Record memory 2	Records a dit	Records a dah
<b>Memory Switch Menu</b> (PAR mem to advance to next menu)			
O?	Record memory 3	Records a dit	Records a dah
BE	Beacon mode - sends mem 1	Starts the beacon going	Exits the menu
BA	Beacon alternate mode	Selects alternate beacon sends of mem 1 and mem 2	Selects send of mem 1 only (default)
ST	Sidetone on/off	Turns the sidetone off	Turns the sidetone on
<b>Memory + Both Menu</b> (PAR mem to exit)			
T?	Record memory 1	Records a dit	Records a dah

Tune Mode: Send a series of at least 5 di dahs by simo pressing both paddles (key down, sidetone on). End mode by pressing a dit or dah.

Add spaces in text strings using the space character di dah dah dah dit. The spaces are not transmitted. Useful for delays in beacon messages etc.