

# PDR-W37 Quick Start Guide



## Quick CD recording

**1 Press POWER to switch on.**

**2 Press OPEN/CLOSE 1▲ to eject the 3-CD changer disc tray.**

Place the CD you want to record, with the label face up, on to the disc tray, making sure that it is seated properly in the disc guide.

**Note:** Do not use an adapter with 8cm CD-singles. The disc tray has guides for both 12cm and 8cm discs.

**3 Press OPEN/CLOSE 1▲ to close the disc tray.**

	TOTAL	TRK	MIN	SEC
CD1	13	59:30		

**4 Press OPEN/CLOSE ▲ to eject the CD-R disc tray.**

Place a blank CD-R or CD-RW disc, with the label/non-recording side face up, on to the disc tray.

Be careful when handling CD-R and CD-RW discs not to leave fingerprints on the recording surface.

**5 Press OPEN/CLOSE ▲ to close the disc tray.**

The recorder reads the disc to see what you've loaded. After a few seconds it should show:

	NEW	DISC	CD-R
--	-----	------	------

**6 Press START CD → CD-R.**

CD1	REC	CD-R FINALIZE
-----	-----	---------------

The recorder automatically records at double speed, so if you're listening to the recording as it's being made it will sound a little strange!

When finished, the recorder will finalize the CD-R to make it playable on most ordinary CD players (see *What's finalization* below). This process takes just a couple of minutes after the CD has been recorded.

TOC	MIN	SEC	CD-R
01:56			REC


Remove the disc from the recorder before switching off.

## What's finalization?

Finalizing a disc means fixing the contents in place by creating what's called a *table of contents*, or TOC for short, at the beginning of the disc. This tells a CD player what's on the disc—the number of tracks and the length of each one. Once a TOC has been recorded onto a CD-R disc, almost any ordinary CD player will play the disc.

It's also possible to finalize CD-RW discs, but even after finalization, most ordinary CD players will *not* play these discs.

# PDR-W37 Quick Start Guide

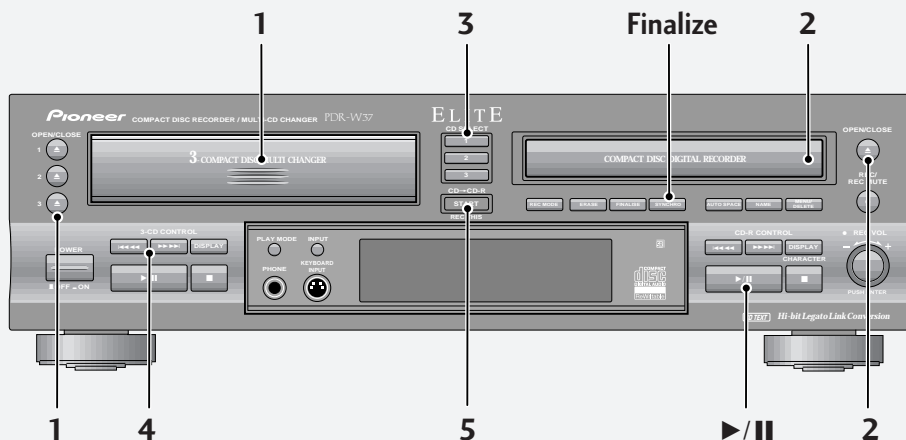

## Recording individual tracks

Here's a fast way to record a track from any disc in the 3-CD changer:

### 1 Load the CD(s) you want to record tracks from into the CD changer.

You can use any of the three disc trays in the changer.

### 2 Load a CD-R or CD-RW into the CD-R tray.

If the disc isn't blank, make sure there is enough space on the disc for what you want to record (See *Switching the display* on page 16 for how to check this).

### 3 Press the CD SELECT button for the disc you want to record.

### 4 Play the track you want to record.

Use ◀◀◀◀ and ▶▶▶▶ (CD changer side), or the number buttons on the remote, to select the track you want to record. It should start playing.

### 5 Press START CD → CD-R (REC THIS).



The CD changer will jump to the beginning of the track and the CD-R starts recording. The recorder stops automatically at the end of the track.

- Repeat steps 3 to 5 to record more tracks.
- See *Finalizing a disc*, opposite, if you want to finalize the disc now.

## Finalizing a disc

 
See *What's finalization?* on the other side of this Quick Start Guide for more information on what finalization does.

### 1 Press FINALIZE.

- Press ■ (CD-R side) here to cancel finalization.

### 2 Press ▶/|| (CD-R side) to start finalization.

Finalization takes about 2 minutes; you'll see how long there is still to go in the display.



After finalization is complete:

If a CD-R is loaded, the CD-R indicator changes to CD.

If a CD-RW is loaded, the finalize indicator lights in the display.

- None of the controls on the player or the remote have any effect during finalization.

Pioneer