 


Service Manual



DVR-520H-S

ORDER NO.
RRV2979

DVD RECORDER

DVR-520H-S DVR-720H-S

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Region No.	Serial No. Please confirm 3rd & 4th alphabetical letters.
DVR-520H-S	WYXK	AC220-240V	2	&&UK#####S\$
DVR-520H-S	WYXU	AC220-240V	2	&&PG#####S\$
DVR-520H-S	WVXK	AC220-240V	2	&&UK#####S\$
DVR-720H-S	WYXK	AC220-240V	2	&&UK#####S\$
DVR-720H-S	WVXK	AC220-240V	2	&&UK#####S\$

- When servicing this model, some service procedures may reset the settings that customer set (*) to the factory default settings. Make sure to explain this to the customer.

(*) : Initial Setup (Clock Setting, Remote Control Set, Channel settings, Video Out settings, Audio In settings, Audio Out settings, Language settings)

Refer to the chapter 13 of the Operating Instructions for more details.

An HDD (Hard Disc Drive) is mounted in this product.

The HDD is a precision instrument very vulnerable to shock and electrostatic charges. Please read "7.4 Cautions on Handling the HDD" in this manual and exercise sufficient caution when handling the HDD itself, as well as the product with the HDD built in.

When an HDD becomes defective and inoperable, restoration of the user's data recorded on the HDD, or copying of the user's recorded data to other media (such as a new HDD) is totally impossible. Before servicing, OBTAIN THE USER'S PRIOR CONSENT to that effect.

The user must be made aware that all recorded data are deleted if the HDD is initialized.



For details, refer to "Important symbols for good services".

4

A

B

1

D

E

F

C



D

E



2

3

4

[Important symbols for good services]

In this manual, the symbols shown-below indicate that adjustments, settings or cleaning should be made securely. When you find the procedures bearing any of the symbols, be sure to fulfill them:

1. Product safety

You should conform to the regulations governing the product (safety, radio and noise, and other regulations), and should keep the safety during servicing by following the safety instructions described in this manual.

2. Adjustments

To keep the original performances of the product, optimum adjustments or specification confirmation is indispensable. In accordance with the procedures or instructions described in this manual, adjustments should be performed.

3. Cleaning

For optical pickups, tape-deck heads, lenses and mirrors used in projection monitors, and other parts requiring cleaning, proper cleaning should be performed to restore their performances.

4. Shipping mode and shipping screws

To protect the product from damages or failures that may be caused during transit, the shipping mode should be set or the shipping screws should be installed before shipping out in accordance with this manual, if necessary.

5. Lubricants, glues, and replacement parts

Appropriately applying grease or glue can maintain the product performances. But improper lubrication or applying glue may lead to failures or troubles in the product. By following the instructions in this manual, be sure to apply the prescribed grease or glue to proper portions by the appropriate amount. For replacement parts or tools, the prescribed ones should be used.

CONTENTS

	SAFETY INFORMATION.....	2
	1. SPECIFICATIONS	5
A	2. EXPLODED VIEWS AND PARTS LIST	8
	2.1 PACKING	8
	2.2 EXTERIOR.....	10
	2.3 FRONT PANEL	12
	3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM.....	14
	3.1.1 OVERALL BLOCK DIAGRAM.....	14
	3.1.2 TUNB and JCKB ASSY BLOCK DIAGRAM.....	16
	3.1.3 MAIN ASSY BLOCK DIAGRAM.....	18
	3.1.4 POWER BLOCK DIAGRAM.....	20
	3.2 OVERALL WIRING DIAGRAM.....	22
	3.3 TUNB ASSY.....	24
	3.4 JCKB ASSY(1/3).....	26
B	3.5 JCKB(2/3), ATWB and ATHB ASSYS	28
	3.6 JCKB ASSY(3/3).....	30
	3.7 MAIN ASSY(1/5)	32
	3.8 MAIN ASSY(2/5)	34
	3.9 MAIN ASSY(3/5).....	36
	3.10 MAIN ASSY(4/5)	38
	3.11 MAIN ASSY(5/5)	40
	3.12 FLKY, KIRB, FRJB and DVJB ASSYS	42
	3.13 SDEB ASSY	44
	3.14 POWER SUPPLY UNIT.....	46
	3.15 WAVE FORMS	48
C	4. PCB CONNECTION DIAGRAM	51
	4.1 TUNB ASSY	52
	4.2 JCKB, ATWB and ATHB ASSYS.....	54
	4.3 MAIN ASSY	58
	4.4 FLKY, KIRB, FRJB and DVJB ASSYS	62
	4.5 SDEB ASSY.....	66
	4.6 POWER SUPPLY UNIT.....	68
	5. PCB PARTS LIST	69
	6. ADJUSTMENT	74
	6.1 TUNB ASSY ADJUSTMENT	74
	6.2 MAIN ASSY ADJUSTMENT	75
	7. GENERAL INFORMATION	76
D	7.1 DIAGNOSIS	76
	7.1.1 CPRM ID NUMBER AND DATA SETTING.....	77
	7.1.2 MODEL SETTING.....	81
	7.1.3 DOWNLOAD METHOD	82
	7.1.4 SERVICE MODE.....	84
	7.1.5 DV DEBUG MODE.....	96
	7.1.6 ERROR RATE MEASUREMENT	99
	7.1.7 VIDEO ADJUSTMENT FOR SPECIFIC AREA.....	101
	7.1.8 AGING MODE.....	105
	7.1.9 SETUP SEQUENCE	107
	7.1.10 DISASSEMBLY	108
	7.2 IC	113
E	7.3 OUTLINE OF THE PRODUCT.....	144
	7.4 CAUTIONS ON HANDLING THE HDD.....	147
	7.5 DISC/CONTENT FORMAT	149
	7.6 CLEANING.....	150
	8. PANEL FACILITIES	151

1. SPECIFICATIONS

General

System. HDD, DVD-Video/DVD-R/RW,
Video-CD, Super VCD, CD,
CD-R/RW (WMA, MP3, JPEG, CD-DA)

Power requirements. 220–240 V, 50/60 Hz

Power consumption
DVR-520H 54 W
DVR-720H 56 W

Power consumption in standby mode 0.68 W
(Front panel display: off)

Weight 4.7 kg

Dimensions 420 (W) x 59 (H) x 339 (D) mm

Operating temperature +5°C to +35°C

Operating humidity 5% to 85%
(no condensation)

TV system PAL/SECAM/
NTSC (external input only)

Recording

Recording format DVD Video Recording
DVD-VIDEO

Recordable discs

DVD-RW (DVD Re-recordable disc)

DVD-R (DVD Recordable disc)

Video recording format

Sampling frequency 13.5MHz

Compression format MPEG

Audio recording format

Sampling frequency 48kHz

Compression format Dolby Digital or Linear PCM
(uncompressed)

Recording time

HDD

DVR-720H / DVR-520H

Fine (FINE) Approx. 34 / 17 hours

Standard Play (SP). Approx. 68 / 34 hours

Long Play (LP). Approx. 136 / 68 hours

Extended Play (EP). Approx. 204 / 102 hours

Manual Mode (MN) Approx. 34–204 / 17–102 hours

DVD-R/DVD-RW

Fine (FINE) Approx. 1 hour

Standard Play (SP). Approx. 2 hours

Long Play (LP). Approx. 4 hours

Extended Play (EP). Approx. 6 hours

Manual Mode (MN) Approx. 1–6 hours

Tuner

Receivable channels

	PAL B/G		PAL I	
	Frequency	Channel	Frequency	Channel
VHF (low)	47 - 89 MHz	E2 - E4 X - Z	44 - 89 MHz	A - C X - Z
VHF (high)	104 - 300 MHz	E5 - E12 S1 - S20 M1 - M10 U1 - U10	104 - 300 MHz	D - J 11, 13 S1 - S20
Hyper	302 - 470 MHz	S21 - S41	302 - 470 MHz	S21 - S41
UHF	470 - 862 MHz	E21 - E69	470 - 862 MHz	E21 - E69

	SECAM L		SECAM D/K	
	Frequency	Channel	Frequency	Channel
VHF (low)	49 - 65 MHz	2 - 4	49 - 94 MHz	R1 - R5
VHF (high)	104 - 300 MHz	5 - 10 B - Q	104 - 300 MHz	R6 - R12 S1 - S20
Hyper	300 - 470 MHz	S21 - S41	302 - 470 MHz	S21 - S41
UHF	470 - 862 MHz	21 - 69	470 - 862 MHz	E21 - E69

STEREO
B/G - A2
I - NICAM
L - NICAM
B/G - NICAM
D/K - NICAM

Timer

Programs 1 month/32 programs

Clock Quartz lock (24-hour digital display)

Power off memory Approx. 5 years (after manufacture)

Input/Output

VHF/UHF antenna input/output terminal VHF/UHF set
75 Ω (IEC connector)

Video input Input 1 (rear), 2 (front)

Input level 1 Vp-p (75 Ω)

Jacks AV connector 2 (Input 1),
RCA jack (Input 2)

Video output AV1 Output

Output level. 1 Vp-p (75 Ω)

Jacks AV connector 1 (AV1)
RCA jack (Output)

S-Video input Input 1 (rear), 2 (front)

Y (luminance) - Input level 1 Vp-p (75 Ω)

C (colour) - Input level. 286 mVp-p (75 Ω)

Jacks AV connector 2 (Input 1),
4 pin mini DIN (Input 2)

S-Video output. AV1 / Output

Y (luminance) - Output level. 1 Vp-p (75 Ω)

C (colour) - Output level 286 mVp-p (75 Ω)

Jacks AV connector 1 (AV1),
4 pin mini DIN (Output)

RGB input

Input level 0.7 Vp-p (75 Ω)

Jacks AV connector 2 (Input 1)

RGB output

Output level. 0.7 Vp-p (75 Ω)

 
Jacks AV connector 1 (AV1)

Audio input Input 1 (rear), 2 (front) L/R
 Input level
 During audio input 2V rms
 (Input impedance: more than 22 k Ω)
 Jacks AV connector 2 (Input 1),
 RCA jacks (Input 2)
 Audio output AV1 Output
 During audio output 2V rms
 (Output impedance: less than 1.5 k Ω)
 Jacks AV connector 1 (AV1),
 RCA jacks (Output)
 Control input Mini jack
 DV input/output 4pin
 (i.LINK/IEEE 1394 standard)

AV Connectors (21-pin connector assignment)

AV connector input/output 21-pin connector
 This connector provides the video and audio signals for
 connection to a compatible colour TV or monitor.

20 18 16 14 12 10 8 6 4 2



21 19 17 15 13 11 9 7 5 3 1

PIN no. AV1(RGB)-TV / AV2(INPUT 1)
 1 Audio 2/R out / Audio 2/R in
 2 – / Audio 2/R in
 11 G out / G in
 3 Audio 1/L out / Audio 1/L out
 6 – / Audio 1/L in
 15 R or C out / R or C in
 4 GND
 17 GND
 7 B out / B in
 19 Video out or Y out / Video out
 20 – / Video in or Y in
 8 Status
 21 GND


Supplied accessories

Remote control 1
 Dry cell batteries (AA/R6P) 2
 Audio / Video cable (red/white/yellow) 1
 RF antenna cable 1
 Power cable 1
 Operating Instructions 6
 Warranty card 1


*Note: The specifications and design of this product are subject
 to change without notice, due to improvement.*

● Accessories


- Remote control ×1
 (VXX2910 : WYXK/WYXU types)
 (VXX2933 : WVXK type)

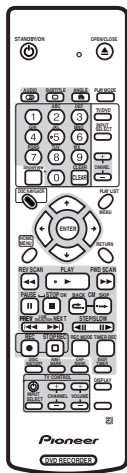


- Dry cell batteries ×2
 (AA/R6P)

 


- RF antenna cable(PAL) ×1
 (VDE1075)

 

 
- Power cable ×1
 (ADG1154 : WYXK/WYXU types)



(ADG1156 : WVXK type)

 

- Audio / Video cable(1.5m) ×1
 (red/white/yellow)
 (XDE3049 : WYXK/WVXK type)
 (VDE1077 : WYXU type)

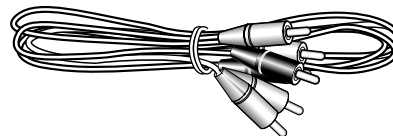

■

5

■

6

■

7

■

8

■

A

■

B

■

C

■

D

■

E

■

F

■

5

■

6

■

7

■

8


■

DVR-520H-S


7

2. EXPLODED VIEWS AND PARTS LIST

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ▼ mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

2.1 PACKING

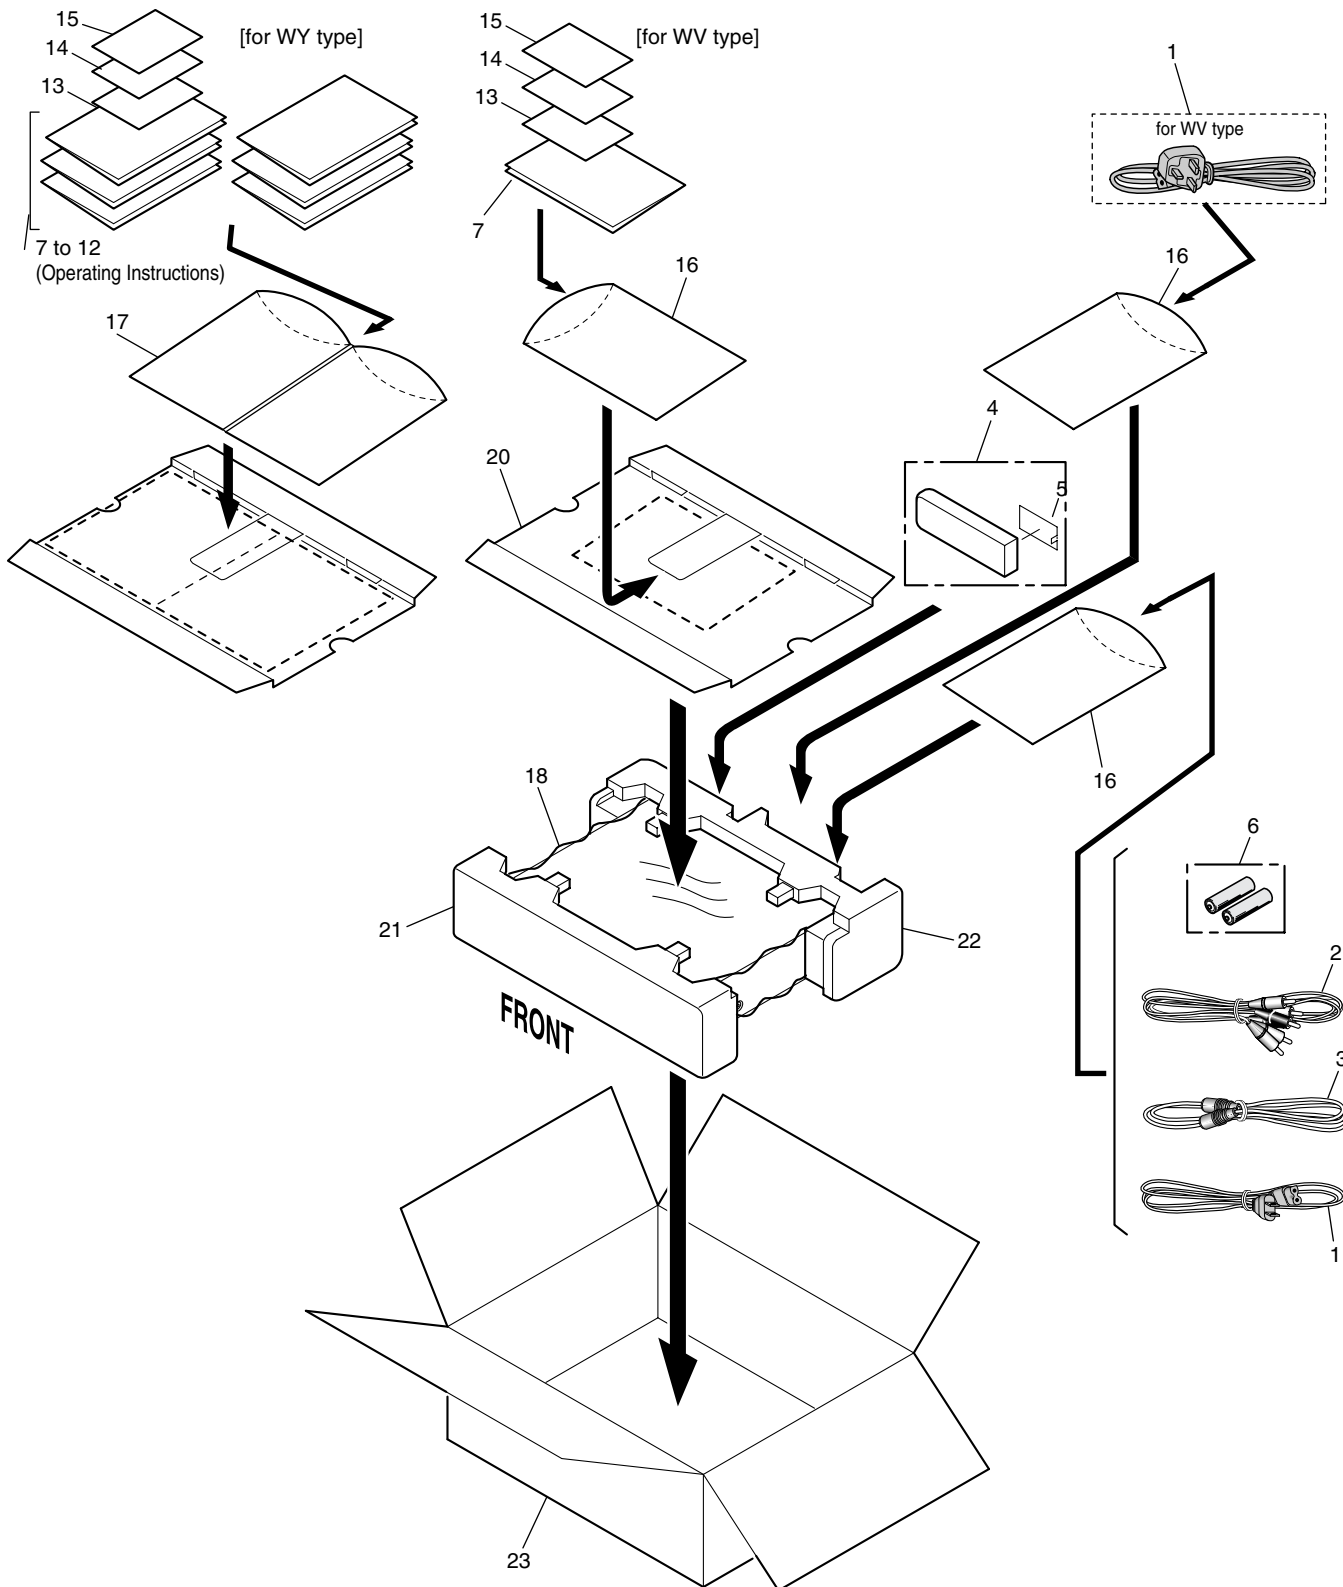

PACKING parts List


Mark No.	Description	Part No.	Mark No.	Description	Part No.
⚠ 1	Power Cable	See Contrast table (2)			
2	Audio / Video Cable	See Contrast table (2)	12	Operating Instructions (Spanish)	See Contrast table (2)
3	RF Antenna Cable	VDE1075			
4	Remote Control	See Contrast table (2)	NSP 13	HDD Caution 8L B	VRR1046
5	Battery Cover	AZA7424	NSP 14	HDD Caution 8L	VRR1047
			NSP 15	Warranty Card	ARY7065
NSP 6	Dry Cell Battery (R6P, AA)	See Contrast table (2)			
7	Operating Instructions (English)	See Contrast table (2)	16	Polyethylene Bag	VHL1051
8	Operating Instructions (French)	See Contrast table (2)	17	Polyethylene Bag	See Contrast table (2)
			18	Mirror Sheet	VHL1006
9	Operating Instructions (German)	See Contrast table (2)	19	••••••	
10	Operating Instructions (Italian)	See Contrast table (2)	20	IM Holder	See Contrast table (2)
11	Operating Instructions (Dutch)	See Contrast table (2)			
			21	Front Pad	See Contrast table (2)
			22	Rear Pad	See Contrast table (2)
			23	Packing Case	See Contrast table (2)

(2) CONTRAST TABLE

DVR-520H-S/WYXK, WYXU, WVXK, DVR-720H-S/WYXK and WVXK are constructed the same except for the following :

Mark	No.	Symbol and Description	DVR-520H-S /WYXK	DVR-520H-S /WYXU	DVR-520H-S /WVXK	DVR-720H-S /WYXK	DVR-720H-S /WVXK
⚠	1	Power Cable	ADG1154	ADG1154	ADG1156	ADG1154	ADG1156
	2	Audio / Video Cable	XDE3049	VDE1077	XDE3049	XDE3049	XDE3049
	4	Remote Control	VXX2910	VXX2910	VXX2933	VXX2910	VXX2933
NSP	6	Dry Cell Battery (R6P, AA)	VEM1017	VEM1030	VEM1017	VEM1017	VEM1017
	7	Operating Instructions (English)	VRB1339	VRB1339	VRB1340	VRB1339	VRB1340
	8	Operating Instructions (French)	VRC1205	VRC1205	Not used	VRC1205	Not used
	9	Operating Instructions (German)	VRC1206	VRC1206	Not used	VRC1206	Not used
	10	Operating Instructions (Italian)	VRC1207	VRC1207	Not used	VRC1207	Not used
	11	Operating Instructions (Dutch)	VRC1208	VRC1208	Not used	VRC1208	Not used
	12	Operating Instructions (Spanish)	VRC1209	VRC1209	Not used	VRC1209	Not used
	17	Polyethylene Bag	AHG7097	AHG7097	Not used	AHG7097	VHL1051
	20	IM Holder	VHC1117	VHC1115	VHC1117	VHC1117	VHC1117
	21	Front Pad	VHA1370	VHA1364	VHA1370	VHA1370	VHA1370
	22	Rear Pad	VHA1371	VHA1365	VHA1371	VHA1371	VHA1371
	23	Packing Case	VHG2517	VHG2554	VHG2520	VHG2546	VHG2547

2.2 EXTERIOR

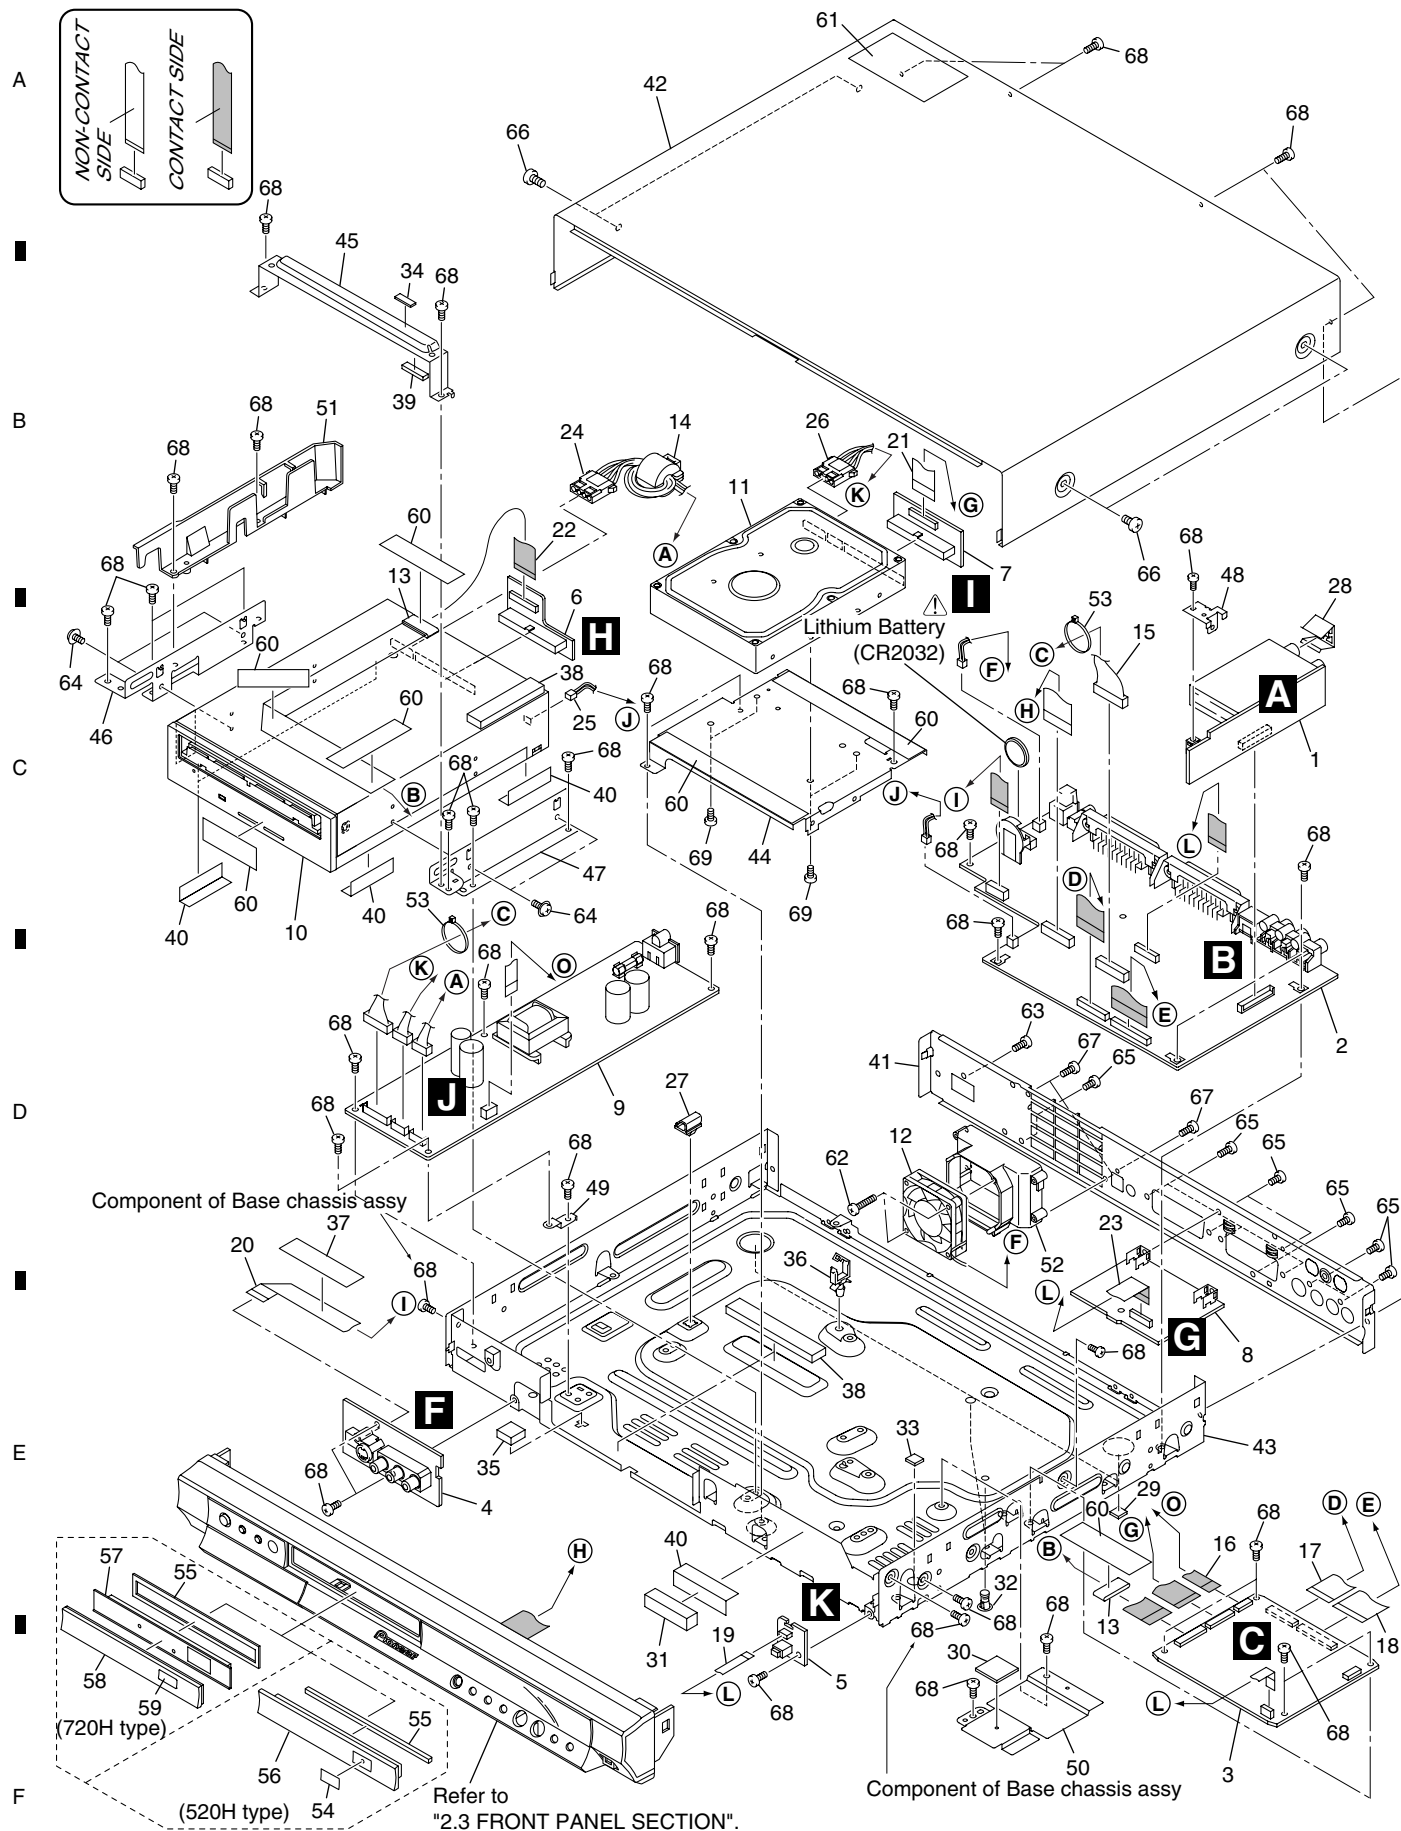

EXTERIOR parts List


Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	TUNB Assy	VWV2003	NSP 36	Clamp	VEC2418	A
2	JCKB Assy	VWV2024	37	FFC Protector	VEC2436	
3	MAIN Assy	VWV2013	38	Gasket 75 x 7T	VEC2439	
4	FRJB Assy	VWV2004	39	Gasket Sheet 2	VEC2440	
5	DVJB Assy	VWV2006	40	Aluminum Tape	VEF1056	
6	ATWB Assy	VWV2005	41	Rear Panel	See Contrast table (2)	
7	ATHB Assy	VWV2002	42	Bonnet Case S	See Contrast table (2)	
8	SDEB Assy	VWV2033	NSP 43	Base Chassis	See Contrast table (2)	
9	POWER SUPPLY Unit	VWR1381	NSP 44	HDD Stay	VNE2334	
10	DRIVE Assy R7 (for Service)	VXX2942	NSP 45	Bonnet Angle	VNE2335	
11	HDD	See Contrast table (2)	NSP 46	Writer Stay L	VNE2336	B
12	DC Fan Motor	VXM1114	NSP 47	Writer Stay R	VNE2337	
13	Ferrite Core	ATX1048	NSP 48	Tuner Stay	VNE2338	
14	Ferrite Core	VTH1050	NSP 49	PCB Base	VNE2339	
15	Connector Assy (15P)	PF15PP-D47	NSP 50	Heatsink	VNH1070	
16	Flexible Cable (8P)	VDA1997	51	SYPS Cover	VNK5426	
17	Flexible Cable (24P)	VDA1998	52	Fan Duct	VNK5427	
18	Flexible Cable (32P)	VDA1999	NSP 53	Binder (BK-1)	ZCA-BK1	
19	Flexible Cable (7P)	VDA2000	54	HDD Badge	See Contrast table (2)	
20	Flexible Cable (13P)	VDA2001	55	Tray Sheet	See Contrast table (2)	C
21	Flexible Cable (40P)	VDA2032	56	Tray Panel	See Contrast table (2)	
22	Shield Flexible Cable (40P)	VDA2031	57	Tray Panel Base	See Contrast table (2)	
23	Flexible Cable (15P)	VDA2041	58	Tray Panel Lens	See Contrast table (2)	
24	Housing Assy (4P)	VKP2327	59	Hologram Label	See Contrast table (2)	
25	Housing Assy (2P)	VKP2315	NSP 60	Tape	ZTA-156A-19	
26	Housing Assy (4P)	VKP2335	61	Bonnet Label	See Contrast table (2)	
NSP 27	P. Plate Holder	PNY-405	62	Screw	BPZ30P250FTC	
28	Earth Plate TU	VBK1153	63	Screw	PBZ30P080FTC	
29	Rubber Foot	VEB1349	64	Screw	AMZ30P060FTC	
30	Radiation Sheet	VEB1360	65	Screw	BBZ30P040FTC	D
31	Rubber Spacer	VEB1370	66	Screw	BCZ40P060FNI	
NSP 32	PC Support	VEC1749	67	Screw	BPZ30P080FTC	
33	Heatsink Cushion	VEC2363	68	Screw	BBZ30P060FTC	
34	Gasket Sheet	VEC2394	69	#6-32 Screw	DBA1125	
35	Spacer	VEC2413				

(2) CONTRAST TABLE

DVR-520H-S/WYXK, WYXU, WVXK, DVR-720H-S/WYXK and WVXK are constructed the same except for the following :

Mark	No.	Symbol and Description	DVR-520H-S /WYXK	DVR-520H-S /WYXU	DVR-520H-S /WVXK	DVR-720H-S /WYXK	DVR-720H-S /WVXK
NSP	11	HDD 80G 4R080L0 SV	VXF1010	VXF1010	VXF1010	Not used	Not used
	11	HDD 160G 4R160L0 SV	Not used	Not used	Not used	VXF1028	VXF1028
	41	Rear Panel	VNA2691	VNA2696	VNA2691	VNA2735	VNA2735
	42	Bonnet Case S	VXX2938	VXX2925	VXX2938	VXX2938	VXX2938
	43	Base Chassis	VNB1042	Not used	VNB1042	VNB1042	VNB1042
NSP	43	Base Chassis Assy	Not used	VXA2681	Not used	Not used	Not used
	54	HDD Badge	VAM1141	VAM1141	VAM1141	Not used	Not used
	55	Tray Sheet B	VEC2450	VEC2409	VEC2450	Not used	Not used
	55	Tray Sheet	Not used	Not used	Not used	VEC2448	VEC2448
	56	Tray Panel	VNK5520	VNK5421	VNK5520	Not used	Not used
F	57	Tray Panel Base	Not used	Not used	Not used	VNK5432	VNK5432
	58	Tray Panel Lens	Not used	Not used	Not used	VNK5433	VNK5433
	59	Hologram Label	Not used	Not used	Not used	VRW2147	VRW2147
	61	Bonnet Label	VRW2115	VRW2115	VRW2123	VRW2124	VRW2125

2.3 FRONT PANEL

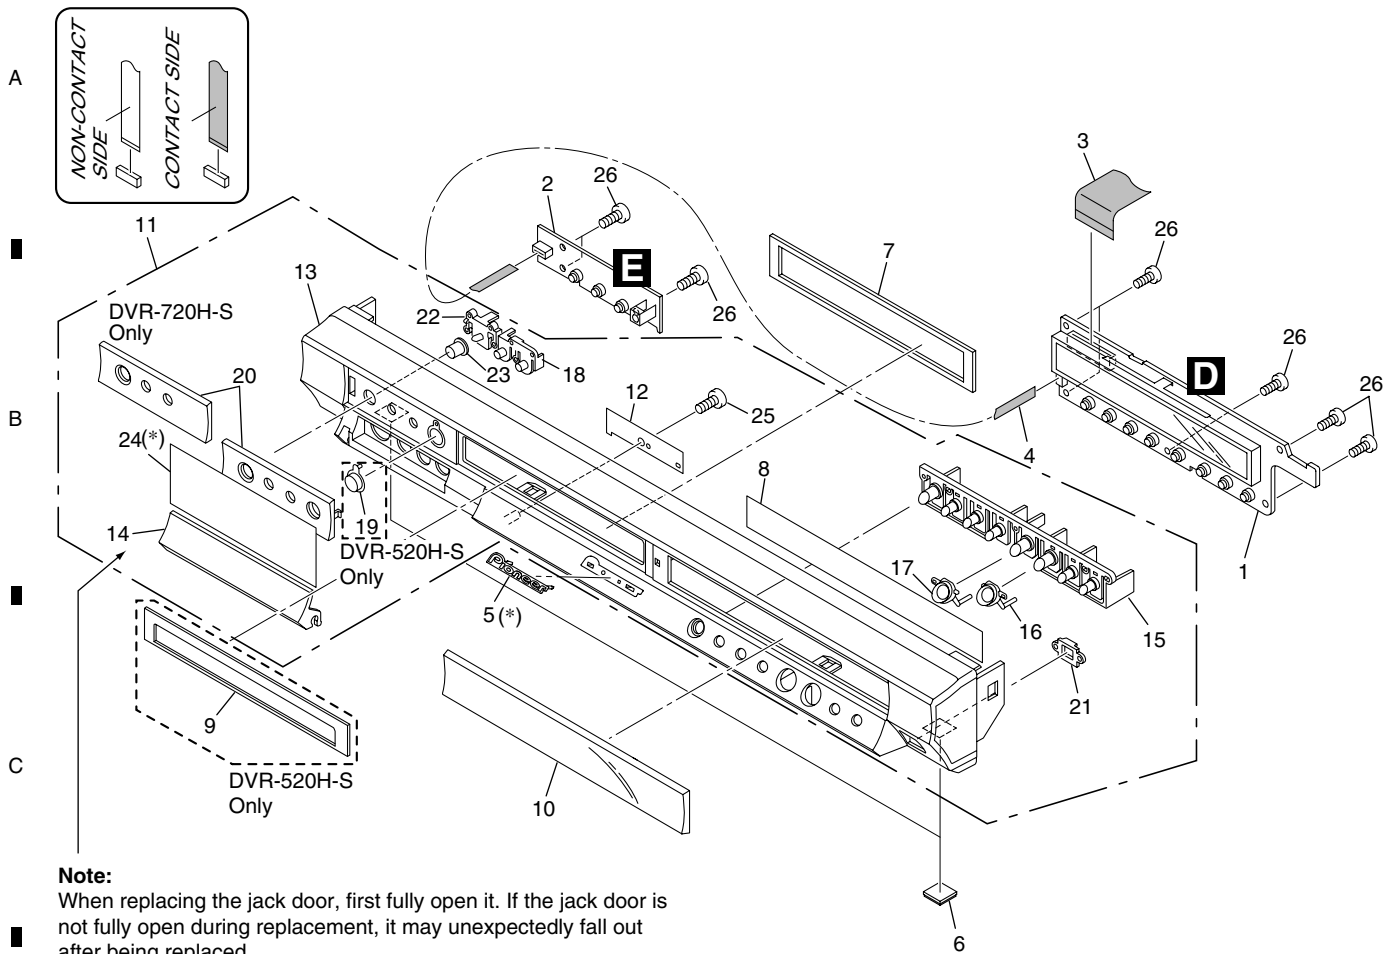

FRONT PANEL parts List

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	FLKY Assy	VWG2489	NSP 15	Main Key	See Contrast table (2)
2	KIRB Assy	VWG2521			
3	Flexible Cable (19P)	VDA2002	NSP 16	Copy Ring	See Contrast table (2)
4	Flexible Cable (7P)	VDA2005	NSP 17	REC Ring	See Contrast table (2)
5	Pioneer Name Plate	See Contrast table (2)	NSP 18	Power Key	See Contrast table (2)
			NSP 19	IR Window	See Contrast table (2)
6	Rubber Foot	VEB1349	NSP 20	Sub Panel	See Contrast table (2)
7	Drive Sheet	VEC2345			
8	FL Filter	VEC2421	NSP 21	DV Cover	See Contrast table (2)
9	Panel Sheet	See Contrast table (2)	NSP 22	Key Base	See Contrast table (2)
NSP 10	FL Lens	See Contrast table (2)	NSP 23	Cap	See Contrast table (2)
			NSP 24	Mirror Sheet	VHL1082
11	Front Panel Assy	See Contrast table (2)	25	Screw	See Contrast table (2)
12	Door Spring	See Contrast table (2)			
NSP 13	Front Panel	See Contrast table (2)	26	Screw	BPZ30P080FTC
14	Jack Door	See Contrast table (2)			

(2) CONTRAST TABLE

DVR-520H-S/WYXK, WYXU, WVXK, DVR-720H-S/WYXK and WVXK are constructed the same except for the following :

Mark	No.	Symbol and Description	DVR-520H-S /WYXK	DVR-520H-S /WYXU	DVR-520H-S /WVXK	DVR-720H-S /WYXK	DVR-720H-S /WVXK
	5	Pioneer Mame Plate	VAM1146	VAM1146	VAM1146	VAM1124	VAM1124
	9	Panel Sheet	VEC2446	VEC2446	VEC2446	Not used	Not used
NSP	10	FL Lens	Not used	VNK5486	Not used	Not used	Not used
NSP	10	FL Lens 2	VNK5517	Not used	VNK5517	VNK5612	VNK5612
	11	Front Panel Assy	VXA2661	VXA2651	VXA2662	VXA2673	VXA2674
	12	Door Spring	VBK1152	VBK1151	VBK1152	VBK1152	VBK1152
NSP	13	Front Panel	VNK5501	VNK5491	VNK5501	VNK5616	VNK5616
	14	Jack Door	VNK5503	VNK5496	VNK5502	VNK5503	VNK5502
NSP	15	Main Key	VNK5504	VNK5420	VNK5504	VNK5504	VNK5504
NSP	16	Copy Ring	VNK5505	VNK5523	VNK5505	VNK5505	VNK5505
NSP	17	REC Ring	VNK5506	VNK5425	VNK5506	VNK5506	VNK5506
NSP	18	Power Key	VNK5509	VNK5480	VNK5509	VNK5509	VNK5509
NSP	19	IR Window	VNK5511	VNK5423	VNK5511	Not used	Not used
NSP	20	Sub Panel	VNK5514	VNK5483	VNK5514	Not used	Not used
NSP	20	Sub Panel 2	Not used	Not used	Not used	VNK5615	VNK5615
NSP	21	DV Cover	VNK5518	VNK5451	VNK5518	VNK5518	VNK5518
NSP	22	Key Base	VNK5534	Not used	VNK5534	VNK5534	VNK5534
NSP	22	Main Key	Not used	VNK5436	Not used	Not used	Not used
NSP	23	Cap	VNK5535	VNK5437	VNK5535	VNK5535	VNK5535
	25	Screw	BPZ30P080FNI	BPZ30P080FTC	BPZ30P080FNI	BPZ30P080FNI	BPZ30P080FNI

3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

3.1 BLOCK DIAGRAM

3.1.1 OVERALL BLOCK DIAGRAM

A

B


C

D


E

F

← : Recording system signal route ← : Playback system signal route

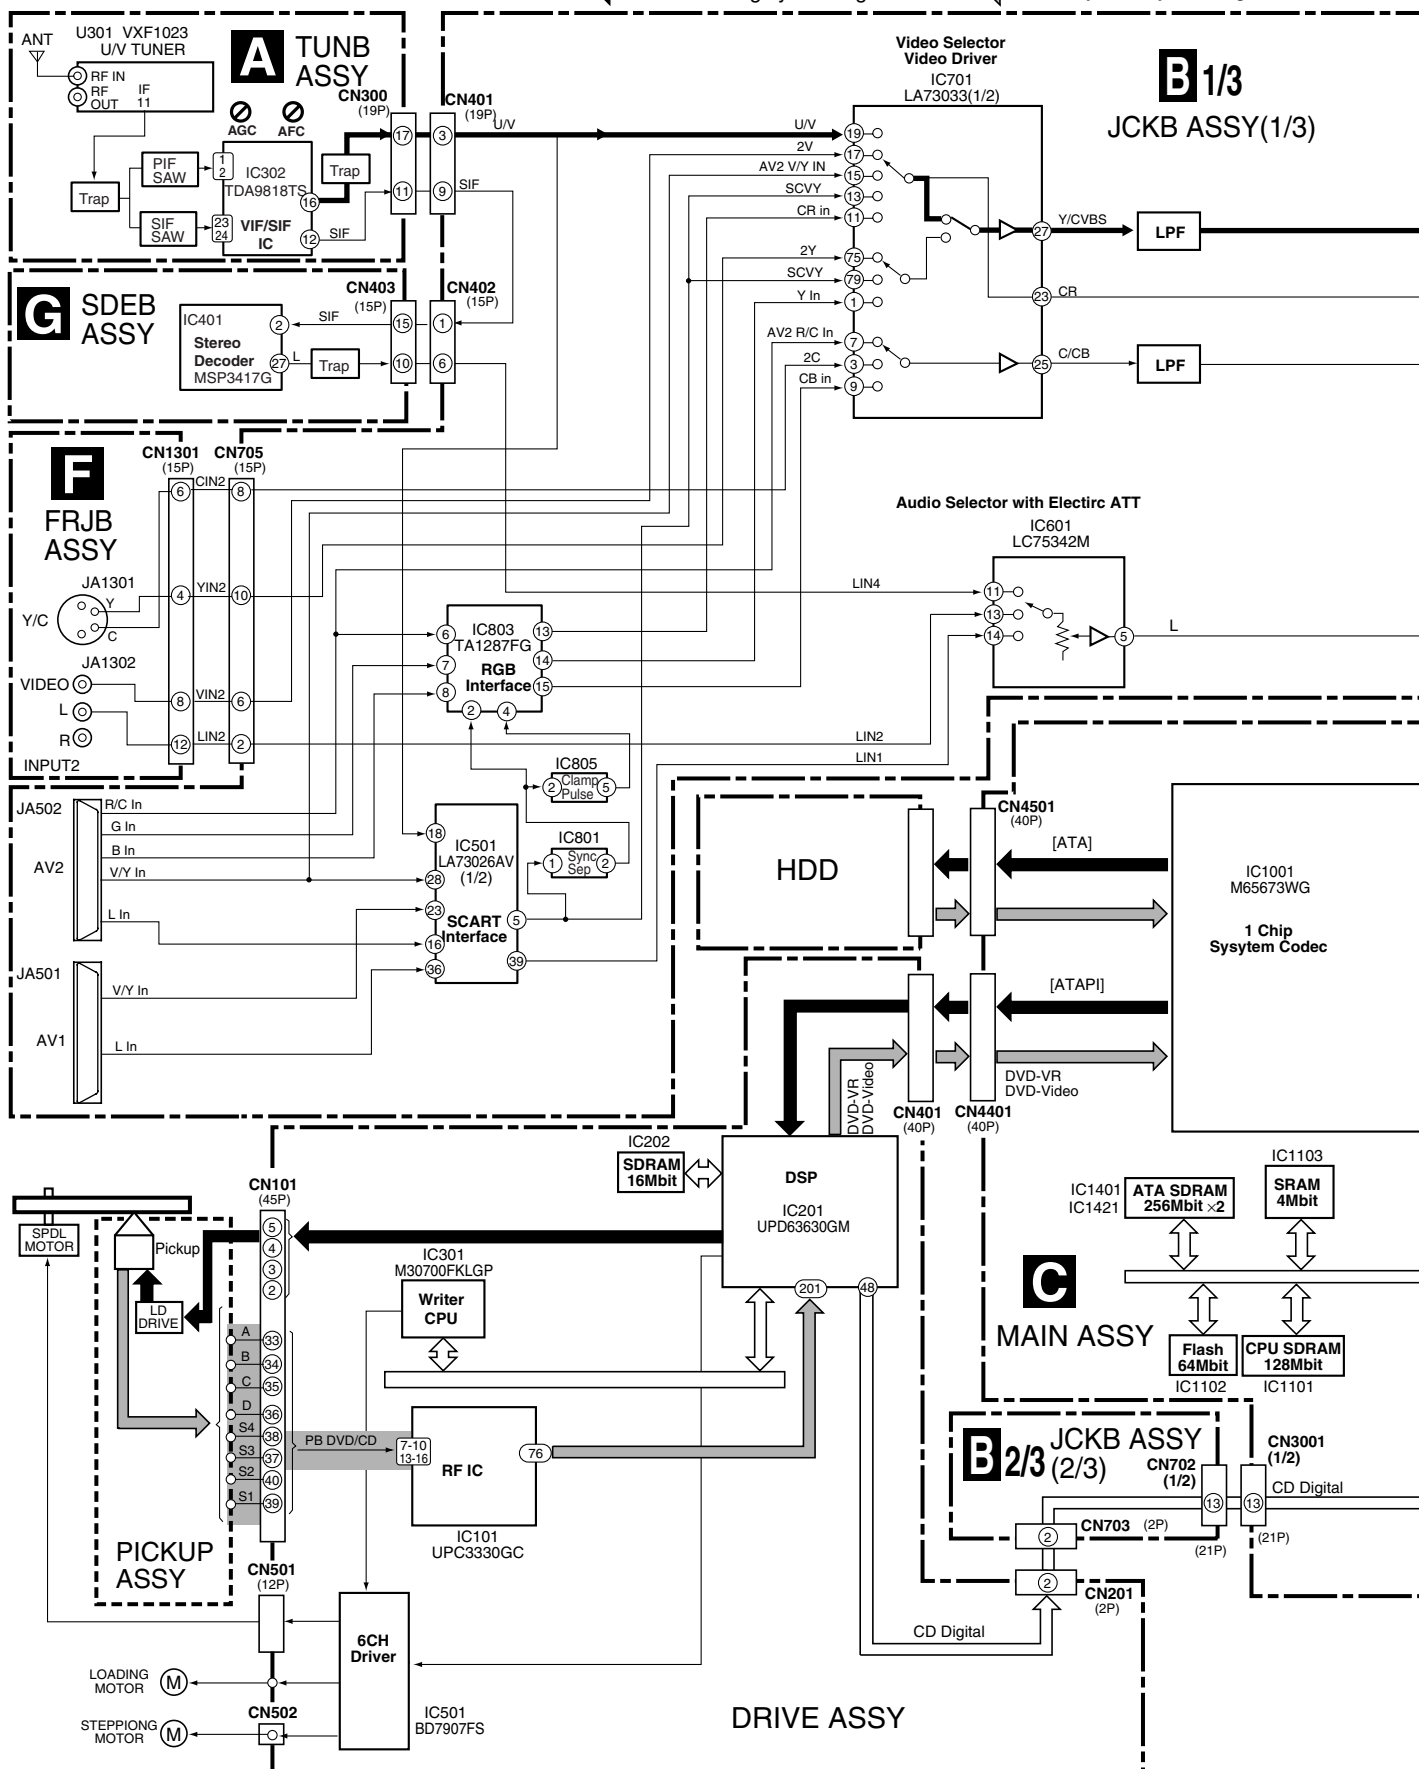


• R ch is same as L ch.

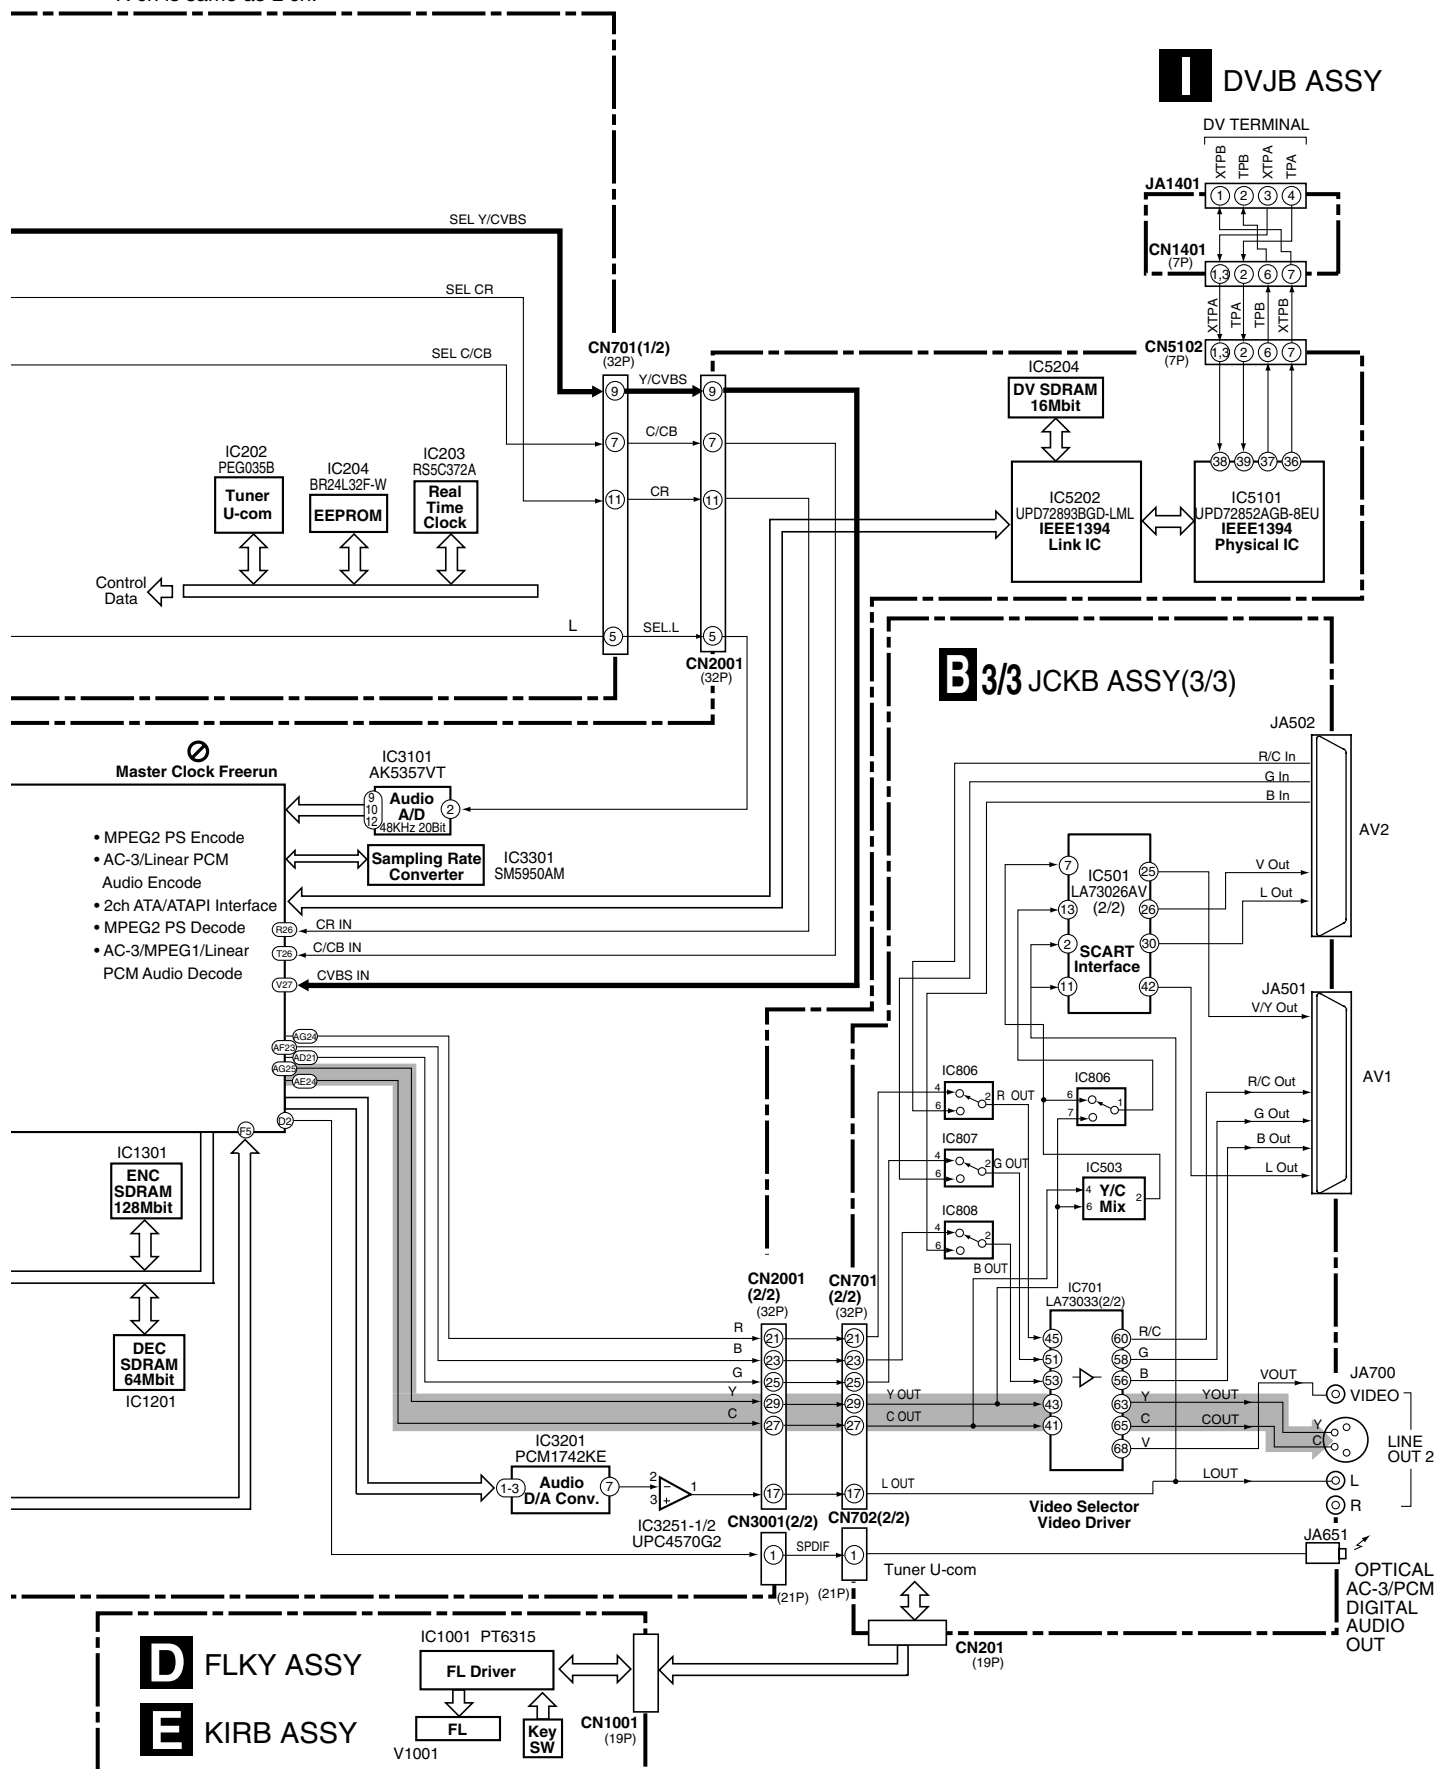


4




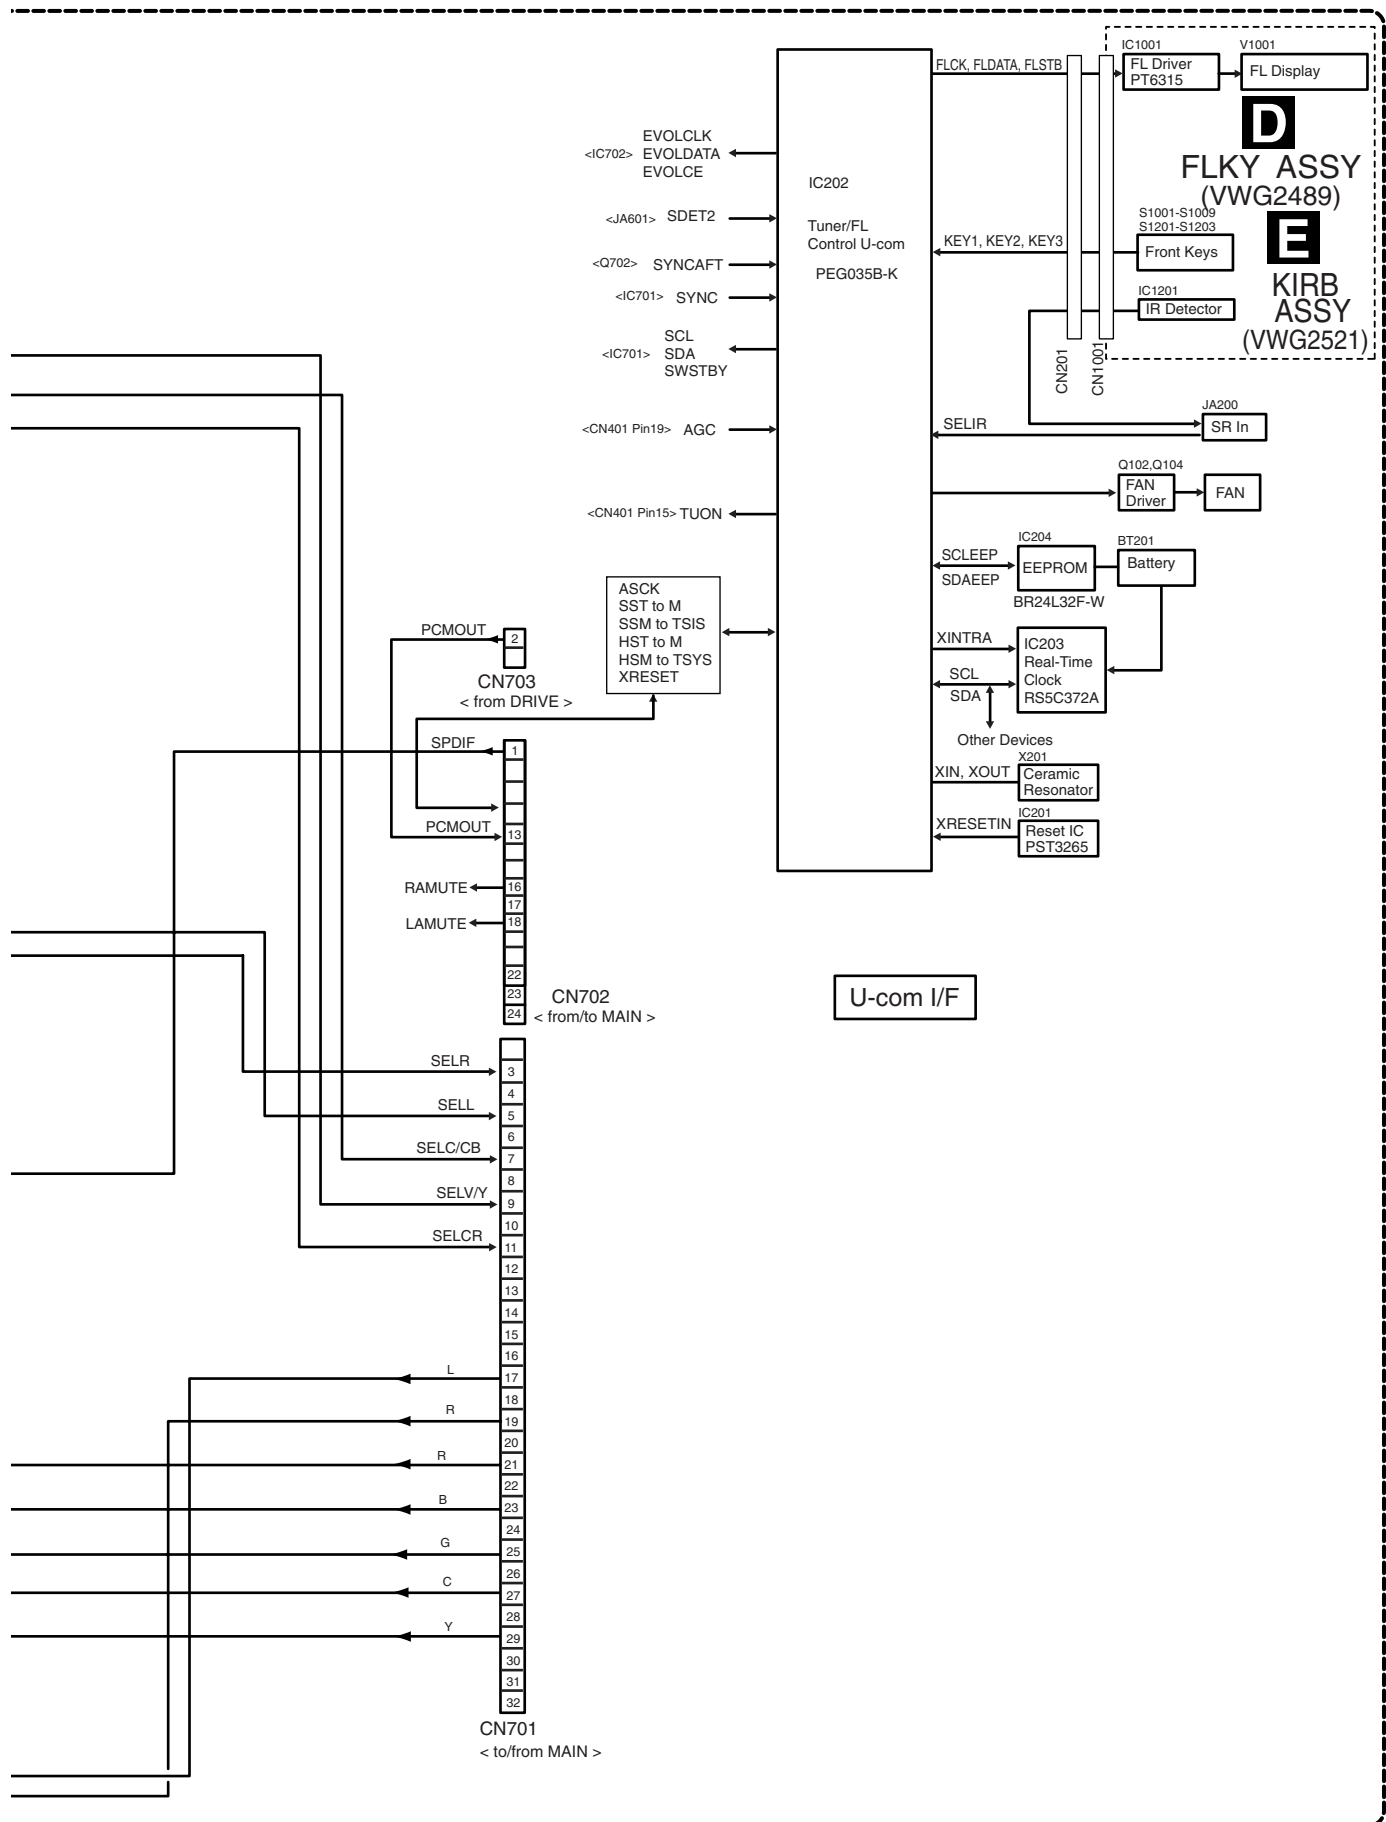

3.1.3 MAIN ASSY BLOCK DIAGRAM

C MAIN ASSY
(VWV2013)

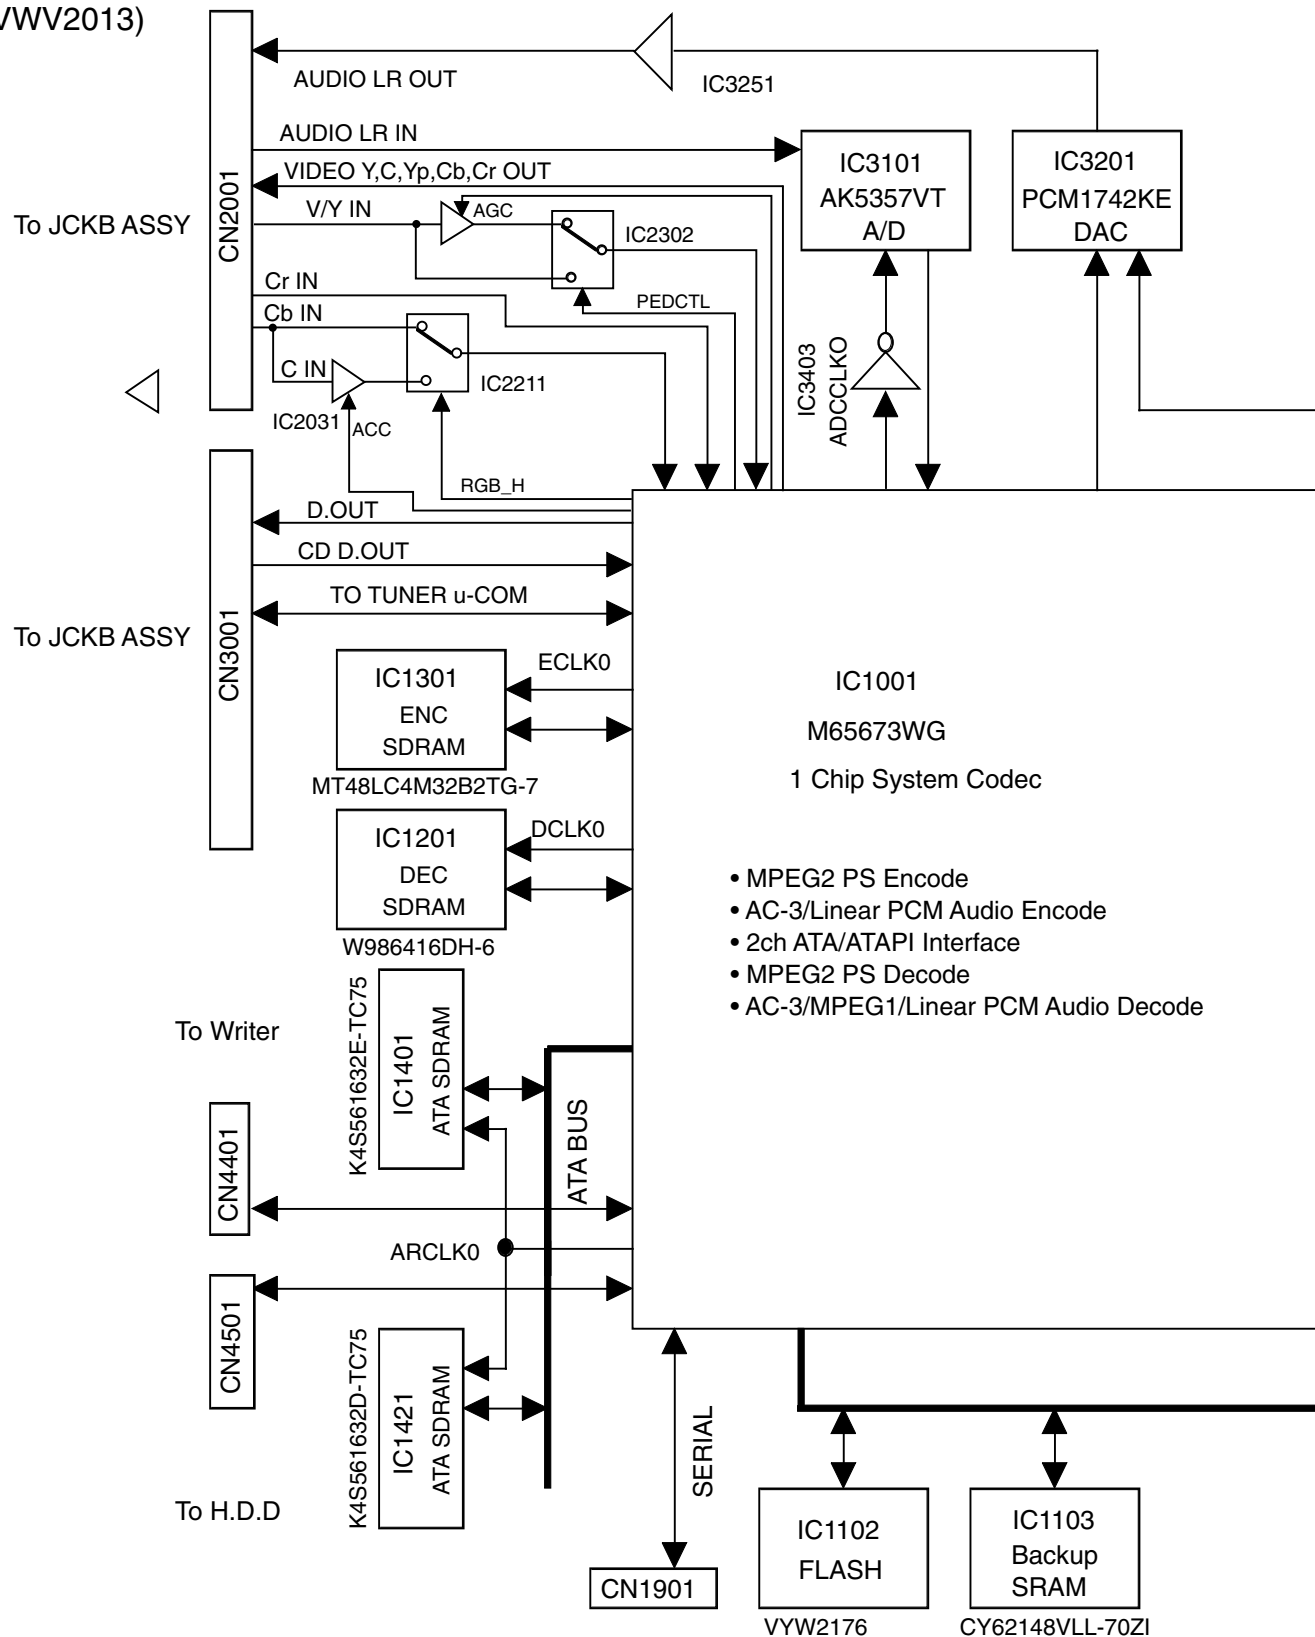

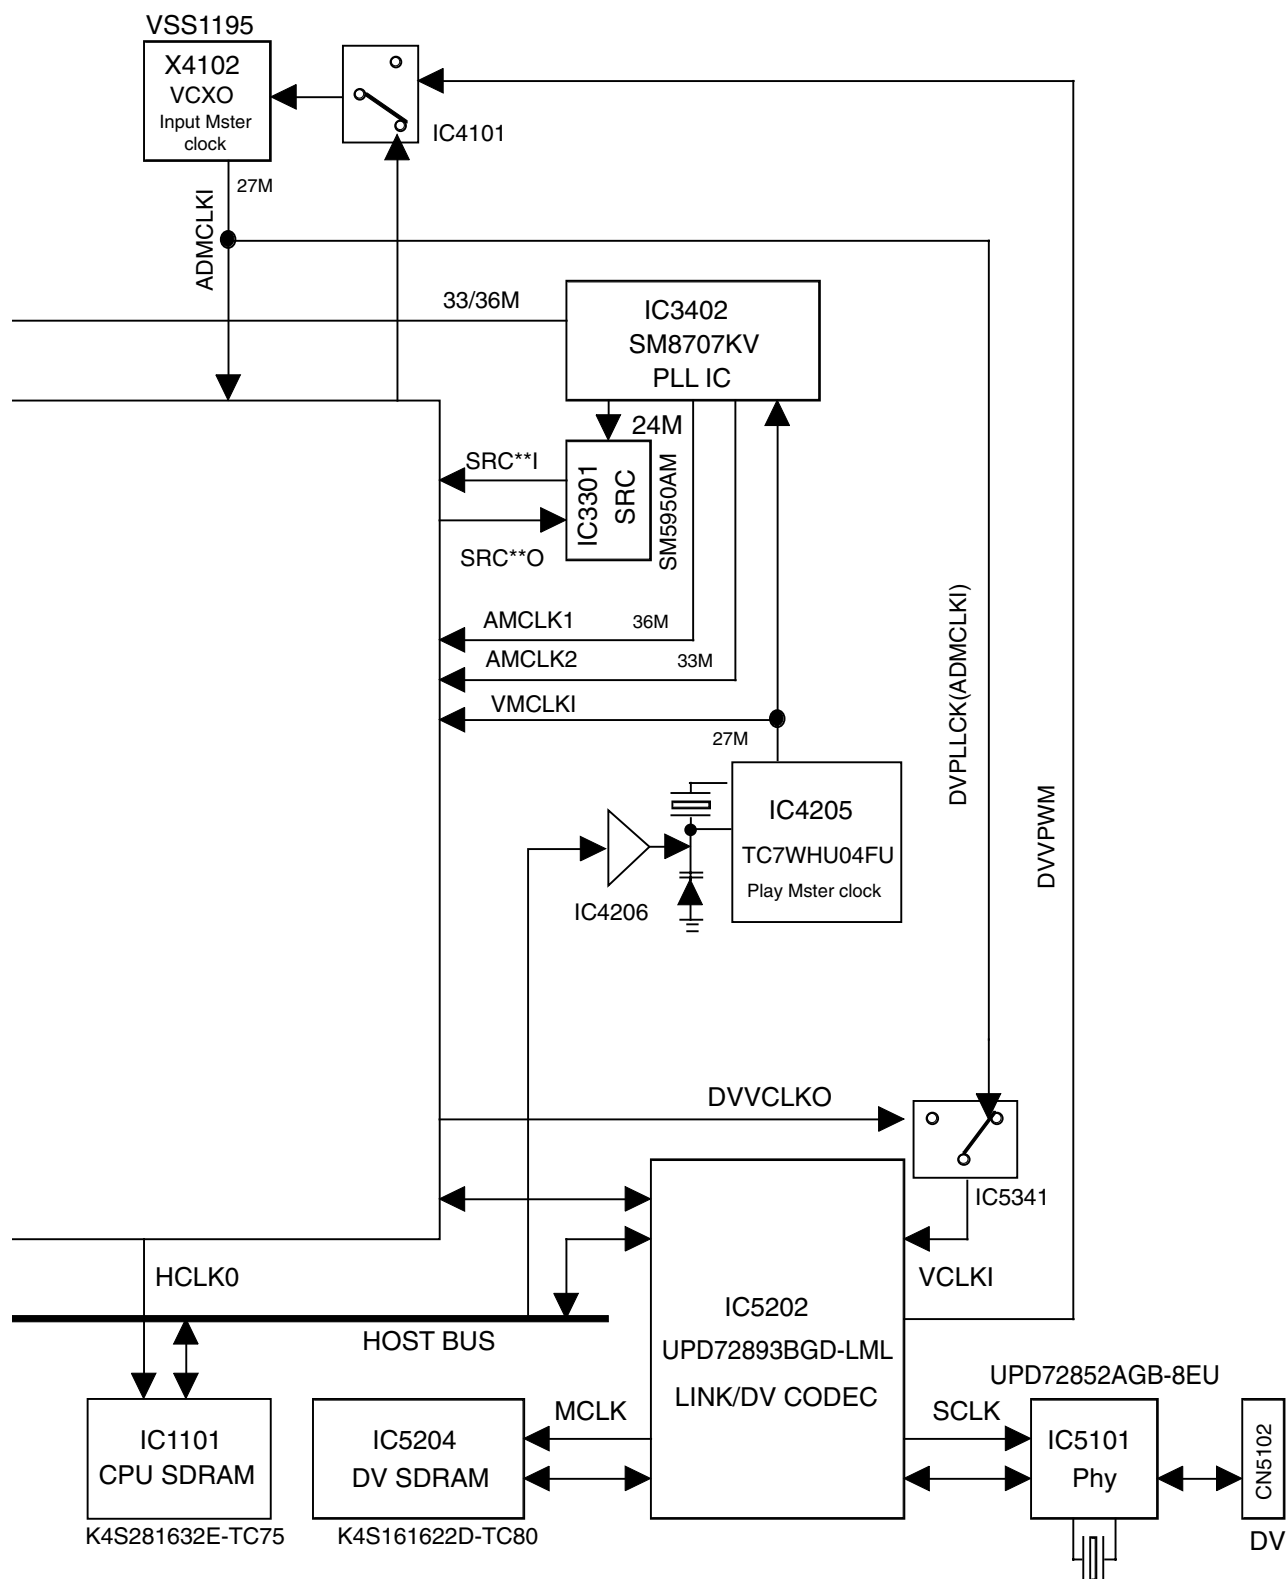

3.1.4 POWER BLOCK DIAGRAM

A


B

C

D

E

F

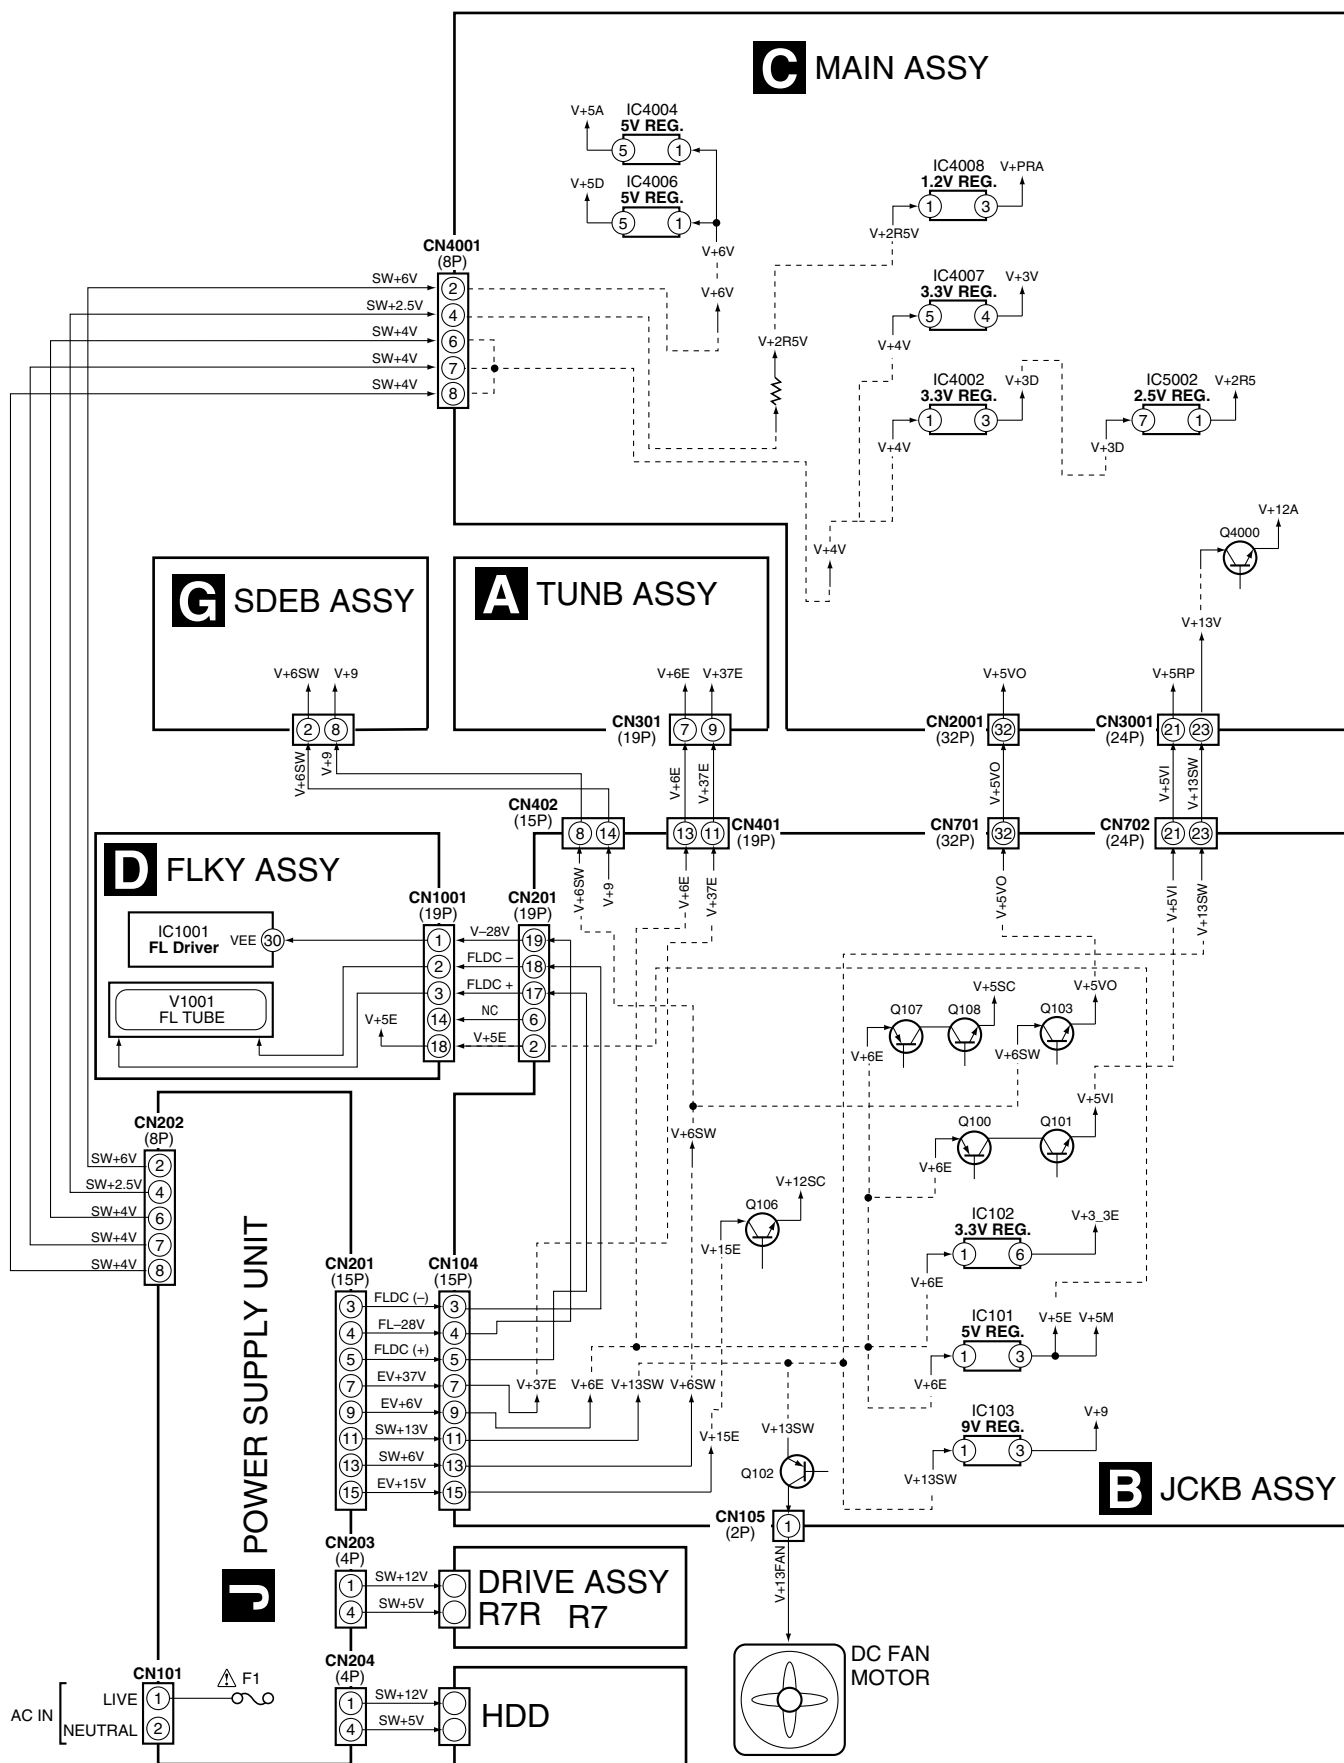

■

5

■

6

■

7

■

8

■

A

■

B

■

C

■

D

■

E

■

F

■

5

■

6

■

7

■

8

■

DVR-520H-S

3.2 OVERALL WIRING DIAGRAM

A


B



C


D

E

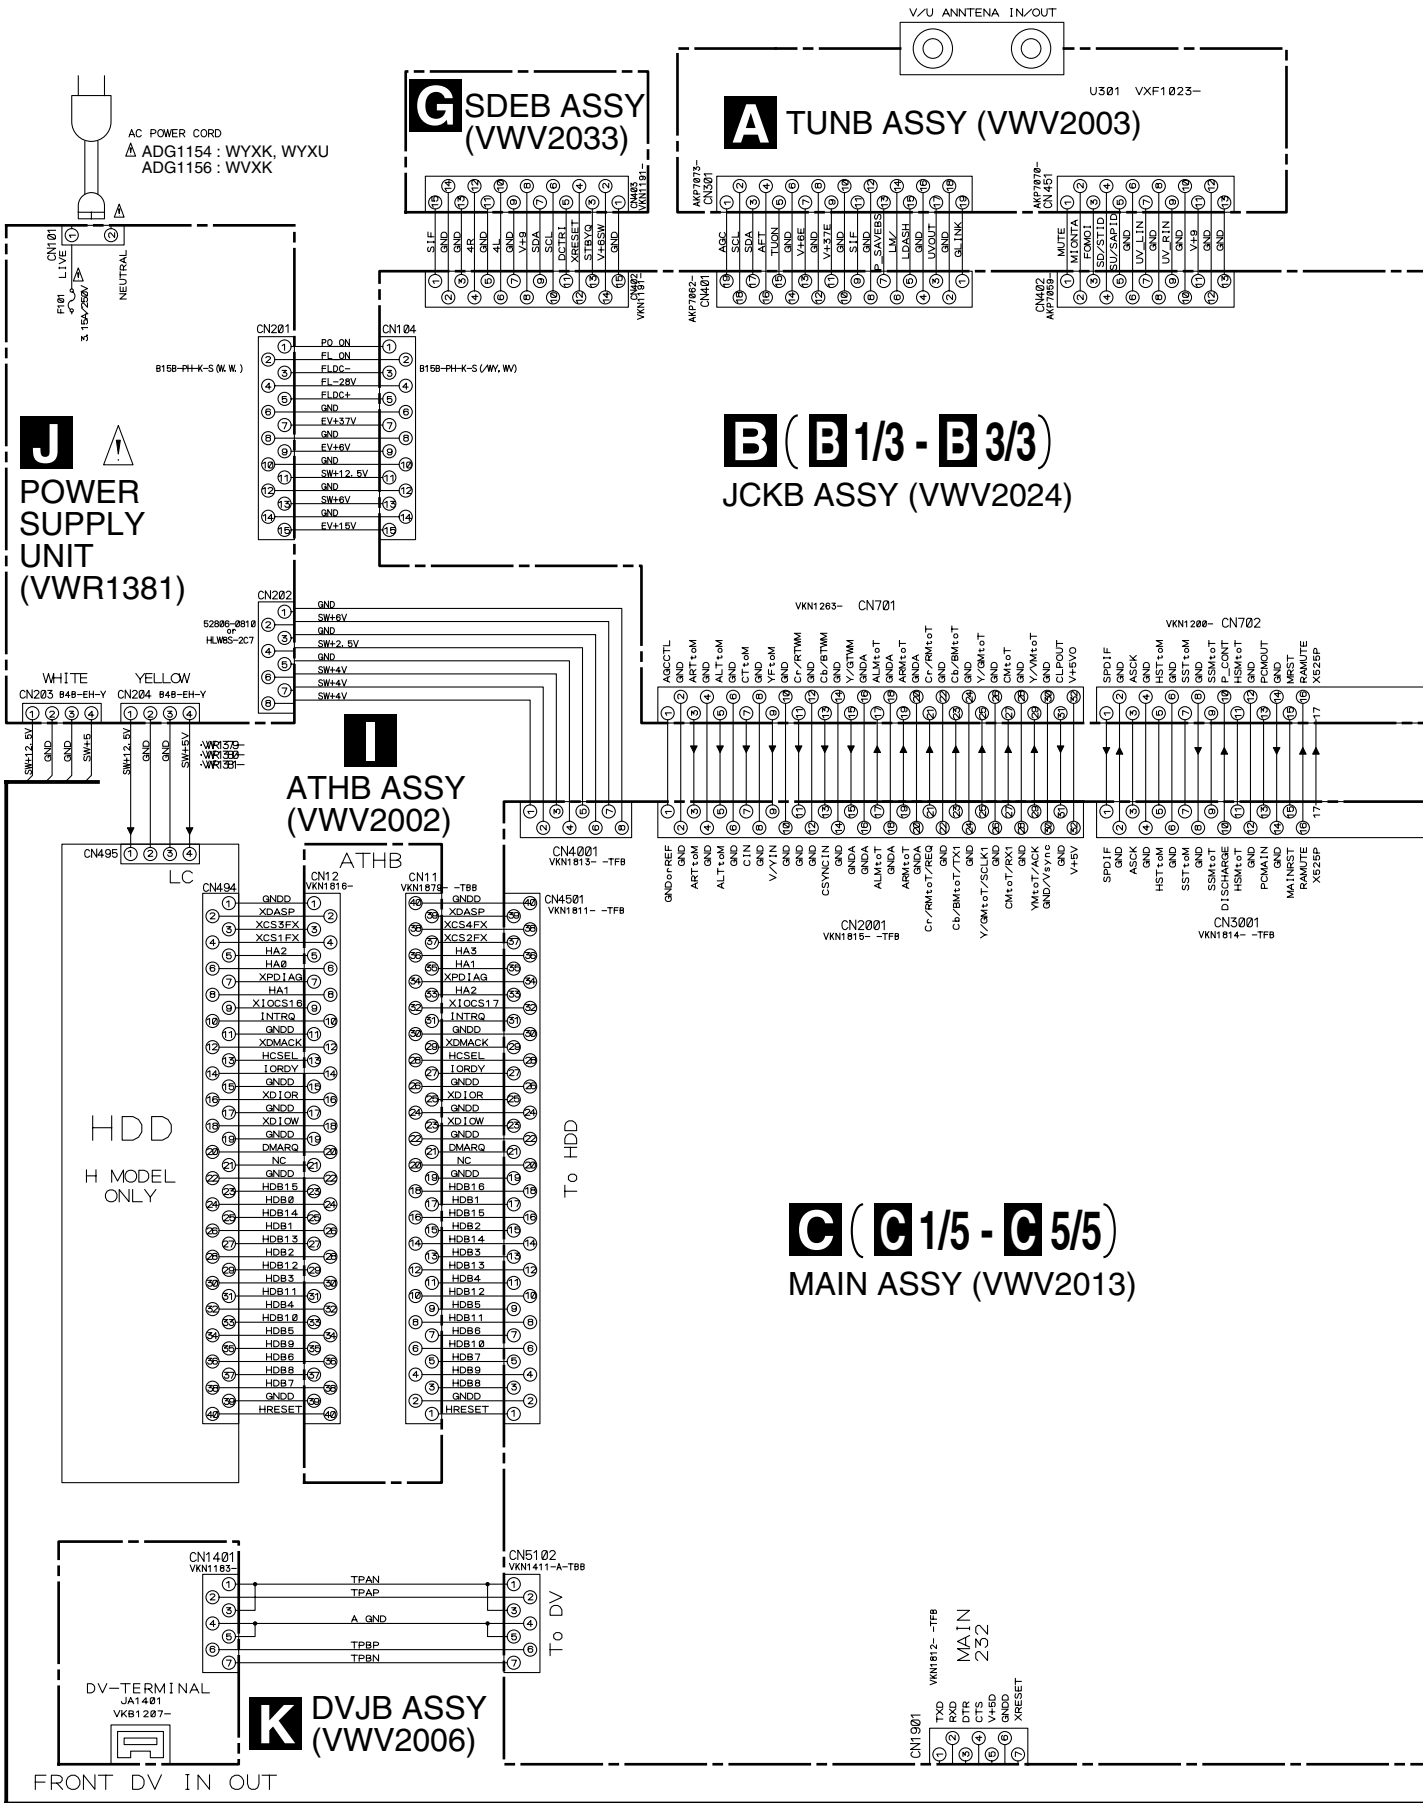F



- When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".
- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
-  : The power supply is shown with the marked box.

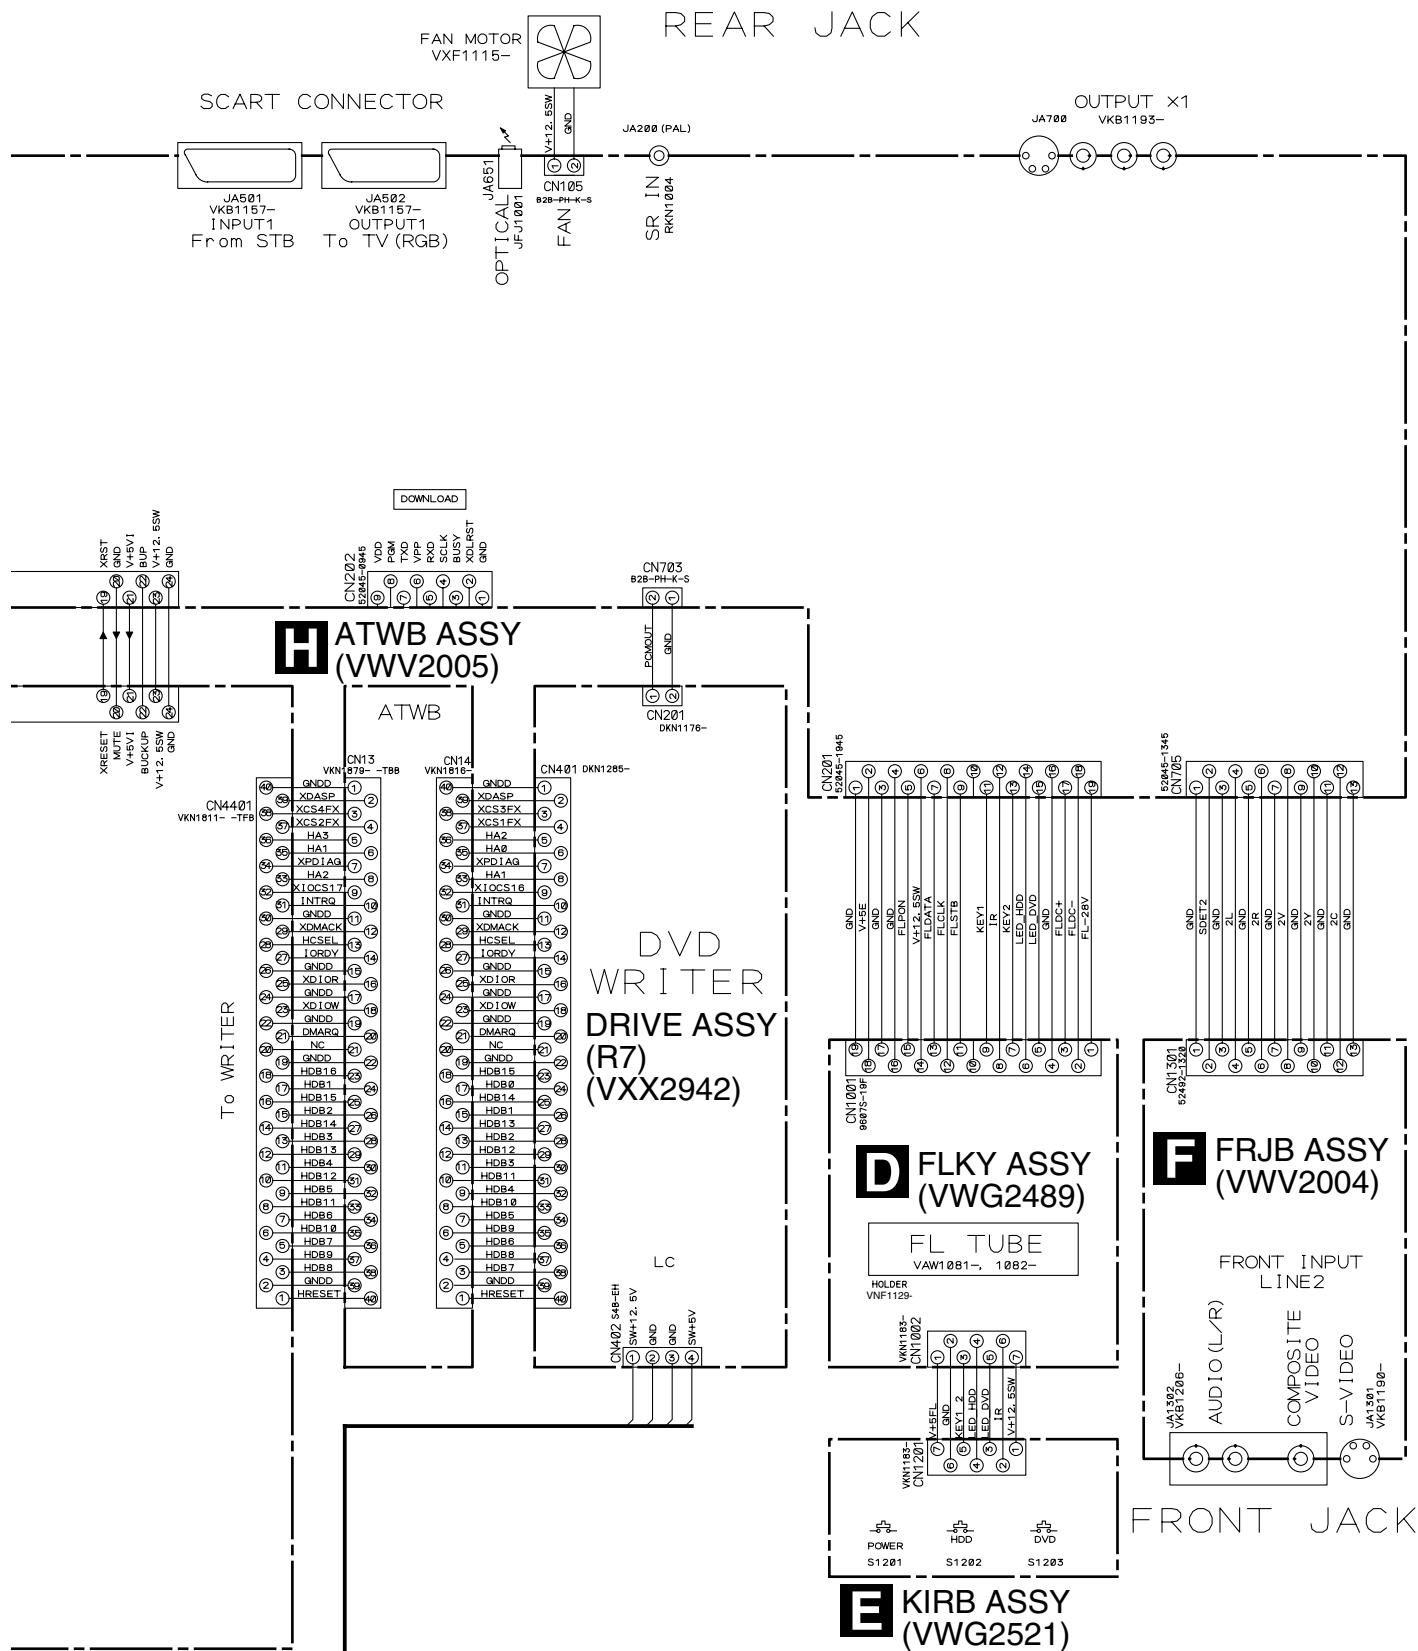


△



A TUNB ASSY (VWV2003)

- (IF) : IF Signal Route (TUNER)
 (PIF) : PIF Signal Route (TUNER)
 (T) : Video Signal Route (TUNER)
 (SIF) : SIF Signal Route (TUNER)

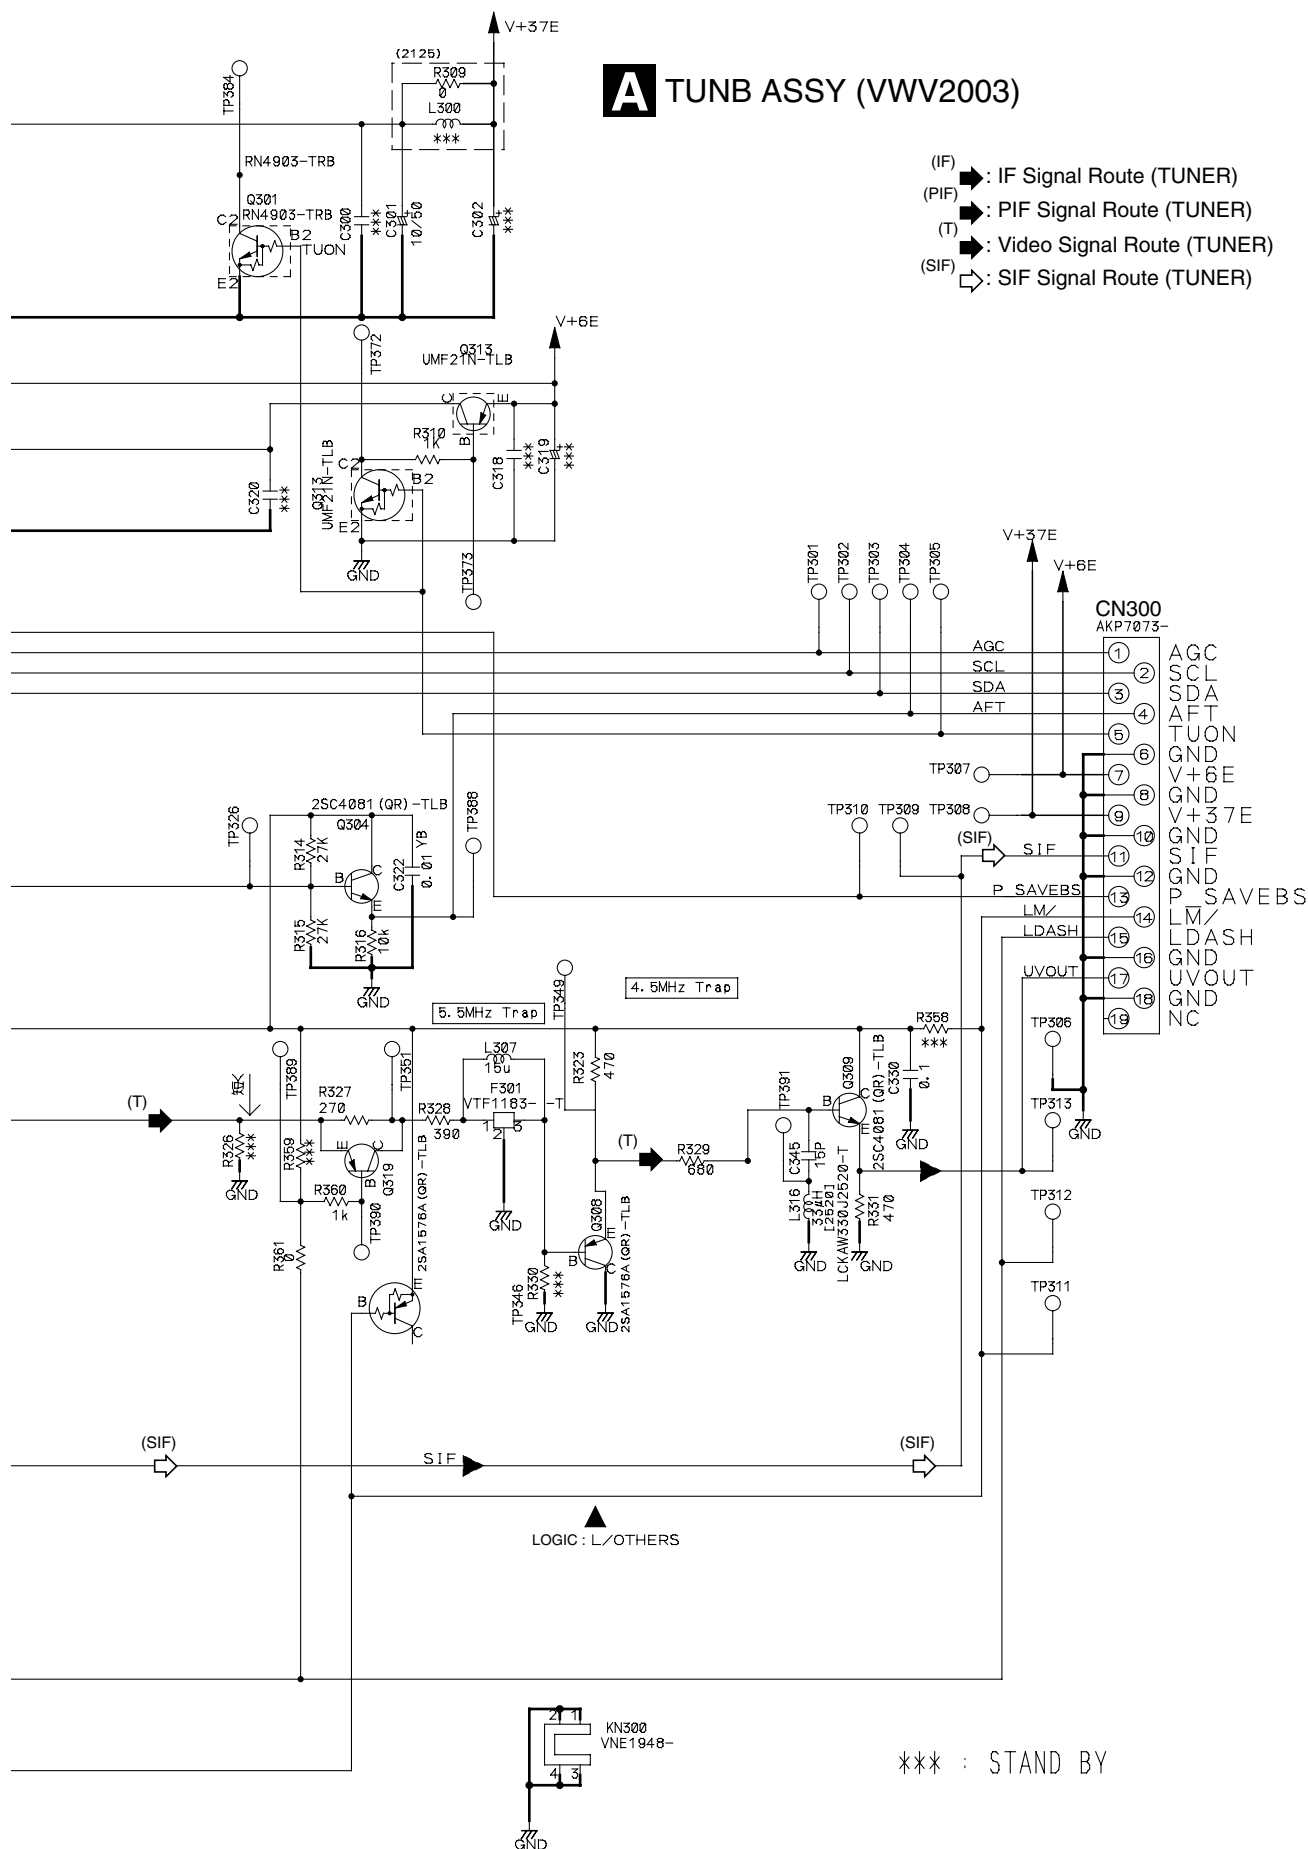

B 2/3
CN401

*** : STAND BY

A

4





A




1

B 2/3 JCKB ASSY (VWV2024)

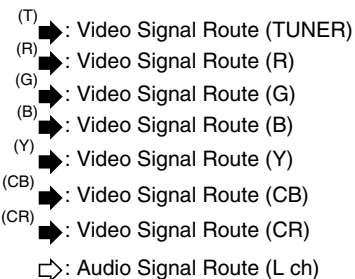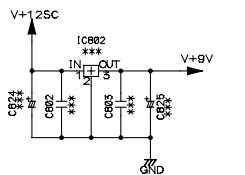


B 2/3

ATHB ASSY (VWV2002)

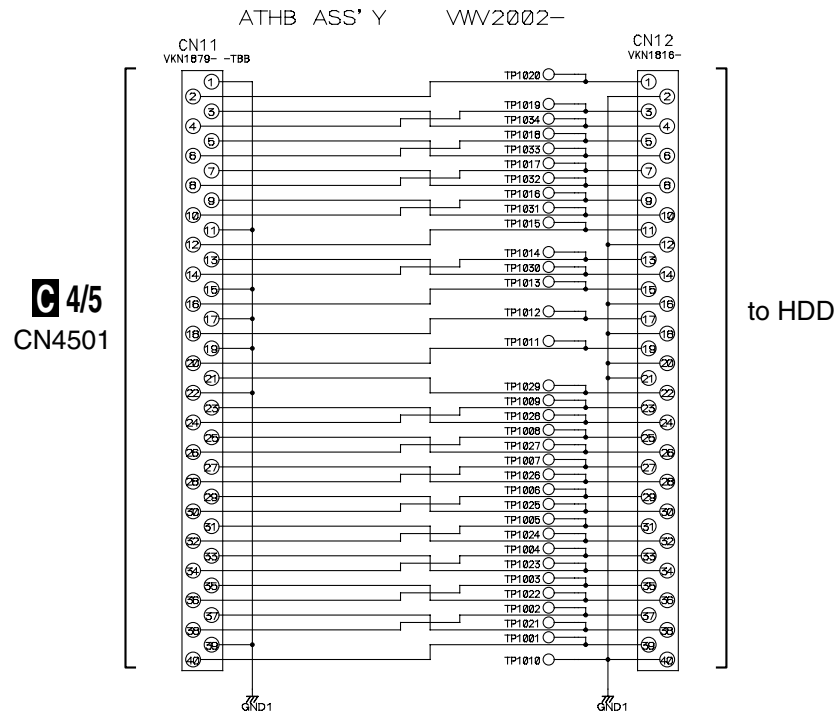

ATWB ASSY (VWV2005)

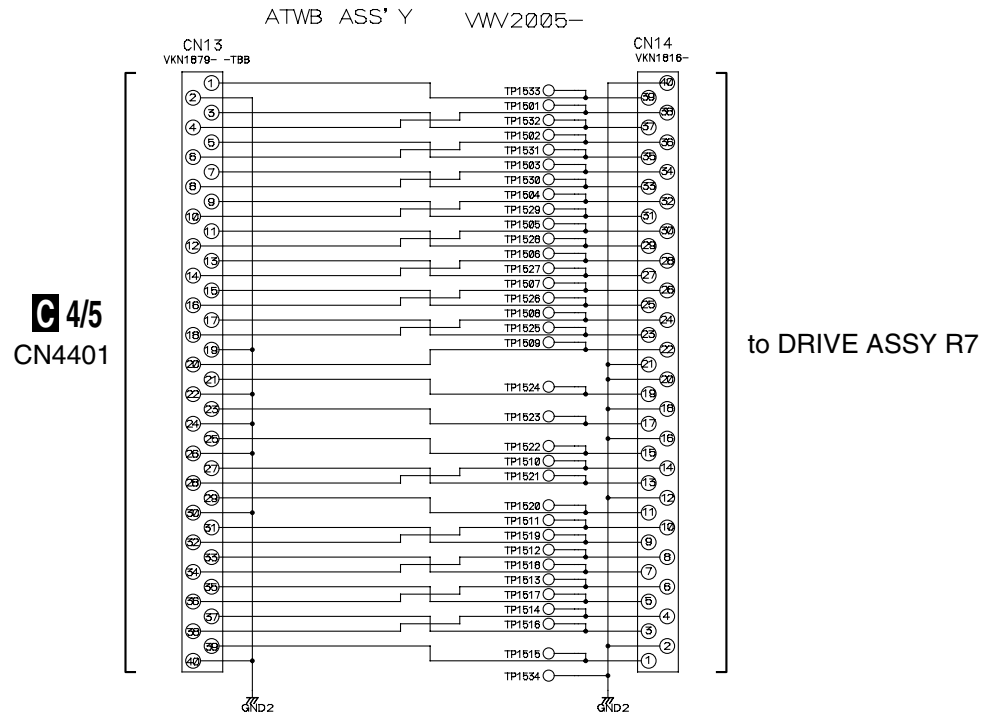

3.6 JCKB ASSY(3/3)

B 3/3 JCKB ASSY (VWV2024)

A


B

C

D

E

F

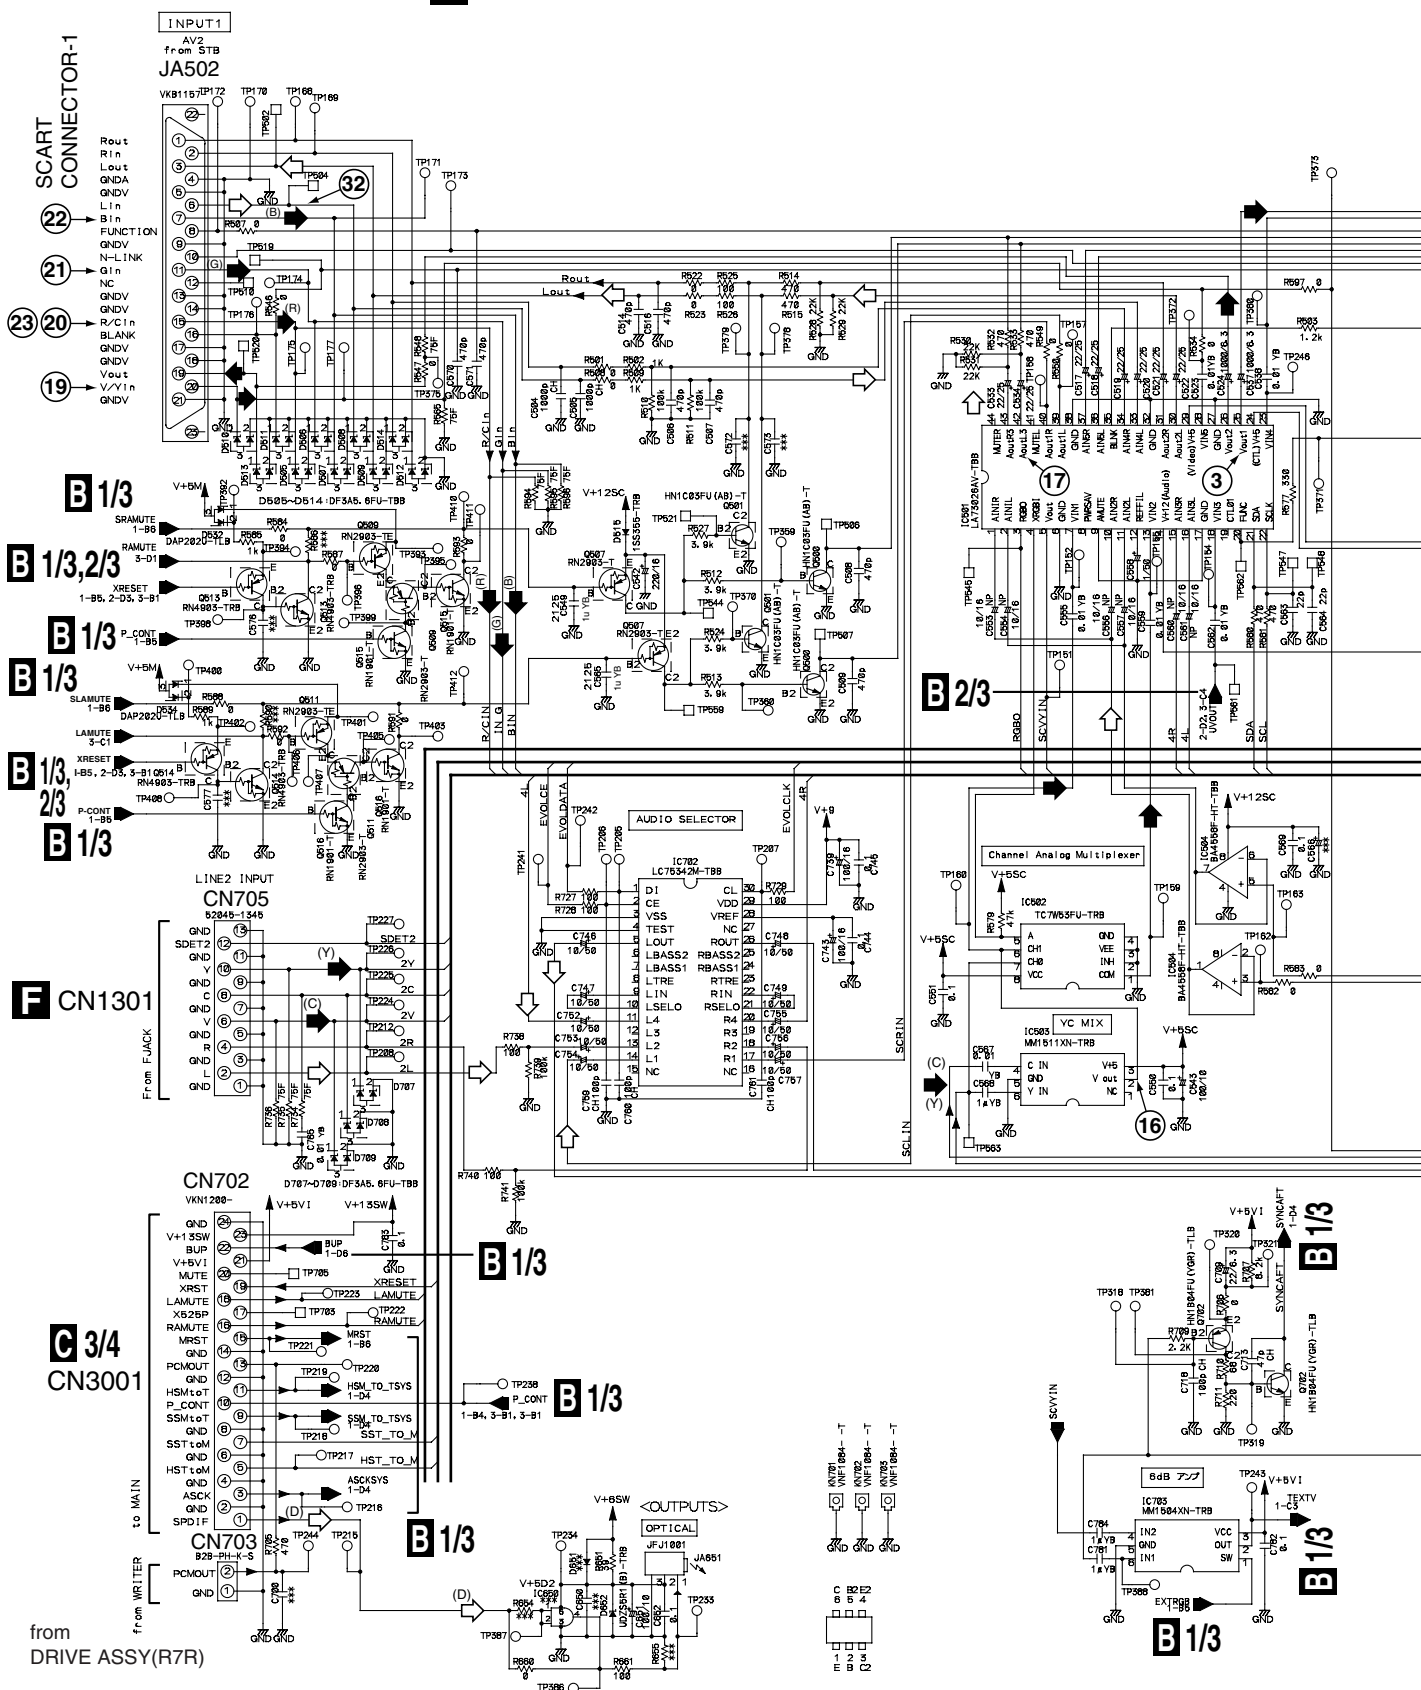

B 3/3

32






4

A **C 2/5** MAIN ASSY (VWV2013)

B

C

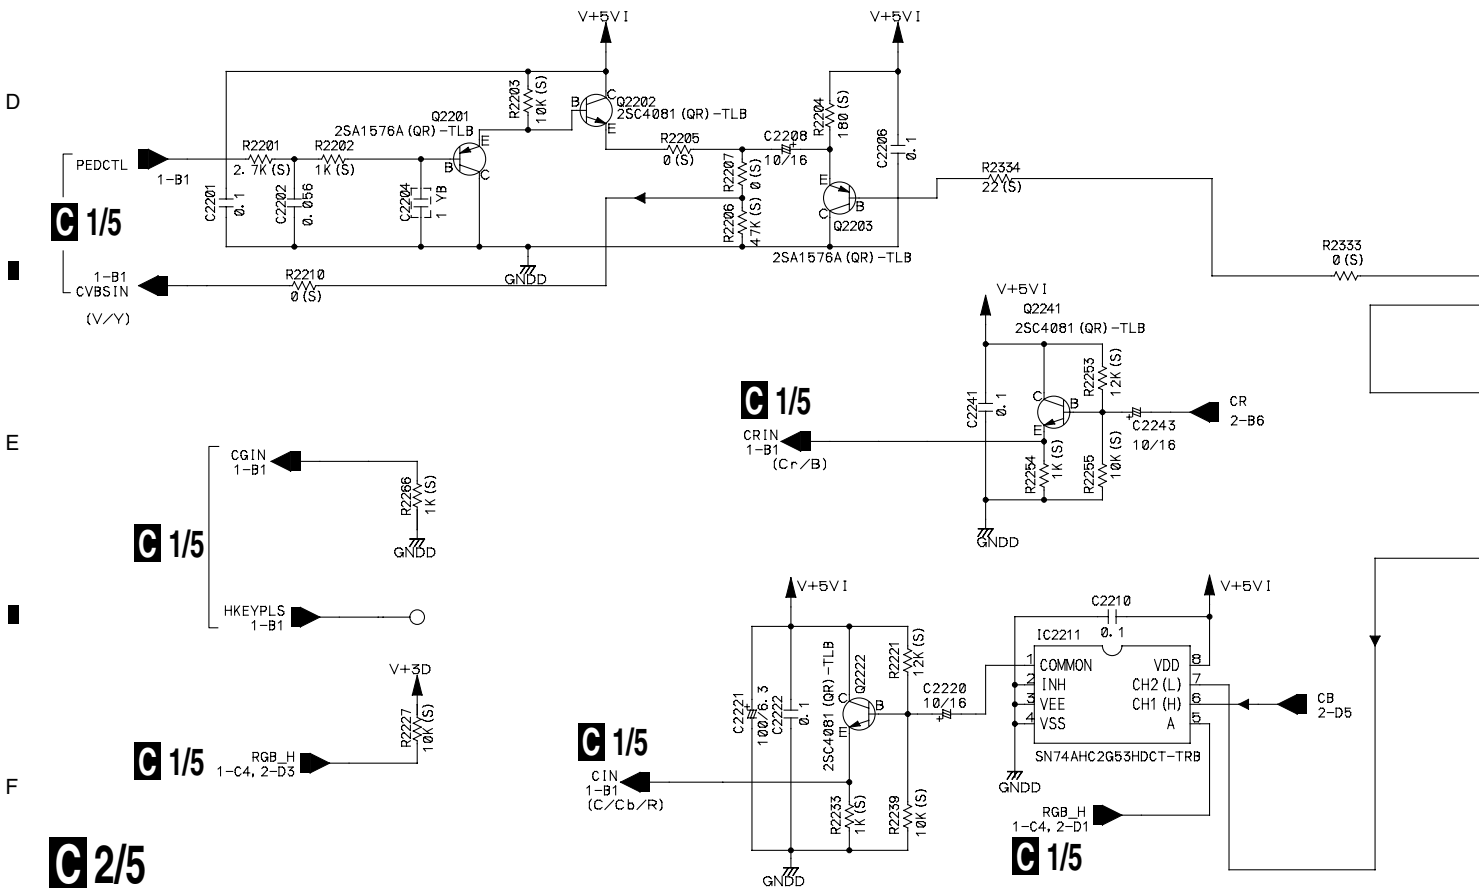



3.9 MAIN ASSY(3/5)

A

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

Q

R

S

T

U

V

W

X

Y

Z

AA

AB

AC

AD

AE

AF

AG

AH

AI

AJ

AK

AL

AM

AN

AO

AP

AQ

AR

AS

AT

AU

AV

AW

AX

AY

AZ

BA

BB

BC

BD

BE

BF

BG

BH

BI

BJ

BK

BL

BM

BN

BO

BP

BQ

BR

BS

BT

BU

BV

BW

BX

BY

BZ

CA

CB

CC

CD

CE

CF

CG

CH

CI

CJ

CK

CL

CM

CN

CO

CP

CQ

CR

CS

CT

CU

CV

CW

CX

CY

CZ

DA

DB

DC

DD

DE

DF

DG

DH

DI

DJ

DK

DL

DM

DN

DO

DP

DQ

DR

DS

DT

DU

DV

DW

DX

DY

DZ

EA

EB

EC

ED

EE

EF

EG

EH

EI

EJ

EK

EL

EM

EN

EO

EP

EQ

ER

ES

ET

EU

EV

EW

EX

EY

EZ

FA

FB

FC

FD

FE

FF

FG

FH

FI

FJ

FK

FL

FM

FN

FO

FP

FQ

FR

FS

FT

FU

FV

FW

FX

FY

FZ

GA

GB

GC

GD

GE

GF

GG

GH

GI

GJ

GK

GL

GM

GN

GO

GP

GQ

GR

GS

GT

GU

GV

GW

GX

GY

GZ

HA

HB

HC

HD

HE

HF

HG

HH

HI

HJ

HK

HL

HM

HN

HO

HP

HQ

HR

HS

HT

HU

HV

HW

HX

HY

HZ

IA

IB

IC

ID

IE

IF

IG

IH

II

IJ

IK

IL

IM

IN

IO

IP

IQ

IR

IS

IT

IU

IV

IW

IX

IY

IZ

JA

JB

JC

JD

JE

JF

JG

JH

JI

JJ

JK

JL

JM

JN

JO

JP

JQ

JR

JS

JT

JU

JV

JW

JX

JY

JZ

KA

KB

KC

KD

KE

KF

KG

KH

KI

KJ

KK

KL

KM

KN

KO

KP

KQ

KR

KS

KT

KU

KV

KW

KX

KY

KZ

LA

LB

LC

LD

LE

LF

LG

LH

LI

LJ

LK

LL

LM

LN




△



C 4/5 MAIN ASSY (VWV2013)



C 4/5

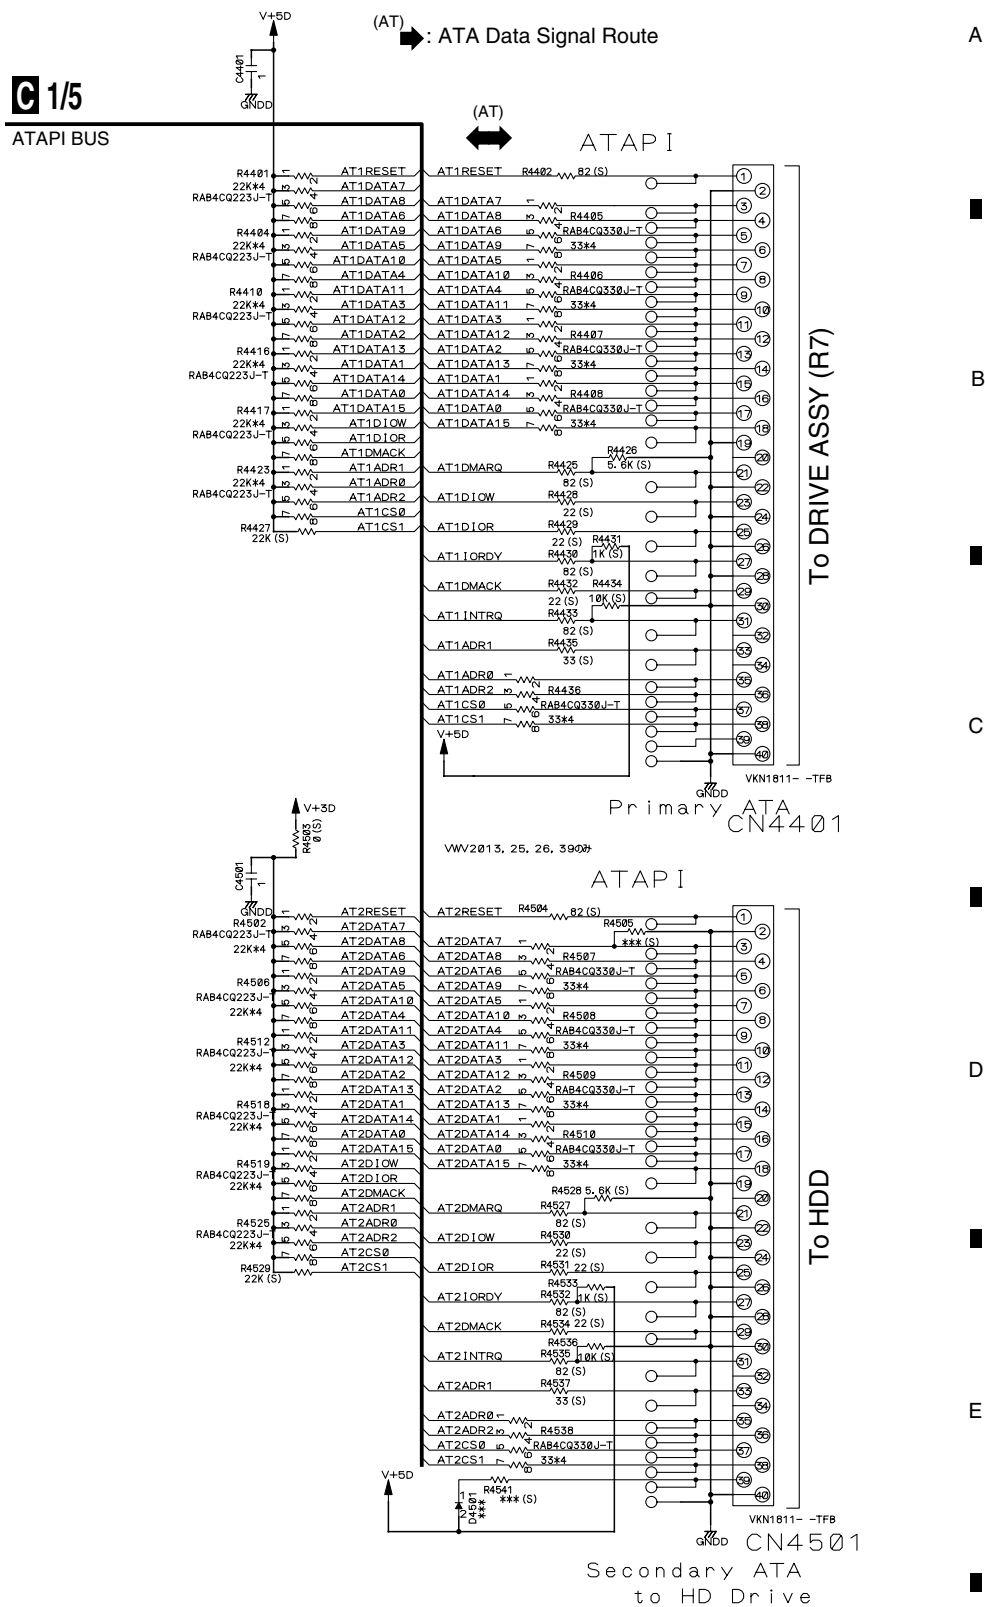

4

A



C




E

F



3.12 FLKY, KIRB, FRJB and DVJB ASSYS

D FLKY ASSY (VWG2489)

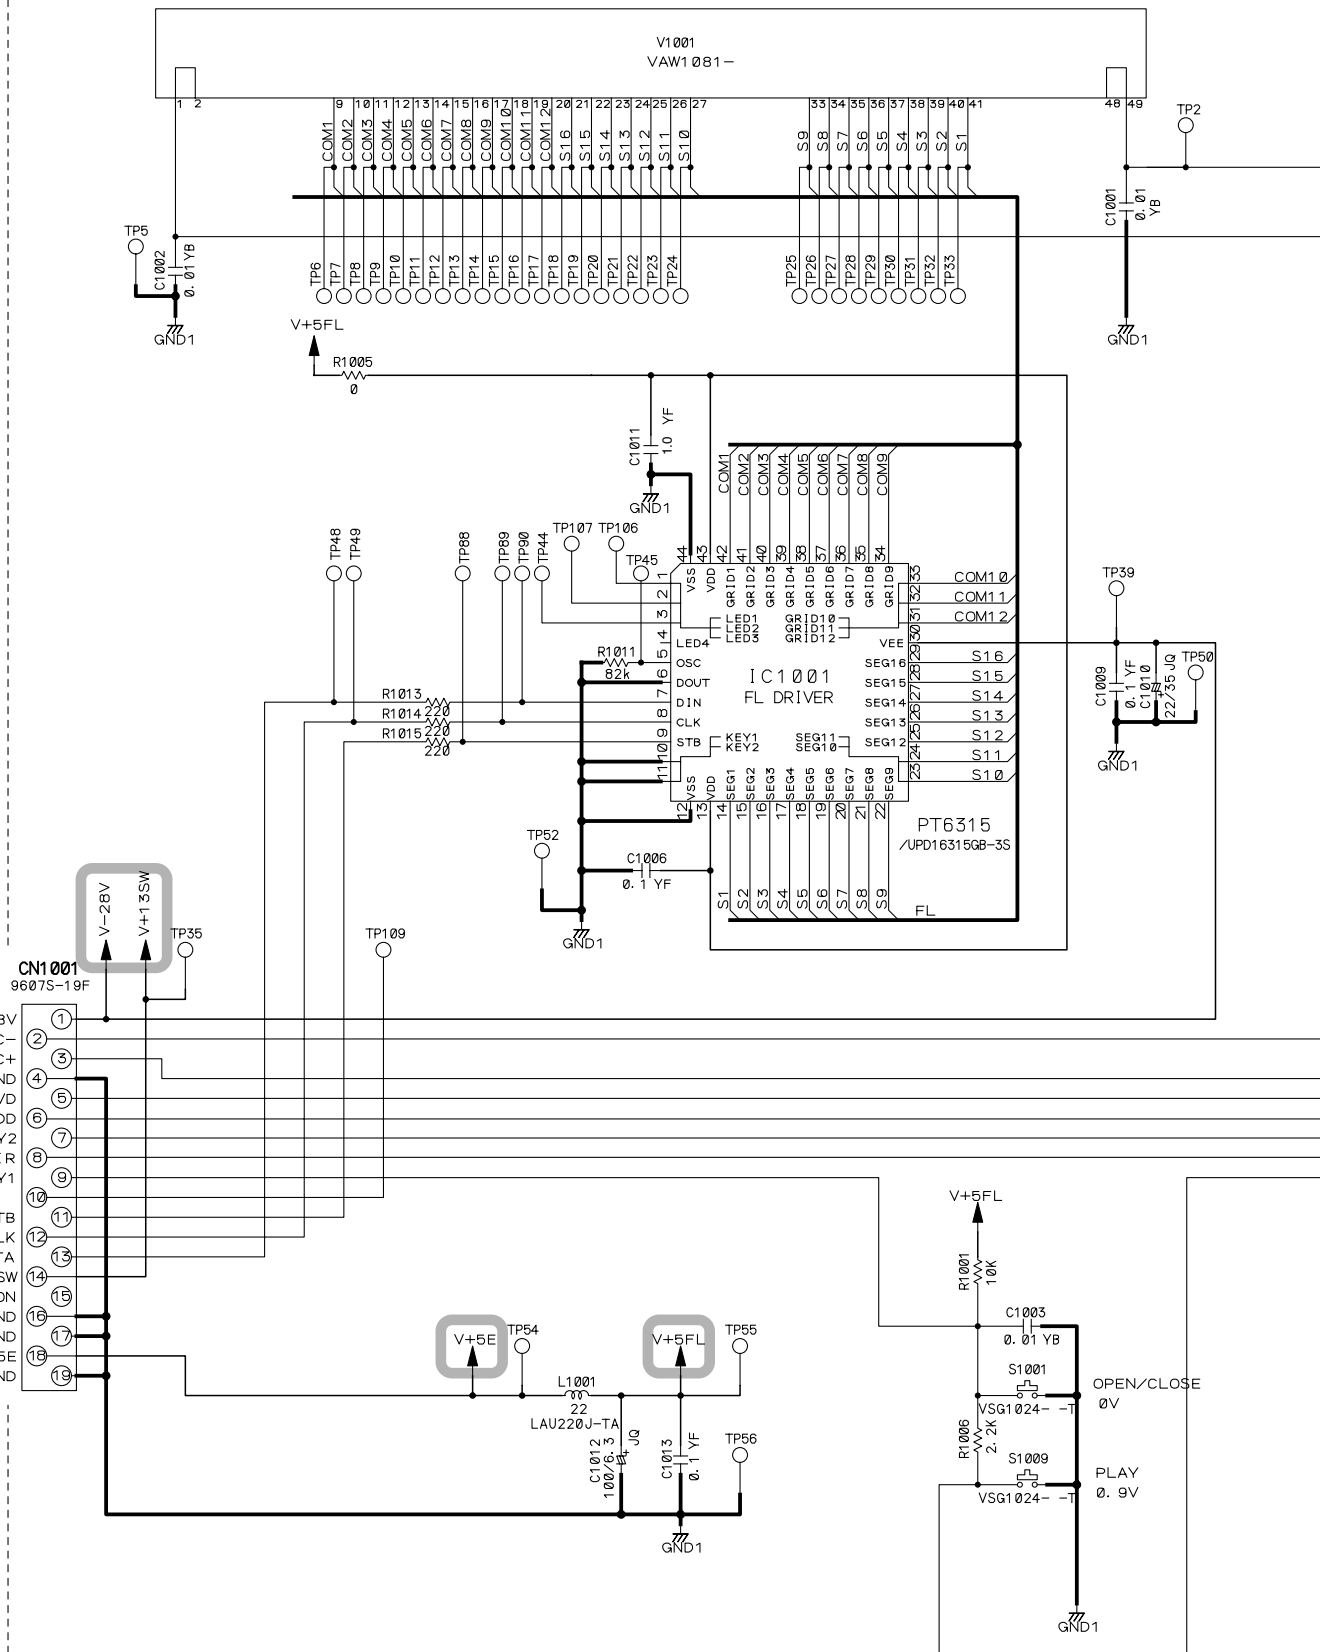




△



G SDEB ASSY (VWV2033)

(SIF) ⇨ : SIF Signal Route (TUNER)
 ⇨ : AUDIO Signal Route (L ch)

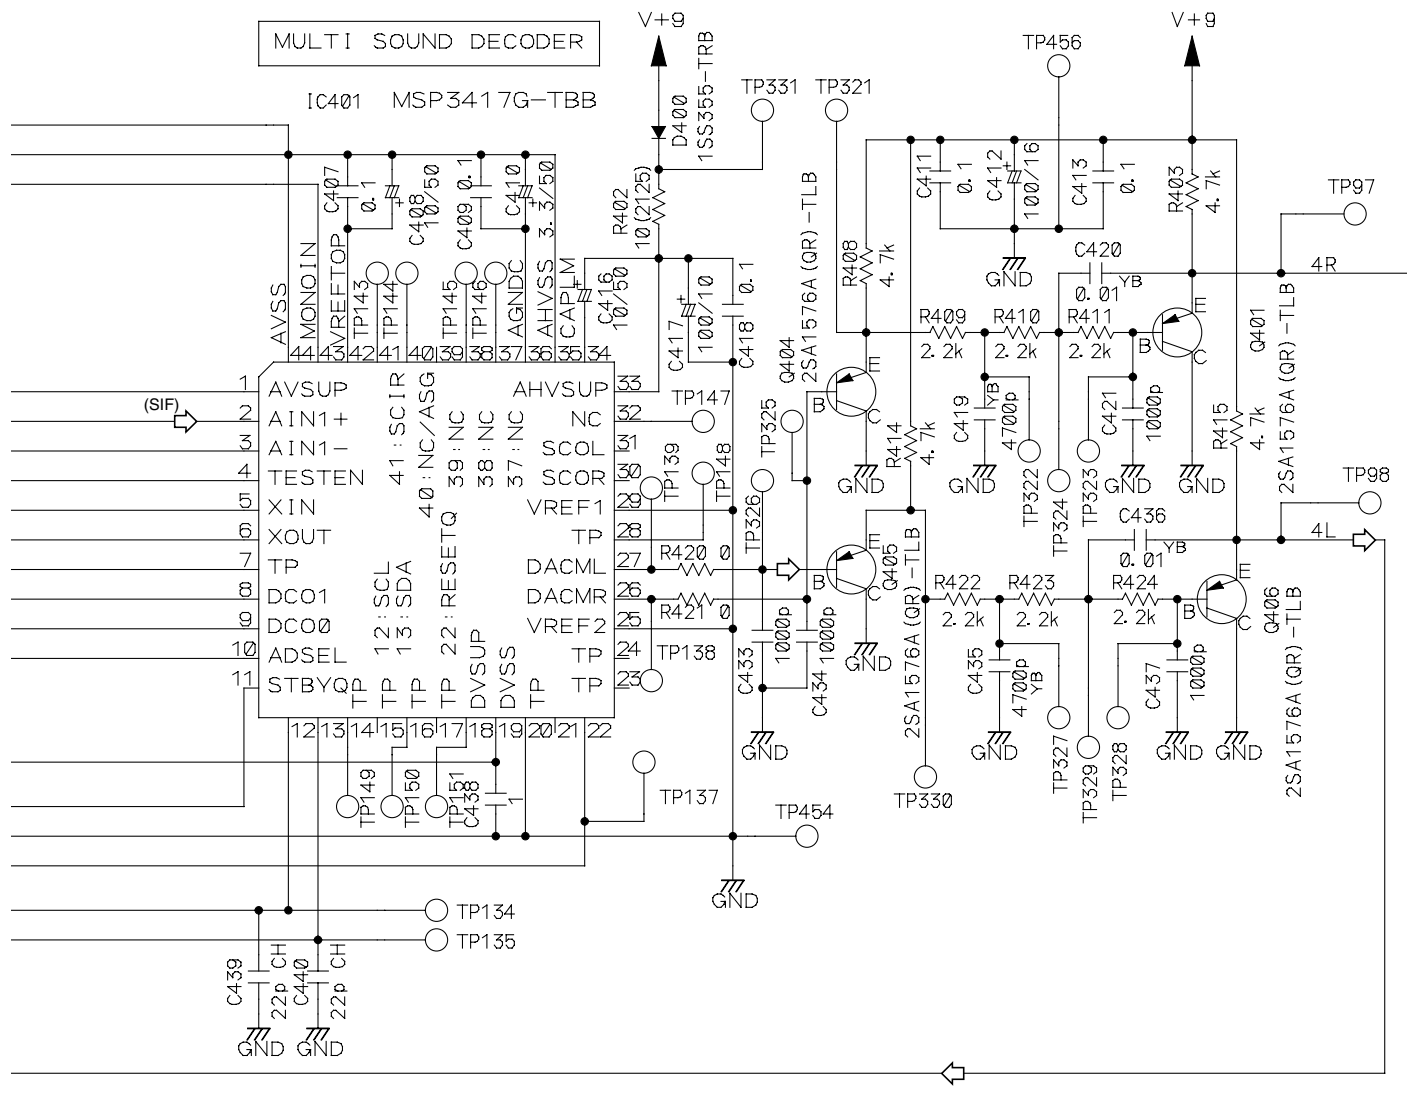

*** : STAND BY

4

A



C

D

E

F

A



C

□

E

F


3.15 WAVE FORMS

Note : The encircled numbers denote measuring point in the schematic diagram.


B JCKB ASSY

Measurement condition ;

No.1, No.19 to No.31 : 75% Color-bar
 No.3, No.16 : 75% Color-bar, APX disc 1-24
 No.2, No.32, No.33 : 1kHz, 2Vrms
 No.17, No.18 : 1kHz, 2Vrms, APX disc 1-1

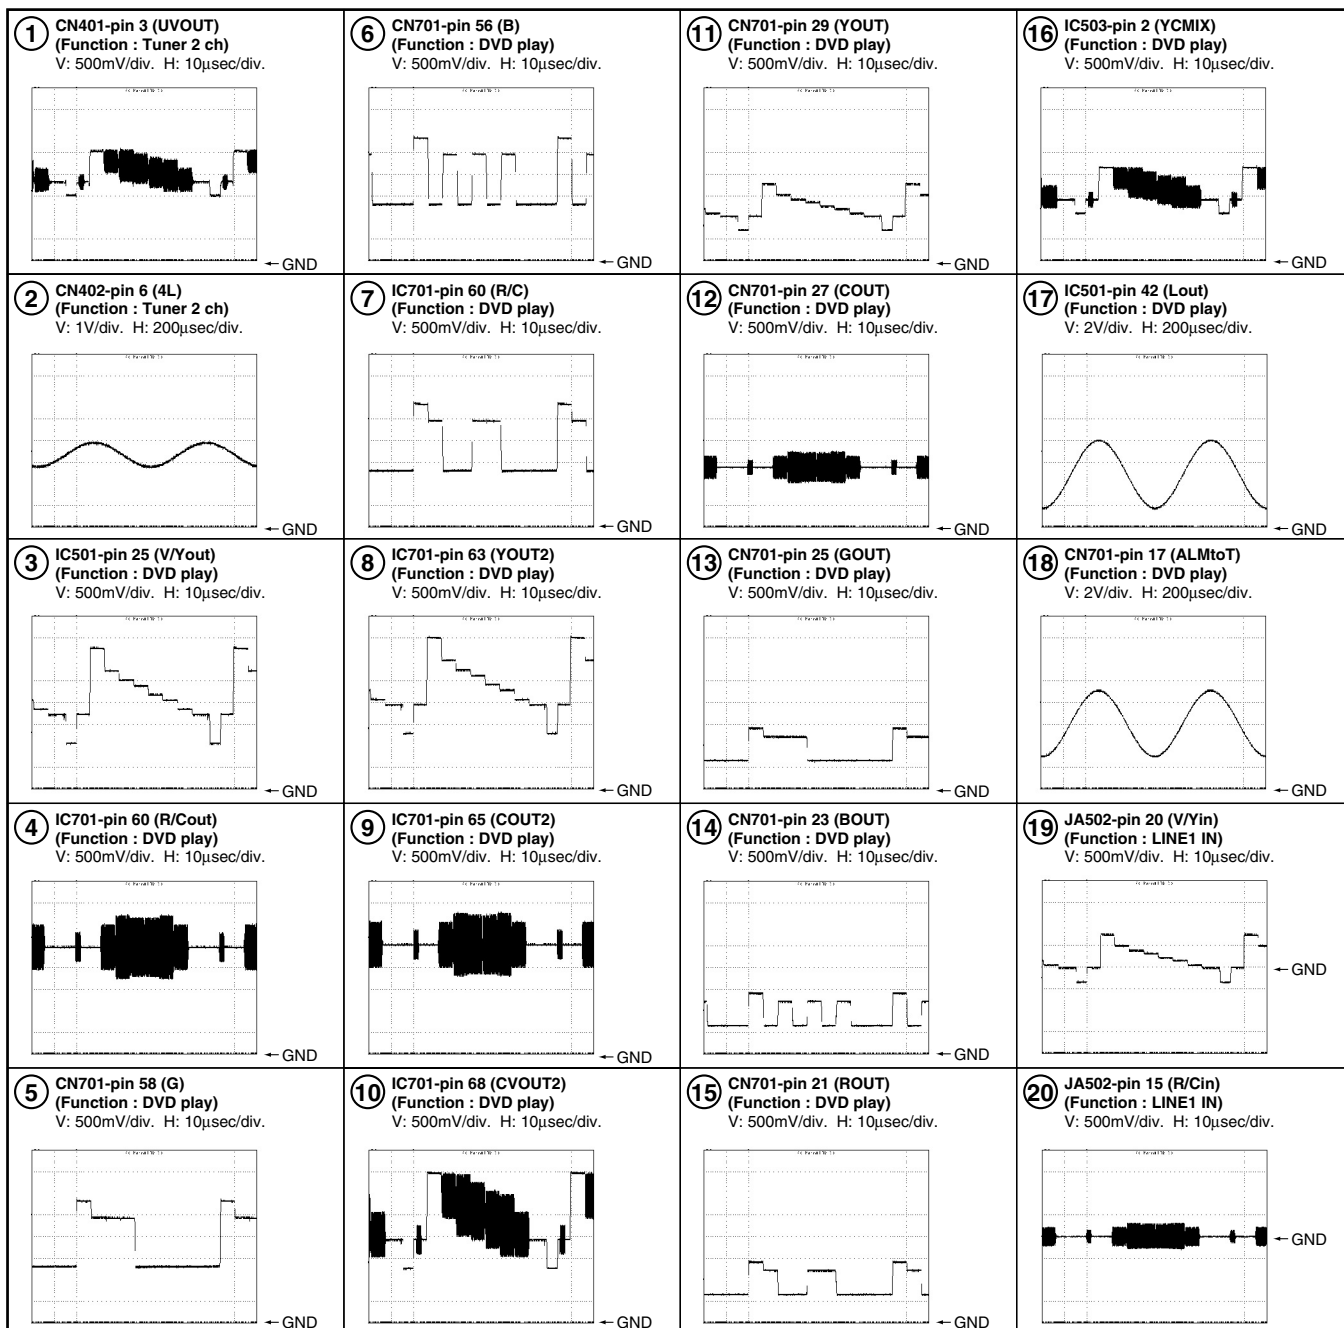

B JCKB ASSY

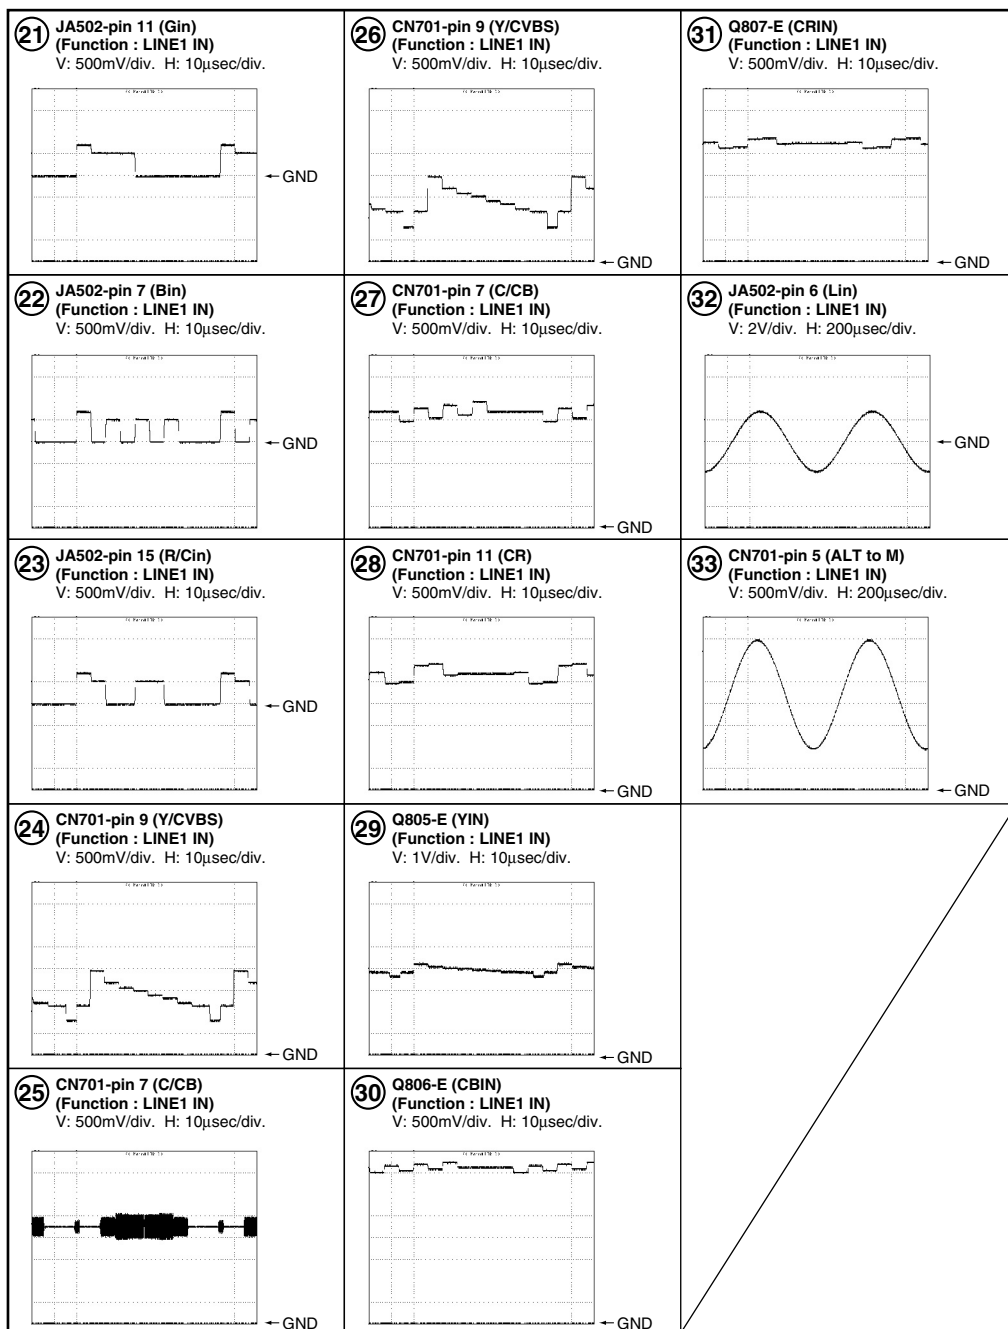

C MAIN ASSY

Measurement condition ;

- A No.3 to No.8, No.10 to No.13 : 75% Color-bar, A1 disc 2-20
 No.15, No.16 : 75% Color-bar
 No.9, No.14 : 1kHz, 2Vrms, A1 disc 2-1
 No.17 : 1kHz, 2Vrms


B

C

D

E

 
 
 
 
 
 

 

 
F

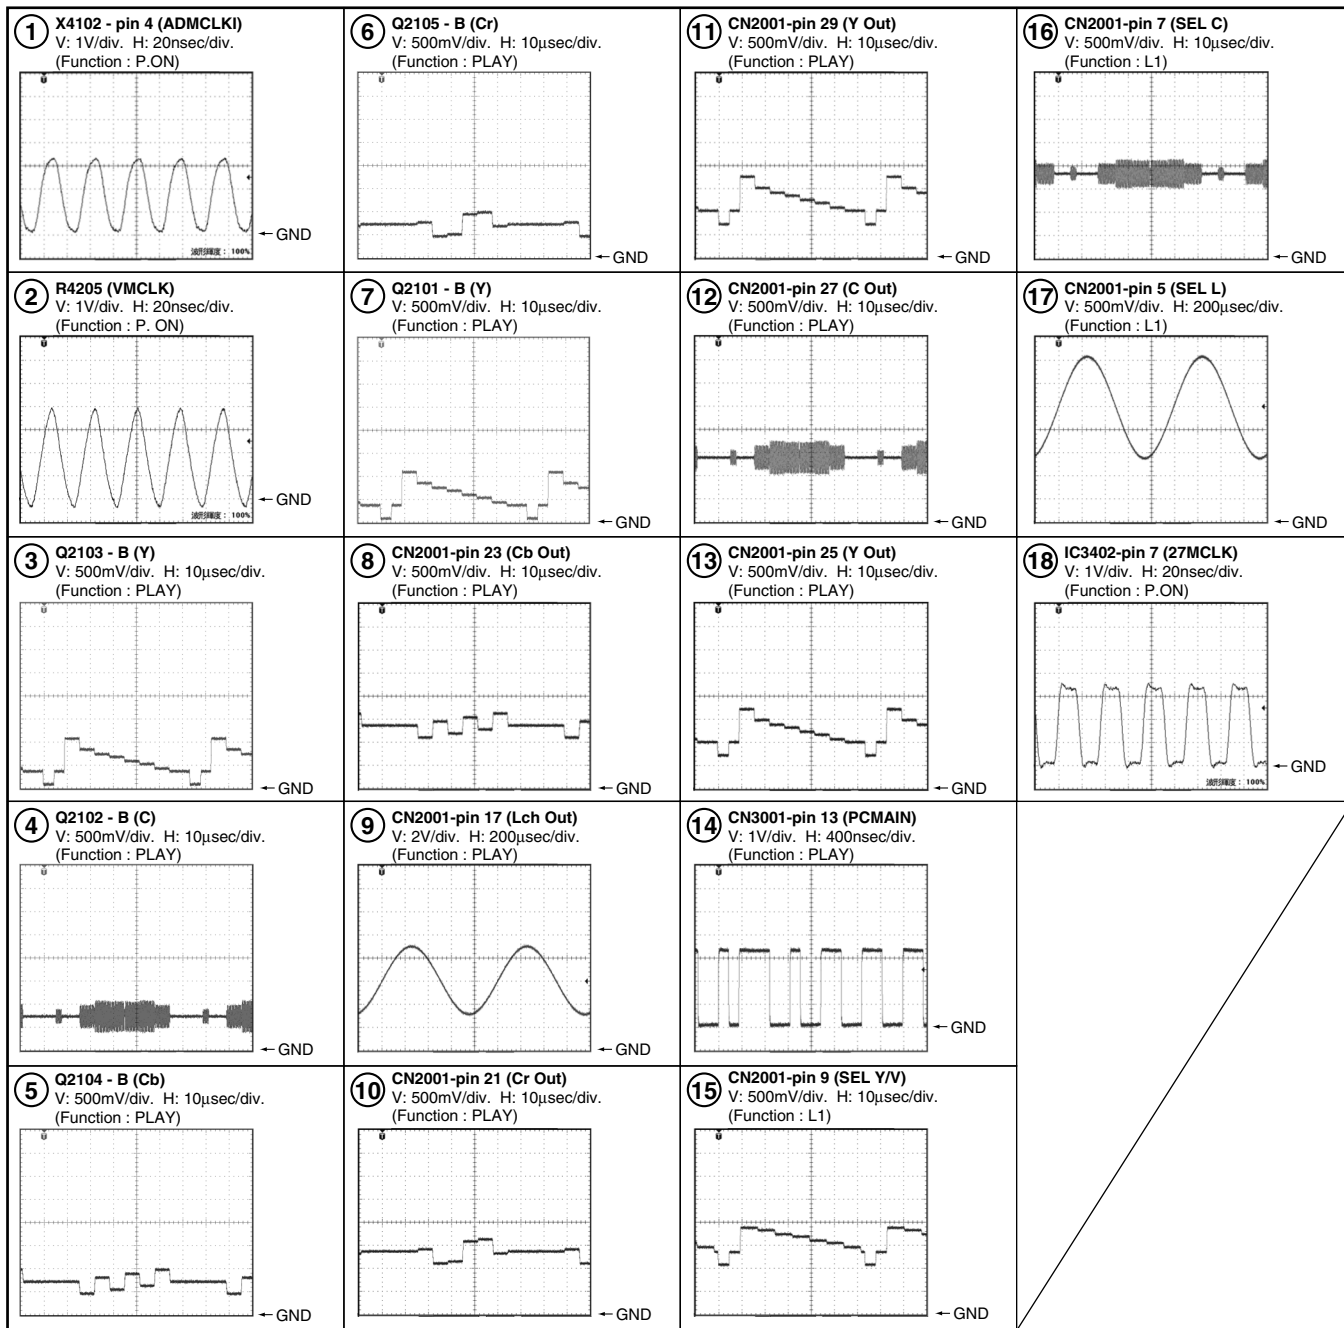


4. PCB CONNECTION DIAGRAM

NOTE FOR PCB DIAGRAMS :

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol In PCB Diagrams	Symbol In Schematic Diagrams	Part Name
		Transistor
		Transistor with resistor
		Field effect transistor
		Resistor array
		3-terminal regulator

3. The parts mounted on this PCB include all necessary parts for several destinations.
For further information for respective destinations, be sure to check with the schematic diagram.
4. View point of PCB diagrams.

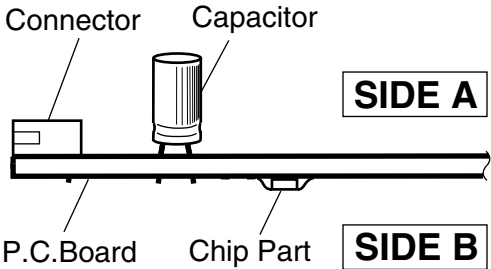

1 2 3 4

4.1 TUNB ASSY


SIDE A

SIDE A

A TUNB ASSY

B CN401

CN300

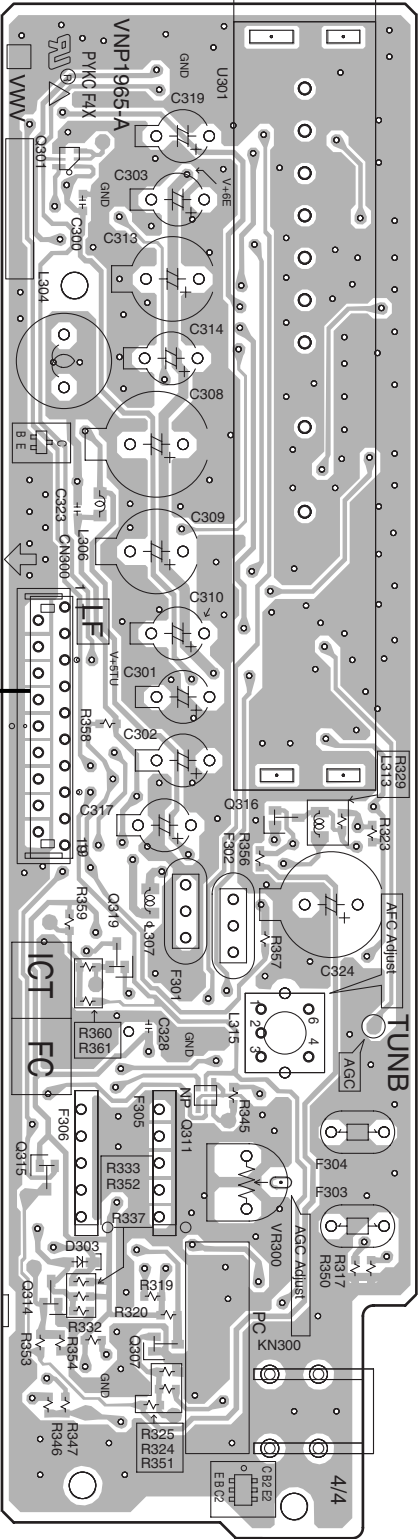


(VNP1965-A)

SIDE B

SIDE B

A TUNB ASSY

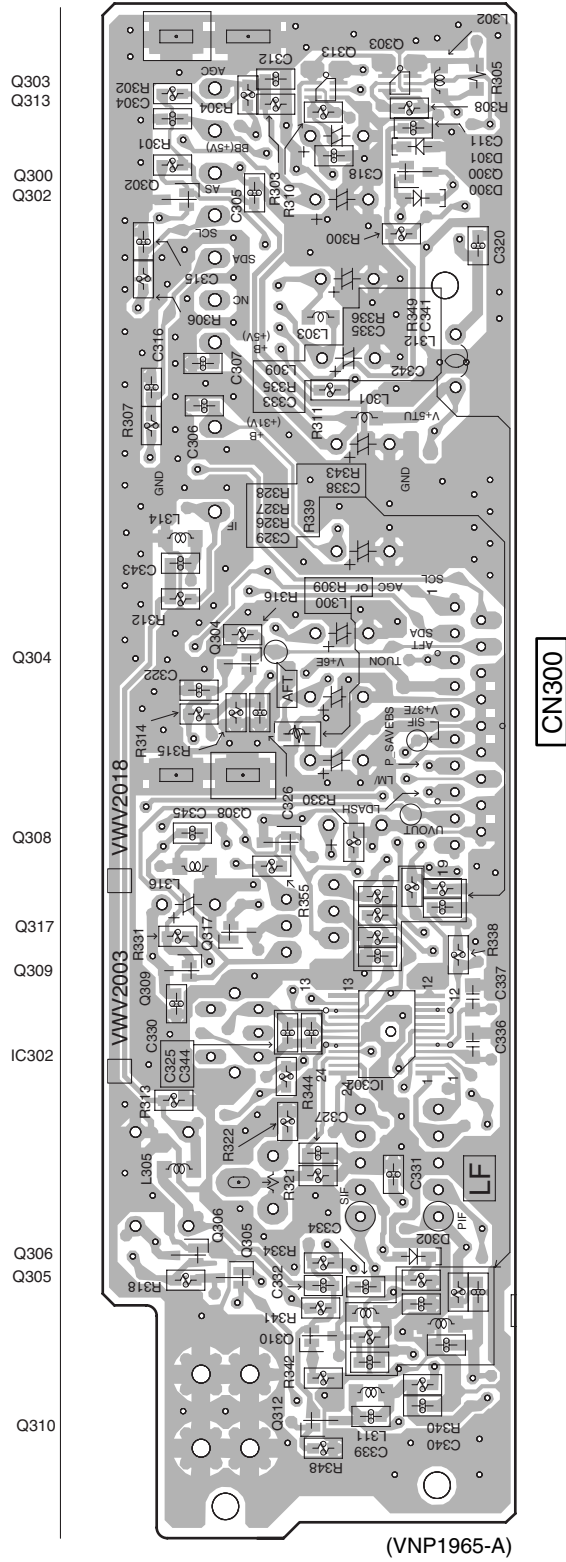

A

A

4.2 JCKB, ATWB and ATHB ASSYS

SIDE A


B JCKB ASSY

for Downloading


F CN1301

C CN4501

I ATHB ASSY

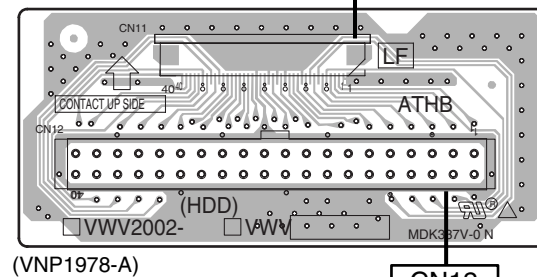

H ATWB ASSY

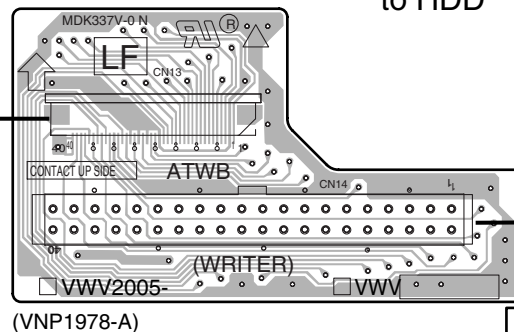

R7 DRIVE ASSY

R7 DRIVE ASSY

D CN10C

B H I

DVR-520H-S

A

1

C

[

E

1

55



C CN3002

(VNP1978-A)

SIDE B

B JCKB ASSY

A

B

C


D

E

F

- Q104
- Q705
- Q503
- IC501 Q704 Q707 Q110 Q506
- Q209
- Q109
- Q203
- IC203 Q200 Q201
- IC702
- Q100
- IC102
- IC205 Q101
- Q103

CN401

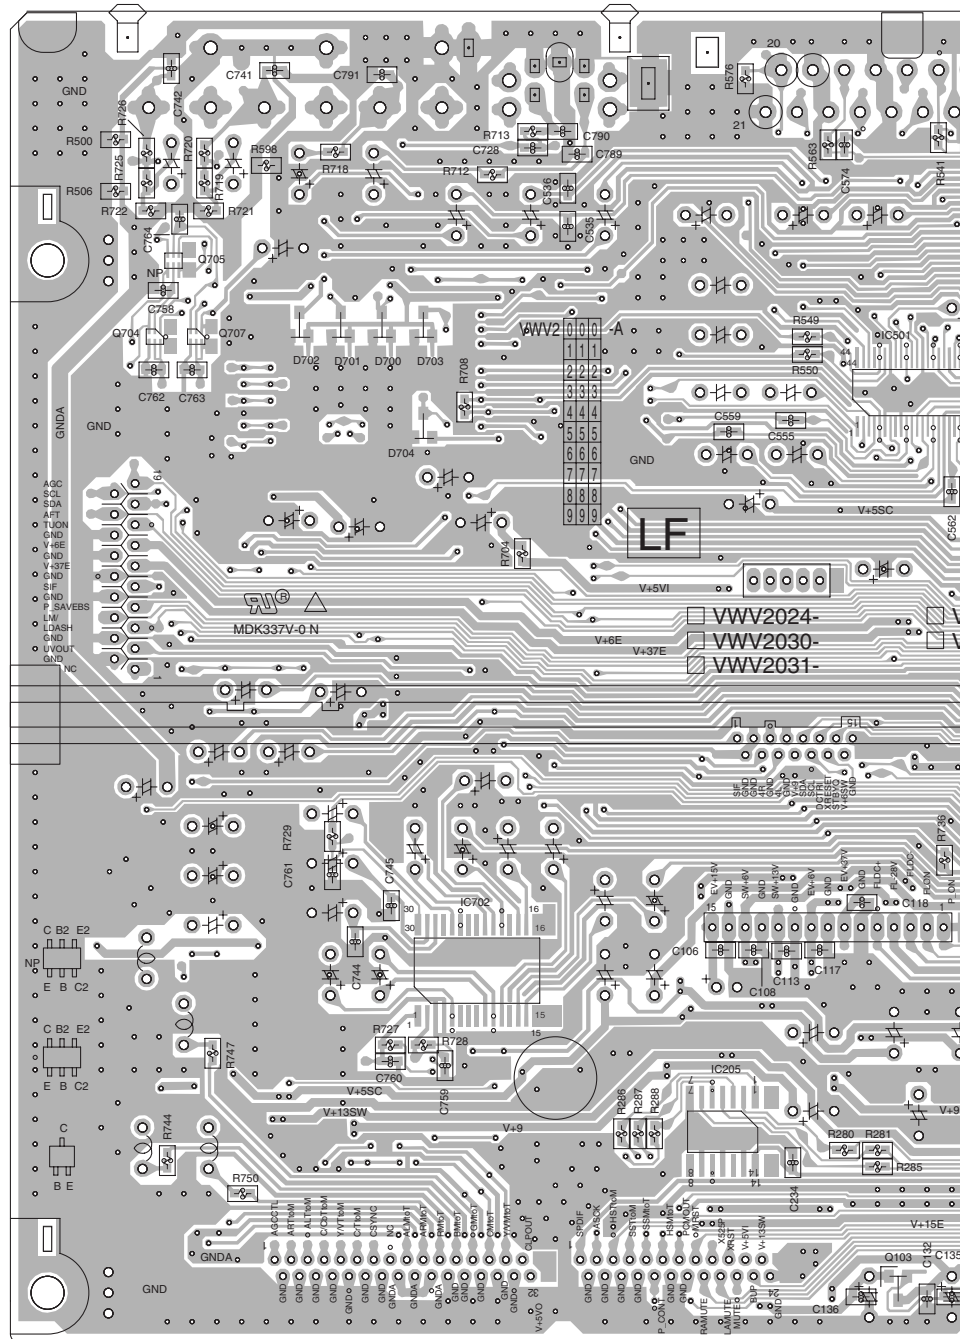

(VNP1978-A)

CN701

CN402

CN702

CN102


B

C MAIN ASSY

CN1401

CN5102

	IC4007
	IC5101
	Q1102
	IC5202
	IC4101
	Q2105
	Q2104
	Q2311
	Q2101
	Q2102
	Q2302
	Q2312
	Q2301
	Q2103
	IC5204
	IC3301
	Q2201
	Q2222
	Q2202
	IC4008
	Q2203
	IC3403
	IC3402
	IC4206
	IC4205
	IC3101
	IC4004
	IC2331
	IC2211
Q3201	IC2301
	Q2241
	Q3202
IC4003	IC2302
	IC4005
	IC3001
Q2403	Q2402
	Q2001

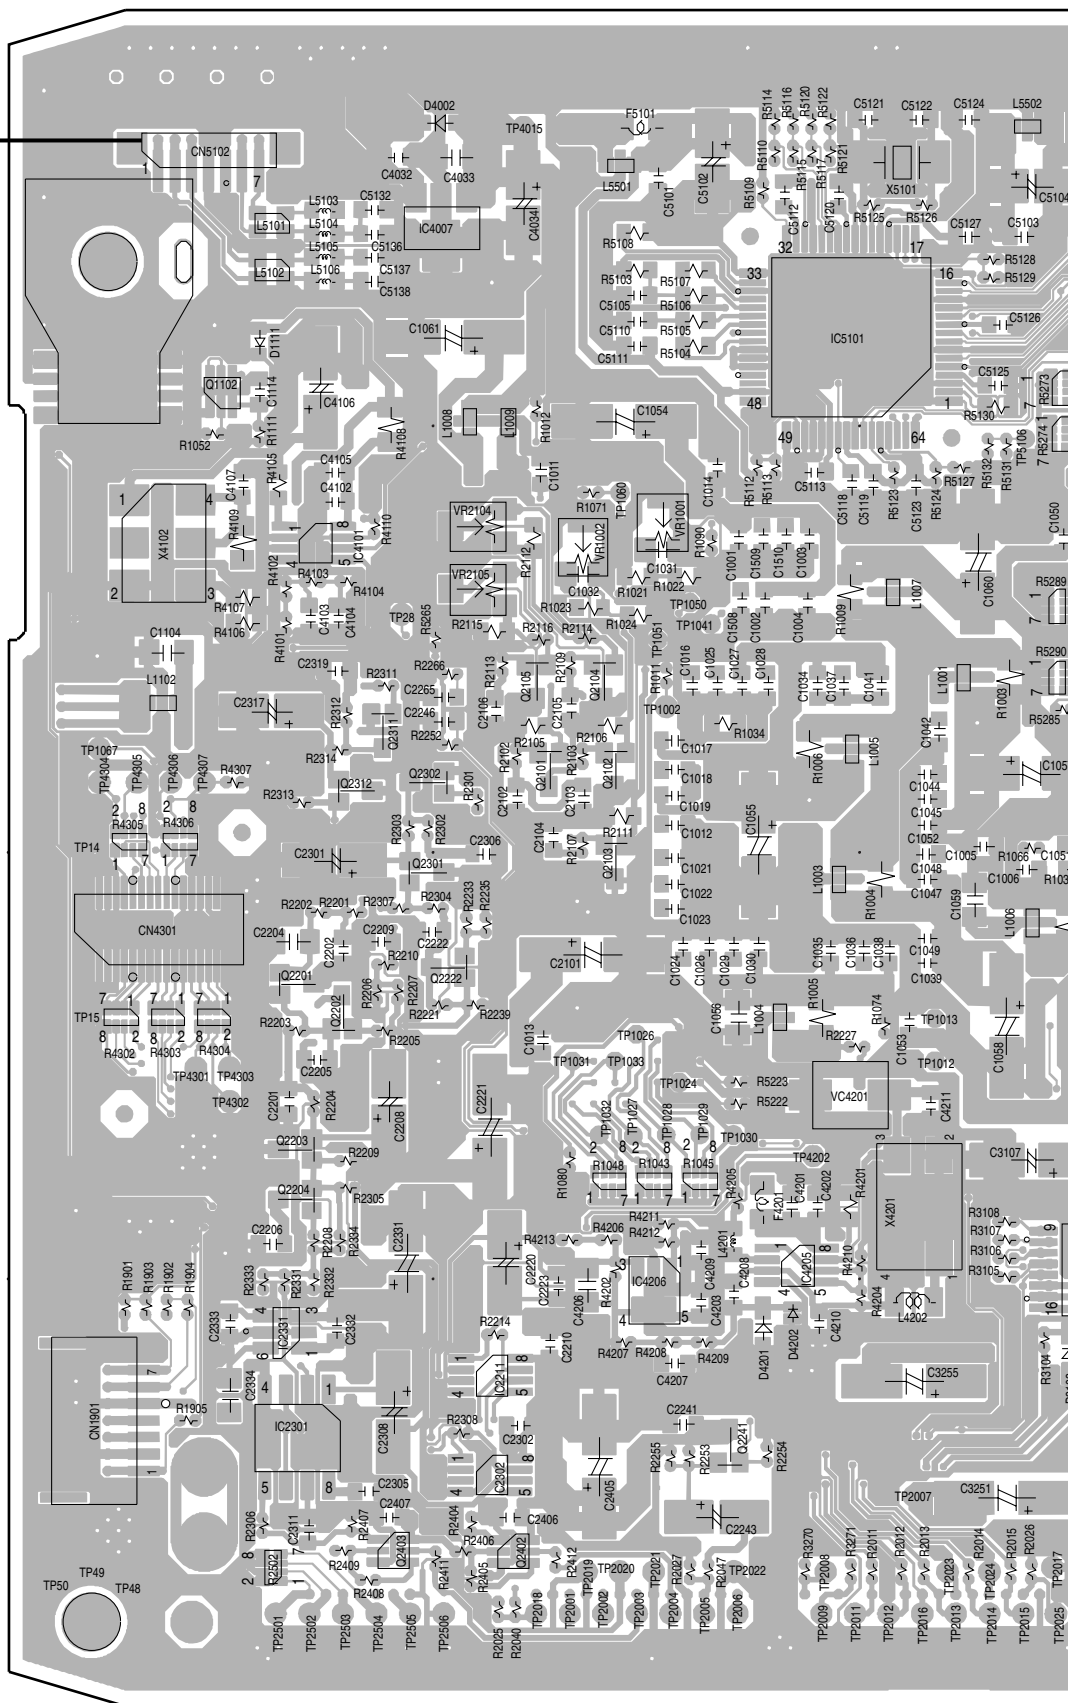

DVR-520H-S

SIDE A



F

SIDE B**C** MAIN ASSY

A

B

C

D

E

F

IC1103
IC1104

IC1301

IC5301

IC5341

IC1421

IC1102

IC4006

IC5321

IC1001

IC5322

IC1401

IC5002

IC1101

IC3201

Q4000


IC4002

IC1201

IC2501

IC3251


IC3002

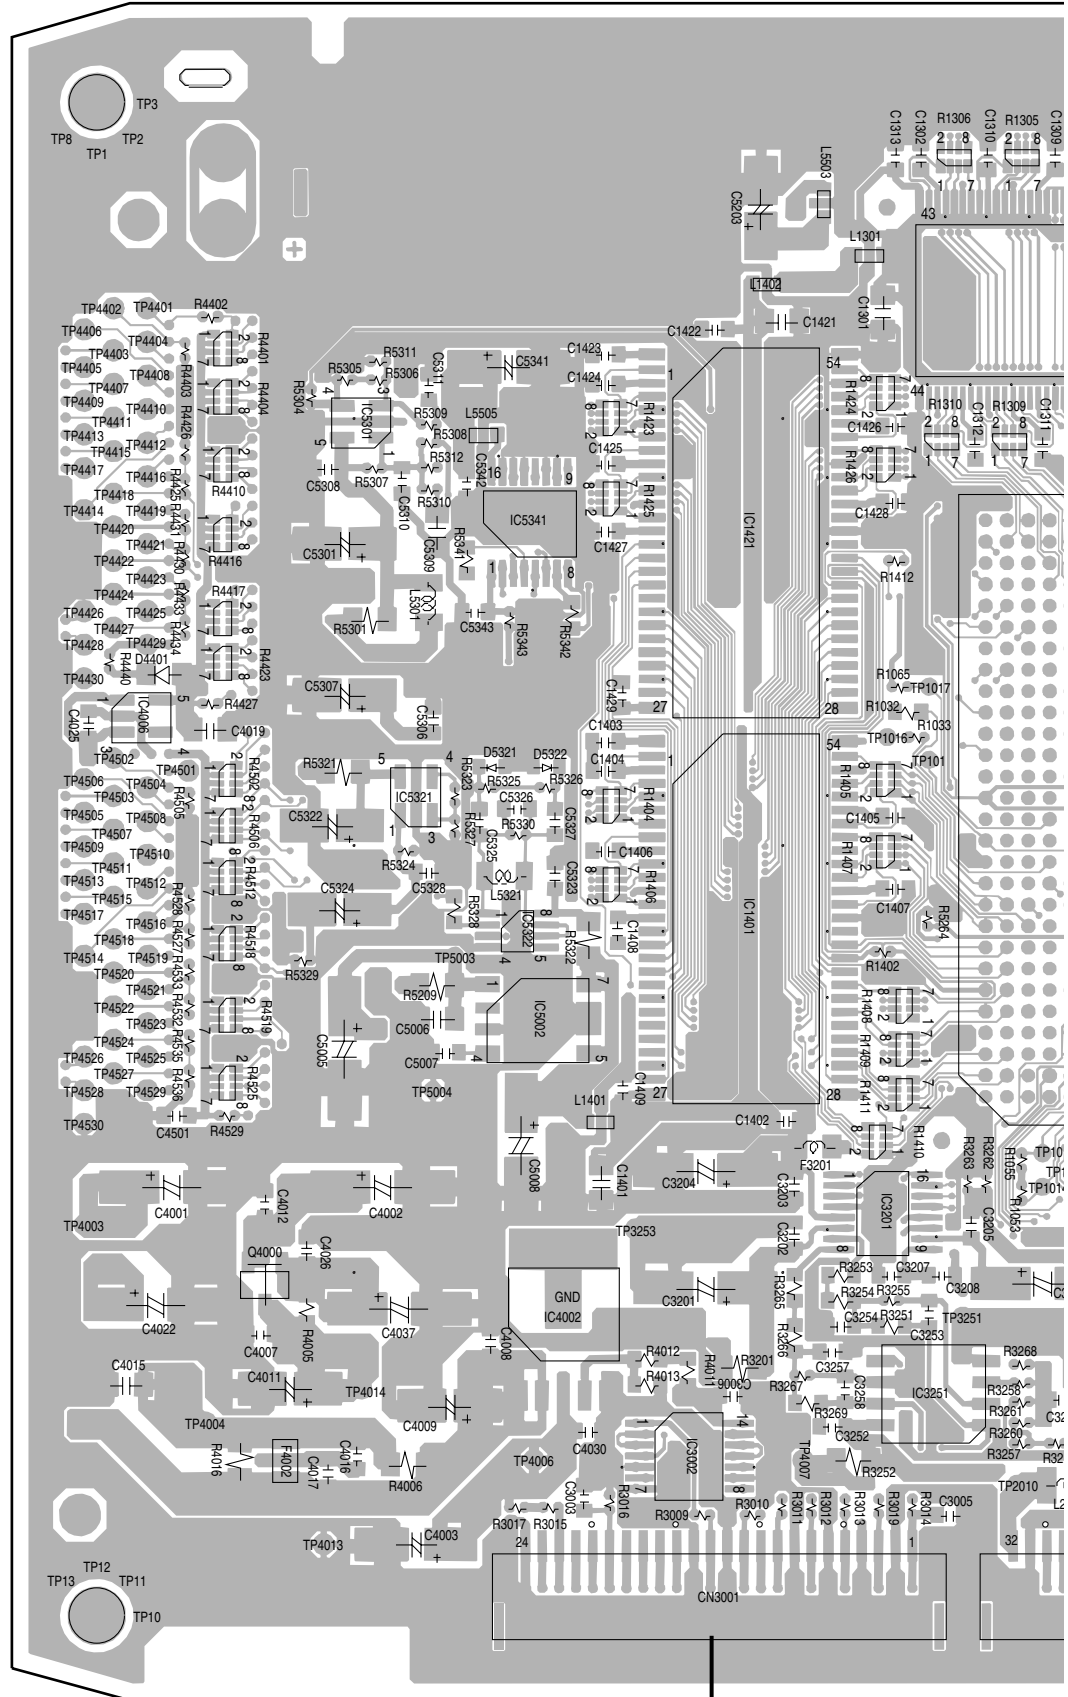**CN3001****B** CN702


DVR-520H-S

SIDE B

F

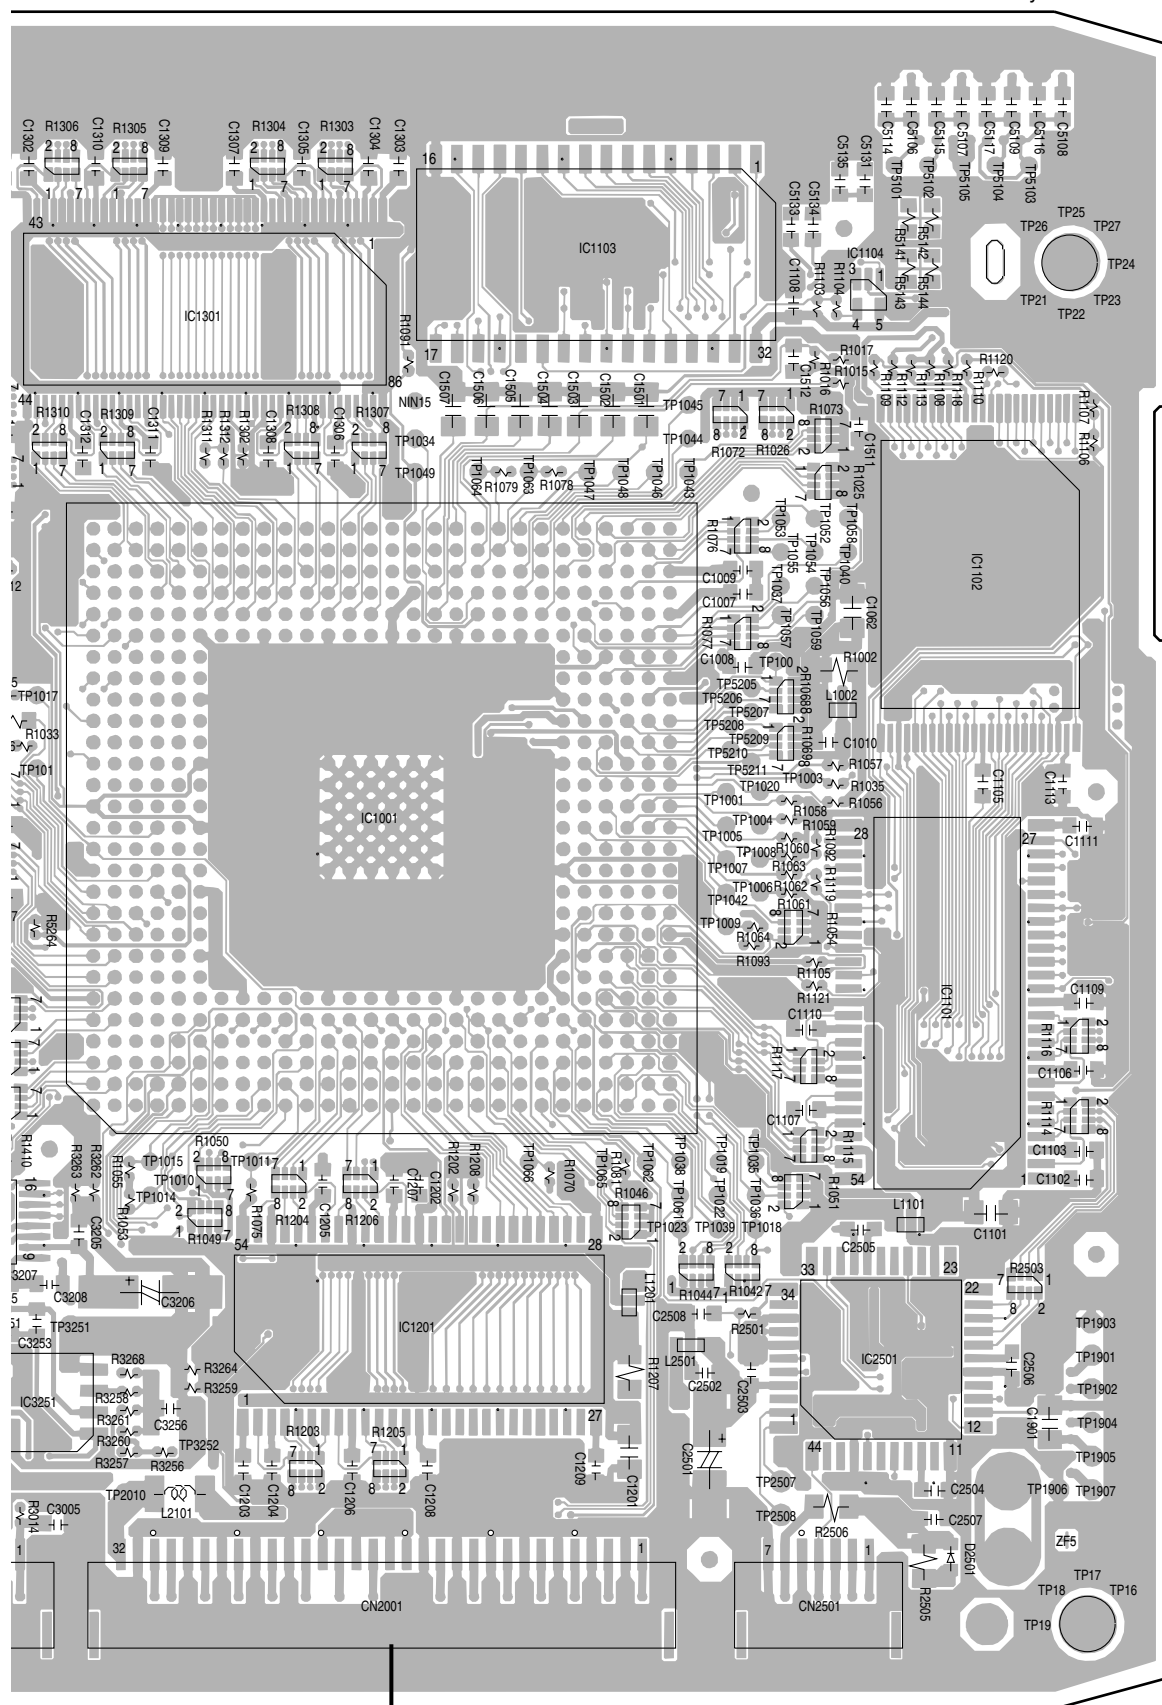

(VNP1960-C : WYXU type)
(VNP1976-C : WYXK and WVXK types)






DVR-520H-S

C


SIDE A

D FLKY ASSY

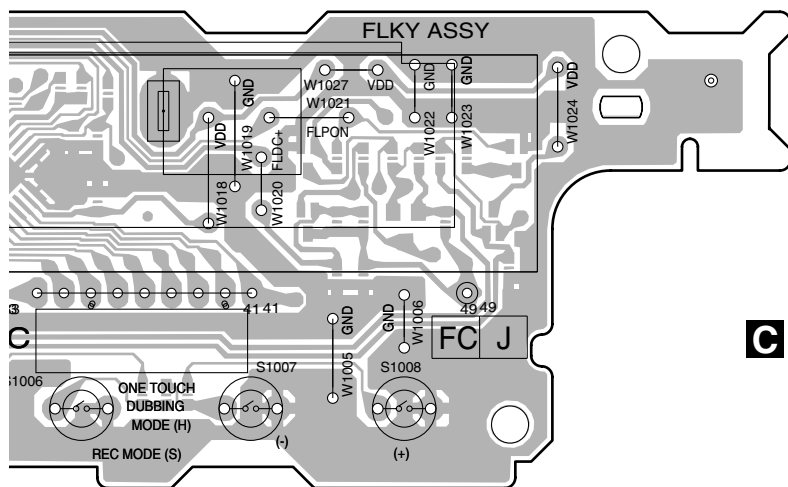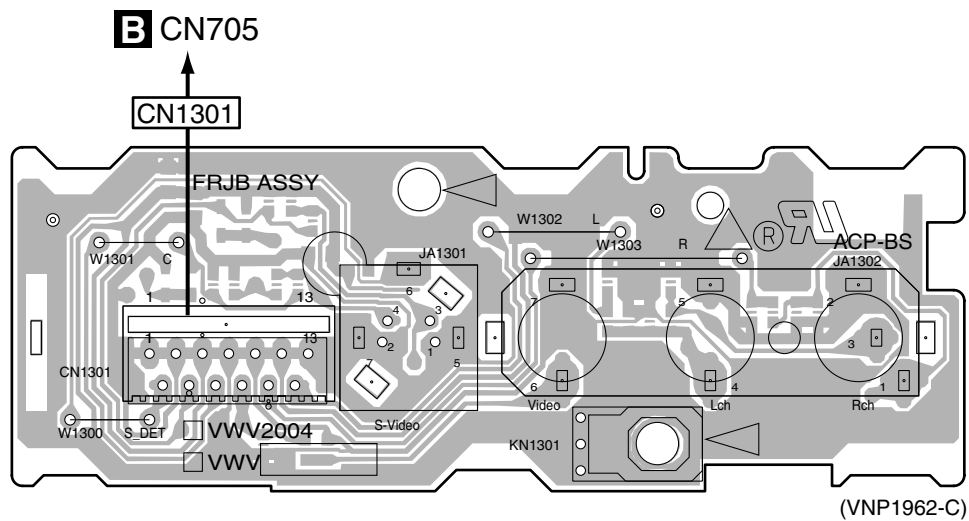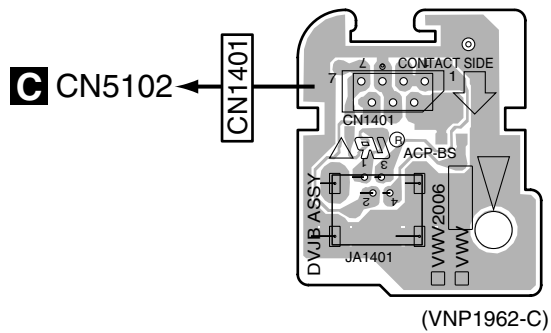


SIDE A**F** FRJB ASSY**I** DVJB ASSY**DFI**


A

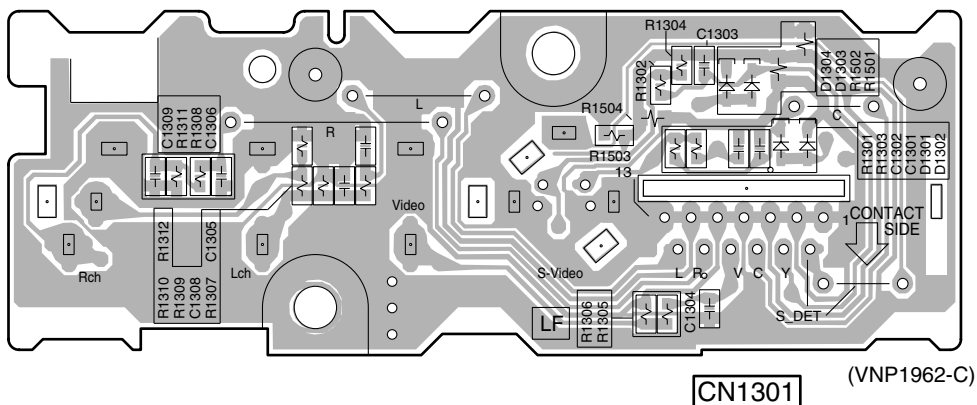F FRJB ASSY

C

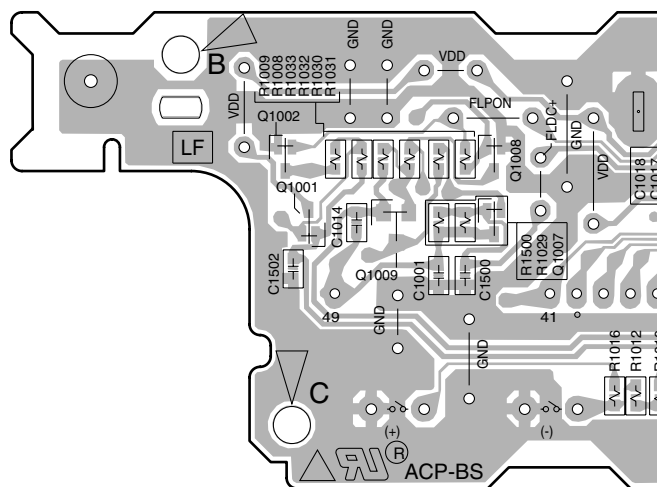D FLKY ASSY

DVJB ASSY

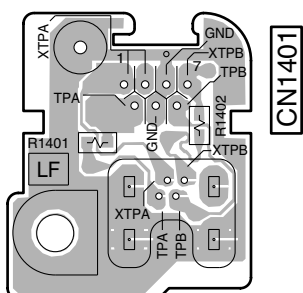

(VNP1962-C)

Q1002

Q1008
Q1001
IC1001

Q1009 Q1007

D

E

F

SIDE A

SIDE A

CN403

B CN402

SIDE B

SIDE B

G SDEB ASSY

Q400

Q406

Q401


Q405 Q404

Q402

IC401

Q403

CN403

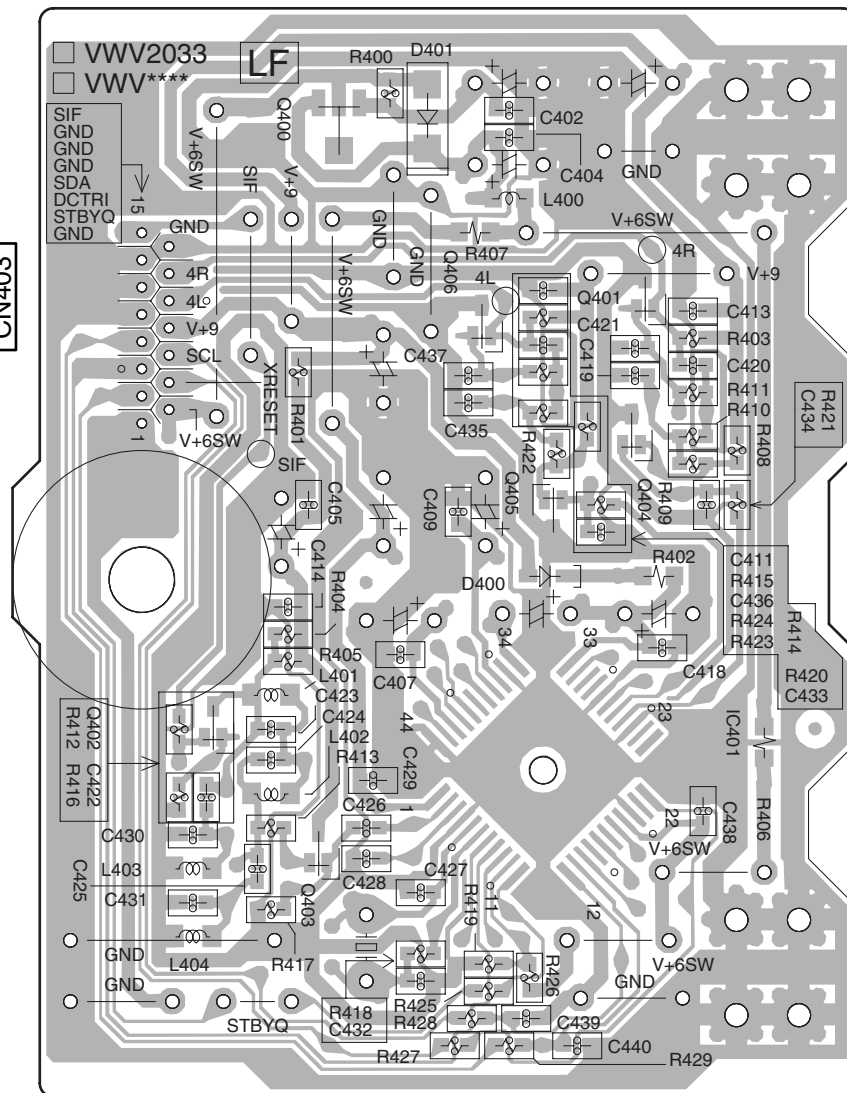

(VNP1970-A)



SIDE A

SIDE A

to
R7R DRIVE ASSY

5. PCB PARTS LIST

NOTES: ●Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

●The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

●When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω → 56 × 10¹ → 561 RD1/4PU 561 J
47k Ω → 47 × 10³ → 473 RD1/4PU 473 J
0.5 Ω → R50 RN2H R50 K
1 Ω → 1R0 RS1P 1R0 K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω → 562 × 10¹ → 5621 RN1/4PC 5621 F

Mark No. Description Part No. LIST OF ASSEMBLIES

NSP 1..FLKB ASSY VWM2304
2..FLKY ASSY VWG2489
2..KIRB ASSY VWG2521
2..FRJB ASSY VWV2004
2..DVJB ASSY VWV2006

NSP 1..JACB ASSY VWM2257
2..JCKB ASSY VWV2024
2..ATHB ASSY VWV2002
2..ATWB ASSY VWV2005

1..TUNB ASSY VWV2003
1..MAIN ASSY VWV2013
1..SDEB ASSY VWV2033
⚠ 1..POWER SUPPLY UNIT VWR1381

Mark No. Description Part No.

⚠ TUNB ASSY SEMICONDUCTORS

IC302 TDA9818TS
Q302, Q308, Q319 2SA1576A
Q300, Q304, Q306, Q307 2SC4081
Q310, Q312 2SC4082
Q305, Q315 DTA124EUA

Q311 RN1903
Q301 RN4903
Q303, Q313 UMF21N
D300 1SS355
D302 1SS356

D301 UDZS33B

COILS AND FILTERS

L304 INDUCTOR ATH1109
L301, L303, L306 INDUCTOR CTF1399
L316 LCKAW330J2520
L305 LCKAWR22J2520
L311, L314 LCKAWR47J2520

L307 LCYA150J2520
L309 LCYAR68J2520
F306 SAW FILTER VTF1177
F305 SAW FILTER VTF1179
F304 IF TRAP FILTER VTF1180

F303 IF TRAP FILTER VTF1181
F301 TRAP FILTER VTF1183
L315 VCO COIL VTL1164

Mark No. Description Part No.

CAPACITORS

C306 CCSRCH102J50
C333, C345 CCSRCH150J50
C339 CCSRCH220J50
C343 CCSRCH270J50
C315, C316 CCSRCH330J50

C325 CCSRCH7R0D50
C344 CCSRUJ4R0C50
C301 CEAT100M50
C308 CEAT102M6R3
C303 CEAT330M25

C313, C324 CEAT471M6R3
C336, C337 CKSQYB225K10
C332, C334, C335, C340, C341 CKSRYB102K50
C322, C323, C327 CKSRYB103K50
C329 CKSRYB104K16

C304, C305, C328, C331 CKSRYB222K50
C338 CKSRYB224K10
C307, C326, C330 CKSRYF104Z25
C311 CKSRYF104Z50

RESISTORS

R309 RS1/10S0R0J
R305 RS1/10S150J
VR300 (10k) VCP1156
Other Resistors RS1/16S###J

OTHERS

CN300 19P Socket AKP7073
300 SCREW PLATE VNE1948
U301 TV TUNER PACK VXF1023

⚠ JCKB ASSY SEMICONDUCTORS

IC504 BA4558F-HT
IC204 BR24L32F-W
IC801 LA7213
IC501 LA73026AV
IC701 LA73033M

IC702 LC75342M
IC806-IC808 MM1501XN
IC703 MM1504XN
IC503 MM1511XN
⚠ IC101 MM1565AF

⚠ IC103 NJM78M09DL1A
IC202 PEG035B

Mark No. Description**Part No.****Mark No. Description****Part No.**

△ IC102
IC201
IC203

PQ1K333M2ZP
PST3245
RS5C372A

C770, C774, C778
C225, C231, C232, C713, C789

CCSRCH390J50
CCSRCH470J50

A

IC803
IC205
IC500, IC502
IC805
IC104

TA1287FG
TC74HCT7007AF
TC7W53FU
TC7WH123FU
TC7WU04FU

C791
C506-C509, C511, C512, C514
C516, C526, C527, C570, C571
C574, C575, C741, C742
C159

CCSRCH470J50
CCSRCH471J50
CCSRCH471J50
CCSRCH471J50
CCSRCH561J50

Q502, Q708-Q710, Q803
Q805-Q808
Q107
Q102
Q106

2SA1576A
2SA1576A
2SA1577
2SB1238X
2SC1740S

C780
C215
C129, C130, C133, C134, C148
C164
C137

CCSRCH680J50
CCSRCH681J50
CEAL101M10
CEAL101M10
CEAL101M6R3

B

Q101, Q103
Q104, Q110, Q208, Q209
Q504-Q506
Q108
Q206

2SC2411K
2SC4081
2SC4081
2SC4097
2SD2114K

C150
C553, C554, C556, C557
C560, C561
C140, C157, C746-C749
C752-C757, C821-C823

CEAL220M16
CEANP100M16
CEANP100M16
CEAT100M50
CEAT100M50

Q109, Q203, Q205, Q804
Q112, Q204, Q207, Q801
Q702
Q111
Q500, Q501, Q703

DTA124EUA
DTC124EUA
HN1B04FU
HN1C01FU
HN1C03FU

C826-C828
C107, C122, C200, C213, C235
C543, C651, C723, C731, C736
C767, C820, C829, C834
C124, C142, C144, C510, C539

CEAT100M50
CEAT101M10
CEAT101M10
CEAT101M10
CEAT101M16

C

Q202, Q515, Q516
Q507, Q509, Q511, Q705, Q802
Q105, Q200, Q201, Q503
Q513, Q514, Q704, Q707
Q100

RN1901
RN2903
RN4903
RN4903
UMF21N

C544, C739, C743, C830
C524, C537, C706-C708, C729
C737
C558
C517-C522, C533, C534

CEAT101M16
CEAT102M6R3
CEAT102M6R3
CEAT1R0M50
CEAT220M25

D101
D203
D102, D201, D205, D500, D504
D515, D705, D706
D200, D501-D503, D517

1SR154-400
1SS352
1SS355
1SS355
DAN217U

C542, C750, C751
C812
C738, C740
C126
C835

CEAT221M16
CEAT3R3M50
CEAT470M16
CEAT471M16
CEVW101M10

D

D206, D532, D534
D505-D514, D522-D529, D531
D707-D709
D104, D202, D516
D103

DAP202U
DF3A5.6FU
DF3A5.6FU
RB501V-40
UDZS12(B)

C709
C549, C565
C110
C160, C224, C523, C538, C555
C559, C562, C567, C765

CEVW220M6R3
CKSQYB105K16
CKSQYB225K10
CKSRYB103K50
CKSRYB103K50

D652

UDZS5R1(B)

C222, C223, C701, C703, C705
C710, C712, C714-C717
C719-C722, C724, C726, C727
C804-C806, C836-C838
C568, C781, C784

CKSRYB104K16
CKSRYB104K16
CKSRYB104K16
CKSRYB104K16
CKSRYB105K10

COILS AND FILTERS

L101
L701-L703
L704
L102
L801

LAU100J
LAU220J
LAU2R2J
LAU470J
LCYA220J2520

C109, C115, C116, C119-C121
C123, C125, C127, C128
C131, C132, C135, C136, C141
C143, C147, C149, C152
C154-C156, C158, C161

CKSRYF104Z25
CKSRYF104Z25
CKSRYF104Z25
CKSRYF104Z25
CKSRYF104Z25

E

L100
L200 CHIP BEADS

LTA102J
VTL1081

C203, C204, C214, C216, C217
C229, C236, C243, C532
C540, C541, C550, C551, C569
C652, C728, C730, C744, C745
C766, C782, C783, C785-C788

CKSRYF104Z25
CKSRYF104Z25
CKSRYF104Z25
CKSRYF104Z25
CKSRYF104Z25

SWITCHES AND RELAYS

RY500

VSR1017

CAPACITORS

C153, C239
C205, C226-C228, C718
C759-C761, C817, C819
C212, C504, C505, C529, C531
C771, C775, C779

CCSRCH100D50
CCSRCH101J50
CCSRCH101J50
CCSRCH102J50
CCSRCH180J50

C801, C807, C809, C813, C816
C818
C209-C211, C220, C221
C233, C234, C240, C525, C545
C552

CKSRYF104Z25
CKSRYF104Z25
CKSRYF105Z10
CKSRYF105Z10
CKSRYF105Z10

F

C563, C564
C139, C547, C548, C814, C815
C162, C163, C230, C244

CCSRCH220J50
CCSRCH221J50
CCSRCH270J50

RESISTORS

R578

RS1/10S75R0F

5			6			7			8		
Mark No.	Description	Part No.	Mark No.	Description	Part No.	Mark No.	Description	Part No.	Mark No.	Description	Part No.
R831		RS1/16S1001F		IC3251	UPC4570G2						
R833, R841		RS1/16S1201F		IC5101	UPD72852AGB-8EU-A						
R835		RS1/16S1801F		IC5202	UPD72893BGD-LML						A
R837, R839		RS1/16S2001F		IC1102	VYW2176						
				IC1201	W986416DH-6						
R842		RS1/16S2200F									
R744, R747, R750		RS1/16S6800F		Q2101-Q2105, Q2201, Q2203, Q2301	2SA1576A						
R519, R542, R543, R548, R560		RS1/16S75R0F		Q2312	2SA1576A						
R565, R576, R594-R596		RS1/16S75R0F		Q4000	2SC2411K						
R712, R713, R718, R734-R736		RS1/16S75R0F		Q2202, Q2222, Q2241	2SC4081						
				Q2302, Q2311	DTC114EUA						
R752		RS1/16S75R0F									
Other Resistors		RS1/16S###J		Q2402, Q2403	HN1B04FU						
OTHERS				Q3201, Q3202	RN1903						
CN202 9P FFC CONNECTOR		52045-0945		Q1102	RN4982						
CN705 13P FFC CONNECTOR		52045-1345		Q2001	UMF21N						B
CN201 19P FFC CONNECTOR		52045-1945		D3001, D3101-D3104	1SS355						
CN401 19P PLUG		AKP7062									
CN104 CONECTOR		B15B-PH-K		D3002	RB501V-40						
				D5321	HVC359						
CN105, CN703 CONNECTOR 2P		B2B-PH-K		D5322	HVC362						
JA651 OPT.LINK OUT 8MB/S		JFJ1001		D4201	MA2ZV05						
JA200 JACK		RKN1004		D1111	RB521S-30						
⚠ BT200 LITHIUM BATTERY (CR2032)		VEM1034		COILS AND FILTERS							
JA501, JA502 SCART CONNECTOR		VKB1157		F3102, F3401-F3403, F4201, F5101	DTF1069						
				L1001-L1009, L1101, L1102, L1301	DTL1106						
JA700 JACK		VKB1193		L1401, L1402, L3301, L5501-L5505	DTL1106						
CN402 CONNECTOR		VKN1191		L5507, L5508 EMI FILTER	DTL1106						C
CN702 CONNECTOR		VKN1200		L5301, L5321	LCYA100J2520						
CN701 32P FFC CONNECTOR		VKN1263									
ST200 BATTERY SOCKET		VKX1016		L4202	LCYA1R2J2520						
				F3201	VTF1096						
KN701-KN703 WRAPPING TERMINAL		VNF1084		L2101	VTL1067						
X100 (4.433619MHz)		VSS1176		L4201	VTL1079						
X201 (32kHz)		VSS1197		L5103-L5106	VTL1082						
X200 (10MHz)		VSS1202									
MAIN ASSY SEMICONDUCTORS				CAPACITORS							
IC3101		AK5357VT		C5311, C5329	CCSRCH100D50						
IC2301		BA7655AF		C3253, C3258	CCSRCH101J50						
IC1103		CY62148VLL-70ZI		C5105	CCSRCH271J50						D
IC5204		K4S161622D-TC80		C5325, C5327	CCSRCH330J50						
IC1101		K4S281632E-TC75		C3207	CCSRCH331J50						
				C4208	CCSRCH390J50						
IC1401, IC1421		K4S561632E-TC75		C5131-C5138	CCSRCH4R0C50						
IC1001		M65673WG-A		C5326	CCSRCH5R0C50						
IC5002		MM1562FF		C3254, C3257	CCSRCH681J50						
⚠ IC4007		MM1603DP		C5121, C5122	CCSRCH8R0D50						
IC1301		MT48LC4M32B2TG-7		C2208, C2317, C4034, C5322	CEVW100M16						
				C3251, C3255, C4001, C4002, C4004	CEVW101M16						
⚠ IC4004, IC4006		NJM2872F05		C4029, C4037	CEVW101M16						
IC4206, IC5301, IC5321		NJU7013F		C2101, C2221, C2405, C3201, C3204	CEVW101M6R3						E
IC3201		PCM1742KE		C3206	CEVW101M6R3						
⚠ IC4008		PQ015YZ01ZP		C2301	CEVW220M6R3						
⚠ IC4002		PQ070XZ02ZP		C1061, C3301, C4022	CEVW221M4						
				C3106	CEVW2R2M50						
IC4003		PST3428U		C5321	CEVW470M16						
IC4005		PST3809U		C2308, C3102, C3107, C4003, C5341	CEVW470M6R3						
IC3301		SM5950AM									
IC3402		SM8707KV		C5301	CEVW4R7M35						
IC2211, IC2302, IC4101		SN74AHC2G53HDCT		C2220, C2243	CEVWNP100M10						
				C1031, C1032, C1503-C1506	CKSQYB104K16						
IC3001		TC74LCX541FT		C2204, C4206, C5309	CKSQYB105K10						
IC3002		TC74VHC14FT		C1901, C4014, C4019, C4033, C5006	CKSQYB225K10						F
IC5341		TC74VHC157FT									
IC1104		TC7SZ126FU		C1004, C1012, C1014, C1029, C1034	CKSRYB102K50						
IC3403, IC4205, IC5322		TC7WHU04FU		C1040, C1044, C1049, C1051	CKSRYB102K50						

Mark No.	Description	Part No.
C1110, C1111, C1207, C1208, C1307 C1311, C1313, C1407, C1408 C1427, C1428, C3303, C3408		CKSRYB102K50 CKSRYB102K50 CKSRYB102K50
C1003, C1027, C1037, C1052, C1109 C1206, C1305, C1308, C1310, C1406 C1425, C2305, C3003, C3004, C4018 C4020, C4207, C5214, C5222, C5224 C1508-C1510, C2311, C4104, C5306		CKSRYB103K50 CKSRYB103K50 CKSRYB103K50 CKSRYB103K50 CKSRYB104K16
C4103 C5328 C2202 C1002, C1005, C1007-C1010, C1016 C1018, C1019, C1021-C1023		CKSRYB223K50 CKSRYB473K25 CKSRYB563K16 CKSRYF104Z25 CKSRYF104Z25
C1025, C1026, C1028, C1030, C1035 C1038, C1041, C1042, C1047, C1102 C1105, C1106, C1108, C1114, C1202 C1204, C1302, C1304, C1312, C1402 C1404, C1422, C1424, C2102-C2106		CKSRYF104Z25 CKSRYF104Z25 CKSRYF104Z25 CKSRYF104Z25 CKSRYF104Z25
C2201, C2206, C2210, C2222, C2241 C2302, C2306, C2319, C2406, C2407 C3101, C3105, C3108, C3202, C3203 C3205, C3252, C3256, C3302 C4006-C4008, C4010, C4012, C4013		CKSRYF104Z25 CKSRYF104Z25 CKSRYF104Z25 CKSRYF104Z25 CKSRYF104Z25
C4017, C4021, C4024-C4026, C4032 C4202, C4203, C4209, C5113, C5118 C5120, C5125-C5127, C5204, C5215 C5218, C5225-C5228, C5230, C5308 C5310, C5323, C5342, C5343		CKSRYF104Z25 CKSRYF104Z25 CKSRYF104Z25 CKSRYF104Z25 CKSRYF104Z25

C1001, C1006, C1048, C1103, C1107 C1203, C1205, C1209, C1303, C1306 C1309, C1403, C1405, C1409, C1423 C1426, C1429, C3001, C3006 C3404-C3407, C4027, C4030, C4105	CKSRYF105Z10 CKSRYF105Z10 CKSRYF105Z10 CKSRYF105Z10 CKSRYF105Z10
C4107, C4201, C4401, C4501, C5110 C4028 (4.7uF/6.3V) C3402, C3403, C4015 (10uF/10V) C1060 (150uF/4V) VC4201 (10pF)	CKSRYF105Z10 DCH1200 VCG1045 VCH1246 VCM1012

RESISTORS

R1025, R1026, R1042-R1046 R1048-R1051, R1054, R1068, R1069 R1072, R1073, R5218-R5221 R5229, R5230, R5247, R5249-R5252 R5255, R5258, R5259, R5273-R5275	RAB4CQ103J RAB4CQ103J RAB4CQ103J RAB4CQ103J RAB4CQ103J
R5289, R5290 R1408-R1411 R4401, R4404, R4410, R4416, R4417 R4423, R4502, R4506, R4512 R4518, R4519, R4525	RAB4CQ103J RAB4CQ220J RAB4CQ223J RAB4CQ223J RAB4CQ223J
R1114-R1117, R4405-R4408, R4436 R4507-R4510, R4538 R1303-R1310, R1404-R1407 R1423-R1426 R1203-R1206	RAB4CQ330J RAB4CQ330J RAB4CQ560J RAB4CQ560J RAB4CQ680J
R5103 R5108 R1207, R1502, R1507, R2017, R3002 R3102, R3201, R3252, R4001, R4006 R4009, R4014, R4016, R4108, R4109	RN1/16SE5101D RN1/16SE9101D RS1/10S0R0J RS1/10S0R0J RS1/10S0R0J

Mark No.	Description	Part No.
R5209, R5322 R4019 R5321 R1501 R4020		RS1/10S0R0J RS1/10S1001D RS1/10S101J RS1/10S2202F RS1/10S5600D
R4013 R3254, R3266 R4012 R3253, R3265 R4011		RS1/16S1001F RS1/16S1002F RS1/16S1200F RS1/16S1201F RS1/16S1501F
R1021, R1023 R3251, R3269 R2105, R2106, R2111, R2112, R2115 R4018 R5104-R5107		RS1/16S2201F RS1/16S2202F RS1/16S3300F RS1/16S3600D RS1/16S56R0D
Other Resistors		RS1/16S###J

OTHERS

CN5102 7P FFC CONNECTOR CN4401, CN4501 40P FFC CONNECTOR CN1901 7P FFC CONNECTOR CN4001 8P FFC CONNECTOR CN3001 24P FFC CONNECTOR	VKN1411 VKN1811 VKN1812 VKN1813 VKN1814
CN2001 32P FFC CONNECTOR KN3 EARTH METAL FITTING X4201 (27.000MHz) X5101 (24.576MHz) X4102 VCXO(27MHz)	VKN1815 VNF1109 VSS1146 VSS1184 VSS1195

D FLKY ASSY SEMICONDUCTORS

IC1001	PT6315
--------	--------

COILS AND FILTERS

L1001	LAU220J
-------	---------

SWITCHES AND RELAYS

S1001, S1002, S1004-S1009	VSG1024
---------------------------	---------

CAPACITORS

C1012 C1010 C1001-C1004, C1020 C1006, C1009, C1013 C1011	CEJQ101M6R3 CEJQ220M35 CKSRYB103K50 CKSRYF104Z25 CKSRYF105Z10
--	---

RESISTORS

Other Resistors	RS1/16S###J
-----------------	-------------

OTHERS

CN1001 19P FFC CONNECTOR V1001 FL TUBE CN1002 CONNECTOR FL HOLDER	9607S-19F VAW1081 VKN1183 VNF1129
--	--

E KIRB ASSY SEMICONDUCTORS

Q1201, Q1202 D1201 D1203	DTC124EUA SLR-343BBT SLR-343DC
--------------------------------	--------------------------------------

SWITCHES AND RELAYS

Mark No. Description

S1201-S1203

CAPACITORS

C1201, C1202, C1204

RESISTORS

R1212
R1201
R1202
R1203
Other Resistors

OTHERS

IC1201 REMOTE RECEIVER UNIT
CN1201 CONNECTOR

FRJB ASSY

CAPACITORS

C1308, C1309

RESISTORS

R1501, R1502
Other Resistors

OTHERS

CN1301 13P FFC CONNECTOR
JA1301 YC CONNECTOR (VERTI)
JA1302 3P JACK (VERTICAL)
KN1301 WRAPPING TERMINAL

GSDEB ASSY
SEMICONDUCTORS

IC401
Q401, Q404-Q406
Q402, Q403
D401
D400

COILS AND FILTERS

L400
L402, L403
L404
L401

CAPACITORS

C421, C429, C433, C434, C437
C424
C431
C439, C440
C423

C426, C428
C430
C427, C432
C408, C416
C403, C415, C417

C400, C406, C412
C410
C414, C420, C436
C419, C435
C404, C405, C407, C409, C411

C413, C418, C422, C425
C438

Part No.

VSG1024

CKSRYF104Z25

RS1/16S101J
RS1/16S222J
RS1/16S332J
RS1/16S562J
RS1/10S###J

RPM7140-H9
VKN1183

CCSRCH471J50

RS1/10S0R0J
RS1/16S###J

52492-1320
VKB1190
VKB1206
VNF1084

MSP3417G
2SA1576A
2SC4081
1SR154-400
1SS355

CTF1399
LCYA150J2520
LCYA4R7J2520
LCYA8R2J2520

CCSRCH102J50
CCSRCH121J50
CCSRCH181J50
CCSRCH220J50
CCSRCH470J50

CCSRCH560J50
CCSRCH680J50
CCSRCJ3R0C50
CEAT100M50
CEAT101M10

CEAT101M16
CEAT3R3M50
CKSRYB103K50
CKSRYB472K50
CKSRYF104Z25

CKSRYF104Z25
CKSRYF105Z10

Mark No. Description

RESISTORS

R406, R407
R402
Other Resistors

OTHERS

CN403 CONNECTOR
401, 402 SCREW PLATE
X400 (18.432MHz)

HATWB ASSY

OTHERS

CN14 40P ATA CONNECTOR
CN13 40P FFC CONECTOR

IATHB ASSY

OTHERS

CN12 40P ATA CONNECTOR
CN11 40P FFC CONECTOR

JPOWER SUPPLY UNIT

There is no service part.

KDVJB ASSY

RESISTORS

Other Resistors

OTHERS

JA1401 DV TERMINAL
CN1401 CONNECTOR

Part No.

RS1/10S0R0J
RS1/10S100J
RS1/16S###J

VKN1191
VNE1948
VSS1189

VKN1816
VKN1879


VKN1816
VKN1879

RS1/16S###J

VKB1207
VKN1183

6. ADJUSTMENT

6.1 TUNB ASSY ADJUSTMENT


A  * It is not necessary to adjust the ASSY normally when exchanging the ASSY. But the adjustment is necessary when exchanging the Tuner Module and IC302 VIF/SIF IC.

No.	Adjustment Name	Adj. Point	Measurement Point	Adjustment Value	Adjustment State
1	VCO freerun frequency (AFC voltage) adjustment	L315	The solder land named "AFT" (upper side of JCKB ASSY)	1.90V ± 0.20V Note1	Terrestrial tuner input /through output. Any channel, RF Input ≥ 60dBu System = B/G, I or D/K AFT = OFF Note1
2	AGC start point adjustment	VR300	The solder land named "AGC" (upper side of JCKB ASSY)	3.80V ± 0.20V	Terrestrial tuner input Ch = E9(203.25MHz), Video= Blackburst RF Input = 60.0 ± 1.0dBu System = B/G, I or D/K

Note 1 : The adjustment spec. is defined without the thermal drift after the power on.
Therefore, start the adjustment at least 10 minutes after the power on.

A TUNB ASSY

SIDE A

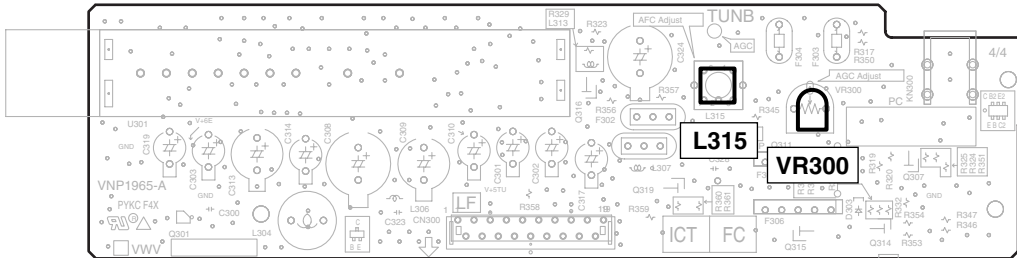

1234

7. GENERAL INFORMATION

7.1 DIAGNOSIS

A

Service Diagnosis List

7.1.1 CPRM ID NUMBER AND DATA SETTING

The Setting is necessary

- " CPRM ERR" is displayed on the FL display immediately after the power is turned on or in Stop mode.
- When the MAIN ASSY , DRIVE ASSY or the FLASH ROM is exchanged.

B

7.1.2 MODEL SETTING

7.1.3 DOWNLOAD METHOD

The Setting is necessary

- When the MAIN ASSY is replaced.
- When the JCKB ASSY is replaced.
- When the MAIN ASSY and JCKB ASSY is replaced.

B

7.1.4 SERVICE MODE

[First Screen] (Version information, etc)

[Sub Screen] (Result of error-rate measurement : Video mode/VR mode)

■

[Second Screen] (ATA/ATAPI debug screen)

[Sub Screen 3] (writer maintenance information of ATA/ATAPI DEBUG OSD)

[Sub Screen 4] (ATA/ATAPI DEBUG OSD_LD degradation judgement)

[Fourth Screen] (VR-recording error log)

[Sub Screen 4] (Error log for VR recording)

C

[Fifth Screen] (Error log for VR playback)

[Sub Screen 2] (Error log for VR playback)

■

7.1.5 DV DEBUG MODE

[Third Screen] (DV debug information)

■

7.1.6 ERROR RATE MEASUREMENT

Only Video mode measurement

7.1.7 VIDEO ADJUSTMENT FOR SPECIFIC AREA

Purposes:

D

Depending on the area, jitter may appear in a picture received by the tuner, as conditions of signals received by the tuner are different from area to area. To correct this kind of problem, the function of the System Codec AVIO control section for adjusting signals received by the tuner can be used.

■

7.1.8 AGING MODE

7.1.1 CPRM ID NUMBER AND DATA SETTING

■ Entering the ID Number and ID Data for DVD Recorder

For the DVD recorder, it is necessary with the recoding/playback of DVD-RW disc to set an individual number (ID number) and ID data to each recorder. If the number and data are not set correctly with the following procedure, operations in the future may not be guaranteed. You will find the ID number to be set on the ID label on the rear panel.

A


Important: If no ID label is found on the rear panel, write down the specified ID number by checking it according to "How to confirm the ID number" shown below.

■ The Input is Necessary When:


- " CPRM ERR" is displayed on the FL display immediately after the power is turned on or in Stop mode.
- When the MAIN ASSY , DRIVE ASSY or the HDD is exchanged.

JIGS AND MEASURING INSTRUMENTS

B

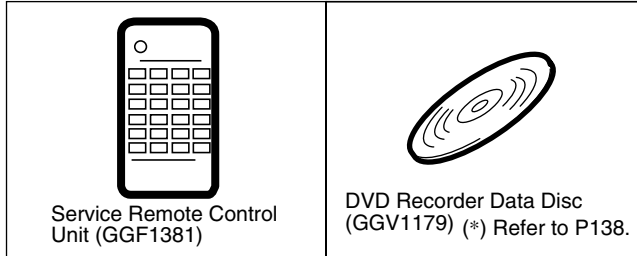

Input Flow of the ID No. and ID data when exchanging HDD, MAIN Assy or Drive Assy

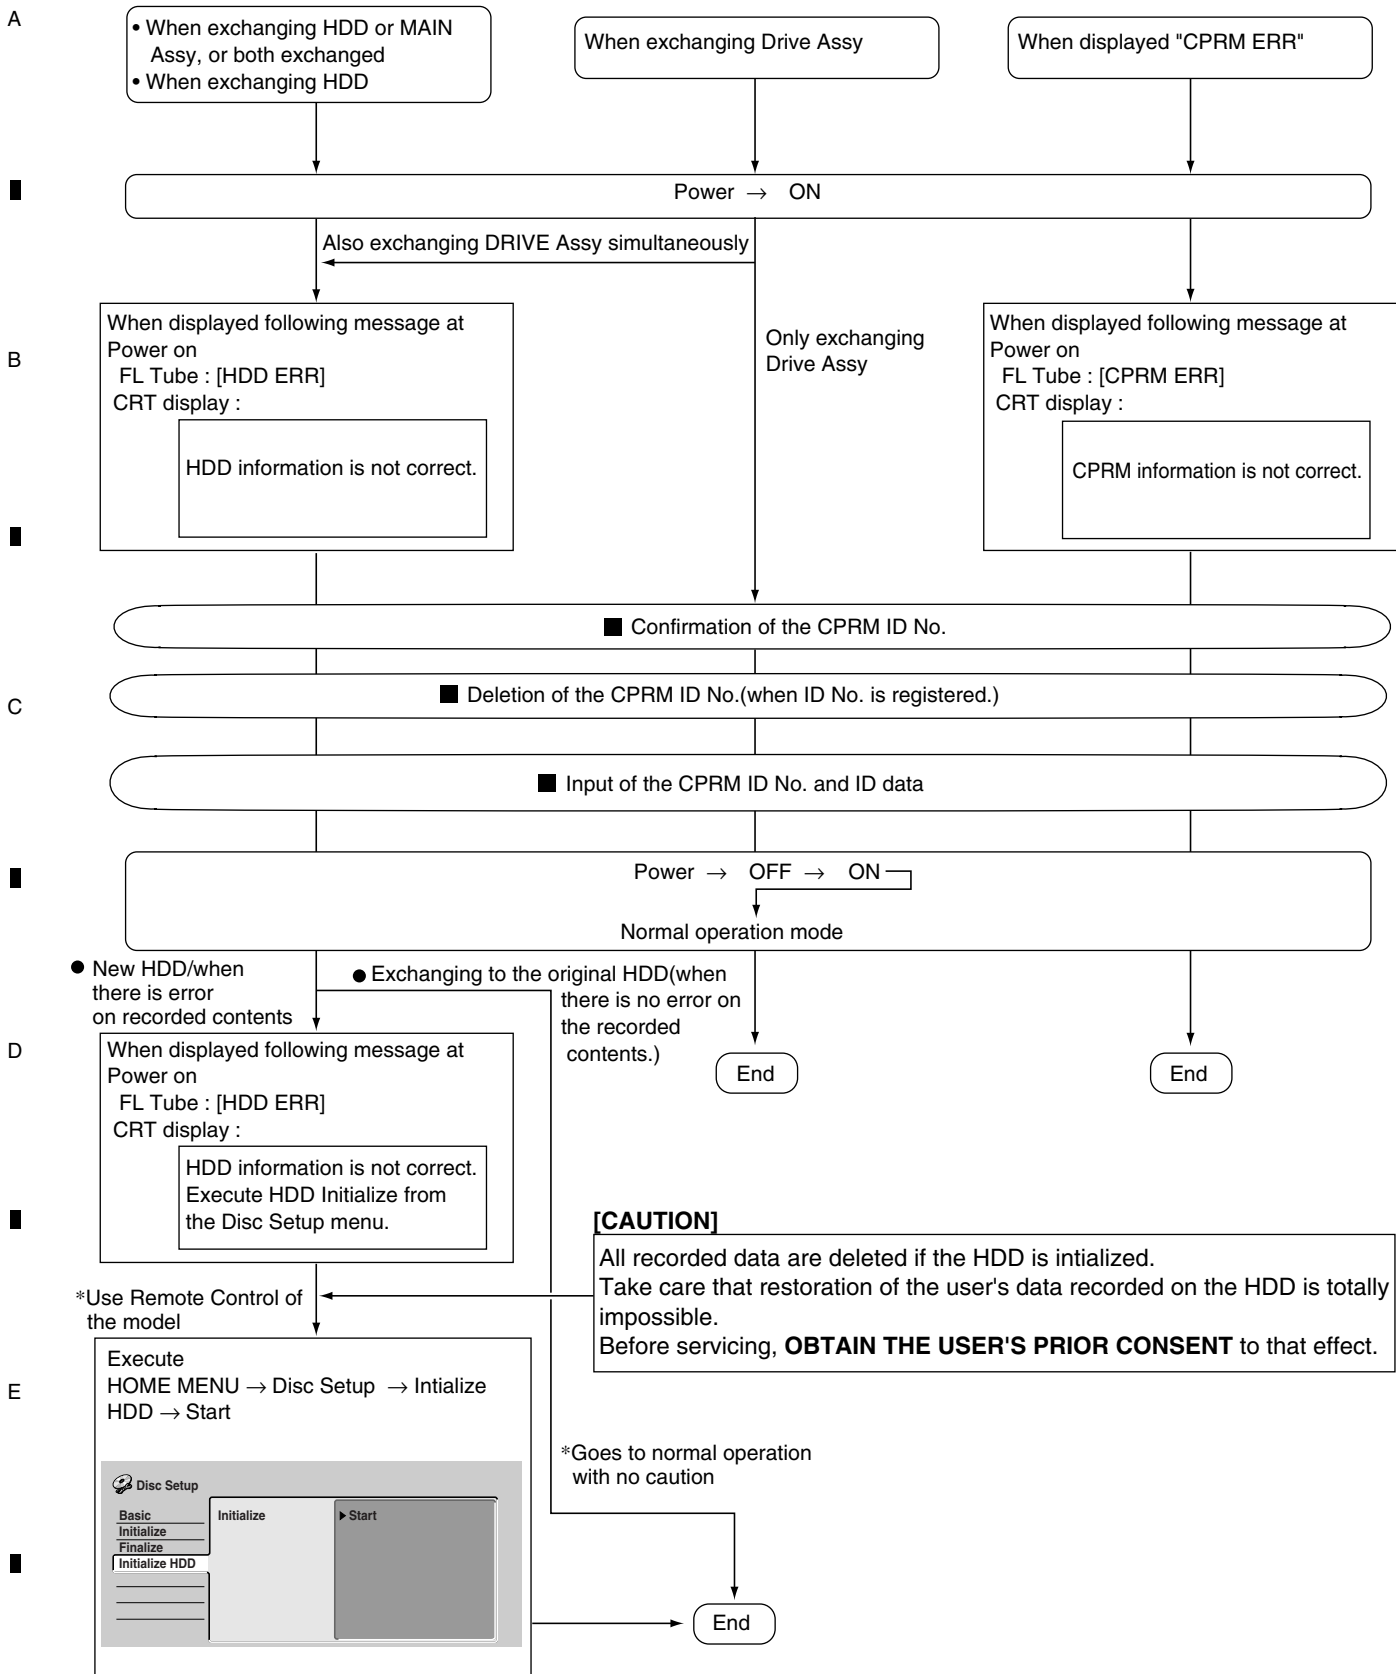

How to Input the ID Number and ID Data

Note:

Be sure to enter the ID number in Stop mode.

Use the service remote control (GGF1381) for operations. Only opening/closing of the tray are performed from the player.
The ID data disc is swept out automatically after the recorder has read the data from it.

- ① To enter the input mode, press **[ESC]**+**[STEREO]** sequentially in a status with no ID number set, such as after FLASH-ROM downloading.



- ② As number input is enabled when the unit enters the input mode, input the 9-digit ID number.
(The entered number is also displayed on the FL display.)

[Recorder's ID Number Setting]

ID Number ?

② → > -----

<CLEAR> Exit

Input ID Number !



- ③ After inputting the number, press **[SEARCH]** to register the ID number.

[Recorder's ID Number Setting]

ID Number ?

> 0 0 0 0 0 0 0 1 OK ?

<PLAY> Compare Mode

③ → <SEARCH> Enter

Input ID Number !



- ④ When the ID number has been registered, the unit enters the ID data input mode. (The FL display indicates "INSERT ID.")
In this condition, place the ID data disc on the tray and close the tray using the CLOSE key **[■/▲]** on the player.

[Recorder's ID Data Setting]

<CLEAR> Exit

④ → Insert The ID Data Disc !



- ⑤ While the data are being read, the message shown in the figure at left is displayed on the screen.
(The FL display indicates "LOAD ID.")

[Recorder's ID Data Setting]

⑤ → Loading The ID Data Disc !



- ⑥ When the ID data have been read, the data are written to the FLASH-ROM.
(The FL display indicates "WRITE ID.")

[Recorder's ID Data Setting]

⑥ → Wait Rom Writing !



- ⑦ When the ID data have been written to the FLASH-ROM, the message "Rom Write OK" is displayed on the screen.
(The FL display indicates "ID DATA OK.")

- ⑧ After confirming this message, press **[CLEAR]** to exit the input mode.

[Recorder's ID Data Setting]

⑦ → Rom Write OK !

⑧ → <CLEAR> Exit

How to Confirm the ID Number

- ① Press **[ESC]** + **[STEREO]** sequentially with an ID number already set, and the unit enters the ID number confirmation mode.
- ② The set ID number is displayed on the screen (and on the FL display), permitting you to confirm it.
- ③ To exit this mode, press **[CLEAR]**.

② → [Recorder's ID Number Setting]
ID Number ?
[0 0 0 0 0 0 0 0 1]
Compare
> * * * * *
③ → <CLEAR> Exit
Input ID Number !

How to Clear the ID Number

- ① Press **[ESC]** + **[STEREO]** sequentially with an ID number already set, and the unit enters the ID number confirmation mode.
- ② Input the same number as the ID number you have set.
- ③ After inputting the number, press **[STOP]**.
Only when the entered number matches the set ID number, the ID number is cleared and the unit exits this mode.
If the numbers do not match, you must return to step 2.
(**[STOP]** is not accepted until 9 digits are entered.)

② → [Recorder's ID Number Setting]
ID Number ?
[0 0 0 0 0 0 0 0 1]
Compare
> * * * * *
<CLEAR> Exit
<STEREO> ID Data Setting Mode
Input ID Number !



③ → [Recorder's ID Number Setting]
ID Number ?
[0 0 0 0 0 0 0 0 1]
Compare
> 0 0 0 0 0 0 0 0 1 OK ?
<PLAY> Enter
<STOP> Memory Clear
<STEREO> ID Data Setting Mode
Input ID Number !

7.1.2 MODEL SETTING

• The Setup is Necessary When :

- When the MAIN Assy is replaced
- When the JCKB Assy is replaced
- When the MAIN Assy and JCKB Assy are replaced

Note : Make sure of setting the correct number.

• How to Setup the Model

- After power on, the following screen is displayed on TV monitor.
Press " 32 " by using the remote control unit for service(GGF1381).

[Recorder 's Model Setting]
Input the number by using the remote for Service.

> --

Input No.	Model
[32	: DVR-520H]
[34	: DVR-720H]

Note : For 720H types, press " 34 ".

- After 1), the following screen is displayed on TV monitor.
Press " 012 " by using the remote control unit for service.

[Recorder 's Type Setting]
Input the number by using the remote for Service.

> --- (Type -- , Region No. -)

Input No.	Type
[01	: WY <Europe>]
[02	: WV <UK>]

Note : For WV types, press " 022 ".

The setting complete when OSD is disappeared.

- Unplug the power cable.
- Reset the recorder to all its factory settings.
 - Make sure that the recorder is on.
 - Press and hold [STOP] and press [STANDBY/ON] key on the front panel.
The recorder turns off with all settings reset.
- Enter the Service Mode and then confirm the Model Name " DVR-520H/WY ".
 - Make sure that the recorder is on.
 - Press [ESC] then [DISP] keys by using the remote control unit for Service.

DVR-520H/WY

VERSION : 2.* *

SYSICON : RELEASE_44

Rev :1.3599.2.2 \$

TUFLCON : 2.25 FLASH OK

DRIVE : DVD-RW DVR-107X OK

1.10K OK

CKT0000353WL OK

HDD : ST380012ACE 80

DEVICE : PRISM-PLUS

REGION : 2

C : * * * * *

FLASH : 64M

Notes :

- After the setting complete, you can NOT CLEAR the setting data.
Make sure the pressing number.
- " NG " is appeared on TV when unsuitable number is pressed.
In such a case, please unplug the power cable and plug it again. Then restart the model setting.

7.1.3 DOWNLOAD METHOD

• The Download is Necessary When :

- a) After model setting
- b) When "NG" is displayed at First screen (version information, etc)

[Notes]

Be sure NOT to turn off the unit during downloading.

If the unit is turned off during downloading, the SYSCON, TUFLCON, and DRIVE programs may not be properly rewritten, in which case the unit may not be able to initialize itself normally when turned on again. If that happens, repair the unit, as described below, then perform downloading again:

- In a case where the power to the unit was shut off during rewriting of the SYSCON program:
The SYSCON program will not function properly if the power to the unit is forcibly shut off while the message "DOWNLOAD-1" is displayed on the FL display during downloading. If downloading of the programs from the disc or through serial communication becomes impossible, replace the FLASH ROM.
- In a case where the power to the unit was shut off during rewriting of the DRIVE program:
The DRIVE program will not function properly if the power to the unit is forcibly shut off while the message "DOWNLOAD-2" is displayed on the FL display during downloading. If downloading of the programs from the disc or through serial communication becomes impossible, replace the DRIVE ASSY.
- In a case where the power to the unit was shut off during rewriting of the TUFLCON program (only for the flash-type TUFLCON microcomputers):
The TUFLCON program will not function properly if the power to the unit is forcibly shut off while the message "DOWNLOAD-3" is displayed on the FL display during downloading. If downloading of the programs from the disc or through serial communication becomes impossible, replace the TUFLCON microcomputer.

1. DISC DOWNLOAD METHOD

• How to Download

This is disc download method to save the initial setting data and user setting data.

However, the following data is deleted after downloading by this method.

- * REC mode
- * Last channel (Before turn unit off)

- 1) Open a disc tray in the " DVD " function.
- 2) Put the download disc on the tray.
- 3) Press and hold a " STOP " button for playback,
then press a " DISC NAVIGATOR " button on a front panel.
 - The disc tray closes automatically and the disc is loaded.
 - The disc tray opens automatically after loading.
- 4) Take out the Download Disc.
 - " DISC DWLD " is displayed on FL and download is started.
 - The display on FL changes to " DOWNLOAD-1 "
 - The display on FL changes to " DOWNLOAD-2 "
 - The display on FL changes to " DOWNLOAD-3 " (*)
 - After download is completed, the power turns off, and turns on and a disc tray closes automatically.
 - * It takes for about 5 minutes until download is completed.
- 5) Press and hold a " ESC ", then press " DISP " on a test mode remote control unit for the release version confirmation.
- 6) Confirm a firmware release version.
- 7) Press " ESC " on a test mode remote control unit in order to exit the test mode.

(*) : " DOWNLOAD-3" is displayed only when the TuFL u-com is FLASH type.

2. Serial DOWNLOAD METHOD

[Notes]

This method is secondary way when the disc loading is impossible.

• JIGS


- * PC with serial port
- * RS232C straight cable
- * RS232C I/F jig (GGF1348)
- * 7P FFC (VDA1681)
- * Download program (UFU.exe)
- * Firmware

• Connection


PC ↔ RS232C cable ↔ RS232C I/F ↔ 7P FFC ↔ DVD Recorder

• How to Download

- 1) Connect the 232C I/F JIGS above way.
- 2) Turn on the PC and start the "UFU.exe".

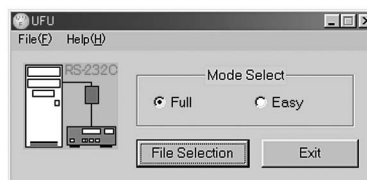

- 3) Select the Firmware file. ("sz0" file)
- 4) Turn the DVD recorder on and start the download program.
"Target Device is connected" is appeared on the screen.

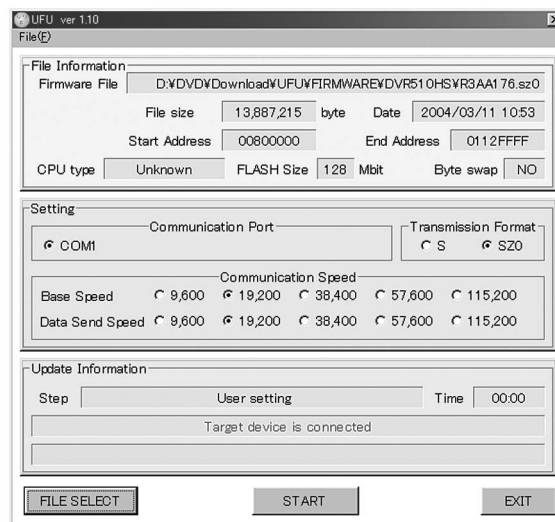

- 5) Select the Communication Speed (Baud Rate)

- a) Base Speed 38,400
- b) Data Send Speed 115,200

- 6) START

- * Even if you click "START" button, sometimes "Communication Error" may come out one to twice, and download may fail. In this case, please click "START" again.
- * Other factors can be considered if download fails 3 times or more.
- * And it takes about an hour for updating the firmware.

7.1.4 SERVICE MODE

For service operations, use the GGF1381 remote control unit for service.

The Service-mode screens consist of nine mode screens, which are classified into such rough categories as recording system and VR playback system, and their subscreens.

• **How to enter Service mode** : Press the ESC then DISP keys in turn while no GUI is displayed. The first screen (version information, etc.) shown below is displayed.

• **How to exit Service mode** : Press the ESC key.

• **How to advance to the next Service-mode screen**

: While the first screen is displayed, press directly one of the keys 1-9. For service, use the keys 2, 4 or 5, as shown below.

• **How to advance to a subscreen within the same Service-mode screen**

: Press the DIG/ANA key. Pressing the DIG/ANA key repeatedly will change the subscreens within the same Service-mode screen cyclically.

■ **The Service-mode screens to be used for service are as follows:**

1 = First screen: Version information, etc.

2 = Second screen: ATA/ATAPI debug screen (Writer data)


4 = Fourth screen: Error log for the VR recording system

5 = Fifth screen: Error log for the VR playback system

Note: After entering one of the Service-mode screens, if you wish to shift to another Service-mode screen, exit Service mode first, then reenter Service mode and select your desired Service-mode screen.

■ Description of Each Service-mode screen

1. First screen (version information, etc.)

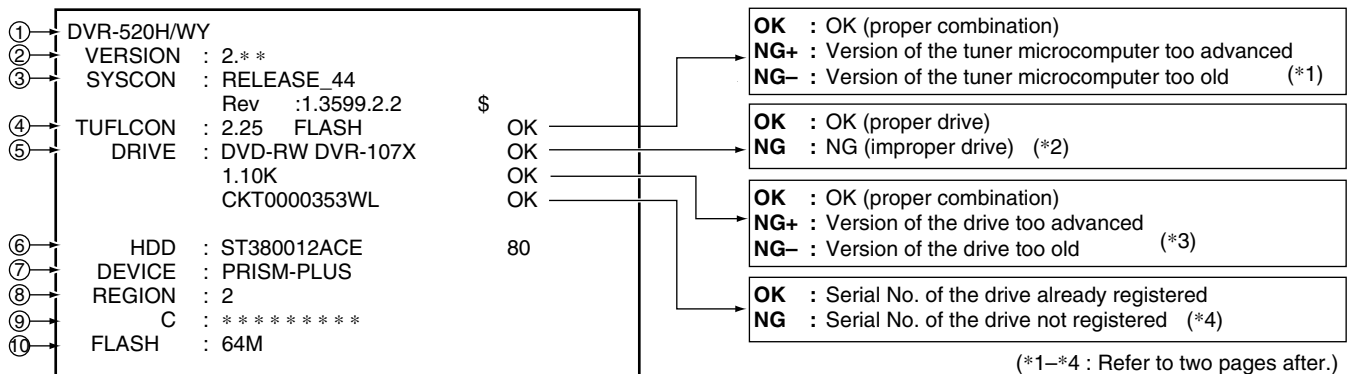

① Model name/destination

② Version of the recorder software

③ Revision No. of the system-control computer software (Edition administration No. [from top to bottom, common software, firmware, application software])

④ Version No. of the tuner microcomputer, Mask or Flash
Result of the combination ckeck with system u-com

⑤ Information on the built-in drive

(Model name, version No., model type, serial No.)

⑥ Data of the built-in HDD, capacity of the HDD

⑦ Version No. of PRISM

⑧ Region No.

⑨ CPRM data (CPRM key No.)

⑩ FLASH ROM information

While the first screen shown above is displayed, press the DIG/ANA key to enter the subscreen shown below.

Note: Each time the DIG/ANA key is pressed, the display changes between the first screen and its subscreen.

• **Details on HDD data are described below:**

HDD : WDC10234564 # 80

Capacity of the HDD (unit: Gbytes)

HDD identification error indication

Name of manufacturer, part No. by manufacturer

If any abnormality exists in HDD connection, the indications shown in Table 1 below are displayed.


Table 1: HDD data indications according to various HDD connection statuses

HDD identification conditions	Example of HDD data to be displayed	Remarks
Failure in physical identification of HDD (no connection, defective HDD, interface error)	Blank space	
Physical identification of HDD possible, but not identified	WDC 10234564 # 80	"#" is displayed as HDD identification error
Physical identification of HDD possible, HDD identified, but failure in logical formatting	WDC 10234564 ! 80	"!" is displayed as HDD identification error
Physical identification of HDD possible, HDD identified, and correct logical formatting (HDD correctly identified)	WDC 10234564 80	

While the first screen shown above is displayed, press the DIG/ANA key to enter the subscreen shown below.

Note: Each time the DIG/ANA key is pressed, the display changes between the first screen and its subscreen.


• Subscreen 1: Result of error-rate measurement

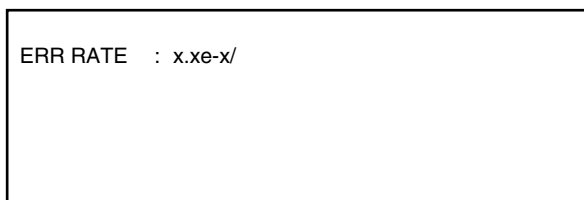

Note: Be sure to start playback after displaying this subscreen to calculate the error rate.

During playback in VR mode, the average error rate of the past 10 VOBUs is displayed, and during playback in DVD-Video or Video mode, the average error rate of the past 256 sectors is displayed. During playback in VR mode, the rotation rate of the drive (/: normal speed, no display = double speed) is also displayed.

• Subscreen 2: HDD information

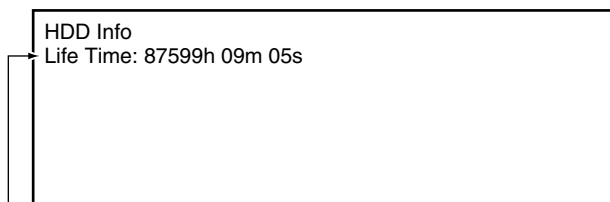

Cumulative HDD-on time

• How the data on cumulative HDD-on time are processed in memory

Storage place: Backup SRAM, Flash ROM

Timing of referring to the data on cumulative HDD-on time: When the power is turned on, the backup SRAM is referred to regarding the data on cumulative HDD-on time, and the data are stored in the RAM. If referring to the backup SRAM fails, the flash ROM is referred to.

Timing of updating the data on cumulative HDD-on time: While the HDD is on, the data on cumulative HDD-on time in the RAM is updated every 3 seconds, and every time updating is executed the data are stored in the backup SRAM. When the power is turned off, the data are stored in the flash ROM.

How to clear the data on cumulative HDD-on time

Backup SRAM: When the HDD Identification Setting is performed, the data on cumulative HDD-on time are automatically cleared. The HDD Identification Setting is automatically performed when the CPRM setting is performed on the CPRM setting screen (to display the CPRM setting screen, press the ESC then the STEREO keys).

Notes: The data on cumulative HDD-on time are not cleared when resetting to factory-preset values is performed.

The data on cumulative HDD-on time are not cleared when the system-control computer software is downloaded.

Flash ROM: The data on cumulative HDD-on time cannot be cleared (they are not cleared even if resetting to factory-preset values is performed or if the system-control computer software is downloaded).

Note: The data on cumulative HDD-on time in the flash ROM can be cleared if you clear the data in the backup SRAM following the above-mentioned procedures then turn off the power of the unit, because the data in the backup SRAM are stored in the flash ROM when the power is turned off.

• When "NG" is displayed at First screen (version information, etc)

- (*1) NG+ : Version of the tuner microcomputer too advanced
NG- : Version of the tuner microcomputer too old

A

1. When TUFL μ -com is MASK type

NG+ : Download the firmware.

NG- : Replace the TUFL μ -com or JCKB ASSY.

2. When TuFL μ -com is FLASH type

NG+ : Download the firmware.

NG- : Download the firmware.

- (*2) NG : NG (improper drive)

Replace the correct Drive Assy.

B

- (*3) NG+ : Version of the drive too advanced
NG- : Version of the drive too old

NG+ : Download the firmware.

NG- : Download the firmware.

- (*4) NG : Serial No. of the drive not registered

Check the part No. and replace the correct Drive Assy.

C

D

E

F

2. Second screen (ATA/ATAPI debug screen)

Subscreen 1 of the second screen is displayed when the ESC, DISP, then "2" keys are pressed, in that order.

Note: Each time the DIG/ANA key is pressed, the display changes cyclically among subscreens 1 to 4.

• Subscreen 1: Command log (ALL) of ATA/ATAPI DEBUG OSD

```

ATA / ATAPI History - ALL
32 0100000000000A000 OK
32 2A00000DEBB000063000 OK
32 2A00000DF1E000063000 OK
32 2A00000DF81000063000 OK
32 2A00000DFE4000062000 OK
32 2A00000E046000063000 OK
32 2A00000E0A9000063000 OK
32 2A00000E10C000063000 OK
>32 2A00000E16F00006200023A00
  
```

(Not for Service)

• Subscreen 2: Command log (ERROR) of ATA/ATAPI DEBUG OSD

(Not for Service)

• Subscreen 3: Writer maintenance information of ATA/ATAPI DEBUG OSD

The cumulative power-on time and error log that are administered by the writer are displayed. Such information is obtained when the power is turned on. Thereafter, each time the SEARCH key on the remote control unit for service is pressed while subscreen 3 is displayed, the updating command is sent, and the data on the subscreen are updated. Care must be taken when updating this subscreen, because an undesired command is inserted if it is executed while recording, etc.

ATA / ATAPI Writer MaintenanceInfo	
① Power ON	00 00 00 0000 00000000
0102:56	01 00 00 0000 00000000
DVD	02 00 00 0000 00000000
② R0053:48	03 00 00 0000 00000000
③ W0022:16	04 00 00 0000 00000000
CD	05 00 00 0000 00000000
④ R0034:04	06 00 00 0000 00000000
⑤ W0000:00	07 00 00 0000 00000000
	00-00

Error log for the Writer

(Not for Service)

- ① Power-on time/cumulative power-on time
- ② Duration of emission of the laser diode (LD) for DVD-R/DVD while reading
- ③ Duration of emission of the LD for DVD-W/DVD while writing
- ④ Duration of emission of the LD for CD-R/CD while reading
- ⑤ Duration of emission of the LD for CD-W/CD while writing (This function is not used for this model.)

(Reference)

MTTF time of each LD (as the guideline of life span of each LD)

R7R Drive Assy (Read + Write total time)

DVD : 4700h

CD : 11000h

• Subscreen 4: ATA/ATAPI DEBUG OSD_LD degradation judgment

The degrees of degradation of the LD (laser diode) for the writer (LDs for CD and DVD separately), temperature, and RF level are displayed. To update the data on the subscreen, press the SEARCH key on the remote control unit for service while subscreen 4 is displayed. See Table 1 below for a description of each item and the conditions for updating data.

ATA / ATAPI - LD Degrade				
①	CD	:0070	104%	OK
②	DVD	:0068	96%	OK
③	TMP	:00A3	41 °C	
④	ADJ	:0067	26 °C	
⑤	RF	:3D70		
⑥	TLT	:FFD5		

Table 1: Description of each item and conditions for updating data

No.	Item	Description	Conditions for updating by pressing the SEARCH key	Remarks
①	CD	Degradation judgment of LD for CD. Regarded as NG when the value is 120% or higher (same standard as for the PC drive)	No disc inserted in the disc tray	*1
②	DVD	Degradation judgment of LD for DVD. Regarded as NG when the value is 120% or higher (same standard as for the PC drive)	No disc inserted in the disc tray	*1
③	TMP	Current temperature inside the Writer	No disc inserted in the disc tray	*1
④	ADJ	Temperature (approx. 25°C) inside the Writer during adjustment	No disc inserted in the disc tray	*1
⑤	RF	RF level (16-bit data, proportional calculation performed using the actual RF level value with 2.5 V = 0xFFFF as the maximum value, displayed in 4-digit hexadecimal)	During playback of disc medium	*2
⑥	TLT	Writer adjustment data for straight (non-HDD) model (FFFF is displayed when the writer is not adjusted.)	No condition	


*1 : For correct judgment, after leaving the unit at a normal temperature (25°C typ.) for some time, judgment must be performed immediately after the unit is turned on with no disc loaded.

*2 : Use this item only for confirmation before and after lens cleaning, as the lens becomes dirty with dust.

3. Fourth screen (VR-recording-related error log)

Subscreen 1 of the fourth screen is displayed when the ESC, DISP, then "4" keys are pressed, in that order.
Note: Each time the DIG/ANA key is pressed, the display changes cyclically among subscreens 1 to 11.

• **Subscreen 1:**

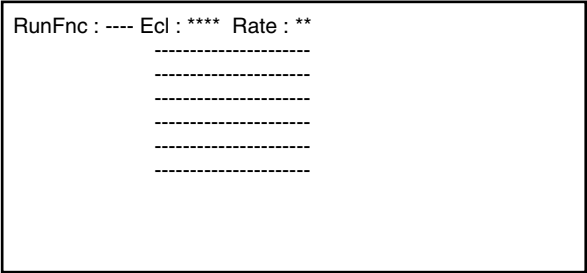


Refer to the Table 2 regarding the Error messages (P92).

• **Subscreens 2 and 3:**

These subscreens are not for service use.

• **Subscreen 4: Error log for VR recording**

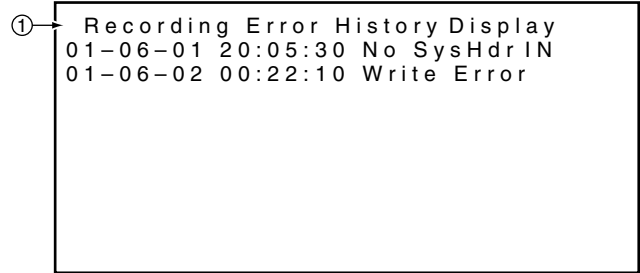

- ① Recording-related error log for the last 18 errors, divided into 2 screens
(generation time [year-month-day, hour:minute:second], error data in simplified description)

Notes:

- For details on error messages, see Table 2 "Description of VR-recording-related errors".
- The two error-log screens can be switched by pressing the SPEED+ or SPEED- key.

• **Subscreens 5 to 11:**

These subscreens are not for service use.

4. Fifth screen (Error log for VR playback)

Subscreen 1 of the fifth screen is displayed when the ESC, DISP, then "5" keys are pressed, in that order.

Note: Each time the DIG/ANA key is pressed, the display changes cyclically among subscreens 1 to 4.

• Subscreen 1:

```
G : 001-01 00h00m00s00#- - e-- 00.00M
Tgt : STOP Now : STOP Spd : 0
Man : STOP Sub : 0 VBF : 000 ABF : 00
TrMd : STOP TrSt : 0 TNo : Ver : 00
RvMd : STOP RvSt : 0 DNo : Aer : 00
CcSt : STOP Id : 00000000
Stc : 00000000 Tpp-Av1 : +-0 V-A : +-0
MPEG2 720x480 A0 AC-3 2ch 0256k
NT ASP : 43 CGMS : 0 APS : 0 Src : 0
END : 00h00m00s00 Cell : 000
```

• Subscreen 2: Error log for VR playback

```
① G : 01-01 00m00s#- - e-- 00000000
    h m s Message h m s Err
② G001 : 000000 Tr : Nullbik
    L002 : 001230 Tr : SchLat e
    L002 : 004103 Tp : VobDif +
    L002 : 004104 Tp : VobDof-
```

- ① Data on location of the display
Original(G)/play list (L), title No., chapter No. (X:XX-XX),
time of the display (min, sec, frame [XXmXXsXX]), busy
mark of the virtual mechanical-control computer (#),
error rate of the transfer data (X.XeXX), playback logical
address (ID [XXXXXXXX])
- ② Error message log
Original(G)/play list (L), title No., time of generation (min,
sec [XX:XXXX]), playback-related error log for the last
13 errors (XX:XXXXXXXX)

D Notes:

- For details on error messages, see Table 1 "Description of VR-playback-related errors".
- If a VR-playback-related error is generated, a problem in data reading from the disc may be suspected.
(The possibility of a problem on the drive side is high.)

• Subscreens 3 and 4:

These subscreens are not for service use.

Table 1: Description of VR-playback-related errors

Error Message	Description
Tr : NullBlk	Transfer task: NULL at the top block (Detecting NG stream made at the DVR-1000 series and starting protection process.)
Tr : ReadErr	Transfer task: ATA read error
Tr : SchLate	Transfer task: ATA search late
Tr : SemTOvr	Transfer task: Timeout for gaining semaphore (no synchronization with the display)
Tr : NaviErr	Transfer task: Inconsistency between NAVI (navigator) of management data and actual NAVI
Tr : OrderEr	Transfer task: Inconsistent order
Mn : Av1Hang	Main task: Detects hang-up of AV decoder and starts recovery
ERR_RCV!	TPP task: Detects hang-up of AV decoder and starts recovery
Tp : VobDif+	TPP task: The decoder STC advances by 1 VOB hour.
Tp : VobDif-	TPP task: The STC of the management information advances
Tp : midNULL	TPP task: The management information pointer designated was NULL.
Tp : ScanNg	TPP task: Failure to set the TPP memory when scanning was canceled.
Tp : RStepEr	TPP task: Although the reverse step had failed, the operation was forcibly terminated because the top cell was located.
Tp : tppErr	TPP task: Inconsistency occurred.
Rv : 1stTOvr	Reverse playback task: Timeout for waiting for interruption to the top VOB immediately after starting decoding
Rv : OpnTOvr	Reverse playback task: Timeout for waiting for B-picture of the open GOP immediately after starting decoding
Rv : OplTOvr	Reverse playback task: Timeout for waiting for I-picture of the open GOP immediately after starting decoding
Rv : LnkTOvr	Reverse playback task: Timeout for waiting for link
Rv : LnkFail	Reverse playback task: Starts compensation by detecting link failure
Rv : R2FTOvr	Reverse playback task: Starts retrial after detecting timeout from reverse pause to forward pause
Rv : TopVbEr	Reverse playback task: Forced termination because of a possible error of the top data during reverse normal playback
Rv : OrderEr	Reverse playback task: Inconsistent order
Av : B/CTOvr	AV1: Buffer-clear timeout
Av : StrmOvr	AV1: Timeout for waiting for stream ready
Av : TpmTOvr	AV1: Timeout for TP mode change
Av : SpmTOvr	AV1: Timeout for a step command
CC_OS_ERR	Closed caption task: OS error

Abbreviations:

STC = System Time Clock

VOBU = Video Object Unit

GOP = Group Of Picture

B-picture = Bidirectionally predictive-picture

I-picture = Intra-picture

P-picture = Predictive-picture

TP mode change = AV1 term (Trick Play mode change)

Table 2: Description of VR-recording-related errors**● Error related to MPEG Encoder**

Error Message	Description
Stream NG	Inappropriate input stream data
Stm Start NG	Failure to start encoding (reasons not clear)
AVEnc Hang	Inappropriate MPEG encoder
No SysHdr IN	System packet is not input periodically
Strm Start NG	Timeout waiting for system packet input at the beginning
IN Encode *	Changes cannot be made in the process of encoding
EncModul Hang	Encoder routine is hung up.

● Error related to Drive system

Error Message	Description
BUF Overflow	Overflow of the Stream Buffer
Drive Hang	The Drive is hung up.
Write Err	The Drive failed to write and could not be recovered.
Read Err	Reading failed, ECC failed, etc.
Drv Hard Err	Abnormality in the drive hardware or firmware
Mech No Res	No response from the mechanical-control computer
Drv Timeout	Timeout waiting for drive operation
NWA Exhaust	NWA surpassed and impossible to use
MKB Invalid	MKB reading error
Drv Err	General error of the drive
Fail Repair	Repair failed
ReadOnly DISC *	Because some data are invalid, data cannot be written
May Be V mode	AlthoughTMP_VMG1 is not written, it may be Video Mode disc.
Rzn Rsv NG	Reserve RZone failed
Rzn Cls NG	Close RZone failed
Rzn Rpr NG	Repair RZone failed
Bdr Opn NG	Open Border failed
Bdr Cls NG	Close Border failed
Format NG	Format failed
OPC NG	OPC failed
PCA Full	PCA has been used up.
RMA Full	RMA has been used up.
VTSI_B Wr Err	Video Mode VTSI BUP Write Error
VTSI Wr Err	Video Mode VTSI Write Error
TMP-VMG WrErr	Video Mode TMP VMGI Write Error
CLS Rzon Fail	Video Mode Close Rzone failure

● Error related to Dubbing

Error Message	Description
Mem get NG	Video Mode Copy Memory has not ensured.
V Rsv RzoneNG	Video Mode Copy Reserve Rzone failed
VCHDD Info NG	Obtaining Video Mode Copy HDD Cell information failed
VC Pck Anl NG	Analyzing Video Mode Copy Pack failed
VC VOBu SizeE	Video Mode Copy VOBu Size NG
Tracon Trn NG	Video Mode Copy Tracon tranfer has not been completed.

● Error related to Dubbing (continued)

Error Message	Description
Strm TransfNG	Video Mode Copy Stream Transfer NG
VC FlushC NG	Video Mode Copy Flush Cache NG
VC Transf Stp	Video Mode Copy Transfer Stop
VC CopyCancel	Video Mode Copy Copy Cancel
VC Idling NG	Video Mode Copy idling NG
VC TSO BLK NG	Video Mode Copy TSO Block transfer has not been completed.
VC Cell Max	Maximum number for Video Mode copy Cells exceeded
VC HDD Inf NG	No information on Video Mode Copy HDD
VC HDD C Err	Inappropriate Video Mode Copy HDD content
V2H SRC Prot	VR →HDD copy prohibited material
V2H Aud Ch NG	VR →HDD Audio Channel NG
V2H Aud Strm N	VR →HDD Audio Stream number NG
V2H Aud Md NG	VR →HDD Audio Mode NG
V2H V Reso NG	VR →HDD Video resolution NG
V2H Unknown	VR →HDD other NG
H2D CP SomeNG	VR →HDD copy and other NG

● Other Errors

Error Message	Description
DRAM NG	Abnormality in access to the Work DRAM
SRAM NG	Abnormality in access to the backup work SRAM
CPRM IC NG	Inappropriate CPRM IC
Drive Destroy	The drive has crashed.
MKB REVOKED	Error in gaining data
WM Cracked	WM Cracked
VBR-SRAM NG	Abnormality in VBR SRAM
BK BATT Down	Backup RAM data has been erased.
BK FSYS Dirty	Backup RAM data has not been wrtten on the File Sys.
VOBU Info NG	Inappropriate VOB information
Ourob Strm NG	Inappropriate stream data to the Ouroboros input
WaterMark Det	Watermark detected
No Video	No video input (not locked)
Disc Full	No further data can be written because the disc is full.
No More Info *	No more space in the internal work-management area
No Permission *	No permission to write to the disc
Limit Over *	Standard maximum limit exceeded
Rec Pause *	No operation permitted during recording pause
Invalid Param *	Invalid parameter
Protect Src *	Source to be recorded is copy-protected.
Now Busy *	In the process of the emergency processing
Invalid Disc *	The disc cannot be recognized.
Invalid UDF *	Invalid UDF content
Invalid VMG *	Invalid VMG content
Invalid TMVMG	Invalid TMP_VMG content
Unmatch Stamp *	Impossible to modify because of nonmatching time stamp
Virgin DISC	Virgin Disc

● Other Errors (continued)

Error Message	Description
SW Vpb mode *	Switching to video playback routine is required.
SW Vrec mode *	Switching to video recording routine is required.
NV Pck MK Err	Error in creating NaviPack
NV Pck DMA Er	Inappropriate NaviPack DMA
Cell Close NG	Cell Close NG
Relocation Do	VR-recording data was relocated
Something *	undetermined error
Status NG *	Abnormality in change of statuses
Irr Action *	Incorrect action
Abort *	Cancellation
BusReset Done	Bus Reset has been executed.
Repair Excec	Repairing has been executed.
Format Excec	Formatting has been executed.
BUG	Some bugs
PARAM NO ACCP	Recording parameter is not matched.
DRAM CLR Err	Video Mode DRAM (Stream Buffer) Clear failure
V Categ ID NG	Inappropriate Category ID
V Cate Inf NG	Inappropriate Category information
V Ext TY NG	Type NG
V Ext MAX Ovr	Count Max exceeded
V ExtToo Big	The extension file is too large.
Over Heat	Abnormal temperatute

● Error related to HDD

Error Message	Description
HDD unauthor	Inconsistent HDD serial No.
HDD Destroy	HDD is not recognized on the bus.
TT Rec Over	Title recording time full
HDDReset Done	HDD Reset executed
Task No Activ	Task has not been activated.
HDD Buff High	High-level process executed for the HDD Buffer
HDD Trans Err	DMA error in HDD copy transfer
HDD Zero WR	MBR readout generated
HDD Initialize	HDD initialized
HDD MBR NG	Inconsistent MBR data
HDD SIG NG	Inconsistent HDD Management Data Magic
HDD INFO BAD	Incorrect HDD Management Data
HDD IRRG POFF	Abnormal power off
HDD SMART NG	Inappropriate HDD SMART

● No Error

Error Message	Description
Non Err *	Normal

Notes;

- Any error message marked with * is displayed "RecErr : -----" on the Subscreen 1 of the fourth screen.
- In a case of an error in the drive system, scratches or dirt on a disc, or a problem of the drive itself (dirty pickup) may be suspected.

Abbreviations:

ECC = 4 byte Code for Error Correction
 UDF = Universal Disc Format
 PCA = Power Calibration Area
 OPC = Optical Power Control
 NWA = Next Writable Address

VMG = Video Manager
 RMA = Recording Management Area
 MKB = Media Key Block
 TMP_VMGI = Temporary Video Manager
 Information
 Border = from Lead-in to Lead-out

Table 3: List of Key Codes**How to enter each check mode**

Test mode remote control unit : [A8**]

Remote control unit supplied with the DVR : [AB**]

No.	Check Item	Key Input	Operation / purpose	Remarks
1	EE system (same as preview)	[ESC] → [A.MON]	Turns on/off EE mode cyclically	Make sure that CGMS = 11 becomes when CGMS = 10 is input. EE mode: Simulation mode for recording status
		[PLAY]	Starts the EE system in EE mode (main-unit setting rate)	
		[STOP]	Stops the EE system in EE mode	
2	Error-rate measurement	[ESC] → [SIDE B]	V-mode recording: After recording for 10 seconds, the unit starts playback while displaying the error rate. DVD-Video: The error rate is automatically measured, then the result will be displayed.	For details, see " 7.1.4 ERROR RATE MEASUREMENT ".
3	Settings for specific areas	[ESC] → [CHP/TIM]	Enters Adjustment mode for AVIO settings	Settings are made for the selected input (TUNER, LINE). For details, see " 7.1.7 VIDEO ADJUSTMENT FOR SPECIFIC AREA ".
		[ESC]	Determines the settings, then exits Adjustment mode	

How the ESC code is processed

- When the ESC code is received, ESCAPE mode is entered, but in combination with the code(s) that follow(s), a specific meaning is added.
- If ESC codes are received continuously, ESCAPE mode is retained.

7.1.5 DV DEBUG MODE

Press the ESC, DISP, then "3" keys, in that order.

① **(DV/1394) Init:OK AV:01 DV:01 INT4:02**
 ② **[Recorder] GUID:00E036000160001 IRM**
 ③ **iPCR:C03F0000 oPCR:0000007A**
 ④ **[DV] GUID:0080880303480E96**
 ⑤ **VN:VICTOR MN:GR-D50K**
 ⑥ **TM:C3 TS:75 CT:32 WP:01 PS:FF OS:00**
 ⑦ **CA:A000002020 CV:FF MD:VTR**
 ⑧ **[DVdecode:Yes]**
 ⑨ **TC:00h20m35s02f RD:02/02/05 RT:10h34m50s**
 ⑩ **ASPECT:4:3 CGMS:000000 APSTB:00 DEC:525-60**
 ⑪ **SF:32kHz QU:12bit AMODE:4) Stereo**
 ⑫ **[DVencode:No]**
 ⑬ **TC:--h--m--s--f RD:--/--/-- RT:--h--m--s**
 ⑭ **ASPECT:----- CGMS:-- APSTB:--**

Boldface alphanumerics : Fixed indications
 Nonboldface alphanumerics : Variable indications

No.	Item	Description	Remarks
①	Init	Whether the initialization of uPD72893B (1394LINK & DVcodec IC) has been completed (OK) or not (NG)	In a case of NG, communication with uPD72893B may have failed.
	AV	Number of AV devices on the local bus	
	DV	Number of DV devices on the local bus	If the number does not become 01 even if a DV device is connected, identification of that device fails.
	INT4	Number of executing INT4(PIO) interrupt processing routines until a POWER ON notification arrives from uPD72893B (normally, 02)	
②	GUID	GUID set in ConfigROM of the unit	In a case of ROOT (IRM), IRM is displayed at the rightmost of the GUID indication
③	iPCR	iPCR value of the unit	
	oPCR	oPCR value of the unit	
④	GUID	GUID set in ConfigROM of the connected DV device	Data are displayed only if one DV device is identified. If the connected DV device is ROOT (IRM), IRM is displayed at the rightmost of the GUID indication
⑤	VN	Vendor name set in ConfigROM of the connected DV device	Data are displayed only if one DV device is identified. (Depending on the device, the vendor name may not be set in ConfigROM.)
	MN	Model name set in ConfigROM of the connected DV device	Data are displayed only if one DV device is identified. (Depending on the device, the vendor name may not be set in ConfigROM.)
⑥	TM	Transport Mode data obtained from the DV device	Data are displayed only if one DV device is identified.
	TS	Transport State data obtained from the DV device	
	CT	Cassette Type data obtained from the DV device	
	WP	Copy-protection data obtained from the DV device	
	PS	Power-state data obtained from the DV device	
	OS	Output signal mode data obtained from the DV device	
⑦	CA	Connect AV data obtained from the DV device	Data are displayed only if one DV device is identified.
	CV	Camera/VTR data obtained from the DV device	
	MD	DV device mode	Camera or VTR is displayed only if one DV device is identified.
⑧	[DVdecode:XXX]	Whether Yes (in the process of requesting DV input) or No is indicated in XXX	Normally, Yes is indicated only when CH is set to DV

No.	Item	Description	Remarks
⑨	TC	Time-code data of the DVdecode Stream, or response data of the Time Code command	Stream time-code data are obtained when playback in the forward direction is performed. Otherwise, time-code data are obtained through an AV/C command.
	RD	Rec Date of DVdecode Stream	
	RT	Rec Time of DVdecode Stream	
⑩	ASPECT	Aspect Ratio of DVdecode Stream	
	CGMS	CGMS of DVdecode Stream (from left to right, CGMS data of bits 5-4: Audio ch2, bits 3-2: Audio ch1, and bits 1-0: Video)	Recording of DV input cannot be performed unless the value of CGMS is 00.
	APSTB	APS trigger bit of DVdecode stream	
	DEC	With/without DVdecode stream input	With input: Signal type (525-60, 625-50, 1125-60, 1250-50, or Invalid) is indicated, Without input: "No" is indicated.
⑪	SF	Sampling Frequency of DVdecode Stream	If SF is 44 kHz, it is considered that 44.1-kHz audio is input, and sound is muted on the unit.
	QU	QUANTIZATION of DVdecode Stream	
	AMODE	AUDIO MODE of DVdecode Stream	
⑫	[DVencode:XXX]	Whether Yes (in the process of requesting DV output) or No is indicated in XXX	Normally, Yes is indicated only with HDD or DVD playback
⑬	TC	TIME CODE of DVencode stream	
	RD	REC DATE of DVencode stream	
	RT	REC TIME of DVencode stream	
⑭	ASPECT	Aspect Ratio of DVencode stream	
	CGMS	CGMS of DVencode stream (common to video, audio ch1 and audio ch2)	Normally, sources other than CGMS=00 are not output.
	APSTB	APS trigger bit of DVencode stream	

Simple Diagnosis

Symptoms	Location in the Debug Screen	Items to be Checked, and Conditions	Possible causes
No operation for either DV input or output	①	Check the init indication: OK: Initialization of DV-related LSIs (IC5101, IC5202) appropriately completed NG: Communication failure between DV-related LSIs (IC5101, IC5202) and HOST microcomputer (IC1001). Initialization of DV-related LSIs (IC5101, IC5202) has not been completed properly. Check the number of DV devices when one DV device is connected to the recorder: 01: The connected DV device is correctly identified. Other than 01: The connected DV device is not correctly identified.	Defective IC, defective soldering, defective power supply, etc.
No picture nor sound for DV input	⑦	Check of DV decoding when the recorder channel is set to DV: Yes: The recorder is in the process of a DV input operation No: The recorder is not executing a DV input operation	Defective DV terminals, improper connection of the DV-terminal board, defective IC, defective cables, an IEEE 1394 device other than the DV device connected
DV input recording impossible	⑨	Check DEC: 525-60: An NTSC DV signal is input from the DV device. 625-50: A PAL DV signal is input from the DV device. No: No DV signal is input from the DV device.	Defective DV terminals, improper connection of the DV-terminal board, defective IC, defective source device Note: As to a model having the Input Line System setting, if the setting and the actual input signal system do not match, no picture appears.
No sound for DV input	⑩	Check CGMS: 00: A copy-permitted source is being input. Other than 00: A copy-protected source is being input. Check SF: 32 khz: An audio signal with 32-kHz sampling frequency is being input. 48 khz: An audio signal with 48-kHz sampling frequency is being input. 44 khz: An audio signal with 44.1-kHz sampling frequency is being input.	Recording cannot be performed for a copy-protected source. An audio signal with 44.1-kHz sampling frequency is muted.
No picture nor sound for DV output	⑪	Check DVencode during DVD/HDD playback: Yes: The recorder is in the process of a DV output operation No: The recorder is not executing a DV output operation (No is also displayed during playback of copy-prohibited sources or simultaneous-recording/playback.)	Defective IC, defective soldering, defective power supply, etc.

7.1.6 ERROR RATE MEASUREMENT

How to enter Error-Rate Measurement mode

Press the ESC key then the SIDE-B key of the remote control unit for service to enter Error-Rate Measurement mode. During playback of DVD-VIDEO, Error-Rate Measurement mode can also be entered by pressing the ESC key then the PLAY key.

How to exit Error-Rate Measurement mode

Press the ESC key. The error-rate display disappears, and Error-Rate Measurement mode is exited.

Note: The error rate cannot be measured in VR mode or during CD playback.

Functions

- Video-mode recording (recording medium)
In this mode, DVD recording is automatically performed for 10 seconds, the recorded DVD title is played back while the error rate is being measured, then as soon as playback of the recorded DVD title is finished, playback stops.*1 After error-rate measurement is finished, the average error rate will be displayed on the FL display and OSD. Only in a case in which the calculation of the average error rate fails, the tray will open.
- DVD-VIDEO (playback medium)
Only during playback, when the ESC key then the SIDE-B key (or the ESC key then the PLAY key) are pressed, the error rate is calculated and displayed on the FL display and OSD.(*2) Only in a case in which the calculation of the average error rate fails, the tray will open.

Changes of display

Table 1: Video mode (recording medium)

Operation	Display	
	FL Display	OSD (On Screen Display)
"ERROR RATE" is displayed on the FL display for an instant.	ERROR RATE	
DVD recording starts.	ERROR RATE	
DVD recording is performed for 10 seconds.	x x x x x	
The recorded DVD title is played back while the error rate is being measured, then as soon as playback is finished it stops.	ER x . x E - x	ERR RATE : x.xE-x -
After error-rate measurement is finished (*1), the average error rate, the measurement-finish mark (*), and the OK/NG-judgment result (*3) will be displayed on the FL display and OSD. (If the tray opens as a result of NG judgment, the display on the FL display and OSD will be retained.)	ER x . x E - x	ERR RATE : x.xE-x * OK

Table 2: DVD-Video (playback medium)

Operation	Display	
	FL Display	OSD (On Screen Display)
Only during playback, when the corresponding keys are pressed, the error rate is calculated and displayed on the FL display and OSD. (*2)	ER x . x E - x	ERR RATE : x.xE-x -
After error-rate measurement is finished (*1), the average error rate, the measurement-finish mark (*), and the OK/NG-judgment result (*3) will be displayed on the FL display and OSD. (If the tray opens as a result of NG judgment, the display on the FL display and OSD will be retained.)	ER x . x E - x	ERR RATE : x.xE-x - OK

*1 : Whether error-rate measurement is finished or not is judged, as shown in Table 3 below.

Table 3: On judgment whether error-rate measurement is finished or not

Recording Mode	Judgment whether error-rate measurement is finished or not	Recording/playback duration required for error-rate measurement
Video mode	After playback of a certain amount (*) of data Measurement of the 16 ECC blocks is performed 16 times, then the grand sum is used for calculation of the error rate. The capacity is as follows: 16 ECC blocks × 16 sectors × 2048 bytes × 16 times = 8388608 bytes = 67108864 bits	The time required for completion of error-rate measurement varies, depending on the input video signal to be recorded. (The more the motion in the input video signal to be recorded is animated, the shorter the playback time required for completion of error-rate measurement becomes.)

*2 : During DVD-VIDEO error-rate measurement, even after error-rate measurement is finished, playback continues, and the display of the error rate results is retained. In this playback mode, if Error-Rate Measurement mode is exited by pressing the ESC key, then it is reentered by pressing the ESC and SIDE-B keys (or ESC and PLAY keys), the error rate will not be updated, and the previous value is displayed. To reset the previous error rate, stop disc playback.

*3 : OK/NG judgment

In DVD/VIDEO and Video Mode recording, OK/NG judgment is displayed under the following conditions:

Table 4: List of OK/NG threshold values

Disc Type	Recording Mode	Finalized or not finalized	Reference Value	Display
DVD-VIDEO			8.0×10^{-4}	OK / NG
DVD-R	Video mode	Finalized	1.0×10^{-3}	OK / NG
		Not finalized	1.0×10^{-3}	OK / NG
DVD-RW	Video mode	Finalized	1.0×10^{-3}	OK / NG
		Not finalized	1.0×10^{-3}	OK / NG

7.1.7 VIDEO ADJUSTMENT FOR SPECIFIC AREA

Purposes: Depending on the area, jitter may appear in a picture received by the tuner, as conditions of signals received by the tuner are different from area to area. To correct this kind of problem, the function of the System Codec AVIO control section for adjusting signals received by the tuner can be used.

How to enter setting modes: To enter General Setting mode, press the ESC key then the CHP/TIM key of the remote control unit for service. To enter Specific Channel Setting mode, press the DIG/ANA key in General Setting mode.

How to exit setting modes: Press the ESC key. The setting mode is exited, the OSD disappears.

1. Specific Channel Setting mode

This mode is entered when the DIG/ANA key is pressed in General Setting mode. In this mode, specific settings can be made for up to 12 channels. For channels that do not have specific settings, the settings of General Setting mode are applied.

Display in Specific Channel Setting mode (A picture from the tuner can be viewed using the semitransparent OSD display.)

[Display in Specific Channel Setting mode]

[When specific channel settings have NOT been made]

AVIO Specific Area Mode Ver *.*		
Input - [tuner]		
Sync AGC	: ON	*
Threshold	: Normal	*
V-Sync Det	: Normal	*
Std Det	: Normal	*
HD Err Det	: Normal	*

Individual setting state		
Input Channel - [1CH]		
Sync AGC	: --	
Threshold	: ----	
V-Sync Det	: ----	
Std Det	: ----	
HD Err Det	: ----	

General Setting data

Specific Channel Setting data

[When specific channel settings have been made]

AVIO Specific Area Mode Ver *.*		
Input - [tuner]		
Sync AGC	: ON	*
Threshold	: Normal	*
V-Sync Det	: Normal	*
Std Det	: Normal	*
HD Err Det	: Normal	*

Individual setting state		
Input Channel - [1CH]		
Sync AGC	: ON	
Threshold	: Auto Threshold Level---[3]	
V-Sync Det	: Normal	
Std Det	: Normal	
HD Err Det	: Normal	

* : setting is the default.

- If a channel that does not have specific settings is displayed, the setting figures are displayed as hyphens (--). If the setting figures are not displayed as hyphens, those settings have been specifically set even if they are identical to the default settings or those of General Setting mode.
- The channels to be displayed in "Input Channel" are as follows:
 - In a case of line input: L1-L3, DV
 - In a case of tuner input: Received channel (a channel to be set in specific channel settings)

Table 2: Key operations in Specific Channel Setting mode

(effective only during recording/playback stop)

Key	Operation	Setting (*: Default)	Remarks
DIG/ANA	Switches cyclically between General Setting mode and Specific Channel Setting mode.	—	—
INPUT SELECT, CHANNEL +/- (*R)	Switches inputs or channels.	—	—
[SIDE A], [SIDE B]	Sets Sync AGC.	ON (*) / OFF	—
[Rev x3], [x3 Fwd]	Sets Threshold level.	(*) Normal Auto Threshold Level Manual Threshold Level Pedestal Level	—
[Rev CHAPTER SKIP] [CHAPTER SKIP Fwd]	Sets Threshold level.	According to the setting of Threshold, the values can be changed within the range mentioned below.	—
		• Normal: The value is fixed, with no display of the value.	—
		• Auto Threshold Level: 0-8 (Default: 0)	—
		• Manual Threshold Level: 0-8 (Default: 0)	—
		• Pedestal Level: 0-8 (Default: 0)	—
[Rev SCAN], [SCAN Fwd]	Sets V-Sync Det.	Normal (*) / Short / Long	—
[Rev STILL STEP], [STILL STEP Fwd]	Sets Std Det.	Normal (*) / Non STD	—
[SPEED +], [SPEED -]	HD Err Det	Normal (*) / Fast / Stop	—
PLAY	All channels assigned to have specific settings are canceled, and the specific settings are reset to their default values.	—	Settings of General Setting mode are not affected.
CLEAR	Initializes the setting of Specific Channel Setting mode.	—	Pressing the key resets the settings of Specific Channel Setting mode for that channel to the initial values. Settings of General Setting mode are not affected.
PAUSE	The specific-setting data for the currently selected channel are reset to their default values. (But the assignment of a channel having specific settings is not canceled.)	—	Settings of General Setting mode are not affected (retained).
ESC	Exits AVIO setting for specific areas, clearing the OSD.	—	—

*R: Refers to keys on the remote control unit supplied with this unit. The keys without "R" refer to the remote control unit for service.

- 5
- 6
- 7
- 8
- A
- Screen display when Specific Channel settings are made on 12 (maximum) channels: In such a case. If a channel which does not have specific settings is selected, the individual setting state for that channel is not displayed, as shown in the figure below, and the settings cannot be modified. In such a case, if you wish to make Specific Channel Settings for the currently selected channel, you must clear the Specific Channel Settings for one or more channels beforehand.

**[With 12 channels having specific settings,
when the currently selected channel does not have specific settings]**

B

AVIO Specific Area Mode

Input - [TUNER]

Sync AGC

:

ON

*

Threshold

:

Normal

*

V-Sync Det

:

Normal

*

Std Det

:

Normal

*

HD Err Det

:

Normal

*

Individual setting state

Sorry !

You can store only 12 channels

for Specific Area mode.

■

2. General Setting mode

This mode can be entered only during recording/playback stop. In this mode, each item and its current settings are displayed on the OSD. The currently selected input mode (TUNER or LINE) is displayed. If L1, L2, L3 or DV is selected for input, general settings for the line input can be made, and if TUNER is selected, general settings for the tuner input can be made.

[General Setting mode] (*2)

C

AVIO Specific Area Mode

Input - [tuner]

Sync AGC

:

ON

*

Threshold

:

Normal

*

V-Sync Det

:

Normal

*

Std Det

:

Normal

*

HD Err Det

:

Normal

*

D

* : setting is the default.

Table 1: Key operations in General Setting mode (effective only during recording/playback stop)

Key	Operation	Setting (*: Default)	Remarks
INPUT SELECT, CHANNEL +/- (*R)	Switches inputs or channels.	—	—
[SIDE A], [SIDE B]	Sets Sync AGC.	ON (*) / OFF	—
[Rev x3], [x3 Fwd]	Sets Threshold level.	(*) Normal Auto Threshold Level Manual Threshold Level Pedestal Level	—
[Rev CHAPTER SKIP] [CHAPTER SKIP Fwd]	Sets Threshold level.	According to the setting of Threshold, the values can be changed within the range mentioned below.	—
		• Normal: The value is fixed, with no display of the value.	—
		• Auto Threshold Level: 0-8 (Default: 0)	—
		• Manual Threshold Level: 0-8 (Default: 0)	—
		• Pedestal Level: 0-8 (Default: 0)	—
[Rev SCAN], [SCAN Fwd]	Sets V-Sync Det.	Normal (*) /Short/Long	—
[Rev STILL STEP], [STILL STEP Fwd]	Sets Std Det.	Normal (*) /Non STD	—
[SPEED +], [SPEED -]	HD Err Det	Normal (*) /Fast/Stop	—
CLEAR	Initializes the setting of General Setting mode.	—	Pressing the key resets all settings of General Setting mode to the initial values. Settings of Specific Channel Setting mode are not affected (they are retained).
ESC	Exits AVIO setting for specific areas, clearing the OSD.	—	—

*R: Refers to keys on the remote control unit supplied with this unit. The keys without "R" refer to the remote control unit for service.

*1 : In General Setting mode, if the channel displayed has specific settings, the following will be displayed.

[Display in General Setting mode when the channel currently displayed has specific settings]

AVIO Specific Area Mode Ver*. **

Input - [tuner]

Sync AGC : ON *

Threshold : Normal *

V-Sync Det : Normal *

Std Det : Normal *

HD Err Det : Normal *

This channel is set up
individually.

7.1.8 AGING MODE

Notes:

Commands from the remote control unit are accepted during Aging mode.

If Aging mode is quit using the ESC key, indications on the FL display will return to normal display.

Cancel timer settings before entering Aging mode.

Set the recording rate beforehand. It cannot be changed during Aging mode.

*** Be aware that all recorded data are deleted when the aging for the DVD-RW and HDD is executed.**

Table 1: Aging for the DVD-RW and DVD-R

	Aging for the DVD-RW	Aging for the DVD-R
To enter Aging mode	Press the DVD key to switch to DVD. Install a recordable DVD-RW disc. After disc detection, press the ESC key then the REP.B key on the remote control unit for servicing to enter Aging mode.	Press the DVD key to switch to DVD. Install a recordable DVD-R disc. After disc detection, press the ESC key then the REP.B key on the remote control unit for servicing to enter Aging mode.
To quit Aging mode	Press the ESC key on the remote control unit for servicing to quit Aging mode and return to Normal mode. This also results in the following: <ul style="list-style-type: none"> • If during recording: Recording is stopped. • If during playback: Playback is paused. • If during initialization: The unit stops after initialization is finished. • If the tray is being opened/closed: The unit stops after the tray is opened/closed. 	Press the ESC key on the remote control unit for servicing to quit Aging mode and return to Normal mode. This also results in the following: <ul style="list-style-type: none"> • If during recording: Recording is stopped. • If during playback: Playback is paused.
Function	<p>During Aging mode, the following operations are repeated in the order shown below.</p> <ol style="list-style-type: none"> ① The tray opens. ② The tray closes. ③ Initialization ④ Recording for 60 minutes ⑤ Playback for 45 minutes <p>③ Initialization is performed according to the setting specified in "DVD-RW automatic initialization" (accessed by selecting "Unit Setting" then "Option").</p> <p>During Aging, the number of loops is indicated on the FL display, as shown below. [AGING 0001]</p> <p>If an error is generated, the aging operation stops.</p> <p>Note: Indications on the FL display are retained, and this information is also retained as an OSD.</p>	<p>During Aging mode, the following operations are repeated in the order shown below.</p> <ol style="list-style-type: none"> ① The tray opens. ② The tray closes. ③ Recording for 1 minute ④ Recording pause for 6 minutes ⑤ Recording stops. ⑥ Playback for 1 minute ⑦ Playback pause for 6 minutes ⑧ Playback stops. <p>Note: A continuous test of the above operations is possible for approximately 23 hours.</p> <p>After ② the tray closes, disc detection is performed, and if 99 titles have already been registered, the unit stops there. The number of loops is retained and indicated on the FL display. An error indication is retained as an OSD.</p> <p>During Aging, the number of loops is indicated on the FL display, as shown below. [AGING 0001]</p> <p>If an error is generated, the aging operation stops.</p> <p>Note: Indications on the FL display are retained, and this information is also retained as an OSD.</p> <p>Note: Recording time depends on the recording rate set. For example, if the recording rate is MN32, only up to 60 titles can be registered. Check the setting for recording rate before performing aging.</p>

Table 2: Aging for the HDD

	Aging for the HDD
A	<p>To enter Aging mode</p> <p>Press the HDD key to switch to HDD. Press the ESC key then the REP.B key on the remote control unit for servicing to enter Aging mode.</p>
	<p>To quit Aging mode</p> <p>Press the ESC key on the remote control unit for servicing to quit Aging mode and return to Normal mode. This also results in the following:</p> <ul style="list-style-type: none"> • If during recording: Recording is stopped. • If during playback: Playback is paused. • If during erasure of all memory data from the HDD, the unit stops after all memory data have been erased.
B	<p>Function</p> <p>During Aging mode, the following operations are repeated in the order shown below.</p> <ol style="list-style-type: none"> ① Erasure of all the memory data from the HDD ② Recording for 60 minutes ③ Playback for 60 minutes <p>During Aging, the number of loops is indicated on the FL display, as shown below.</p> <p>[AGING 0001]</p> <p>If an error is generated, the aging operation stops.</p> <p>Note: Indications on the FL display are retained, and this information is also retained as an OSD.</p>

C


D

E


F

7.1.9 SETUP SEQUENCE


Tuner/FL U-com

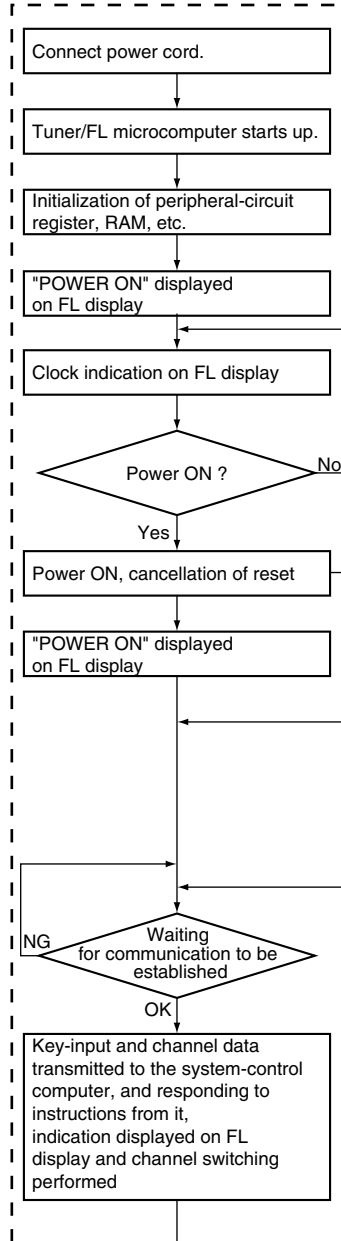


System Codec IC (Initial Program Loader)

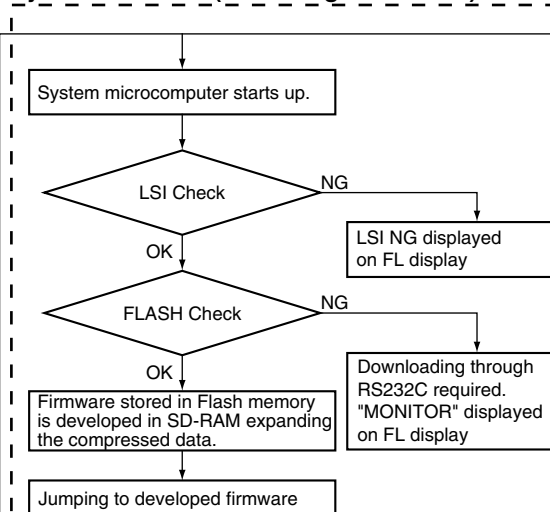

DVD-R/RW Drive

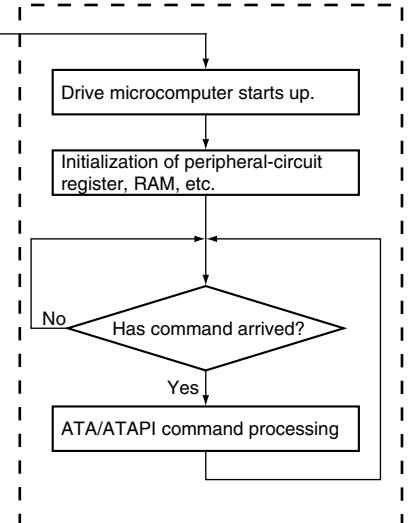

System Codec IC (Firmware)

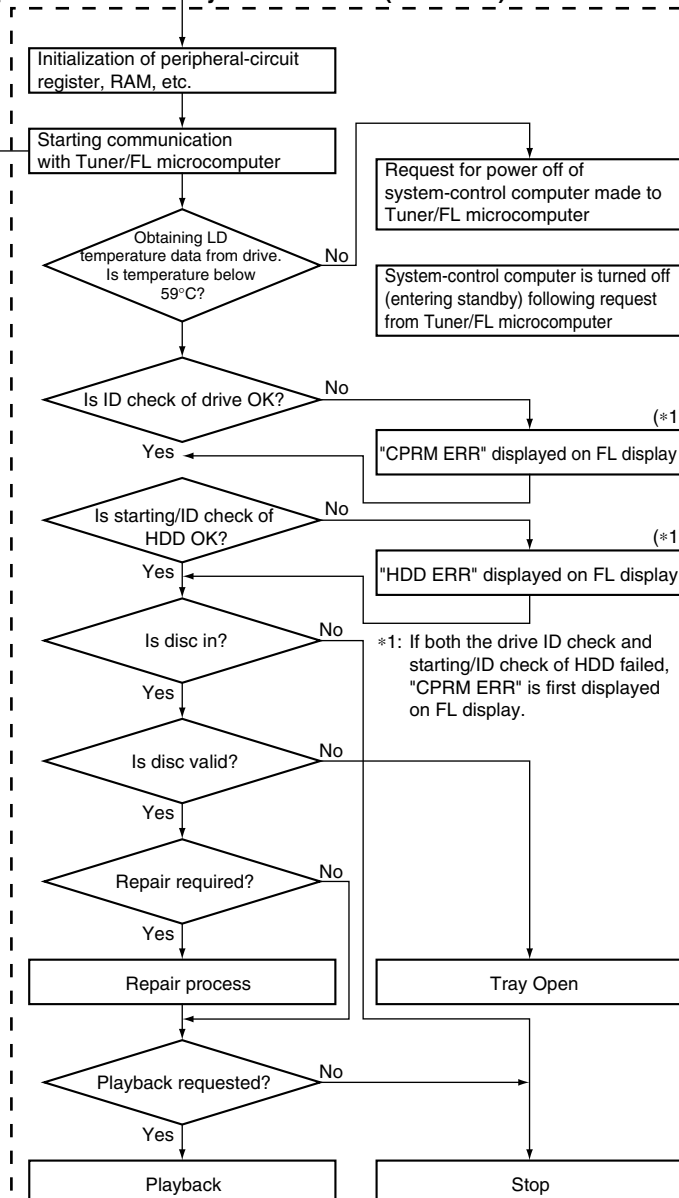

7.1.10 DISASSEMBLY

Note 1 : Even if the unit shown in the photos and illustrations in this manual may differ from your product, the procedures described here are common.


Note 2 : For performing the diagnosis shown below, the following jigs for service are required:

- Jig cable : GGD1370

Diagnosis of the MAIN Assy


1 Bonnet Case S and Tray panel

- 1 Remove the bonnet case S by removing the eight screws.
- 2 Press the ϕ STANDBY/ON button to turn on the power.
- 3 Press the \blacktriangle OPEN/CLOSE button to open the tray.
- 4 Remove the tray panel.
- 5 Press the \blacktriangle OPEN/CLOSE button to close the tray.
- 6 Press the ϕ STANDBY/ON button to turn off the power.

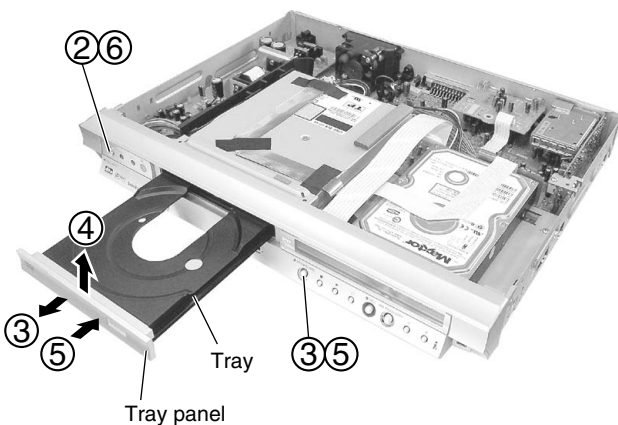


• How to open the tray when the power cannot be on

When the player cannot eject disc tray due to power failure or any other reasons, open the jack door, and use a long thin pole and push the emergency eject hole under the tray panel to eject.

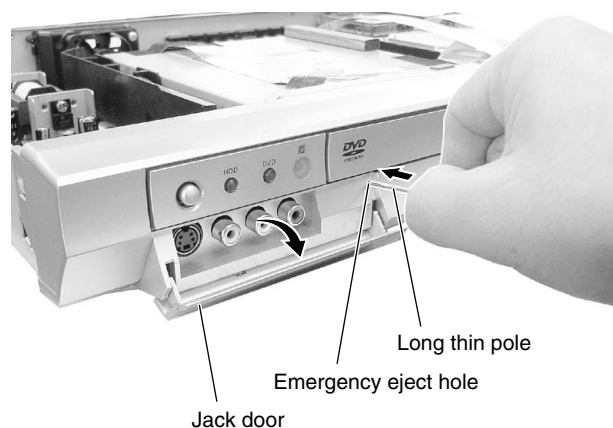


2 Front panel section

- 1 Unhook the four hooks.
- 2 Remove the front panel section.

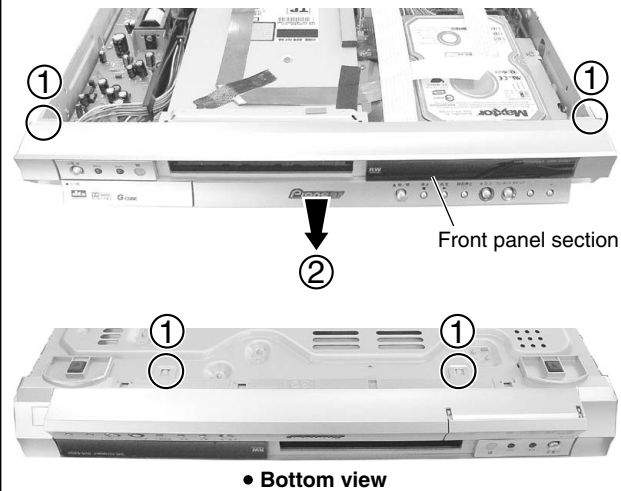



3 HDD Section

- 1 Remove the four screws.
- 2 Remove the binder.
- 3 Remove the aluminum tape.
- 4 Remove the HDD with HDD stay.

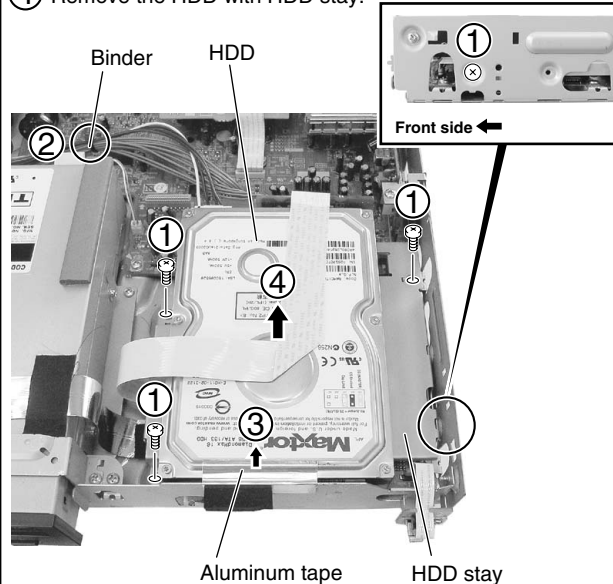


4 DRIVE Assy R7 (DVD-R/RW WRITER)

- ① Remove the some jumper wires from the clamp.
- ② Remove the binder.
- ③ Remove the some jumper wires from the SYPS cover.
- ④ Remove the six screws.

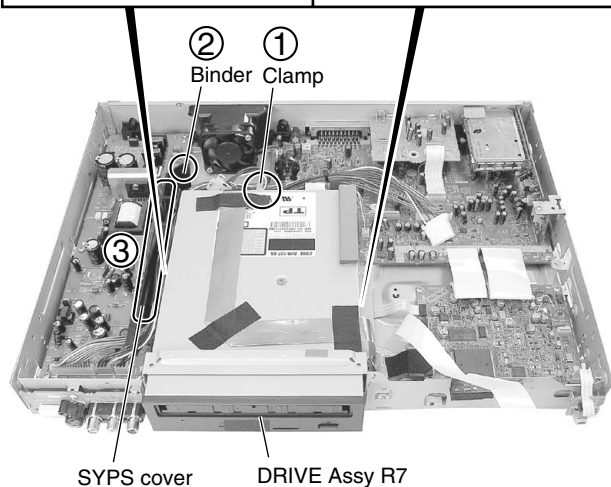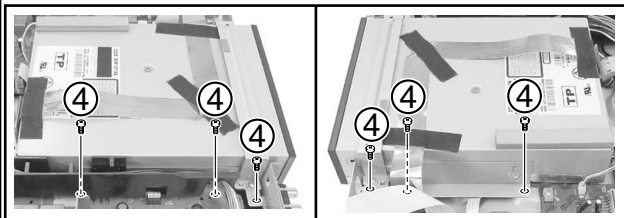


- ⑤ Disconnect the connector.
- ⑥ Remove the three tapes.
- ⑦ Remove the DRIVE Assy R7.

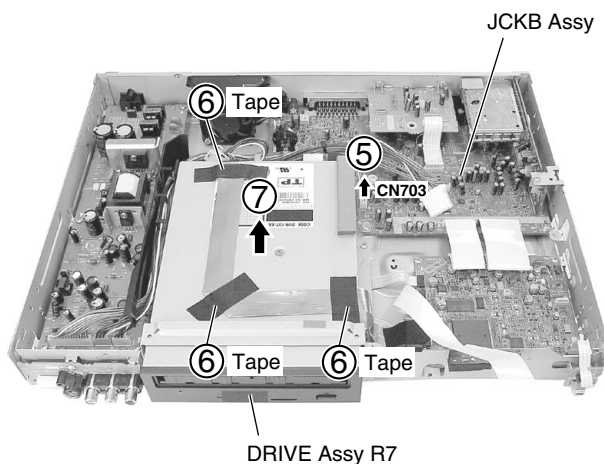

5 MAIN Assy

- ① Remove the four screws.
- ② Disconnect the flexible cable.
- ③ Stand the MAIN Assy.

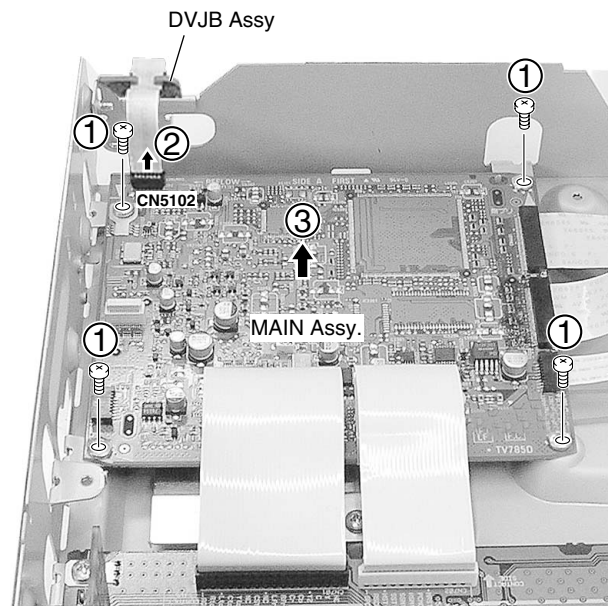


6 Diagnosis

- ① Connect the jig.
- ② Insert the insulation sheet between the MAIN Assy and base chassis.
- ③ Arrange the unit as shown in the photo below.

Caution :



Main IC (IC1001) on the MAIN Assy generate heat to around 80 degrees.
Be careful when works.

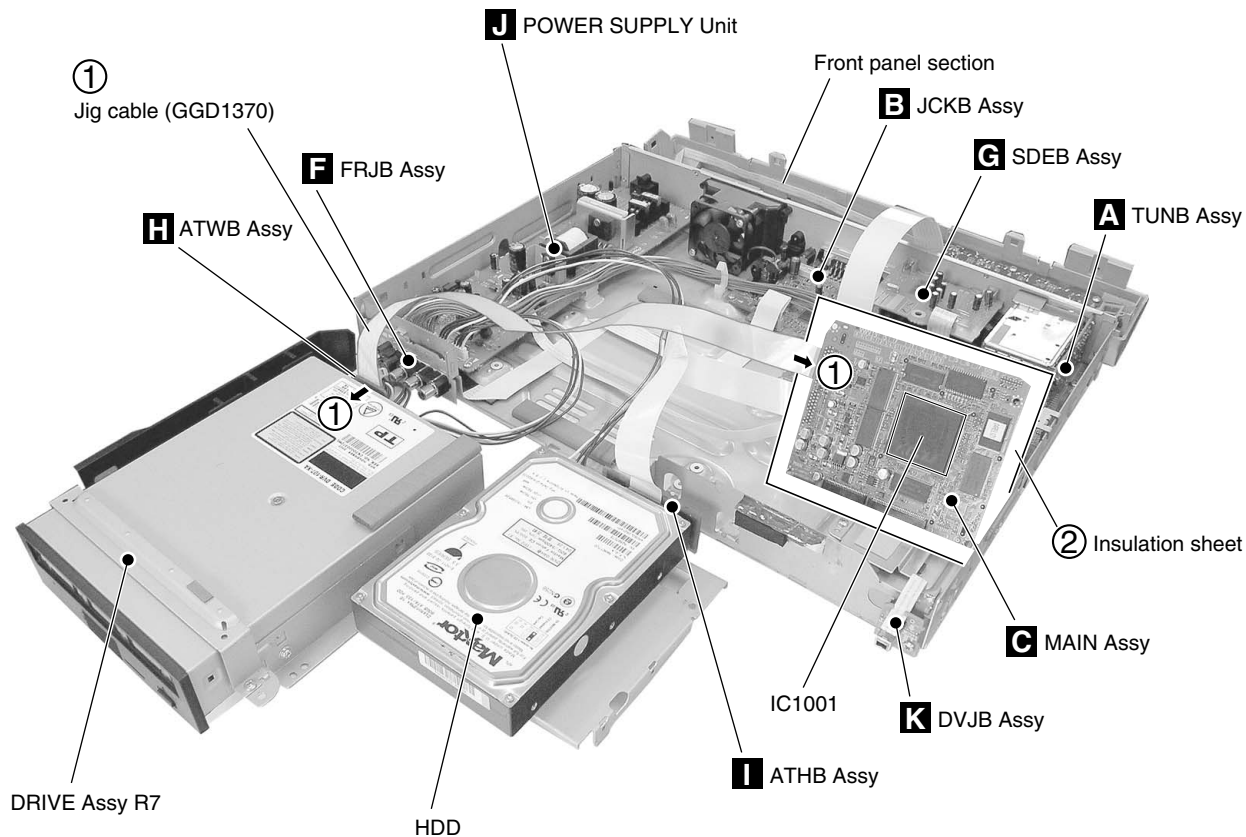


Diagnosis

Cleaning the pickup lens

- ① Remove the bonnet angle by removing the two screws.
- ② Remove the writer stay L by removing the two screws with the SYPS cover.
- ③ Remove the writer stay R by removing the two screws.

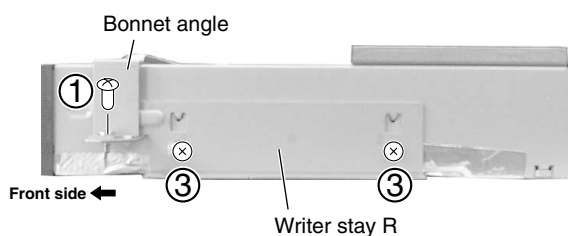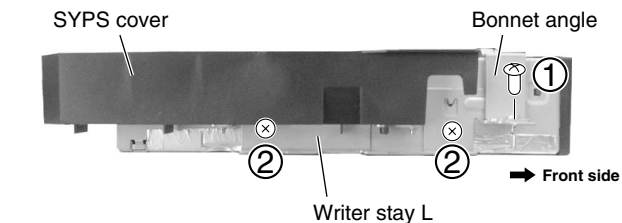


- ④ Remove the four aluminum tapes.

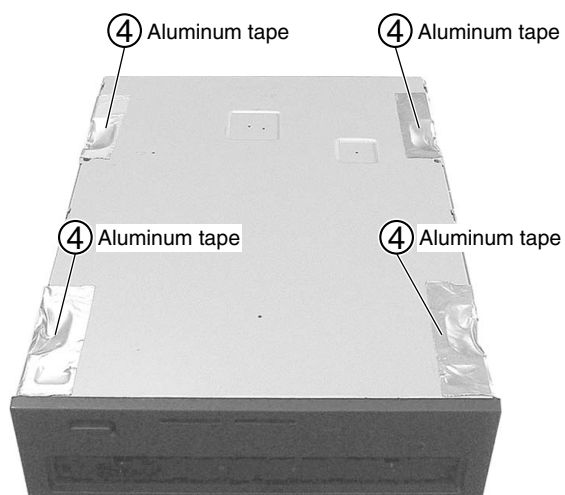

• Bottom view




- ⑤ Remove the bottom cover by removing the four screws.

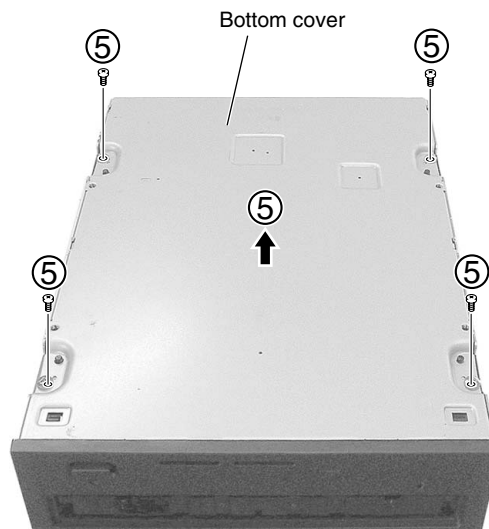


• Bottom view



- ⑥ Remove the front bezel by unhooking the two hooks.
- ⑦ Remove the one screw.
- ⑧ Remove the top cover.

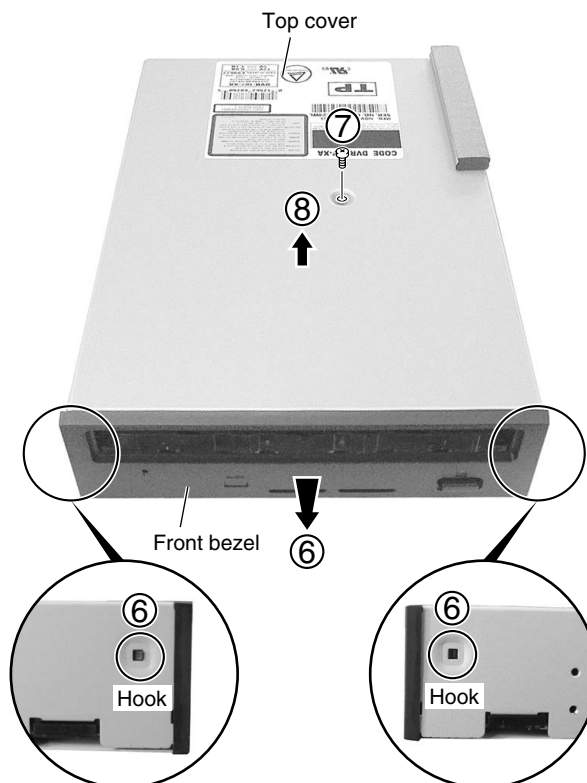

- ⑨ Remove the four screws.
- ⑩ Remove the clamper section.

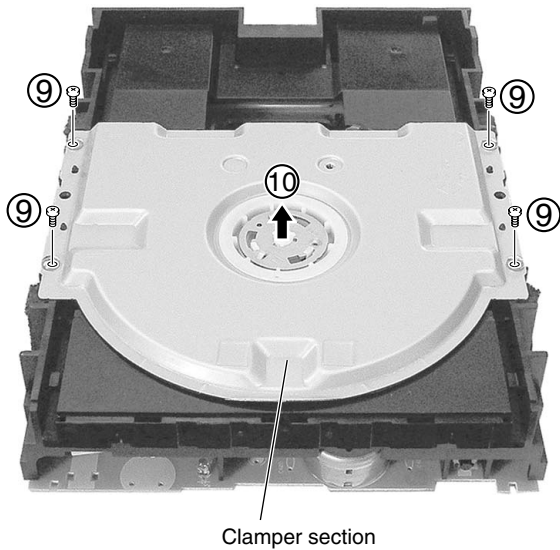


- ⑪ Clean the pickup lens.



Before shipping out the product, be sure to clean the following positions by using the prescribed cleaning tools :

Cleaning liquid : GEM1004
Cleaning paper : GED-008

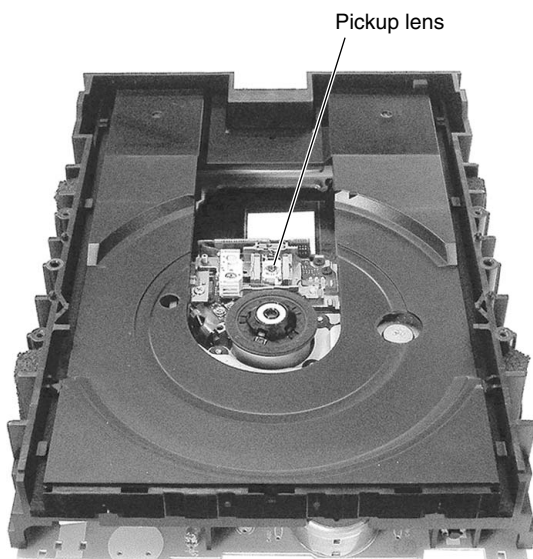

7.2 IC

• The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

• List of IC

PEG035B, TDA9818TS, LA73026AV, RS5C372A, LC75342M, LA73033M, AK5357VT, PST3428U, PST3809U
M65673WG-A, UPD72852AGB-8EU, UPD72893AGD-LML

■ PEG035B (JCKB ASSY : IC202)

• TUFL Microcomputer

• Pin Function

No.	Pin Name	Signal Name	I/O	Function	Active
1	P95/ANEX0/CLK4	FLCLK	O	FL Driver communication line CLK	–
2	P94/DA1/TB4in	SYNC	I	C-Sync of input video	↑
3	P93/DA0/TB3in	AVLINKIN	I	Input line of NextViewLink	–
4	P92/TB2in/Sout3	IR	I	Pulse input of remote control	–
5	P91/TB1in/Sin3	J_CLOCK	I		
6	P90/TB0in/CLK3	SYNCAFT	I	C-Sync of input video	↑
7	BYTE	BYTE	I		
8	CNVss	PGM	I	Communication line	
9	P87/XCin	NC	(O)		–
10	P86/XCout	NC	(O)		–
11	-RESET	XRESETIN	I	u-Con Reset	
12	Xout	XOUT	I		
13	Vss	GND	–		
14	Xin	XIN	I		
15	Vcc	VCC	–		
16	P85/-NMI	NMI	I		↓
17	P84/-INT2	(JOGA)	(I)	Not used	
18	P83/-INT1	SLICEONFB	I	Feedback from SLICEON pin	↑ ?
19	P82/-INT0	XINTRA	I	Alarm/interval interruption	↓
20	P81/TA4in	LED_HDD	(O)	Not used for straight model	–
21	P80/TA4out	LED_DVD	(O)	Not used for straight model	–
22	P77/TA3in	PSAVE_MUTE	O	for noise suppression when controlling SCART power	–
23	P76/TA3out	FANPWM	O	FAN power control	H
24	P75/TA2in	(JOGB)	(I)	Not used	
25	P74/TA2out	NC	(O)		–
26	P73/-CTS2/-RTS2/TA1in	NC	O		–
27	P72/CLK2/TA1out	AVLINKOUT	O	Output line of NextViewLink	H
28	P71/RxD2/SCL/TA0in/TB5in	SCL	I/O	I2C communication (clock)	–
29	P70/TxD2/SDA/TA0out	SDA	I/O	I2C communication (data)	–
30	Vss2	GND	–		
31	LP2	LP2	O		
32	LP3	LP3	O		
33	LP4	LP4	O		
34	Vdd2	VDD2	–		
35	M2	M2	I	Mode switch	
36	M1	M1	I		
37	P11/SLICEON	SLICEON	O	Slicer operating signal	H?
38	P67/TxD1	TXD	O	Communication line for firmware download/monitor	–
39	P66/RxD1	RXD	I	Communication line for firmware download/monitor	–
40	P65/CLK1	SCLK	(O)	Communication line for firmware download/monitor	–

A

B

C

D

E


F

No.	Pin Name	Signal Name	I/O	Function	Active
41	P64/-CTS1/-RTS1/CLKS1	BUSY	O	Communication line for firmware download/monitor	—
42	P63/TxD0	SSTOM	O	SYS controller communication line (Tuner → Main)	—
43	P62/RxD0	SSMTOT	I	SYS controller communication line (Main → Tuner)	—
44	P61/CLK0	SCK	I	SYS controller communication line (clock)	↑
45	P60/-CTS0/-RTS0	HSTTOM	O	Tuner → SYS handshake	L
46	P57/-RDY/CLKout	DLCONT	O	Voltage supply SW of FLASH-ROM writing	L
47	P56/ALE	WRT	O	Write signal	H
48	P55/-HOLD	SDAEEP	I/O	SDA line for EEPROM	—
49	P54/-HLDA	SCLEEP	O	SCL line for EEPROM	—
50	P53/BCLK	VOLCE	O	Communication line CE	H
51	P52/-RD	VOLDATA	O	Communication line DATA	—
52	P51/-WRH/-BHE	VOLCLK	O	Communication line CLK	—
53	P50/-WRL/-WR	DLCE	I	Signal for serial I/O mode selection	—
54	P47/-CS3	NC	(O)		
55	P46/-CS2	NC	(O)		
56	P45/-CS1	NC	(O)		
57	P44/-CS0	BLANK	I	BLANK signal input	—
58	P43/A19	XTHROU	O	Through control of SCART1/2	L
59	P42/A18	NC	(O)		
60	P41/A17	EXTRGB	O		—
61	P40/A16	SWVION	O	Independent source SW for video I/O output circuit	H
62	P37/A15	SWSTBY	O	Standby mode of video input selector	H
63	P36/A14	NC	(O)		
64	P35/A13	BS15SRT	I		
65	P34/A12	SCTHRU	O	SCART loop through control during power OFF	L
66	P33/A11	NC	(O)		
67	P32/A10	NC	(O)		
68	P31/A9	SDET2	I	S terminal detection of Video input 2	L
69	Vcc	VCC	—		
70	P30/A8	NC	I		—
71	Vss	GND	—		
72	P27/A7	NC	(O)		
73	P26/A6	NC	(O)		
74	P25/A5	NC	(O)		
75	P24/A4	NC	(O)		
76	P23/A3	P_SAVEBS	O	RF through output switch	H
77	P22/A2	NC	O		—
78	P21/A1	NC	O		—
79	P20/A0	P_CONT	O	System Power ON	H
80	P17/D15/-INT5	NC	(O)		—

No.	Pin Name	Signal Name	I/O	Function	Active
81	P16/D14/-INT4	HSMTOT	I	SYS → Tuner handshake	↓
82	P15/D13/-INT3	DCTRI	I	Change detection of audio condition	↑
83	P14/D12	NC	O		—
84	P13/D11	SU/SAPID	I		
85	P12/D10	ST/STID	I		
86	P11/D9	XRESET	O	System Reset output	L
87	P10/D8	LDASH	O	ColorSystem distinction signal	H
88	P07/D7	STBYQ	O	EU multiplex decoder standby mode	L
89	P06/D6	LM/	O	ColorSystem distinction signal	H
90	P05/D5	I/BG	O	ColorSystem distinction signal	H
91	P04/D4	XP_SAVE	O	Power save control (SCART)	L
92	P03/D3	TUON	O	Tuner power	H
93	P02/D2	NC	(O)		
94	P01/D1	RSTCTL	O	Reset signal mask from the system controller	L
95	P00/D0	FLPON	O	FL Driver Power ON	H
96	P107/AN7/-KI3	MODEL1	A/D IN	Input for destination judgment	—
97	P106/AN6/-KI2	MODEL2	A/D IN	Input for destination judgment	—
98	P105/AN5/-KI1	AGC	A/D IN	Field intensity detection	—
99	P104/AN4/-KI0	FUNC	A/D IN	Function signal input	—
100	P103/AN3	KEY2	A/D IN	Main unit key input	—
101	P102/AN2	KEY1	A/D IN	Main unit key input	—
102	P101/AN1	C/N	A/D IN		—
103	Avss	GND	—		
104	P100/AN0	AFT	A/D IN	AFT voltage input	—
105	VREF	VREF	—		
106	AVcc	AVCC	—		
107	P97/-ADTRG/Sin4	FLSTB	O	Communication line strobe of FL driver	L
108	Vdd1	VDD1	—		
109	SYNCIN	SYNCTEXT	I	Video input for sync. sep.	
110	SVREF	SLICE	I	Slice level input	
111	Vss1	GND	—		
112	Vdd3	VDD3	—		
113	CVIN1	CVIN1	I	Video input for teletext	
114	Vss3	GND	—		
115	FSCIN	FSCIN	I	Fsc input	
116	P96/ANEX1/Sout4	FLDATA	O	Communication line data of FL driver	—

- VIF/SIF IC


F

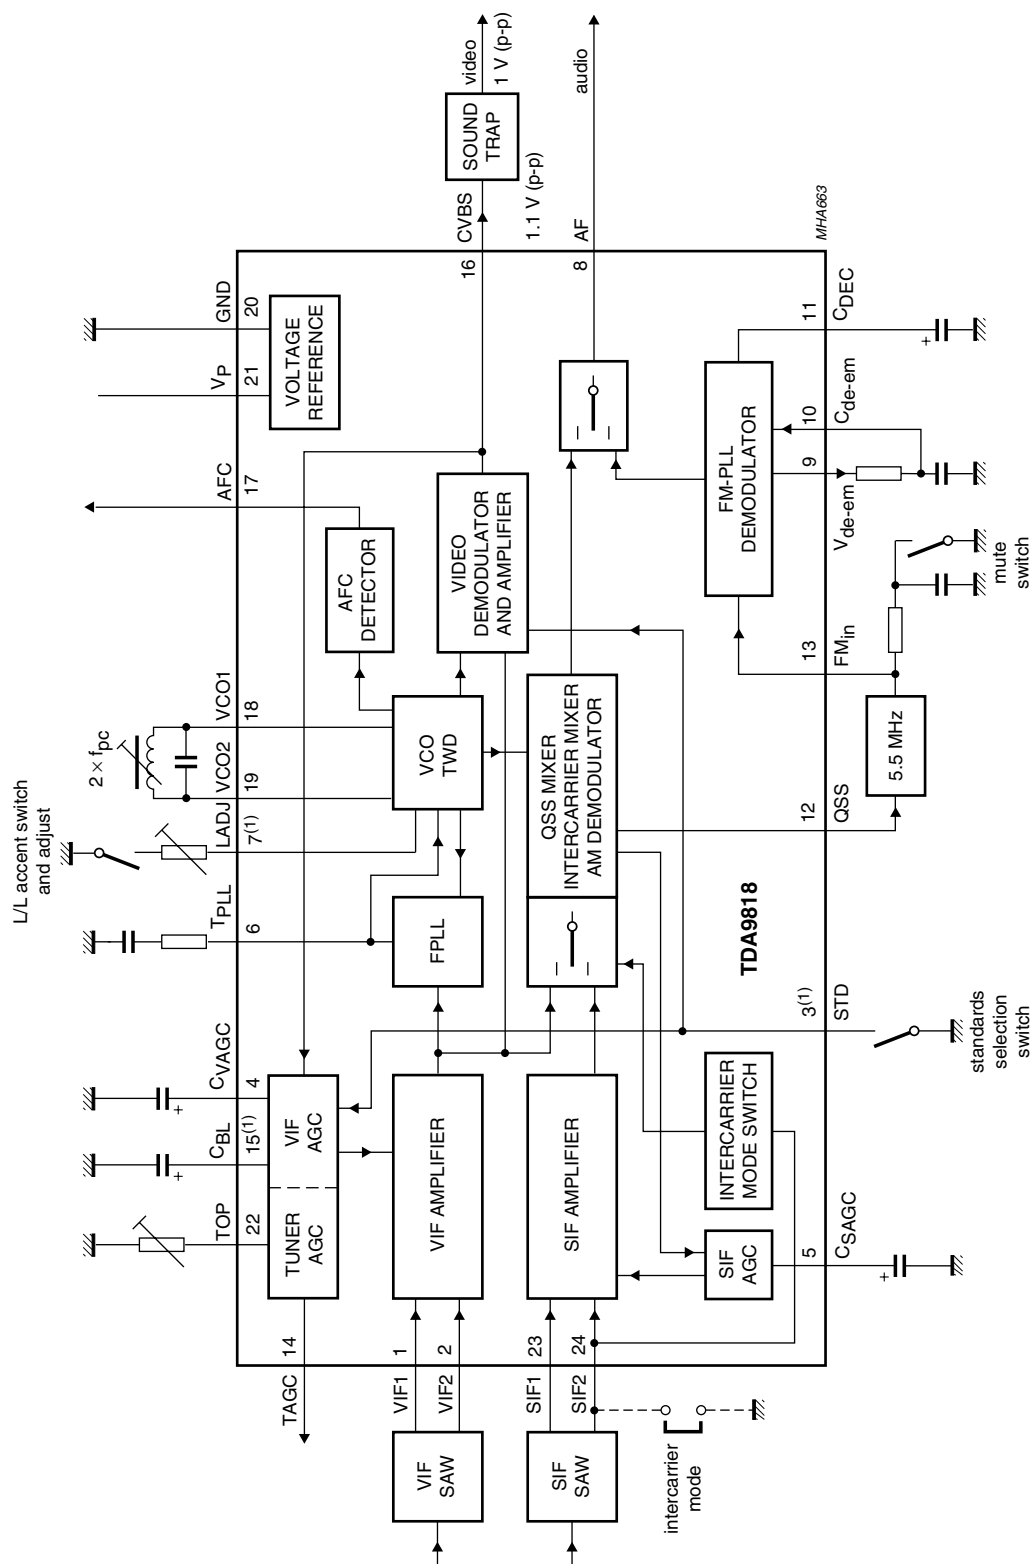

● PIN FUNCTION

SYMBOL	PIN	DESCRIPTION
VIF1	1	VIF differential input signal voltage 1
VIF2	2	VIF differential input signal voltage 2
STD	3	standards selection switch; note 1
C _{VAGC}	4	VIF AGC capacitor
C _{SAGC}	5	SIF AGC capacitor
T _{PLL}	6	PLL filter
LADJ	7	L/L accent switch and adjust
AF	8	audio output
V _{de-em}	9	de-emphasis output
C _{de-em}	10	de-emphasis input
C _{DEC}	11	decoupling capacitor
QSS	12	single reference QSS/intercarrier output voltage
FM _{in}	13	sound intercarrier input voltage
TAGC	14	tuner AGC output
C _{BL}	15	black level detector
CVBS	16	composite video output voltage
AFC	17	AFC output
VCO1	18	VCO1 resonance circuit
VCO2	19	VCO2 resonance circuit
GND	20	ground
V _P	21	supply voltage
TOP	22	tuner AGC takeover point adjust
SIF1	23	SIF differential input signal voltage 1
SIF2	24	SIF differential input signal voltage 2

● PIN LAYOUT

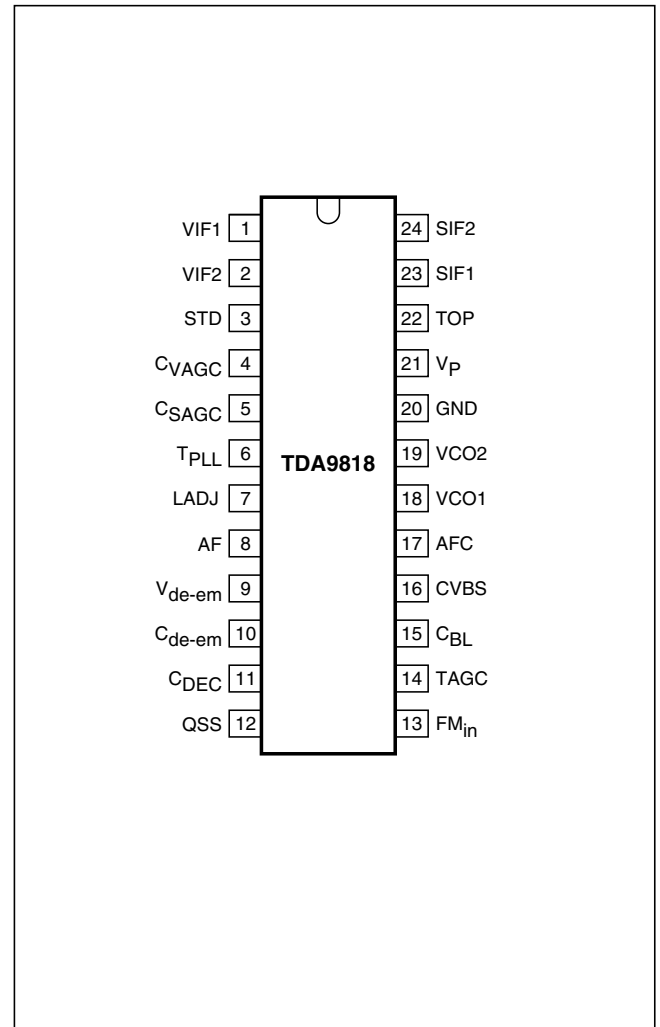


LA73026AV (JCKB ASSY : IC501)

• Dual SCART Interface IC

A ● Pin Function

No.	Pin Name	DC Voltage	Function
1 2 10 11 15 16 33 34 36 37	AIN1R AIN1L AIN2R AIN2L AIN3R AIN3L AIN4L AIN4R AIN5L AIN5R	5.58V	Audio input terminal
3 4 19 35	EXTCTL1 EXTCTL2 EXTCTL3 EXTCTL4	2.5mA, ON →0.75V OFF →OPEN	General purpose output Opencollector
5	VOUT	1.10V	Video output terminal Push-pull output/Low-impedance
6 17 27 32 38	GND GND EXT-75ΩDR-GND DEC-75Ω-GND GND	0V	
7 13 18 23 28	VIN1 VIN2 VIN3 VIN4 VIN5	1.8V	Video input terminal Sync-tip clamp Input/Hi-impedance
8	PWRSAB	0.2V	Power save mode select pin OPEN : L
9	AUMUTE	0.05V	Control terminal for audio mute OPEN : L
12	REFFIL	4.94V	Terminal for Ref_DC ripple removing
14	VCC12		Vcc for audio
20	FSSOUT	H : Vcc-0.5V M : 6V L : 0V	FSS control terminal Output H, M, L 3 values with serial control
21	DATA		Confirmed to IIC BUS. Data input terminal
22	CLOCK		Confirmed to IIC BUS. Clock input terminal
24	VCC5A		Control Vcc for Video
25 26	VOUT75A VOUT75B	1.10V	Video driver output terminal Push-pull output/Low-impedance
29	VCC5B		Always VCC for Video
30 31 42 43	AOUT2L AOUT2R AOUT3L AOUT3R	4.91V	Audio output terminal Push-pull output/Low-impedance
39 40	AOUT1L AOUT1R	4.91V	Audio output terminal Push-pull output/Low-impedance
41 44	PWRMUTE1 PWRMUTE2	0V	Output terminal of audio muting


● Block Diagram

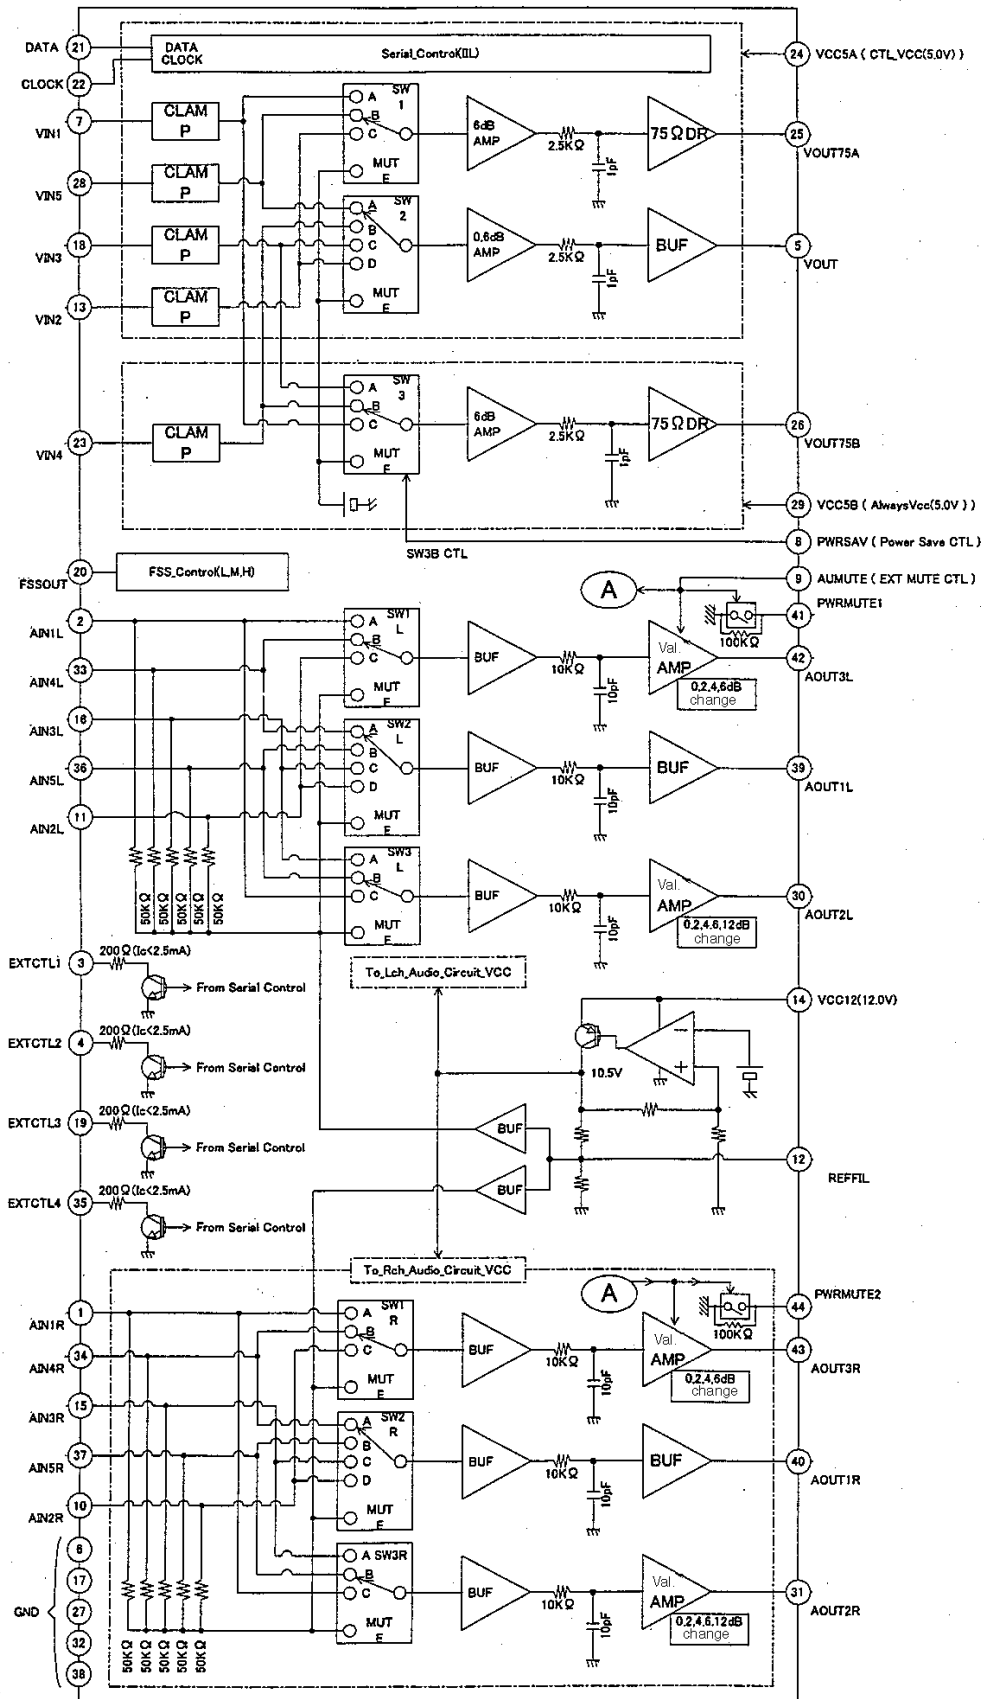

RS5C372A (JCKB ASSY : IC203)

• Real Time Clock IC

● Block Diagram

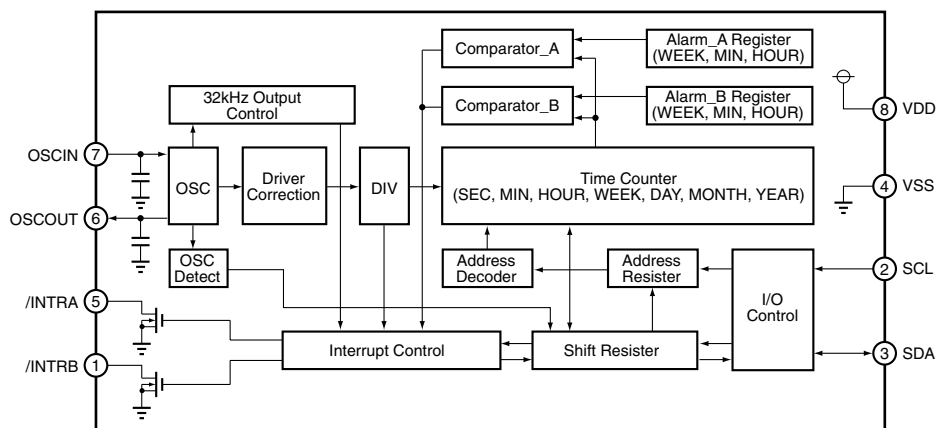


● Pin Function

No.	Pin Name	I/O	Function	
1	/INTRB	O	Interruption output B The output of 32.768kHz (in 32768Hz crystal use), cycled interrupt for CPU, or output alarm interrupt (ALARM_B). This pin output 32.768kHz when activated power from 0V. Nch open drain output.	
2	SCL	I	Shift clock input Synchronize with this clock, and input and output data from a SDA terminal. Exceed VDD, and can input to 6V.	
3	SDA	I/O	Serial input and output Synchronize with SCL, and input and output writing data or readout data. Exceed VDD, and can input to 6V. Nch open drain output in the output.	
4	VSS	–	Ground pin	
5	/INTRA	O	Interruption output A Cycled interrupt for CPU, or output alarm interruption (ALARM_A, ALARM_B). This pin becomes an OFF state when activated power from 0V. N ch open drain output.	
6	OSCOUT	O	Oscillation circuit output	Connect a crystal resonator of 32.768kHz or 32.000kHz between OSCIN and OSCOUT, and constitute oscillation circuit. (component parts of oscillation circuit except crystal resonator have it built-in.)
7	OSCIN	I	Oscillation circuit input	
8	VDD	–	Positive supply input	

LC75342M (JCKB ASSY : IC601)

• Electric Volume IC

● Block Diagram

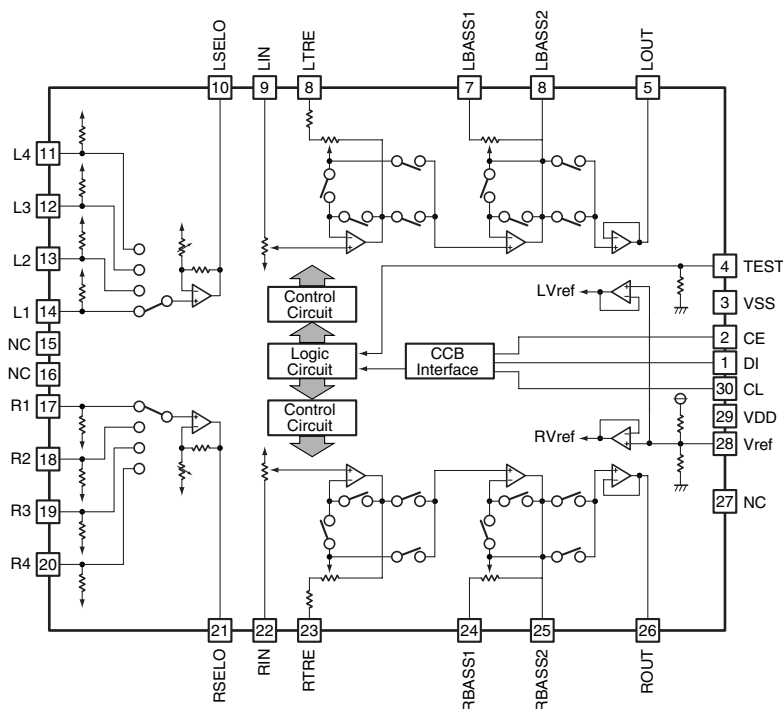


● Pin Function

No.	Pin Name	Function	No.	Pin Name	Function
1	DI	Serial data input for control	16	NC	Not connected
2	CE	Chip enable pin Data are written in the internal latch by a timing of "H" → "L", and each analog switch works. Data transfer is enabled by "H" level.	17	R1	Input signal pin
3	VSS	Ground pin	18	R2	
4	TEST	Pin for electronic volume test Set to VSS electric potential.	19	R3	
5	LOUT	Volume and equalizer output pin	20	R4	
6	LBASS2	Capacitor and resistor connection pins for bus bandpass filter	21	RSELO	Input selector output pin
7	LBASS1		22	RIN	Volume and equalizer input pin
8	LTRE	Capacitor connection pin for treble bandpass filter	23	RTRE	Capacitor connection pin for treble bandpass filter
9	LIN	Volume and equalizer input pin	24	RBASS1	Capacitor and resistor connection pins for bus bandpass filter
10	LSELO	Input selector output pin	25	RBASS2	
11	L4	Input signal pins	26	ROUT	Volume and equalizer output pin
12	L3		27	NC	Not connected
13	L2		28	Vref	0.5XVDD voltage generation block
14	L1		29	VDD	Power supply pin
15	NC	Not connected	30	CL	Clock input pin for control

LA73033M (JCKB ASSY : IC701)

• Video selector and Video driver


• Block Diagram

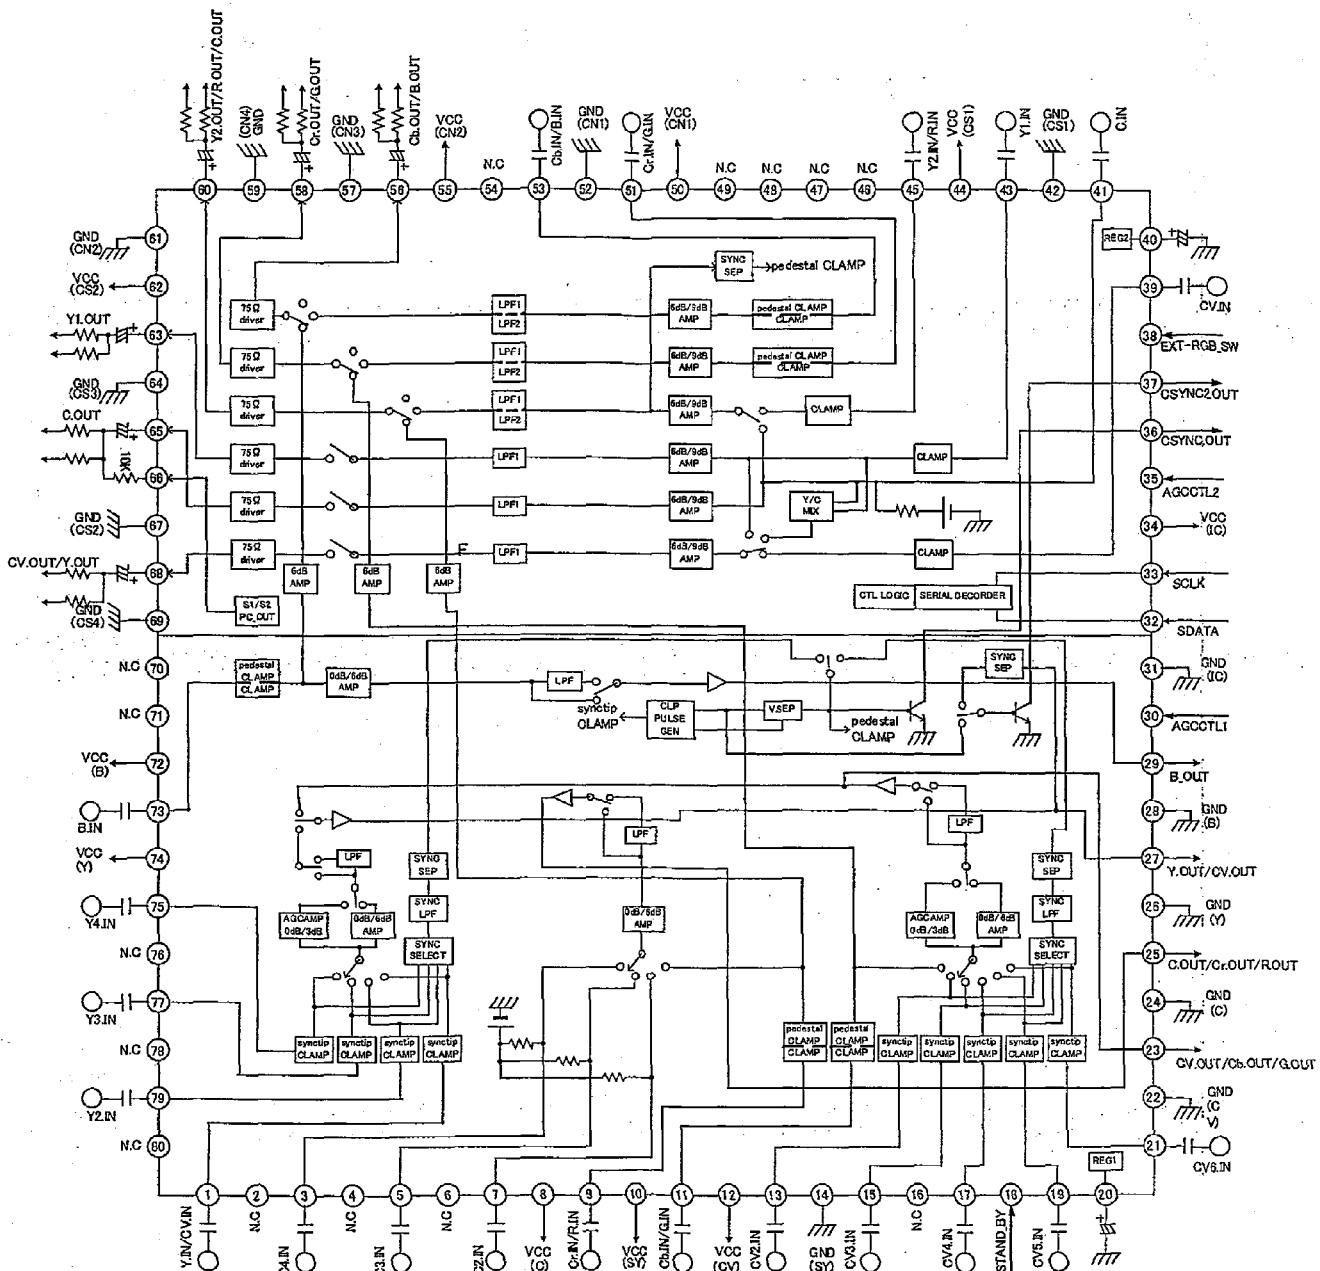


AK5357VT (MAIN ASSY : IC3101)

• 96kHz 24 bit $\Delta\Sigma$ ADC

Pin Arrangement (Top view)

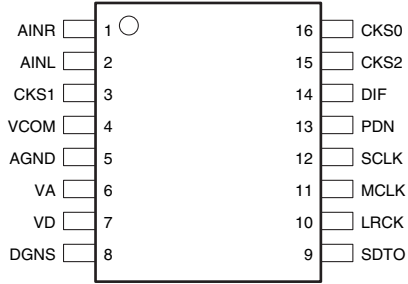

Block Diagram

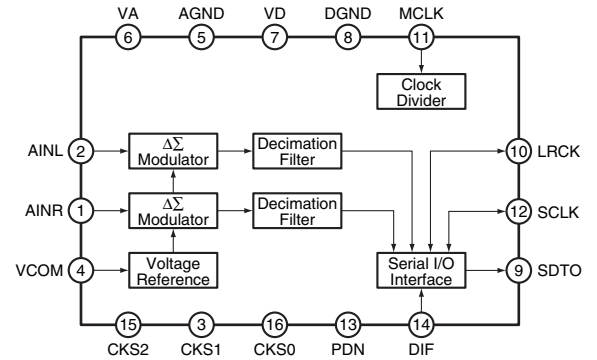

Pin Function


No.	Pin Name	I/O	Function
1	AINR	I	R ch analog input
2	AINL	I	L ch analog input
3	CKS1	I	Mode select 1
4	VCOM	O	Common voltage output, bias voltage of VA/2 and ADC input
5	AGND	–	Analog ground
6	VA	–	Analog power supply, 2.7 to 5.5V
7	VD	–	Digital power supply, 2.7 to 5.5V
8	DGND	–	Digital ground
9	SDTO	O	Audio serial data output, outputs "L" in the power down mode.
10	LRCK	I/O	Channel clock I/O, outputs "L" by master mode in the power down mode.
11	MCLK	I	Master clock input
12	SCLK	I/O	Audio serial data clock, outputs "L" by master mode in the power down mode.
13	PDN	I	Power down mode "H": power up, "L": power down
14	DIF	I	Audio interface format, "H" : 24 bit I2S compatibility, "L" : 24 bit MSB justify
15	CKS2	I	Mode select 2
16	CKS0	I	Mode select 0

■ **PST3428U (MAIN ASSY : IC4003)**


• Reset IC

A

● **Pin Arrangement (Top view)**

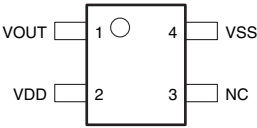

● **Block Diagram**

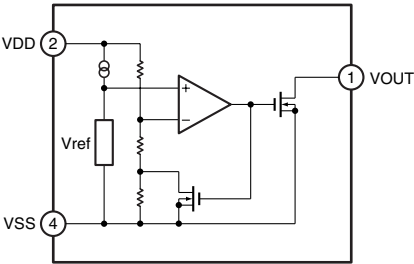

B

● **Pin Function**

No.	Pin Name	Function
1	VOUT	Reset signal output
2	VDD	Power supply / voltage detection
3	NC	Not connected
4	VSS	VSS


C

■ **PST3809U (MAIN ASSY : IC4005)**


• Reset IC

D

● **Pin Arrangement (Top view)**

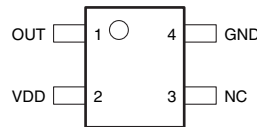

● **Block Diagram**

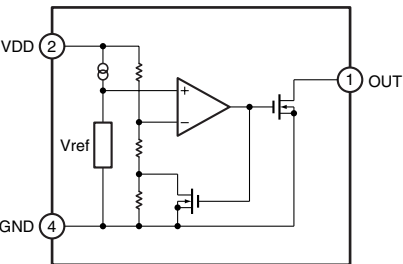

E

● **Pin Function**


No.	Pin Name	Function
1	OUT	Reset signal output
2	VDD	Power supply / voltage detection
3	NC	Not connected
4	GND	Ground

F

■ M65673WG-A (MAIN ASSY : IC1001)

• Signal Processing IC for DVD Recorder

● Pin Arrangement (Top view)

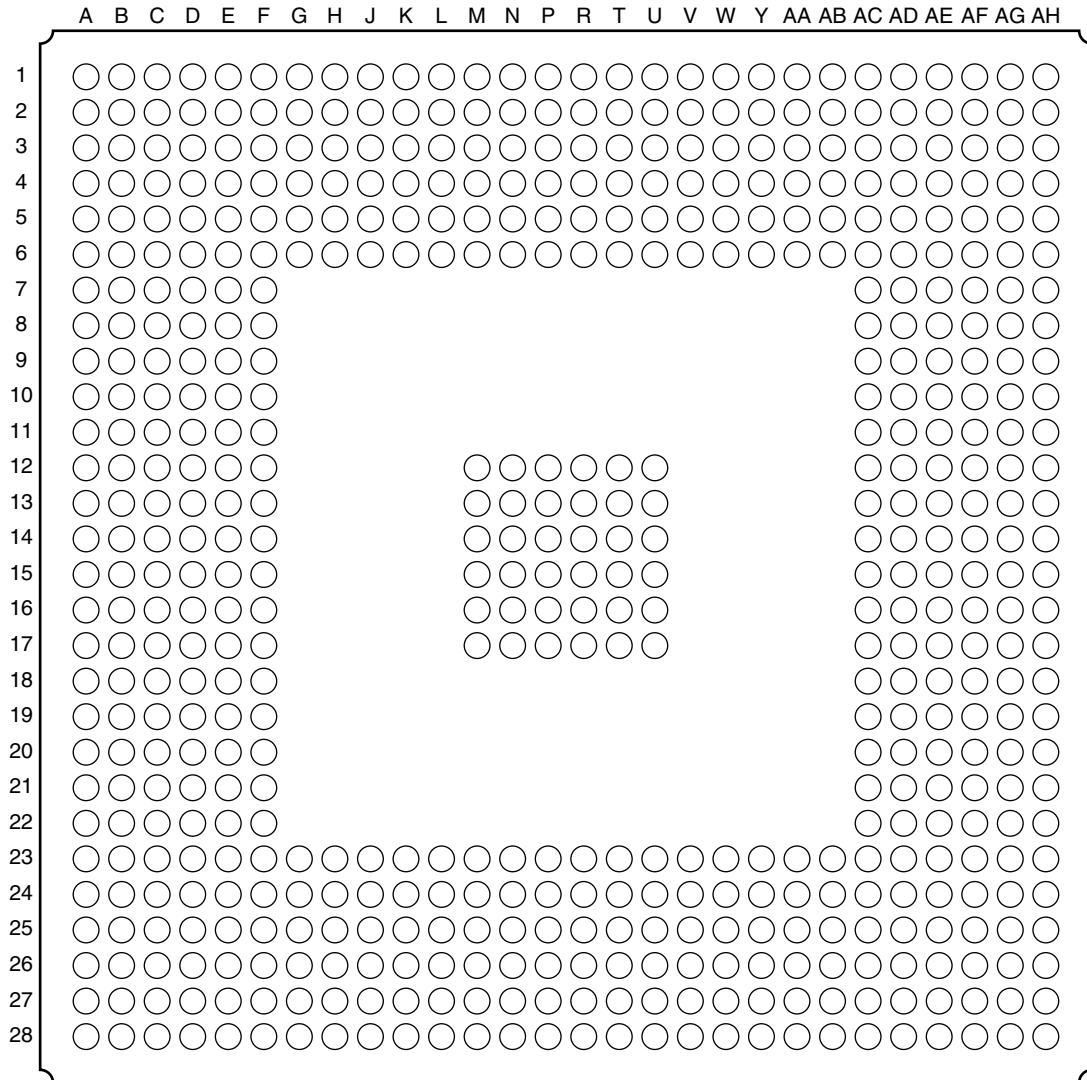

● I/O buffer list

Buffer Name	Main Function	Remarks
PDIDGZ	Input buffer (5V tolerant)	
PDUDGZ	Input buffer (5V tolerant), pull-up	
PDDDGZ	Input buffer (5V tolerant), pull-down	
PDO04CDG	Output buffer, 4mA	
PDO08CDG	Output buffer, 8mA	
PDO0204DGZ	Output buffer, 2/4mA	
PDO0406DSGZ	Output buffer, 4/6mA	For SDRAM IF
PDO0406DSGZ×2	Output buffer, 8/12mA	For SDRAM IF
PDT0204DGZ	3 state output buffer, 2/4mA	
PDB04DGZ	Bidirectional buffer, 4mA	
PDB08DGZ	Bidirectional buffer, 8mA	
PDB0204DGZ	Bidirectional buffer, 2/4mA	
PDB0406DSGZ	Bidirectional buffer, 4/6mA	For SDRAM IF

● Pin Name list

A

B

C

D

E

F

28	A	28	AH
27	AT1DA12	EDAT12	EDAT12
26	AT1DA11	EDAT11	EDAT11
25	AT1DA10	EDAT10	EDAT10
24	AT1DA9	EDAT9	EDAT9
23	AT1DA8	EDAT8	EDAT8
22	AT1DA7	EDAT7	EDAT7
21	AT1DA6	EDAT6	EDAT6
20	AT1DA5	EDAT5	EDAT5
19	AT1DA4	EDAT4	EDAT4
18	AT1DA3	EDAT3	EDAT3
17	AT1DA2	EDAT2	EDAT2
16	AT1DA1	EDAT1	EDAT1
15	AT1D0E	EDAT0E	EDAT0E
14	RESET		
13	PLLAVSS		
12	DACLCKO		
11	ARDATA11	ARDATA11	ARDATA11
10	ARDATA10	ARDATA10	ARDATA10
9	ARDATA9	ARDATA9	ARDATA9
8	ARDATA8	ARDATA8	ARDATA8
7	ARDATA7	ARDATA7	ARDATA7
6	ARDATA6	ARDATA6	ARDATA6
5	ARDATA5	ARDATA5	ARDATA5
4	ARDATA4	ARDATA4	ARDATA4
3	ARDATA3	ARDATA3	ARDATA3
2	ARDATA2	ARDATA2	ARDATA2
1	ARDATA1	ARDATA1	ARDATA1
28	AVDDA10	AVDDA10	AVDDA10
27	AVDDA9	AVDDA9	AVDDA9
26	AVDDA8	AVDDA8	AVDDA8
25	AVDDA7	AVDDA7	AVDDA7
24	AVDDA6	AVDDA6	AVDDA6
23	AVDDA5	AVDDA5	AVDDA5
22	AVDDA4	AVDDA4	AVDDA4
21	AVDDA3	AVDDA3	AVDDA3
20	AVDDA2	AVDDA2	AVDDA2
19	AVDDA1	AVDDA1	AVDDA1
18	AVDD0E	AVDD0E	AVDD0E
17	AVDD0D	AVDD0D	AVDD0D
16	AVDD0C	AVDD0C	AVDD0C
15	AVDD0B	AVDD0B	AVDD0B
14	AVDD0A	AVDD0A	AVDD0A
13	AVDD00	AVDD00	AVDD00
12	AVDD01	AVDD01	AVDD01
11	AVDD02	AVDD02	AVDD02
10	AVDD03	AVDD03	AVDD03
9	AVDD04	AVDD04	AVDD04
8	AVDD05	AVDD05	AVDD05
7	AVDD06	AVDD06	AVDD06
6	AVDD07	AVDD07	AVDD07
5	AVDD08	AVDD08	AVDD08
4	AVDD09	AVDD09	AVDD09
3	AVDD10	AVDD10	AVDD10
2	AVDD11	AVDD11	AVDD11
1	AVDD12	AVDD12	AVDD12
28	AVDDA10	AVDDA10	AVDDA10
27	AVDDA9	AVDDA9	AVDDA9
26	AVDDA8	AVDDA8	AVDDA8
25	AVDDA7	AVDDA7	AVDDA7
24	AVDDA6	AVDDA6	AVDDA6
23	AVDDA5	AVDDA5	AVDDA5
22	AVDDA4	AVDDA4	AVDDA4
21	AVDDA3	AVDDA3	AVDDA3
20	AVDDA2	AVDDA2	AVDDA2
19	AVDDA1	AVDDA1	AVDDA1
18	AVDD0E	AVDD0E	AVDD0E
17	AVDD0D	AVDD0D	AVDD0D
16	AVDD0C	AVDD0C	AVDD0C
15	AVDD0B	AVDD0B	AVDD0B
14	AVDD0A	AVDD0A	AVDD0A
13	AVDD00	AVDD00	AVDD00
12	AVDD01	AVDD01	AVDD01
11	AVDD02	AVDD02	AVDD02
10	AVDD03	AVDD03	AVDD03
9	AVDD04	AVDD04	AVDD04
8	AVDD05	AVDD05	AVDD05
7	AVDD06	AVDD06	AVDD06
6	AVDD07	AVDD07	AVDD07
5	AVDD08	AVDD08	AVDD08
4	AVDD09	AVDD09	AVDD09
3	AVDD10	AVDD10	AVDD10
2	AVDD11	AVDD11	AVDD11
1	AVDD12	AVDD12	AVDD12

VDD	: 1.2V Power supply
VDD3	: 3.3V Power supply
GND	: Ground

● Pin Function

No.	BALL Address	Pin Name	I/O	Function	No.	BALL Address	Pin Name	I/O	Function
1	VDD3	VDD3	–	3.3V I/O power supply	56	V26	VRT10	–	TOP side reference voltage
2	GND	GND	–	Ground	57	V28	VRM10	–	Common voltage
3	VDD	VDD	–	1.2V LOGIC power supply	58	U25	VRB10	–	Bottom side reference voltage
4	AH28	VDD	–	1.2V LOGIC power supply	59	U26	VRBD10	I/O	Analog test bus (for debugging)
5	AF26	ACCCTL	O		60	U27	DVSSAD10	–	ADC part digital ground
6	AF27	PEDCTL	O	VIDEO-Analog, Output buffer	61	T24	DVDDAD10	–	ADC part digital power supply (3.3V)
7	AG28	HKEYPLS	O	VIDEO-Analog, Output buffer	62	GND	GND	–	Ground
8	GND	GND	–	Ground	63	VDD	VDD	–	1.2V LOGIC power supply
9	AE26	WM1DTI[7]	I/O	WM/VWM, Bidirectional buffer	64	U28	AVDDAD8	–	
10	AD25	WM1DTI[6]	I/O	WM/VWM, Bidirectional buffer	65	T25	AVSSAD8	–	
11	AC24	WM1DTI[5]	I/O	WM/VWM, Bidirectional buffer	66	T26	CIN	I	VIDEO-Analog
12	AE27	WM1DTI[4]	I/O	WM/VWM, Bidirectional buffer	67	T27	VRT8	–	VIDEO-Analog
13	AF28	WM1DTI[3]	I/O	WM/VWM, Bidirectional buffer	68	T28	VRB8	–	VIDEO-Analog
14	AD26	WM1DTI[2]	I/O	WM/VWM, Bidirectional buffer	69	R25	AVDDAD8	–	
15	AE28	WM1DTI[1]	I/O	WM/VWM, Bidirectional buffer	70	R24	AVSSAD8	–	
16	AC25	WM1DTI[0]	I/O	WM/VWM, Bidirectional buffer	71	R26	CRIN	I	VIDEO-Analog
17	AB24	WM1DTO[7]	I/O	WM/VWM, Bidirectional buffer	72	R28	BG8	–	VIDEO-Analog
18	VDD	VDD	–	1.2V LOGIC power supply	73	P28	AVDDAD8	–	
19	GND	GND	–	Ground	74	P27	AVSSAD8	–	
20	AD27	WM1DTO[6]	I/O	WM/VWM, Bidirectional buffer	75	R27	GIN	I	VIDEO-Analog
21	AC26	WM1DTO[5]	I/O	WM/VWM, Bidirectional buffer	76	P26	DVSSAD8	–	
22	AD28	WM1DTO[4]	I/O	WM/VWM, Bidirectional buffer	77	P25	DVDDAD8	–	
23	AA24	WM1DTO[3]	I/O	WM/VWM, Bidirectional buffer	78	GND	GND	–	Ground
24	AB25	WM1DTO[2]	I/O	WM/VWM, Bidirectional buffer	79	P24	EDATA[15]	I/O	SDRAM ENC, Bidirectional buffer
25	VDD	VDD	–	1.2V LOGIC power supply	80	VDD3	VDD3	–	3.3V I/O power supply
26	AC27	WM1DTO[1]	I/O	WM/VWM, Bidirectional buffer	81	N28	EDATA[0]	I/O	SDRAM ENC, Bidirectional buffer
27	GND	GND	–	Ground	82	N27	EDATA[1]	I/O	SDRAM ENC, Bidirectional buffer
28	AC28	WMCLKO	O	WM/VWM, Output buffer	83	N26	EDATA[2]	I/O	SDRAM ENC, Bidirectional buffer
29	VDD3	VDD3	–	3.3V I/O power supply	84	VDD	VDD	–	1.2V LOGIC power supply
30	AB26	WM1DTO[0]	I/O	WM/VWM, Bidirectional buffer	85	N25	EDATA[13]	I/O	SDRAM ENC, Bidirectional buffer
31	AA25	WM2DTO[7]	O	WM/VWM, Output buffer	86	GND	GND	–	Ground
32	AB27	WM2DTO[6]	O	WM/VWM, Output buffer	87	M28	EDATA[3]	I/O	SDRAM ENC, Bidirectional buffer
33	AB28	VDD	–	1.2V LOGIC power supply	88	GND	GND	–	Ground
34	Y24	WM2DTO[5]	O	WM/VWM, Output buffer	89	N24	EDATA[14]	I/O	SDRAM ENC, Bidirectional buffer
35	AA27	WM2DTO[4]	O	WM/VWM, Output buffer	90	M27	EDATA[4]	I/O	SDRAM ENC, Bidirectional buffer
36	AA26	WM2DTO[3]	O	WM/VWM, Output buffer	91	M26	EDATA[5]	I/O	SDRAM ENC, Bidirectional buffer
37	AA28	WM2DTO[2]	O	WM/VWM, Output buffer	92	VDD3	VDD3	–	3.3V I/O power supply
38	W24	WM2DTO[1]	O	WM/VWM, Output buffer	93	M25	EDATA[11]	I/O	SDRAM ENC, Bidirectional buffer
39	GND	GND	–	Ground	94	L28	EDATA[6]	I/O	SDRAM ENC, Bidirectional buffer
40	Y25	WM2DTO[0]	O	WM/VWM, Output buffer	95	L27	EDATA[7]	I/O	SDRAM ENC, Bidirectional buffer
41	GND	GND	–	Ground	96	VDD	VDD	–	1.2V LOGIC power supply
42	Y26	SYNC	I/O	TS OUT, Bidirectional buffer	97	M24	EDATA[12]	I/O	SDRAM ENC, Bidirectional buffer
43	Y27	STREAM	I/O	TS OUT, Bidirectional buffer	98	GND	GND	–	Ground
44	Y28	PACKETEN	I/O	TS OUT, Bidirectional buffer	99	L26	EDATA[8]	I/O	SDRAM ENC, Bidirectional buffer
45	VDD3	VDD3	–	3.3V IO power supply	100	GND	GND	–	Ground
46	W25	TSRW	O	TS OUT, Output buffer	101	L25	EDATA[9]	I/O	SDRAM ENC, Bidirectional buffer
47	GND	GND	–	Ground	102	K28	EDQM	O	SDRAM ENC, Output buffer
48	V24	TSCLK	O	TS OUT, Output buffer	103	K27	EWE	O	SDRAM ENC, Output buffer
49	VDD3	VDD3	–	3.3V I/O power supply	104	VDD3	VDD3	–	3.3V I/O power supply
50	W26	NBC10	–	Bias current adjustment terminal	105	K26	ECAS	O	SDRAM ENC, Output buffer
51	W27	VBGR10	I/O	Analog test bus (for debugging)	106	L24	EDATA[10]	I/O	SDRAM ENC, Bidirectional buffer
52	W28	AVDDAD10	–	ADC part analog power supply (3.3V)	107	K25	ECLKEN	O	Output buffer, 4/6mA
53	V25	AVSSAD10	–	ADC part analog Ground	108	VDD	VDD	–	1.2V LOGIC power supply
54	V27	CVBSIN	I	Analog Input	109	J28	ERAS	O	SDRAM ENC, Output buffer
55	U24	VRTD10	–	Input common bias	110	GND	GND	–	Ground

A

B

C

D

E

F

No.	BALL Address	Pin Name	I/O	Function	No.	BALL Address	Pin Name	I/O	Function
111	J27	ECS	O	SDRAM ENC, Output buffer	166	VDD3	VDD3	–	3.3V I/O power supply
112	GND	GND	–	Ground	167	C25	AT1DATA[11]	I/O	ATAPI-DVD, Bidirectional buffer
113	J26	EADRS[11]	O	SDRAM ENC, Output buffer	168	D24	AT1DATA[10]	I/O	ATAPI-DVD, Bidirectional buffer
114	J25	EADRS[8]	O	SDRAM ENC, Output buffer	169	E23	AT1DATA[9]	I/O	ATAPI-DVD, Bidirectional buffer
115	GND	GND	–	Ground	170	GND	GND	–	Ground
116	K24	ECLKO	O	SDRAM ENC, Output buffer	171	A26	AT1DATA[8]	I/O	ATAPI-DVD, Bidirectional buffer
117	VDD3	VDD3	–	3.3V I/O power supply	172	A25	AT1DATA[7]	I/O	ATAPI-DVD, Bidirectional buffer
118	H28	EBS[0]	O	SDRAM ENC, Output buffer	173	B25	AT1DATA[6]	I/O	ATAPI-DVD, Bidirectional buffer
119	H27	EBS[1]	O	SDRAM ENC, Output buffer	174	GND	GND	–	Ground
120	H26	EADRS[10]	O	SDRAM ENC, Output buffer	175	C24	AT1DATA[5]	I/O	ATAPI-DVD, Bidirectional buffer
121	VDD	VDD	–	1.2V LOGIC power supply	176	VDD3	VDD3	–	3.3V I/O power supply
122	G28	EADRS[0]	O	SDRAM ENC, Output buffer	177	E22	AT1DATA[4]	I/O	ATAPI-DVD, Bidirectional buffer
123	GND	GND	–	Ground	178	VDD	VDD	–	1.2V LOGIC power supply
124	J24	EADRS[9]	O	SDRAM ENC, Output buffer	179	D23	AT1DATA[3]	I/O	ATAPI-DVD, Bidirectional buffer
125	GND	GND	–	Ground	180	A24	AT1DATA[2]	I/O	ATAPI-DVD, Bidirectional buffer
126	G27	EADRS[1]	O	SDRAM ENC, Output buffer	181	B24	AT1DATA[1]	I/O	ATAPI-DVD, Bidirectional buffer
127	H25	EADRS[6]	O	SDRAM ENC, Output buffer	182	GND	GND	–	Ground
128	G26	EADRS[2]	O	SDRAM ENC, Output buffer	183	C23	AT1DATA[0]	I/O	ATAPI-DVD, Bidirectional buffer
129	VDD3	VDD3	–	3.3V I/O power supply	184	D22	AT1RESET	O	Output buffer, 8mA
130	F27	EDATA[17]	I/O	SDRAM ENC, Bidirectional buffer	185	E21	AT1DMARQ	I	ATAPI-DVD, Input buffer
131	F28	EDATA[16]	I/O	SDRAM ENC, Bidirectional buffer	186	GND	GND	–	Ground
132	H24	EADRS[7]	O	SDRAM ENC, Output buffer	187	B23	AT1DMACK	O	ATAPI-DVD, Output buffer
133	VDD	VDD	–	1.2V LOGIC power supply	188	VDD3	VDD3	–	3.3V I/O power supply
134	G25	EADRS[4]	O	SDRAM ENC, Output buffer	189	A23	AT1DIOW	O	ATAPI-DVD, Output buffer
135	GND	GND	–	Ground	190	VDD	VDD	–	1.2V LOGIC power supply
136	F26	EDATA[30]	I/O	SDRAM ENC, Bidirectional buffer	191	C22	AT1DIOR	O	ATAPI-DVD, Output buffer
137	GND	GND	–	Ground	192	D21	AT1IORDY	I	ATAPI-DVD, Input buffer
138	E27	EDATA[19]	I/O	SDRAM ENC, Bidirectional buffer	193	B22	AT1INTRQ	I	ATAPI-DVD, Input buffer
139	E28	EDATA[18]	I/O	SDRAM ENC, Bidirectional buffer	194	GND	GND	–	Ground
140	F25	EDATA[31]	I/O	SDRAM ENC, Bidirectional buffer	195	E20	AT1ADR[2]	O	ATAPI-DVD, Output buffer
141	VDD3	VDD3	–	3.3V I/O power supply	196	A22	AT1ADR[1]	O	ATAPI-DVD, Output buffer
142	E26	EDATA[29]	I/O	SDRAM ENC, Bidirectional buffer	197	C21	AT1ADR[0]	O	ATAPI-DVD, Output buffer
143	G24	EADRS[5]	O	SDRAM ENC, Output buffer	198	GND	GND	–	Ground
144	D28	EDATA[20]	I/O	SDRAM ENC, Bidirectional buffer	199	B21	AT1CS[1]	O	ATAPI-DVD, Output buffer
145	VDD	VDD	–	1.2V LOGIC power supply	200	VDD3	VDD3	–	3.3V I/O power supply
146	D27	EDATA[21]	I/O	SDRAM ENC, Bidirectional buffer	201	A21	AT1CS[0]	O	ATAPI-DVD, Output buffer
147	GND	GND	–	Ground	202	VDD	VDD	–	1.2V LOGIC power supply
148	C28	EDATA[22]	I/O	SDRAM ENC, Bidirectional buffer	203	E19	AT2DATA[15]	I/O	ATAPI-HDD, Bidirectional buffer
149	GND	GND	–	Ground	204	D20	AT2DATA[14]	I/O	ATAPI-HDD, Bidirectional buffer
150	F24	EADRS[3]	O	SDRAM ENC, Output buffer	205	C20	AT2DATA[13]	I/O	ATAPI-HDD, Bidirectional buffer
151	E25	EDATA[28]	I/O	SDRAM ENC, Bidirectional buffer	206	GND	GND	–	Ground
152	D26	EDATA[26]	I/O	SDRAM ENC, Bidirectional buffer	207	B20	AT2DATA[12]	I/O	ATAPI-HDD, Bidirectional buffer
153	VDD3	VDD3	–	3.3V I/O power supply	208	A20	AT2DATA[11]	I/O	ATAPI-HDD, Bidirectional buffer
154	B28	EDATA[23]	I/O	SDRAM ENC, Bidirectional buffer	209	D19	AT2DATA[10]	I/O	ATAPI-HDD, Bidirectional buffer
155	C27	EDATA[25]	I/O	SDRAM ENC, Bidirectional buffer	210	GND	GND	–	Ground
156	B27	EDATA[24]	I/O	SDRAM ENC, Bidirectional buffer	211	E18	AT2DATA[9]	I/O	ATAPI-HDD, idirectional buffer
157	VDD	VDD	–	1.2V LOGIC power supply	212	VDD3	VDD3	–	3.3V I/O power supply
158	D25	EDATA[27]	I/O	SDRAM ENC, Bidirectional buffer	213	C19	AT2DATA[8]	I/O	ATAPI-HDD, Bidirectional buffer
159	GND	GND	–	Ground	214	VDD	VDD	–	1.2V LOGIC power supply
160	C26	AT1DATA[15]	I/O	ATAPI-DVD, Bidirectional buffer	215	B19	AT2DATA[7]	I/O	ATAPI-HDD, Bidirectional buffer
161	E24	AT1DATA[14]	I/O	ATAPI-DVD, Bidirectional buffer	216	A19	AT2DATA[6]	I/O	ATAPI-HDD, Bidirectional buffer
162	GND	GND	–	Ground	217	D18	AT2DATA[5]	I/O	ATAPI-HDD, Bidirectional buffer
163	A28	VDD	–	1.2V LOGIC power supply	218	GND	GND	–	Ground
164	B26	AT1DATA[13]	I/O	ATAPI-DVD, Bidirectional buffer	219	C18	AT2DATA[4]	I/O	ATAPI-HDD, Bidirectional buffer
165	A27	AT1DATA[12]	I/O	ATAPI-DVD, Bidirectional buffer	220	E17	AT2DATA[3]	I/O	ATAPI-HDD, Bidirectional buffer

No.	BALL Address	Pin Name	I/O	Function	No.	BALL Address	Pin Name	I/O	Function
221	B18	AT2DATA[2]	I/O	ATAPI-HDD, Bidirectional buffer	276	VDD3	VDD3	–	3.3V I/O power supply
222	GND	GND	–	Ground	277	C11	AMCLK2	I	CLOCK, Input buffer
223	A18	AT2DATA[1]	I/O	ATAPI-HDD, Bidirectional buffer	278	GND	GND	–	Ground
224	VDD3	VDD3	–	3.3V I/O power supply	279	D11	ARDATA[1]	I/O	SDRAM-ATAPI, Bidirectional buffer
225	D17	AT2DATA[0]	I/O	ATAPI-HDD, Bidirectional buffer	280	VDD3	VDD3	–	3.3V I/O power supply
226	VDD	VDD	–	1.2V LOGIC power supply	281	A10	ARDATA[14]	I/O	SDRAM-ATAPI, Bidirectional buffer
227	C17	AT2RESET	I/O	ATAPI-HDD, Bidirectional buffer	282	VDD	VDD	–	1.2V LOGIC power supply
228	B17	AT2DMARQ	I	ATAPI-HDD, Input buffer	283	B10	ARDATA[15]	I/O	SDRAM-ATAPI, Bidirectional buffer
229	E16	AT2DMACK	O	ATAPI-HDD, Output buffer	284	E11	ARDATA[0]	I/O	SDRAM-ATAPI, Bidirectional buffer
230	GND	GND	–	Ground	285	C10	ARDATA[4]	I/O	SDRAM-ATAPI, Bidirectional buffer
231	A17	AT2DIOW	O	ATAPI-HDD, Output buffer	286	GND	GND	–	Ground
232	D16	AT2DIOR	O	ATAPI-HDD, Output buffer	287	D10	ARDATA[3]	I/O	SDRAM-ATAPI, Bidirectional buffer
233	C16	AT2IORDY	I	ATAPI-HDD, Input buffer	288	A9	ARDATA[11]	I/O	SDRAM-ATAPI, Bidirectional buffer
234	GND	GND	–	Ground	289	B9	ARDATA[12]	I/O	SDRAM-ATAPI, Bidirectional buffer
235	B16	AT2INTRQ	I	ATAPI-HDD, Input buffer	290	GND	GND	–	Ground
236	VDD3	VDD3	–	3.3V I/O power supply	291	C9	ARDATA[13]	I/O	SDRAM-ATAPI, Bidirectional buffer
237	A16	AT2ADR[2]	I/O	ATAPI-HDD, Bidirectional buffer	292	E10	ARDATA[2]	I/O	SDRAM-ATAPI, Bidirectional buffer
238	VDD	VDD	–	1.2V LOGIC power supply	293	D9	ARDATA[6]	I/O	SDRAM-ATAPI, Bidirectional buffer
239	E15	AT2ADR[1]	I/O	ATAPI-HDD, Bidirectional buffer	294	VDD3	VDD3	–	3.3V I/O power supply
240	GND	GND	–	Ground	295	A8	ARDATA[10]	I/O	SDRAM-ATAPI, Bidirectional buffer
241	D15	AT2ADR[0]	I/O	ATAPI-HDD, Bidirectional buffer	296	B8	ARDATA[9]	I/O	SDRAM-ATAPI, Bidirectional buffer
242	VDD	VDD	–	1.2V LOGIC power supply	297	C8	ARWE	O	SDRAM-ATAPI, Output buffer
243	C15	AT2CS[1]	O	ATAPI-HDD, Output buffer	298	VDD	VDD	–	1.2V LOGIC power supply
244	GND	GND	–	Ground	299	A7	ARDATA[8]	I/O	SDRAM-ATAPI, Bidirectional buffer
245	B15	AT2CS[0]	O	ATAPI-HDD, Output buffer	300	E9	ARDATA[5]	I/O	SDRAM-ATAPI, Bidirectional buffer
246	VDD	VDD	–	1.2V LOGIC power supply	301	D8	ARDQM[0]	O	SDRAM-ATAPI, Output buffer
247	A15	AT2MODE	I	ATAPI-HDD, Input buffer	302	GND	GND	–	Ground
248	GND	GND	–	Ground	303	B7	ARDQM[1]	O	SDRAM-ATAPI, Output buffer
249	GND	GND	–	Ground	304	C7	ARCS[0]	O	SDRAM-ATAPI, Output buffer
250	A14	RESET	I	Input buffer (5V tolerant)	305	VDD3	VDD3	–	3.3V I/O power supply
251	VDD3	VDD3	–	3.3V I/O power supply	306	A6	ARCKO	O	SDRAM-ATAPI, Output buffer
252	B14	VDD	–	1.2V LOGIC power supply	307	GND	GND	–	Ground
253	C14	DBI	I	TEST, Input buffer	308	B6	ARADRS[12]	O	SDRAM-ATAPI, Output buffer
254	GND	GND	–	Ground	309	E8	ARDATA[7]	I/O	SDRAM-ATAPI, Bidirectional buffer
255	D14	TRACE	I	TEST, Input buffer	310	D7	ARRAS	O	SDRAM-ATAPI, Output buffer
256	E14	VDD	–	1.2V LOGIC power supply	311	VDD3	VDD3	–	3.3V I/O power supply
257	A13	PCO	O	CLOCK, 3 state output buffer	312	A5	ARADRS[11]	O	SDRAM-ATAPI, Output buffer
258	GND	GND	–	Ground	313	C6	ARADRS[13]	O	SDRAM-ATAPI, Output buffer
259	B13	PLL3AVSS	–		314	B5	ARADRS[9]	O	SDRAM-ATAPI, Output buffer
260	C13	PLL3AVDD	–		315	VDD	VDD	–	1.2V LOGIC power supply
261	D13	VMCLK	I	CLOCK, Input buffer	316	E7	ARCAS	O	SDRAM-ATAPI, Output buffer
262	E13	PLL1AVDD	–		317	D6	ARADRS[14]	O	SDRAM-ATAPI, Output buffer
263	A12	PLL1AVSS	–		318	C5	ARADRS[1]	O	SDRAM-ATAPI, Output buffer
264	VDD3	VDD3	–	3.3V I/O power supply	319	GND	GND	–	Ground
265	B12	ADCCKO	O	CLOCK, Output buffer	320	B4	ARADRS[3]	O	SDRAM-ATAPI, Output buffer
266	GND	GND	–	Ground	321	A4	ARADRS[8]	O	SDRAM-ATAPI, Output buffer
267	C12	VDD	–	1.2V LOGIC power supply	322	A3	ARADRS[7]	O	SDRAM-ATAPI, Output buffer
268	VDD3	VDD3	–	3.3V I/O power supply	323	GND	GND	–	Ground
269	D12	DVAMCKO	O	CLOCK, Output buffer	324	E6	ARCS[1]	O	SDRAM-ATAPI, Output buffer
270	GND	GND	–	Ground	325	D5	ARADRS[0]	O	SDRAM-ATAPI, Output buffer
271	A11	DACCKO	O	CLOCK, Output buffer	326	C4	ARADRS[2]	O	SDRAM-ATAPI, Output buffer
272	VDD3	VDD3	–	3.3V I/O power supply	327	VDD3	VDD3	–	3.3V I/O power supply
273	E12	DVAMCKI	I	AUDIO CLOCK, Input buffer	328	A2	ARADRS[5]	O	SDRAM-ATAPI, Output buffer
274	GND	GND	–	Ground	329	B3	ARADRS[6]	O	SDRAM-ATAPI, Output buffer
275	B11	AMCLK1	I	CLOCK, Input buffer	330	B2	ARADRS[4]	O	SDRAM-ATAPI, Output buffer

A

No.	BALL Address	Pin Name	I/O	Function	No.	BALL Address	Pin Name	I/O	Function
331	GND	GND	–	Ground	386	VDD	VDD	–	1.2V LOGIC power supply
332	E5	ARADRS[10]	O	SDRAM-ATAPI, Output buffer	387	GND	GND	–	Ground
333	D4	SRCBCKI	I	AUDIO, Input buffer	388	L3	SPIDATAI	I/O	HOST, Bidirectional buffer
334	VDD3	VDD3	–	3.3V I/O power supply	389	VDD	VDD	–	1.2V LOGIC power supply
335	C3	SRCLRCKI	I	AUDIO, Input buffer	390	M5	SPIDATAO	I/O	HOST, Bidirectional buffer
336	B1	SRCDATAI	I	AUDIO, Input buffer	391	GND	GND	–	Ground
337	A1	VDD	–	1.2V LOGIC power supply	392	L2	SPICLK	I/O	HOST, Bidirectional buffer
338	GND	GND	–	Ground	393	GND	GND	–	Ground
339	C2	SRCBCKO	O	AUDIO, Output buffer	394	L1	DDATA[0]	I/O	SDRAM-DEC, Bidirectional buffer
340	VDD	VDD	–	1.2V LOGIC power supply	395	VDD3	VDD3	–	3.3V I/O power supply
341	D3	SRCLRCKO	O	AUDIO, Output buffer	396	M4	DDATA[14]	I/O	SDRAM-DEC, Bidirectional buffer
342	E4	SRCDATAO	O	AUDIO, Output buffer	397	M3	DDATA[15]	I/O	SDRAM-DEC, Bidirectional buffer
343	F5	SPDIFI	I	AUDIO, Input buffer	398	M2	DDATA[2]	I/O	SDRAM-DEC, Bidirectional buffer
344	D2	SPDIFO	O	AUDIO, Output buffer	399	VDD	VDD	–	1.2V LOGIC power supply
345	C1	DVLRCK	I/O	AUDIO, Bidirectional buffer	400	N5	DDATA[11]	I/O	SDRAM-DEC, Bidirectional buffer
346	E3	DVBCK	I/O	AUDIO, Bidirectional buffer	401	GND	GND	–	Ground
347	D1	DVADATA	I/O	AUDIO, Bidirectional buffer	402	M1	DDATA[1]	I/O	SDRAM-DEC, Bidirectional buffer
348	F4	ACMOD[1]	I	AUDIO, Input buffer	403	GND	GND	–	Ground
349	G5	ACMOD[0]	I	AUDIO, Input buffer	404	N4	DDATA[12]	I/O	SDRAM-DEC, Bidirectional buffer
350	E1	LRCKI	I	AUDIO, Input buffer	405	N3	DDATA[13]	I/O	SDRAM-DEC, Bidirectional buffer
351	E2	BCKI	I	AUDIO, Input buffer	406	N2	DDATA[3]	I/O	SDRAM-DEC, Bidirectional buffer
352	GND	GND	–	Ground	407	VDD3	VDD3	–	3.3V I/O power supply
353	F3	ADATAI	I	AUDIO, Input buffer	408	N1	DDATA[4]	I/O	SDRAM-DEC, Bidirectional buffer
354	GND	GND	–	Ground	409	P5	DDATA[8]	I/O	SDRAM-DEC, Bidirectional buffer
355	G4	LRCKO	O	AUDIO, Output buffer	410	P4	DDATA[9]	I/O	SDRAM-DEC, Bidirectional buffer
356	VDD	VDD	–	1.2V LOGIC power supply	411	VDD	VDD	–	1.2V LOGIC power supply
357	H5	BCKO	O	AUDIO, Output buffer	412	P3	DDATA[10]	I/O	SDRAM-DEC, Bidirectional buffer
358	F1	ADATAO	O	DVD-AUDIO, Output buffer	413	GND	GND	–	Ground
359	F2	DVDADT[7]	O	DVD-AUDIO, Output buffer	414	P2	DDATA[6]	I/O	SDRAM-DEC, Bidirectional buffer
360	G2	DVDADT[6]	O	DVD-AUDIO, Output buffer	415	GND	GND	–	Ground
361	G3	DVDADT[5]	O	DVD-AUDIO, Output buffer	416	P1	DDATA[5]	I/O	SDRAM-DEC, Bidirectional buffer
362	J5	DVDADT[4]	O	DVD-AUDIO, Output buffer	417	R1	DDATA[7]	I/O	SDRAM-DEC, Bidirectional buffer
363	H4	DVDADT[3]	O	DVD-AUDIO, Output buffer	418	R2	DDQM[0]	O	SDRAM-DEC, Output buffer
364	G1	DVDADT[2]	O	DVD-AUDIO, Output buffer	419	VDD3	VDD3	–	3.3V I/O power supply
365	H3	DVDADT[1]	O	DVD-AUDIO, Output buffer	420	R3	DWE	O	SDRAM-DEC, Output buffer
366	H2	DVDADT[0]	O	DVD-AUDIO, Output buffer	421	VDD	VDD	–	1.2V LOGIC power supply
367	H1	DVDAADR[1]	O	DVD-AUDIO, Output buffer	422	R4	DDQM[1]	O	SDRAM-DEC, Output buffer
368	K5	DVDAADR[0]	O	DVD-AUDIO, Output buffer	423	GND	GND	–	Ground
369	J4	DVDAREQ	I/O	DVD-AUDIO, Bidirectional buffer	424	R5	DCLKO	O	SDRAM-DEC, Output buffer
370	GND	GND	–	Ground	425	VDD3	VDD3	–	3.3V I/O power supply
371	J3	DVDAACK	O	DVD-AUDIO, Output buffer	426	VDD	VDD	–	1.2V LOGIC power supply
372	VDD	VDD	–	1.2V LOGIC power supply	427	T1	DCAS	O	SDRAM-DEC, Output buffer
373	J2	SCICS[1]	I/O	HOST, Bidirectional buffer	428	GND	GND	–	Ground
374	VDD3	VDD3	–	3.3V I/O power supply	429	T2	DRAS	–	SDRAM-DEC, Output buffer
375	J1	SCICS[0]	I/O	HOST, Bidirectional buffer	430	GND	GND	–	Ground
376	VDD	VDD	–	1.2V LOGIC power supply	431	T3	DCS	O	SDRAM-DEC, Output buffer
377	K4	SCIDATA[1]	I/O	HOST, Bidirectional buffer	432	T4	DADRS[11]	O	SDRAM-DEC, Output buffer
378	GND	GND	–	Ground	433	U1	DBS[0]	O	SDRAM-DEC, Output buffer
379	L5	SCIDATA[0]	I/O	HOST, Bidirectional buffer	434	VDD3	VDD3	–	3.3V I/O power supply
380	K3	VDD	–	1.2V LOGIC power supply	435	T5	DADRS[9]	O	SDRAM-DEC, Output buffer
381	K2	SCICLK[1]	I/O	HOST, Bidirectional buffer	436	U2	DBS[1]	O	SDRAM-DEC, Output buffer
382	GND	GND	–	Ground	437	U3	DADRS[10]	O	SDRAM-DEC, Output buffer
383	K1	SCICLK[0]	I/O	HOST, Bidirectional buffer	438	VDD	VDD	–	1.2V LOGIC power supply
384	GND	GND	–	Ground	439	U4	DADRS[7]	O	SDRAM-DEC, Output buffer
385	L4	SPICS	I/O	HOST, Bidirectional buffer	440	GND	GND	–	Ground

F

No.	BALL Address	Pin Name	I/O	Function	No.	BALL Address	Pin Name	I/O	Function
441	V1	DADRS[0]	O	SDRAM-DEC, Output buffer	496	VDD	VDD	–	1.2V LOGIC power supply
442	GND	GND	–	Ground	497	AD4	HDACK[0]	O	Output buffer, 4mA
443	V2	DADRS[1]	O	SDRAM-DEC, Output buffer	498	AF1	HDREQ[1]	I	HOST, Input buffer
444	VDD	VDD	–	1.2V LOGIC power supply	499	AE3	HDREQ[0]	I	HOST, Input buffer
445	U5	DADRS[8]	O	SDRAM-DEC, Output buffer	500	AC5	HWAIT	I	HOST, Input buffer
446	GND	GND	–	Ground	501	AF2	HOE	O	HOST, Output buffer
447	V3	DADRS[5]	O	SDRAM-DEC, Output buffer	502	VDD3	VDD3	–	3.3V I/O power supply
448	VDD3	VDD3	–	3.3V I/O power supply	503	GND	GND	–	Ground
449	V4	DADRS[6]	O	SDRAM-DEC, Output buffer	504	AE4	VDD	–	1.2V LOGIC power supply
450	W1	DADRS[3]	O	SDRAM-DEC, Output buffer	505	AD5	HCS[5]	O	HOST, Output buffer
451	W2	DADRS[2]	O	SDRAM-DEC, Output buffer	506	AG2	HCS[4]	O	HOST, Output buffer
452	VDD	VDD	–	1.2V LOGIC power supply	507	AF3	HCS[3]	O	HOST, Output buffer
453	W3	DADRS[4]	O	SDRAM-DEC, Output buffer	508	AG3	HCS[2]	O	HOST, Output buffer
454	GND	GND	–	Ground	509	AH2	HCS[1]	O	HOST, Output buffer
455	GND	GND	–	Ground	510	GND	GND	–	Ground
456	GND	GND	–	Ground	511	AF4	HCS[0]	O	HOST, Output buffer
457	V5	INT[7]	I/O	HOST, Bidirectional buffer	512	VDD	VDD	–	1.2V LOGIC power supply
458	VDD	VDD	–	1.2V LOGIC power supply	513	AD6	HADRS[10]	I/O	HOST, Bidirectional buffer
459	W4	INT[6]	I/O	HOST, Bidirectional buffer	514	GND	GND	–	Ground
460	Y1	INT[5]	I/O	HOST, Bidirectional buffer	515	AE5	HADRS[11]	I/O	HOST, Bidirectional buffer
461	Y2	INT[4]	I/O	HOST, Bidirectional buffer	516	AG4	HADRS[13]	I/O	HOST, Bidirectional buffer
462	VDD3	VDD3	–	3.3V I/O power supply	517	AH3	HADRS[30]	I/O	HOST, Bidirectional buffer
463	Y3	INT[3]	I/O	HOST, Bidirectional buffer	518	VDD3	VDD3	–	3.3V I/O power supply
464	GND	GND	–	Ground	519	AF5	HADRS[12]	I/O	HOST, Bidirectional buffer
465	Y4	INT[2]	I/O	HOST, Bidirectional buffer	520	GND	GND	–	Ground
466	VDD	VDD	–	1.2V LOGIC power supply	521	AH4	HADRS[14]	I/O	HOST, Bidirectional buffer
467	W5	INT[1]	I/O	HOST, Bidirectional buffer	522	AE6	HDATA[1]	I/O	HOST, Bidirectional buffer
468	AA1	INT[0]	I/O	HOST, Bidirectional buffer	523	AD7	HADRS[9]	I/O	HOST, Bidirectional buffer
469	AA2	SCLK[1]	I/O	HOST, Bidirectional buffer	524	VDD3	VDD3	–	3.3V I/O power supply
470	AA3	SCLK[0]	I/O	HOST, Bidirectional buffer	525	AG5	HDATA[15]	I/O	HOST, Bidirectional buffer
471	AB1	CTS[3]	I/O	HOST, Bidirectional buffer	526	GND	GND	–	Ground
472	GND	GND	–	Ground	527	AH5	HDATA[14]	I/O	HOST, Bidirectional buffer
473	Y5	CTS[2]	I/O	HOST, Bidirectional buffer	528	GND	GND	–	Ground
474	GND	GND	–	Ground	529	AF6	HDATA[0]	I/O	HOST, Bidirectional buffer
475	AA4	CTS[1]	I/O	HOST, Bidirectional buffer	530	AD8	HDATA[6]	I/O	HOST, Bidirectional buffer
476	VDD	VDD	–	1.2V LOGIC power supply	531	AE7	HDATA[2]	I/O	HOST, Bidirectional buffer
477	AB3	CTS[0]	I/O	HOST, Bidirectional buffer	532	VDD3	VDD3	–	3.3V I/O power supply
478	AB2	RTS[3]	I/O	HOST, Bidirectional buffer	533	AG6	HDATA[12]	I/O	HOST, Bidirectional buffer
479	AC2	RTS[2]	I/O	HOST, Bidirectional buffer	534	VDD	VDD	–	1.2V LOGIC power supply
480	AC1	RTS[1]	I/O	HOST, Bidirectional buffer	535	AH6	HDATA[13]	I/O	HOST, Bidirectional buffer
481	AA5	RTS[0]	I/O	HOST, Bidirectional buffer	536	AG7	HDATA[11]	I/O	HOST, Bidirectional buffer
482	VDD3	VDD3	–	3.3V I/O power supply	537	AF7	HDATA[3]	I/O	HOST, Bidirectional buffer
483	AB4	RX[3]	I/O	HOST, Bidirectional buffer	538	GND	GND	–	Ground
484	GND	GND	–	Ground	539	AE8	HDATA[5]	I/O	HOST, Bidirectional buffer
485	AC3	RX[2]	I/O	HOST, Bidirectional buffer	540	GND	GND	–	Ground
486	VDD	VDD	–	1.2V LOGIC power supply	541	AD9	HDATA[7]	I/O	HOST, Bidirectional buffer
487	AD2	RX[1]	I/O	HOST, Bidirectional buffer	542	AF8	HDATA[4]	I/O	HOST, Bidirectional buffer
488	AD1	RX[0]	I/O	HOST, Bidirectional buffer	543	AH7	HDATA[10]	I/O	HOST, Bidirectional buffer
489	AB5	TX[3]	I/O	HOST, Bidirectional buffer	544	VDD3	VDD3	–	3.3V I/O power supply
490	AC4	TX[2]	I/O	HOST, Bidirectional buffer	545	AG8	HDATA[8]	I/O	HOST, Bidirectional buffer
491	AD3	TX[1]	I/O	HOST, Bidirectional buffer	546	VDD	VDD	–	1.2V LOGIC power supply
492	GND	GND	–	Ground	547	AH8	HDATA[9]	I/O	HOST, Bidirectional buffer
493	AE1	TX[0]	I/O	HOST, Bidirectional buffer	548	AE9	HDWE	O	HOST, Output buffer
494	GND	GND	–	Ground	549	AF9	DQMWS[0]	O	HOST, Output buffer
495	AE2	HDACK[1]	O	HOST, Output buffer	550	GND	GND	–	Ground

A

B

C

D

E

F

No.	BALL Address	Pin Name	I/O	Function	No.	BALL Address	Pin Name	I/O	Function
551	AD10	HDCS[1]	O	HOST, Output buffer	606	AG16	TMS	I	TEST, nput buffer
552	GND	GND	–	Ground	607	GND	GND	–	Ground
553	AG9	DQMWS[1]	O	HOST, Output buffer	608	AF16	TDO	O	TEST, Output buffer
554	VDD3	VDD3	–	3.3V I/O power supply	609	VDD	VDD	–	1.2V LOGIC power supply
555	AH9	HCLKO	O	HOST, Output buffer	610	AE16	TDI	I	TEST, Input buffer
556	GND	GND	–	Ground	611	VDD3	VDD3	–	3.3V I/O power supply
557	AE10	HDCS[0]	O	HOST, Output buffer	612	AH17	TRST	I	TEST, Input buffer
558	VDD3	VDD3	–	3.3V I/O power supply	613	GND	GND	–	Ground
559	AD11	HADRS[15]	I/O	HOST, Bidirectional buffer	614	AD16	TCK	I	TEST, Input buffer
560	VDD	VDD	–	1.2V LOGIC power supply	615	VDD3	VDD3	–	3.3V I/O power supply
561	AF10	HCAS	O	HOST, Output buffer	616	AG17	PLLST	I	CLOCK, Input buffer
562	AG10	HRAS	O	HOST, Output buffer	617	GND	GND	–	Ground
563	AH10	HCLKEN	O	HOST, Output buffer	618	AF17	DVCLKO	O	CLOCK, Output buffer
564	GND	GND	–	Groud	619	VDD3	VDD3	–	3.3V I/O power supply
565	AE11	HADRS[16]	I/O	HOST, Bidirectional buffer	620	AE17	PXCLK	O	CLOCK, Output buffer
566	GND	GND	–	Ground	621	GND	GND	–	Ground
567	AF11	HADRS[17]	I/O	HOST, Bidirectional buffer	622	AH18	REC656I[7]	I	VIDEO-Digital, Input buffer
568	AD12	HADRS[27]	I/O	HOST, Bidirectional buffer	623	VDD	VDD	–	1.2V LOGIC power supply
569	AG11	HADRS[20]	I/O	HOST, Bidirectional buffer	624	AG18	REC656I[6]	I	VIDEO-Digital, Input buffer
570	VDD3	VDD3	–	3.3V I/O power supply	625	GND	GND	–	Ground
571	AH11	HADRS[21]	I/O	HOST, Bidirectional buffer	626	AD17	REC656I[5]	I	VIDEO-Digital, Input buffer
572	VDD	VDD	–	1.2V LOGIC power supply	627	AF18	REC656I[4]	I	VIDEO-Digital, Input buffer
573	AE12	HADRS[19]	I/O	HOST, Bidirectional buffer	628	AE18	REC656I[3]	I	VIDEO-Digital, Input buffer
574	AF12	HADRS[18]	I/O	HOST, Bidirectional buffer	629	AH19	REC656I[2]	I	VIDEO-Digital, Input buffer
575	AG12	HADRS[23]	I/O	HOST, Bidirectional buffer	630	AG19	REC656I[1]	I	VIDEO-Digital, Input buffer
576	GND	GND	–	Ground	631	AF19	REC656I[0]	I	VIDEO-Digital, Input buffer
577	AD13	HADRS[28]	I/O	HOST, Bidirectional buffer	632	AH20	DVVIDEO[7]	I/O	VIDEO-Digital, Bidirectional buffer
578	VDD	VDD	–	1.2V LOGIC power supply	633	AD18	DVVIDEO[6]	I/O	VIDEO-Digital, Bidirectional buffer
579	AH12	HADRS[22]	I/O	HOST, Bidirectional buffer	634	AE19	DVVIDEO[5]	I/O	VIDEO-Digital, Bidirectional buffer
580	GND	GND	–	Ground	635	VDD3	VDD3	–	3.3V I/O power supply
581	AE13	HADRS[29]	I/O	HOST, Bidirectional buffer	636	AG20	DVCLKI	I	CLOCK, Input buffer
582	VDD	VDD	–	1.2V LOGIC power supply	637	AF20	PLL2AVDD	–	
583	AF13	HADRS[24]	I/O	HOST, Bidirectional buffer	638	AH21	PLL2AVSS	–	
584	VDD3	VDD3	–	3.3V I/O power supply	639	AD19	R656CLKI	I	CLOCK, Input buffer
585	AG13	HADRS[25]	I/O	HOST, Bidirectional buffer	640	GND	GND	–	Ground
586	GND	GND	–	Ground	641	AE20	ADMCLKI	I	CLOCKI, Input buffer
587	AH13	HADRS[26]	I/O	HOST, Bidirectional buffer	642	VDD3	VDD3	–	3.3V I/O power supply
588	GND	GND	–	Ground	643	AG21	DVVIDEO[4]	I/O	VIDEO-Digital, Bidirectional buffer
589	GND	GND	–	Ground	644	AF21	DVVIDEO[3]	I/O	VIDEO-Digital, Bidirectional buffer
590	AD14	TESTMOD[6]	I	TEST, Input buffer	645	AD20	DVVIDEO[2]	I/O	VIDEO-Digital, Bidirectional buffer
591	AE14	VDD	–	1.2V LOGIC power supply	646	AH22	DVVIDEO[1]	I/O	VIDEO-Digital, Bidirectional buffer
592	AF14	TESTMOD[5]	I	TEST, Input buffer	647	AG22	DVVIDEO[0]	I/O	VIDEO-Digital, Bidirectional buffer
593	GND	GND	–	Ground	648	AE21	REC656O[7]	O	VIDEO-Digital, Output buffer
594	AG14	TESTMOD[4]	I	TEST, Input buffer	649	AF22	REC656O[6]	O	VIDEO-Digital, Output buffer
595	VDD	VDD	–	1.2V LOGIC power supply	650	VDD	VDD	–	1.2V LOGIC power supply
596	AH14	TESTMOD[3]	I	TEST, Input buffer	651	AH23	DVREQ	I	VIDEO-Digital, Input buffer
597	GND	GND	–	Ground	652	GND	GND	–	Ground
598	AH15	TESTMOD[2]	I	TEST, Input buffer	653	AG23	DVACK	O	VIDEO-Digital, Output buffer
599	VDD	VDD	–	1.2V LOGIC power supply	654	GND	GND	–	Ground
600	AG15	TESTMOD[1]	I	TEST, Input buffer	655	AE22	AVSS1DA10	–	
601	GND	GND	–	Ground	656	AD21	GOOUT	O	VIDEO-Analog
602	AF15	TESTMOD[0]	I	TEST, Input buffer	657	AH24	AVDD1DA10	–	
603	AE15	CSYNC	I	CLOCK, Input buffer	658	AF23	BOOUT	O	VIDEO-Analog
604	AD15	VIPWM	O	CLOCK, Output buffer	659	AE23	AVDD1DA10	–	
605	AH16	PLLON	I	TEST, Input buffer	660	AG24	ROUT	O	VIDEO-Analog

No.	BALL Address	Pin Name	I/O	Function	No.	BALL Address	Pin Name	I/O	Function
661	AD22	IREF[0]	–	VIDEO-Analog	669	AD23	REC656O[4]	O	VIDEO-Digital, Output buffer
662	AF24	IREF[1]	–	VIDEO-Analog	670	AH27	REC656O[3]	O	VIDEO-Digital, Output buffer
663	AG25	YOUT	O	VIDEO-Analog	671	AG26	REC656O[2]	O	VIDEO-Digital, Output buffer
664	AH25	AVSS2DA10	–		672	AG27	REC656O[1]	O	VIDEO-Digital, Output buffer
665	AE24	COOUT	O	VIDEO-Analog	673	GND	GND	–	Ground
666	AH26	AVDD2DA10	–		674	AD24	REC656O[0]	O	VIDEO-Digital, Output buffer
667	GND	GND	–	Ground	675	AE25	AGCCTL	O	VIDEO-Analog
668	AF25	REC656O[5]	O	VIDEO-Digital, Output buffer					


● Others

BALL Address	Pin Name	BALL Address	Pin Name	BALL Address	Pin Name	BALL Address	Pin Name
AA23	GND	P12	GND	AC11	VDD	AB23	VDD3
AA6	GND	P13	GND	AC14	VDD	AB6	VDD3
AC12	GND	P14	GND	AC6	VDD	AC10	VDD3
AC17	GND	P15	GND	AC8	VDD	AC13	VDD3
AC20	GND	P16	GND	L6	VDD	AC16	VDD3
AC9	GND	P17	GND	AC11	VDD	AC19	VDD3
F11	GND	R12	GND	AC14	VDD	AC22	VDD3
F14	GND	R13	GND	AC6	VDD	AC7	VDD3
F17	GND	R14	GND	AC8	VDD	F10	VDD3
F20	GND	R15	GND	L6	VDD	F13	VDD3
F23	GND	R16	GND	P6	VDD	F16	VDD3
F8	GND	R17	GND	U6	VDD	F19	VDD3
H6	GND	R23	GND	Y6	VDD	F22	VDD3
J23	GND	R6	GND	F12	VDD	F7	VDD3
M12	GND	T12	GND	F6	VDD	G23	VDD3
M13	GND	T13	GND	F9	VDD	G6	VDD3
M14	GND	T14	GND	J6	VDD	K23	VDD3
M15	GND	T15	GND	AC15	VDD	K6	VDD3
M16	GND	T16	GND	AC18	VDD	N23	VDD3
M17	GND	T17	GND	AC21	VDD	N6	VDD3
M23	GND	U12	GND	AC23	VDD	T23	VDD3
M6	GND	U13	GND	F15	VDD	T6	VDD3
N12	GND	U14	GND	F18	VDD	W23	VDD3
N13	GND	U15	GND	F21	VDD	W6	VDD3
N14	GND	U16	GND	H23	VDD		
N15	GND	U17	GND	L23	VDD		
N16	GND	V23	GND	P23	VDD		
N17	GND	V6	GND	U23	VDD		
				Y23	VDD		


UPD72852AGB-8EU (MAIN ASSY : IC5101)

• IEEE1394 Physical IC

Pin Arrangement

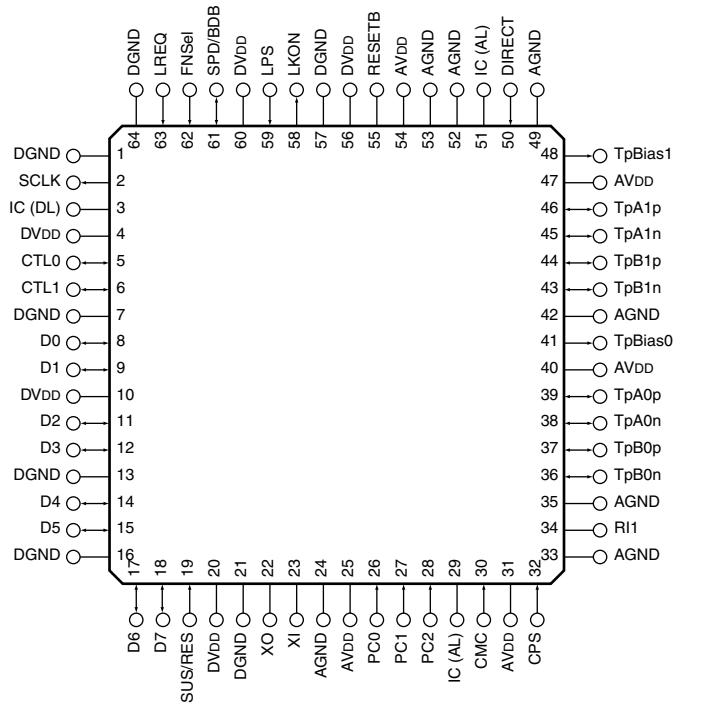

Block Diagram

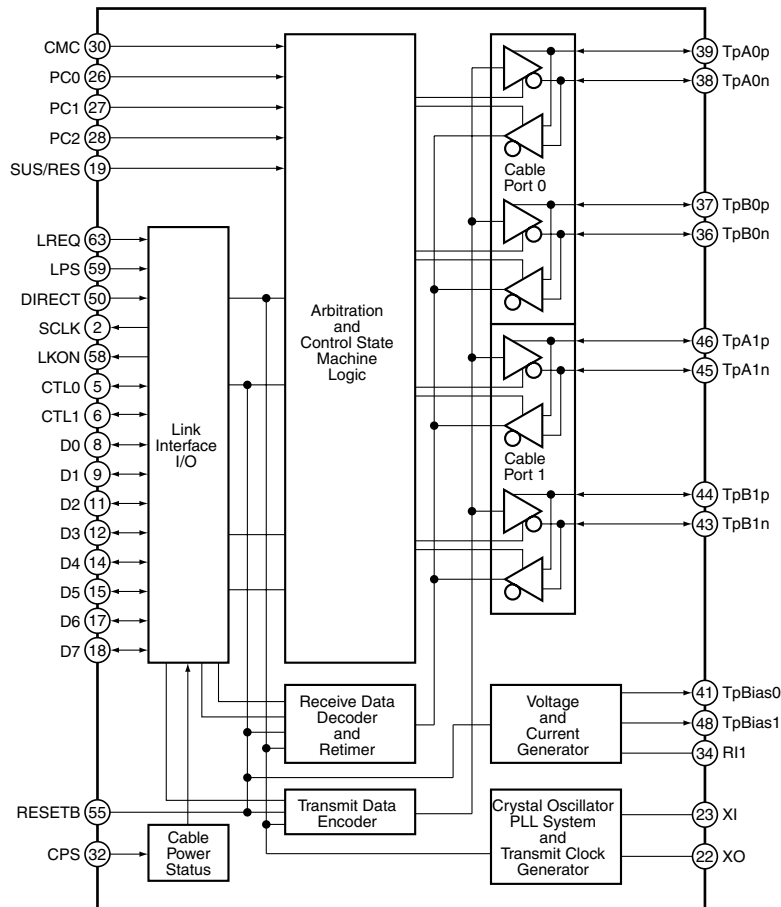

● Pin Function

● Cable Interface Pins

No.	Pin Name	I/O	Function
39	TpA0p	I/O	Port 0 twisted pair cable A positive phase I/O
38	TpA0n	I/O	Port 0 twisted pair cable A negative phase I/O
37	TpB0p	I/O	Port 0 twisted pair cable B positive phase I/O
36	TpB0n	I/O	Port 0 twisted pair cable B negative phase I/O
46	TpA1p	I/O	Port 1 twisted pair cable A positive phase I/O
45	TpA1n	I/O	Port 1 twisted pair cable A negative phase I/O
44	TpB1p	I/O	Port 1 twisted pair cable B positive phase I/O
43	TpB1n	I/O	Port 1 twisted pair cable B negative phase I/O
19	SUS/RES	I	Suspend/Resume function select 1 : Suspend/Resume on (IEEE1394a-2000 compliant) 0 : Suspend/Resume off (P1394a draft 1.3 compliant)
32	CPS	I	Cable power status Connect to the cable through a 390 kΩ resistor and to the GND through a 100 kΩ resistor. 0 : Cable power fail 1 : Cable power on

● Link Interface Pins

No.	Pin Name	I/O	Function
8	D0	I/O	Data input/output (bit 0)
9	D1	I/O	Data input/output (bit 1)
11	D2	I/O	Data input/output (bit 2)
12	D3	I/O	Data input/output (bit 3)
14	D4	I/O	Data input/output (bit 4)
15	D5	I/O	Data input/output (bit 5)
17	D6	I/O	Data input/output (bit 6)
18	D7	I/O	Data input/output (bit 7)
5	CTL0	I/O	Link interface control (bit 0)
6	CTL1	I/O	Link interface control (bit 1)
63	LREQ	I	Link request input
2	SCLK	O	Link control output clock LPS 1 : 49.152 MHz output LPS 0 : Clamp to 0 (The clock signal will be output within 25 μsec after change to "0")
59	LPS	I	Link power status input 0 : Link power off 1 : Link power on (PHY/Link direct connection)
58	LKON	O	Link-on signal output Link-on signal is 6.1444 MHz clock output.
50	DIRECT	I	PHY/Link isolation barrier control input 0 : Isolation barrier 1 : PHY/Link direct connection

• Control Pins

No.	Pin Name	I/O	Function
26	PC0	I	Power class set input This pin status will be loaded to Pwr_class bit which allocated to PHY register 4H. IEEE1394a-2000 chapter [4.3.4.1]
27	PC1	I	
28	PC2	I	
30	CMC	I	Configuration manager capable setting This pin status will be loaded to Contender bit which allocated to PHY register 4H. 0 : Non contender 1 : Contender
55	RESETB	I	Power on reset input Connect to GND through a 0.1 μ F capacitor. 0 : Reset 1 : Normal
61	SPD/BDB	I FNSel = 0	Speed select (UPD72852GB) 0 : MAX. S200 1 : MAX. S400
		O FNSel = 1	BIAS Detected output (Logical Inverse) 0 : BIAS is coming from some port. 1 : BIAS is not coming from any port.

• IC

No.	Pin Name	I/O	Function
29, 51	IC (AL)	–	Internally Connected (Low Clamped) Connected to GND.
3	IC (DL)	–	Internally Connected (Low Clamped) Connected to GND.

• Power Supply Pins

No.	Pin Name	I/O	Function
25, 31, 40, 47, 54	AVDD	–	Analog power
24, 33, 35, 42, 49, 52, 53	AGND	–	Analog GND
4, 10, 20, 56, 60	DVDD	–	Digital VDD
1, 7, 13, 16, 21, 57, 64	DGND	–	Digital GND


• Other Pins

No.	Pin Name	I/O	Function
41	TpBias0	O	Port 0 twisted pair output
48	TpBias1	O	Port 1 twisted pair output
34	RI1	–	Resistor connection pin 1 for reference current generator Please connect to GND pin through the 9.1 k Ω resistor.
23	XI	–	Crystal oscillator connection XI
22	XO	–	Crystal oscillator connection XO
62	FNSel	I	Function Select 0 : #61 acts as SPD (UPD72852GB compliant) 1 : #61 acts as BDB

- **Pin Arrangement**



● Block Diagram

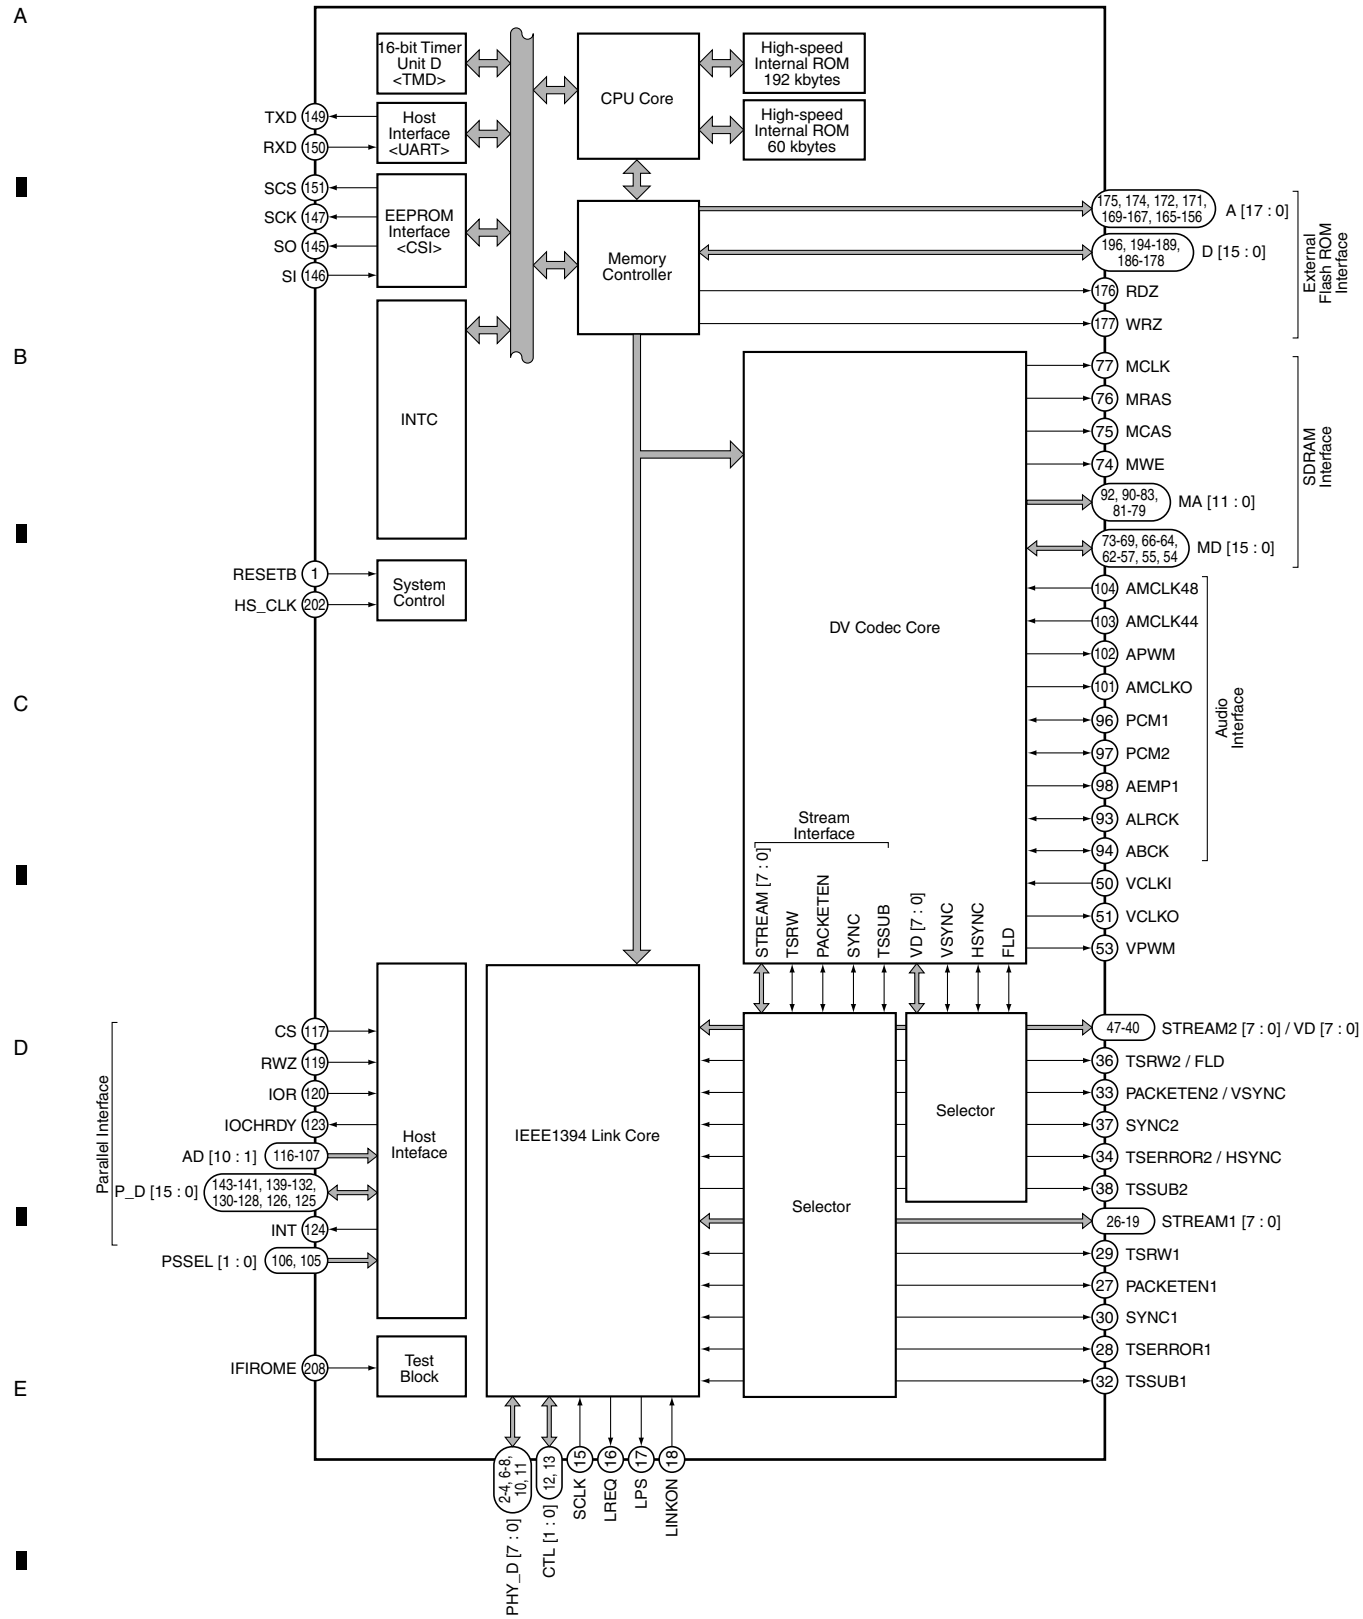

● Pin Function

(1) Link relation

No.	Pin Name	I/O	Function	Active
18	LINKON	I	Link-on signal input Clock input When LPS is active, input 0.	—
17	LPS	O	Link power status output Link power OFF : 0 Link power ON : 2.7 MHz pulse output (20 dividing of host clock 54 MHz)	—
16	LREQ	O	Link request output	—
15	SCLK	I	Clock input for Link control LPS is active : 49.152 MHz input LPS = 0 0 : fixed	—
12, 13	CTL [1 : 0]	I/O	PHY/Link control signal input/output	—
2-4, 6-8, 10, 11	PHY_D [7 : 0]	I/O	Data input/output between PHY-Link	—
26-19	STREAM1 [7 : 0]	I/O	ISO data bus of stream interface 1	—
27	PACKETEN1	I/O	Packet enable signal input/output of stream interface 1	H/L
28	TSERROR1	I/O	Packet error signal input/output of stream interface 1	H/L
29	TSRW1	I/O	Data read/write enable signal input/output of stream interface 1	—
30	SYNC1	I/O	Frame synchronous signal input/output of stream interface 1	H/L
32	TSSUB1	I/O	Not used Connect to VDD or GND through a resistor.	H/L
47-40	STREAM2 [7 : 0]	I/O	ISO data bus of stream interface 2	—
33	PACKETEN2	I/O	Packet enable signal input/output of stream interface 2	H/L
34	TSERROR2	I/O	Packet error signal input/output of stream interface 2	H/L
36	TSRW2	I/O	Data read/write enable signal input/output of stream interface 2	—
37	SYNC2	I/O	Frame synchronous signal input/output of stream interface 2	H/L
38	TSSUB2	O	Not used Set to open.	—

(2) Video interface pins

No.	Pin Name	I/O	Function	Active
50	VCLKI	I	Video clock input (27 MHz)	—
51	VCLKO	O	Video clock output (27 MHz)	—
47-40	VD [7 : 0]	I/O	Video data signal	—
33	VSNC	I/O	Video vertical sync. signal	L
34	HSNC	I/O	Video horizontal sync. signal	L
36	FLD	I/O	Field index signal	—
53	VPWM	O	PWM signal for video PLL	—

(3) Audio interface pins

No.	Pin Name	I/O	Function	Active
104	AMCLK48	I	Audio master clock input for sampling frequency 48 kHz	—
103	AMCLK44	I	Audio master clock input for sampling frequency 44 kHz	—
101	AMCLKO	O	Audio master clock output	—
96	PCM1	I/O	Audio PCM serial data At 2ch : System 1 (data of audio block 1) At 4ch : System 1 The above is default setting value. Input/output data of PCM 1 and PCM 2 is replaced by Channel swap setting of an AUDIO_FUNC register.	—
97	PCM2	I/O	Audio PCM serial data At 2ch : Mute At 4ch : System 2 (data of audio block 2) The above is default setting value. Input/output data of PCM 1 and PCM 2 is replaced by Channel swap setting of an AUDIO_FUNC register. Note: Cannot use it in DV decode.	—
98	AEMP1	O	PCM1 emphasis ON/OFF in PCM 1 output	H
93	ALRCK	I/O	Audio LR clock L ch : High R ch : Low	—
94	ABCK	I/O	Audio bit clock	—
49, 48	AFS [2 : 1]	O	Audio sampling frequency AFS2 AFS1 44.1 kHz 0 1 48 kHz 0 0 32 kHz 1 0	—
102	APWM	O	PWM signal for audio PLL	—

(4) SDRAM interface pins

No.	Pin Name	I/O	Function	Active
77	MCLK	O	CLK pin connection of SDRAM	—
76	MRAS	O	RAS pin connection of SDRAM	—
75	MCAS	O	CAS pin connection of SDRAM	—
74	MWE	O	WE pin connection of SDRAM	—
92, 90-83, 81-79	MA [11 : 0]	O	Address pin connection of SDRAM	—
73-69, 66-64, 62-57, 55, 54	MD [15 : 0]	I/O	Data pin connection of SDRAM Note: Process of pull-up or pull down is necessary. So connect it to SDRAM directly.	—

(5) Host interface pins

(a) Parallel interface pins

No.	Pin Name	I/O	Function	Active
117	CS	I	Chip select input of parallel interface	L
119	RWZ	I	Read and write control input of parallel interface ISA type bus, SH-1 bus: Write strobe 68000 bus : Read/write selection signal	L
120	IOR	I	IO read control input of parallel interface ISA type bus, SH-1 bus : Read strobe 68000 bus : Data strobe (DS)	L
123	IOCHRDY	O	Ready output of parallel interface	L
116-107	AD [10 : 1]	I	Address input of parallel interface	—
143-141, 139-132, 130-128, 126, 125	P_D [15 : 0]	I/O	Data input/output of parallel interface	—

(b) Serial interface pins

No.	Pin Name	I/O	Function	Active
149	TXD	I/O	Serial transmission data output of unsynchronous serial interface (UART)	—
150	RXD	I/O	Serial transmission data input of unsynchronous serial interface (UART)	—

(c) Others

No.	Pin Name	I/O	Function	Active
124	INT	O	Interrupt output to the outside	H
106, 105	PSSEL [1 : 0]	I	Parallel/serial interface selection Input signal to select the outside interface which of parallel interface or serial interface. PSSEL [1 : 0] Select 00 Serial interface (UART) 01 Parallel interface (ISA type bus) 10 Parallel interface (68000 bus) 11 Parallel interface (SH-1 bus)	—

(6) External ROM connection pins

(a) Flash ROM interface pins

No.	Pin Name	I/O	Function	Active
196, 194-189, 186-178	D [15 : 0]	I/O	External ROM data bus Data bus in the external ROM access. Process of pull-up or pull down is necessary.	—
175, 174, 172, 171, 169-167, 165-156	A [17 : 1]	O	External ROM address bus Address bus in the external ROM access. Can addressing the 256k byte space.	—
176	RDZ	O	ROM read Strobe signal which shows a read cycle for external ROM. It becomes the inactive in the idle state.	L
177	WRZ	O	ROM write Strobe signal which shows a write cycle for external ROM.	L

(b) EEPROM interface pins

No.	Pin Name	I/O	Function	Active
145	SO	I/O	Serial transmit data output of clock-synchronous system serial interface (CSI)	—
146	SI	I/O	Serial receive data input of clock-synchronous system serial interface (CSI)	—
147	SCK	I/O	Clock output of clock-synchronous system serial interface (CSI)	—
151	SCS	I/O	Chip select output of clock-synchronous system serial interface (CSI)	—

(7) Clock and reset pins

No.	Pin Name	I/O	Function	Active
1	RESETB	I	Reset RESETB input is asynchronous input. When a signal of fixed low-level width is input without relation to an operation clock, take precedence of all operation, and reset the system. Note: RESETB is low-active.	L
202	HS_CLK	I	Host clock Clock input pin which is supplied to CPU core and built-in peripheral I/O. Please input 27 MHz clock. Perform 2 multiply with internal PLL by 27 MHz clock, 54 MHz clock is supplied to CPU core and internal peripheral I/O.	—

(8) Power supply and ground pins

No.	Pin Name	I/O	Function	Active
5, 31, 52, 63, 78, 95, 127, 140, 166, 187	3.3VDD	—	3.3V power supply 3.3V positive power supply pins. Power supply for 3.3V interface I/O.	—
14, 67, 118, 170	2.5VDD	—	2.5V power supply 2.5V positive power supply pins. Power supply for internal each block.	—
39, 91, 144, 195	2.5GND	—	Ground pins Connect all GND pins to the common ground.	—
9, 35, 56, 68, 82, 99, 131, 148, 173, 188	3.3GND			—
199	PLLAVDD	—	Analog power supply for multiply circuit Analog positive power supply pin for PLL. Supply 2.5V.	—
200	PLLAGND	—	Analog ground for multiply circuit Analog ground for PLL	—
198	PLLDVDD	—	Digital power supply for multiply circuit Digital positive power supply pin for PLL. Supply 2.5V.	—
201	PLLDGND	—	Digital ground for multiply circuit Digital ground for PLL	—
121	IC (H)	—	Internally connected pin Connect to VDD directly.	—
197, 203, 205-207	IC (L)	—	Internally connected pin Connect to ground directly.	—
152, 154, 204	IC (PL)	—	Internally connected pin Connect to ground through a resistor.	—
100, 122	IC (O)	—	Internally connected pin Set to open.	—

(9) Others

No.	Pin Name	I/O	Function	Active
153	DV_INT	I/O	Interrupt pin to the outside for the DV status read out.	H
155	BR_MON	I/O	Shows the bus reset occurred. There is some delay after real bus reset occurred because of set by the built-in firmware.	H
208	IFIROME	I	ROM operation selection input Set to 1 normally.	—

1 2 3 4

7.3 OUTLINE OF THE PRODUCT

Main newly developed technologies

A

1. Pickup

The pickup supports quadruple-speed recording for the DVD-R/RW.

A liquid-crystal tilt servo system is adopted for the pickup.

■

2. Recording-signal-processing LSI

- UPD3330GC (DRIVE Assy: IC101)

The recording-signal-processing module of conventional models consists of two chips, but this has been integrated into a single newly developed recording-signal-processing LSI, enabling stable performance and cost reduction.

B

3. AV-signal-processing LSI

- M65673WG (MAIN Assy: IC1001)

The AV-signal-processing module of conventional models consists

of eleven chips, but this has been integrated into a single newly developed AV-signal-processing LSI, enabling large-scale cost reduction while maintaining the conventional functions. In the new LSI, all the basic functions necessary for a DVD recorder have been integrated. Like conventional models, this model is designed to support multitasking. The main functions are as follows:

- C
- 3-D Y/C separation
 - Video decoding
 - Frame TBC
 - MPEG video encoding
 - Dolby Digital Consumer Encoding
 - ATA/ATAPI I/F (2 ch)
 - Main CPU (32-bit RISC, 54 MHz)
 - Graphics engine (OSD, scaling, mixing)
 - MPEG video decoding
 - Audio decoding (AC-3, MPEG)
 - Video encoding
 - Progressive conversion
 - D • Audio I/F
 - 3-D DNR for playback

4. DV-signal-processing LSI

The DV-signal-processing LSI consists of the following two chips:

- UPD72852AGB-8EU (MAIN Assy: IC5101)

A 400-Mbps two-port PHY LSI in compliance with the IEEE1394a-2000 standards

- UPD72893BGD-LML (MAIN Assy: IC5202)

An IEEE1394 link controller LSI having DV (digital video) encoding/decoding functions. Encoding/decoding of digital video signals in compliance with the SD specifications (NTSC/PAL) of the DV standard is supported. The 32-bit RISC CPU is built in for controlling the IEEE1394 bus and sending/receiving AV/C commands.

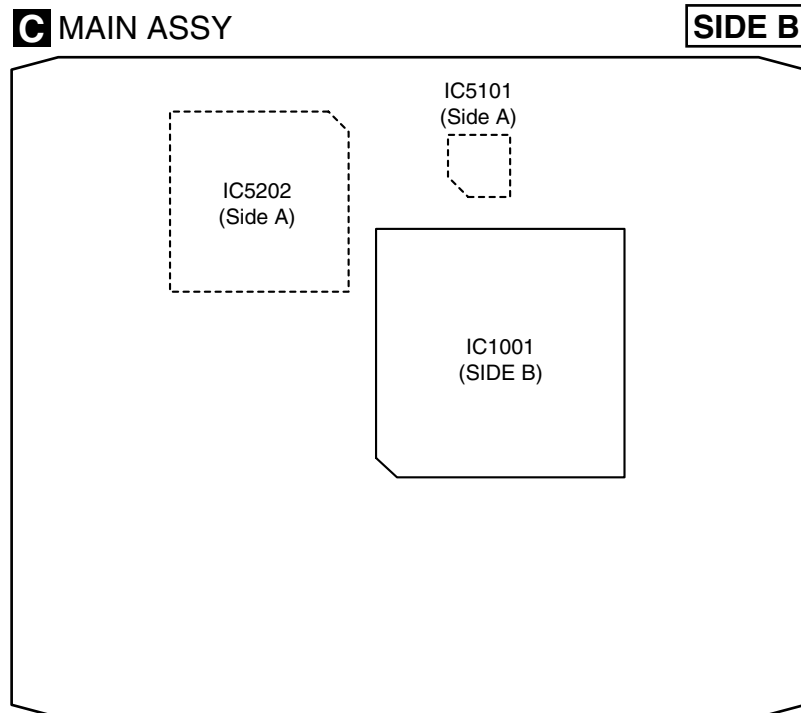


Fig.1 MAIN Assy

System configuration

In each signal-processing LSI of the main function blocks, various processes have been integrated into one chip, which enables simpler system configuration. With the AV-signal-processing LSI at the center, video inputs/outputs, audio inputs/outputs, DV inputs/outputs, writer and various memory cells are connected to it.

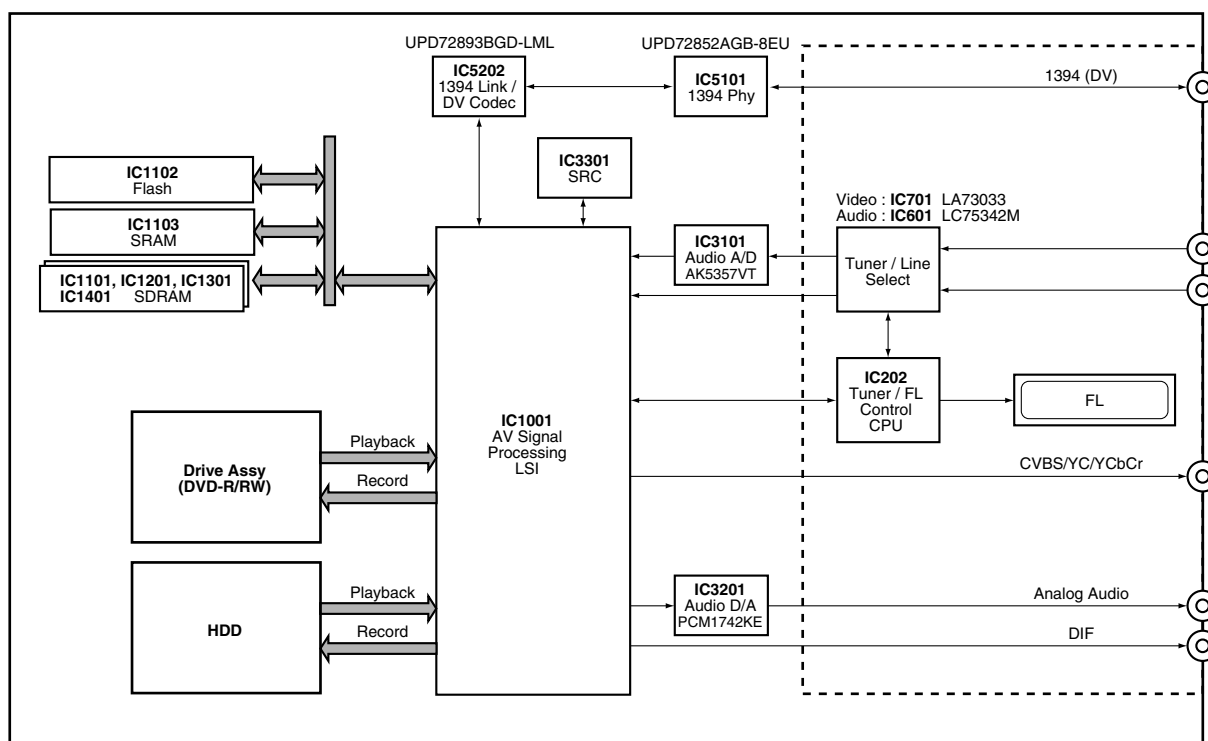


Fig2. System configuration

[Memorized Data]

- **EEPROM (IC204 JCKB ASSY)**
The information about Tuner is backed up.
(Pre-set CH, AFT ON/OFF, Skip CH, etc)
Information about timed recording
Other information
(The state of Volume, remote control mode and last positions (Line/Tuner, etc)
- **CPU SDRAM (IC1101 MAIN ASSY)**
The execution area and working area of a program
- **FLASH ROM (IC1102 MAIN ASSY)**
The storing area of a program code and setting information
- **SRAM (IC1103 MAIN ASSY)**
The working area for record and the storing area of setting information (backup RAM)
- **DEC SDRAM (IC1201 MAIN ASSY)**
The working area of MPEG playback and OSD/Thumbnail
(OSD is mainly for Disc Menu creation in Video mode)
- **ENC SDRAM (IC1301 MAIN ASSY)**
The working area of MPEG recording and analog input and output (AVIO)
- **ATA SDRAM (IC1401 MAIN ASSY)**
The working area of ATA/OSD2/Audio TBC (OSD2 is for all GUI.)
- **ATA SDRAM (IC1421 MAIN ASSY)**
This is only for HDD model.
The working area about HDD operation.
- **DV SDRAM (IC5204 MAIN ASSY)**
The working area of Link and DV Codec

New functions and specifications

In this model, the following new functions and specifications have been included in addition to those of conventional models:

1. Improved multitasking functions

As both the HDD and DVD drive are mounted in this model, like conventional models, the unit is designed to support various multitasking. Furthermore, this model supports DVD multitasking (only in VR mode), which was impossible with conventional models.

Ⓐ Pursuit playback

Playback of the title being recorded by the DVD drive in VR mode or the HDD is supported.

Ⓑ Simultaneous recording/playback 1

Playback of a title other than that being recorded by the DVD drive in VR mode or the HDD is also supported.

Ⓒ Simultaneous recording/playback 2

DVD playback during HDD recording is supported.

Ⓓ Simultaneous recording/playback 3

HDD playback during DVD recording is supported.

Ⓔ Recording during high-speed dubbing

HDD recording during high-speed dubbing from the HDD to a DVD is supported.

Ⓕ Playback during high-speed dubbing

Playback of an HDD title during high-speed dubbing from the HDD to a DVD is supported.

2. Improved dubbing functions

High-speed dubbing and normal-speed dubbing are supported, as with conventional models. A one-touch dubbing function that enables automatic selection between these dubbing functions is also provided. In this model, high-speed dubbing from a DVD (in VR mode) to the HDD is also an added capability.

3. Disc backup

The function of creating a backup disc for a disc recorded in Video mode is added. The data of the original DVD are transferred to the HDD, then retransferred to the DVD drive, and because no reencoding is required during data transmission between the drives, a backup disc with no degradation of video and audio signals can be created.

4. Advanced disc NAVI

In the conventional disc NAVI function, recorded titles are displayed with still pictures as a list. In the advanced disc NAVI function, the title selected with the cursor is displayed as an animated picture with sound.

5. Improved Still Picture menu in Video mode

The disc NAVI function, which enables displaying a list of recorded titles with still pictures, is enabled in Video mode with this model. Selection from among nine title menus is also supported.

6. Adoption of MPEG2 SIF

In MN1-6 modes, MPEG2 SIF has been adopted, instead of the MPEG1 SIF of conventional models. This enables higher-quality recording for longer hours.

7. Improved editing functions

For DVD, the original/play-list editing in DVD-VR mode available with conventional models is provided.

For HDD editing, play-list-editing functions almost the same as for the DVD-VR, such as title combination, separation, and partial erasure, are enabled for the HDD with this model. With conventional models, these edit functions are available only for the dubbing list. The automatic-chapter-mark-insertion function in response to a change in audio type (stereo, monaural, bilingual) makes commercial-cutting editing easier.

8. Various-format playback

Playback of WMA, MP3, and JPEG formats is supported.

9. Other functions and specifications

The following main functions and specifications adopted with conventional models are also provided with this model:

- 192-kHz, 24-bit DAC
- 48-kHz, 20-bit ADC
- Digital 3-D Y/C separation circuit
- Digital frame TBC
- 3-D DNR
- DV (iLink) input/output
- Playback with commercials skipped
- CD/video-CD playback
- Picture creation
- Recording with 3/4-D1 and 2/3-D1 resolutions
- Recording mode with 32-step MNs
- LPCM recording
- High-resolution GUI

(1) Cautions on Handling the HDD

- The HDD is very sensitive to shocks and vibrations. Care must be taken especially during operation (when the power is on).
- The HDD is very sensitive to electrostatic charges.
- Rapid change in temperature or humidity may cause deterioration of the HDD.

Note: After receiving damage caused by any above-mentioned factors, the HDD may operate normally for dozens or some hundreds of hours but then suddenly crash. If you are certain you have damaged a new repair part (HDD) while making repairs, do not use the part.

The HDD is about 10 times as sensitive to shock during operation than during nonoperation.

Reference: Main specifications on damage to the HDD

	During operation	During nonoperation
Shock G (acceleration)	<approx. 20 G	<approx. 200 G
Temperature change	< 20°C/hour	
Moisture change	< 20%/hour	

Reference: Estimate value of falling distance vs. shock (G) when the HDD is dropped without protection

Falling distance	Landing surface	Granite surface	Concrete floor	Synthetic-resin-coated table	Antistatic sponge
0.5 inch / 12.7 mm		387	217	200	26
1.0 inch / 25.4 mm		595	457	310	37
2.0 inch / 50.8 mm		1133	600	680	70
4.0 inch / 101.6 mm		1795	1040	1050	267

(2) Cautions on handling the product on which the HDD is mounted or the HDD as a repair part, and examples of dangerous handling

[Cautions on handling the product on which the HDD is mounted]

- While the unit is turned on, the HDD is always in operation. Be sure NOT to impart shock to the unit.

● Examples of dangerous handling: while the power is on

- Bumping on the bonnet
- Dropping an object, such as a small screwdriver or remote control unit, onto the bonnet, or bumping an object against the cabinet
- Moving the unit by dragging
- Stacking another product on the unit

Note: Be sure NOT to impart shock, such as bumping or hitting a screwdriver against the HDD, during diagnosis with the bonnet open.

● Examples of dangerous handling: while the power is off

- Imparting strong shock, although the HDD is more resistant to shock when the power is off
 - Dropping the unit from a height of several centimeters, or after lifting one side of the unit up, then letting the unit drop.
 - Do NOT move the unit immediately after the power is turned off. Wait at least 30 seconds after the indication on the FL display changed from POWER OFF to the clock indication before moving the unit.
- If the AC power cord is accidentally disconnected before turning the unit off, wait at least for one minute before moving it. In this case, damage to the HDD caused by sudden shutoff may be small, because the emergency relief mechanism is activated. However, if sudden shutoff occurs during recording or playback, recorded data may be damaged. Be sure to check operations.

[Cautions on handling the HDD as a repair part]

- Handle the HDD in a safe environment:
 - Handle the HDD over an antistatic pad that can also absorb shock.
 - Wear wrist bands to prevent electrostatic charges generated in your body from affecting the HDD.
- The following must be observed when handling the HDD:
 - Handle one HDD at a time. Do NOT hold several HDDs at the same time.
 - Grip the HDD on both sides so that you do not touch its terminals or circuit boards.
 - Do NOT stack one HDD onto another HDD (even if the HDDs are protected in antistatic bags).
 - Do NOT bump the HDDs against one another.
 - Do NOT bump any tool, such as a screwdriver, or other hard object against the HDD.
 - When a repair part (HDD) is transported and there is a large temperature difference between outdoors and indoors, to the indoor, leave it in its package for about a half day to gradually cool or warm the HDD to room temperature before unpacking it.

[Notes on packing for shipment]

- When returning a defective HDD for analysis, handle with care as if it were a good product. Otherwise, the results of analysis may not be correct.
- When packing, use the antistatic bag and packing materials in which the repair part for service was delivered. Attach a copy of the slip for service or a memo stating symptoms in as much detail as possible.

■ Outline and part No. of the HDDs

*Pioneer's part No. is not stamped.

Model Name	Capacity	Maxtor		Western Digital		Seagate	
		Pioneer's Part No. (for service)	Manufacturer's Part No.	Pioneer's Part No. (for service)	Manufacturer's Part No.	Pioneer's Part No. (for service)	Manufacturer's Part No.
DVR-520H-S	80GB	VXF1010	4R080L0-	VXF1043	WD800BB -xxHEAx	VXF1036	ST38001□ACE-
DVR-720H-S	160GB	VXF1028	4R160L0-	VXF1055	WD1600BB -xxFTAx	VXF1040	ST316002□ACE-

- When replacing the HDD, carefully check the capacity and manufacturer's part No. on the part label to avoid replacing with a similar but inappropriate product. You can also check the model No. of the mounted HDD on the Service mode screen.
- Do NOT use repair parts, such as commercially available HDDs, other than those designated above, as their functions, performance or reliability cannot be guaranteed.

Maxtor



Capacity

Manufacturer's part No.

Date of Manufacturer

Western Digital (80GB)




Western Digital (160GB)



Note : The body of HDD 80GB and 160GB/250GB types of Western Digital are different.

Seagate

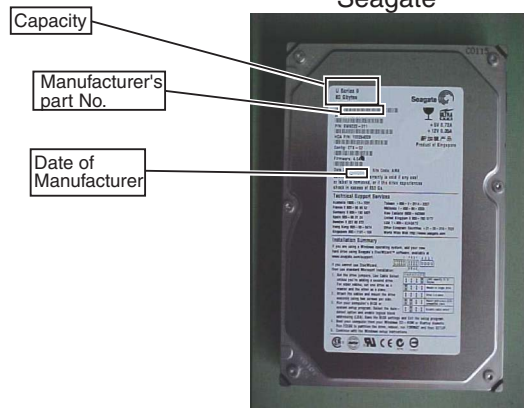

Capacity

Manufacturer's part No.

Date of Manufacturer

How to read the information of Seagate HDD

Ex. Date Code 0435x
04 year (from July)
manufactured on 35th week

Fig.1 Location of the data on capacity and part No. of the HDD

■ Confirmation of the jumper pin location of the HDD

Maxtor



Jumper pin

Setting : Cable Select(CS)


Western Digital



Jumper pin

Setting : Cable Select(CS)

Seagate

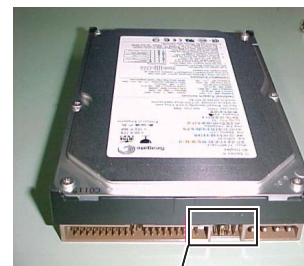

Jumper pin


Setting : Cable Select(CS)

Disc / content format playback compatibility

General disc compatibility

This recorder is compatible with a wide range of disc types (media) and formats. Playable discs will generally feature one of the following logos on the disc and/or disc packaging. Note however that some disc types, such as recordable CD and DVD, may be in an unplayable format—see below for further compatibility information.



- Also compatible with KODAK Picture CD
-  is a trademark of Fuji Photo Film Co. Ltd.

This recorder also supports the IEC's Super VCD standard. Compared to the Video CD standard, Super VCD offers superior picture quality, and allows two soundtracks to be recorded. Super VCD also supports the widescreen size.



DVD-R/RW compatibility

This recorder will play and record DVD-R/RW discs.

Compatible media:

- DVD-RW Ver. 1.1, Ver. 1.1 / 2x and Ver. 1.2
- DVD-R Ver. 2.0 and Ver. 2.0 / 4x / 8x

Recording formats:

- DVD-R: DVD-Video format (Video mode)
- DVD-RW: Video Recording (VR) format and DVD-Video format (Video mode)

CD-R/RW compatibility

This recorder cannot record CD-R or CD-RW discs.

- Compatible formats: CD-Audio, Video CD, ISO 9660 CD-ROM* containing MP3, WMA or JPEG files
* ISO 9660 Level 1 or 2 compliant. CD physical format: Mode1, Mode2 XA Form1. Romeo and Joliet file systems are both compatible with this recorder.
- Multi-session playback: Yes (except CD-Audio and Video CD)
- Unfinalized disc playback: CD-Audio only

Compressed audio compatibility

- Compatible media: CD-ROM, CD-R, CD-RW
- Compatible formats: MPEG-1 Audio Layer 3 (MP3), Windows Media Audio (WMA)
- Sampling rates: 44.1 or 48kHz
- Bit-rates: Any (128Kbps or higher recommended)

- VBR (variable bit rate) MP3 playback: Yes
- VBR WMA playback: No
- WMA encoder compatibility: Windows Media Codec 8 (files encoded using Windows Media Codec 9 may be playable but some parts of the specification are not supported; specifically, Pro, Lossless, Voice and VBR)
- DRM (Digital Rights Management) file playback: No (see also DRM in the Glossary on page 97)
- File extensions: .mp3, .wma (these must be used for the recorder to recognize MP3 and WMA files – do not use for other file types)
- File structure: Up to 99 folders / 999 files (if these limits are exceeded, only files and folders up to these limits are playable)

WMA (Windows Media Audio) compatibility



The Windows Media® logo printed on the box indicates that this recorder can playback Windows Media Audio content.

WMA is an acronym for Windows Media Audio and refers to an audio compression technology developed by Microsoft Corporation. WMA content can be encoded by using Windows Media® Player version 7, 7.1, Windows Media® Player for Windows® XP, or Windows Media® Player 9 Series.

Microsoft, Windows Media, and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

JPEG file compatibility

- Compatible formats: Baseline JPEG and EXIF 2.2* still image formats
* File format used by digital still cameras
- Sampling ratio: 4:4:4, 4:4:2, 4:2:0
- Horizontal resolution: 160 – 5120 pixels
- Vertical resolution: 120 – 3840 pixels
- Progressive JPEG compatible: No
- File extensions: .jpg, jpeg, jif, jfif (must be used for the recorder to recognize JPEG files – do not use for other file types)
- File structure: The recorder can load up to 99 folders / 999 files at one time (if there are more files/folders that this on the disc then more can be reloaded)

PC-created disc compatibility

Discs recorded using a personal computer may not be playable in this unit due to the setting of the application software used to create the disc. In these particular instances, check with the software publisher for more detailed information.

Discs recorded in packet write mode (UDF format) are not compatible with this recorder.

Check the DVD-R/RW or CD-R/RW software disc boxes for additional compatibility information.

1

2

3

4

7.6 CLEANING

A



Before shipping out the product, be sure to clean the following positions by using the prescribed cleaning tools:

Position to be cleaned	Cleaning tools
Pickup lenses	Cleaning liquid : GEM1004 Cleaning paper : GED-008

Position to be cleaned	Cleaning tools
Fans	Cleaning paper : GED-008

B

C

D

E

F

8. PANEL FACILITIES

8.1 FRONT SECTION

Front panel

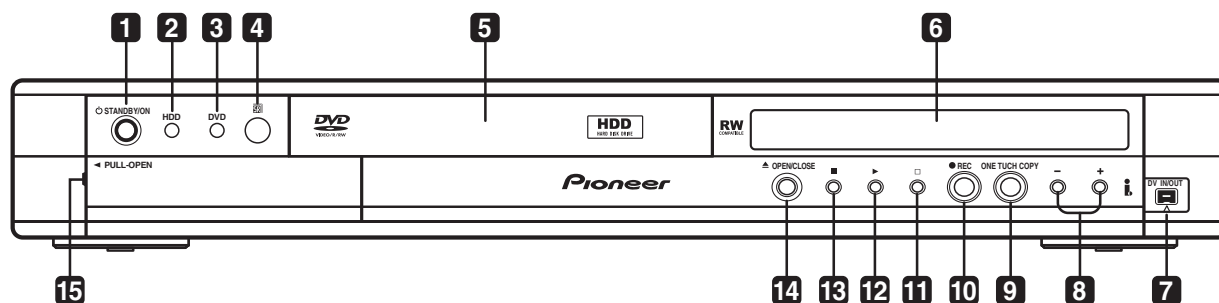


Illustration shows DVR-520H

1 STANDBY/ON

Press to switch the recorder on/into standby.

2 HDD

Press to switch to the hard disk drive (HDD) for recording and playback. The button lights when HDD is selected.

3 DVD

Press to switch to DVD for recording and playback. The button lights when DVD is selected.

4 IR remote sensor

5 Disc tray

6 Front panel display

See *Display* on page 22 for details.

7 DV IN/OUT jack

Digital input/output jack for use with a DV camcorder.

8 +/-

Use to change TV channels, skip chapters/tracks, etc.

9 ONE TOUCH COPY

Press to start One Touch Copy of the currently playing title to DVD or the HDD.

10 ● REC

Press to start recording.

11

Press to stop recording.

12

Press to start or restart playback.

13

Press to stop playback.

14 OPEN/CLOSE


Press to open/close the disc tray.

15 Front panel inputs

Pull the cover down where indicated to access the front panel input jacks. Especially convenient for connecting camcorders and other portable equipment.

8.2 REAR PART

Rear panel connections

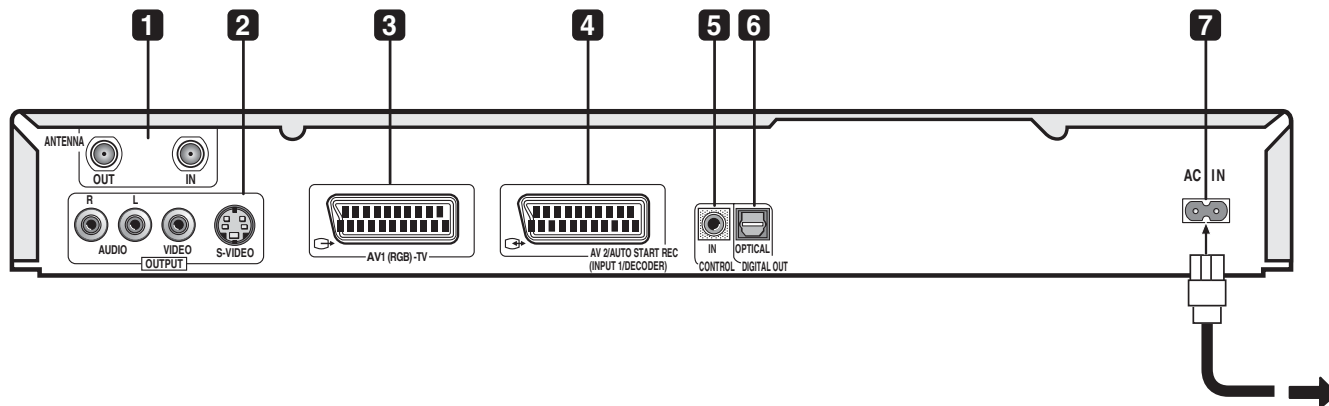

1 ANTENNA IN/OUT

Connect your TV antenna to the **ANTENNA IN** jack. The signal is passed through to the **ANTENNA OUT** jack for connection to your TV.

2 OUTPUT jacks

Stereo analog audio, video and S-video outputs for connection to a TV or AV amplifier/receiver.


3 AV1(RGB)-TVAV connector

Audio/video output SCART-type AV connector for connecting to a TV or other equipment with a SCART connector. The video output is switchable between video, S-video and RGB. See page *AV1 Out* for how to set this up.

4 AV2/AUTO START REC (INPUT 1/DECODER) AV connector

Audio/video input/output SCART-type AV connector for connecting to a VCR, or other equipment with a SCART connector. The input accepts video, S-video and RGB. See *AV2/L1 In* for how to set this up.

5 CONTROL IN

 
Use to control this recorder from the remote sensor of another Pioneer component with a **CONTROL OUT** terminal and bearing the Pioneer  mark. Connect the **CONTROL OUT** of the other component to the **CONTROL IN** of this recorder using a mini-plug cord.

6 DIGITAL OUT OPTICAL


For connecting to an AV receiver, Dolby Digital/DTS/MPEG decoder or other equipment with optical digital input.

7 AC IN – Power inlet

Front panel connections



 
On the left side of the front panel a flip-down cover hides a third audio/video input, consisting of an S-video and standard (composite) video jack, and stereo analog audio jacks.



On the right side is the DV input/output i.LINK connector. This is for connection to a DV camcorder.

8.3 DISPLAY

Display

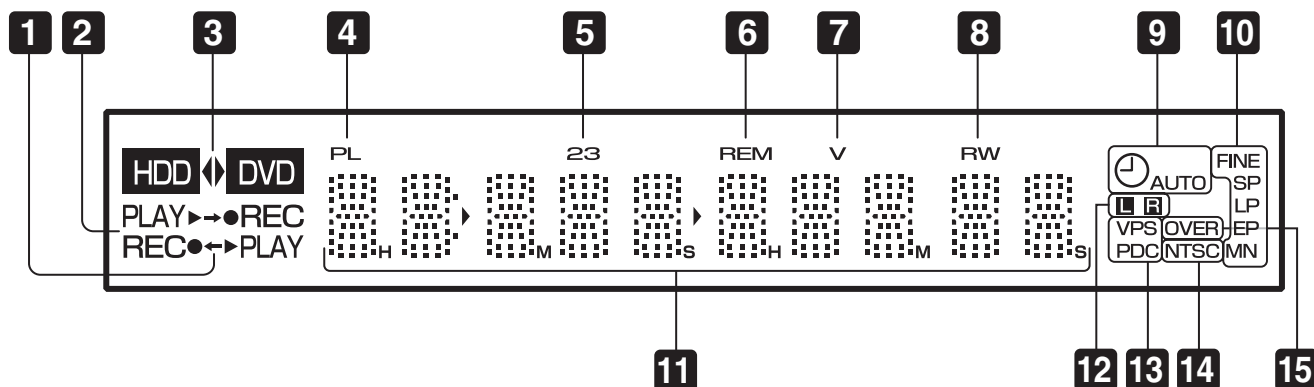

1 ← / →

Arrows indicate the copy direction between the HDD (HDD) and DVD (DVD).

2 ►PLAY/ ●REC indicators

Lights during playback / recording; blinks when playback / recording is paused.

3 HDD ◀▶ DVD

The ◀ and ▶ indicators light to indicate that the HDD or DVD is selected for recording/playback.

4 PL

Lights when a VR mode disc is loaded and the recorder is in Play List mode.

5 23

Shows the remote control mode (if nothing is displayed, the remote control mode is 1).

6 REM

Lights when the character display is showing the remaining available recording time.

7 V

Lights when an unfinalized Video mode disc is loaded.

8 R / RW

Indicates the type of recordable DVD loaded: DVD-R or DVD-RW.

9 ⌚

Lights when a timer recording has been set. (Indicator blinks if the timer has been set to DVD but there isn't a recordable disc loaded, or the timer has been set to HDD but the HDD is not recordable)

AUTO

Lights when Auto Start Recording has been set, and during Auto Start Recording.

10 Recording quality indicators

FINE

Lights when the recording mode is set to FINE (best quality).

SP

Lights when the recording mode is set to SP (standard play).

LP

Lights when the recording mode is set to LP (long play).

EP

Lights when the recording mode is set to EP (extended play).

MN

Lights when the recording mode is set to MN (manual recording level) mode.

11 Character display

12 L R

Indicates which channels of a bilingual broadcast are recorded.

13 VPS / PDC

Lights when receiving a VPS/PDC broadcast during a VPS/PDC-enabled timer recording.

14 NTSC


Lights when playing NTSC format video.

15 OVER

Lights when the analog audio input level is too high.

8.4 REMOTE CONTROL

Remote control

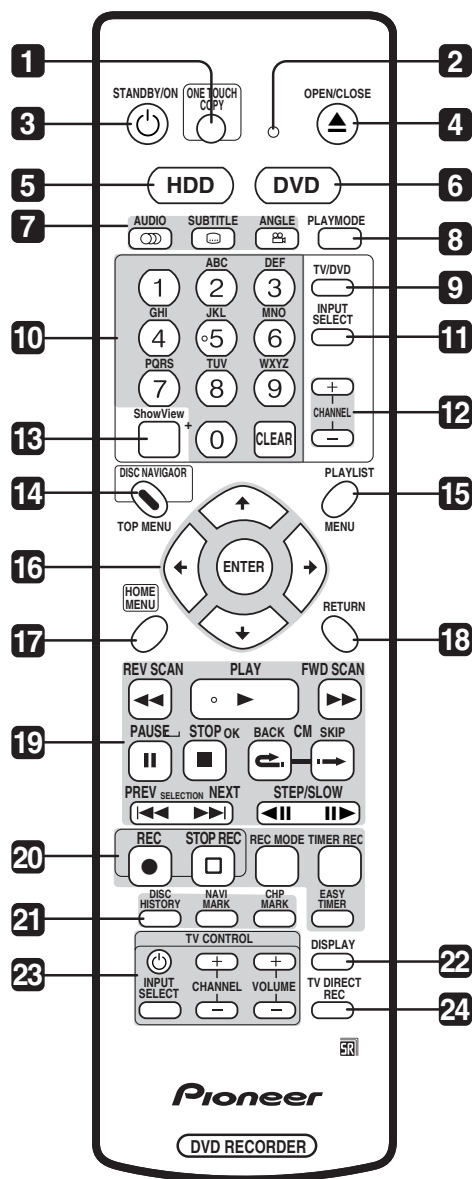

1 ONE TOUCH COPY

Press to start One Touch Copy of the currently playing title to DVD or the HDD.

2 Remote control indicator

Lights when setting up the remote control for use with a TV and when setting the remote control mode

3 STANDBY/ON

Press to switch the recorder on/into standby.

4 OPEN/CLOSE

Press to open/close the disc tray.

5 HDD

Press to select the hard disk (HDD) for recording or playback.

6 DVD

Press to select the DVD for recording or playback.

7 DVD playback functions

AUDIO

Changes the audio language or channel. (When the recorder is stopped, press to change the tuner audio.)

SUBTITLE

Displays/changes the subtitles included in multilingual DVD-Video discs.

ANGLE

Switches camera angles on discs with multi-angle scenes.

8 PLAY MODE

Press to display the Play Mode menu (for features such as search, repeat and program play).

9 TV/DVD

Press to switch between 'TV mode', in which you get the picture and sound from the TV's tuner, and 'DVD mode', in which you get picture and sound from the recorder's tuner (or an external input).

10 Alphanumeric buttons and CLEAR

Use the number buttons for track/chapter / title selection; channel selection, and so on. The same buttons can also be used to enter names for titles, discs and so on.

Use **CLEAR** to clear an entry and start again.

11 INPUT SELECT

Press to change the input to use for recording.

12 CHANNEL +/-

Press to change the channel of the built-in TV tuner.

13 SHOWVIEW (for WY model)

Press, then use the number buttons to enter a ShowView programming number for timer recording.

13 Video Plus + (for WV model)

Press, then use the number buttons to enter a PlusCode[®] programming number for timer recording.

14 DISC NAVIGATOR / TOP MENU

Press to display the Disc Navigator screen, or the top menu if a DVD-Video disc is loaded.

15 PLAY LIST / MENU

Press to switch between Original and Play List content on VR mode discs, or display the disc menu if a DVD-Video disc is loaded.

16 (cursor buttons) and ENTER

Used to navigate all on-screen displays. Press **ENTER** to select the currently highlighted option.

17 HOME MENU

Press to display the Home Menu, from which you can navigate all the functions of the recorder.

18 RETURN

Press to go back one level in the on-screen menu or display.

19 Playback controls

◀◀ REV SCAN / FWD SCAN ▶▶

Press to start reverse or forward scanning. Press again to change the speed.

▶ PLAY

Press to start playback.

⏸ PAUSE

Press to pause playback or recording.

■ STOP

Press to stop playback.

CM BACK(commercial back)

Press repeatedly to skip progressively backward through the audio or video playing.

CM SKIP(commercial skip)

Press repeatedly to skip progressively forward through the audio or video playing.

◀◀ PREV / NEXT ▶▶

Press to skip to the previous or next title/chapter/track/folder; or to display the previous or next menu page.

◀◀ STEP/SLOW ▶▶

During playback, press to start slow-motion playback; while paused, press to show the previous or next video frame.

20 Recording controls

● REC

Press to start recording. Press repeatedly to set the recording time in blocks of 30 mins.

□ STOP REC

Press to stop recording.

REC MODE

Press repeatedly to change the recording mode (picture quality).

TIMER REC

Press to set a timer recording from the standard Timer Recording screen.

EASY TIMER

Press to set a timer recording from the Easy Timer Recording screen.

21 DISC HISTORY

Press to display summary information (disc name, recording time left, etc.) from the last 30 recordable discs loaded.

NAVI MARK

Press to select a thumbnail picture for the current title for use in the Disc Navigator screen.

CHP MARK

Press to insert a chapter marker when playing/recording a VR mode DVD-RW disc or the HDD.

22 DISPLAY

Displays/changes the on-screen information displays.

23 TV CONTROL

After setting up, use these controls to control your TV.

24 TV DIRECT REC

Press to start recording whatever channel your TV is set to.

■ Jigs list

A

Name	Jig No.	Remarks
Service Remote Control Unit	GGF1381	adjustment, diagnosis
DVD Test Disc (DVD-Video)	GGV1025	Check of DVD-Video
DVD Recorder Data Disc	GGV1179 (*)	diagnosis (ID data setting)
Flexible Cable (40P)	GGD1370	diagnosis of Drive Assy

(*) : GGV1134 is now released, however GGV1179 will be released in JUNE/2004.
Until GGV1179 is released, use GGV1134 data disc.

B

C

D

E

F

Service Manual

ORDER NO.
RRV2996

DVD RECORDER

DVR-520H-S DVR-720H-S

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Region No.	Serial No. Piease confirm 3rd & 4th alphabetical letters.
DVR-520H-S	RLTXU	AC110-127V/220-240V	3	&&PG#####\$\$
DVR-720H-S	RLXU	AC110-127V/220-240V	3	&&PG#####\$\$

● This service manual should be used together with the following manual(s):

Model No.	Order No.	Remarks
DVR-520H-S/WYXU	RRV2979	

CONTENTS

1. CONTRAST OF MISCELLANEOUS PARTS	2
2. SCHEMATIC DIAGRAM	6
3. PCB CONNECTION DIAGRAM	14
4. MODEL SETTING	18

1. CONTRAST OF MISCELLANEOUS PARTS

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

● The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

● Screws adjacent to ∇ mark on product are used for disassembly.

● Reference Nos. indicate the pages and Nos. in the service manual for the base model.

● For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω \rightarrow 56×10^1 \rightarrow 561 RD1/4PU $\begin{bmatrix} 5 & 6 & 1 \end{bmatrix}$ J
 47k Ω \rightarrow 47×10^3 \rightarrow 473 RD1/4PU $\begin{bmatrix} 4 & 7 & 3 \end{bmatrix}$ J
 0.5 Ω \rightarrow R50 RN2H $\begin{bmatrix} R & 5 & 0 \end{bmatrix}$ K
 1 Ω \rightarrow 1R0 RS1P $\begin{bmatrix} 1 & R & 0 \end{bmatrix}$ K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω \rightarrow 562×10^1 \rightarrow 5621 RN1/4PC $\begin{bmatrix} 5 & 6 & 2 & 1 \end{bmatrix}$ F

■ CONTRAST TABLE

DVR-520H-S/RLTXU, DVR-720H-S/RLXU and DVR-520H-S/WYXU are constructed the same except for the following :

Ref. No.	Mark	Symbol and Description	Part No.			Remarks	
			DVR-520H-S /WYXU	DVR-520H-S /RLTXU	DVR-720H-S /RLXU		
		PCB ASSEMBLIES					
P11- 1	NSP	1..TUNB ASSY	VWV2003	VWV2018	VWV2018	*1 Constructed same. *2 Constructed same.	
		1..JACB/JCKB ASSY	VWM2257	VWM2264	VWM2264		
P11- 2		2..JCKB ASSY	VWV2024	VWV2022	VWV2022		
P11- 6		2..ATWB ASSY	VWV2005*1	VWV2009*1	VWV2009*1		
P11- 7		2..ATHB ASSY	VWV2002*2	VWV2011*2	VWV2011*2		
P11- 3	NSP	1..MAIN ASSY	VWV2013	VWV2025	VWV2025		
P11- 8		1..SDEB ASSY	VWV2033	Not used	Not used		
		1..FLKB ASSY	VWM2304	VWM2258	VWM2258		
P13- 2		2..KIRB ASSY	VWG2521	VWG2493	VWG2493		
		PACKING SECTION					
P9- 4	NSP	Remote Control	VXX2910	VXX2934	VXX2934		
P9- 5		Battery Cover	AZA7424	AZN7933	AZN7933		
P9- 7		Operating Instructions (English)	VRB1339	VRB1341	VRB1341		
P9- 8		Operating Instructions (French)	VRC1205	Not used	Not used		
P9- 9		Operating Instructions (German)	VRC1206	Not used	Not used		
P9-10		Operating Instructions (Italian)	VRC1207	Not used	Not used		
P9-11		Operating Instructions (Dutch)	VRC1208	Not used	Not used		
P9-12		Operating Instructions (Spanish)	VRC1209	Not used	Not used		
		Operating Instructions (Chinese)	Not used	VRC1213	VRC1213		
P9-15		Warranty Card	ARY7065	Not used	Not used		
P9-17	NSP	Polyethylene Bag	AHG7097	Not used	Not used		
P9-17		Polyethylene Bag	Not used	VHL1051	VHL1051		
P9-23		Packing Case	VHG2554	VHG2555	VHG2574		
		EXTERIOR SECTION					
P11-11	NSP	HDD 80G 4R080L0 SV	VXF1010	VXF1010	Not used		
P11-11		HDD 160G 4R160L0 SV	Not used	Not used	VXF1028		
P11-13		Ferrite Core	ATX1048	Not used	Not used		
P11-15		Connector Assy (15P)	PF15PP-D47	Not used	Not used		
P11-15		Housing Assy (15P)	Not used	VKP2328	VKP2328		
P11-22		Shield Flexible Cable (40P)	VDA2031	Not used	Not used		
P11-22		Flexible Cable (40P)	Not used	VDA2043	VDA2043		
P11-23		Flexible Cable (15P)	VDA2041	Not used	Not used		
P11-28		Earth Plate	VBK1153	Not used	Not used		
P11-41		Rear Panel	VNA2696	VNA2741	VNA2761		
P11-61		NSP	Bonnet Label	VRW2115	VRW2142	VRW2142	Rear Panel
			SISIR Label	Not used	VRW2156	VRW2158	

Ref. No.	Mark	Symbol and Description	Part No.			Remarks
			DVR-520H-S /WYXU	DVR-520H-S /RLTXU	DVR-720H-S /RLXU	
P13- 8	NSP	FRONT PANEL SECTION				
P13- 10		FL Filter	VEC2421	Not used	Not used	
P13-10		FL Lens	VNK5486	Not used	Not used	
P13-11		FL Lens	Not used	VNK5422	VNK5638	
P13-14		Front Panel Assy	VXA2651	VXA2653	VXA2696	
P13-22	NSP	Jack Door	VNK5496	VNK5497	VNK5497	
P13-23	NSP	Main key	VNK5436	Not used	Not used	
P13-23	NSP	Cap	VNK5437	Not used	Not used	

Notes : For PCB ASSEMBLIES, Refer to “CONTRAST OF PCB ASSEMBLIES”, “PCB PARTS LIST”, “2. SCHEMATIC DIAGRAM” and “3. PCB CONNECTION DIAGRAM”.

■ CONTRAST OF PCB ASSEMBLIES

AF TUNB ASSY

VWV2018 and VWV2003 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		VWV2003	VWV2018	
	Q305	DTA124EUA	Not used	
	Q306	2SC4081	Not used	
	Q311	RN1903	Not used	
	Q314, Q316, Q317	Not used	2SC4081	
	Q319	2SA1576A	Not used	
	D303	Not used	1SS356	
	F302	Not used	BTF1121	
	F305	VTF1179	VTF1178	
	L313	Not used	LCYA150J2520	
	L316	LCKAW330J2520	Not used	
	C306	CCSRCH102J50	Not used	
	C345	CCSRCH150J50	Not used	
	R317	RS1/16S103J	Not used	
	R318, R360	RS1/16S102J	Not used	
	R324, R344	RS1/16S472J	Not used	
	R327	RS1/16S271J	RS1/16S470J	
	R329	RS1/16S681J	Not used	
	R337, R361	RS1/16S0R0J	Not used	
	R345	RS1/16S221J	Not used	
	R350	Not used	RS1/16S0R0J	
	R351-R353	Not used	RS1/16S472J	
	R354	Not used	RS1/16S103J	
	R355	Not used	RS1/16S271J	
	R356, R357	Not used	RS1/16S472J	

CF MAIN ASSY

VWV2013 and VWV2025 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		VWV2013	VWV2025	
	IC2211, IC2302	SN74AHC2G53HDCT	Not used	
	Q2241	2SC4081	Not used	
	C1054	Not used	CEVW221M4	
	C2210, C2241, C2302	CKSRYF104Z25	Not used	
	C2220, C2243	CEVWNP100M10	Not used	
	C2223	Not used	CKSRYF104Z25	
	C3006	CKSRYF105Z10	CKSRYF104Z25	
	R2027, R2214, R2308	Not used	RS1/16S0R0J	
	R2047	RS1/16S0R0J	Not used	
	R2252	Not used	RS1/16S102J	
	R2253	RS1/16S123J	Not used	
	R2254	RS1/16S102J	Not used	
	R2255	RS1/16S103J	Not used	

EF KIRB ASSY

VWG2493 and VWG2521 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		VWG2521	VWG2493	
	D1201 D1203 R1204 R1206 R1207	SLR-343BBT SLR-343DC RS1/10S472J RS1/10S271J Not used	SLR-343DC SLR-343BBT RS1/10S271J RS1/10S182J RS1/10S182J	
	R1208 R1209	RS1/10S0R0J Not used	Not used RS1/16S0R0J	

PCB PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
EF JCKB ASSY			L403, L404		LAU150J
SEMICONDUCTORS			L701		LAU2R2J
	IC204	BR24L32F-W	L171		LAU470J
	IC701	LA73033M	L405		LAU4R7J
	IC601	LC75342M	L402		LAU8R2J
	IC501	MM1504XN	L103		LCYA100J2520
⚠	IC101	MM1565AF	L102		LTA102J
	IC401	MSP3455G	L205-L208, L284	CHIP BEAD	VTL1081
⚠	IC103	NJM78M09FA	CAPACITORS		
	IC202	PEG049*	C211, C220, C225, C226		CCSRCH101J50
⚠	IC102	PQ1K333M2ZP	C619-C621		CCSRCH101J50
	IC201	PST3245	C434, C435, C439		CCSRCH102J50
	IC203	RS5C372A	C245		CCSRCH120J50
	IC206	TC74HCT7007AF	C413		CCSRCH121J50
	IC205	TC7WU04FU	C516, C522, C528, C720, C721		CCSRCH150J50
	Q404-Q407, Q506, Q508, Q510	2SA1576A	C422		CCSRCH181J50
	Q701	2SA1576A	C440, C441		CCSRCH220J50
	Q104	2SB1238X	C140		CCSRCH221J50
	Q102, Q103	2SC2411K	C249, C250, C517, C523, C529		CCSRCH270J50
	Q105, Q172, Q205, Q402, Q403	2SC4081	C172		CCSRCH330J50
	Q702	2SC4081	C542		CCSRCH331J50
	Q401	2SD1664	C221, C232, C233, C412, C543		CCSRCH470J50
	Q204	2SD2114K	C430, C432		CCSRCH560J50
	Q171, Q202, Q203, Q707, Q710	DTA124EUA	C177		CCSRCH561J50
	Q206, Q712	DTC124EUA	C431		CCSRCH5R0C50
	Q514	HN1B04FU	C420, C702		CCSRCH680J50
	Q173	HN1C01FU	C215		CCSRCH681J50
	Q708, Q711	HN1C03FU	C433		CCSRCH6R0D50
	Q201	RN1901	C174, C415, C425, C601-C603		CEAT100M50
	Q703, Q706, Q709	RN4903	C607-C611, C614-C616, C618		CEAT100M50
	Q101	UMF21N	C103, C107, C117, C118		CEAT101M10
	D102	1SR154-400	C125, C126, C128, C141, C214		CEAT101M10
	D203	1SS352	C402, C404, C424, C426, C507		CEAT101M10
	D201, D401, D716, D717	1SS355	C652, C717, C727		CEAT101M10
	D601, D602, D604, D605	DF3A5.6FU	C121, C123, C133, C401, C407		CEAT101M16
	D718-D720	DF3A5.6FU	C410, C604, C612		CEAT101M16
	D103, D202	RB501V-40	C748, C751		CEAT101M6R3
	D607	UDZS5R1	C704, C716, C719		CEAT102M6R3
			C539		CEAT220M25
			C738		CEAT221M16
			C739		CEAT221M6R3
			C417		CEAT3R3M50
			C740, C744		CEAT470M16
			C135		CEAT471M16
COILS AND FILTERS					
	L401	CTF1399			
	L503-L505	LAU100J			

Mark No.	Description	Part No.
C705, C706		CEAT471M6R3
C137		CEJQ101M16
C102		CKSQYB225K10
C429		CKSRYB102K50
C129, C224, C406, C418, C436		CKSRYB103K50
C606, C617, C747		CKSRYB103K50
C222, C223, C707, C708		CKSRYB104K16
C711–C713, C718, C723–C725		CKSRYB104K16
C728–C730, C732–C735, C737		CKSRYB104K16
C741		CKSRYB104K16
C502		CKSRYB105K10
C428, C438		CKSRYB472K50
C241		CKSRYF103Z50
C104–C106, C115, C116		CKSRYF104Z25
C119, C120, C122, C124, C127		CKSRYF104Z25
C130–C132, C134, C136, C139		CKSRYF104Z25
C171, C173, C175, C176		CKSRYF104Z25
C202–C204, C216, C217, C228		CKSRYF104Z25
C234, C239, C240, C244, C246		CKSRYF104Z25
C403, C405, C408, C409, C411		CKSRYF104Z25
C414, C416, C419, C421, C423		CKSRYF104Z25
C427, C437, C501, C519, C525		CKSRYF104Z25
C531, C605, C613, C653		CKSRYF104Z25
C709, C710, C714, C715, C726		CKSRYF104Z25
C731, C736, C749, C750, C752		CKSRYF104Z25
C760		CKSRYF104Z25
C101, C209, C210, C212, C213		CKSRYF105Z10
C218, C219, C227, C231, C236		CKSRYF105Z10


RESISTORS


R407, R410	RS1/10S0R0J
R412	RS1/10S100J
R178	RS1/16S1501F
R173	RS1/16S3901F
R519, R526, R534	RS1/16S5600F
R602, R605, R606, R615–R617	RS1/16S75R0F
R704, R715, R717, R718	RS1/16S75R0F
R728–R730, R740, R743, R747	RS1/16S75R0F
R757–R759	RS1/16S75R0F
Other Resistors	RS1/16S###J

OTHERS

CN202	9P FFC CONNECTOR	52045-0945
CN705	13P FFC CONNECTOR	52045-1345
CN201	19P FFC CONNECTOR	52045-1945
CN401	19P PLUG	AKP7062
CN104	KR CONNECTOR	B13B-PH-K
CN105, CN703	KR CONNECTOR	B2B-PH-K
JA651	OPTICAL LINK OUT 8MB/S	JFJ1001
JA201	REMOTE CONTROL JACK	RKN1004
⚠ BT201	LITHIUM BATTERY(CR2032)	VEM1033
JA7011	3P PIN JACK	VKB1150
JA601	JACK	VKB1183
JA702	JACK	VKB1184
CN702	CONNECTOR	VKN1200
CN701	32P CONNECTOR	VKN1263
KN801, KN802		VNF1084
	WRAPPING TERMINAL	VNF1084
X201	CERAMIC RESONATOR	ASS7034

Mark No.	Description	Part No.
X203	CRYSTAL RESONATOR (4.433619 MHz)	VSS1176
X401	CERAMIC RESONATOR (18.432 MHz)	VSS1189
X202	CRYSTAL RESONATOR (32 kHz)	VSS1197

 A F

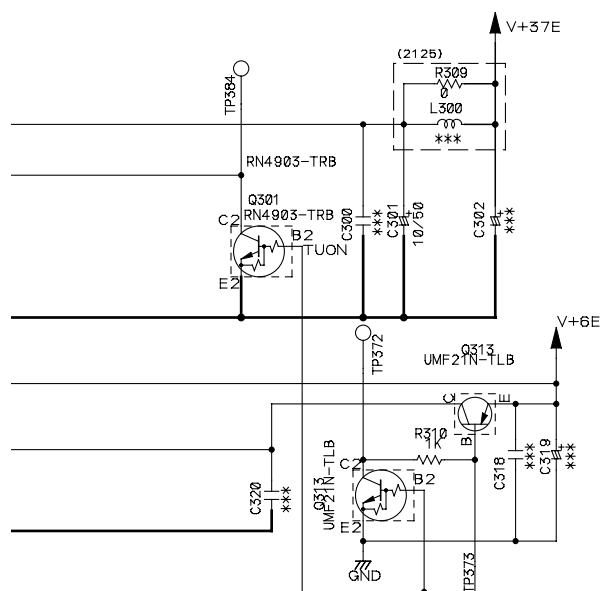


NOTES: • When ordering service parts, be sure to refer to “EXPLODED VIEWS and PARTS LIST” or “PCB PARTS LIST”.

- The mark found on some component parts indicates the importance of the safety factor of the part.

Therefore, when replacing, be sure to use parts of identical designation.

- : The power supply is shown with the marked box.

A F TUNB ASSY (VWV2018)

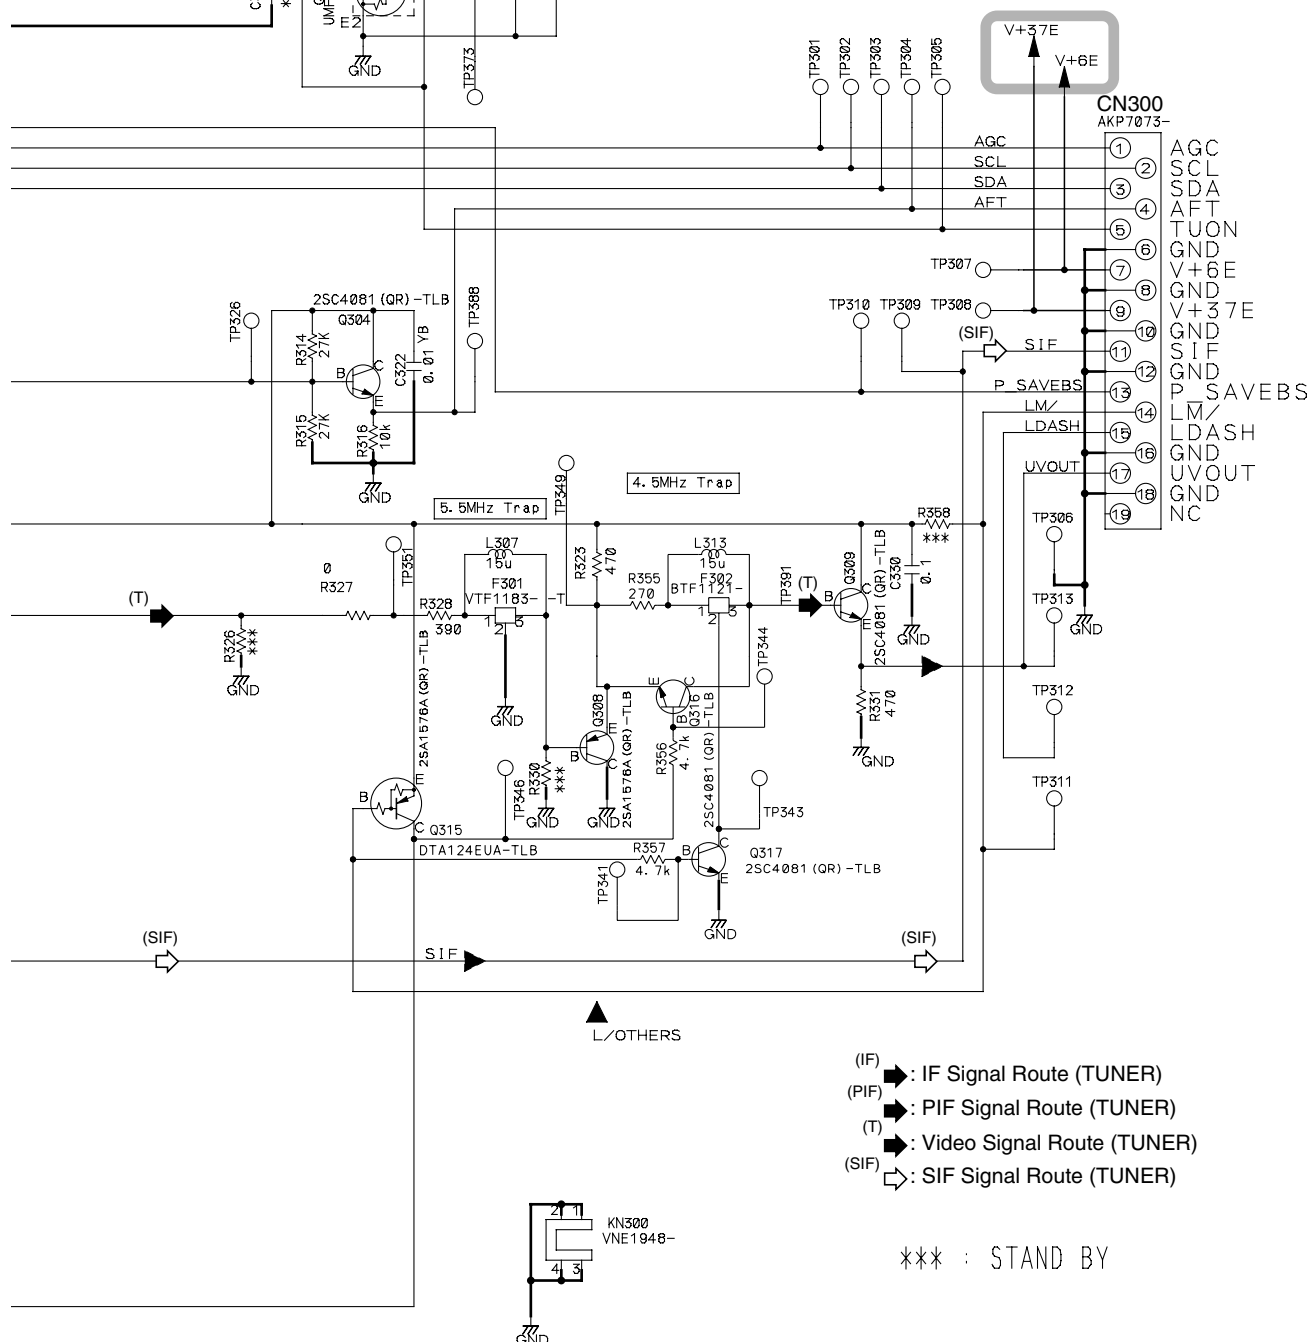

8

B 1/2F








2.3 JCKB ASSY(2/2)

B 2/2F JCKB ASSY (VWV2022)


- ▶: Video Signal Route
- (T) ▶: Video Signal Route (TUNER)
- (Y) ▶: Video Signal Route (Y)
- (C) ▶: Video Signal Route (C)
- (Cb) ▶: Video Signal Route (Cb)
- (Cr) ▶: Video Signal Route (Cr)
- ◻: Audio Signal Route (L ch)
- (D) ◻: Audio Signal Route (DIGITAL)

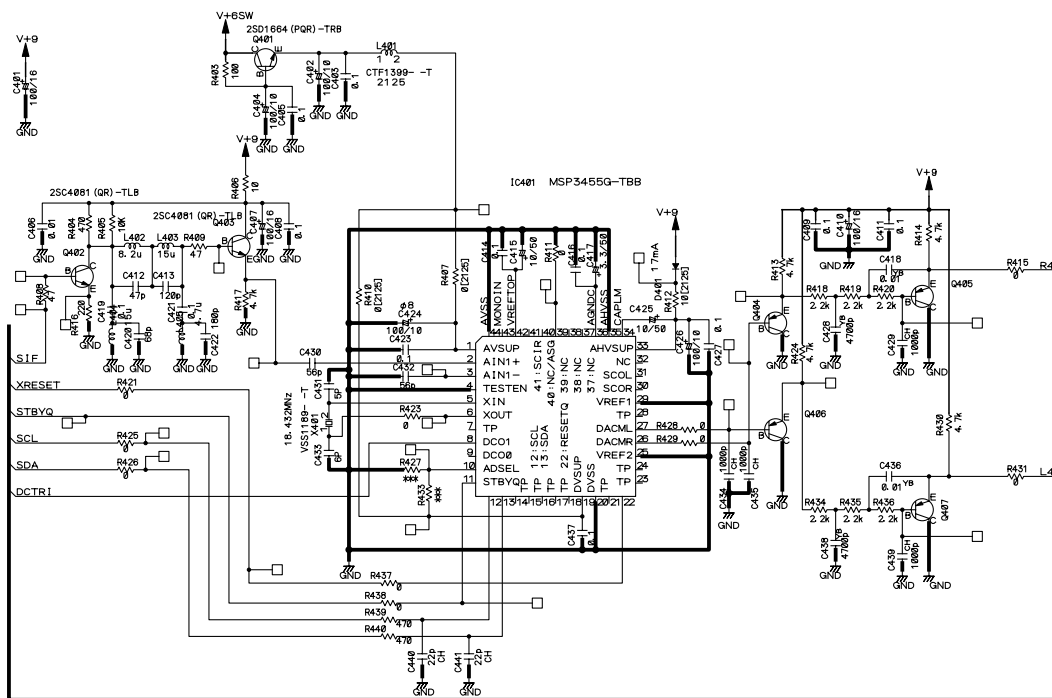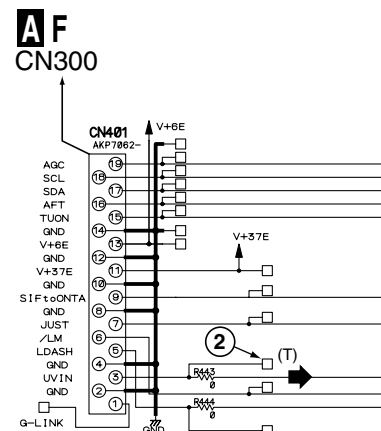


B 1/2F

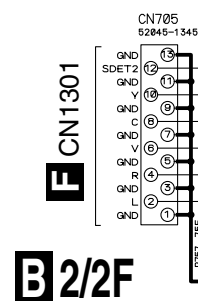


B 2/2F

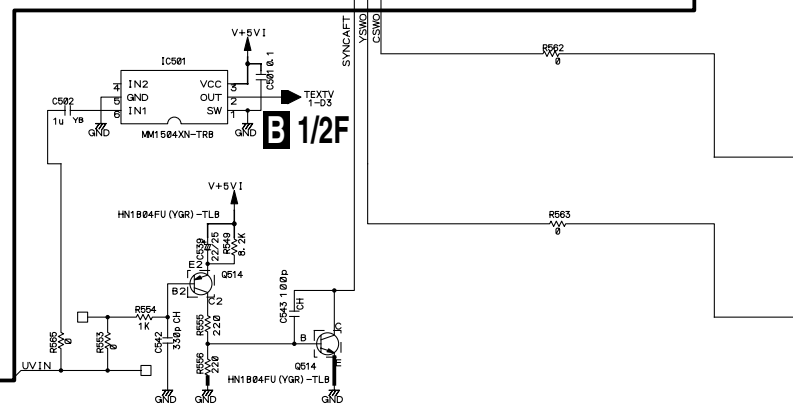

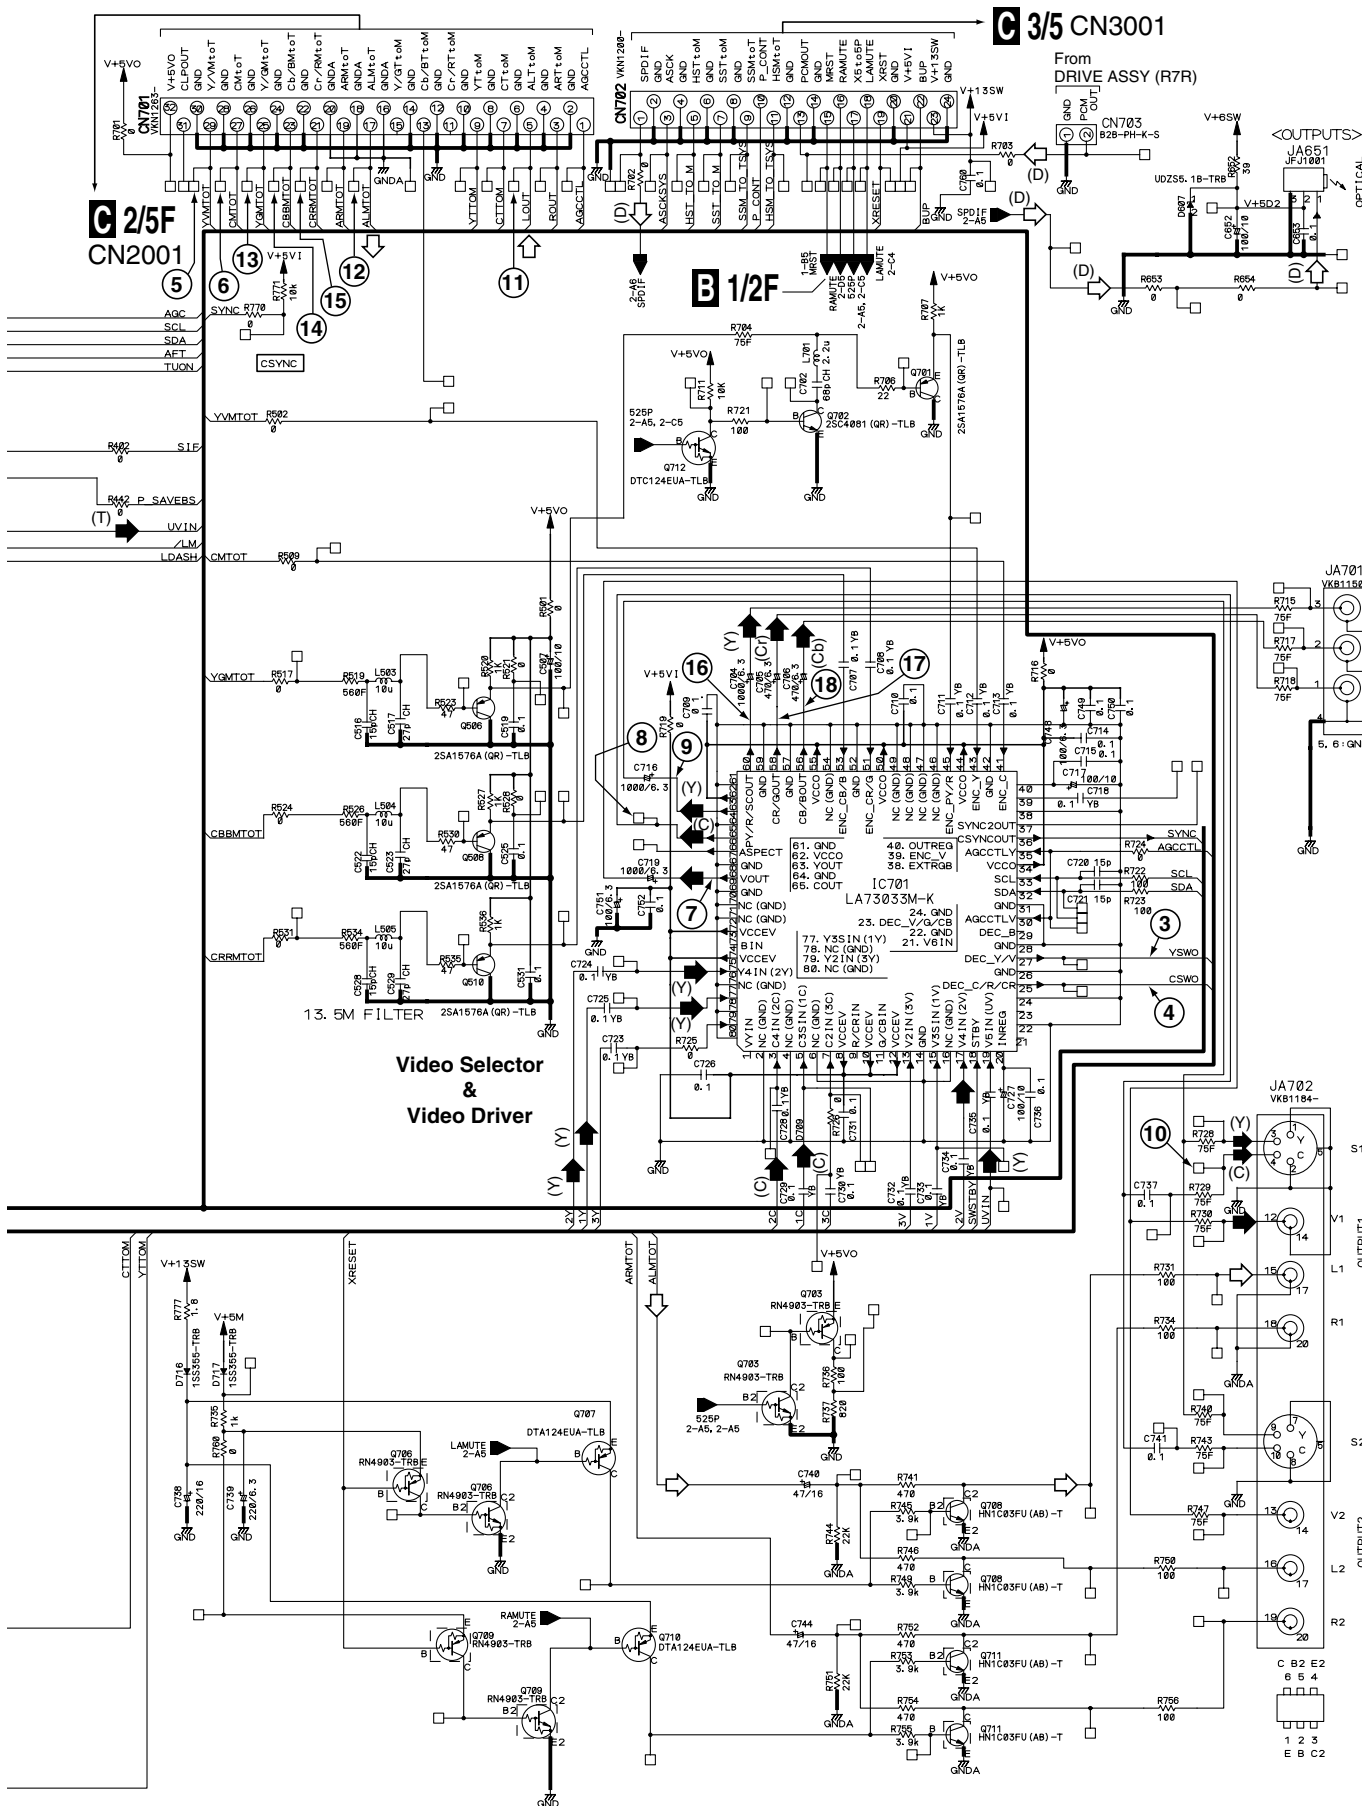

2.4 MAIN ASSY(2/5)

C 2/5F MAIN ASSY (VWV2025)

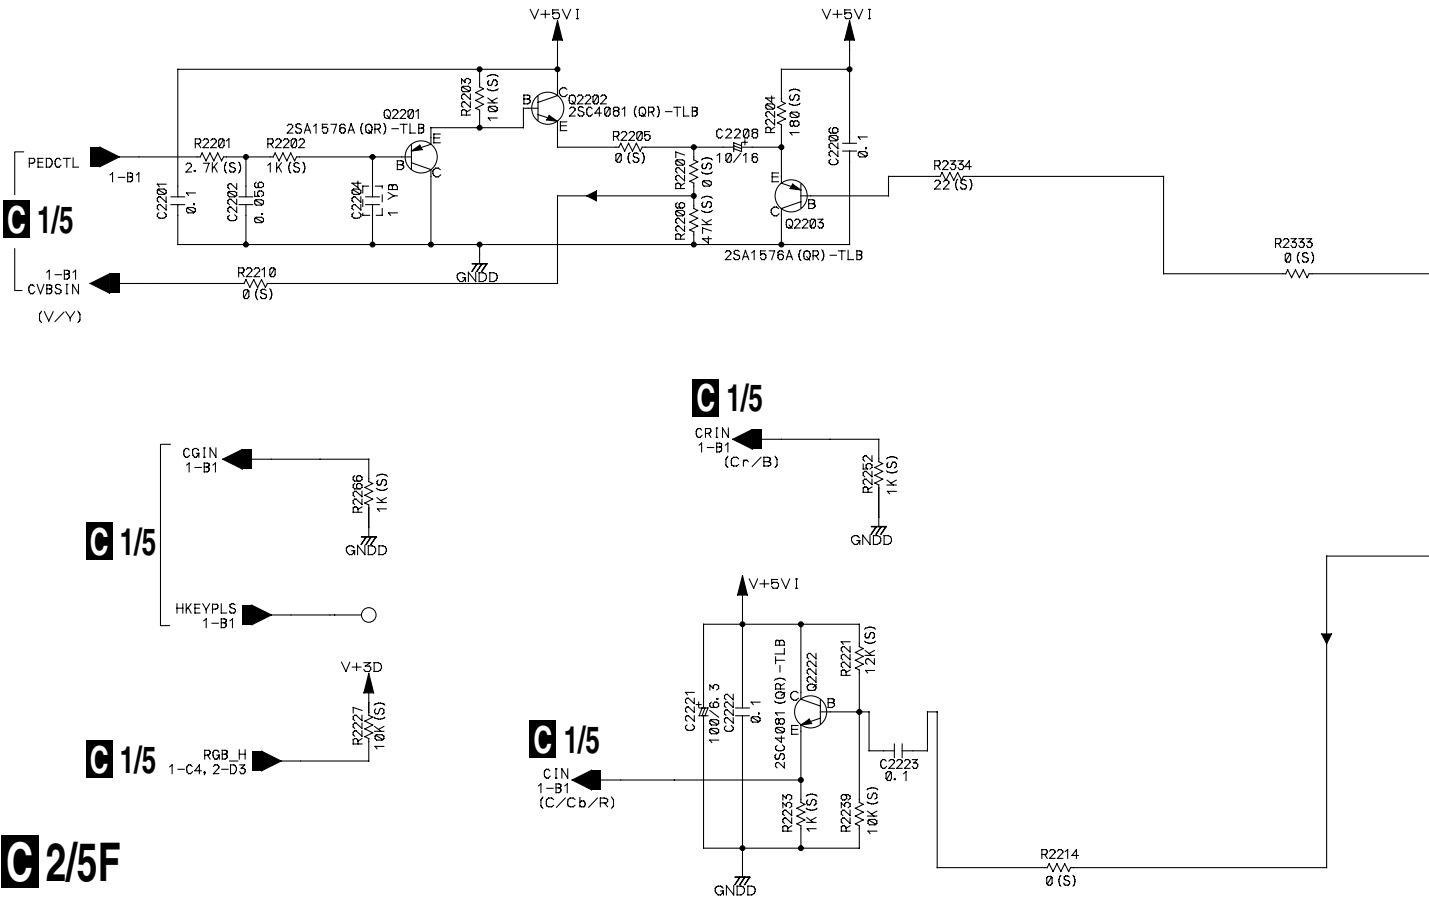



3. PCB CONNECTION DIAGRAM

3.1 JCKB ASSY

SIDE A

B F JCKB ASSY

IC651 Q708
Q711
Q173
Q172

IC701 Q171

IC202

Q702
Q201
Q712
Q703
Q104

IC501 Q514

Q202

IC204

Q101
Q406
Q771
Q405
Q407

Q404

IC103
IC401

Lithium
Battery

F CN1301


D CN1001

R7 DRIVE
ASSY

B F

SIDE B

B F JCKB ASSY

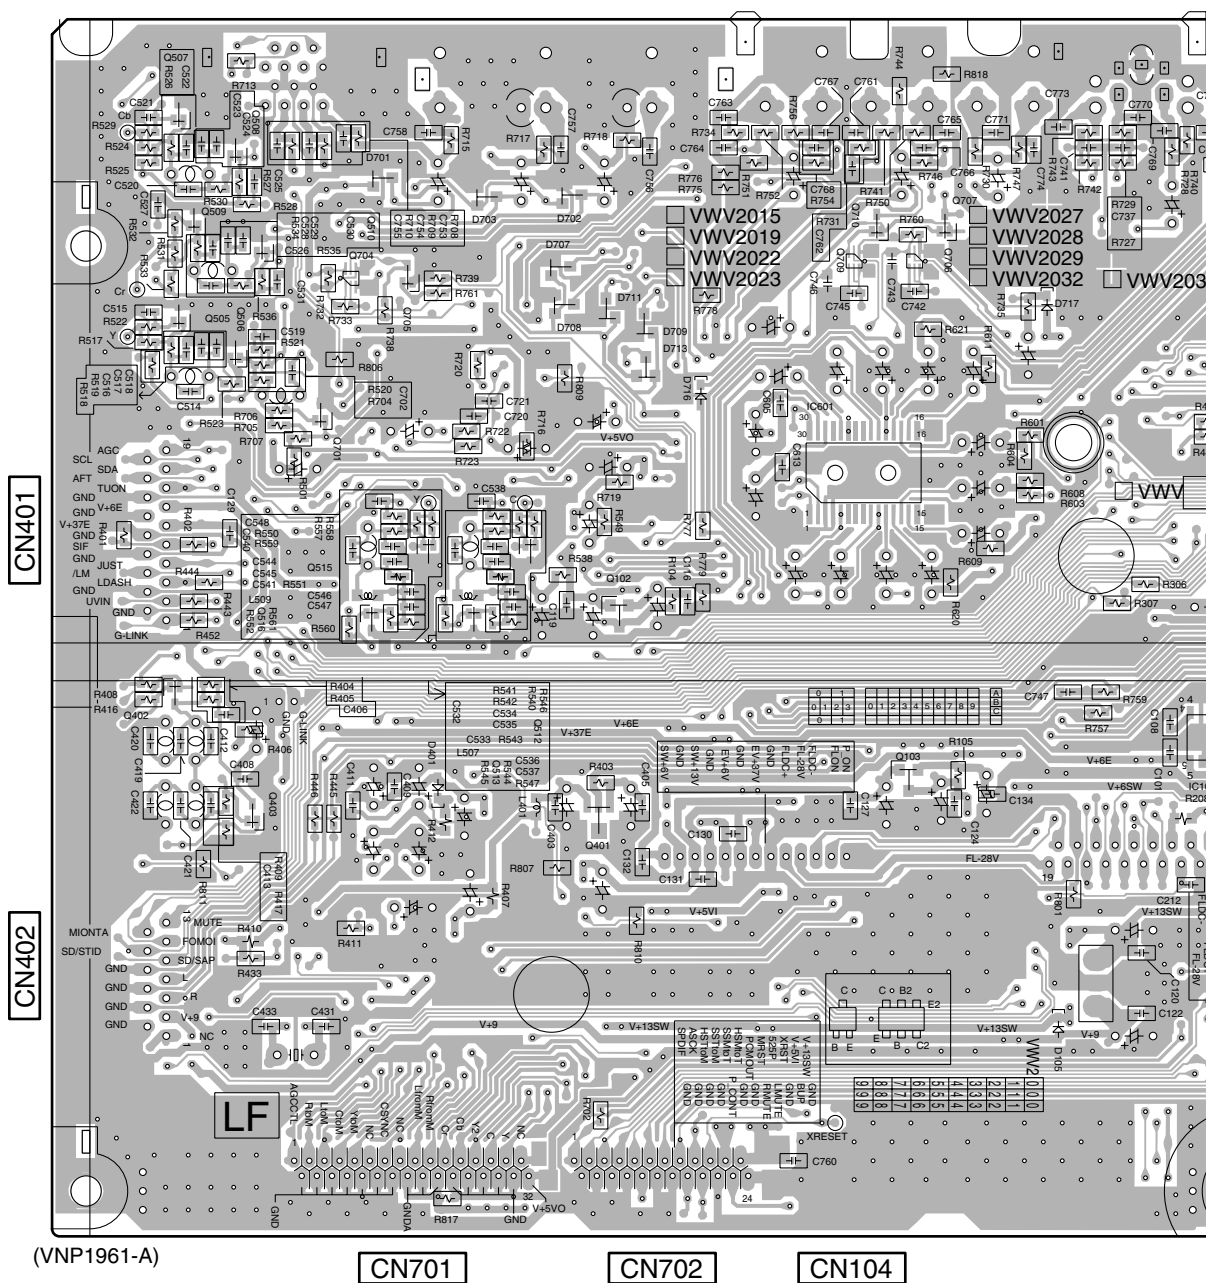

(VNP1961-A)


CN701

CN702

CN104

B F

SIDE B

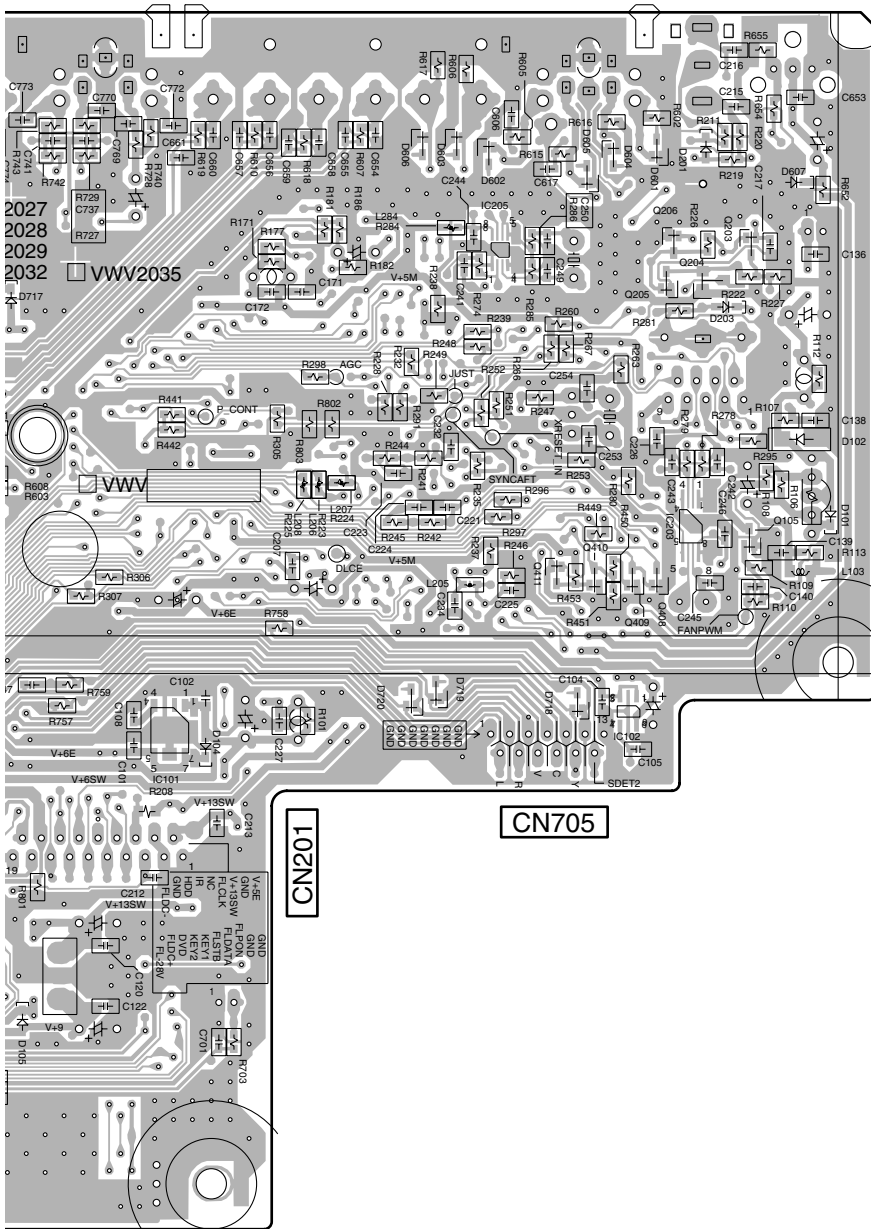

Q507	
Q508	
IC205	Q710 Q707 Q509 Q510 Q206 Q203 Q709 Q706 Q704 Q204 Q506 Q705 Q205 Q505
IC601	Q701
IC203	Q105 Q410 Q515 Q102 Q411 Q516 Q408 Q409
Q402 Q512	
IC102	Q513 Q103
IC101	Q403
Q401	

4. MODEL SETTING

• The Setup is Necessary When :

- When the MAIN Assy is replaced
- When the JCKB Assy is replaced
- When the MAIN Assy and JCKB Assy are replaced

Note : Make sure of setting the correct number.

• How to Setup the Model

- After power on, the following screen is displayed on TV monitor.
Press " 42 " by using the remote control unit for service(GGF1381).

[Recorder 's Model Setting]
Input the number by using the remote for Service.

> --

Input No. Model

[42 : DVR-520H]

[44 : DVR-720H]

Note : For 720H types, press " 44 ".

- After 1), the following screen is displayed on TV monitor.
Press " 053 " by using the remote control unit for service.

[Recorder 's Type Setting]
Input the number by using the remote for Service.

> --- (Type -- , Region No. -)

Input No. Type

[05 : RLT <Singapore>]

[06 : YPW <Australia>]

The setting complete when OSD is disappeared.

- Unplug the power cable.
- Reset the recorder to all its factory settings.
 - Make sure that the recorder is on.
 - Press and hold [STOP] and press [STANDBY/ON] key on the front panel.
The recorder turns off with all settings reset.
- Enter the Service Mode and then confirm the Model Name " DVR-520H/RLT ".
 - Make sure that the recorder is on.
 - Press [ESC] then [DISP] keys by using the remote control unit for Service.

DVR-520H/RLT

VERSION : 4.**

SYSCON : RELEASE_131

Rev :1.5036

\$

TUFLCON : 4.04 MASK OK

DRIVE : DVD-RW DVR-107X OK

1.13W OK

CKT0000353WL OK

HDD : ST380012ACE 80

DEVICE : PRISM-PLUS

REGION : 3

C : * * * * *

FLASH : 64M

- Escape the Service Mode. Press [ESC].
- Download the latest firmware.
At last, the download is necessary to update the firmware of each ASSY.
Refer to "7.1.3 DOWNLOAD METHOD" of RRV2979 on page 82.

Notes :

- After the setting complete, you can NOT CLEAR the setting data.
Make sure the pressing number.
- " NG " is appeared on TV when unsuitable number is pressed.
In such a case, please unplug the power cable and plug it again. Then restart the model setting.