



This manual is for reference and historical purposes, all rights reserved.

This page is copyright© by M. Butkus, NJ.

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.

This will allow me to continue to buy new manuals and pay their shipping costs.

It'll make you feel better, won't it?

**If you use Pay Pal or wish to use your credit card,
click on the secure site on my main page.**

PayPal Name Lynn@butkus.org

Amphoto Pocket Companion

N

Ni

NIK

NIKO

NIKON

NIKON

F3

Milton Heiberg

Amphoto Pocket Companion

N
NI
NIK
NIKO
NIKON
NIKON
F3

Milton Heiberg

AMPHOTO

American Photographic Book Publishing
An Imprint of Watson-Guption Publications
1515 Broadway, New York, N.Y. 10036

CONTENTS

PART ONE: THE CAMERA

NIKON F3

Introduction	10
PARTS NOMENCLATURE	12
Basic Operation	16
LOADING FILM	16
SETTING ASA FILM SPEED	18
MAKING EXPOSURES	20
CHANGING LENSES	21
Detailed Instructions	22
BATTERIES	22
FILM PLANE INDICATOR	24
FILM ADVANCE LEVER	24
FRAME COUNTER	25
REWINDING FILM	26
SETTING THE APERTURE	27
SETTING THE SHUTTER SPEED	30
LCD DISPLAY WINDOW	33
VIEWFINDER ILLUMINATOR	37
BACK-UP MECHANICAL RELEASE LEVER	37
METERING EXPOSURE	38
EXPOSURE MEMORY LOCK BUTTON	44
USING THE MANUAL MODE	45
DEPTH-OF-FIELD SCALE	46
FOCUSING	46
INFRARED FOCUSING	49
FOCUSING SCREENS	50

EYEPiece SHUTTER	50
MULTIPLE EXPOSURE LEVER	53
CHANGING LENSES	54
SELF-TIMER	54
MIRROR LOCK-UP LEVER	56
ACCESSORY SHOE	56
SYNC TERMINAL	58
FILM MEMO HOLDER	59
CAMERA CARE	60
Accessories	62
MD-4 MOTOR DRIVE	62
BASIC OPERATIONS OF THE MD-4	62
SB-12 SPEEDLIGHT	70
BASIC OPERATION OF THE SB-12	71
FINDERS	78

PART TWO:

GENERAL PHOTOGRAPHIC TECHNIQUES

Introduction	82
Lenses and their Uses	82
LENS CHARACTERISTICS	82
Focal length. Speed. Depth of field. Perspective distortion.	
NORMAL LENSES	85
WIDE-ANGLE LENSES	87
TELEPHOTO LENSES	87
ZOOM LENSES	89

Films and Filters	90
FILM CHARACTERISTICS	90
Speed. Grain. Contrast. Color	
Balance. Reversal and negative	
films. Latitude.	
SLOW FILMS	92
MEDIUM-SPEED FILMS	92
HIGH-SPEED FILMS	92
SPECIAL-PURPOSE FILMS	93
Kodak High-Contrast Copy Film.	
Kodak Direct Positive	
Panchromatic Film. Kodak High	
Speed Infrared Film. Kodak	
Ektachrome Infrared Film.	
Eastman 5247. Kodak	
Ektachrome Slide Duplicating	
Film.	
FILTER SYSTEMS	94
FILTERS FOR BLACK-AND-WHITE	
FILMS	94
FILTERS FOR COLOR FILMS	96
Color-conversion filters. Light-	
balancing filters. Color-	
compensating filters.	
FILTERS FOR BOTH COLOR AND	
BLACK-AND-WHITE FILMS	98
Polarizer. Neutral-density filters.	
Haze, UV, and skylight filters.	
EXPOSURE CALCULATION WITH	
FILTERS	99
 Electronic Flash Photography	100
DETERMINING EXPOSURE	100
AUTOMATIC FLASH	101
MANUAL FLASH	101
BOUNCE FLASH	102
FILL-IN FLASH	103

Exposure Guide	105
THE EXPOSURE METER	105
METERING FOR COLOR FILM	107
METERING FOR BLACK-AND-WHITE FILM	108
EXPOSURE WITHOUT A METER	109
AVAILABLE-LIGHT EXPOSURE	109
REFLECTORS	109
PUSH-PROCESSING	111

PART ONE

THE CAMERA


THE NIKON F3

Introduction

The Nikon F3 is a 35 mm, single-lens-reflex camera, with both manual and automatic-exposure capability. The F3 is a professional camera at the heart of an extensive system of lenses and accessories. The F3 features an electronic shutter, exposure metering directly from the film plane, and energy saving features for longer battery life.

Central to the design of the Nikon F3 is flexibility. The F3 can be used with four different viewfinders, twenty different focusing screens, a six-frame-per-second motor drive, and electronic flash units that automatically synchronize with the through-the-lens



www.butkus.us

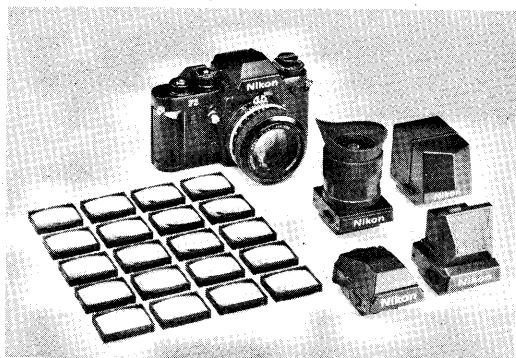

The Nikon F3 is a 35 mm, single-lens-reflex camera, with both manual and automatic exposure capability. It is the first automatic exposure camera with interchangeable finders and focusing screens.



exposure metering system. Since the metering system is contained in the body of the F3, any Nikon viewfinder can be used without losing metering capability. Other accessories designed for the F3 are Nikon Intervalometers, several camera backs, various remote-control units, and nearly 70 Nikon lenses, ranging from 6 mm to 2000 mm.



Following in the tradition of the Nikon F and F2, the Nikon F3 is designed to provide unparalleled quality, flexibility, and ruggedness. It is a camera capable of being modified to meet *any* photographic situation.

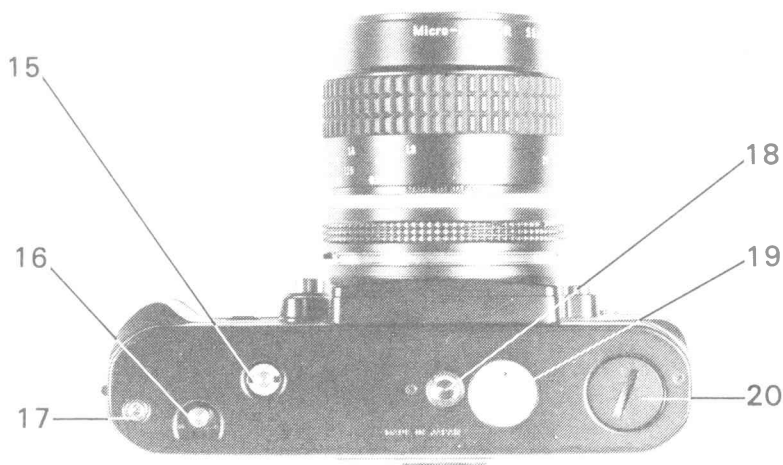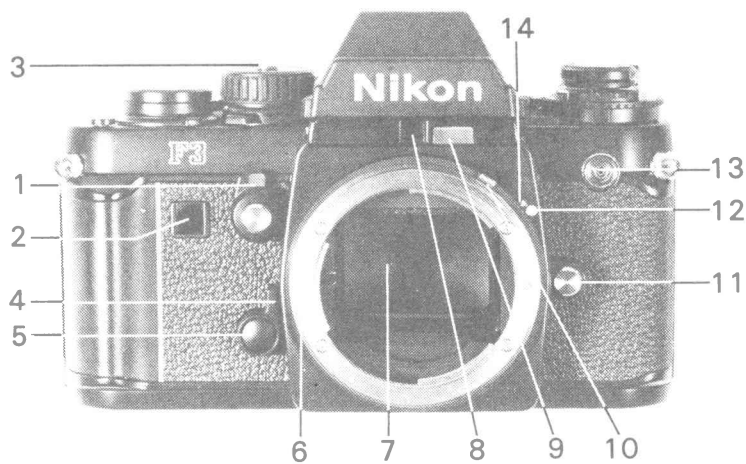

NIKON F3—PARTS NOMENCLATURE

- 1. Mirror lockup lever**
- 2. Self-timer LED**
- 3. Shutter-speed dial locking button**
- 4. Backup mechanical release lever**
- 5. Exposure memory lock button**
- 6. Lens mounting flange**
- 7. Reflex mirror**
- 8. ADR window**
- 9. Viewfinder illuminator**
- 10. Meter coupling lever**
- 11. Lens release button**
- 12. Lens mounting index**
- 13. Flash sync. terminal**
- 14. Meter coupling lever release button**
- 15. Motor drive coupling**
- 16. Film rewind button**
- 17. Motor drive positioning hole**
- 18. Tripod/motor drive coupling socket**
- 19. Battery chamber lid**
- 20. Motor drive coupling cover**

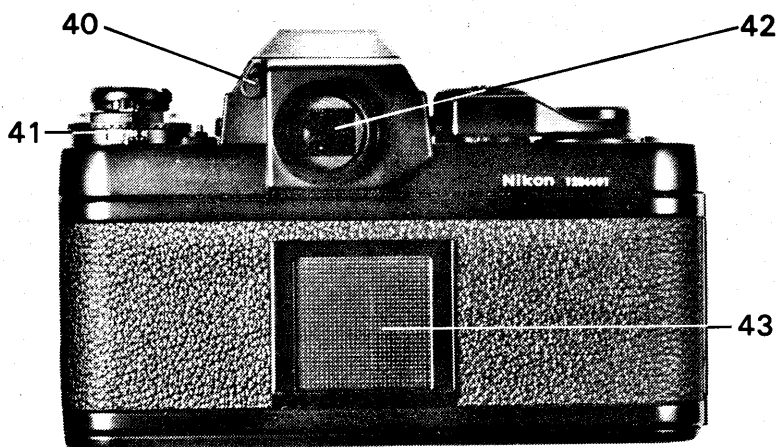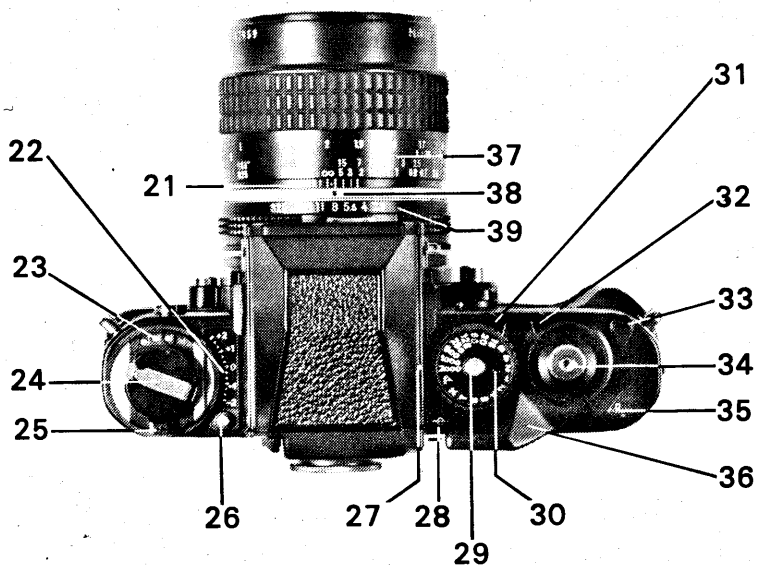

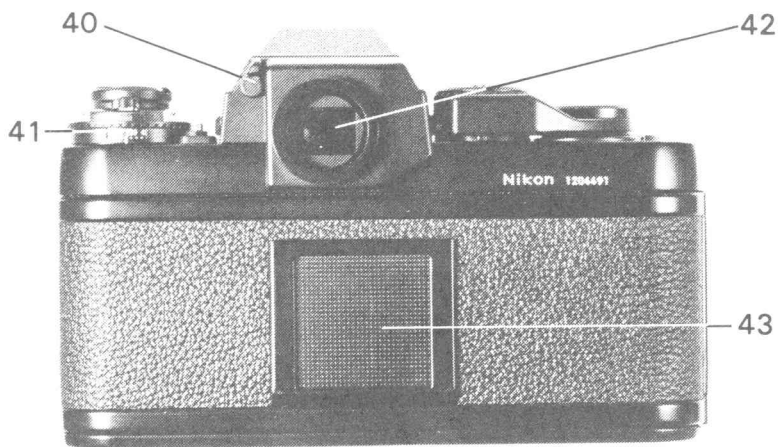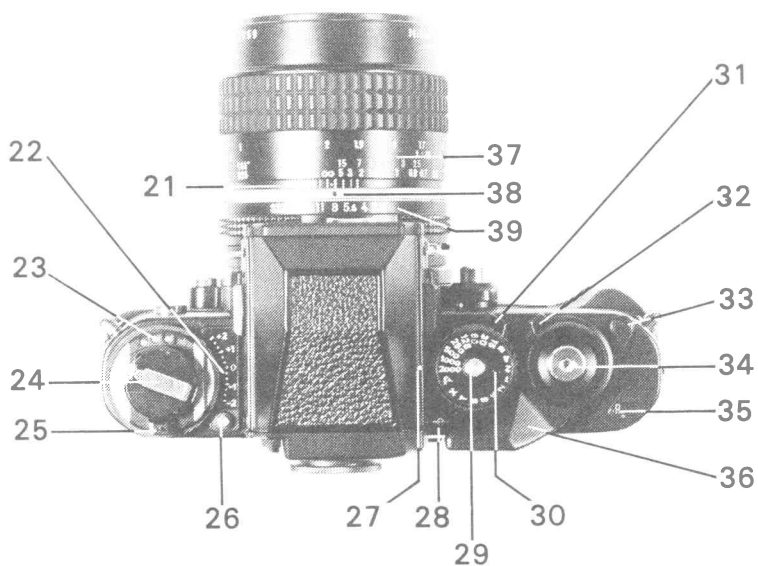


21. Depth-of-field indicators
22. Exposure compensation scale
23. Hot-shoe contacts
24. Film rewind crank
25. Camera back lock lever
26. Exposure compensation locking button
27. Shutter speed index
28. Film plane indicator
29. Shutter speed dial
30. Shutter-speed scale
31. Self-timer lever
32. Power switch
33. Multiple exposure lever
34. Shutter release button
35. Frame counter
36. Film advance lever
37. Distance scale
38. Aperture/focusing index
39. Aperture ring
40. Eyepiece shutter lever
41. ASA film speed scale
42. Viewfinder eyepiece
43. Memo holder


Basic Operation of the Nikon F3

LOADING FILM


Open the camera back by first sliding the safety-lock lever toward the rear of the camera, then lifting the film-rewind knob until the back swings open. Insert a 35 mm film cassette into the film chamber. Push down the rewind knob, twisting it slightly to properly engage it with the cassette. Insert the film leader into a slot on the camera's take-up spool. Turn the take-up spool's wheel (on the lower end of the spool) to the left until the film leader is firmly and completely wrapped around the take-up spool making sure that the film perforations are properly engaged with both the top, and bottom, sprockets on the take-up spool. With the cartridge properly seated and the film straight, close the back of the camera. Alternately stroke the film-advance lever and release the shutter two or three times, until the film counter indicates the first frame is reached. Turn the rewind knob to take up any slack in the film. When the end of the roll of film is reached you must rewind the film. First depress the rewind button on the bottom of the camera. Pull out the rewind crank and turn it clockwise until you feel no more tension on the crank.

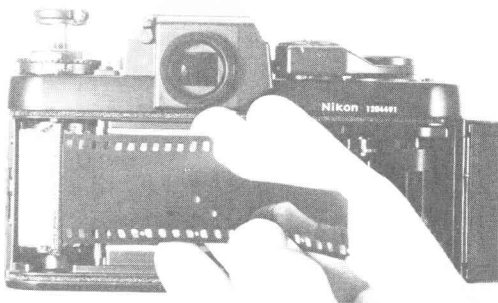

Place the film cartridge into the camera with the film leader facing to the right.

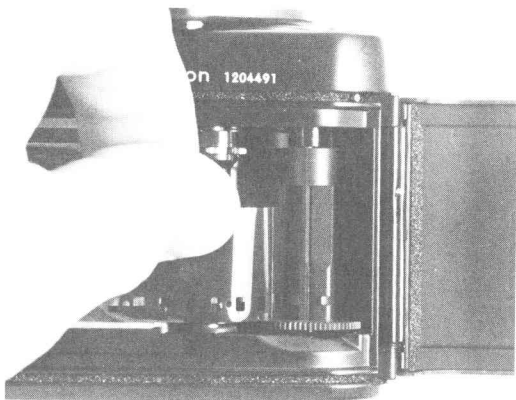

Insert the film leader into the take-up spool.

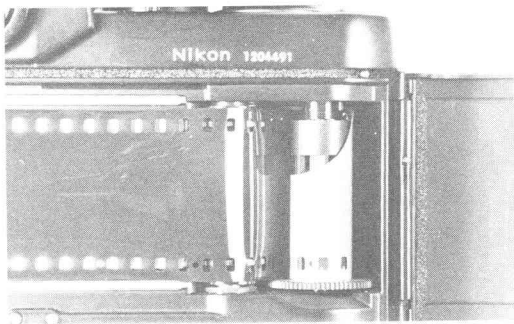


Turn the take-up spool until both the top and bottom sprocket wheels are properly engaged with the film perforations.


SETTING ASA FILM SPEED

To set the ASA, lift the outer collar of the ASA film-speed dial and rotate it until the ASA value of the film you are using is aligned with the white index mark.

First turn on the power switch then, check the batteries by slightly depressing the shutter release button. If the batteries are good the liquid crystal display (LCD) in the viewfinder will display the shutter speed. If it does not come on, batteries should be replaced.

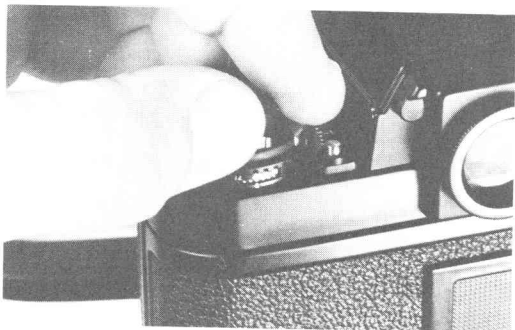

To set the ASA film speed, lift the outer collar of the film speed dial and rotate it until the proper ASA number is opposite the white index mark.

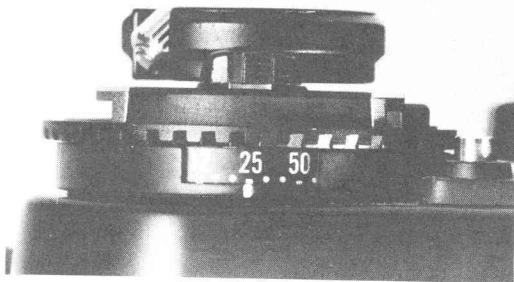

Once the ASA is set, release the film speed dial and the appropriate setting is locked into place.

www.butkus.us

MAKING EXPOSURES


Take a picture by following these steps:

To set the camera for automatic operation, turn the shutter speed dial clockwise until the green "A" is aligned with the white mark on the prism housing.

Set aperture ring on lens to the desired f -stop.

As you look through the viewfinder, slightly depress the shutter release button so the LCD will display the

To test the batteries, turn the power on and lightly press the shutter-release button half way down. If the batteries are OK, the LCD will display the shutter speed.

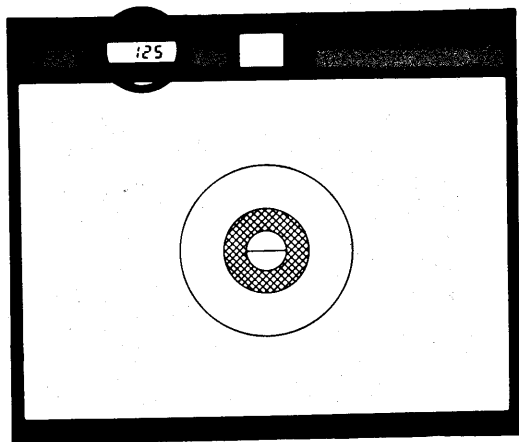

shutter speed. The LCD will stay on for 16 seconds. If the shutter speed is too fast or too slow, turn the aperture ring to adjust. For hand-held photography, begin with a shutter speed of 1/125 sec.

Now focus by turning the focusing ring on the lens until the image appears sharp.

CHANGING LENSES

To remove a lens, press the lens-release button on the camera body located to the right of the lens housing and while firmly gripping both the lens and the camera body, turn the lens clockwise approximately 60 degrees until it comes off.

To mount a lens, place the lens on the lens mounting flange of the camera body. Align the black reference dot (or aperture/focusing index) on the lens mounting ring with the white dot (lens-mounting index) on the lens-mount housing of the camera body. When firmly seated, turn lens counterclockwise until it clicks into position.

When storing spare lenses, keep the front and back lens caps on. When carrying a camera body without a lens mounted, always protect the mirror mechanisms with a body cap.


Detailed Operation of the Nikon F3

BATTERIES

The normal operation of the Nikon F3 is entirely dependent on electrical power. With normal usage, a pair of 1.5-volt, silver-oxide, batteries (Eveready EPX76 or equivalent) will last up to one year.

To insert batteries, remove the battery-chamber lid by turning it counterclockwise with a coin. The lid has two extensions that hold the batteries in position. Place two 1.5-volt, silver-oxide, batteries into the lid so the negative side of the battery faces the lid, and the plus sign faces out. Replace clip, and lid, and tighten with a coin.

To test the batteries, turn on the power switch by pushing it to the right (facing away from the camera) so the red dot is showing. Then slightly press the shutter-release button only half way down. The exposure meter is activated by this procedure. If the batteries are good, the liquid crystal display (LCD) will illustrate the shutter speed in the top left window inside the viewfinder. The LCD remains on for 16 seconds and then goes off automatically to preserve power. If the batteries are too weak, or improperly installed, the LCD does not operate.

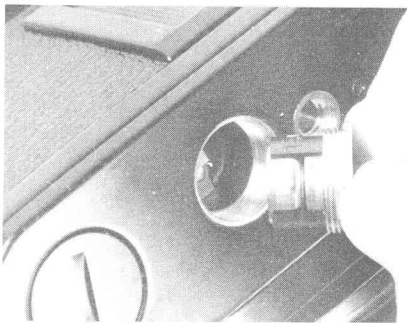

The batteries of the Nikon F3 are located in the battery chamber in the base of the camera.



The battery-chamber lid has a clip that holds batteries in place for easy installation.

www.galileo.us


The Nikon F3 has a back-up mechanical release lever if batteries fail. By pulling out the back-up mechanical release lever part way, it becomes accessible to your fingertip. When pushed completely down it releases the shutter mechanically at a speed of 1/60 sec. The back-up mechanical release lever operates in this manner when the shutter speed dial is on any setting except "T". If the back-up lever is tripped when the dial is set on "T", the shutter will open and remain open, until the dial is moved to another setting.

FILM-PLANE INDICATOR

The white engraved mark on the top of the camera body (see accompanying illustration) represents the exact location of the film plane inside the camera. In specialized areas of photography, such as macrophotography, it is necessary to measure the exact distance between the film plane and the subject. In such instances, this would be the point from which to measure. The distance between the film plane and the front surface of the lens-mount flange is exactly 46.5 mm.

FILM ADVANCE LEVER

The film advance lever on the Nikon F3 is designed for quick accessibility and operation. One stroke advances the film one complete frame. When released, it automatically springs back to its normal rest position. If the lever is not given one complete stroke, the film

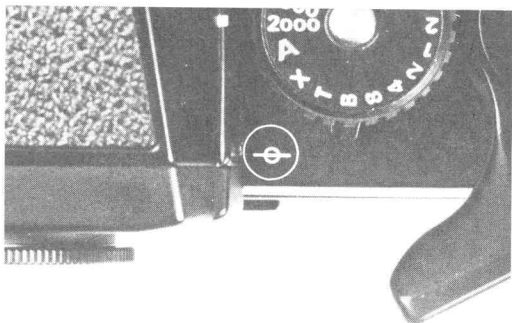


The film plane indicator shows the exact location of the film inside the camera. Precise measurements of subject-to-film distance are made from this mark.

may be advanced with several short strokes; but once the film is advanced completely, the mechanism locks. At this point the lever may be pulled out only thirty degrees from its closed position. This is a handy "ready" position when making quick sequential exposures. A complete stroke of the advance lever measures 170 degrees; 30 degrees for the handy pull-out, plus 140 degrees for a complete advance cycle.

FRAME COUNTER

The frame counter keeps track of the number of pictures taken on a roll of film. It has white marks at 12, 20, 24, and 36 for most packaged films, and blue

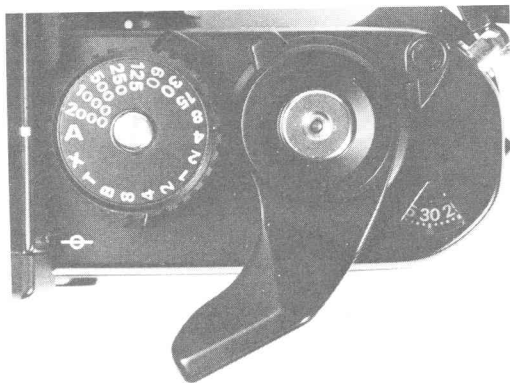


The film advance lever may be pulled out thirty degrees to a "ready" position. From this point, a single stroke of 140 degrees will advance the film completely to the next frame.

numerals for every five frames (5, 10, 15, etc.). It is graduated from two frames below zero to forty (four frames beyond the traditional thirty six). This is especially helpful for photographers who bulk load film.

REWINDING FILM

When a roll of film has been completely exposed, the advance lever will stop in mid-cycle. To rewind exposed film, press the film-rewind button on the bottom of the camera. This releases the film sprocket drive and allows the film to be rewound. Fold out the

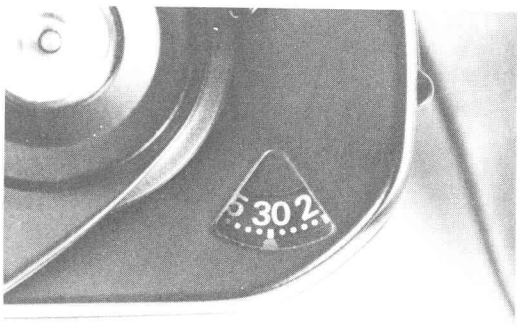

The frame counter of the Nikon F3 is located to the right of the film advance lever.

rewind crank and turn it clockwise as its arrow indicates. Keep turning until there is no longer any tension from the film (the rewind crank will turn more freely) and the end of the leader will snap back into the cassette. Open the camera back by pushing the camera back lock lever to the right while lifting the rewind knob. The camera back then pops open. Loading and unloading of film should always be done out of direct sunlight.


SETTING THE APERTURE

The aperture ring on most Nikkor lenses is the lens ring closest to the camera body. Turning it opens and closes the diaphragm inside the lens to the desired f -

stop. When turned to a higher number the diaphragm is closed to a smaller aperture, thus letting less light through the lens.


Most Nikkor lenses are automatic. This means that they remain at the largest aperture until the shutter-release button is pressed. Once the shutter-release button is pressed, the aperture automatically closes down to the selected f -stop.

To rewind the film when you have completed the roll, first press the rewind button on the bottom of the camera.

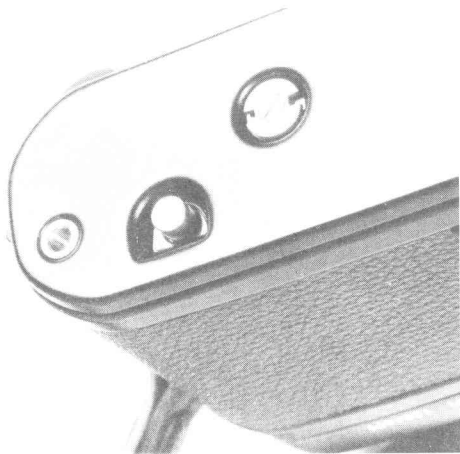



Once the rewind button has been pressed, fold out the rewind crank and turn it clockwise until all the film has been rewound. Then open the back of the camera by pushing the lock lever to the right and pulling up on the rewind crank.

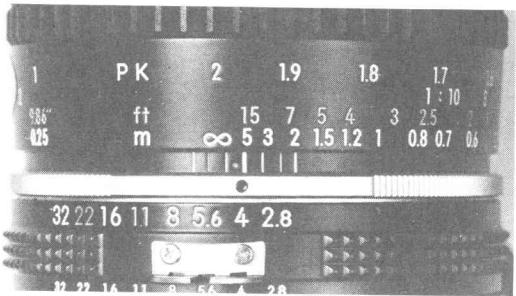

Set the aperture by turning the aperture ring until the desired f -number is opposite the index mark.

www.butkus.us

1000

5.6

When using an AI Nikkor lens, the selected f -stop is displayed in the viewfinder to the right of the shutter speed.

Setting the aperture may be done by turning the aperture ring so the desired f -stop is aligned with the black aperture/focusing index reference dot on the lens' mounting ring. The aperture can also be set while looking in the viewfinder. Just turn the aperture ring until the desired f -stop appears in the aperture window.

Older non-AI Nikkor lenses will not display the f -stop in the aperture window of the viewfinder.

SETTING THE SHUTTER SPEED

The Nikon F3 features an electronically controlled, quartz-timed shutter made of quilted titanium foil. This focal plane shutter moves horizontally and has speeds from 8 to 1/2000 sec. It also has settings for "T", "B" and "X" (1/80 sec.), plus an electronic self-timer.

The shutter-speed dial is on the right side of the prism housing. To set the shutter speed, rotate the dial and line up the desired shutter speed with the white shutter-speed index mark on the right side of the prism


housing. The dial has two "lock" positions: the "A" (automatic) setting, and the "X" (1/80 sec. flash sync) setting.

If either of these settings come into position while rotating the dial, it automatically locks itself in position. To rotate the dial out of that position, depress the button in the center of the dial and rotate the dial away from the lock position. The dial moves freely with soft clicks across all other settings.

The shutter-speed dial is color coded for quick identification of various shutter speeds. The "A" is green, speeds of one full second or slower are orange and fractional speeds are displayed in white without numerators. There is one exception. The speed of 1/60 sec. is in red as a reminder that this is the fastest manual-exposure shutter speed to be used with flash synchronization (besides the "X" sync setting).

When the dial is set on "A," the camera is in the automatic exposure mode. In automatic the shutter speed is completely governed by the metering system. Once the exposure range is established a change in shutter speed is accomplished by turning the aperture ring. The shutter-speed dial, through most picture taking, will be left alone. Therefore, an unintentional shift must be prevented and the lock position at this setting is essential.

For similar reasons the "X" setting is a locked position. When taking pictures using electronic flash, the shutter speed dial cannot shift accidentally out of the synchronized position. This setting fires the shutter at 1/80 sec.

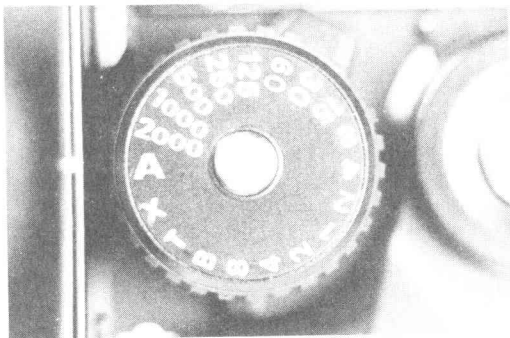

The shutter speed dial has two lock positions: "A" and "X." To unlock the dial from these positions, press the release button in the center of the dial.

The "B" setting is for timed exposures. This setting is usually used with a tripod and a cable release. The shutter remains open for as long as the button on the cable release is held. The shutter closes with the release of the button.

The "T" setting is also for timed exposures, except that once the shutter-release button is pressed, the shutter remains open after the button is let go. In this setting, the shutter remains open until the shutter-speed dial is moved to another position.

There are two situations where the shutter-speed dial is bypassed in favor of other priorities.

The first is when a fresh roll of film is loaded into the camera. The shutter speed is automatically set at 1/80 sec. for the first few frames when the shutter speed dial is set on any of the following settings: "A", "X", or 1/125 through 1/2000 sec. When the frame counter indicates the first frame has been reached, the shutter speed returns to its actual setting.

The second situation occurs when the SB-12 or SB-11 flash units are used with the Nikon F3. In this event the shutter speed is automatically set at 1/80 sec. except when manual settings of 1/30 sec. and slower are used. This feature prevents accidental release of the shutter at the wrong shutter speed (since the SB-12 and SB-11 actually set the shutter speed of the camera) and allows the flash to be used as a fill-in outdoors with a shutter speed of 1/60 sec. or less.

LCD DISPLAY WINDOW

When the shutter speed dial is set for the automatic mode, the LCD window displays the approximate shutter speed at which the picture will be taken. In this mode, the shutter speed is completely governed by the automatic-exposure metering system. The system provides stepless shutter speeds from 8 sec. to 1/2000 sec. If a given lighting situation demands an actual shutter speed of 1/463 or 2-1/2 sec., then that's what the shutter speed will be.

To avoid confusion the LED window displays one of the closest commonly recognized shutter speeds: 8, 4, 2, 1, 1/2, 1/4, 1/8, 1/15, 1/30, 1/60, 1/125, 1/250, 1/500, 1/1000, or 1/2000 sec.

www.butkus.us

In addition, each time a new number appears on the LCD, it remains for 1/2 sec. before a shift in light may change it. If it were not for this feature even the slightest change in light would cause the LCD to flicker, making the numbers too difficult to read.

In the automatic mode the LCD displays only the denominator of the fraction of a second. For example, 1/250 sec. reads 250 and 1/2 sec. reads 2.

When the light level decreases to the point where the meter demands one full second shutter speed or more, the LCD displays that number with a dash to the right of it. This dash distinguishes a whole number from a fraction.

If the light level drops below the eight second range of the automatic metering system a minus sign appears to the left of the numeral 8. This indicates there is not enough light to take a picture at the present aperture. When this occurs there are four alternatives: make the aperture larger, shoot a timed exposure, or use a faster film or ASA rating.

If the LCD shows the numeral eight with a minus sign to the right of it, there is not enough light to make a correct exposure at the shutter speed you have selected.



If the light entering the automatic metering system requires a shutter speed beyond the 1/2000 sec. range of the LCD, (1/2000 sec. is the maximum shutter speed) a plus sign appears to the left of the numeral 2000. A smaller aperture, slower film, or neutral-density filter must be used to compensate for the light. (see the section on Neutral-density filters). In the manual mode, the LCD window in the viewfinder displays an "M" to the left of the number of the set shutter speed.

When using manually controlled shutter speeds from 8 sec. to 1/2000 sec. the LCD displays a plus or minus sign (or both) just above the letter "M". This is to indicate an under or overexposure.

For example, if the LCD is displaying a minus sign the picture will be underexposed. Either the shutter speed should be decreased or the aperture made larger. If a plus sign should appear, the picture will be overexposed.

In either case, manipulation of shutter speed and/or aperture must be done until both the plus and minus signs appear together. Then the camera is set for a correct exposure. To operate the camera in the manual mode, see the section on manual metering.

Avoid storing the Nikon F3 in a hot place such as a trunk or glove compartment of a car because the LCD is sensitive to heat, and at temperatures of 60 degrees C (140 degrees F) the whole surface of the LCD turns black and is temporarily unusable. This condition disappears as the temperature drops to normal and has no effect on the actual function of the F3. Storage of



Overexposed -



Underexposed



Correctly exposed

In the manual mode a small "m" appears to the left of the shutter speed. Overexposure is indicated by a "+" sign; underexposure is indicated by a "-" sign; and correct exposure is indicated by a "- +" sign.

the camera in heat such as this, however, may shorten the life of the LCD. Temperatures below freezing increases the viscosity of the liquid crystal, making its response sluggish. But again this situation returns to normal as the temperature rises.

The LCD may deteriorate over a period of six or seven years. It can lose contrast and become difficult to see. When this happens see your camera dealer or nearest Nikon service office for a replacement element.


VIEWFINDER ILLUMINATOR

In low light situations it becomes difficult to see the LCD and aperture windows inside the viewfinder. A small red button on the far right corner of the prism housing (from behind the camera) when pressed, illuminates these two windows with a small "grain-of-wheat" lamp, providing a very dim but sufficient light.

BACK-UP MECHANICAL RELEASE LEVER

The Nikon F3 has an emergency provision for a mechanical shutter release if the batteries should fail. This back-up mechanical shutter-release lever is at the lower left side of the lens-mount housing.

In low light situations the LCD becomes difficult to read. To illuminate the display, press the viewfinder-illuminator button on the corner of the prism housing.

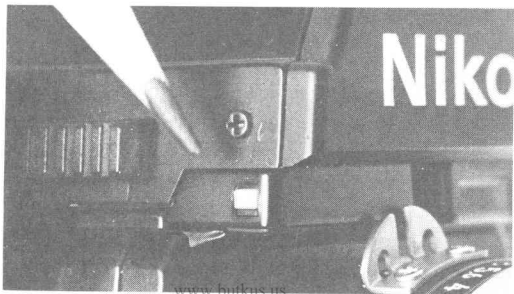

www.butkus.us

To use it, pull it part way out from the wall of the lens-mount housing so it is accessible. By pressing it, a 1/60 sec. shutter speed is achieved. A hand meter or educated guess determines the aperture setting. When the shutter speed dial is set on the "T" position it will allow timed exposures.


Note: If the film is advanced while the back-up mechanical release lever is being held down, the shutter will release immediately when the film advance cycle is completed, thus wasting one frame. Also, if the film is advanced incompletely and the back-up lever is used to release the shutter, the mirror will go up and remain in the "up" position until the advance lever cycle is completed. This too will waste one frame.

METERING EXPOSURE

The Nikon F3's automatic-exposure metering system is aperture preferred. You set the aperture and the metering system sets the correct shutter speed.

Before using the metering system, make sure the ASA rating of the film being used is set correctly on the ASA dial. Then, turn on the meter switch found at the base of the advance lever/shutter-release button. This is accomplished by pushing it to the right so the red dot is showing. This turns on both the metering system and the electromagnetic shutter-release button. When in the "off" position, the shutter-release button does not operate.

Next, activate the LCD exposure readout window inside the viewfinder. To do this, press softly on the

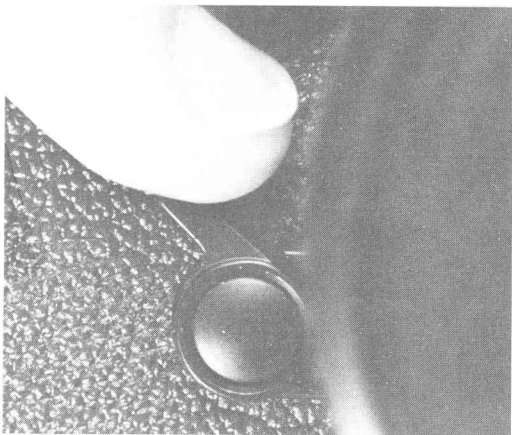

The Nikon F3 is equipped with a 1/80 sec. mechanical shutter speed in the event of a battery failure. To fire the shutter mechanically, use the mechanical shutter-release lever on the front of the camera.

shutter-release button. Be careful to press the shutter-release softly or you will trigger the shutter. The LCD will remain on for 16 seconds after your finger is removed from the button.

Each time the shutter-release button is pressed while the camera is in the automatic mode, the LCD window displays the *approximate* shutter speed at which the exposure will be made. The display is the approximate as it indicates only the closest conventional shutter speed. The actual shutter speed is


www.butkus.us


determined (on a stepless scale) at the exact interval needed for a correct exposure. This shutter speed could be 1/157 sec. but the LCD would read 1/125 sec. (see section on LCD).

As the light reflected from the subject passes through the lens, 92 percent of that light is transferred to the focusing screen with a reflex mirror. The other eight percent of the light is transmitted through the mirror via 50,000 minute elliptical holes (see accompanying illustration) to a second mirror hinged to the back of the main reflex mirror.

This secondary mirror is ribbed in several curved directions to diffuse light. It reflects the light onto a single SPD (Silicon photo diode) cell at the bottom of the mirror box. The instant the shutter is released the

The Nikon F3 meters the exposure by allowing light to pass through the main mirror and on to a secondary mirror (shown here) which reflects the light on to the SPD photocell.

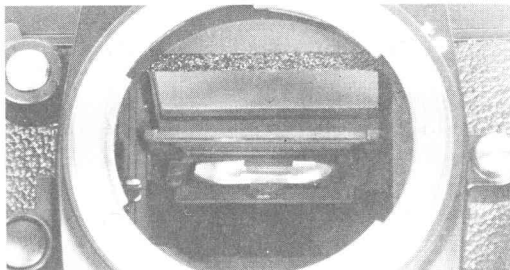

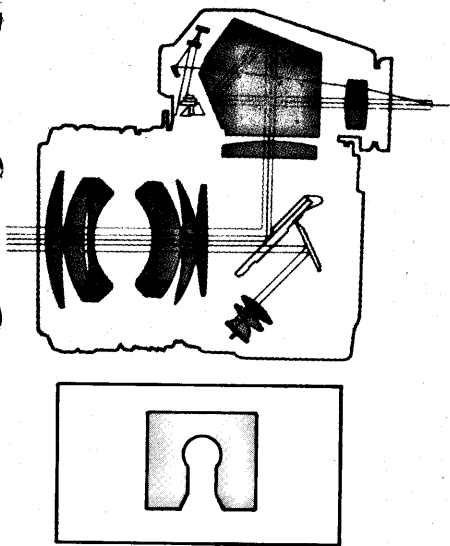


The Nikon F3 exposure metering system allows light to pass through the main mirror by means of tiny holes randomly placed in a keyhole pattern. The light passing through the mirror is reflected on to the SPD by a secondary mirror located behind the main mirror.

light being measured by this SPD cell determines the shutter speed.

The Nikon F3's metering system is center-weighted. When viewing a subject through the type "K" focusing screen supplied with the camera, the meter is 80

www.butkus.us

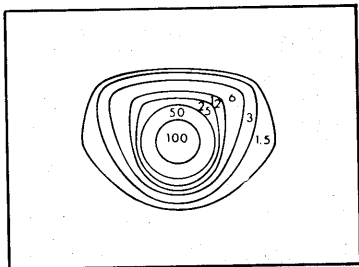


The F3 metering system is eighty percent center-weighted. The light meter concentrates primarily on the central portion of the image area. Shown here is the relative "importance" of various areas of the image to the light meter.

percent dependent on the light within the screen's larger 12 mm circle.

When the camera is set for automatic metering, depth-of-field and shutter speed are controlled by turning the aperture ring. To control depth of field, set the aperture ring on the desired f -stop. The shutter speed is automatically adjusted. If the shutter speed is too fast or slow for a particular shot, turn the aperture ring until the desired shutter speed appears in the LCD window.

The automatic-exposure meter reads all light as if it were being reflected from a standard 18 percent gray panel. It is designed to reproduce that tone on film and, for most general photography, this is desirable.

Some lighting situations however fool the automatic metering system. For example when photographing a

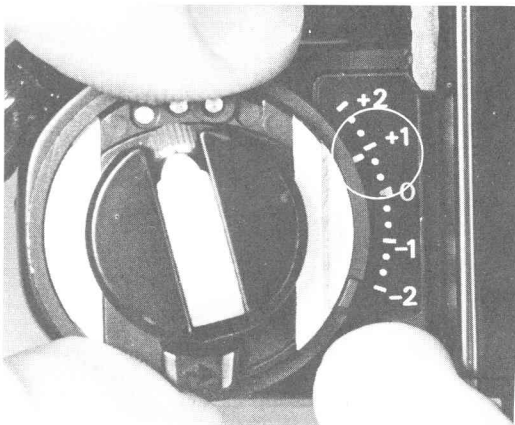

To operate the exposure compensation dial, press the lock release button and rotate the dial until the appropriate exposure compensation number is opposite the index mark.

small, light subject against a dark background, the meter will read the background. This overexposes the subject. To avoid this situation, underexpose slightly. In a situation where most of the background is light and the subject is moderately dark, overexpose slightly.

In these difficult lighting situations try to take a reading directly from the subject. (see the section on the exposure memory-lock button.) If the subject is distant, take a close-up reading from an 18 percent gray card, or from the palm of your hand. Remember the shutter speed being displayed by the LCD and return

www.butkus.us

the camera to the original field of view. Next, turn the exposure-compensation index/ASA dial until the shutter speed obtained from the close-up reading appears in the LCD window.

Exposure compensation may be used to underexpose or overexpose the photo up to two f -stops. Increments are one-third of a stop each. A lock button keeps the exposure compensation dial from accidentally slipping away from "0." To move the dial to a new position, press the lock button and rotate the dial. Be sure that the dial ring is firmly locked in position when setting it. Do not forget to return the dial to the "0" position after making a compensated exposure.


EXPOSURE MEMORY-LOCK BUTTON

The exposure memory-lock button is used to accurately expose bright or dark subjects against their opposite backgrounds.

To use the exposure memory-lock, center the subject on the larger circle of the "K" type viewfinder. Press the memory-lock button and hold it in. Recompose the scene and take the picture while the button is still depressed. The photograph will be properly exposed.

USING THE MANUAL MODE

For manual operation, move the shutter-speed dial from the "A" setting. Press the lock-release button in the center of the dial and rotate the dial to a desired

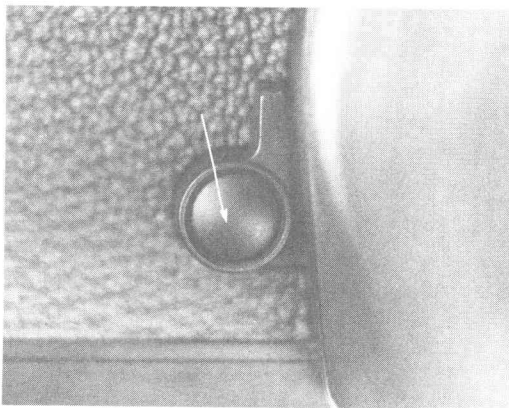


To use the exposure-memory-lock, press the exposure-memory-lock-button and keep it pressed as you recompose your photograph.

shutter speed. The LCD window in the viewfinder will display an "M" to the left of the shutter speed numerals. This indicates the camera is in the manual mode.

In all manual settings except "B" and "T" either a plus sign, minus sign, or both appear above the "M". The minus sign indicates underexposure. The plus sign indicates overexposure. A correct exposure is indicated when the plus and minus sign appear together. Use this exposure or deviate from it as you see fit.

www.butkus.us

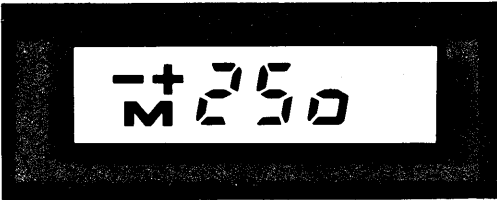

-+250
M


In the manual mode a correctly exposed photograph is indicated by a "- + " above the "m" and to the left of the selected shutter speed.

DEPTH-OF-FIELD SCALE


The depth-of-field scale is directly in front of the mounting ring on almost every Nikkor lens. The scale is usually color coded to match the color coding of the *f*-stop numbers on the aperture ring. If you want to get an indication of the depth-of-field you are working with before you make the exposure, use the depth-of-field preview. By pressing the depth-of-field button you close the diaphragm down to the pre-selected aperture. At this point, just look through the viewfinder to preview the depth-of-field.

FOCUSING

The Nikon F3 is equipped with the standard Nikon Type K focusing screen. In the center of this screen is a split-image range finder surrounded by microprism collar and fine-matte outfield.

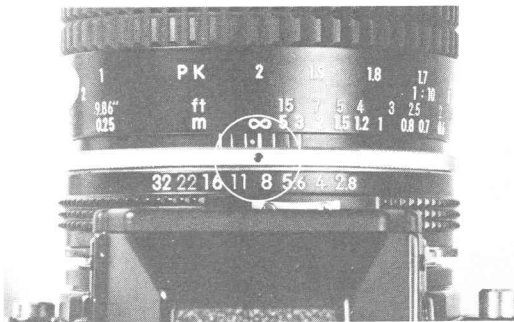

Next to the distance markings on Nikkor lenses is a color coded depth-of-field scale that indicates zones of relative sharpness given by various apertures.

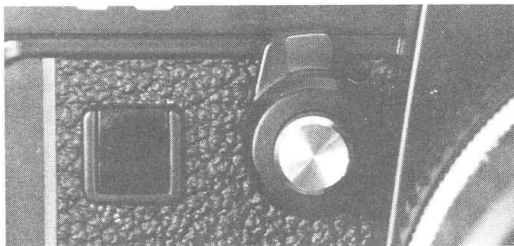


The depth-of-field preview-button allows you to visually check the depth of field by temporarily stopping down the lens aperture from the maximum aperture to the selected aperture. The image darkens in the viewfinder but the depth of field afforded by the selected aperture then becomes visible.

www.butkus.us

The split-image rangefinder is useful in most situations where the subject matter has vertical lines. Simply rotate the focusing ring until the two halves of the image coincide. The microprism collar breaks up an out of focus image so that it appears shattered until brought into focus. Both the microprism and the rangefinder may become difficult to use in low light or with lenses having small maximum apertures. In these situations, use the matte outfield of the focusing screen.

The type K focusing screen is the standard focusing screen on the Nikon F3.

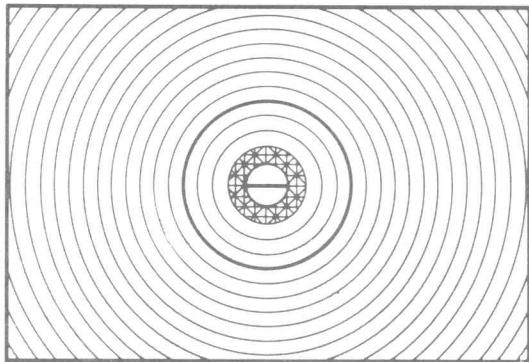

INFRARED FOCUSING

Infrared light rays focus at a point slightly in front of rays from the visible spectrum. Therefore, when using black and white infrared film a slight adjustment in focusing is necessary. A small red dot located to the left of the aperture/distance scale index (on most Nikkor lenses) is used as the focusing index for black-and-white infrared film.

First, focus normally. Then, shift the distance marking indicated by the distance scale over to the infrared focusing dot. The camera is now focused for infrared rays.

Because of the special nature of black and white infrared film, use a medium-red lens filter when taking pictures.

Infrared films require a slight adjustment of focus to provide sharp photographs. Nikkor lenses have a small infrared focusing index dot just to the left of the normal focusing index mark.



FOCUSING SCREENS


The Nikon F3 offers the photographer the option of using various focusing screens with his camera. There are twenty focusing screens available for the F3, ranging from the standard "K" screen supplied with the camera, to such screens as the type "T" that is used when preparing TV broadcasts. Like many of the accessory focusing screens designed for the F3, the type "T" has specialized markings etched into the surface to guide photographers in composing difficult shots. In the case of the type "T" a dotted line indicates standard TV screen format, while a solid outline shows a "safe action" area. Other screens, such as the type "E", for architectural photography, and the type "M", for close-up and photomicrography, are also available to the F3 photographer.

To change focusing screens, first remove the viewfinder by sliding the finder-release levers to the back of the camera and lifting the unit straight up, and off the camera. Now the focusing screen is accessible. Insert your fingernail under the rear edge of the screen and lift it out.


To install another screen, insert the front edge (the edge with the slot in the center) under the pin and push down the rear edge of the screen until it falls into place.

EYEPiece SHUTTER


The Nikon F3's standard DE-2 eye level viewfinder features an eyepiece shutter that should be used when




Type A




Type C




Type E



Type B




Type D




Type G (G₁, G₂, G₃, G₄)




Type H (H₁, H₂, H₃, H₄)




Type L




Type P




Type J



Type M




Type R



Type T



13 accessory focusing screens for the F3.


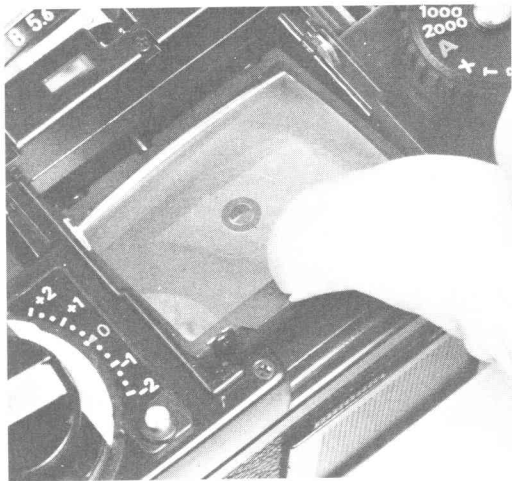



To remove a focusing screen, remove the prism housing, and place your fingernail under the back edge of the screen and lift it out.

it is impossible to keep your eye at the viewfinder (such as when the self-timer is in use). This shutter prevents stray light from entering the eyepiece and affecting the automatic exposure meter reading.


To use the eyepiece shutter, push the small lever, located to the left of the eyepiece, to the left. The eyepiece appears red, to signal that the eyepiece shutter is in use.

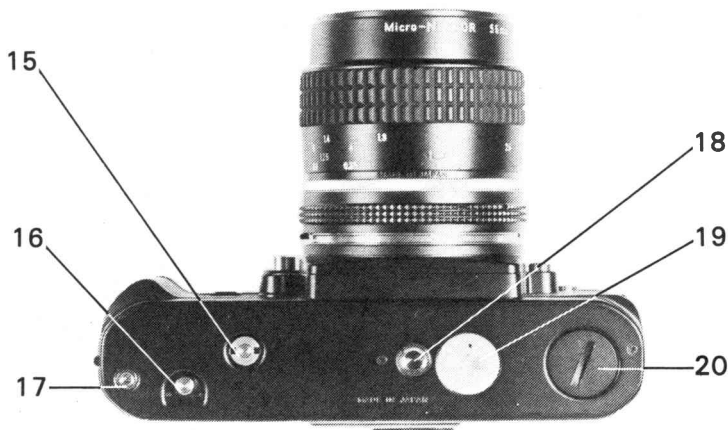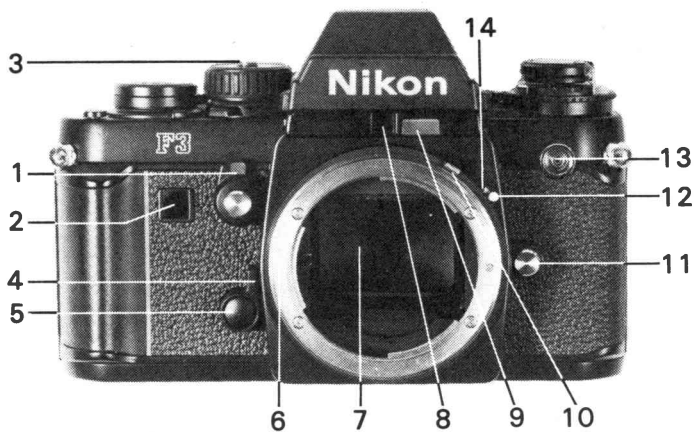

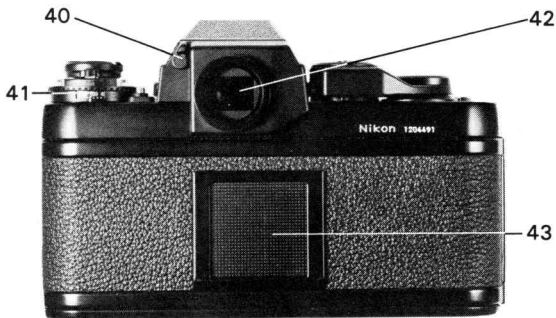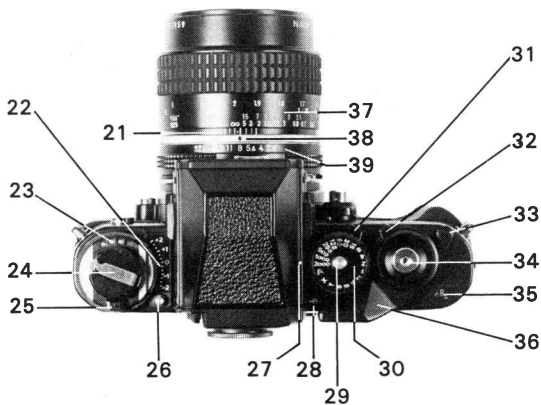

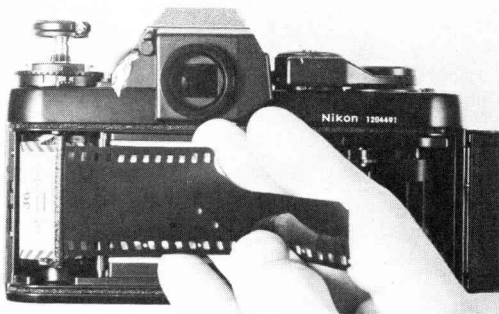


Place the film cartridge into the camera with the film leader facing to the right.

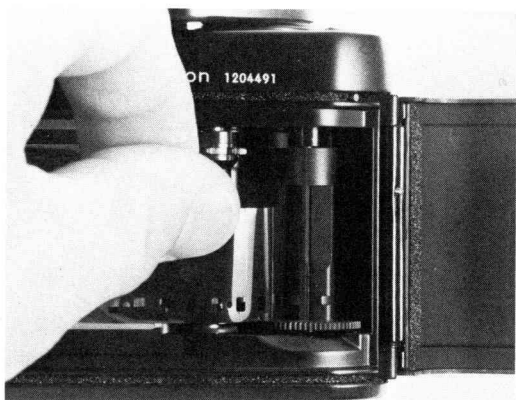

Insert the film leader into the take-up spool.

www.butkus.us

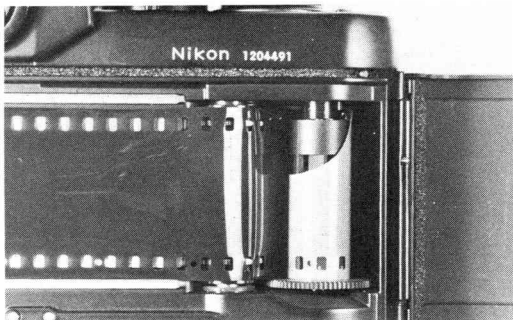


Turn the take-up spool until both the top and bottom sprocket wheels are properly engaged with the film perforations.


SETTING ASA FILM SPEED

To set the ASA, lift the outer collar of the ASA film-speed dial and rotate it until the ASA value of the film you are using is aligned with the white index mark.


First turn on the power switch then, check the batteries by slightly depressing the shutter release button. If the batteries are good the liquid crystal display (LCD) in the viewfinder will display the shutter speed. If it does not come on, batteries should be replaced.

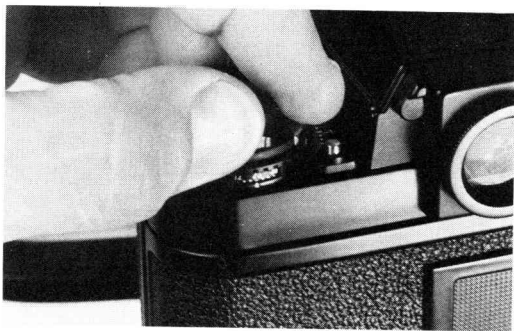


To set the ASA film speed, lift the outer collar of the film speed dial and rotate it until the proper ASA number is opposite the white index mark.

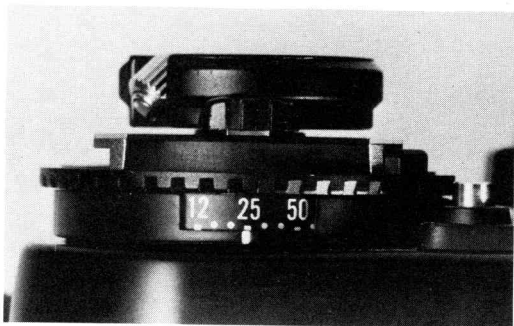


Once the ASA is set, release the film speed dial and the appropriate setting is locked into place.

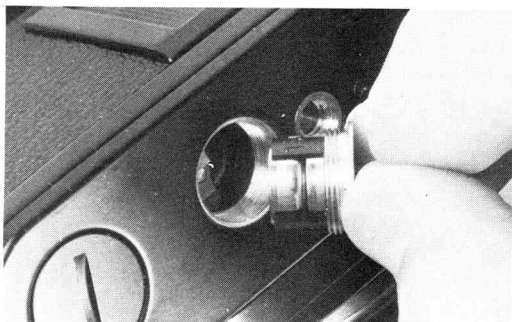

The batteries of the Nikon F3 are located in the battery chamber in the base of the camera.

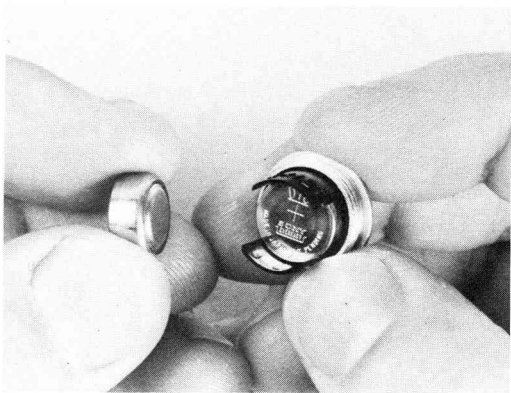

The battery-chamber lid has a clip that holds batteries in place for easy installation.

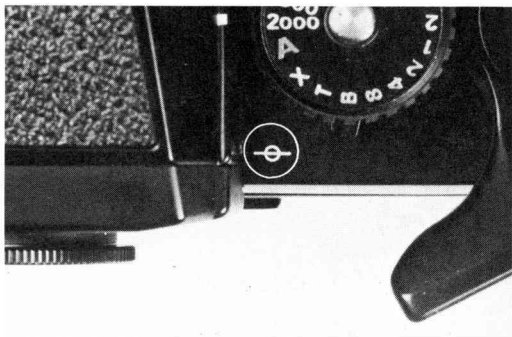


The film plane indicator shows the exact location of the film inside the camera. Precise measurements of subject-to-film distance are made from this mark.

may be advanced with several short strokes; but once the film is advanced completely, the mechanism locks. At this point the lever may be pulled out only thirty degrees from its closed position. This is a handy "ready" position when making quick sequential exposures. A complete stroke of the advance lever measures 170 degrees; 30 degrees for the handy pull-out, plus 140 degrees for a complete advance cycle.

FRAME COUNTER

The frame counter keeps track of the number of pictures taken on a roll of film. It has white marks at 12, 20, 24, and 36 for most packaged films, and blue

www.butkus.us

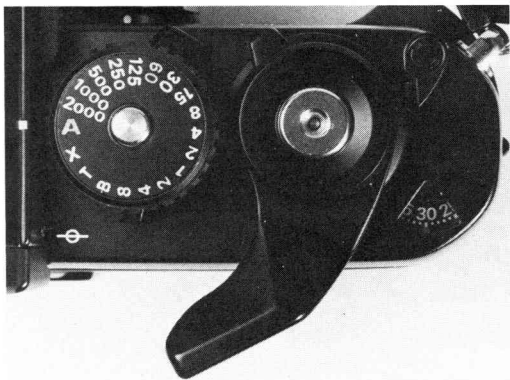


The film advance lever may be pulled out thirty degrees to a "ready" position. From this point, a single stroke of 140 degrees will advance the film completely to the next frame.

numerals for every five frames (5, 10, 15, etc.). It is graduated from two frames below zero to forty (four frames beyond the traditional thirty six). This is especially helpful for photographers who bulk load film.

REWINDING FILM

When a roll of film has been completely exposed, the advance lever will stop in mid-cycle. To rewind exposed film, press the film-rewind button on the bottom of the camera. This releases the film sprocket drive and allows the film to be rewound. Fold out the

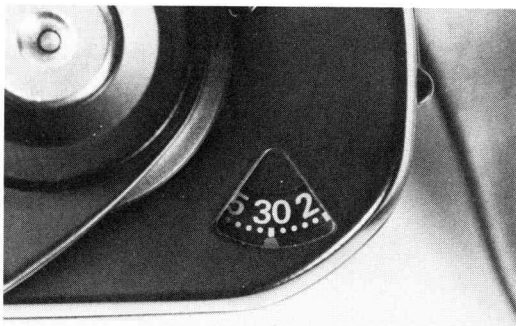

The frame counter of the Nikon F3 is located to the right of the film advance lever.

rewind crank and turn it clockwise as its arrow indicates. Keep turning until there is no longer any tension from the film (the rewind crank will turn more freely) and the end of the leader will snap back into the cassette. Open the camera back by pushing the camera back lock lever to the right while lifting the rewind knob. The camera back then pops open. Loading and unloading of film should always be done out of direct sunlight.

SETTING THE APERTURE


The aperture ring on most Nikkor lenses is the lens ring closest to the camera body. Turning it opens and closes the diaphragm inside the lens to the desired *f*


www.butkus.us

stop. When turned to a higher number the diaphragm is closed to a smaller aperture, thus letting less light through the lens.


Most Nikkor lenses are automatic. This means that they remain at the largest aperture until the shutter-release button is pressed. Once the shutter-release button is pressed, the aperture automatically closes down to the selected f -stop.

To rewind the film when you have completed the roll, first press the rewind button on the bottom of the camera.

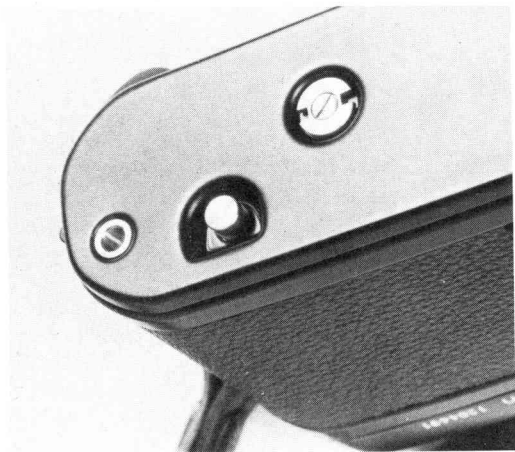

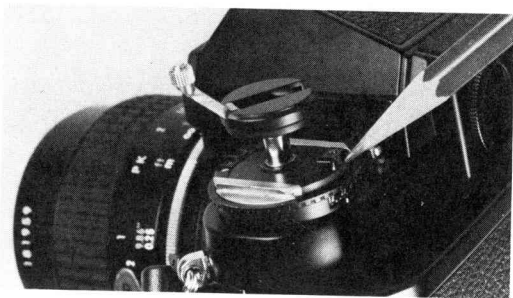


Once the rewind button has been pressed, fold out the rewind crank and turn it clockwise until all the film has been rewound. Then open the back of the camera by pushing the lock lever to the right and pulling up on the rewind crank.

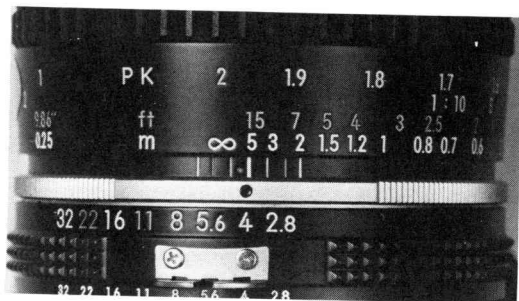

Set the aperture by turning the aperture ring until the desired f -number is opposite the index mark.

www.butkus.us

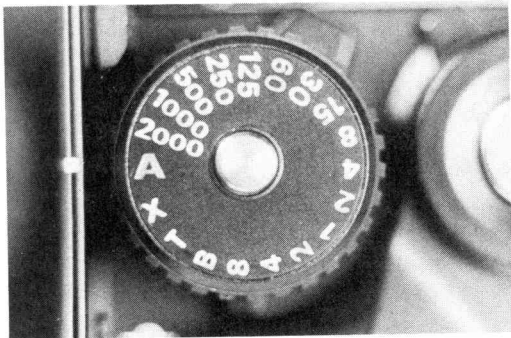

The shutter speed dial has two lock positions: "A" and "X." To unlock the dial from these positions, press the release button in the center of the dial.

The "B" setting is for timed exposures. This setting is usually used with a tripod and a cable release. The shutter remains open for as long as the button on the cable release is held. The shutter closes with the release of the button.

The "T" setting is also for timed exposures, except that once the shutter-release button is pressed, the shutter remains open after the button is let go. In this setting, the shutter remains open until the shutter-speed dial is moved to another position.

There are two situations where the shutter-speed dial is bypassed in favor of other priorities.


VIEWFINDER ILLUMINATOR

In low light situations it becomes difficult to see the LCD and aperture windows inside the viewfinder. A small red button on the far right corner of the prism housing (from behind the camera) when pressed, illuminates these two windows with a small "grain-of-wheat" lamp, providing a very dim but sufficient light.


BACK-UP MECHANICAL RELEASE LEVER

The Nikon F3 has an emergency provision for a mechanical shutter release if the batteries should fail. This back-up mechanical shutter-release lever is at the lower left side of the lens-mount housing.

In low light situations the LCD becomes difficult to read. To illuminate the display, press the viewfinder-illuminator button on the corner of the prism housing.

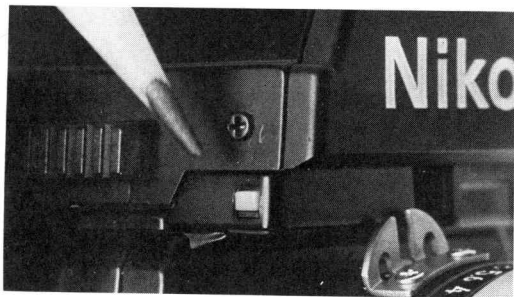

www.butkus.us

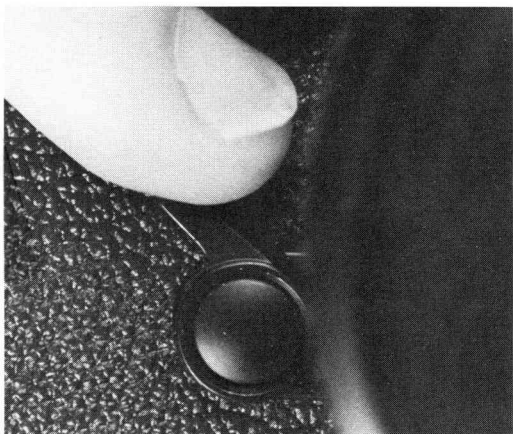

The Nikon F3 is equipped with a 1/80 sec. mechanical shutter speed in the event of a battery failure. To fire the shutter mechanically, use the mechanical shutter-release lever on the front of the camera.

shutter-release button. Be careful to press the shutter-release softly or you will trigger the shutter. The LCD will remain on for 16 seconds after your finger is removed from the button.


Each time the shutter-release button is pressed while the camera is in the automatic mode, the LCD window displays the *approximate* shutter speed at which the exposure will be made. The display is the approximate as it indicates only the closest conventional shutter speed. The actual shutter speed is


determined (on a stepless scale) at the exact interval needed for a correct exposure. This shutter speed could be 1/157 sec. but the LCD would read 1/125 sec. (see section on LCD).

As the light reflected from the subject passes through the lens, 92 percent of that light is transferred to the focusing screen with a reflex mirror. The other eight percent of the light is transmitted through the mirror via 50,000 minute elliptical holes (see accompanying illustration) to a second mirror hinged to the back of the main reflex mirror.

This secondary mirror is ribbed in several curved directions to diffuse light. It reflects the light onto a single SPD (Silicon photo diode) cell at the bottom of the mirror box. The instant the shutter is released the

The Nikon F3 meters the exposure by allowing light to pass through the main mirror and on to a secondary mirror (shown here) which reflects the light on to the SPD photocell.

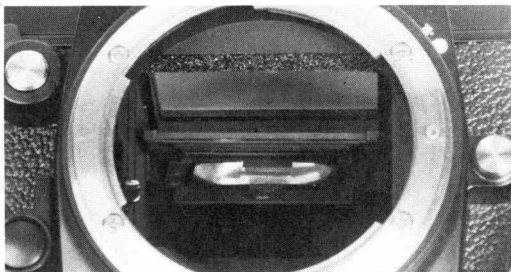


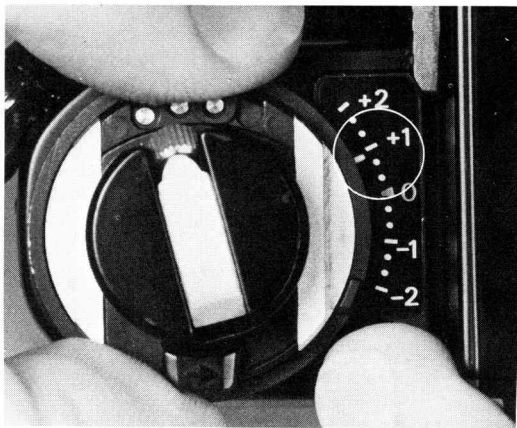

To operate the exposure compensation dial, press the lock release button and rotate the dial until the appropriate exposure compensation number is opposite the index mark.

small, light subject against a dark background, the meter will read the background. This overexposes the subject. To avoid this situation, underexpose slightly. In a situation where most of the background is light and the subject is moderately dark, overexpose slightly.


In these difficult lighting situations try to take a reading directly from the subject. (see the section on the exposure memory-lock button.) If the subject is distant, take a close-up reading from an 18 percent gray card, or from the palm of your hand. Remember the shutter speed being displayed by the LCD and return

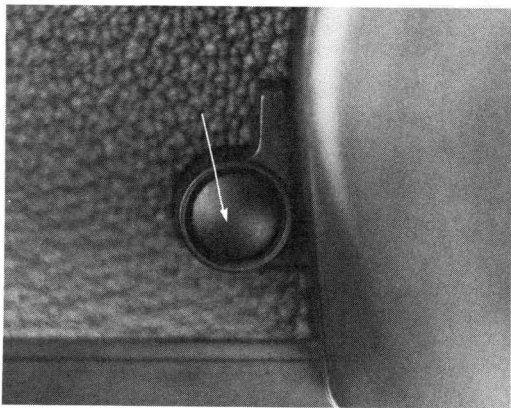

To use the exposure-memory-lock, press the exposure-memory-lock-button and keep it pressed as you recompose your photograph.

shutter speed. The LCD window in the viewfinder will display an "M" to the left of the shutter speed numerals. This indicates the camera is in the manual mode.

In all manual settings except "B" and "T" either a plus sign, minus sign, or both appear above the "M". The minus sign indicates underexposure. The plus sign indicates overexposure. A correct exposure is indicated when the plus and minus sign appear together. Use this exposure or deviate from it as you see fit.

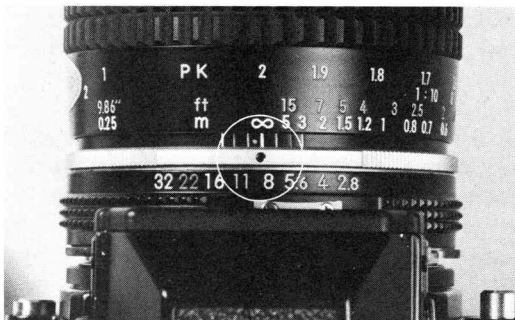

Next to the distance markings on Nikkor lenses is a color coded depth-of-field scale that indicates zones of relative sharpness given by various apertures.



The depth-of-field preview-button allows you to visually check the depth of field by temporarily stopping down the lens aperture from the maximum aperture to the selected aperture. The image darkens in the viewfinder but the depth of field afforded by the selected aperture then becomes visible.


INFRARED FOCUSING

Infrared light rays focus at a point slightly in front of rays from the visible spectrum. Therefore, when using black and white infrared film a slight adjustment in focusing is necessary. A small red dot located to the left of the aperture/distance scale index (on most Nikkor lenses) is used as the focusing index for black-and-white infrared film.

First, focus normally. Then, shift the distance marking indicated by the distance scale over to the infrared focusing dot. The camera is now focused for infrared rays.

Because of the special nature of black and white infrared film, use a medium-red lens filter when taking pictures.

Infrared films require a slight adjustment of focus to provide sharp photographs. Nikkor lenses have a small infrared focusing index dot just to the left of the normal focusing index mark.

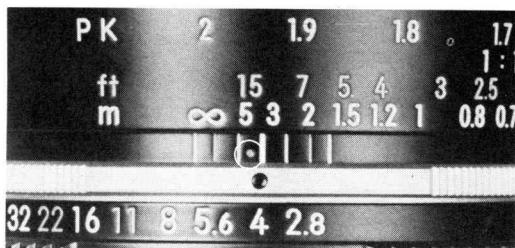




To remove a focusing screen, remove the prism housing, and place your fingernail under the back edge of the screen and lift it out.

it is impossible to keep your eye at the viewfinder (such as when the self-timer is in use). This shutter prevents stray light from entering the eyepiece and affecting the automatic exposure meter reading.

To use the eyepiece shutter, push the small lever, located to the left of the eyepiece, to the left. The eyepiece appears red, to signal that the eyepiece shutter is in use.

MULTIPLE EXPOSURE LEVER

The multiple-exposure lever located adjacent to the film advance lever permits any number of exposures on one frame. After making the first exposure, push the multiple exposure lever 90 degrees counterclockwise while cocking the shutter. Both the film and frame counter will not advance. The multiple exposure lever will automatically click back to its original position so that when the second exposure is made, the film will advance as normal. If a third, or additional exposures, are to be made on the same frame, set the multiple exposure lever each time.

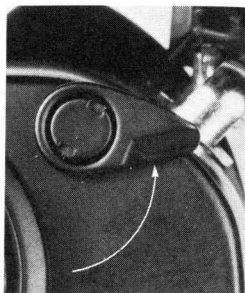

To make multiple exposures, make the first exposure normally, then before advancing to the next frame, push the multiple exposure lever counter-clockwise. Turn the advance lever and the shutter will be cocked but the film will not advance.

www.butkus.us

CHANGING LENSES

To remove a lens from the camera, press the lens-release button located to the right of the lens, while twisting the lens clockwise until it can move no further. The lens will now pull off freely.


To mount an AI lens, position the lens so the focusing-index mark aligns with the mounting-index on the camera. Mount the lens on the camera body so that the lens is firmly seated on the lens-mount flange. Turn the lens counterclockwise until it clicks into position.

To mount a non-AI lens, make sure the camera's meter-coupling lever is out of the way of the lens. Push the meter-coupling lever release button, and fold it back toward the camera body. Mounting procedure from this point is identical to AI lenses.

SELF-TIMER

The self-timer delays the release of the shutter for ten seconds after it has been triggered. The self-timer lever is located at the base of the shutter speed dial. To operate this mechanism, set the exposure controls, advance the film and push the self-timer lever to the right until the red dot is uncovered. Activate the timer by pressing the shutter-release button. The red LED on the front of the camera will flash steadily for eight seconds and then blink rapidly during the last two seconds as a warning to get ready.

The self-timer does not return to a normal shutter release automatically. The switch must be manually returned to its normal position after using it.

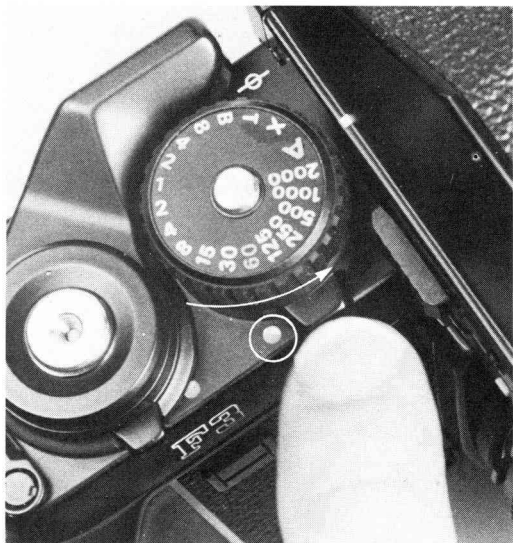

To make a delayed exposure, push the self timer lever to the right. A red LED flashes steadily for the first eight seconds; and then speeds up for the last two seconds of the delay.

To cancel the timer after pressing the shutter release button, push the self-timer lever back to its original position. The picture will not be taken.

The self-timer works just as well with the MD-4 motor drive except the LED is covered and rendered useless.

An added advantage is when the motor drive is set on the continuous, ("C" setting) and a small object is used to hold the MD-4 shutter release button down, enables the motor drive to be used as a ten second interval timer.

MIRROR LOCKUP LEVER

When using super-telephoto lenses or doing photomicrography it becomes necessary to reduce camera vibration to an absolute minimum. Mirror vibration may cause a disturbance in these two specialized situations. Two Nikkor lenses that require the reflex mirror to be locked up are the Fish-eye-Nikkor 6 mm $f/5.6$ and the OP Fish-eye Nikkor 10 mm $f/5.6$. Also, when using the MD-4 motor drive at top speed,—6 frames per second—it becomes necessary to lock up the mirror.

The mirror lock-up lever is located directly behind the depth-of-field preview button. To lock the mirror in the "up" position, push in the depth-of-field preview button, and rotate the mirror lock-up lever counterclockwise until it stops.

NOTE: Do not use the automatic-exposure setting on the shutter speed dial when the mirror is locked up. This also applies when you lock up the mirror when using the MD-4 motor drive at high speeds.


ACCESSORY SHOE

The accessory shoe allows the direct mounting of the SB-12 speedlight. It is located at the base of the



To lock the mirror in the up position push the mirror lock-up button down as far as it will go.

rewind knob. Three electrical contacts on the forward side of the shoe provide flash synchronization, automatic through-the-lens flash output control and ready-light indication (LED) in the camera's viewfinder. It also provides automatic override of the camera's

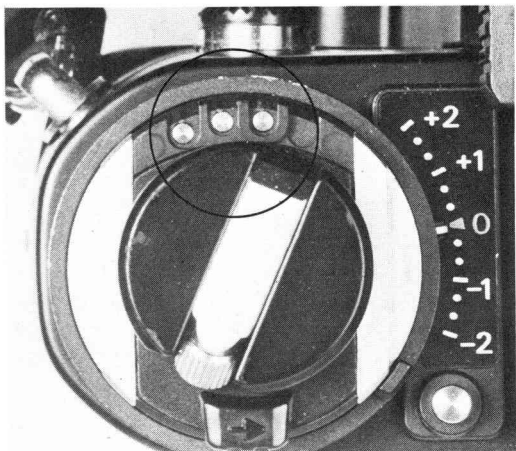

The accessory hot shoe slides into place over the film rewind crank and makes contact with the three electrical contacts shown here.

shutter-speed dial and sets the shutter speed for 1/80 sec. Two flash coupling adapters are available allowing either the ISO—or Nikon F2 type direct-mounting flash units to be attached.

SYNC TERMINAL


On the front of the camera just below the accessory shoe is a separate sync terminal. It accepts all standard plug-in PC cords, and is threaded to accept the Nikon

screw-in PC cord. When using flash bulbs or an electronic flash without a "hot shoe", it is necessary to use the sync terminal. See the accompanying table to determine the correct synchronization speed to set on the shutter-speed dial.

FILM MEMO HOLDER

As a reminder of the type of film and number of frames on a roll being loaded in the camera, tear off one end of the film carton and insert it into the memo holder on the back of the camera.

The flash sync terminal allows flash units to be used off the camera by means of a PC cord which fits into this terminal.

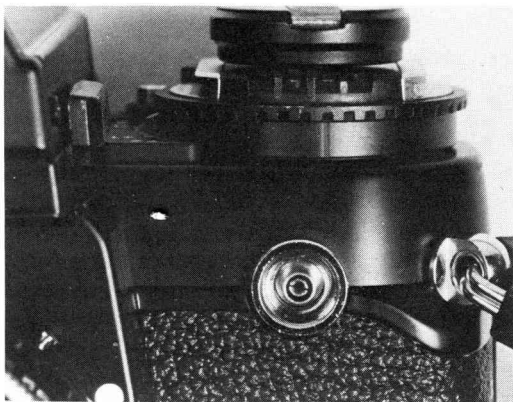



The film memo holder on the back of the F3 holds the end panel of the film box as reminder of the type of film in use.

Camera Care

Following are a few tips on general camera care that should help maintain the long life expectancy of the Nikon F3:

Keep the camera clean. Use lens cleaning tissues moistened with alcohol or lens cleaner for the lens surfaces. Use a blower brush to remove dust from all camera parts inside and out.

The F3 is especially easy to clean as it is easily "field stripped." Two places in the camera that need extra care when cleaning are the shutter curtain and

mirror mechanism. Both are extremely fragile and should only be cleaned with a blower brush. Never touch these mechanisms with your fingers.

Store the camera properly. Always keep front and back lens caps on a lens not being used. Keep a body cap on the camera body when a lens is not mounted on it.

When storing a camera and its electronic accessories always remove the batteries.

Never subject the camera to excessive heat. Heat can ruin films and shorten the life of the metering system's LCD.

Keep the camera dry. When shooting in the rain or snow, or near the ocean, wrap the camera in a plastic bag. Use a rubber band to hold the open end of the bag around the lens shade or filter ring. Always protect the lens with a skylight or U.V. filter to keep water off the lens itself.

Never attempt to do your own repairs.

Repairs inside the camera, lens, motor drive or flash unit should be left to an authorized Nikon repairman.

Accessories

Md-4 Motor Drive. The Md-4 Motor Drive is a light-weight, extremely fast, full-scale motor drive for the Nikon F3. It provides an adjustable range of firing speeds up to 6 frames per second. It also can be used with remote-control accessories via the remote terminal on the front of the unit. The MD-4 Motor Drive also features motorized film rewind and a subtractive frame counter.


When the MD-4 is mounted on the camera body all of the camera's power is supplied from the MD-4's batteries. This allows the F3 to operate in extremely low temperatures when the camera's two silver oxide batteries would normally become sluggish. The shutter-release button on the MD-4 becomes the camera's main shutter-release button, and the MD-4's power switch overrides the camera's power switch.

Basic operation of the MD-4 Motor Drive. Before installing the MD-4's batteries, make sure the camera's power switch is off, and no film is in the camera. Use a coin to unscrew the cap on the bottom of the camera located directly opposite the rewind knob. Store the cap in the small slot on the front of the MD-4's battery clip.



The Nikon F3 accepts the accessory MD-4 motor drive (shown here) which has a maximum firing rate of six frames per second.


To open the battery clip, slide the release catch to the right. The battery clip then pops out. Load eight AA-type penlight batteries into the battery chamber of the battery clip according to the positive/negative signs inside the battery chamber. Slide the clip back into position until it locks.

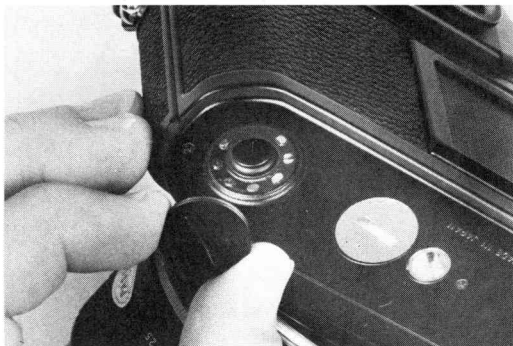

To mount the MD-4 motor drive, you must first remove the rewind cap on the camera's baseplate.

Check the batteries by pressing the battery check button on the back of the motor drive. If the batteries are properly installed, two LED's near the battery check button should light up. If only one lights, the batteries are not fresh enough to provide full power, but the motor drive is still operable. If neither of the LED's lights, the batteries are either improperly installed or exhausted.

Before attaching the MD-4 to the camera body, the mode selector switch on the motor drive should be on "L" (locked) or the motor will run on contact. Align the mounting screw of the MD-4 with the tripod socket of

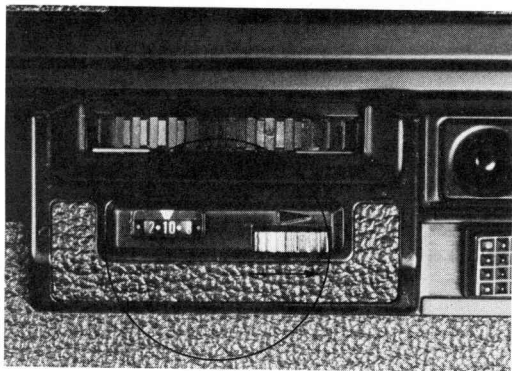

Align the F3 camera body with the MD-4 motor drive and turn the mounting screw (shown here) clockwise, until the motor drive is firmly attached to the F3.

the camera body and fasten tightly, making sure all of the motor drive's pins are aligned with their respective contacts on the camera.

Load the camera with film. Set the frame counter on the motor drive to the orange dot by pushing the wheel to the right.

The mode-selector for single-frame or continuous shooting is next to the MD-4's trigger button on top of the hand-grip. Set the S-C mode selector on the "S" for single frames, or "C" for continuous operation, by lifting and rotating the selector ring. This switch also

activates the camera's metering system and electromagnetic shutter-release system even if the camera's switch is in the "off" position.

Take pictures using the MD-4's shutter-release button for either single or continuous operation. During single-frame operation the motor drive advances one frame each time the shutter-release button is pressed, while continuous operation results in a rapid burst of shots, that will fire at a rate of up to 5.5 or 6 frames per second, as long as the shutter-release remains depressed. Single-frame operation can also be

The MD-4 will operate in two modes: Single Frame and Continuous Advance. To select the mode turn the mode selector to "S" for single frame and "C" for continuous. Lock the MD-4 trigger by moving the selector to "L."




achieved by switching both the motor drive and camera on and using the camera's shutter-release button rather than the MD-4 shutter-release. The speeds at which the MD-4 will operate, varies depending on the power source and whether or not the mirror is locked up. Top speeds are reached with NiCd batteries (5.5 fps normally and 6 fps with the mirror locked up). With AA alkaline batteries top speed is 3.8 fps and 4 fps with the mirror up.

When the last frame on a roll of film has been taken, the motor drive advances incompletely and one of the LED's lights up. It is necessary at this point to rewind the film. To rewind film automatically, press the small release button in the center of the rewind slide marked "R1" and slide it to the left. While still holding this slide to the left, push rewind slide "R2" straight up. Let go of both slides and the film rewinds automatically. Once the film is completely rewound, push rewind slide "2" down to its original position.

The MD-4 Motor Drive may be attached or detached from the F3 body at any time, even if film is loaded in the camera. The danger of fogging your film is greatly reduced by a spring-loaded light trap inside the film chamber that keeps light from entering the camera through the power film rewind mechanism. Even with the light trap however, it is still advisable to remove the motor in subdued light if the camera is loaded.

To make multiple exposures with the MD-4 Motor Drive, remember to push the multiple-exposure lever before pressing the shutter-release button for each frame. The last exposure on a given frame should be

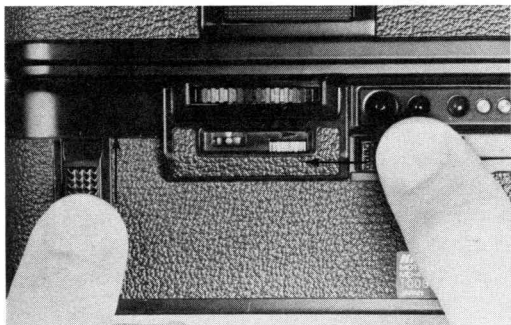

To use the MD-4's power rewind, press the release button in the center of the "R-1" rewind slide and slide it to the left. Now push the second slide ("R2") straight up. When the film is completely rewound push the "R2" down to shut off the motor.

made without pushing the multiple-exposure lever so that the film will advance normally. On occasions when the motor drive's continuous setting is used, push the multiple exposure lever and hold it in the "set" position while making the exposures. After the last exposure on the same frame has been taken, the camera is still set to make one more exposure on that frame. To avoid an additional exposure, place a lens cap over the lens, set the shutter speed dial to a manual setting and press the MD-4's shutter release button twice: once to return the multiple-exposure lever to its normal position (which still leaves the film unadvanced), and again to advance the film.

MD-4 MOTOR DRIVE— SPECIFICATIONS

- Camera fitting: Nikon F3
- Shooting modes: Choice of single-frame (S) or continuous (C) firing via S-C mode selector; lock (L) position also provided
- Shutter release: By electromagnetic trigger button; also switches on camera meter when depressed halfway; meter remains on for 16 secs. after finger is lifted off button
- Firing rate: Up to 6 frames per second (fps) with NiCd Battery Unit MN-2, up to 4 fps with 8 penlight AA-type batteries; firing rates decrease at shutter speeds slower than 1/125 sec.
- Automatic winding stop: Motor shuts off at film's end with LED indication; frame counter also provided to automatically stop film winding after preset number of exposures—useful in very low temperatures
- Number of 36-exp. rolls per fresh battery set: Guaranteed firing rate; Approx. 60 with all types of batteries. Slower firing rates, but still usable: Approx. 70 with NiCd Battery Unit MN-2: Approx. 100 with zinc-carbon batteries; Approx. 140 with alkaline-manganese batteries
- Automatic film rewind: 4.5 secs. with NiCd Battery Unit MN-2 and 8 secs. with penlight AA-type batteries for 36 exposure film: automatic film rewind stop with optional MF-6 Camera Back
- Shutter speeds: 8 to 1/2000 sec. including "X" (1/80 sec.) and "T"

- Dimensions: 146.4mm (W) x 114.7mm (H) x 70.7mm (D)
- Weight: 480g

SB-12 speedlight. The Nikon SB-12 speedlight is designed exclusively for use with the Nikon F3. It is a direct mounting flash unit offering fully automatic through-the-lens flash output control. The camera's SPD meter system reads the light reflected from the film and shuts the flash off when the exposure is correct.

The Nikon F3 with the SB-12 flash unit.




Basic operation of the SB-12. To install batteries, slide the battery compartment lid in the direction of the arrow and insert four AA-type penlight batteries according to the positive/negative symbols inside the compartment.

When mounting the SB-12 on the camera, rotate the unit's locking ring so the mount is open and the mounting-foot is uncovered. Slide the mounting-foot over the camera's accessory shoe from the front. Close

Mount the SB-12 on the F3 by sliding the flash onto the camera's accessory shoe (incorporated in the rewind crank assembly.)



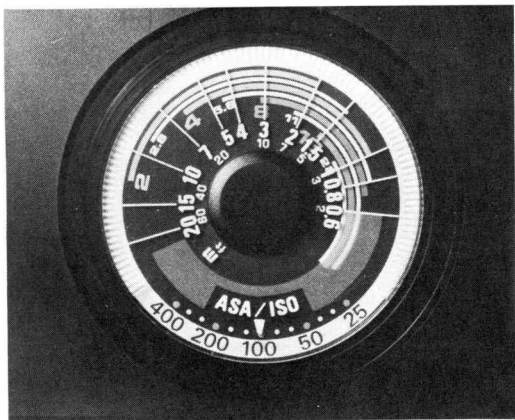

The SB-12 exposure calculator dial is used to determine the aperture when the flash is used in the manual mode.


the SB-12's mount by rotating the locking ring clockwise until it stops. The unit is now locked in position and fully integrated with the camera.

When the flash unit is in the automatic mode the camera's metering system controls the duration of the flash. The flash is keyed to both the aperture and ASA settings on the camera while the shutter speed is automatically set at the flash-sync speed of 1/80 sec. Therefore it is unnecessary to set anything on the SB-12 in order to get correct exposures.

When you are using a wide angle lens, use the SW-4 adapter. This assures flash coverage wide enough for the angle of view of a 28 mm lens.

To use the SB-12 in the manual mode, determine the f -stop with the exposure-calculator dial. Locate the f -stop opposite the distance from which you are shooting and set the aperture accordingly.

The SB-12 diffusing grid is used to widen the flash coverage when a wide angle lens is in use.

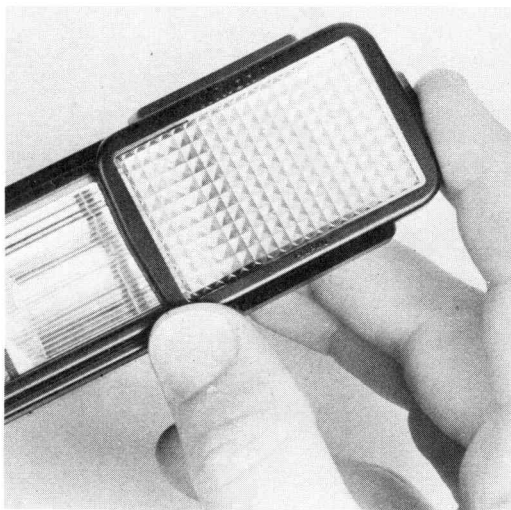



Table

Unit: m (ft)

f/stop	Film sensitivity (ASA/ISO)					Auto shooting range	
	400	200	100	50	25	Normal Operation	With Wide-Flash Adapter SW-4
	2	—	—	—	—	4~15 (13.1~49.2)	3.6~15 (11.8~49.2)
	2.8	2	—	—	—	3~15 (9.8~49.2)	2.7~12 (8.9~39.4)
	4	2.8	2	—	—	2~12 (6.6~39.4)	1.8~8.8 (5.9~28.9)
	5.6	4	2.8	2	—	1.4~8.8 (4.6~28.9)	1.3~6.2 (4.3~20.3)
	8	5.6	4	2.8	2	1~6.2 (3.3~20.3)	0.9~4.4 (3.0~14.4)
	11	8	5.6	4	2.8	0.8~4.4 (2.6~14.4)	0.8~3.1 (2.6~10.2)
	16	11	8	5.6	4	0.7~3.1 (2.3~10.2)	0.7~2.2 (2.3~7.2)
	22	16	11	8	5.6	0.6~2.2 (2.0~7.2)	0.6~1.5 (2.0~4.9)
	—	22	16	11	8	0.6~1.5 (2.0~4.9)	0.6~1.1 (2.0~3.6)
	—	—	22	16	11	0.6~1.1 (2.0~3.6)	0.6~0.8 (2.0~2.6)

The SB-12 exposure calculator table gives the range of flash coverage under various shooting conditions.

Maximum battery life is attained with the SB-12 in the automatic mode with the camera set on the widest aperture possible that the situation will allow. Flash duration is kept at a minimum and recycling time is shortened under these circumstances.

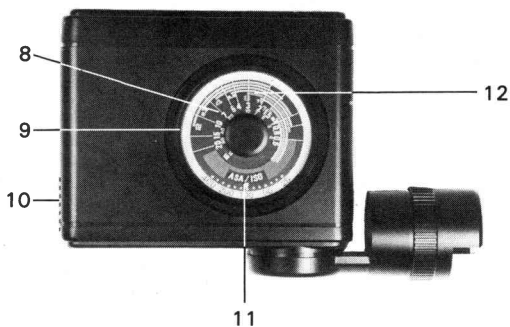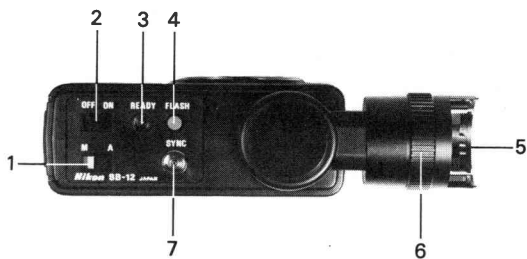

SB-12 FLASH PARTS NOMENCLATURE

- 1. Shooting mode selector**
- 2. Power switch**
- 3. Ready-light**
- 4. Open-flash button**
- 5. Contact pins (inside)**
- 6. Mounting foot with locking ring**
- 7. Flash sync. terminal**
- 8. Distance scale**
- 9. Exposure calculator dial**
- 10. Battery chamber lid**
- 11. ASA/ISO film speed index**
- 12. Auto shooting range indicators**

SB-12 FLASH—SPECIFICATIONS:

- Light output control: Automatic: Silicon-controlled rectifier (thyristor) and series circuitry Manual: Full output
- Guide number (ASA/ISO 100 and feet): 82 (59 when used with Wide-Flash Adapter SW-4) ASA/ISO 25 and feet: 40 (28 when used with Wide-Flash Adapter SW-4) ASA/ISO film speed range: ASA/ISO 25 400
- Angle of coverage: Horizontal: 56 (67 when using SW-4) Vertical: 40 (48 when using SW-4)
- Recycling time: Automatic: Variable depending on shooting distance Manual: Approx. 9 sec. with fresh set of zinc-carbon batteries: approx. 8 sec. with alkaline-manganese batteries
- Number of flashes: Automatic: Variable depending on shooting distance Manual: Approx. 60 with fresh set of zinc-carbon batteries; approx. 160 with alkaline-manganese batteries
- Power source: Four 1.5V AA-type batteries
- Ready-light: Provided
- Open-flash button: Provided
- Mounting: ● Dimensions (excluding mounting foot): Directly on F3 accessory shoe 105mm (W) x 40mm (H) x 85mm (D)
- Weight (without batteries): 350g

Finders. The Nikon F3 comes with a DE-2 eye-level viewfinder as standard equipment. There are many situations, however, when the eye-level restriction hinders good photography. For this reason Nikon offers a selection of accessory viewfinders.

DA-2 action finder. The DA-2 action viewfinder is for situations that prohibit getting your eye close to the camera. It is recommended if you must wear goggles or if you are moving too fast to see through the viewfinder clearly. It is also helpful for underwater photography when the camera is in an underwater housing.

DW-3 waist-level finder. This finder is for low angle shots. It has a deeply shielded viewing hood so the image may be seen clearly at all times. A built in 5X flip-up magnifier is supplied for fine focusing.

DW-4 6X high magnification finder. This finder magnifies the entire viewing screen to 6X magnification and is fitted with a -5 to $+3$ diopter adjustment for individual eyesight correction. An eyepiece cover prevents stray light from affecting the automatic meter system while shooting. It is recommended for photomicrography.