# **Seagate**

Barracuda 180FC Disc Drive			
ST1181677FC/FCV			
Product Manual, Volume 1			

Barracuda 180FC Disc Drive			
ST1181677FC/FCV			
Product Manual, Volume 1			

© 2001 Seagate Technology LLC All rights reserved July 2001

Publication number: 100107693, Rev. A

Seagate, Seagate Technology, and the Seagate logo are registered trademarks of Seagate Technology LLC. Barracuda, SeaFAX, SeaFONE, SeaBOARD, and SeaTDD are either registered trademarks or trademarks of Seagate Technology LLC. Other product names are registered trademarks or trademarks of their owners.

Seagate reserves the right to change, without notice, product offerings or specifications. No part of this publication may be reproduced in any form without written permission of Seagate Technology LLC.

Printed in the United States of America

# **Revision status summary sheet**

Revision	Date	Writer/Engineer	Sheets Affected
Α	07/05/2001	L. Newman/J. Nowitzke	1/1. v thru viii. 1 thru 68.

# Notice.

Product Manual 100107693 is Volume 1 of a two volume document with the SCSI Interface information in the SCSI Interface Product Manual, part number 75789509.

If you need the SCSI Interface information, order the SCSI Interface Product Manual, part number 75789509.

# **Contents**

	icable standards and reference documentation	
2.1	Standards	
	2.1.1 Electromagnetic compatibility	
	2.1.2 Electromagnetic compliance	
2.2	Reference documents	
Gene	eral description	5
3.1	Standard features	
3.2	Media description	6
3.3	Performance	
3.4	Reliability	
3.5	Unformatted and formatted capacities	
3.6	Programmable drive capacity	
3.7	Factory-installed accessories	
3.8	Factory-installed options	
3.9	User-installed accessories	7
Perfo	ormance characteristics	9
4.1	Internal drive characteristics	9
4.2	Seek performance characteristics	9
	4.2.1 Access time	
	4.2.2 Format command execution time for ≥ 512-byte sectors	9
	4.2.3 General performance characteristics	
4.3	Start/stop time	
4.4	Prefetch/multi-segmented cache control	
4.5	Cache operation	
	4.5.1 Caching write data	
	4.5.2 Prefetch operation	
	4.5.3 Optimizing cache performance for desktop and server applications	
Relia	bility specifications1	
5.1	Error rates	
	5.1.1 Environmental interference1	
	5.1.2 Write errors	
	5.1.3 Seek errors	
5.2	Reliability and service	
	5.2.1 Mean time between failure (MTBF)	
	5.2.2 Preventive maintenance	
	5.2.3 Service life	
	5.2.4 Service philosophy	
	5.2.5 Service tools	
	5.2.6 Hot plugging the drive	
	5.2.7 S.M.A.R.T	
	5.2.9 Product warranty	
	,	
Phys	ical/electrical specifications1	
6.1	AC power requirements	9
6.2	DC power requirements	9
	6.2.1 Conducted noise immunity	
	6.2.2 Power sequencing	
	6.2.3 Current profiles	
6.3	Power dissipation	
6.4	Environmental limits	
	6.4.1 Temperature	
	6.4.2 Relative humidity	3

		6.4.3	Effective altitude (sea level)	.23
		6.4.4	Shock and vibration	.23
		6.4.5	Air cleanliness	.26
		6.4.6	Acoustics	.26
		6.4.7	Electromagnetic susceptibility	.26
	6.5	Mechani	cal specifications	.27
7.0	Dofoo	t and arra	r management	20
7.0			•	
	7.1		ernal defects/errors	
	7.2		or recovery procedures	
	7.3	FC-AL sy	ystem errors	.30
8.0	Install	lation		.31
	8.1	Drive ID/	option selection	31
	8.2		nections	
	0.2	8.2.1	J6 connector requirements	
	8.3		entation	
	8.4			
	8.5		punting	
	8.6		ng	
9.0	Interfa	-	ements	
	9.1	FC-AL fe	eatures	.35
		9.1.1	Fibre Channel link service frames	.35
		9.1.2	Fibre Channel task management functions	.35
		9.1.3	Fibre Channel task management responses	.35
		9.1.4	Fibre Channel port login	.36
		9.1.5	Fibre Channel port login accept	.37
		9.1.6	Fibre Channel Process Login	.37
		9.1.7	Fibre Channel Process Login Accept	.37
		9.1.8	Fibre Channel fabric login	.38
		9.1.9	Fibre Channel fabric accept login	.39
		9.1.10	Fibre Channel Arbitrated Loop options	
	9.2	Dual por	t support	
	9.3		mmands supported	
		9.3.1	Inquiry data	
		9.3.2	Mode Sense data	.45
	9.4	Miscellar	neous operating features and conditions	
	9.5		hysical interface	
		9.5.1	Physical characteristics	.49
		9.5.2	Connector requirements	
		9.5.3	Electrical description	
		9.5.4	Pin descriptions	
		9.5.5	FC-AL transmitters and receivers	
		9.5.6	Power	
		9.5.7	Fault LED Out	
		9.5.8	Active LED Out	
		9.5.9	Enable port bypass signals	
		9.5.10	Motor start controls	
		9.5.11	SEL_6 through SEL_0 ID lines	
		9.5.11	Device control codes	
	9.6		naracteristics	
	5.0	9.6.1	TTL input characteristics	
		9.6.2	LED driver signals	
		9.6.3	Differential PECL output	
		9.6.4	Differential PECL input.	
	_		·	
10.0	Seaga	ite Techno	ology support services	.59

# **List of Figures**

Figure 1.	Barracuda 180FC family disc drive	1
Figure 2.	Barracuda 180FC disc drive	5
Figure 3.	Typical ST1181677FC drive +12V current profile	20
Figure 4.	Typical ST1181677FC drive +5V current profile	21
Figure 5.	ST1181677FC DC current and power vs. input/output operations per second	22
Figure 6.	Location of the HDA Temperature check point	23
Figure 7.	Recommended mounting	25
Figure 8.	Mounting configuration dimensions	27
Figure 9.	Physical interface	31
Figure 10.	LED indicator connector	32
Figure 11.	Air flow	33
Figure 12.	Physical interface	49
Figure 13.	Port bypass circuit physical interconnect	49
Figure 14.	FC-AL SCA device connector dimensions	50
Figure 15.	J6 connector dimensions	50
Figure 16.	FC-AL transmitters and receivers	52
Figure 17.	Transmit eye diagram	57
Figure 18.	Receive eye diagram	

# 1.0 Scope

This manual describes Seagate Technology® LLC, Barracuda 180FC (Fibre Channel) disc drives.

Barracuda 180FC drives support the Fibre Channel Arbitrated Loop and SCSI Fibre Channel Protocol specifications to the extent described in this manual. The *Fibre Channel Interface Manual* (part number 77767496) describes the general Fibre Channel Arbitrated Loop characteristics of this and other Seagate Fibre Channel drives.

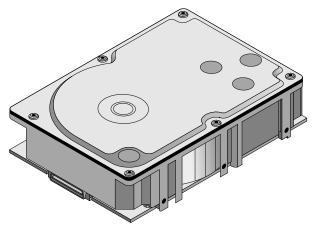


Figure 1. Barracuda 180FC family disc drive

# 2.0 Applicable standards and reference documentation

The drive has been developed as a system peripheral to the highest standards of design and construction. The drive depends upon its host equipment to provide adequate power and environment in order to achieve optimum performance and compliance with applicable industry and governmental regulations. Special attention must be given in the areas of safety, power distribution, shielding, audible noise control, and temperature regulation. In particular, the drive must be securely mounted in order to guarantee the specified performance characteristics. Mounting by bottom holes must meet the requirements of Section 8.5.

#### 2.1 Standards

The Barracuda 180FC family complies with Seagate standards as noted in the appropriate sections of this manual and the Seagate *Fibre Channel Interface Manual*, part number 77767496.

The Barracuda 180FC disc drive is a UL recognized component per UL1950, CSA certified to CAN/CSA C22.2 No. 950-95, and VDE certified to VDE 0805 and EN60950.

#### 2.1.1 Electromagnetic compatibility

The drive, as delivered, is designed for system integration and installation into a suitable enclosure prior to use. As such the drive is supplied as a subassembly and is not subject to Subpart B of Part 15 of the FCC Rules and Regulations nor the Radio Interference Regulations of the Canadian Department of Communications.

The design characteristics of the drive serve to minimize radiation when installed in an enclosure that provides reasonable shielding. As such, the drive is capable of meeting the Class B limits of the FCC Rules and Regulations of the Canadian Department of Communications when properly packaged. However, it is the user's responsibility to assure that the drive meets the appropriate EMI requirements in their system. Shielded I/O cables may be required if the enclosure does not provide adequate shielding. If the I/O cables are external to the enclosure, shielded cables should be used, with the shields grounded to the enclosure and to the host controller.

# 2.1.1.1 Electromagnetic susceptibility

As a component assembly, the drive is not required to meet any susceptibility performance requirements. It is the responsibility of those integrating the drive within their systems to perform those tests required and design their system to ensure that equipment operating in the same system as the drive or external to the system does not adversely affect the performance of the drive. See Section 5.1.1 and Table 1, DC power requirements.

# 2.1.2 Electromagnetic compliance

Seagate uses an independent laboratory to confirm compliance with the directives/standards for CE Marking and C-Tick Marking. The drive was tested in a representative system for typical applications. The selected system represents the most popular characteristics for test platforms. The system configurations include:

- Typical current use microprocessor
- 3.5-inch floppy disc drive
- Keyboard
- Monitor/display
- Printer
- · External modem
- Mouse

Although the test system with this Seagate model complies with the directives/standards, we cannot guarantee that all systems will comply. The computer manufacturer or system integrator shall confirm EMC compliance and provide the appropriate marking for their product.

#### Electromagnetic compliance for the European Union

If this model has the CE Marking it complies with the European Union requirements of the Electromagnetic Compatibility Directive 89/336/EEC of 03 May 1989 as amended by Directive 92/31/EEC of 28 April 1992 and Directive 93/68/EEC of 22 July 1993.

#### Australian C-Tick

If this model has the C-Tick Marking it complies with the Australia/New Zealand Standard AS/NZS3548 1995 and meets the Electromagnetic Compatibility (EMC) Framework requirements of Australia's Spectrum Management Agency (SMA).

#### **Korean MIC**

If this model has the Korean Ministry of Information and Communication (MIC) logo, it complies with paragraph 1 of Article 11 of the Electromagnetic Compatibility (EMC) Control Regulation and meets the Electromagnetic Compatibility Framework requirements of the Radio Research Laboratory (RRL) Ministry of Information and Communication Republic of Korea.

#### **Taiwanese BSMI**

If this model has two Chinese words meaning "EMC certification" followed by an eight digit identification number, as a Marking, it complies with Chinese National Standard (CNS) 13438 and meets the Electromagnetic Compatibility (EMC) Framework requirements of the Taiwanese Bureau of Standards, Metrology, and Inspection (BSMI).

#### 2.2 Reference documents

Barracuda 180FC Installation Guide Seagate part number: 100107697

Fibre Channel Interface Manual Seagate part number: 77767496

#### **ANSI Fibre Channel Documents**

X3.230-1994	FC Physical and Signaling Interface (FC-PH)
X3.297.1997	FC-PH-2 Fibre Channel Physical and Signaling Interface-2
X3.303.1998	FC-PH-3 Fibre Channel Physical and Signaling Interface-3
X3.272-1996	FC Arbitrated Loop (FC-AL)
X3.269-1996	Fibre Channel Protocol for SCSI (FCP)
NCITS TR-19	Private Loop SCSI Direct Attach (PLDA)
NCITS TR-20	Fabric Loop Attachment (FC-FLA)
SFF-8045	Specification for 40-pin SCA-2 Connector with Parallel Selection
SFF-8067	Specification for 40-pin SCA-2 Connector with Bidirectional Enclosure Services
	Interface

ANSI Small Computer System Interface (SCSI) Documents

X3.131-1994 (SCSI-2)

X3.270-1996 (SCSI-3) Architecture Model NCITS 305-199X (SCSI-3) Enclosure Services

Specification for Acoustic Test Requirement and Procedures

Seagate part number: 30553-001

Package Test Specification Seagate P/N 30190-001 (under 100 lb.)
Package Test Specification Seagate P/N 30191-001 (over 100 lb.)

In case of conflict between this document and any referenced document, this document takes precedence.

# 3.0 General description

Barracuda<sup>TM</sup> 180FC drives combine giant magnetoresistive (GMR) heads, partial response/maximum likelihood (PRML) read channel electronics, embedded servo technology, and a Fibre Channel interface to provide high performance, high capacity data storage for a variety of systems including engineering workstations, network servers, mainframes, and supercomputers.

Barracuda 180FC drives are random access storage devices designed to support the Fibre Channel Arbitrated Loop (FC-AL) and SCSI Fibre Channel Protocol as described in the ANSI specifications, this document, and the *Fibre Channel Interface Manual* (part number 77767496) which describes the general interface characteristics of this drive. Barracuda 180FC drives are classified as intelligent peripherals and provide level 2 conformance (highest level) with the ANSI SCSI standard.

The head and disc assembly (HDA) is sealed at the factory. Air recirculates within the HDA through a non-replaceable filter to maintain a contamination-free HDA environment.

See Figure 2 for an exploded view of the drive. Never disassemble the HDA. This exploded view is for information only. Do not attempt to service items in the sealed enclosure (heads, media, actuator, etc.) as this requires special facilities. The drive contains no parts replaceable by the user and opening the HDA for any reason voids your warranty.

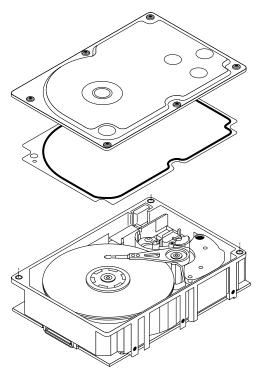


Figure 2. Barracuda 180FC disc drive

Barracuda 180FC drives use a dedicated landing zone at the innermost radius of the media to eliminate the possibility of destroying or degrading data by landing in the data zone. The heads automatically go to the landing zone when power is removed from the drive.

An automatic shipping lock prevents potential damage to the heads and discs that results from movement during shipping and handling. The shipping lock disengages and the head load process begins when power is applied to the drive.

Barracuda 180FC drives decode track 0 location data from the servo data embedded on each surface to eliminate mechanical transducer adjustments and related reliability concerns.

The drives also use a high-performance actuator assembly with a low-inertia, balanced, patented, straight arm design that provides excellent performance with minimal power dissipation.

#### 3.1 Standard features

Barracuda 180FC drives have the following standard features:

- Integrated dual port FC-AL controller
- · Concurrent dual port transfers
- Support for FC arbitrated loop, private and public attachment
- · Differential copper FC drivers and receivers
- Downloadable firmware using the FC-AL interface
- Supports SCSI enclosure services via interface connector
- 128-deep task set (queue)
- Supports up to 32 initiators
- Drive selection ID and configuration options are set on the FC-AL backpanel or through interface commands. Jumpers are not used on the drive.
- · Fibre Channel worldwide name uniquely identifies the drive and each port
- User-selectable logical block size (512 to 704 bytes per logical block)
- Selectable frame sizes from 256 to 2,112 bytes
- · Industry standard 3.5-inch half high form factor dimensions
- · Programmable logical block reallocation scheme
- · Flawed logical block reallocation at format time
- · Programmable auto write and read reallocation
- · Reed-Solomon error correction code
- Sealed head and disc assembly (HDA)
- No preventive maintenance or adjustments required
- · Dedicated head landing zone
- · Automatic shipping lock
- Embedded Grey Code track address to eliminate seek errors
- · Self-diagnostics performed at power on
- 1:1 interleave
- Zone bit recording (ZBR)
- · Vertical, horizontal, or top down mounting
- · Dynamic spindle brake
- 4,096 Kbyte data buffer (16,384 Kbytes on FCV drives). See Section 4.5.
- Embedded servo design
- Reallocation of defects on command (Post Format)
- Fibre Channel interface transports SCSI protocol

# 3.2 Media description

The media used on the drive has a diameter of approximately 84 mm (approximately 3.3 inches). The aluminum substrate is coated with a thin film magnetic material, overcoated with a proprietary protective layer for improved durability and environmental protection.

# 3.3 Performance

- Programmable multi-segmentable cache buffer
- 106 Mbytes/sec maximum instantaneous data transfers per port (212 Mbytes/sec with 2 GHz link rate)
- 7,200 RPM spindle. Average latency = 4.17 msec
- · Command queuing of up to 128 commands
- · Background processing of queue
- · Supports start and stop commands
- · Adaptive seek velocity; improved seek performance

#### 3.4 Reliability

- 1,200,000 hour MTBF
- · LSI circuitry
- · Balanced low mass rotary voice coil actuator

- Self-Monitoring Analysis and Reporting Technology (S.M.A.R.T.)
- Dithering

#### 3.5 Unformatted and formatted capacities

Formatted capacity depends on the spare reallocation sectors scheme selected, the number of data tracks per sparing zone, and the number of alternate sectors (LBAs) per sparing zone. The following table shows the standard OEM model capacity:

Formatted Unformatted ST1181677FC/FCV 1522c441h (181.6 Gbytes) 241.9 Gbytes

Standard OEM models are formatted to 512 bytes per block. You can order other capacities by requesting a different sparing scheme and logical block size.

The sector size is selectable at format time. Users having the necessary equipment may modify the data block size before issuing a format command and obtain different formatted capacities than those listed. Barracuda 180FC drives use a zone sparing scheme. The drive is divided into frequency zones with a variable number of spares in each zone.

**Note.** For 2 gigabit operation, sector sizes must be divisible by 8.

#### 3.6 Programmable drive capacity

Using the Mode Select command, the drive can change its capacity to something less than maximum. See the Mode Select (6) parameter list table in the *Fibre Channel Interface Manual*, part number 7767496. A value of zero in the Number of Blocks field indicates that the drive will not change the capacity it is currently formatted to have. A number other than zero and less than the maximum number of LBAs in the Number of Blocks field changes the total drive capacity to the value in the Number of Blocks field. A value greater than the maximum number of LBAs is rounded down to the maximum capacity.

# 3.7 Factory-installed accessories

OEM standard drives are shipped with the *Barracuda 180FC Installation Guide* (part number 100107697).

#### 3.8 Factory-installed options

You may order the following items which are incorporated at the manufacturing facility during production or packaged before shipping. Some of the options available are (not an exhaustive list of possible options):

- Other capacities can be ordered depending on sparing scheme and sector size requested.
- Single-unit shipping pack. The drive is normally shipped in bulk packaging to provide maximum protection against transit damage. Units shipped individually require additional protection as provided by the single unit shipping pack. Users planning single unit distribution should specify this option.
- The *Barracuda 180FC Installation Guide*, part number 100107697, is usually included with each standard OEM drive shipped, but extra copies may be ordered.
- The Safety and Regulatory Agency Specifications, part number 75789512, is usually included with each standard OEM drive shipped, but extra copies may be ordered.

# 3.9 User-installed accessories

The following accessories are available. All kits may be installed in the field.

- Evaluation kit, part number 73473641.
   This kit provides an adapter card ("T-card") to allow cable connections for two FC ports and DC power.
- Single-unit shipping pack.

# 4.0 Performance characteristics

This section provides detailed information concerning performance-related characteristics and features of Barracuda 180FC drives.

#### 4.1 Internal drive characteristics

	ST1181677FC/FCV	
Drive capacity	181.6	Gbytes (formatted, rounded off value)
Read/write data heads	24	
Bytes per track	406,071	Bytes (average, rounded off values)
Bytes per surface	19,263	Mbytes (unformatted, rounded off value)
Tracks per surface (total)	24,247	Tracks (user accessible)
Tracks per inch	31,200	TPI
Peak bits per inch	490	KBPI
Internal data rate	282-508	Mbits/sec (variable with zone)
Disc rotation speed	7,200	rpm ( <u>+</u> 0.5%)
Avg rotational latency	4.17	msec

# 4.2 Seek performance characteristics

#### 4.2.1 Access time

		Including controller overhead (without disconnect) <sup>1, 2</sup> (msec)		Not including controller overhead (without disconnect) <sup>1,2</sup> (msec)	
		Read	Write	Read	Write
ST1181677FC	;				
Average	Typical <sup>3,4</sup>	7.6	8.4	7.4	8.2
Single track	Typical <sup>3,4</sup>	1.0	1.3	0.8	1.1
Full stroke	Typical <sup>3,4</sup>	16.2	17.2	16.0	17.0

- 1. Execution time measured from receipt of the FCP Command to the FCP Response.
- 2. Assumes no errors and no sector has been relocated.
- 3. Typical access times are measured under nominal conditions of temperature, voltage, and horizontal orientation as measured on a representative sample of drives.
- 4. Access time = controller overhead + average seek time.

  Access to data = controller overhead + average seek time + latency time.

# 4.2.2 Format command execution time for $\geq$ 512-byte sectors

#### ST1181677FC/FCV

Maximum (with verify) 210 minutes
Maximum (without verify) 120 minutes

# 4.2.3 General performance characteristics

Minimum sector interleave 1 to 1

Data buffer to/from disc media (one 512-byte logical block)\*

Minimum25.3 MBytes/secAverage36.1 MBytes/secMaximum47.0 MBytes/sec

Fibre Channel Interface maximum instantaneous transfer rate 1 GHz 2 GHz

106 Mbytes/sec\* per port (dual port = 212 mbytes/sec\* per port (dual port = 424 mbytes/sec\*)

Mbytes/sec\*)

212 Mbytes/sec\* per port (dual port = 424 mbytes/sec\*)

Logical block sizes

Default is 512-byte data blocks

Variable 512 to 704 bytes per sector in even number of bytes per sector. If n (number of bytes per sector) is odd, then n-1 will be used.

Read/write consecutive sectors on a track
Yes

Flaw reallocation performance impact (for flaws reallocated at format time Negligible using the spare sectors per sparing zone reallocation scheme.)

Overhead time for head switch in sequential mode 0.8 msec

Overhead time for one track cylinder switch in sequential mode 1.2 msec (typical)

Average rotational latency 4.17 msec

# 4.3 Start/stop time

If the Motor Start option is disabled, the drive becomes ready within 30 seconds after DC power is applied. If a recoverable error condition is detected during the start sequence, the drive executes a recovery procedure and the time to become ready may exceed 30 seconds. Stop time is less than 30 seconds (maximum) from removal of DC power.

If the Motor Start option is enabled, the internal controller accepts the commands listed in the *Fibre Channel Interface Manual* less than 3 seconds after DC power has been applied. After the Motor Start command has been received, the drive becomes ready for normal operations within 30 seconds (excluding the error recovery procedure). The Motor Start command can also be used to command the drive to stop the spindle.

There is no power control switch on the drive.

#### 4.4 Prefetch/multi-segmented cache control

The drive provides a prefetch (read look-ahead) and multi-segmented cache control algorithms that in many cases can enhance system performance. Cache refers to the drive buffer storage space when it is used in cache operations. To select this feature, the host sends the Mode Select command with the proper values in the applicable bytes in page 08h. Prefetch and cache operations are independent features from the standpoint that each is enabled and disabled independently using the Mode Select command; however, in actual operation, the prefetch feature overlaps cache operation somewhat as described in sections 4.5.1 and 4.5.2.

All default cache and prefetch mode parameter values (Mode Page 08h) for standard OEM versions of this drive family are given in Table 15.

<sup>\*</sup>Assumes no errors and no relocated logical blocks. Rate measured from the start of the first logical block transfer to or from the host.

#### 4.5 Cache operation

Note. Refer to the Fibre Channel Interface Manual for more detail concerning the cache bits.

Of the 4,096 kbytes physical buffer space in the drive, 3,600 kbytes (14,399 kbytes of the 16,384 kbytes on FCV units) can be used as a cache.

The buffer can be divided into logical segments (using Mode Select Page 08h, byte 13) from which data is read and to which data is written.

The drive keeps track of the logical block addresses of the data stored in each segment of the buffer. If the cache is enabled (see RCD bit in the *Fibre Channel Interface Manual*), data requested by the host with a read command is retrieved from the buffer, if possible, before any disc access is initiated. If cache operation is not enabled, the buffer (still segmented with the required number of segments) is still used, but only as circular buffer segments during disc medium read operations (disregarding Prefetch operation for the moment). That is, the drive does not check in the buffer segments for the requested read data, but goes directly to the medium to retrieve it. The retrieved data merely passes through some buffer segment on the way to the host. On a cache miss, all data transfers to the host are in accordance with buffer-full ratio rules. On a cache hit, the drive ignores the buffer-full ratio rules. See the explanation provided with the information about Mode Page 02h (disconnect/reconnect control) in the *Fibre Channel Interface Manual*.

The following is a simplified description of the prefetch/cache operation:

Case A—read command is received and the first logical block is already in the cache:

- 1. Drive transfers to the initiator the first logical block requested plus all subsequent contiguous logical blocks that are already in the cache. This data may be in multiple segments.
- 2. When a requested logical block is reached that is not in any cache segment, the drive fetches it and any remaining requested logical block addresses from the disc and puts them in a segment of the cache. The drive transfers the remaining requested logical blocks from the cache to the host in accordance with the Mode Select Disconnect/Reconnect parameters, page 02h.
- 3. If the prefetch feature is enabled, refer to section 4.5.2 for operation from this point.

**Case B**—A Read command requests data, and the first logical block is not in any segment of the cache:

- 1. The drive fetches the requested logical blocks from the disc and transfers them into a segment, and then from there to the host in accordance with the Mode Select Disconnect/Reconnect parameters, page 02h.
- 2. If the prefetch feature is enabled, refer to section 4.5.2 for operation from this point.

During a prefetch, the drive crosses a cylinder boundary to fetch data only if the Discontinuity (DISC) bit is set to 1 in bit 4 of byte 2 of the Mode Select parameters page 08h. Default is zero for bit 4.

Each cache segment is actually a self-contained circular buffer whose length is an integer number of logical blocks. The wrap-around capability of the individual segments greatly enhances the cache's overall performance, allowing a wide range of user-selectable configurations. The drive supports operation of any integer number of segments from 1 to 16. Divide the 3,600 Kbytes in the buffer by the number of segments to get the segment size. Default is 3 segments.

**Note.** The size of each segment is not reported by Mode Sense command page 08h, bytes 14 and 15. The value 0XFFFF is always reported regardless of the actual size of the segment. Sending a size specification using the Mode Select command (bytes 14 and 15) does not set up a new segment size. If the STRICT bit in Mode page 00h (byte 2, bit 1) is set to one, the drive responds as it does for any attempt to change an unchangeable parameter.

#### 4.5.1 Caching write data

Write caching is a write operation by the drive that makes use of a drive buffer storage area where the data to be written to the medium is stored while the drive performs the Write command.

If read caching is enabled (RCD=0), then data written to the medium is retained in the cache to be made available for future read cache hits. The same buffer space and segmentation is used as set up for read functions. The buffer segmentation scheme is set up or changed independently, having nothing to do with the state of RCD. When a write command is issued, if RCD=0, the cache is first checked to see if any logical blocks that

are to be written are already stored in the cache from a previous read or write command. If there are, the respective cache segments are cleared. The new data is cached for subsequent Read commands.

If the number of write data logical blocks exceed the size of the segment being written into, when the end of the segment is reached, the data is written into the beginning of the same cache segment, overwriting the data that was written there at the beginning of the operation; however, the drive does not overwrite data that has not yet been written to the medium.

If write caching is enabled (WCE=1), then the drive may return Good status on a write command after the data has been transferred into the cache, but before the data has been written to the medium. If an error occurs while writing the data to the medium, and Good status has already been returned, a deferred error will be generated.

The Synchronize Cache command may be used to force the drive to write all cached write data to the medium. Upon completion of a Synchronize Cache command, all data received from previous write commands will have been written to the medium.

Table 15 shows the mode default settings for the drive.

# 4.5.2 Prefetch operation

If the Prefetch feature is enabled, data in contiguous logical blocks on the disc immediately beyond that which was requested by a Read command are retrieved and stored in the buffer for immediate transfer from the buffer to the host on subsequent Read commands that request those logical blocks (this is true even if cache operation is disabled). Though the prefetch operation uses the buffer as a cache, finding the requested data in the buffer is a prefetch hit, not a cache operation hit.

To enable Prefetch, use Mode Select page 08h, byte 12, bit 5 (Disable Read Ahead - DRA bit). DRA bit = 0 enables prefetch.

Since data that is prefetched replaces data already in some buffer segments, the host can limit the amount of prefetch data to optimize system performance. The Max Prefetch field (bytes 8 and 9) limits the amount of prefetch. The drive does not use the Prefetch Ceiling field (bytes 10 and 11).

During a prefetch operation, the drive crosses a cylinder boundary to fetch more data only if Mode parameters page 08h, byte 2, bit 4 is set to 1 (Discontinuity--DISC bit).

When prefetch (read look-ahead) is enabled (enabled by DRA = 0), it operates under the control of ARLA (Adaptive Read Look-Ahead). If the host uses software interleave, ARLA enables prefetch of contiguous blocks from the disc when it senses that a prefetch hit will likely occur, even if two consecutive read operations were not for physically contiguous blocks of data (e.g. "software interleave"). ARLA disables prefetch when it decides that a prefetch hit will not likely occur. If the host is not using software interleave, and if two sequential read operations are not for contiguous blocks of data, ARLA disables prefetch, but as long as sequential read operations request contiguous blocks of data, ARLA keeps prefetch enabled.

# 4.5.3 Optimizing cache performance for desktop and server applications

Desktop and server applications require different drive caching operations for optimal performance. This means it is difficult to provide a single configuration that meets both of these needs. In a desktop environment, you want to configure the cache to respond quickly to repetitive accesses of multiple small segments of data without taking the time to "look ahead" to the next contiguous segments of data. In a server environment, you want to configure the cache to provide large volumes of sequential data in a non-repetitive manner. In this case, the ability of the cache to "look ahead" to the next contiguous segments of sequential data is a good thing.

The Performance Mode (PM) bit controls the way the drive switches the cache buffer into different modes of segmentation. In "server mode" (PM bit = 0), the drive can dynamically change the number of cache buffer segments as needed to optimize the performance, based on the command stream from the host. In "desktop mode" (PM bit = 1), the number of segments is maintained at the value defined in Mode Page 8, Byte 13, at all times. For additional information about the PM bit, refer to the Unit Attention Parameters page (00h) of the Mode Sense command (1Ah) in the *Fibre Channel Interface Product Manual*, part number 77767496.

# 5.0 Reliability specifications

The following reliability specifications assume correct host and drive operational interface, including all interface timings, power supply voltages, environmental requirements and drive mounting constraints

Seek error rate: Less than 10 errors in 10<sup>8</sup> seeks

Read Error Rates<sup>1</sup>

Recovered Data Less than 10 errors in 10<sup>12</sup> bits transferred (OEM default settings)

Unrecovered Data

Less than 1 sector in 10<sup>15</sup> bits transferred

Miscorrected Data

Less than 1 sector in 10<sup>21</sup> bits transferred

Interface error rate: Less than 1 error in 10<sup>12</sup> bits transferred with minimum receive eye.

Less than 1 error in 10<sup>14</sup> bits transferred with typical receive eye.

See Section 9.6.4, "Differential PECL input." on page 57

MTBF: 1,200,000 hours

Service life: 5 years

Preventive maintenance: None required

1. Error rate specified with automatic retries and data correction with ECC enabled and all flaws reallocated.

#### 5.1 Error rates

The error rates stated in this manual assume the following:

- The drive is operated in accordance with this manual using DC power as defined in paragraph 6.2, "DC power requirements."
- The drive has been formatted with the FC-AL Format command.
- Errors caused by media defects or host system failures are excluded from error rate computations.
- · Assume random data.

#### 5.1.0.1 Interface errors

An interface error is defined as a failure of the receiver on a port to recover the data as transmitted by the device port connected to the receiver. The error may be detected as a running disparity error, illegal code, loss of word sync, or CRC error. The total error rate for a loop of devices is the sum of the individual device error rates.

#### 5.1.1 Environmental interference

When evaluating systems operation under conditions of electromagnetic interference (EMI), the performance of the drive within the system is considered acceptable if the drive does not generate an unrecoverable condition.

An unrecoverable error, or condition, is defined as one that:

- · is not detected and corrected by the drive itself
- · is not detected from the error or fault status provided through the drive or FC-AL interface
- is not recovered by normal drive or system recovery procedures without operator intervention

#### 5.1.2 Write errors

Write errors can occur as a result of media defects, environmental interference, or equipment malfunction. Therefore, write errors are not predictable as a function of the number of bits passed.

If an unrecoverable write error occurs because of an equipment malfunction in the drive, the error is classified as a failure affecting MTBF. Unrecoverable write errors are those that cannot be corrected within two attempts at writing the record with a read verify after each attempt (excluding media defects).

# 5.1.3 Seek errors

A seek error is defined as a failure of the drive to position the heads to the addressed track. After detecting an initial seek error, the drive automatically performs an error recovery process. If the error recovery process fails, a seek positioning error (15h) is reported with a Medium error (3h) or Hardware error (4h) reported in the

Sense Key. This is an unrecoverable seek error. Unrecoverable seek errors are classified as failures for MTBF calculations. Refer to the *Fibre Channel Interface Manual*, part number 77767496, for Request Sense information.

# 5.2 Reliability and service

You can enhance the reliability of Barracuda 180FC disc drives by ensuring that the drive receives adequate cooling. Section 6.0 provides recommended air-flow information, temperature measurements, and other information, which you can use to enhance the service life of the drive.

# 5.2.1 Mean time between failure (MTBF)

The production disc drive achieves an MTBF of 1,200,000 hours when operated in an environment that ensures the case temperatures specified in Section 6.4.1 are not exceeded. Short-term excursions up to the specification limits of the operating environment will not affect MTBF performance. Operating the drive at case temperatures above these values will adversely affect the drive's ability to meet specifications. See Section 6.4, "Environmental limits".

The MTBF target is specified as device power-on hours (POH) for all drives in service per failure.

The following expression defines MTBF:

MTBF per measurement period = Estimated power-on operating hours in the period

Number of drive failures in the period

Estimated power-on operating hours means power-on hours per disc drive times the total number of disc drives in service. Each disc drive must have accumulated at least nine months of operation. Data is calculated on a rolling average base for a minimum period of six months.

MTBF is based on the following assumptions:

- 8,760 power-on hours per year
- 250 average on/off cycles per year
- Operating at nominal voltages
- System provides adequate cooling to ensure the case temperatures specified in Section 6.4.1 are not exceeded.

Drive failure means any stoppage or failure to meet defined specifications caused by drive malfunction.

A S.M.A.R.T. predictive failure indicates that the drive is deteriorating to an imminent failure and is considered an MTBF hit.

#### 5.2.2 Preventive maintenance

No routine scheduled preventive maintenance is required.

#### 5.2.3 Service life

The drive has a useful service life of five years. Depot repair or replacement of major parts is permitted during the lifetime.

# 5.2.4 Service philosophy

Special equipment is required to repair the drive HDA. To achieve the above service life, repairs must be performed only at a properly equipped and staffed Seagate service and repair facility. Troubleshooting and repair of PCBs in the field is not recommended because of the extensive diagnostic equipment required for effective servicing. There are not spare parts available for this drive. The drive warranty is voided if the HDA is opened.

# 5.2.5 Service tools

No special tools are required for site installation or recommended for site maintenance. Refer to Section 5.2.4. The depot repair philosophy of the drive precludes the necessity for special tools. Field repair of the drive is not practical because users cannot purchase individual parts for the drive.

#### 5.2.6 Hot plugging the drive

Inserting and removing the drive on the FC-AL will interrupt loop operation. The interruption occurs when the receiver of the next device in the loop must synchronize to a different input signal. FC error detection mechanisms, character sync, running disparity, word sync, and CRC are able to detect any error. Recovery is initiated based on the type of error.

The disc drive defaults to the FC-AL Monitoring state, Pass-through state, when it is powered-on by switching the power or hot plugged. The control line to an optional port bypass circuit (external to the drive), defaults to the Enable Bypass state. If the bypass circuit is present, the next device in the loop will continue to receive the output of the previous device to the newly inserted device. If the bypass circuit is not present, loop operation is temporarily disrupted until the next device starts receiving the output from the newly inserted device and regains synchronization to the new input.

The Pass-through state is disabled while the drive performs self test of the FC interface. The control line for an external port bypass circuit remains in the Enable Bypass state while self test is running. If the bypass circuit is present, loop operation may continue. If the bypass circuit is not present, loop operation will be halted while the self test of the FC interface runs.

When the self test completes successfully, the control line to the bypass circuit is disabled and the drive enters the FC-AL Initializing state. The receiver on the next device in the loop must synchronize to output of the newly inserted drive.

If the self-test fails, the control line to the bypass circuit remains in the Enable Bypass state.

**Note.** It is the responsibility of the systems integrator to assure that no temperature, energy, voltage hazard, or ESD potential hazard is presented during the hot connect/disconnect operation. Discharge the static electricity from the drive carrier prior to inserting it into the system.

**Caution.** The drive motor must come to a complete stop prior to changing the plane of operation. This time is required to insure data integrity.

#### 5.2.7 S.M.A.R.T.

S.M.A.R.T. is an acronym for Self-Monitoring Analysis and Reporting Technology. This technology is intended to recognize conditions that indicate imminent drive failure and is designed to provide sufficient warning of a failure to allow you to back up the data before an actual failure occurs.

**Note.** The drive's firmware monitors specific attributes for degradation over time but can't predict instantaneous drive failures.

Each monitored attribute has been selected to monitor a specific set of failure conditions in the operating performance of the drive and the thresholds are optimized to minimize "false" and "failed" predictions.

#### **Controlling S.M.A.R.T.**

The operating mode of S.M.A.R.T. is controlled by the DEXCPT and PERF bits on the Informational Exceptions Control mode page (1Ch). Use the DEXCPT bit to enable or disable the S.M.A.R.T. feature. Setting the DEXCPT bit disables all S.M.A.R.T. functions. When enabled, S.M.A.R.T. collects on-line data as the drive performs normal read and write operations. When the PERF bit is set, the drive is considered to be in "On-line Mode Only" and will not perform off-line functions.

You can measure off-line attributes and force the drive to save the data by using the Rezero Unit command. Forcing S.M.A.R.T. resets the timer so that the next scheduled interrupt is in two hours.

You can interrogate the drive through the host to determine the time remaining before the next scheduled measurement and data logging process occurs. To accomplish this, issue a Log Sense command to log page 0x3E. This allows you to control when S.M.A.R.T. interruptions occur. Forcing S.M.A.R.T. with the RTZ command resets the timer.

## **Performance impact**

S.M.A.R.T. attribute data is saved to the disc so that the events that caused a predictive failure can be recreated. The drive measures and saves parameters once every two hours subject to an idle period on the FC-AL

bus. The process of measuring off-line attribute data and saving data to the disc is uninterruptable. The maximum on-line only processing delay is summarized below:

## Maximum processing delay

On-line only delay Fully-enabled delay DEXCPT = 0, PERF = 1 DEXCPT = 0, PERF = 0

S.M.A.R.T. delay times 50 milliseconds 300 milliseconds

#### Reporting control

Reporting is controlled by the MRIE bits in the Informational Exceptions Control mode page (1Ch). Subject to the reporting method, the firmware will issue to the host an 01-5Dxx sense code. The error code is preserved through bus resets and power cycles.

# **Determining rate**

S.M.A.R.T. monitors the rate at which errors occur and signals a predictive failure if the rate of degraded errors increases to an unacceptable level. To determine rate, error events are logged and compared to the number of total operations for a given attribute. The interval defines the number of operations over which to measure the rate. The counter that keeps track of the current number of operations is referred to as the Interval Counter.

S.M.A.R.T. measures error rates. All errors for each monitored attribute are recorded. A counter keeps track of the number of errors for the current interval. This counter is referred to as the Failure Counter.

Error rate is the number of errors per operation. The algorithm that S.M.A.R.T. uses to record rates of error is to set thresholds for the number of errors and their interval. If the number of errors exceeds the threshold before the interval expires, the error rate is considered to be unacceptable. If the number of errors does not exceed the threshold before the interval expires, the error rate is considered to be acceptable. In either case, the interval and failure counters are reset and the process starts over.

## Predictive failures

S.M.A.R.T. signals predictive failures when the drive is performing unacceptably for a period of time. The firmware keeps a running count of the number of times the error rate for each attribute is unacceptable. To accomplish this, a counter is incremented each time the error rate is unacceptable and decremented (not to exceed zero) whenever the error rate is acceptable. If the counter continually increments such that it reaches the predictive threshold, a predictive failure is signaled. This counter is referred to as the Failure History Counter. There is a separate Failure History Counter for each attribute.

# 5.2.8 Drive Self Test (DST)

Drive Self Test (DST) is a technology designed to recognize drive fault conditions that qualify the drive as a failed unit. DST validates the functionality of the drive at a system level.

There are two test coverage options implemented in DST:

- 1. Extended test
- 2. Short text

The most thorough option is the extended test that performs various tests on the drive and scans every logical block address (LBA) of the drive. The short test is time-restricted and limited in length—it does not scan the entire media surface, but does some fundamental tests and scans portions of the media.

If DST encounters an error during either of these tests, it reports a fault condition. If the drive fails the test, remove it from service and return it to Seagate for service.

#### 5.2.8.1 DST Failure Definition

The drive will present a "diagnostic failed" condition through the self-tests results value of the diagnostic log page if a functional failure is encountered during DST. The channel and servo parameters are not modified to test the drive more stringently, and the number of retries are not reduced. All retries and recovery processes are enabled during the test. If data is recoverable, no failure condition will be reported regardless of the number of retries required to recover the data.

The following conditions are considered DST failure conditions:

- · Seek error after retries are exhausted
- · Track-follow error after retries are exhausted
- · Read error after retries are exhausted
- Write error after retries are exhausted.

Recovered errors will not be reported as diagnostic failures.

# 5.2.8.2 Implementation

This section provides all of the information necessary to implement the DST function on this drive.

# 5.2.8.2.1 State of the drive prior to testing

The drive must be in a ready state before issuing the Send Diagnostic command. There are multiple reasons why a drive may not be ready, some of which are valid conditions, and not errors. For example, a drive may be in process of doing a format, or another DST. It is the responsibility of the host application to determine the "not ready" cause.

While not technically part of DST, a Not Ready condition also qualifies the drive to be returned to Seagate as a failed drive.

A Drive Not Ready condition is reported by the drive under the following conditions:

- · Motor will not spin
- · Motor will not lock to speed
- · Servo will not lock on track
- · Drive cannot read configuration tables from the disc

In these conditions, the drive responds to a Test Unit Ready command with an 02/04/00 or 02/04/03 code.

# **5.2.8.2.2** Invoking DST

To invoke DST, submit the Send Diagnostic command with the appropriate Function Code (001b for the short test or 010b for the extended test) in bytes 1, bits 5, 6, and 7. Refer to the Fibre Channel Interface Product Manual, part number 77767496, for additional information about invoking DST.

#### 5.2.8.2.3 Short and extended tests

DST has two testing options:

- 1. short
- 2. extended

These testing options are described in the following two subsections.

Each test consists of three segments: an electrical test segment, a servo test segment, and a read/verify scan segment.

#### **Short test (Function Code: 001b)**

The purpose of the short test is to provide a time-limited test that tests as much of the drive as possible within 120 seconds. The short test does not scan the entire media surface, but does some fundamental tests and scans portions of the media. A complete read/verify scan is not performed and only factual failures will report a fault condition. This option provides a quick confidence test of the drive.

#### **Extended test (Function Code: 010b)**

The objective of the extended test option is to empirically test critical drive components. For example, the seek tests and on-track operations test the positioning mechanism. The read operation tests the read head element and the media surface. The write element is tested through read/write/read operations. The integrity of the media is checked through a read/verify scan of the media. Motor functionality is tested by default as a part of these tests.

The anticipated length of the Extended test is reported through the Control Mode page.

#### 5.2.8.2.4 Log page entries

When the drive begins DST, it creates a new entry in the Self-test Results Log page. The new entry is created by inserting a new self-test parameter block at the beginning of the self-test results log parameter section of the log page. Existing data will be moved to make room for the new parameter block. The drive reports 20 parameter blocks in the log page. If there are more than 20 parameter blocks, the least recent parameter block will be deleted. The new parameter block will be initialized as follows:

- 1. The Function Code field is set to the same value as sent in the DST command
- 2. The Self-Test Results Value field is set to Fh
- 3. The drive will store the log page to non-volatile memory

After a self-test is complete or has been aborted, the drive updates the Self-Test Results Value field in its Self-Test Results Log page in non-volatile memory. The host may use Log Sense to read the results from up to the last 20 self-tests performed by the drive. The self-test results value is a 4-bit field that reports the results of the test. If the field is zero, the drive passed with no errors detected by the DST. If the field is not zero, the test failed for the reason reported in the field.

The drive will report the failure condition and LBA (if applicable) in the Self-test Results Log parameter. The Sense key, ASC, ASCQ, and FRU are used to report the failure condition.

#### 5.2.8.2.5 Abort

There are several ways to abort a diagnostic. You can use a SCSI Bus Reset or a Bus Device Reset message to abort the diagnostic.

You can abort a DST executing in background mode by using the abort code in the DST Function Code field. This will cause a 01 (self-test aborted by the application client) code to appear in the self-test results values log. All other abort mechanisms will be reported as a 02 (self-test routine was interrupted by a reset condition).

# 5.2.9 Product warranty

Beginning on the date of shipment to the customer and continuing for a period of five years, Seagate warrants that each product (including components and subassemblies) that fails to function properly under normal use due to defect in materials or workmanship or due to nonconformance to the applicable specifications will be repaired or replaced, at Seagate's option and at no charge to the customer, if returned by customer at customer's expense to Seagate's designated facility in accordance with Seagate's warranty procedure. Seagate will pay for transporting the repair or replacement item to the customer. For more detailed warranty information, refer to the standard terms and conditions of purchase for Seagate products. Refer to Section 10 for contact information.

#### Shipping

When transporting or shipping a drive, use only a Seagate-approved container. Keep your original box. Seagate approved containers are easily identified by the Seagate Approved Package label. Shipping a drive in a non-approved container voids the drive warranty.

Seagate repair centers may refuse receipt of components improperly packaged or obviously damaged in transit. Contact your authorized Seagate distributor to purchase additional boxes. Seagate recommends shipping by an air-ride carrier experienced in handling computer equipment.

# Product repair and return information

Seagate customer service centers are the only facilities authorized to service Seagate drives. Seagate does not sanction any third-party repair facilities. Any unauthorized repair or tampering with the factory seal voids the warranty.

# 6.0 Physical/electrical specifications

This section provides information relating to the physical and electrical characteristics of the drive.

# 6.1 AC power requirements

None.

# 6.2 DC power requirements

The voltage and current requirements for a single drive are shown below. Values indicated apply at the drive connector.

Table 1: DC power requirements

			ST1181677FC/FCV	
		Notes	(Amps)	(Amps)
Voltage			+5V	+12V [2]
Regulation		[5]	±5%	±5% [2]
Avg idle current DC	X	[1] [7]	0.82	0.53
Maximum starting current				
(peak DC) DC	3σ	[3]	0.89	1.55
(peak AC) AC	3σ	[3]	1.01	3.10
Delayed motor start (max) DC	3σ	[1] [4]	0.85	0.03
Peak operating current:				
Typical DC	$\overline{X}$	[1] [6]	0.86	0.84
Maximum DC	3σ	[1]	0.89	0.89
Maximum (peak) DC	3σ		1.37	2.23

- [1] Measured with average reading DC ammeter. Instantaneous +12V current peaks will exceed these values. Power supply at nominal voltage. N = 6, 22 Degrees C ambient.
- [2] For +12 V, a –10% tolerance is allowed during initial spindle start but must return to ±5% before reaching 7,200 RPM. The ±5% must be maintained after the drive signifies that its power-up sequence has been completed and that the drive is able to accept selection by the host initiator.
- [3] See +12V current profile in Figure 3.
- [4] This condition occurs when the Motor Start option is enabled and the drive has not yet received a Start Motor command.
- [5] See paragraph 6.2.1, "Conducted noise immunity." Specified voltage tolerance includes ripple, noise, and transient response.
- [6] Operating condition is defined as random 8 block reads at 160 I/Os per second. Current and power specified at nominal voltages. Decreasing +5 volt supply by 5% increases 5 volt current by 2.9%. Decreasing +12 volt supply by 5% increases 12 volt current by 2.4%.
- [7] During idle, the drive heads are relocated every 60 seconds to a random location within the band from track zero to one-fourth of maximum track.

#### General DC power requirement notes.

- 1. Minimum current loading for each supply voltage is not less than 1.3% of the maximum operating current shown.
- 2. The +5V and +12V supplies should employ separate ground returns.
- Where power is provided to multiple drives from a common supply, careful consideration for individual drive
  power requirements should be noted. Where multiple units are powered on simultaneously, the peak starting current must be available to each device.

- 4. Parameters, other than spindle start, are measured after a 10-minute warm up.
- 5. No terminator power.

# 6.2.1 Conducted noise immunity

Noise is specified as a periodic and random distribution of frequencies covering a band from DC to 10 MHz. Maximum allowed noise values given below are peak-to-peak measurements and apply at the drive power connector.

	+5V	+12V (with spindle motor not running)
0 to 100 kHz	150mV	150mV
100 kHz to 10 MHz	100mV	100mV

# 6.2.2 Power sequencing

The drive does not require power sequencing. The drive protects against inadvertent writing during power-up and down.

# 6.2.3 Current profiles

Figure 3 identifies the drive +12V current profile. The current during the various times is as shown:

- TO Power is applied to the drive.
- T1 Controller self-tests are performed.
- T2 Spindle begins to accelerate under current limiting after performing internal diagnostics.
- T3 Spindle is up to speed and the Head-Arm restraint is unlocked.

Note: All times and currents are typical. See Table 1 for maximum current requirements.

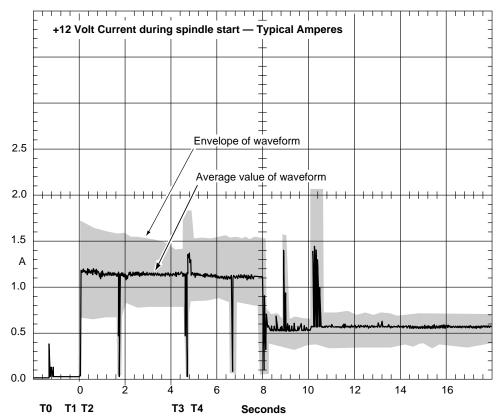


Figure 3. Typical ST1181677FC drive +12V current profile

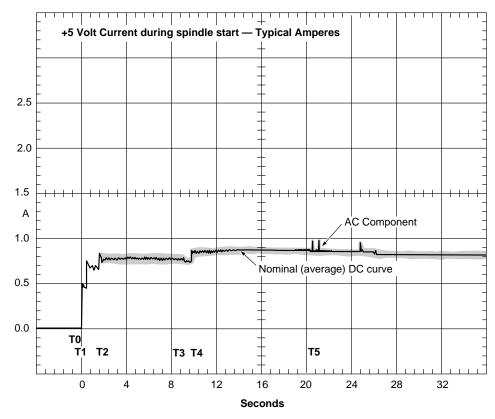


Figure 4. Typical ST1181677FC drive +5V current profile

# 6.3 Power dissipation

Typical power dissipation under idle conditions is 10.5 watts (35.86 BTUs per hour).

To obtain operating power for typical random read operations, refer to the following I/O rate curve (see Figure 5). Locate the typical I/O rate for a drive in your system on the horizontal axis and read the corresponding +5 volt current, +12 volt current, and total watts on the vertical axis. To calculate BTUs per hour, multiply watts by 3.4123.

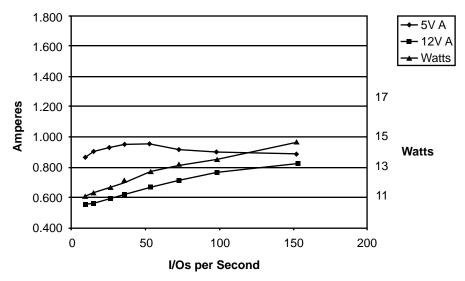


Figure 5. ST1181677FC DC current and power vs. input/output operations per second

#### 6.4 Environmental limits

Temperature and humidity values experienced by the drive must be such that condensation does not occur on any drive part. Altitude and atmospheric pressure specifications are referenced to a standard day at 58.7°F (14.8°C). Maximum wet bulb temperature is 82°F (28°C).

#### 6.4.1 Temperature

# a. Operating

With cooling designed to maintain the case temperature, the drive meets all specifications over a 41°F to 122°F (5°C to 50°C) drive ambient temperature range with a maximum temperature gradient of 36°F (20°C) per hour. The enclosure for the drive should be designed such that these temperatures are not exceeded. Air flow may be needed to achieve these temperature values (see Section 8.4). Operation at HDA case temperatures above these values may adversely affect the drives ability to meet specifications.

The MTBF specification for the drive is based on operating in an environment that ensures that the HDA case temperatures are not exceeded. Occasional excursions to drive ambient temperatures of 122°F (50°C) or 41°F (5°C) may occur without impact to specified MTBF. Air flow may be needed to achieve these temperatures. Continual or sustained operation at HDA case temperatures above these values may degrade MTBF. The maximum allowable continuous or sustained HDA case temperature for the rated MTBF is 122°F (50°C).

To confirm that the required cooling for the HDA is provided, place the drive in its final mechanical configuration, perform random write/read operations. After the temperatures stabilize, measure the case temperature.

The maximum allowable HDA case temperature is 140°F (60°C). Operation of the drive at the maximum case temperature is intended for short time periods only. Continuous operation at the elevated temperatures will reduce product reliability.

#### b. Non-operating

-40° to 158°F (-40° to 70°C) package ambient with a maximum gradient of 36°F (20°C) per hour. This specification assumes that the drive is packaged in the shipping container designed by Seagate for use with drive.

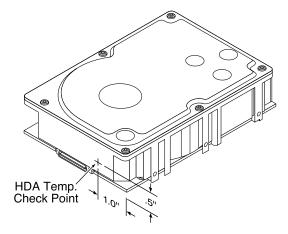


Figure 6. Location of the HDA Temperature check point

### 6.4.2 Relative humidity

The values below assume that no condensation on the drive occurs.

a. Operating

5% to 95% non-condensing relative humidity with a maximum gradient of 10% per hour.

b. Non-operating

5% to 95% non-condensing relative humidity.

# 6.4.3 Effective altitude (sea level)

- a. Operating
  - -1,000 to +10,000 feet (-305 to +3,048 meters)
- b. Non-operating
  - -1,000 to +40,000 feet (-305 to +12,210 meters)

#### 6.4.4 Shock and vibration

Shock and vibration limits specified in this document are measured directly on the drive chassis. If the drive is installed in an enclosure to which the stated shock and/or vibration criteria is applied, resonances may occur internally to the enclosure resulting in drive movement in excess of the stated limits. If this situation is apparent, it may be necessary to modify the enclosure to minimize drive movement.

The limits of shock and vibration defined within this document are specified with the drive mounted by any of the four methods shown in Figure 7, and in accordance with the restrictions of Section 8.5. Orientation of the side nearest the LED may be up or down.

# 6.4.4.1 Shock

a. Operating—normal

The drive, as installed for normal operation, shall operate error free while subjected to intermittent shock not exceeding 10.0 Gs at a maximum duration of 11 msec (half sinewave). The drive, as installed for normal operation, shall operate error free while subjected to intermittent shock not exceeding 65 Gs at a maximum duration of 2 msec (half sinewave). Shock may be applied in the X, Y, or Z axis.

# b. Operating-abnormal

Equipment, as installed for normal operation, does not incur physical damage while subjected to intermittent shock not exceeding 40 Gs at a maximum duration of 11 msec (half sinewave). Shock occurring at

abnormal levels may promote degraded operational performance during the abnormal shock period. Specified operational performance will continue when normal operating shock levels resume. Shock may be applied in the X, Y, or Z axis. Shock is not to be repeated more than two times per second.

#### c. Non-operating

The limits of non-operating shock shall apply to all conditions of handling and transportation. This includes both isolated drives and integrated drives.

The drive subjected to nonrepetitive shock not exceeding 75 Gs at a maximum duration of 11 msec (half sinewave) shall not exhibit device damage or performance degradation. Shock may be applied in the X, Y, or Z axis.

The drive subjected to nonrepetitive shock not exceeding 150 Gs at a maximum duration of 2 msec (half sinewave) does not exhibit device damage or performance degradation. Shock may be applied in the X, Y, or Z axis.

The drive subjected to nonrepetitive shock not exceeding 80 Gs at a maximum duration of 0.5 msec (half sinewave) does not exhibit device damage or performance degradation. Shock may be applied in the X, Y, or Z axis.

# d. Packaged

Disc drives shipped as loose load (not palletized) general freight will be packaged to withstand drops from heights as defined in the table below. For additional details refer to Seagate specifications 30190-001 (under 100 lbs/45 kg) or 30191-001 (over 100 lbs/45 kg).

Package size	Packaged/product weight	Drop height
<600 cu in (<9,800 cu cm)	Any	60 in (1524 mm)
600-1800 cu in (9,800-19,700 cu cm)	0-20 lb (0 to 9.1 kg)	48 in (1219 mm)
>1800 cu in (>19,700 cu cm)	0-20 lb (0 to 9.1 kg)	42 in (1067 mm)
>600 cu in (>9,800 cu cm)	20-40 lb (9.1 to 18.1 kg)	36 in (914 mm)

Drives packaged in single or multipacks with a gross weight of 20 pounds (8.95 kg) or less by Seagate for general freight shipment shall withstand a drop test from 48 inches (1,070 mm) against a concrete floor or equivalent.

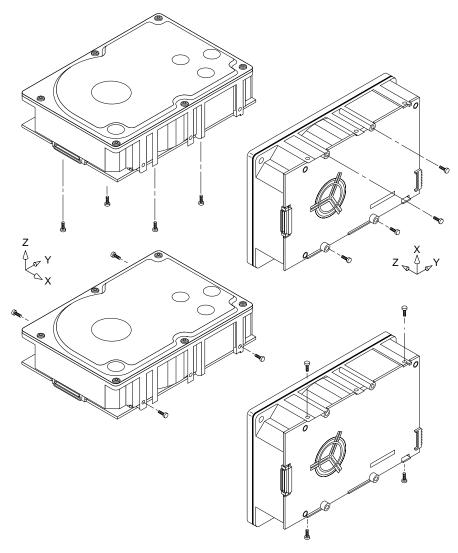


Figure 7. Recommended mounting

#### **6.4.4.2** Vibration

#### a. Operating - normal

The drive as installed for normal operation, shall comply with the complete specified performance while subjected to continuous vibration not exceeding

5-400 Hz @ 0.5 G

Vibration may be applied in the X, Y, or Z axis.

Operating normal translational random flat profile

10 - 400 Hz

**0.4 GRMS** 

#### b. Operating - abnormal

Equipment as installed for normal operation shall not incur physical damage while subjected to periodic vibration not exceeding:

15 minutes of duration at major resonant frequency

5-400 Hz @ 0.75 G (X, Y, or Z axis)

Vibration occurring at these levels may degrade operational performance during the abnormal vibration period. Specified operational performance will continue when normal operating vibration levels are resumed. This assumes system recovery routines are available.

Operating abnormal translational random flat profile

10 - 400 Hz

**1.2 GRMS** 

# c. Non-operating

The limits of non-operating vibration shall apply to all conditions of handling and transportation. This includes both isolated drives and integrated drives.

The drive shall not incur physical damage or degraded performance as a result of continuous vibration not exceeding

5-22 Hz @ 0.040 inches (1.02 mm) displacement 22-400 Hz @ 2.00 G

Vibration may be applied in the X, Y, or Z axis.

Non-operating translational random flat profile

10 - 400 Hz

**1.2 GRMS** 

#### 6.4.5 Air cleanliness

The drive is designed to operate in a typical office environment with minimal environmental control.

#### 6.4.6 Acoustics

Sound power during idle mode shall be 3.7 bels typical when measured to ISO 7779 specification.

There will not be any discrete tones more than 10 dB above the masking noise on typical drives when measured according to Seagate specification 30553-001. There will not be any tones more than 24 dB above the masking noise on any drive.

# 6.4.7 Electromagnetic susceptibility

See Section 2.1.1.1.

### 6.5 Mechanical specifications


The following nominal dimensions are exclusive of the decorative front panel accessory. However, dimensions of the front panel are shown in figure below. Refer to Figure 8 for detailed mounting configuration dimensions. See Section 8.5, "Drive mounting."

 Height:
 1.6 in
 40.64 mm

 Width:
 4.000 in
 101.6 mm

 Depth:
 5.75 in
 146.05 mm

 Weight:
 2.3 pounds
 1.043 kilograms

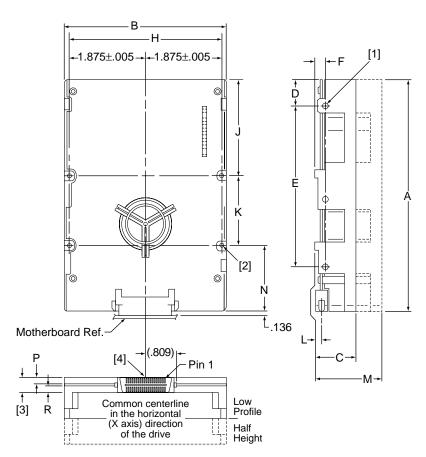

#### Notes:

- [1] Mounting holes three on each side, 6-32 UNC. Max screw length into side of drive is 0.15 in. (3.81 mm).
- [2] Mounting holes four on bottom, 6-32 UNC. Max screw length into bottom of drive is 0.15 in. (3.81 mm).
- [3] Keep-out zone for any components on backplane.
- [4] Connector is centered on module and flush with end of base.

	Inches	Millimeters
Α	5.75 ± 0.025	146.05 ± .64
В	$4.00 \pm 0.015$	101.6 ± .381
С	1.026 max	26.06 max
D	.620 ref	15.748 ref
E	$4.000 \pm 0.010$	101.60 ± .25
F	.250 + 0.011	6.35 + .28
	- 0.005	12
Н	$3.750 \pm 0.010$	95.25 ± .25
J	$2.380 \pm 0.010$	60.45 ± .25
K	$1.750 \pm 0.010$	44.45 ± .50
L	0.181 + 0.013	4.59 + .33
	- 0.007	18
М	1.622 + 0.027	41.20 + .69
	- 0.021	53
N	$1.620 \pm 0.025$	41.15 ± .64
P	.1215 max	3.08 max
R	.1215 max	3.08 max

Figure 8. Mounting configuration dimensions

### 7.0 Defect and error management

The drive, as delivered, complies with this product manual. The read error rates and specified storage capacities are not dependent upon use of defect management routines by the host (initiator).

Defect and error management in the SCSI protocol involves the drive internal defect/error management and FC-AL system error considerations (errors in communications between the initiator and the drive). Tools for use in designing a defect/error management plan are briefly outlined in this section. References to other sections are provided when necessary.

#### 7.1 Drive internal defects/errors

During the initial drive format operation at the factory, media defects are identified, tagged as being unusable, and their locations recorded on the drive primary defects list (referred to as the "P" list and also as the ETF defect list). At factory format time, these known defects are also reallocated, that is, reassigned to a new place on the medium and the location listed in the defects reallocation table. The "P" list is not altered after factory formatting. Locations of defects found and reallocated during error recovery procedures after drive shipment are listed in the "G" list (defects growth list). The "P" and "G" lists may be referenced by the initiator using the Read Defect Data command.

Details of the SCSI commands supported by the drive are described in the *Fibre Channel Interface Manual*. Also, more information on the drive Error Recovery philosophy is presented in the *Fibre Channel Interface Manual*.

### 7.2 Drive error recovery procedures

When an error occurs during drive operation, the drive, if programmed to do so, performs error recovery procedures to attempt to recover the data. The error recovery procedures used depend on the options previously set in the Error Recovery Parameters mode page. Error recovery and defect management may involve using several SCSI commands described in the *Fibre Channel Interface Manual*. The drive implements selectable error recovery time limits required in video applications.

The error recovery scheme supported by the drive provides a way to control the total error recovery time for the entire command in addition to controlling the recovery level for a single LBA. The total amount of time spent in error recovery for a command can be limited using the Recovery Time Limit bytes in the Error Recovery mode page. The total amount of time spent in error recovery for a single LBA can be limited using the Read Retry Count or Write Retry Count bytes in the Error Recovery mode page.

The drive firmware error recovery algorithms consists of 12 levels for read recoveries and five levels for write. Each level may consist of multiple steps, where a step is defined as a recovery function involving a single reread or re-write attempt. The maximum level used by the drive in LBA recovery is determined by the read and write retry counts.

Table 2 equates the read and write retry count with the maximum possible recovery time for read and write recovery of individual LBAs. The times given do not include time taken to perform reallocations. Reallocations are performed when the ARRE bit (for reads) or AWRE bit (for writes) is one, the RC bit is zero, and the recovery time limit for the command has not yet been met. Time needed to perform reallocation is not counted against the recovery time limit.

When the RC bit is one, reallocations are disabled even if the ARRE or AWRE bits are one. The drive will still perform data recovery actions within the limits defined by the Read Retry Count, Write Retry Count, and Recovery Time Limit parameters. However, the drive does not report any unrecovered errors.

Table 2: Read and write retry count maximum recovery times

Read retry count <sup>1</sup>	Maximum recovery time per LBA (cumulative, msec)
0	77.7
1	89.7
2	304.9
3	328.9
4	364.6
5	412.5
6	520.0
7	532.0
8	555.9
9	609.7
10	684.1
11 (default)	1,542.2

Write retry count <sup>1</sup>	Maximum recovery time per LBA (cumulative, msec)
0	35.8
1	53.7
2	59.7
3	113.6
4	227.1
5 (default)	268.9

[1] Setting these retry counts to a value below the default setting could result in degradation of the unrecovered error rate. For example, suppose the read/write recovery page has the RC bit = 0, the read retry count set to 4, and the recovery time limit set to 450. A 4-block read command can take up to 365 msec recovery time for each block and a maximum of 450 msec recovery for all four blocks. If either of these limits is reached and a block has not yet been recovered, the command will end with Check Condition status and an unrecoverable read error will be reported.

## 7.3 FC-AL system errors

Information on the reporting of operational errors or faults across the interface is given in the *Fibre Channel Interface Manual*. The FCP Response returns information to the host about numerous kinds of errors or faults. The Receive Diagnostic Results reports the results of diagnostic operations performed by the drive.

Status returned by the drive to the initiator is described in the *Fibre Channel Interface Manual*. Status reporting plays a role in systems error management and its use in that respect is described in sections where the various commands are discussed.

#### 8.0 Installation

Barracuda 180FC disc drive installation is a plug-and-play process. There are no jumpers, switches, or terminators on the drive. Simply plug the drive into the host's 40-pin Fibre Channel backpanel connector (FC-SCA)—no cables are required. See Section 9.5 for additional information about this connector.

Use the FC-AL interface to select drive ID and all option configurations for devices on the loop.

If multiple devices are on the same FC-AL and physical addresses are used, set the device selection IDs (SEL IDs) on the backpanel so that no two devices have the same selection ID. This is called the hard assigned arbitrated loop physical address (AL\_PA). There are 125 AL\_PAs available (see Table 21). If you set the AL\_PA on the backpanel to any value other than 0, the device plugged into the backpanel's SCA connector inherits this AL\_PA. In the event you don't successfully assign unique hard addresses (and therefore have duplicate selection IDs assigned to two or more devices), the FC-AL generates a message indicating this condition. If you set the AL\_PA on the backpanel to a value of 0, the system issues a unique soft-assigned physical address automatically.

Loop initialization is the process used to verify or obtain an address. The loop initialization process is performed when power is applied to the drive, when a device is added or removed from the Fibre Channel loop, or when a device times out attempting to win arbitration.

- Set all option selections in the connector prior to applying power to the drive. If you change options after applying power to the drive, recycle the drive power to activate the new settings.
- It is not necessary to low-level format this drive. The drive is shipped from the factory low-level formatted in 512-byte logical blocks. You need to reformat the drive only if you want to select a different logical block size.

#### 8.1 Drive ID/option selection

All drive options are made through the interface connector (J1). Table provides the pin descriptions for the 40-pin Fibre Channel single connector (J1).

#### 8.2 LED connections

A connector, J6, is provided on the printed circuit board assembly (PCBA) to provide port bypass, drive active, and drive fault LED connections (see Figure 10). See Sections 9.5.7, 9.5.8, and 9.5.9 for descriptions of LED functions.


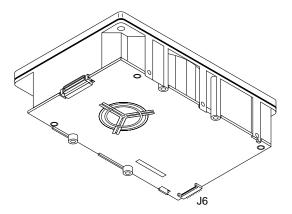


Figure 9. Physical interface

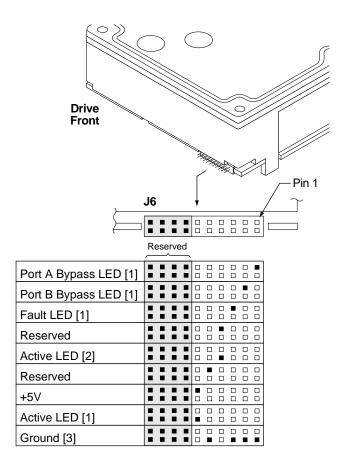

- [1] The drive has a 2.2K ohm resistor in series with this LED driver. Tie the minus side of an external high-efficiency LED (i.e., 2ma) to this pin. Connect the plus side of the LED to +5V.
- [2] An external current-limiting resistor is required when connecting an LED to this pin. The minus side of the resistor/LED combination is connected to this pin. Connect the plus side to +5V.
- [3] Jumper storage location (across pins 2 and 4).

Figure 10. LED indicator connector

#### 8.2.1 J6 connector requirements

Recommended mating connector part number: Berg receptacle, 6-position, Berg part number 690-006.

### 8.3 Drive orientation

The drive may be mounted in any orientation. All drive performance characterizations, however, have been done with the drive in horizontal (discs level) and vertical (drive on its side) orientations, which are the two preferred mounting orientations.

#### 8.4 Cooling

Cabinet cooling must be designed by the customer so that the ambient temperature immediately surrounding the drive will not exceed temperature conditions specified in Section 6.4.1, "Temperature."

The rack, cabinet, or drawer environment for the drive must provide heat removal from the electronics and head and disc assembly (HDA). You should confirm that adequate heat removal is provided using the temperature measurement guidelines described in Section 6.4.1.

Forced air flow may be required to keep temperatures at or below the temperatures specified in Section 6.4.1, in which case the drive should be oriented, or air flow directed, so that the least amount of air flow resistance is

created while providing air flow to the electronics and HDA. Also, the shortest possible path between the air inlet and exit should be chosen to minimize the travel length of air heated by the drive and other heat sources within the rack, cabinet, or drawer environment.

If forced air is determined to be necessary, possible air-flow patterns are shown in Figure 11. The air-flow patterns are created by one or more fans, either forcing or drawing air as shown in the illustrations. Conduction, convection, or other forced air-flow patterns are acceptable as long as the temperature measurement guidelines of Section 6.4.1 are met.

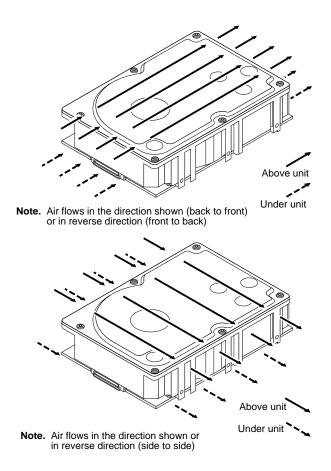


Figure 11. Air flow

#### 8.5 Drive mounting

Mount the drive using the bottom or side mounting holes. If you mount the drive using the bottom holes, ensure that you do not physically distort the drive by attempting to mount it on a stiff, non-flat surface.

The allowable mounting surface stiffness is 80 lb/in (14.0 N/mm). The following equation and paragraph define the allowable mounting surface stiffness:

$$K \times X = F \le 15lb = 67N$$

where K is the mounting surface stiffness (units in lb/in or N/mm) and X is the out-of-plane surface distortion (units in inches or millimeters). The out-of-plane distortion (X) is determined by defining a plane with three of the four mounting points fixed and evaluating the out-of-plane deflection of the fourth mounting point when a known force (F) is applied to the fourth point.

**Note.** Before mounting the drive in any kind of 3.5-inch to 5.25-inch adapter frame, verify with Seagate Technology that the drive can meet the shock and vibration specifications given herein while mounted in such an adapter frame. Adapter frames that are available may not have a mechanical structure capable of mounting the drive so that it can meet the shock and vibration specifications listed in this manual.

### 8.6 Grounding

Signal ground (PCBA) and HDA ground are connected together in the drive and cannot be separated by the user. The equipment in which the drive is mounted is connected directly to the HDA and PCBA with no electrically isolating shock mounts. If it is desired for the system chassis to not be connected to the HDA/PCBA ground, the systems integrator or user must provide a nonconductive (electrically isolating) method of mounting the drive in the host equipment.

Increased radiated emissions may result if you do not provide the maximum surface area ground connection between system ground and drive ground. This is the system designer's and integrator's responsibility.

## 9.0 Interface requirements

This section partially describes the interface requirements as implemented on Barracuda 180FC drives. Additional information is provided in the *Fibre Channel Interface Manual* (part number 77767496).

#### 9.1 FC-AL features

This section lists the Fibre Channel-specific features supported by Barracuda 180FC drives.

#### 9.1.1 Fibre Channel link service frames

Table 3 lists the link services supported by Barracuda 180FC drives.

Table 3: Link services supported

Type of frame	Link service
Basic link service frames	Abort Sequence (ABTS)
Basic link service reply frames	Basic_Accept (BA_ACC) Basic_Reject (BA_RJT)
Extended link service frames	N_Port Login (PLOGI) Fabric Login (FLOGI) Logout (LOGO) Process Login (PRLI) Process Logout (PRLO) Read Link Status (RLS) Fabric Address Notification (FAN) Port Discovery (PDISC) Address Discovery (ADISC) Third-party Process Logout (TRPLO)
Extended link service reply frames	Accept (ACC) Link Service Reject (LS_RJT)
Fibre Channel Services	Register FC-4 Types (RFT_ID)

## 9.1.2 Fibre Channel task management functions

Table 4 lists the Fibre Channel SCSI Fibre Channel Protocol (FC SCSI FCP) task management functions supported.

Table 4: Fibre Channel SCSI FCP task management functions

Task name	Supported
Terminate task	No
Clear ACA	Yes
Target reset	Yes
Clear task set	Yes
Abort task set	Yes

### 9.1.3 Fibre Channel task management responses

Table 5 lists the FC SCSI FCP response codes returned for task management functions supported.

Table 5: FC SCSI FCP response codes

Function name	Response code
Function complete	00
Function not supported	04
Function reject	05

#### 9.1.4 Fibre Channel port login

Table 6 identifies the required content of the N\_Port Login (PLOGI) payload from an initiator.

Table 6: N\_Port login (PLOGI) payload

Bytes																	
0-15	03	00	00	00	XX	XX	ВВ	BB	CF	XX	FS	FS	XX	XX	XX	XX	Common
16-31	XX	XX	XX	XX	PN	NN	NN	NN	NN								
32-35	NN	NN	NN	NN													
36-47					XX	Class 1											
48-51	XX	XX	XX	XX													
52-63					XX	Class 2											
64-67	XX	XX	XX	XX													
68-79					so	so	IC	IC	XX	XX	FS	FS	XX	CS	XX	XX	Class 3
80-83	os	os	XX	XX													
84-95					XX	Reserved											
96-99	XX	XX	XX	XX													
100-111					XX	Vendor											
112-115	XX	XX	XX	XX													Version

- X Indicates a four-bit (hex) field is not checked.
- x Indicates a single bit is not checked.
- BB BB-Credit. This field is not checked. The FC-AL drive uses BB-Credit of zero (0).
- CF Common features. This binary field selects the common features requested by the initiator login.

MSB Continuously increasing offset Must = 1

Random relative offset Not checked. Port Login Accept will return a 0—not supported.

Valid version level x

 $N_{Port}/F_{Port}$  Must = 0,  $N_{Port}$ 

Alternate credit model Must = 1
Other bits reserved xxx XX

- FS Receive buffer field size. The FS field in the common and Class 3 parameters is checked for the range 128 < FS < 2,112 and a multiple of four bytes. For multiple frame sequences, all frames but the last frame of the sequence must be this size. Only the receive buffer field size in the Class 3 parameters is used.
- PN Port name (initiator's)—saved with the login parameters. If a change of the port name/AL\_PA address association is detected during a Port DISCovery, and implicit logout occurs and the initiator returns a LS\_RJT.
- NN Node name. The node name is not checked or saved by the drive.
- SO Service options Class 3 only.

 MSB
 Class valid
 Must = 1

 Intermix
 x

 Stacked connection req.
 xx

 Sequential delivery
 x

 Other bits reserved
 xxx XX

IC Initiator control

MSB XID reassign xx

Proc Assc 10 or 11 causes the login to be rejected. Other values are accepted.

Other bits XXX

CS Concurrent sequences Must be a value greater than 0.

OS Open sequences per exchange Must be a value greater than 0.

### 9.1.5 Fibre Channel port login accept

Table 7 identifies the N\_Port Login access payload values.

Table 7: N\_Port Login Accept (ACC) payload

Bytes																	
0-15	02	00	00	00	20	20	00	00	88	00	FS	FS	00	FF	00	01	Common
16-31	00	00	01	F4	20	PP	00	20	37	UI	UI	UI	20	00	00	20	
32-35	37	UI	UI	UI													
36-47					00	00	00	00	00	00	00	00	00	00	00	00	Class 1
48-51	00	00	00	00													
52-63					00	00	00	00	00	00	00	00	00	00	00	00	Class 2
64-67	00	00	00	00													
68-79					80	00	00	00	00	00	FS	FS	00	FF	00	00	Class 3
80-83	00	01	00	00													
84-95					00	00	00	00	00	00	00	00	00	00	00	00	Reserved
96-99	00	00	00	00													
100-111					00	00	00	00	00	00	00	00	00	00	00	00	Vendor -
112-115	00	00	00	00													Version

FS Receive buffer field size. The drive returns and uses the receive buffer size from the N\_Port Login Class 3 receive buffer.

- PP Port identifier field.
  - 01 P\_LOGI received on Port A.
  - 02 P\_LOGI received on Port B.

### 9.1.6 Fibre Channel Process Login

Table 8 lists the process login payload data.

Table 8: Process Login (PLRI) payload

Bytes																
0-15	20	10	00	14	08	00	20	00	XX							
16-19	00	00	00	22												

XX Indicates fields that are not used.

### 9.1.7 Fibre Channel Process Login Accept

Table 9 lists Barracuda 180FC process login accept payload data.

Table 9: Process Login Accept (ACC) payload

Bytes																
0-15	02	10	00	14	08	00	21	00	00	00	00	00	00	00	00	00
16-31	00	00	00	12												

UI Unique identifier. This 24-bit field is uniquely assigned to the drive. This same UI appears in the Port Name and Node Name fields.

## 9.1.8 Fibre Channel fabric login

Table 10 lists the fabric login payload from the drive.

Table 10: Fabric Login (FLOGI) payload

Bytes																	
0-15	04	00	00	00	20	20	00	00	08	00	08	40	00	00	00	00	Common
16-31	00	00	02	F4	20	PP	00	20	37	UI	UI	UI	02	00	00	20	
32-35	37	UI	UI	UI													
36-47					00	00	00	00	00	00	00	00	00	00	00	00	Class 1
48-51	00	00	00	00													
52-63					00	00	00	00	00	00	00	00	00	00	00	00	Class 2
64-67	00	00	00	00													
68-79					80	00	00	00	00	00	08	40	00	00	00	00	Class 3
80-83	00	00	00	00													
84-95					00	00	00	00	00	00	00	00	00	00	00	00	Reserved
96-99	00	00	00	00													
100-111					00	00	00	00	00	00	00	00	00	00	00	00	Vendor -
112-115	00	00	00	00													Version

UI Unique identifier. This 24-bit field is uniquely assigned to the drive. This same UI appears in the Port Name and Node Name fields.

01 FLOGI originated on Port A.

02 FLOGI originated on Port B.

PP Port identifier field.

### 9.1.9 Fibre Channel fabric accept login

Table 10 lists the required content of the Fabric Login Accept (ACC) payload from the fabric.

Table 11: Fabric Login Accept (ACC) payload

Bytes																	
0-15	02	00	00	00	XX	XX	ВВ	ВВ	CF	XX	FS	FS	R_	A_	T0	V_	Common
16-31	E_	D_	T0	V_	PN	NN	NN	NN	NN								
32-35	NN	NN	NN	NN													
36-47					XX	Class 1											
48-51	XX	XX	XX	XX													
52-63					XX	Class 2											
64-67	XX	XX	XX	XX													
68-79					so	so	xx	xx	XX	XX	FS	FS	XX	xx	XX	XX	Class 3
80-83	os	os	XX	XX													
84-95					XX	Reserved											
96-99	XX	XX	XX	XX													
100-111					XX	Vendor -											
112-115	XX	XX	XX	XX													Version

- X Indicates a four-bit (hex) field is not checked.
- x Indicates a single bit is not checked.
- BB BB-Credit. This field is not checked. The FC-AL drive uses BB-Credit of zero (0).
- CF Common features. This binary field selects the common features requested by the fabric login.

MSB Continuously increasing offset x
Random relative offset x
Valid version level x

 $N_{Port}/F_{Port}$  Must = 1,  $F_{Port}$ 

Alternate credit model Must = 1
Other bits reserved xxx XX

- FS Receive buffer field size. The FS field in the common and Class 3 parameters is checked for the range 128 < FS < 2,112 and a multiple of four bytes. The receive buffer field size in the Class 3 parameters is used. The drive uses the lower FS of Fabric Login Accept or N\_Port Login when sending frames to an initiator.
- PN Port Name. The fabric port name is saved with the login parameters. If a change of the port name is detected during a FAN, an implicit logout occurs and a LS\_RJT is returned to the fabric.
- NN Node Name. The drive does not check or save the node name.
- SO Service Options—Class 3 only.

 $\begin{array}{ccc} \text{MSB} & \text{Class valid} & \text{Must} = 1 \\ & \text{Intermix} & x \\ & \text{Stacked connection req.} & xx \\ & \text{Sequential delivery} & \text{Must} = 1 \\ & \text{Other bits reserved} & xxx XX \\ \end{array}$ 

### 9.1.10 Fibre Channel Arbitrated Loop options

Table 12 lists the FC-AL options supported by Barracuda 180FC drives.

Table 12: FC-AL options supported

Option	Supported
OPEN Half Duplex	Accepted from another device.
OPEN Full Duplex	Sent to open another device. Accepted from another device.
Private Loop	Yes
Public Loop	Yes
Old Port State	No
Loop Position	Yes
Loop Position Report	Yes

### 9.2 Dual port support

Barracuda 180FC drives have two independent FC-AL ports. These ports may be connected on independent loops or on the same loop. Port A and Port B may be connected in any order or combination.

- If both ports are connected on independent loops and hard addressing is used, the drive interface address is selected through the interface connector, both ports will seek the same loop address. If no conflict, both ports will have the same loop address.
- If both ports are connected in the same loop and hard addressing is used, at least one port will attempt taking a soft address to prevent an address conflict.

**Note.** When a Barracuda 180FC drive is connected in loops with the following previous Seagate FC drive products:

Barracuda 4LP FC (ST32171FC, ST34371FC, and ST34571FC)

Barracuda 9FC (ST19171FC)

Cheetah 4LP FC (ST34501FC)

Cheetah 9FC (ST19101FC)

the connection of Port A and B for these products must follow the requirements in their product manuals.

Subject to buffer availability, the Barracuda 180FC drives support:

- Concurrent port transfers—The drive supports receiving transfers on both ports at the same time when the
  ports are on independent loops.
- Full duplex—The drive supports sending FCP\_Data, FCP\_RSP, FCP\_XFR\_RDY and ELS transfers while receiving frames on both ports.

# 9.3 SCSI commands supported

Table 13 lists the SCSI commands supported by Barracuda 180FC drives.

Table 13: Supported commands

Command code	Supported [4]	Command name					
00h	Y	Test unit ready					
01h	Y	Rezero unit					
03h Y		Request sense					
	Y	Extended sense					
	Y	Field pointer bytes					
	Y	Actual retry count bytes					
04h	Y	Format unit [1]					
07h	Y	Reassign blocks					
08h	Y	Read					
0Ah	Y	Write					
0Bh	Y	Seek					
12h	Y	Inquiry					
	Y	Vital product data page (00h)					
	Y	Unit serial number page (80h)					
	Y	Implemented operating def. page (81h)					
	Y	Device identification page (83h)					
	Y	Firmware numbers page (C0h)					
	Y	Date code page (C1h)					
	Y	Jumper settings page (C2h)					
	Y	Device behavior page (C3h)					
15h	Y	Mode select (same pages as Mode Sense command shown below) [3]					
16h	Y	Reserve					
	N	3rd party reserved					
	N	Extent reservation					
17h	Y	Release					
18h	N	Сору					
1Ah	Y	Mode sense					
	Y	Unit attention page (00h)					
	Y	Error recovery page (01h)					
	Y	Disconnect/reconnect control (page 02h)					
	Y	Format page (03h)					
	Y	Rigid disc drive geometry page (04h)					
	Y	Verify error recovery page (07h)					
	Y	Caching parameters page (08h)					
	Y	Fibre Channel interface control page (19h)					
	Y	Control mode page (0Ah)					
	Y	Power control page (1Ah)					
	Y	Information exceptions control page (1Ch)					
1Bh	Y	Start unit/stop unit					
1Ch	Y	Receive diagnostic results					
	Y	Supported diagnostics pages					

Table 13: Supported commands (continued)

Command code	Supported [4]	Command name
	Y	Translate page
	Y	Enclosure services page
1Dh	Y	Send diagnostics page
	Y	Supported diagnostics pages
	Y	Translate page
25h	Y	Read capacity
28h	Y	Read extended
	Y	Disable page out
	Y	Force unit access
	N	Relative address
2Ah	Y	Write extended
	Y	Disable page out
	Y	Force unit access
	N	Relative address
2Bh	Y	Seek extended
2Eh	Y	Write and verify
	Y	Disable page out
	Y	Byte check
	N	Relative address
2Fh	Y	Verify
	Y	Disable page out
	Y	Byte check
	N	Relative address
30h	N	Search data high
31h	N	Search data equal
32h	N	Search data low
33h	N	Set limits
34h	N	Prefetch
35h	Y	Synchronize cache
36h	N	Lock-unlock-cache
37h	Y	Read defect data
39h	N	Compare
3Ah	N	Copy and verify
3Bh	Y	Write buffer
	Y	Write combined header and data mode (0)
	Y	Write data mode (2)
	N	Download microcode mode (4)
	Y	Download microcode and save modes (5)
	N	Download microcode with offsets mode (6)
	Y	Download microcode with offsets and save mode (7)
	Y	Firmware download option [2]
3Ch	Y	Read buffer
	Y	Read combined header and data mode (0)
	Y	Read data mode (2)

Table 13: Supported commands (continued)

Command code	Supported [4]	Command name
	Y	Read descriptor mode (3)
3Eh	Y	Read long
3Fh	Y	Write long
40h	N	Change definition
41h	Y	Write same
	N	PBdata
	N	LBdata
42-4Bh	N	Not used
4Ch	Y	Log Select
4Dh	Y	Log Sense
	Y	Supported Log page (00h)
	Y	Write Error Counter page (02h)
	Y	Read Error Counter page (03h)
	N	Read Reverse Error Counter page (04h)
	Y	Verify Error Counter page (05h)
	Y	Non-medium Error Counter page (06h)
	Y	Temperature page (0Dh)
	N	Application Client page (0Fh)
	Y	Self Test Results page (10h)
	Y	Cache Statistics Counter page (37h)
	Y	Factory Log page (3Eh)
4E-4Fh	N	Not used
50h	N	XD write
51h	N	XP write
52h	N	XD read
53-54h	N	Not used
55h	Y	Mode Select (10) [3]
56h	Y	Reserved (10)
	Y	3rd party reserve
	N	Extent reservation
57h	Y	Released (10)
58-59h	N	Not used
5Ah	Y	Mode Sense (10) [3]
5B-5Dh	N	Not used
5E	А	Persistent reserve in
5F	А	Persistent reserve out
60-7Fh	N	Not used
80h	N	XD write extended
81h	N	Rebuild
82h	N	Regenerate
83-8Fh	N	Not used
C0-DFh	N	Not used
EO-FFh	N	Not used

- [1] Barracuda 180FC drives can format to any multiple of four bytes per logical block in the range 512 to 704 bytes.
- [2] **Warning.** Power loss during flash programming can result in firmware corruption. This usually makes the drive inoperable.
- [3] Reference Mode Sense command 1Ah for mode pages supported.
- [4] Y = Yes. Command is supported.
  - N = No. Command is not supported.
  - A = Support is available on special request.

#### 9.3.1 Inquiry data

Table 14 lists the Inquiry command data that the drive should return to the initiator per the format given in the *Fibre Channel Interface Manual*.

Table 14: Barracuda 180FC inquiry data

Bytes	Data	Data (hex)															
0-15	00	00	**	12	8B	00	PP	0A	53	45	41	47	41	54	45	20	Vendor ID
16-31	[53	54	31	31	38	31	36	37	37	46	43	20]	20	20	20	20	Product ID
32-47	R#	R#	R#	R#	S#	00	00	00	00								
48-63	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	
64-79	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	
80-95	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	
96-111	00	43	6F	70	79	72	69	67	68	74	20	28	63	29	20	32*	*Copyright
112-127	30*	30*	31*	20	53	65	61	67	61	74	65	20	41	6C	6C	20	notice
128-143	72	69	67	68	74	73	20	72	65	73	65	72	76	65	64	20	

- \* Copyright year (changes with actual year).
- \*\* 02 = SCSI-2 implemented with some SCSI-3 features (default).
  - 03 = The device complies to ANSI X3.301:199x
- PP 50 = Inquiry data for an Inquiry command received on Port A.
  - 70 = Inquiry data for an Inquiry command received on Port B.
- R# Four ASCII digits representing the last four digits of the product firmware release number.
- S# Eight ASCII digits representing the eight digits of the product serial number.
- [] Bytes 16 through 27 reflect drive model.

### 9.3.2 Mode Sense data

The Mode Sense command provides a way for the drive to report its operating parameters to the initiator. The drive maintains four sets of mode parameters:

#### 1. Default values

Default values are hard-coded in the drive firmware stored in flash E-PROM (nonvolatile memory) on the drive's PCB. These default values can be changed only by downloading a complete set of new firmware into the flash E-PROM. An initiator can request and receive from the drive a list of default values and use those in a Mode Select command to set up new current and saved values, where the values are changeable.

#### 2. Saved values

Saved values are stored on the drive's media using a Mode Select command. Only parameter values that are allowed to be changed can be changed by this method. Parameters in the saved values list that are not changeable by the Mode Select command get their values from default values storage.

When power is applied to the drive, it takes saved values from the media and stores them as current values in volatile memory. It is not possible to change the current values (or the saved values) with a Mode Select command before the drive achieves operating speed and is "ready." An attempt to do so results in a "Check Condition" status.

On drives requiring unique saved values, the required unique saved values are stored into the saved values storage location on the media prior to shipping the drive. Some drives may have unique firmware with unique default values also.

On standard OEM drives, the saved values are taken from the default values list and stored into the saved values storage location on the media prior to shipping.

#### Current values

Current values are volatile values being used by the drive to control its operation. A Mode Select command can be used to change the values identified as changeable values. Originally, current values are installed from saved or default values after a power on reset, hard reset, Target Reset, or LIP Reset.

#### 4. Changeable values

Changeable values form a bit mask, stored in nonvolatile memory, that dictates which of the current values and saved values can be changed by a Mode Select command. A one (1) indicates the value can be changed. A zero (0) indicates the value is not changeable. For example, in Table 15, refer to Mode page 81, in the row entitled "CHG." These are hex numbers representing the changeable values for Mode page 81. Note in columns 5 and 6 (bytes 04 and 05), there is 00h which indicates that in bytes 04 and 05 none of the bits are changeable. Note also that bytes 06, 07, 09, 10, and 11 are not changeable, because those fields are all zeros. In byte 02, hex value FF equates to the binary pattern 11111111. If there is a zero in any bit position in the field, it means that bit is not changeable. Since all of the bits in byte 02 are ones, all of these bits are changeable.

The changeable values list can only be changed by downloading new firmware into the flash E-PROM.

**Note.** Because there are often several different versions of drive control firmware in the total population of drives in the field, the Mode Sense values given in the following tables may not exactly match those of some drives.

The following tables list the values of the data bytes returned by the drive in response to the Mode Sense command pages for SCSI implementation (see the *Fibre Channel Interface Manual*).

#### Definitions:

DEF = Default value. Standard OEM drives are shipped configured this way.

CHG = Changeable bits; indicates if default value is changeable.

Table 15: Mode Sense data default and changeable values for ST1181677FC drives

ST11816	77F0	;																						
Bytes	00	01	02	03	04	05	06	07	80	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Mode Sense Header	00	ae	00	10	00	00	00	08	15	22	с4	41	00	00	02	00								
	<					M	ode	Page	10	Byte	Hea	der [	Data	and	Para	met	er Da	ata B	ytes					>
DEF	81	0a	c0	0b	f0	00	00	00	05	00	ff	ff												
CHG	81	0a	ff	ff	00	00	00	00	ff	00	ff	ff												
DEF	82	0e	80	80	00	00	00	00	00	00	27	СС	00	00	00	00								
CHG	82	0e	ff	ff	00	00	00	00	00	00	ff	ff	00	00	00	00								
DEF	83	16	11	06	00	00	00	10	00	00	02	63	02	00	00	01	00	5a	00	54	40	00	00	00
CHG	83	16	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
DEE	0.4	40	00	_		40	00	00			00	00	00		00	00		00	00		4	00		
DEF	84	16	00	5e	b7	18	00	00	00	00	00	00	00	00	00	00	00	00	00	00	1c	09	00	00
CHG	84	16	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
DEF	87	0a	00	0b	f0	00	00	00	00	00	ff	ff												
CHG	87	0a	Of	ff	00	00	00	00	00	00	ff	ff												
DEF	88	12	14	00	ff	ff	00	00	ff	ff	ff	ff	80	03	00	00	00	00	00	00				
CHG	88	12	b5	00	00	00	ff	ff	ff	ff	00	00	a0	ff	00	00	00	00	00	00				_
DEF	8a	0a	02	00	00	00	00	00	00	00	15	da												
CHG	8a	0a	03	f1	08	00	00	00	00	00	00	00												
DEF	99	06	00	00	00	00	00	00																
CHG	99	06	00	ff	00	00	00	00																
555	0	•	00	00	00	00	00	0.4	00	00	00	0.4												
DEF CHG	9a 9a	0a 0a	00	03	00	00	00	01	00	00	00	04												
00		•																						
DEF	9с	0a	10	00	00	00	00	00	00	00	00	01												
CHG	9с	0a	9d	Of	ff	ff	ff	ff	ff	ff	ff	ff												
DEF	80	06	00	00	07	00	00	00																
CHG	80	06	b7	40		00	00	00																
		< F	Reac	cap		data	a>	<b>,</b>																
	15	22	c4	40	00	00	02	00																

## 9.4 Miscellaneous operating features and conditions

Table 16 lists various features and conditions. A "Y" in the support column indicates the feature or condition is supported. An "N" in the support column indicates the feature or condition is not supported.

Table 16: Miscellaneous features

Supported	Feature or condition
Y	FC-AL selective reset
Y	Automatic contingent allegiance
N	Asynchronous event notification
N	Synchronized (locked) spindle operation
Y	Segmented caching
N	Zero latency read
Y	Queue tagging (up to 128 queue tags supported)
Y	Deferred error handling
Y	Parameter rounding (controlled by Round bit in Mode Select page 0)
Y	Reporting actual retry count in Extended Sense bytes 15, 16, and 17
N	Adaptive caching
Y	SMP = 1 in Mode Select command needed to save RPL and rotational offset bytes

Table 17: Miscellaneous status

Supported	Status
Y	Good
Y	Check condition
Y	Condition met/good
Y	Busy
Y	Intermediate/good
Y	Intermediate/condition met/good
Y	Reservation conflict
Y	Task set full
N	ACA active
N	ACA active, faulted initiator

### 9.5 FC-AL physical interface

Figure 12 shows the location of the J1 Fibre Channel single connection attachment (FC-SCA) and the J6 connector. Figure 14 provides the dimensions of the FC-SCA. Figure 15 provides the dimensions of the J6 connector.

Details of the physical, electrical, and logical characteristics are provided within this section. The operational aspects of Seagate's Fibre Channel drives are provided in the *Fibre Channel Interface Manual*.

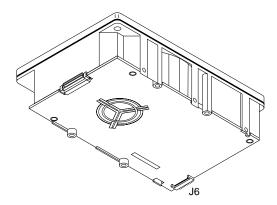


Figure 12. Physical interface

### 9.5.1 Physical characteristics

This section defines physical interface connector.

### 9.5.1.1 Physical description

Flbre Channel drives may be connected in a loop together or with other compatible FC-AL devices. A maximum of 127 devices may have addresses; however, one of the addresses is reserved for a fabric port switch device. This means 126 addresses are available for FC-AL devices. More FC-AL compatible devices may physically reside on the loop, but they will not be functional because they would not be able to obtain valid addresses.

Port bypass circuits (PBCs) allow devices to be inserted into unpopulated locations or removed from the loop with loop operation recovery after a brief interruption. These PBCs are located external to the FC-AL device. Figure 13 shows the relationship between the PBC and FC-AL device.

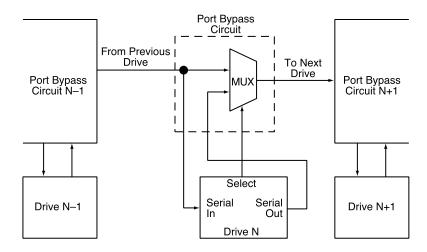


Figure 13. Port bypass circuit physical interconnect

### 9.5.2 Connector requirements

Recommended mating SCA part number:

Part description	Positions	Part number	Features
AMP Vertical (SCA sequence)	40	787317-1	With polarization
Berg	40	71781	With polarization
Methode	40	512-220-91-101N	With polarization
Molex	40	717431040	With polarization

The FC-AL SCA device connector is illustrated in Figure 14. The J6 connector is illustrated in Figure 15.

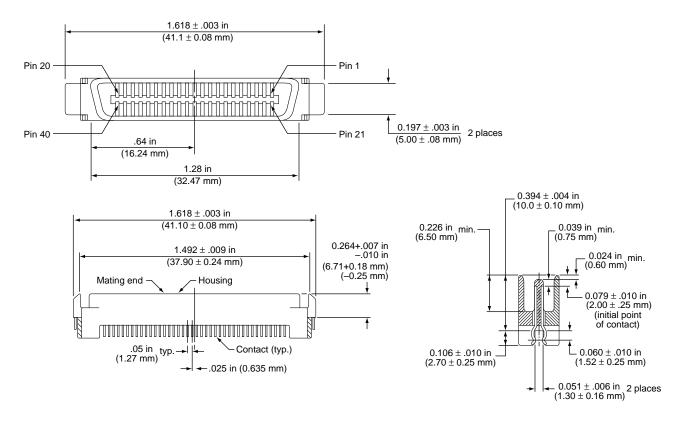


Figure 14. FC-AL SCA device connector dimensions

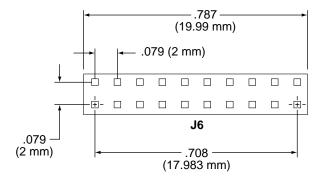


Figure 15. J6 connector dimensions

#### 9.5.3 Electrical description

Fibre Channel drives use the FC-SCA connector for:

- DC power
- FC-AL interface
- Drive select (device identification)
- Option selection
- · Enclosure Services interface

This 40-pin connector is designed to plug directly into a backpanel. External cables are not required.

### 9.5.4 Pin descriptions

This section provides a pin-out of the FC-SCA and a description of the functions provided by the pins.

Table 18: FC-SCA pin descriptions

Pin	Signal name	Signal type
1*	-EN bypass port A	Low Voltage TTL output
2*	12 Volts	
3*	12 Volts	
4*	12 Volts	
5*	-Parallel ESI	
6*	Ground <sup>[1]</sup>	
7*	Active LED out	Open collector out
8*	Reserved	
9*	Start_1 [2]	TTL input
10*	Start_2 [2]	TTL input
11*	-EN bypass port B	Low Voltage TTL output
12*	SEL_6	TTL input/output
13*	SEL_5	TTL input/output
14*	SEL_4	TTL input
15*	SEL_3	TTL input/output
16*	Fault LED out	Open collector out
17*	DEV_CTRL_CODE_2 [2]	TTL input
18*	DEV_CTRL_CODE_1 [2]	TTL input
19*	5 Volts	
20*	5 Volts	

Pin	Ciamal mama	Cianal time
Pin	Signal name	Signal type
21	12 Volts charge	
	•	
22	Ground	
23	Ground	
24*	+Port A_in	Diff. PECL input pair
25*	-Port A_in	
26	Ground	
27*	+Port B_in	Diff. PECL input pair
28*	-Port B_in	
29	Ground	
30*	+Port A_out	Diff PECL output pair
31*	-Port A_out	
32	Ground	
33*	+Port B_out	Diff PECL output pair
34*		Dili i LoL output pail
	-Port B_out	
35	Ground	
36	SEL_2	TTL input/output
37	SEL_1	TTL input/output
38	SEL_0	TTL input/output
39	DEV_CTRL_CODE_0 [2]	TTL input
40	5 Volts charge	

- [1] This pin may be connected to external logic to detect the presence of the drive. The drive connects this pin to the common ground.
- [2] Pins 9, 10, 17, 18, and 39 are option select pins and are tied high by the drive circuitry. The preferred electrical connection at the backplane is either open or grounded (open for the '1' setting, grounded for the '0' setting). Alternatively, these pins may be driven by a 3.3V logic device, pulled up to 3.3V through a pull-up resistor (recommended size of 10K ohm), or grounded through some other means.

<sup>\*</sup>Short pins in mating backpanel connector.

#### 9.5.5 FC-AL transmitters and receivers

A typical FC-AL differential copper transmitter and receiver pair is shown in Figure 16. The receiver is required to provide the AC coupling to eliminate ground shift noise.

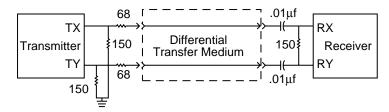


Figure 16. FC-AL transmitters and receivers

#### 9.5.6 Power

Power is supplied through the FC-SCA with support for +5 volts and +12 volts. All of the voltage pins in the drive connector are the same length.

Four 12 volt pins provide +12 volt power to the drive. The current return for the +12 volt power supply is through the common ground pins. The supply current and return current must be distributed as evenly as possible among the pins. The maximum current typically occurs while the drive motor is starting.

Three 5 volt pins provide logic power to the drive. The current return for the +5 volt power supply is through the common ground pins. Distribute supply and return current as evenly as possible among the voltage and ground pins.

The mating connector pins use shorter contacts to achieve power surge reductions and to aid in "hot plugging" the drives. There are longer voltage contacts in the connector to enable the drive filter capacitors to charge. Current to the drive through the long charge pins is limited by the system in which the drive operates. Three of the +12 volt pins are shorter to allow capacitive pre-charging through the longer +12 volt charge pin. Two of the +5 volt pins are shorter to allow capacitive precharging through the longer +5 volt charge pin.

#### 9.5.7 Fault LED Out

The Fault LED Out signal is driven by the drive when:

- the drive detects failure of both ports
- · the drive detects an internal failure
- the drive receives the appropriate fault LED command from the host

The Fault LED Out signal is designed to pull down the cathode of an LED. The anode is attached to the proper +5 volt supply through an appropriate current-limiting resistor. The LED and the current-limiting resistor are external to the drive.

#### 9.5.8 Active LED Out

The Active LED Out signal is driven by the drive as indicated in Table 19.

Table 19: Active LED Out conditions

Normal command activity	LED status
Spun down and no activity	Slow blink (20% on and 80% off a 2 sec cycle)
Spun down and activity (command executing)	On
Spun up and no activity	On
Spun up and activity (command executing)	Off
Spinning up or down	Blinks steadily (50% on and 50% off)
Format in progress, each cylinder change	Toggles on/off

The Active LED Out signal is designed to pull down the cathode of an LED. The anode is attached to the proper +5 volt supply through an appropriate current limiting resistor. The LED and the current limiting resistor are external to the drive.

### 9.5.9 Enable port bypass signals

The – Enable Bypass Port A (– EN BYP Port A) and – Enable Bypass Port B (– EN BYP Port B) signals control the port bypass circuits (PBC) located external to the disc drive. The PBC allows a loop to remain functional in the event of a drive failure or removal. When these signals are active, low, the PBC bypasses the drive on the associated port. When an Enable Bypass signal is active, the corresponding Port Bypass LED signal in connector J1 is driven low by the disc drive. A pull down resistor, 1K, located with the PBC should be used to insure the bypass is enabled if the disc drive is not installed.

The Enable Bypass signal is active under failing conditions within the drive, on detection of the Loop Port Bypass primitive sequence, or on removal of the drive. In the bypass state the drive continues to receive on the inbound fibre. Enable Bypass may be deactivated by detection of a Loop Port Enable primitive sequence if the drive has completed self-test and a hardware failure is not present.

Failure modes detected by the disc drive that will enable bypass include:

- Transmitter/receiver wrap test failure
- · Loss of receive clock
- · Loss of transmission clock
- · Drive interface hardware error

#### 9.5.10 Motor start controls

The drive's motor is started according to the Start\_1 and Start\_2 signals described in Table 20. The state of these signals can be wired into the backplane socket or driven by logic on the backplane.

Table 20: Motor start control sign	ignals
------------------------------------	--------

Case	Start_2	Start_1	Motor spin function
1	Low	Low	Motor spins up at DC power on.
2	High	Low	Motor spins up only when SCSI Start command is received.
3	Low	High	Motor spins up after a delay of 12 seconds times the modulo 8 value of the numeric SEL ID of the drive from DC power on.
4	High	High	The drive will not spin up.

### 9.5.11 SEL\_6 through SEL\_0 ID lines

The SEL\_6 through SEL\_0 ID lines determine drive address, and, optionally, for an Enclosure Services Interface. When the Parallel ESI line is high, the enclosure backpanel must provide address information on the SEL line. Refer to table 21 for a mapping of SEL to FC-AL physical addresses (AL\_PA). You can think of the SEL lines as the equivalent of a backpanel logic plug. The drives does not provide pull up resistors on these lines. The backpanel is required to provide high and low inputs to the SEL\_ID lines per the specifications in table 23 on page 56.

**Note.** Table 21 gives AL\_PA values for each SEL value. The first entry in the table is SEL\_ID 00. The last entry is SEL\_ID 7D. SEL\_ID 7E is AL\_PA 00 which is not valid for an NL\_Port, so is not included in the table. Also, SEL\_ID 7Fh does map to a valid AL\_PA; however, this value signals the drive that physical addresses are not being assigned using the SEL lines and that a "soft" address will be determined by FC-AL loop initialization.

When the Parallel ESI line is low, the enclosure backpanel logic switches to ESI mode if supported. There are two modes of ESI, seven bits of enclosure status and a bidirectional mode. ESI support and the mode are determined by the drive using a discovery process. Refer to the *Fibre Channel Interface Manual* for a description of ESI operation.

### 9.5.11.1 Parallel Enclosure Services Interface (ESI)

The parallel ESI line is an output from the drive. This line provides the enclosure with an indication of the present function of the SEL lines. A high level, the default state, indicates the drive requires address information on the SEL lines. A low level indicates the drive is attempting an ESI transfer. The enclosure may not support ESI on any or all drive locations. It may only support the address function. Support of ESI is discovered by the drive. Refer to the *Fibre Channel Interface Manual* for a description of ESI operations.

Table 21: Arbitrated loop physical address (AL\_PA) values

Table 21:	Arbitrated loop phys		
AL_PA (hex)	SEL ID (hex)	Setting (dec)	
EF	00	00	
E8	01	01	
E4	02	02	
E2	03	03	
E1	04	04	
E0	05	05	
DC	06	06	
DA	07	07	
D9	08	08	
D6	09	09	
D5	0A	10	
D4	0B	11	
D3	0C	12	
D2	0D	13	
D1	0E	14	
CE	0F	15	
CD	10	16	
СС	11	17	
СВ	12	18	
CA	13	19	
C9	14	20	
C7	15	21	
C6	16	22	
C5	17	23	
C3	18	24	
ВС	19	25	
ВА	1A	26	
В9	1B	27	
B6	1C	28	
B5	1D	29	
B4	1E	30	
B3	1F	31	
B2	20	32	
B1	21	33	
AE	22	34	
AD	23	35	
AC	24	36	
AB	25	37	
AA	26	38	
A9	27	39	
A7	28	40	
A6	29	41	
A5	2A	42	

AL_PA (hex)	SEL ID (hex)	Setting (dec)
A3	2B	43
9F	2C	44
9E	2D	45
9D	2E	46
9B	2F	47
98	30	48
97	31	49
90	32	50
8F	33	51
88	34	52
84	35	53
82	36	54
81	37	55
80	38	56
7C	39	57
7A	3A	58
79	3B	59
76	3C	60
75	3D	61
74	3E	62
73	3F	63
72	40	64
71	41	65
6E	42	66
6D	43	67
6C	44	68
6B	45	69
6A	46	70
69	47	71
67	48	72
66	49	73
65	4A	74
63	4B	75
5C	4C	76
5A	4D	77
59	4E	78
56	4F	79
55	50	80
54	51	81
53	52	82
52	53	83
51	54	84
4E	55	85

AL_PA (hex)	SEL ID (hex)	Setting (dec)
4D	56	86
4C	57	87
4B	58	88
4A	59	89
49	5A	90
47	5B	91
46	5C	92
45	5D	93
43	5E	94
3c	5F	95
3A	60	96
39	61	97
36	62	98
35	63	99
34	64	100
33	65	101
32	66	102
31	67	103
2E	68	104
2D	69	105
2C	6A	106
2B	6B	107
2A	6C	108
29	6D	109
27	6E	110
26	6F	111
25	70	112
23	71	113
1F	72	114
1E	73	115
1D	74	116
1B	75	117
18	76	118
17	77	119
10	78	120
0F	79	121
08	7A	122
04	7B	123
02	7C	124
01	7D	125

#### 9.5.12 Device control codes

The drive inputs a Device Control Code on the DEV\_CTRL\_CODE lines at power up to determine the link rate on the Fibre Channel ports. Both ports run at the same rate. If the backpanel does not connect to these lines, the drive has 10K ohm pull up resistors that default the device control code to 7 (1.0625 GHz). Table 22 lists the supported codes.

Table 22: Device control code values

<b>2</b> (pin 17)	<b>1</b> (pin 18)	<b>0</b> (pin 39)	Definition
0	0	0	Reserved for Power failure warning.
0	0	1	Reserved for auto negotiation of link rate.
0	1	0	Reserved.
0	1	1	Reserved.
1	0	0	Reserved.
1	0	1	Reserved.
1	1	0	2.125 GHz operation on both ports.
1	1	1	1.0625 GHz operation on both ports.

### 9.6 Signal characteristics

This section describes the electrical signal characteristics of the drive's input and output signals. See Table 18 on page 51 for signal type and signal name information.

### 9.6.1 TTL input characteristics

Table 23 provides the TTL characteristics.

Table 23: TTL characteristics

State	Voltage	Current
Input high	1.9 < V <sub>IH</sub> < 5.5V	I <sub>IH</sub> = ±500nA max.
Input low	-0.5V < V <sub>IL</sub> < 0.9V	$I_{OL} = \pm 500$ nA max.
Output high (-EN Bypass A, B)	2.4 < V <sub>OH</sub> < 5.25V	I <sub>OH</sub> < -3mA
Output low (-EN Bypass A, B)	V <sub>OL</sub> < 0.5V	I <sub>OL</sub> < 3mA
Output high (-Parallel ESI)	$2.4 < V_{OH} < 0.9 V_{CC}$ $V_{OH} > 0.9 V_{CC}$	I <sub>OH</sub> < -2.4mA I <sub>OH</sub> < -500μA
Output low (-Parallel ESI)	0 < V <sub>OL</sub> < .45V	I <sub>OL</sub> < 2.4mA
Output high (all other outputs)	$2.4 < V_{OH} < 0.9 V_{CC}$ $V_{OH} > 0.9 V_{CC}$	I <sub>OH</sub> < -1.6mA I <sub>OH</sub> < -500μA
Output low (all other outputs)	0 < V <sub>OL</sub> < .45V	I <sub>OL</sub> < 1.6mA

#### 9.6.2 LED driver signals

Fault and Active LED signals are located in the FC-SCA connector (J1) and through the indicator connector (J6). See Table 24 for the output characteristics of the LED drive signals.

Table 24: LED drive signal

State Current drive available		Output voltage
LED off, high	0 < I <sub>OH</sub> < 100μA	
LED on, low	I <sub>OL</sub> < -30 mA	0 < V <sub>OL</sub> < 0.8V

### 9.6.3 Differential PECL output

The serial PECL output signal voltage characteristics are provided in Table 25. The outputs are not AC coupled in order to deliver maximum signal without rise and fall time degradation. You must AC couple the receiver to isolate potentially different DC characteristics of the outputs and the receiver.

Table 25: Differential PECL output characteristics

Description	Parameter
Serial output voltage swing	300 < V <sub>out</sub> < 650 mV

Figure 17 provides the data output valid eye diagram relative to the bit cell time. Table 27 lists the data values.

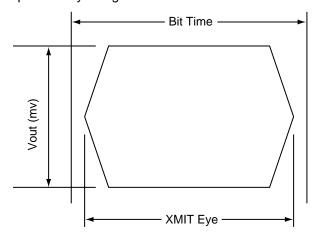


Figure 17. Transmit eye diagram

### 9.6.4 Differential PECL input

The serial PECL input signal voltage characteristics are provided in Table 26.

Table 26: Differential PECL input characteristics

Description	Parameter	Notes
Serial input voltage swing	400 < V <sub>in</sub> < 2.000 mV	AC coupled

Figure 18 provides the data valid eye diagram for typical and minimum requirements to recover data at the specified interface error rate. The inputs are AC coupled on the drive. Table 27 lists the data values.

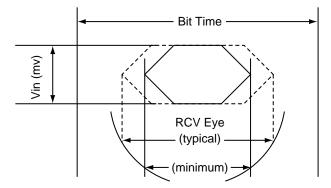


Figure 18. Receive eye diagram

Table 27: Eye diagram data values

		Link rate	
		1 GHz	
Bit time		941 ps	470 ps
XMIT eye		725 ps min.	315 ps min.
RCV eye	Typical	659 ps	305 ps
	Minimum	395 ps	226 ps

## 10.0 Seagate Technology support services

#### **Online Services**

#### Internet

**www.seagate.com** for information about Seagate products and services. Worldwide support is available 24 hours daily by e-mail for your disc or tape questions.

#### Presales Support:

Disc: www.seagate.com/support/email/email\_presales.html or DiscPresales@Seagate.com.

Tape: www.seagate.com/support/email/email\_tape\_presales.html or Tape\_Sales\_Support@Seagate.com.

#### Technical Support:

Disc: www.seagate.com/support/email/email disc support.html or DiscSupport@Seagate.com.

Tape: www.seagate.com/support/email/email\_tape\_support.html or TapeSupport@Seagate.com.

Server Appliance: www.seagate.com/support/email/email nas support.html or NAS Support@Seagate.com.

#### **Reseller Marketplace**

Reseller Marketplace is the storage industry's first collaborative, e-commerce marketplace offering resellers the fastest, most efficient online purchasing process for Seagate storage solutions. The Reseller Marketplace at marketplace.seagate.com, an exclusive service for US resellers participating in the Seagate Partner Program (SPP), is designed to streamline the purchasing process of Seagate solutions and provide unprecedented value to Seagate's resellers through real-time pricing and availability, fast and easy comparison shopping, and seamless integration with key distributors for a one-stop shopping experience.

For support, questions and comments: reseller.seagate.com/benefits/T1.html or 1-877-271-3285 (toll-free) 9 A.M. to 7 P.M. (eastern time) Monday through Friday.

#### **Tape Purchases**

US customers can purchase Seagate data cartridges, tape supplies, accessories, and select Seagate tape drive products 24 hours daily at buytape.seagate.com.

**SeaBOARD**<sup>®</sup> is a computer bulletin board system that contains information about Seagate disc and tape drive products and is available 24 hours daily. Set your communications software to eight data bits, no parity and one stop bit (8-N-1).

### **Automated Services**

**SeaFONE®** (1-800-SEAGATE) is Seagate's toll-free number (1-800-732-4283) to access our automated self-help services. Using a touch-tone phone, you can find answers to service phone numbers, commonly asked questions, troubleshooting tips and specifications for disc drives and tape drives 24 hours daily. International callers can reach this service by dialing +1-405-936-1234.

**SeaFAX**® is Seagate's automated FAX delivery system. Using a touch-tone phone, you can obtain technical support information by return FAX 24 hours daily. This service is available worldwide.

### **Presales Support**

### **Presales Support**

Our Presales Support staff can help you determine which Seagate products are best suited for your specific application or computer system.

## **Technical Support**

If you need help installing your drive, consult your dealer. Dealers are familiar with their unique system configurations and can help you with system conflicts and other technical issues. If you need additional help, you can talk to a Seagate technical support specialist. Before calling, note your system configuration and drive model number (ST####).

**SeaTDD™** (+1-405-936-1687) is a telecommunications device for the deaf (TDD). You can send questions or comments 24 hours daily and exchange messages with a technical support specialist from 8:00 A.M. to 11:45 A.M. and 1:00 P.M. to 6:00 P.M. (central time) Monday through Friday.

## **Customer Service (CSO)**

## **Warranty Service**

Seagate offers worldwide customer support for Seagate drives. Seagate direct OEM, Distribution and System Integrator customers should contact their Seagate service center representative for warranty information. Other customers should contact their place of purchase.

#### **Authorized Service Centers**

If you live outside the US, you can contact an Authorized Service Center for service.

## **USA/Canada/Latin America Support Services**

## **Presales Support**

Call Center	Toll-free	Direct dial	FAX
Disc:	1-877-271-3285	+405-936-1210	+1-405-936-1683
Tape:	1-800-626-6637	+1-714-641-2500	+1-714-641-2410
Server Appliance:	1-800-732-4283	+1-405-936-1234	+1-405-936-1683

#### **Technical Support (SeaFONE)**

1-800-SEAGATE or +1-405-936-1234 (for specific product phone number) FAX: *Disc:* +1-405-936-1685; *Tape and Server Appliance:* +1-405-936-1683

 SeaFAX
 1-800-SEAGATE

 SeaTDD
 +1-405-936-1687

**SeaBOARD** *Disc:* +1-405-936-1600; *Tape:* +1-405-936-1630

## **Warranty Service**

Trainainty Contrido			
Call Center USA	<b>Toll-free</b> 1-800-468-3472	<b>Direct dial</b> +1-405-936-1456	FAX / Internet +1-405-936-1462
Mexico and Latin America	_	+1-405-936-1456	+1-405-936-1464
Canada  Memofix <sup>1</sup> Adtech*	1-800-636-6349 1-800-624-9857	+1-905-660-4936 or +1-905-812-8099 or	+1-905-660-4951 www.memofix.com +1-905-812-7807
Brazil			www.adtech1.com
MA Centro de Serviços*	_	+55-21-509-7267	+55-21-507-6672 e-mail: sgt_cso@gbl.com.br

<sup>1.</sup> Authorized Service Centers

## **European Support Services**

For European customer support, dial the toll-free number for your specific country for presales support, technical support, SeaFAX and warranty service.

If your country is not listed here, dial our European call center at +31-20-316-7222 from 8:30 A.M. to 5:00 P.M. (European central time) Monday through Friday. The European call center is located in Amsterdam, The Netherlands.

#### **Call Center**

Austria Belgium	0 800-20 12 90 0 800-74 876
Denmark	80 88 12 66
France	0 800-90 90 52
Germany	0 800-182 6831
Ireland	1 800-55 21 22
Italy	800-790695
Netherlands	0 800-732 4283
Norway	800-113 91
Poland	00 800-311 12 38
Spain	900-98 31 24
Sweden	0 207 90 073
Switzerland	0 800-83 84 11
Turkey	00 800-31 92 91 40
United Kingdom	0 800-783 5177

### **SeaBOARD**

Germany +49-89-1409331

### Fax Services—All European Countries

Presales/Technical Support/Warranty Service 31-20-653-3513

## **Africa/Middle East Support Services**

For presales, technical support, warranty service and FAX services in Africa and the Middle East, dial our European call center at +31-20-316-7222 from 8:30 A.M. to 5:00 P.M. (European central time) Monday through Friday, or send a FAX to +31-20-653-3513. The European call center is located in Amsterdam, The Netherlands.

## **Asia/Pacific Support Services**

For Asia/Pacific presales and technical support, dial the toll-free number for your specific country. The Asia/Pacific toll-free numbers are available from 6:00 A.M. to 10:45 A.M. and 12:00 P.M. to 6:00 P.M. (Australian eastern time) Monday through Friday. If your country is not listed here, direct dial one of our technical support locations.

Call Center	Toll-free	Direct dial	FAX
Australia	1800-14-7201	<del></del>	_
China	<del></del>		+86-10-6871-4316
Hong Kong	800-90-0474		+852-2368 7173
Indonesia	001-803-1-003-2165		_
Japan	<del>_</del>	_	+81-3-5462-2979
Malaysia	1-800-80-2335		_
New Zealand	0800-443988	_	_
Singapore	800-1101-150	+65-488-7584	+65-488-7528
Taiwan	<del>_</del>	+886-2-2514-2237	+886-2-2715-2923
Thailand	001-800-11-0032165	_	_

**Warranty Service** 

Call Center Toll-free Direct dial FAX

Asia/Pacific +65-485-3595 +65-488-7503

Australia 1800-12-9277 —

Japan - +81-3-5462-2904 +81-3-5462-2979

#### Index data 6 space 11 busy status 48 bypass circuit 15 **Numerics** Byte check command 42 12 volt bytes per surface 9 pins 52 bytes per track 9 3rd party reserve command 43 5 volt pins 52 C cache operation 11 Α cache segments 11 Abort Sequence (ABTS) 35 Caching parameters page (08h) command 41 abort task set function 35 caching write data 11 AC coupling 52 Canadian Department of Communications 3 AC power requirements 19 capacity ACA active status 48 formatted 7 ACA active, faulted initiator status 48 unformatted 7, 9 Accept (ACC) 35 case temperature 22 acoustics 26 CF 36, 39 active LED Out signal 52 Change definition command 43 Actual retry count bytes command 41 character sync 15 actuator 6 charge pins 52 assembly design 5 check condition status 48 adaptive caching 48 Class 3 parameters 36, 39 Address Discovery (ADISC) 35 class B limit 3 addresses 49 Class valid 36, 39 air cleanliness 26 clear ACA function 35 air flow 22, 32, 33 clear task set function 35 illustrated 33 commands supported 41 air inlet 33 Common features 36, 39 Alternate credit model 36, 39 Compare command 42 altitude 23 Concurrent sequences 36 ambient 23 condensation 23 ambient temperature 22, 32 condition met/good status 48 ANSI documents connector fibre channel 4 illustrated 50 SCSI 4 requirements 50 arbitrated loop physical address (AL PA) 31 continuous vibration 26 arbitration 31 Continuously increasing offset 36, 39 asynchronous event notification 48 Control mode page (0Ah) command 41 audible noise 3 cooling 32 Australia/New Zealand Standard 4 Copy and verify command 42 auto write and read reallocation Copy command 41 programmable 6 CRC 15 automatic contingent allegiance 48 error 13 average idle current 19 CS 36 average rotational latency 9 Current profiles 20 customer service 18 В D backpanel 51 backplane 53 data block size basic link service frames 35 modifing the 7 Basic\_Accept (BA\_ACC) 35 data buffer to/from disc media 10 Basic\_Reject (BA\_RJT) 35 data heads BB 36, 39 read/write 9 BB-Credit 36, 39 data rate buffer internal 9

data transfer rate 10	environmental
data valid eye 57	interference 13
Date code page command 41	limits 22
DC power 51	requirements 13
requirements 19	environmental control 26
defect and error management 29	error
deferred error handling 48	detection mechanisms, FC 15
description 5	management 29
DEV_CTRL_CODE 56	rates 13
device behavior page command 41	error correction code
device control code values 56	96-bit Reed-Solomon 6
device control codes 56	Error recovery page (01h) command 41
device identification page command 41	extended link service
device selection IDs 31	frames 35
devices 31	reply frames 35
differential PECL input 57	Extended sense command 41
dimensions 27	Extent reservation command 43
Disable page out command 42	Extent reservation command 45
disc rotation speed 9	F
	Г
Disconnect/reconnect control (page 02h) command 41	fabric 39
• •	Fabric Address Notification (FAN) 35
Download microcode and save modes (5) 42	Fabric Login (FLOGI) 35
Download microcode mode (4) 42	FAN 39
Download microcode with offsets and save mode (7)	fault LED out signal 52
A2	FC-AL
Download microcode with offsets mode (6) 42	document 4
drive 26	interface 31, 51
drive active LED connection 31	options supported 40
drive characteristics 9	physical interface 49
drive fault LED connection 31	SCA device connector, illustrated 50
drive ID 31	selective reset 48
drive ID/option select headers 31	FCC rules and regulations 3
drive mounting 27, 33	FCP
drive orientation 32	for SCSI, document 4
drive select 51	response codes 35
driver signals 56	task management functions 35
drivers and receivers 6	FC-PH document 4
dual port support 40	features 6
_	interface 35
E	Fibre Channel documents 4
electrical	Fibre Channel interface control page 41
description of connector 51	Fibre Channel Interface Manual 1, 4
signal characteristics 56	Fibre Channel Services 35
specifications 19	Field pointer bytes command 41
electromagnetic compatibility 3	firmware 6
electromagnetic interference (EMI) 13	corruption 44
electromagnetic susceptibility 26	Firmware download option command 42
EMI 13	•
	Firmware numbers page command 41 flawed sector reallocation 6
EMI requirements 3	
enable bypass	FLOGI received on Port A 38
port A 53	
port B 53	received on Port B 38
signal 53	Force unit access command 42
state 15	form factor 6
Enclosure Services interface 51	format 31
Enclosure services page command 42	Format command execution time 9
environment 33	Format page (03h) command 41

Format unit command 41 front panel 27	internal drive characteristics 9
FS 36, 37, 39	J
function	J1 connector 31
complete, code 00 35	J6 connector 31, 32
not supported, code 05 35	Jumper settings page command 41
reject, code 04 35	jumpers 31
G	L
Good status 48	latency
gradient 23	average rotational 9, 10
ground shift noise 52	LBdata 43
grounding 34	LED driver signals 56
	link rate 56
Н	Link Service Reject (LS_RJT) 35
hard assigned arbitrated loop physical address	link services supported 35
(AL_PA) 31	Lock-unlock-cache command 42
HDA 32, 33, 34	Log select command 43
HDA case temperature 22	Log sense command 43
head and disc assembly (HDA) 5	logic power 52
head and disc assembly. See HDA	logical block address 11
heads	logical block reallocation scheme 6
read/write data 9	logical block size 6, 10
heat removal 32	logical segments 11
heat source 33	Logout (LOGO) 35
host equipment 34	loop 49, 53
hot plugging the drive 15	disruption 15 initialization 31
humidity 23 humidity limits 22	loop position
numury limits 22	FC-AL options 40
I	loop position report
•	FC-AL options 40
IC 36	LS_RJT 36, 39
ID and configuration options 6	LSI circuitry 6
Implemented operating def. page command 41	,
Information exceptions control page (1Ch) command	M
41 Initiator control 36	maintenance 13
Inquiry command 41	maximum delayed motor start 19
inquiry data 45	maximum start current 19
installation 31	mean time between failure (MTBF) 14
guide 4	media description 6
interface 31	minimum sector interleave 10
commands supported 41	miscellaneous feature support
description 49	Adaptive caching 48
error rate 13	Asynchronous event notification 48
errors 13	Automatic contingent allegiance 48
illustrated 49	Deferred error handling 48
physical 49	FC-AL selective reset 48
requirements 35	Parameter rounding 48
interleave 6	Queue tagging 48
minimum 10	Reporting actual retry count 48
intermediate/condition met/good status 48	Segmented caching 48
intermediate/good status 48 Intermix 36, 39	SMP = 1 in Mode Select command 48 Synchronized (locked) spindle operation 48
internal data rate 9	Zero latency read 48
internal data rate 9 internal defects/errors 29	miscellaneous status support

ACA active 48	orientation 23
ACA active, faulted initiator 48	OS 36
Busy 48	out-of-plane distortion 33
Check condition 48	overhead time
Condition met/good 48	for head switch 10
Good 48	for one track cylinder switch 10
Intermediate/condition met/good 48	tor one track symmeor emiter to
Intermediate/good 48	Р
<del>_</del>	Γ
Reservation conflict 48	P_LOGI
Task set full 48	received on Port A 37
miscorrected media data 13	received on Port B 37
Mode select	package size 24
(10) command 43	package test specification 4
command 41	packaged 24
Mode sense	parameter rounding 48
(10) command 43	
command 41	pass-through state 15
data, table 45, 47	PBC 49, 53
monitoring state 15	PBdata 43
motor start	PCBA 34
controls 53	peak bits per inch 9
option 10	peak operating current 19
mounting 33	peak-to-peak measurements 20
holes 33	PECL input 57
	performance characteristics
orientations 32	detailed 9
mounting configuration 27	general 10
mounting configuration dimensions 27	performance degradation 24
MTBF 13, 14, 22	performance highlights 6
defined 14	physical damage 26
	physical interface 49
N	description 49
N_Port Login (PLOGI) 35	physical specifications 19
	PI 37, 38
payload 36	•
payload values 37	pin descriptions 51
NN 36, 39	PN 36, 39
Node Name 39	port bypass circuit 15, 49, 53
Node name 36	port bypass LED connection 31
noise	Port DISCovery 36
audible 3	Port Discovery (PDISC) 35
noise immunity 20	port identifier field 37, 38
non-operating 23, 24, 26	port login 36
temperature 23	accept 37
non-operating vibration 26	Port Name 39
	Port name (initiator's) 36
0	power 52
	dissipation 22
office environment 26	requirements, AC 19
old port state	requirements, DC 19
FC-AL options 40	sequencing 20
OPEN Full Duplex	Power control page (1Ah) command 41
FC-AL options 40	power distribution 3
OPEN half duplex	Prefetch command 42
FC-AL options 40	
Open sequences per exchange 36	prefetch/multi-segmented cache control 10
operating 23, 26	preventive maintenance 13
option configurations 31	private loop
option selection 51	FC-AL options 40
options 7, 40	Proc Assc 36
appraise in its	

Process Accept (ACC) 37 Process Login (PRLI) 35, 37 Process Login Accept (ACC) payload 37 process login payload data 37	Rigid disc drive geometry page command 41 rotation speed 9 running disparity 15
Process Logout (PRLO) 35 public loop	S
FC-AL options 40	safety 3
pull down resistor 53	SCA part numbers 50
Q	SCSI interface commands supported 41
queue tagging 48	SCSI Interface Product Manual 3 Search data
R	equal command 42 high command 42
radio interference regulations 3	low command 42
Random relative offset 36, 39	Seek command 41
RCD bit 11	seek error
Read buffer command 42	defined 13
Read capacity command 42	rate 13
Read combined header and data mode (0) 42	Seek extended command 42
Read command 41	seek performance characteristics 9
Read data mode (2) 42	seek time
Read defect data command 42	average typical 9
Read descriptor mode (3) 43	full stroke typical 9
read error rates 13 Read extended command 42	single track typical 9
	segmented caching 48
Read Link Status (RLS) 35 Read long command 43	SEL ID 31
read/write data heads 9	lines 53
Reassign blocks command 41	standard feature 6
Receive buffer field size 36, 39	Self-Monitoring Analysis and Reporting Technology 7, 15
receive buffer field size 37	Send diagnostics page command 42
Receive diagnostic results command 41	Sequential delivery 36, 39
receive eye	service
diagram 57	life 13, 14
receivers 52	philosophy 14
recommended mounting 25	tools 14
recovered media data 13	Service Options 39
reference	Service options 36
documents 4	Set limits command 42
Regenerate command 43	shielding 3
Register FC-4 Types (RFT_ID) 35 Relative address command 42	shipping 18
relative humidity 23	shipping container 23
Release command 41	shock 23, 24
Released (10) command 43	and vibration 23
reliability 6	shock mount 34
and service 14	signal
specifications 13	characteristics 56
repair and return information 18	LED driver 56
reporting actual retry count 48	single-unit shipping pack kit 7
Request sense command 41	SMART 7, 15
reservation conflict status 48	SMP = 1 in Mode Select command 48
Reserve command 41	SO 36, 39
Reserved (10) command 43	spindle brake 6
resonance 23	Stacked connection req. 36, 39
return information 18	standards 3
Rezero unit command 41	Start unit/stop unit command 41

start/stop time 10 support services 59 Supported diagnostics pages command 41, 42 surface stiffness allowable for non-flat surface 33 switches 31 Synchronize cache command 42 synchronized spindle operation 48 system chassis 34	V Valid version level 36, 39 Verify command 42 Verify error recovery page (07h) command 41 vibration 23, 26 Vital product data page command 41  W warranty 18
target reset function 35 task management functions 35 Abort task set 35 Clear ACA 35 Clear task set 35 Target reset 35 terminate task 35 task management response codes 35 Function complete 00 35 Function not supported 05 35 Function reject 04 35 task set full status 48 technical support services 59 temperature 22, 32 ambient 22 case 22 gradient 22 limits 22 non-operating 23 regulation 3 See also cooling terminater task function 35 terminators 31 Test unit ready command 41 Third-party Process Logout (TRPLO) 35 tracks per inch 9 tracks per surface 9 Translate page command 42 transmit eye diagram 57 transmitters 52 transporting the drive 18 TTL input characteristics 56	word sync 15 Write and verify command 42 Write buffer command 42 Write combined header and data mode (0) 42 Write command 41 Write data mode (2) 42 write errors 13 Write extended command 42 Write long command 43 Write same command 43  X X XD read 43 XD write 43 XD write 43 XD write extended command 43 XID reassign 36 XP write 43  Z zero latency read 48 zone bit recording (ZBR) 6
U UI 37, 38 unique identifier 37, 38 Unit attention page (00h) command 41 Unit serial number page command 41 unrecoverable error 13 write error, defined 13 unrecovered media data 13	

