

User Manual

Tektronix

**RSA3408A Option 27
3GPP Release 5 Downlink (HSDPA) Analysis
Software**

071-1681-00

This document supports firmware version 1.0 and above.

www.tektronix.com

Copyright © Tektronix, Inc. All rights reserved.

Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supercedes that in all previously published material. Specifications and price change privileges reserved.

Tektronix, Inc., P.O. Box 500, Beaverton, OR 97077

TEKTRONIX and TEK are registered trademarks of Tektronix, Inc.

Hardware Warranty

Tektronix warrants that the products that it manufactures and sells will be free from defects in materials and workmanship for a period of one (1) year from the date of shipment. If a product proves defective during this warranty period, Tektronix, at its option, either will repair the defective product without charge for parts and labor, or will provide a replacement in exchange for the defective product.

In order to obtain service under this warranty, Customer must notify Tektronix of the defect before the expiration of the warranty period and make suitable arrangements for the performance of service. Customer shall be responsible for packaging and shipping the defective product to the service center designated by Tektronix, with shipping charges prepaid. Tektronix shall pay for the return of the product to Customer if the shipment is to a location within the country in which the Tektronix service center is located. Customer shall be responsible for paying all shipping charges, duties, taxes, and any other charges for products returned to any other locations.

This warranty shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. Tektronix shall not be obligated to furnish service under this warranty a) to repair damage resulting from attempts by personnel other than Tektronix representatives to install, repair or service the product; b) to repair damage resulting from improper use or connection to incompatible equipment; c) to repair any damage or malfunction caused by the use of non-Tektronix supplies; or d) to service a product that has been modified or integrated with other products when the effect of such modification or integration increases the time or difficulty of servicing the product.

THIS WARRANTY IS GIVEN BY TEKTRONIX IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED. TEKTRONIX AND ITS VENDORS DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TEKTRONIX' RESPONSIBILITY TO REPAIR OR REPLACE DEFECTIVE PRODUCTS IS THE SOLE AND EXCLUSIVE REMEDY PROVIDED TO THE CUSTOMER FOR BREACH OF THIS WARRANTY. TEKTRONIX AND ITS VENDORS WILL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES IRRESPECTIVE OF WHETHER TEKTRONIX OR THE VENDOR HAS ADVANCE NOTICE OF THE POSSIBILITY OF SUCH DAMAGES.

Software Warranty

Tektronix warrants that the media on which this software product is furnished and the encoding of the programs on the media will be free from defects in materials and workmanship for a period of three (3) months from the date of shipment. If a medium or encoding proves defective during the warranty period, Tektronix will provide a replacement in exchange for the defective medium. Except as to the media on which this software product is furnished, this software product is provided "as is" without warranty of any kind, either express or implied. Tektronix does not warrant that the functions contained in this software product will meet Customer's requirements or that the operation of the programs will be uninterrupted or error-free.

In order to obtain service under this warranty, Customer must notify Tektronix of the defect before the expiration of the warranty period. If Tektronix is unable to provide a replacement that is free from defects in materials and workmanship within a reasonable time thereafter, Customer may terminate the license for this software product and return this software product and any associated materials for credit or refund.

THIS WARRANTY IS GIVEN BY TEKTRONIX IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED. TEKTRONIX AND ITS VENDORS DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TEKTRONIX' RESPONSIBILITY TO REPLACE DEFECTIVE MEDIA OR REFUND CUSTOMER'S PAYMENT IS THE SOLE AND EXCLUSIVE REMEDY PROVIDED TO THE CUSTOMER FOR BREACH OF THIS WARRANTY. TEKTRONIX AND ITS VENDORS WILL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES IRRESPECTIVE OF WHETHER TEKTRONIX OR THE VENDOR HAS ADVANCE NOTICE OF THE POSSIBILITY OF SUCH DAMAGES.

Table of Contents

Preface	v
About This Manual	v
Related Manuals.....	v
Contacting Tektronix	vi

Getting Started

Analysis Definition	1-2
Measurement Menu	1-5

Operating Basics

Downlink Analysis in the S/A Mode	2-1
Measurement Procedure.....	2-2
Channel Power Measurement	2-3
ACLR Measurement	2-5
Spectrum Emission Mask Measurement	2-7
OBW Measurement	2-9
EBW Measurement	2-10
Carrier Frequency Measurement	2-11
Editing the Measurement Limits	2-12
Downlink Analysis in the Demod Mode	2-19
Measurement Procedure.....	2-20
Measurement Setup Menu	2-22
Scale and Format of View	2-25
Code Domain Power	2-28
Power Codogram	2-30
Code Power versus Time Slot	2-32
Code Power versus Symbol	2-34
Symbol Constellation.....	2-36
Symbol EVM	2-37
Symbol Eye Diagram	2-39
Symbol Table	2-40
Modulation Accuracy.....	2-41
Uplink Analysis in the Demod Mode	2-43
ACK/NACK Analysis	2-44
Measurement Procedure.....	2-44
Measurement Setup Menu	2-46
Measurement Display	2-48

Appendices

Measurement Limit Defaults	A-1
Scale Setting Range	B-1

Index

List of Figures

Figure 1-1: Measurement menus for the 3GPP-R5 analysis	1-5
Figure 2-1: Downlink analysis measurement menu in the S/A mode	2-1
Figure 2-2: Channel power measurement	2-4
Figure 2-3: 3GPP-R5 ACLR measurement	2-6
Figure 2-4: Spectrum emission mask measurement	2-8
Figure 2-5: OBW measurement	2-9
Figure 2-6: EBW measurement	2-10
Figure 2-7: Carrier frequency measurement	2-11
Figure 2-8: Measurement limits editor	2-12
Figure 2-9: Spectrum emission mask measurement limits editor	2-14
Figure 2-10: Downlink analysis measurement menu in the Demod mode	2-19
Figure 2-11: Code domain power measurement example	2-22
Figure 2-12: Time slot table	2-25
Figure 2-13: Code domain power versus Short code	2-29
Figure 2-14: Power codogram	2-31
Figure 2-15: Code domain power versus Time slot	2-33
Figure 2-16: Code domain power versus Symbol	2-35
Figure 2-17: Symbol constellation	2-36
Figure 2-18: Symbol EVM	2-38
Figure 2-19: Symbol eye diagram	2-39
Figure 2-20: Symbol table	2-40
Figure 2-21: Modulation accuracy	2-41
Figure 2-22: Uplink analysis measurement menu in the Demod mode	2-43
Figure 2-23: Subframe offset	2-47
Figure 2-24: ACK/NACK analysis	2-48

List of Tables

Table 1-1: Additional functions in Option 27	1-1
Table 1-2: 3GPP-R5 downlink transmission parameters	1-2
Table 1-3: 3GPP-R5 uplink transmission parameters	1-3
Table 2-1: Measurement limits settings	2-13
Table 2-2: Limit settings for the spectrum emission mask measurement	2-15
Table A-1: Common limits (Band I, II, and III)	A-1
Table A-2: SEM limits in Band I and III	A-2
Table A-3: SEM limits in Band II	A-2
Table B-1: Display format and scale	B-1

Preface

This manual provides operating instructions for the RSA3408A Real-Time Spectrum Analyzer Option 27 3GPP Release 5 Downlink (HSDPA) analysis software.

About This Manual

The manual consists of the following sections:

- *Getting Started* describes the overview of the 3GPP Release 5 analysis.
- *Operating Basics* explains the menu functions and measurement procedures.
- Appendices provide additional information about default settings and scale setting ranges.

The analyzer uses Microsoft Windows XP as the operating system. This manual does not describe common usage of Windows XP. Refer to your Windows manuals as necessary.

Related Manuals

The following documents are also available for the analyzer.

- *RSA3408A User Manual*
(Standard accessory; Tektronix part number 071-1617-XX)
Describes how to install the analyzer and how to work with the menus, and details the standard functions. Also shows the specifications.
- *RSA3408A Programmer Manual*
(Standard accessory; PDF, Tektronix part number 077-0003-XX)
Contains an alphabetical listing of the programming commands and other information related to controlling the analyzer over the GPIB interface.

PDF Manual

The programmer manual described above is a PDF document (the file size is about 5 MB). The file is stored in this directory on the analyzer hard disk:

C:\Program Files\Tektronix\wca200a\Manuals

Use the USB or LAN interface to copy the file onto your PC. Refer to the *RSA3408A User Manual* for using the interface.

Contacting Tektronix

Phone	1-800-833-9200*
Address	Tektronix, Inc Department or name (if known) 14200 SW Karl Braun Drive P.O. Box 500 Beaverton, OR 97077 USA
Web site	www.tektronix.com
Sales support	1-800-833-9200, select option 1*
Service support	1-800-833-9200, select option 2*
Technical support	www.tektronix.com/support 1-800-833-9200, select option 3* 6:00 a.m. - 5:00 p.m. Pacific time

* This phone number is toll free in North America. After office hours, please leave a voice mail message.
Outside North America, contact a Tektronix sales office or distributor; see the Tektronix web site for a list of offices.



Getting Started

Getting Started

The RSA3408A Option 27 3GPP Release 5 Downlink (HSDPA) analysis software enables modulation analysis of HSDPA (High Speed Downlink Packet Access) signals defined in 3GPP (3rd Generation Partnership Project) Release 5 (“3GPP-R5”). Measurements may be performed on downlink QPSK and 16QAM or uplink BPSK signals.

Table 1-1 summarizes the functions added in Option 27 by the measurement mode of the analyzer.

Table 1-1: Additional functions in Option 27

Measurement mode	Additional functions
S/A (spectrum analysis)	3GPP-R5 downlink analysis <ul style="list-style-type: none">■ Channel power■ ACLR (Adjacent Channel Leakage Power Ratio)■ Spectrum emission Mask■ OBW (Occupied Bandwidth)■ EBW (Emission Bandwidth)■ Carrier frequency
Demod (modulation analysis)	3GPP-R5 downlink analysis <ul style="list-style-type: none">■ Code domain power■ Power codogram■ Code power versus Time slot■ Code power versus Symbol■ Symbol constellation■ Symbol EVM (Error Vector Magnitude)■ Symbol eye diagram■ Symbol table■ Modulation accuracy 3GPP-R5 uplink analysis <ul style="list-style-type: none">■ ACK/NACK analysis
Time (time analysis)	None

NOTE. The ACK/NACK analysis requires Option 23 W-CDMA Uplink Analysis Software.

Analysis Definition

The analyzer performs measurements according to 3GPP-R5 specifications.

Downlink Analysis

Table 1-2 shows the 3GPP-R5 downlink transmission parameters for the analyzer.

Table 1-2: 3GPP-R5 downlink transmission parameters

Item	Description
Chip rate	3.84 Mcps
Symbol rate	7.5, 15, 30, 60, 120, 240, 480, and 960 ksps
Maximum number of channels	512
Frame structure	Time slot: 666.7 μ s
Scrambling code	Gold code using M series by generator polynomial 18 bits
Channelization code	Hierarchical orthogonal code series based on the combination of chip rate and symbol rate
Modulation method for each channel	QPSK or 16QAM
Baseband filter	Root-cosine with $\alpha = 0.22$ (default) Can be set in the range of $0.0001 \leq \alpha \leq 1$

Measurement Functions. The analyzer has the following measurement functions:

- *Code domain power:* Measures the power relative to the total power for each channel. Multi-rate is supported and up to 512 channels can be measured.
- *Code domain power versus Time:* Measures the relative power at symbol points for each channel in time series.
- *Power codogram:* Measures the code domain power continuously for up to 150 slots (0.1 sec) and displays spectrogram for each slot.
- *Vector/Constellation:* Measures the vector loci and chip points for all signals as well as constellation at symbol points for each channel.
- *Modulation accuracy:* Measures EVM (Error Vector Magnitude), amplitude and phase errors, waveform quality, and origin offset for each channel. Measures PCDE (Peak Code Domain Error), amplitude, frequency, and phase errors; waveform quality; and origin offset for each time slot.

Measurement Process. The following steps show the internal process for the 3GPP-R5 downlink analysis:

1. Perform flatness correction and filtering.
2. Establish the synchronization with P-SCH.
3. Determine the range of scrambling code numbers with S-SCH.
4. Fix the scrambling code number and the phase.
5. Correct the frequency and the phase.
6. Perform high-speed Hadamard transformation.
7. Calculate the power for each symbol on all channels.

Uplink Analysis

The analyzer supports the following types of 3GPP-R5 uplink signals:

- DPDCH (Dedicated Physical Data Channel)
- DPCCH (Dedicated Physical Control Channel)
- HS-DPCCH (Dedicated Physical Control Channel for High-Speed Downlink Shared Channel (HS-DSCH))

The analyzer covers the 3GPP-R5 uplink transmission parameters listed in Table 1-3.

Table 1-3: 3GPP-R5 uplink transmission parameters

Item	DPDCH	DPCCH	HS-DPCCH
Chip rate	3.84 Mcps		
Symbol rate	15, 30, 60, 120, 240, 480, and 960 ksps	15 ksps	15 ksps
Maximum number of channels	6	1	1
Frame structure	15 time-slots, 10 ms	15 time-slots, 10 ms	5 sub-frames, 10 ms
Time slot	2560 chips, 667 μ s		
Scrambling code	Long or short. Number: 0 to 16,777,215		
Modulation method for each channel	BPSK		
Baseband filter	Root-cosine with α = 0.22 (default). Can be set in the range of 0.0001 $\leq \alpha \leq 1$		

Measurement Functions. The analyzer has the following measurement functions:

- *ACK/NACK analysis:* Measures the HS-DPCCH to detect and display the ACK/NACK indicator, DTX (Discontinuous Transmission), and CQI (Channel Quality Indicator).
- *Code domain power:* Measures the power relative to the total power for each channel. Multi-rate is supported and up to 512 channels can be measured.
- *Power codogram:* Measures the code domain power continuously for up to 150 slots (0.1 sec) and displays spectrogram for each slot.

NOTE. *The code domain power and the power codogram can be displayed in the subview only.*

Measurement Process. The following steps show the internal process for the 3GPP-R5 uplink analysis:

1. Perform flatness correction and filtering.
2. Search for a synchronous point by de-spreading DPCCH.
3. Correct the frequency and phase.
4. Obtain symbols for each channel of DPDCH and DPCCH, and calculate power for each symbol.

NOTE. *The analyzer de-spreads DPCCH and the control part of an input signal, using the frequency and phase to establish synchronization. If the level of DPCCH or the control part is much lower than (about 1/10th) the level of the other channels (DPDCH or the data part), the analysis may not be performed accurately.*

Measurement Menu

Figure 1-1 shows the measurement menus related to the 3GPP-R5 analysis. The boxed menu items indicate the functions included in Option 27.

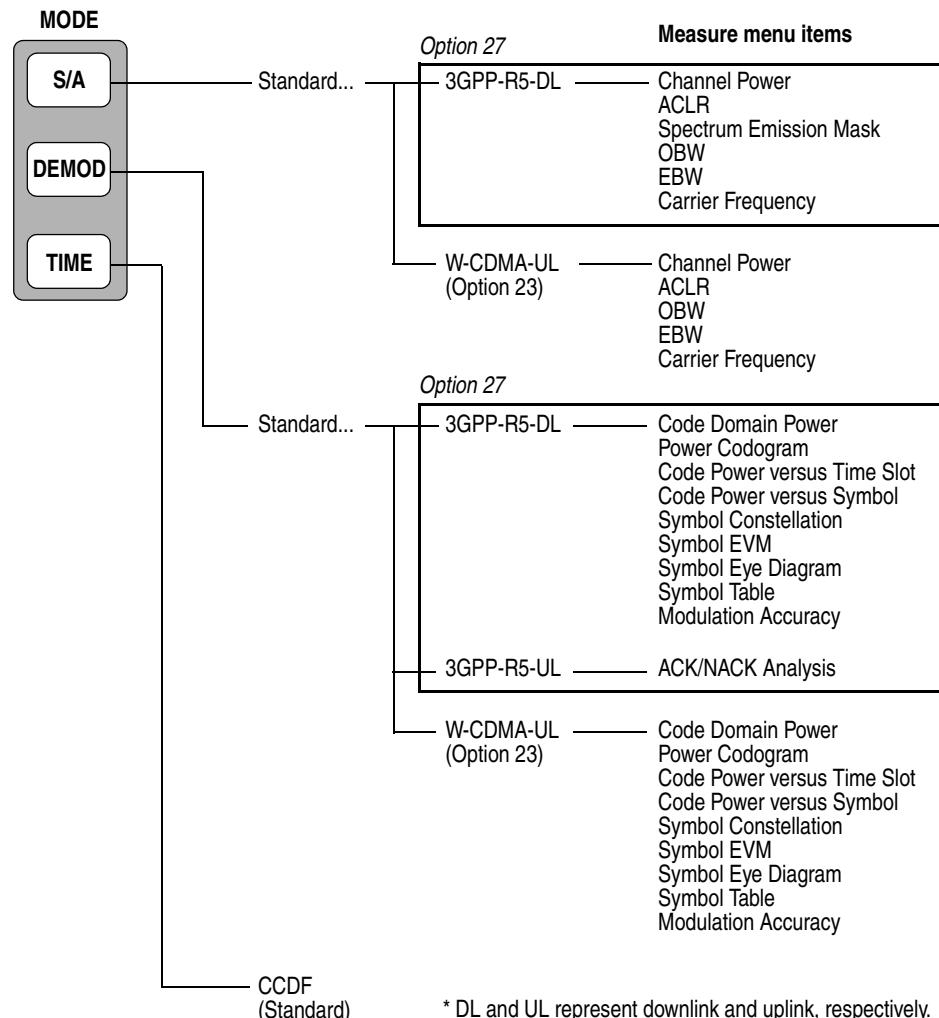


Figure 1-1: Measurement menus for the 3GPP-R5 analysis

The following sections detail the measurement functions included in Option 27 which are indicated in the two boxes in Figure 1-1. For details on the other measurements, refer to the following user manuals:

- For the W-CDMA uplink analysis in the S/A and the Demod modes, refer to the *RSA3408A Option 23 W-CDMA Uplink Analysis Software User Manual* (Tektronix part number 071-1673-XX).
- For the CCDF (Complementary Cumulative Distribution Function) analysis in the Time mode, refer to the *RSA3408A User Manual* (Tektronix part number 071-1617-XX).

NOTE. *If you are not familiar with the operation of the RSA3408A, refer to the RSA3408A User Manual (Tektronix part number 071-1617-XX).*



Operating Basics

Downlink Analysis in the S/A Mode

This section describes the basic operation of 3GPP-R5 downlink analysis in the S/A (Spectrum Analysis) mode. You can access the measurement items by pressing **S/A → Standard... → 3GPP-R5-DL** as shown in Figure 2-1.

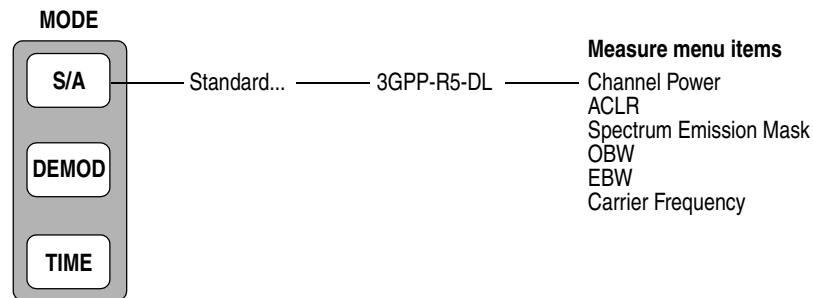


Figure 2-1: Downlink analysis measurement menu in the S/A mode

Measurement Procedure

Use the following procedure for a spectrum measurement in the S/A mode.

NOTE. For details on setting frequency, span, and amplitude, refer to the RSA3408A User Manual (Tektronix part number 071-1617-XX).

1. Press the **S/A** key on the front panel.
2. Press the side key **Standard...** → **3GPP-R5-DL**.
3. Press the **FREQUENCY/CHANNEL** key on the front panel to set frequency.

If you use the channel table, do these steps:

- Press the **Channel Table...** side key and select **W-CDMA-DL**.
- Press the **Channel** side key and select a channel by turning the general purpose knob.

The center frequency is set to the value corresponding to the channel.

4. Press the **SPAN** key on the front panel and set span.
5. Press the **AMPLITUDE** key on the front panel and set amplitude appropriately.

NOTE. If the input level is too high, A/D OVERFLOW displays in the red box at the center top of the screen. If this occurs, raise the reference level.

6. Press the **MEASURE** key on the front panel and select a measurement item:
 - Channel Power
 - ACLR (Adjacent Channel Leakage Power Ratio)
 - Spectrum Emission Mask
 - OBW (Occupied Bandwidth)
 - EBW (Emission Bandwidth)
 - Carrier Frequency

NOTE. Refer to the WCA230A & WCA280A User Manual for information on scaling the views.

The following sections explain each measurement.

Channel Power Measurement

The channel power measurement measures the channel power within a specified bandwidth and the power spectral density in dBm/Hz.

After selecting Channel Power in the procedure described on page 2-2, set the parameters in the Meas Setup menu as follows.

Measurement Setup Menu

The Meas Setup menu for the channel power measurement contains the following controls:

Channel Bandwidth. Sets the frequency range for the measurement using the band marker (see Figure 2-2).

Measurement Filter Shape... Selects the filter to be used for the measurement:

- Rect (Rectangular)
- Gaussian
- Nyquist
- Root Nyquist

Rolloff Ratio. Sets the roll-off ratio when the **Measurement Filter Shape** is Nyquist or Root Nyquist. Range: 0.0001 to 1 (default: 0.5).

Limits... Sets the pass/fail limit for the channel power measurement. When pressing this side key, the measurement limits editor appears. Refer to *Editing the Measurement Limits* on page 2-12 for more information.

Figure 2-2 shows an example of the channel power measurement.

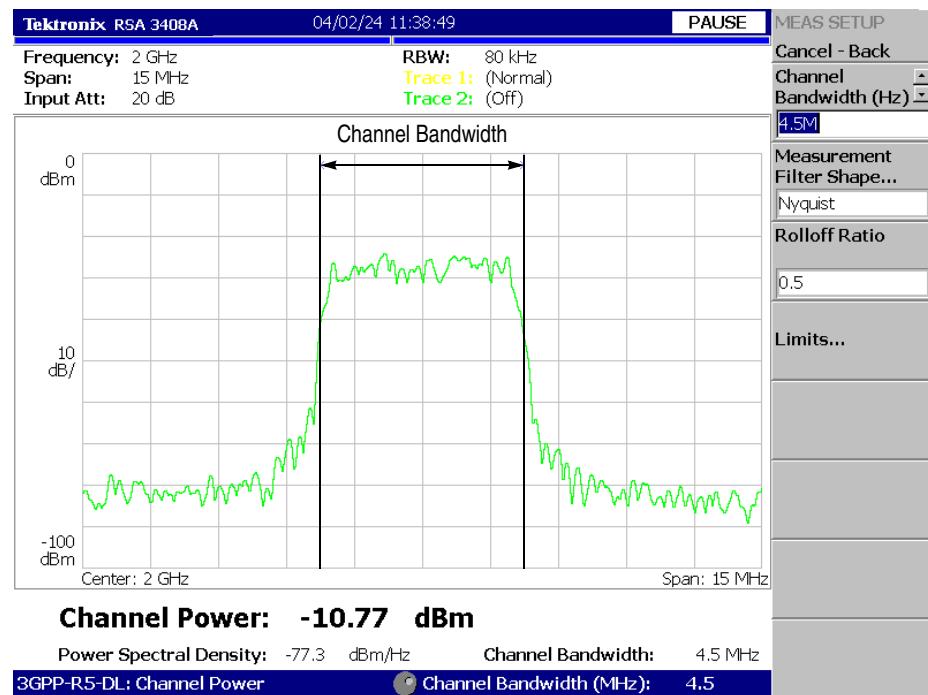


Figure 2-2: Channel power measurement

ACLR Measurement

The ACLR (Adjacent Channel Leakage Power Ratio) measurement according to the 3GPP-R5 standard is based on the ACPR measurement function in the normal spectrum analysis. For the basics, refer to ACPR Measurement in the *RSA3408A User Manual*.

The following settings are fixed according to the 3GPP-R5 standard:

Span: 25 MHz

Main channel measurement bandwidth (Main Chan BW): 3.84 MHz

Adjacent channel measurement bandwidth (Adj Chan BW): 3.84 MHz

Channel spacing (Chan Spacing): 5 MHz

After selecting ACLR in the procedure described on page 2-2, set the parameters in the Meas Setup menu as follows.

Measurement Setup Menu

The Meas Setup menu for the ACLR measurement contains the following controls:

Sweep. Selects how to scan the 25 MHz span.

- **On. Default.** Acquires an input signal with five scans by the channel spacing (5 MHz).
- **Off.** Acquires an input signal with a single scan in the 25 MHz span.

Noise Cancellation. Determines whether to subtract noise level from signal level to obtain the measurement results.

- **On.** Measures noise level first, and since then, subtracts the noise level from signal level to calculate ACLR measurement values.
- **Off. Default.** Calculates ACLR measurement values directly from the input signal level.

NOTE. When you change amplitude and frequency settings, the Noise Cancellation setting returns to Off. Turn it on again if necessary.

Measurement Filter Shape... Selects a filter shape:

Rect (rectangle) or RootNyquist (Root Nyquist, default)

Rolloff Ratio. Sets the roll-off value when the filter is Root Nyquist.

Range: 0.0001 to 1 (default: 0.22)

Limits... Sets the pass/fail limit for the ACLR measurement. When you press this side key, the measurement limits editor appears. Refer to *Editing the Measurement Limits* on page 2-12 for more information.

Figure 2-3 shows an example of the ACLR measurement. Measured values are displayed in the lower part of the screen.

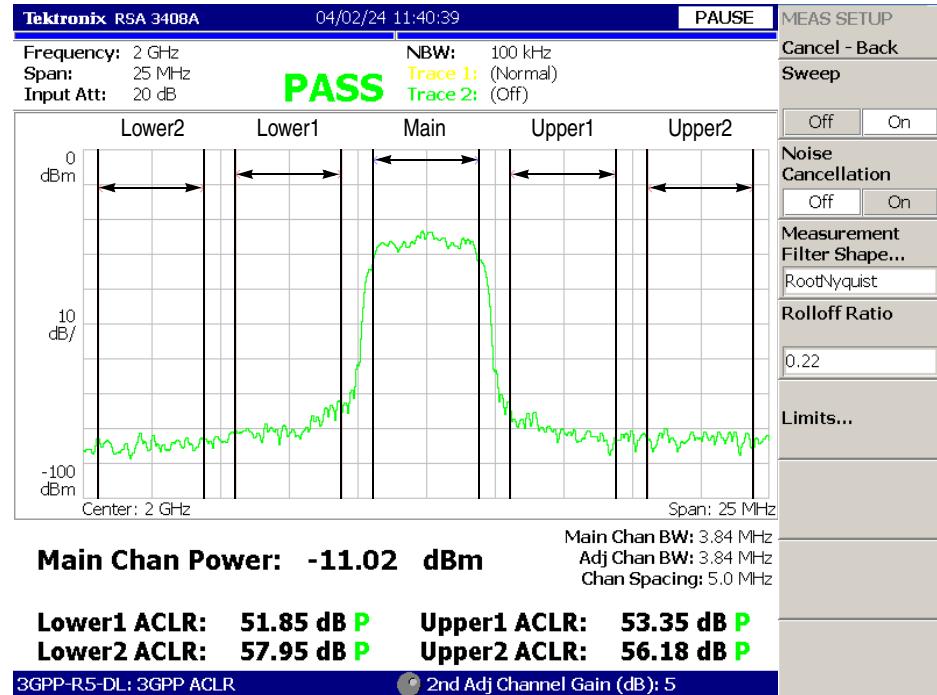


Figure 2-3: 3GPP-R5 ACLR measurement

Spectrum Emission Mask Measurement

The spectrum emission mask measurement verifies that the base station is not transmitting excessive power outside of its designated channel.

NOTE. When performing this measurement, be sure to apply a continuous active slot signal or a continuous idle slot signal.

After selecting Spectrum Emission Mask in the procedure described on page 2-2, set the parameters in the Meas Setup menu as follows.

Measurement Setup Menu

The Meas Setup menu for the spectrum emission mask measurement contains the following controls:

Ref. Channel Select. Selects the method to determine the level of the reference channel:

- **Auto.** The level is determined automatically by evaluating the spectrum trace.
- **Man.** The level is set by the **Ref. Channel Level** just below.

Ref. Channel Level. Sets the reference channel level to be used by the measurement when **Ref. Channel Select** is set to Man. Range: –150 to 30 dBm.

Channel Bandwidth. Defines the frequency window occupied by the reference channel. Range: 1 to 10 MHz.

Measurement Filter Shape... Selects the filter shape to be used when measuring the reference channel when **Ref. Channel Select** is set to Man.

- Rect (Rectangular)
- Gaussian
- Nyquist
- Root Nyquist

Rolloff Ratio. Sets the rolloff ratio when **Measurement Filter Shape** is set to Nyquist or Root Nyquist and **Ref. Channel Select** is set to Man. Range: 0.0001 to 1 (default: 0.5).

Limits... Sets the pass/fail limit for the spectrum emission mask measurement. When pressing this side key, the measurement limits editor appears. Refer to *Editing the Measurement Limits* on page 2-12 for more information.

Scroll Table. Scrolls the results table on screen using the general purpose knob.

Step Size. Sets the step size for the **Channel Bandwidth** setting.

Figure 2-4 shows an example of the spectrum emission mask measurement.

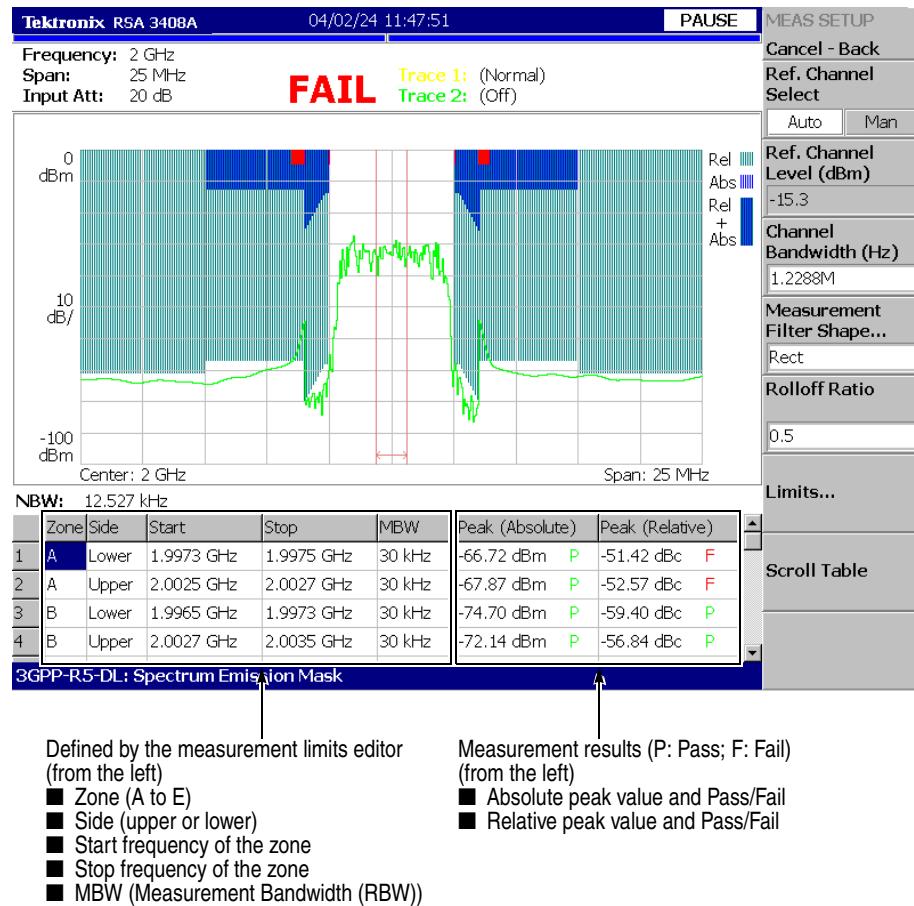


Figure 2-4: Spectrum emission mask measurement

OBW Measurement

The OBW (Occupied Bandwidth) measurement measures the frequency bandwidth, using the ratio you specify for carrier signal power over power within the span setting.

After selecting OBW in the procedure described on page 2-2, set the parameters in the Meas Setup menu as follows.

Measurement Setup Menu

The Meas Setup menu for the OBW measurement contains the following controls:

Power Ratio. Specifies the power ratio of the carrier and span regions for calculating OBW. Range: 80 to 99.99% (default: 99%).

Limits... Sets the pass/fail limits for the OBW measurement. When pressing this side key, the measurement limits editor appears. Refer to *Editing the Measurement Limits* on page 2-12 for more information.

Figure 2-5 shows an example of the OBW measurement.

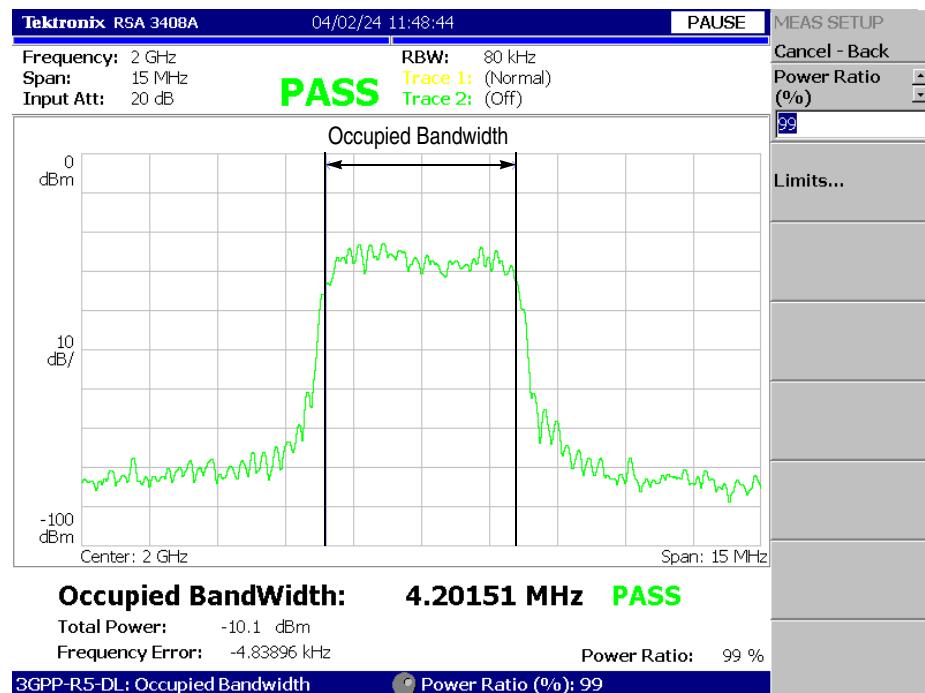


Figure 2-5: OBW measurement

EBW Measurement

The frequency bandwidth between the maximum peak of spectrum and the specified dB value is measured in EBW (Emission Bandwidth).

After selecting EBW in the procedure described on page 2-2, set the parameters in the Meas Setup menu as follows.

Measurement Setup Menu

The Meas Setup menu for the EBW measurement contains the following controls:

Measurement Level. Specifies how far down from the peak level the bandwidth is measured (see Figure 2-6). Range: -100 to -1 dB (default: -30 dB).

Figure 2-6 shows an example of the EBW measurement.

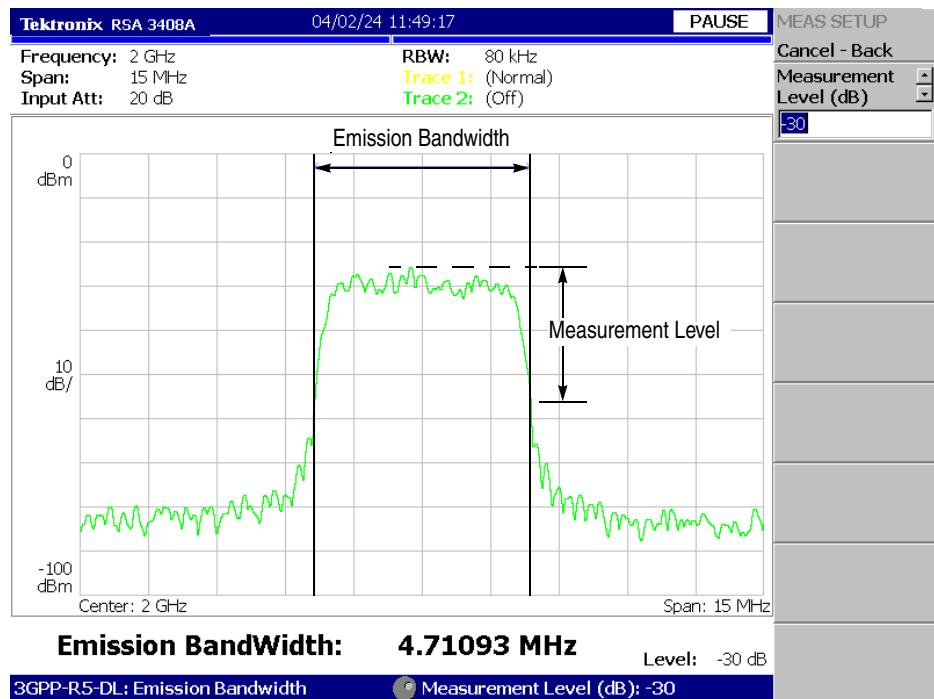


Figure 2-6: EBW measurement

Carrier Frequency Measurement

Carrier frequency is accurately measured using the counter function.

NOTE. The carrier frequency measurement function should be used to estimate roughly the frequency of a 3GPP signal. Use the modulation analysis function (Demod mode) to measure accurately the 3GPP signal.

After selecting Carrier Frequency in the procedure described on page 2-2, set the parameters in the Meas Setup menu as follows.

Measurement Setup Menu

The Meas Setup menu for the carrier frequency measurement contains the following controls:

Counter Resolution. Sets the counter resolution. The measurement result is displayed on the bottom of the view with this resolution.
Range: 1 mHz to 1 MHz in a tenfold sequence (default: 1 Hz).

Figure 2-7 shows an example of the carrier frequency measurement.

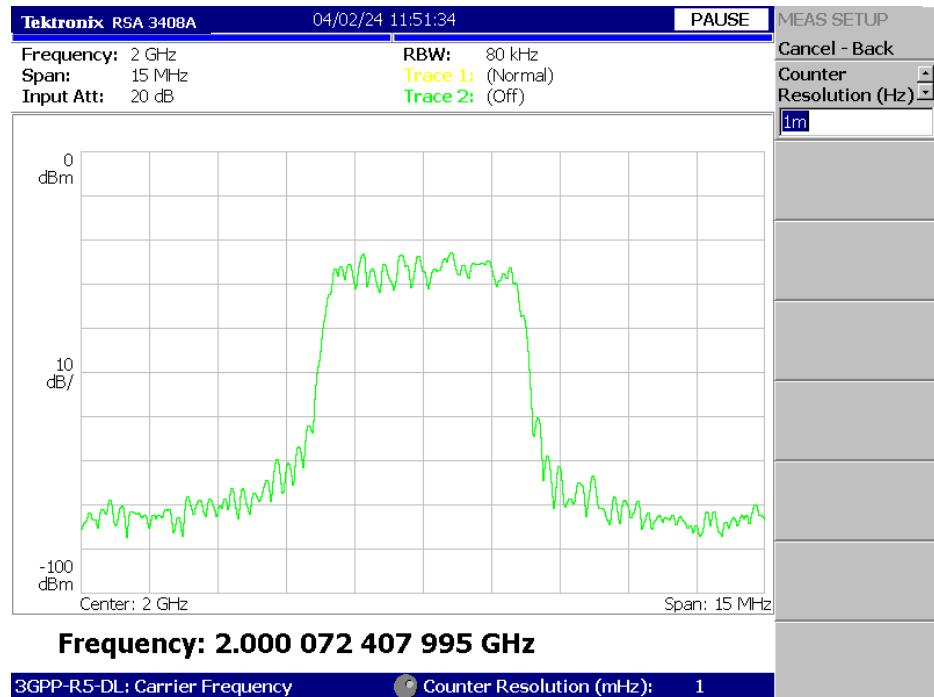


Figure 2-7: Carrier frequency measurement

Editing the Measurement Limits

This section describes how to set measurement limits that can be used to perform pass/fail testing for the following measurements in the S/A mode:

- Channel power
- ACLR
- Spectrum emission mask
- OBW

Refer to *Appendix A: Measurement Limit Defaults* for information about the default settings of each measurement limit.

Using the Measurement Limits Editor

All of the measurement limits are set in the measurement limits editor. You can access it from the **Limits...** side key on the Meas Setup menu. Figure 2-8 shows the measurement limits editor for the 3GPP-R5 downlink analysis in the S/A mode.

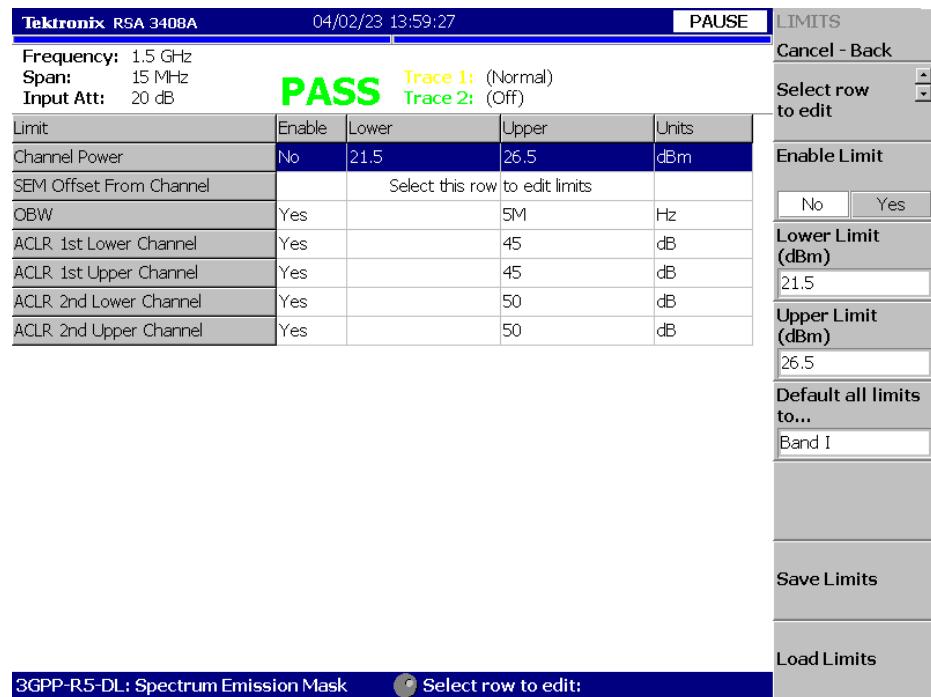


Figure 2-8: Measurement limits editor

Table 2-1 describes all of the measurement limit items available in the measurement limits editor.

Table 2-1: Measurement limits settings

Limit item	Description	Lower limit range	Upper limit range
Channel Power	Sets the lower and upper limits for the Channel Power measurement.	-200 to 200 dBm	-200 to 200 dBm
SEM Offset From Channel	Select this item to access another measurement limits editor to edit SEM offset from channel limits.	Refer to page 2-14 for the details.	
OBW	Sets the upper and lower limits for the OBW measurement.	0 to 30 MHz	0 to 30 MHz
ACLR 1st Lower Channel	Sets the upper limit for the first lower channel in the ACLR measurement.	-	0 to 70 dB
ACLR 1st Upper Channel	Sets the upper limit for the first upper channel in the ACLR measurement.	-	0 to 70 dB
ACLR 2nd Lower Channel	Sets the upper limit for the second lower channel in the ACLR measurement.	-	0 to 70 dB
ACLR 2nd Upper Channel	Sets the upper limit for the second upper channel in the ACLR measurement.	-	0 to 70 dB

Setting Measurement Limits

Perform the following procedure to set measurement limits:

1. Press the **MEAS SETUP** menu key to open the Meas Setup menu.
2. Press the **Limits...** side key to open the measurement limits editor with the **LIMITS** menu.
3. Press the **Select row to edit** side key.
4. Turn the general purpose knob (or press the arrow keys just above the knob) to select the row that you want to edit.
5. Press the **Enable Limit** side key to enable or disable the Pass/Fail testing for the specified limit(s).
6. Press the **Lower Limit** side key and set the lower limit for the selected measurement item, if applicable.
7. Press the **Upper Limit** side key and set the upper limit for the selected measurement item.
8. If you want to use a given measurement limit set for the frequency band of Band I, II, or III defined in 3GPP-R5, press the **Default all limits to...** side key and then select the band. Refer to *Appendix A: Measurement Limit Defaults* for information about the default settings of each measurement limit.

When you set limits for the spectrum emission mask measurement, perform the following steps to open another limits editor:

1. Press the **Select row to edit** side key.
2. Turn the general purpose knob (or press the arrow keys just above the knob) to select the **SEM Offset From Channel** row in the table.
3. Press the **Edit SEM Offset Limits...** side key.

This opens the measurement limits editor to specify the detail of the limits for the spectrum emission mask measurement. For more information, refer to the following section, *Setting the Spectrum Emission Mask Limits*.

Setting the Spectrum Emission Mask Limits

When you select the SEM Offset From Channel row in the measurement limits editor and then press the **Edit SEM Offset Limits...** side key, another limits editor for the spectrum emission mask measurement is displayed as shown in Figure 2-9.

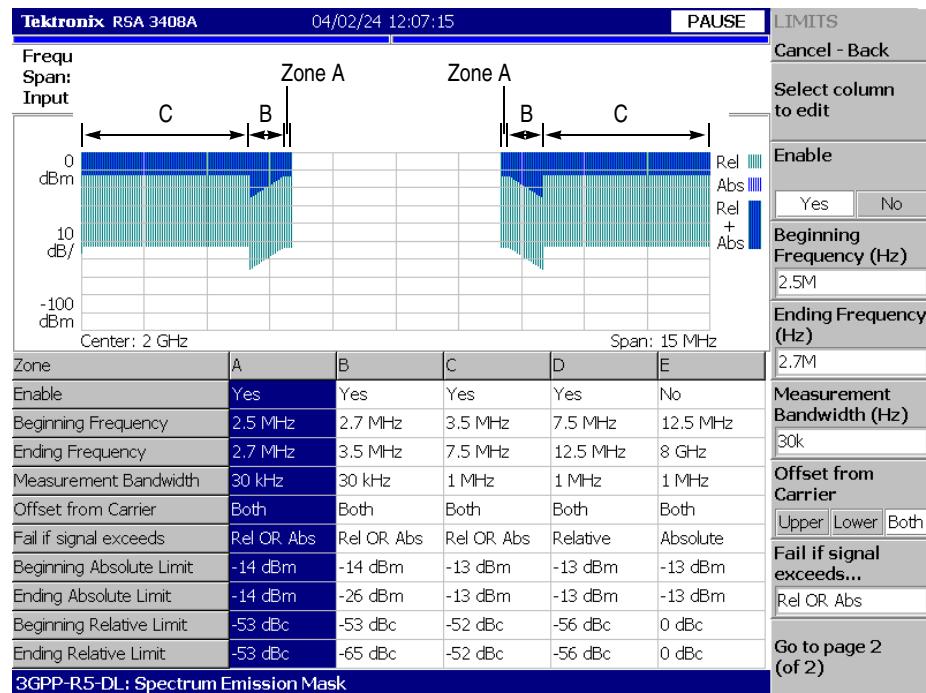


Figure 2-9: Spectrum emission mask measurement limits editor

Table 2-2 lists the measurement limit items that can be set in the measurement limits editor.

Table 2-2: Limit settings for the spectrum emission mask measurement

Item	Description	Limit ranges
Enable	Enables or disables use of the mask in the specified zone (A, B, C, D, or E).	-
Beginning Frequency	Sets the beginning frequency relative to the center frequency for the zone.	-3 to 3 GHz (WCA230A) -8 to 8 GHz (WCA280A)
Ending Frequency	Sets the ending frequency relative to the center frequency for the zone.	-3 to 3 GHz (WCA230A) -8 to 8 GHz (WCA280A)
Measurement Bandwidth	Sets the measurement RBW (Resolution Bandwidth) for the zone.	-3 to 3 GHz (WCA230A) -8 to 8 GHz (WCA280A)
Offset from Carrier	Specifies which offset side is to be measured. You can select Upper (positive), Lower (negative), or Both.	-
Fail if signal exceeds	Selects the fail mode to detect fail conditions between the measurement results and the test limits. The choices are: <ul style="list-style-type: none"> ■ Absolute: Fail is detected when one of the absolute measurement results is larger than the limit for Beginning Absolute Limit and/or Ending Absolute Limit. ■ Relative: Fail is detected when one of the relative measurement results is larger than the limit for Beginning Relative Limit and/or Ending Relative Limit. ■ Rel OR Abs: Fail is detected when one of the absolute measurement results is larger than the limit for Beginning Absolute Limit and Ending Absolute Limit OR one of the relative measurement results is larger than the limit for Beginning Relative Limit and Ending Relative Limit. ■ Rel AND Abs: Fail is detected when one of the absolute measurement results is larger than the limit for Beginning Absolute Limit and Ending Absolute Limit AND one of the relative measurement results is larger than the limit for Beginning Relative Limit and Ending Relative Limit. 	-
Beginning Absolute Limit	Sets an absolute level limit at Beginning Frequency.	-200 to 200 dBm
Ending Absolute Limit	Sets an absolute level limit at Ending Frequency.	-200 to 200 dBm
Beginning Relative Limit	Sets a relative level limit at Beginning Frequency.	-200 to 200 dBc
Ending Relative Limit	Sets a relative level limit at Ending Frequency.	-200 to 200 dBc

Perform the following steps to set measurement limits in the limits editor:

1. Press the **Select column to edit** side key.
2. Turn the general purpose knob (or press the arrow keys just above the knob) to select the column that you want to edit.
3. Press the **Enable** side key to enable or disable use of the limits for the zone.
4. Press the side key corresponding to the limit item, and then use the general purpose knob or the arrow keys to set the value.
5. If you want to use a given measurement limit set for the frequency band of Band I, II, or III defined in 3GPP-R5, press the **Default limits to...** side key and then select the band. Refer to *Appendix A: Measurement Limit Defaults* for information about the default settings of each measurement limit.
6. When you press the **Rescale Graph** side key, the graph is rescaled to match the set limits.

Saving and Loading Measurement Limits

Measurement limits that set in the limits editor can be saved to a file and loaded from a file. This section describes how to save and load measurement limits.

Refer to the *WCA230A & WCA280A User Manual* for further information about file operation including how to enter a file name and how to delete a file.

Saving the Limits. Perform the following steps to save the current limits to a file:

1. When you open the spectrum emission mask measurement limits editor, press the **Cancel-Back (MENU)** side key to return the measurement limit editor (see Figure 2-8 on page 2-12).
2. Press the **Save Limits** side key to open the **Save to File** menu.
You can save the limits by using the preset file name or by entering a new file name.
3. To use the preset file name, press one of the following side keys: **Save to LimitsA**, **Save to LimitsB**, or **Save to LimitsC**.
4. To enter a new file name, type a file name in the text box at the top of the menu, and then press the **Save File Now** side key.

The file extension *.lmt is automatically added to the limits file.

Loading the Limits. Perform the following steps to load the limits from a file:

1. When you open the spectrum emission mask measurement limits editor, press the **Cancel-Back (MENU)** side key to return the measurement limit editor (see Figure 2-8 on page 2-12).
2. Press the **Load Limits** side key to open the **Load From File** menu.
3. To load limits from the preset file, press one of the following side keys: **Load from LimitsA**, **Load from LimitsB**, or **Load from LimitsC**.
4. To load limits from an existing file, select the file from the file list, and then press the **Load File Now** side key.

Downlink Analysis in the Demod Mode

This section describes the basic operation of the 3GPP-R5 downlink analysis in the Demod (Modulation Analysis) mode. You can access the measurement items by pressing **DEMOD** → **Standard...** → **3GPP-R5-DL** as shown in Figure 2-10.

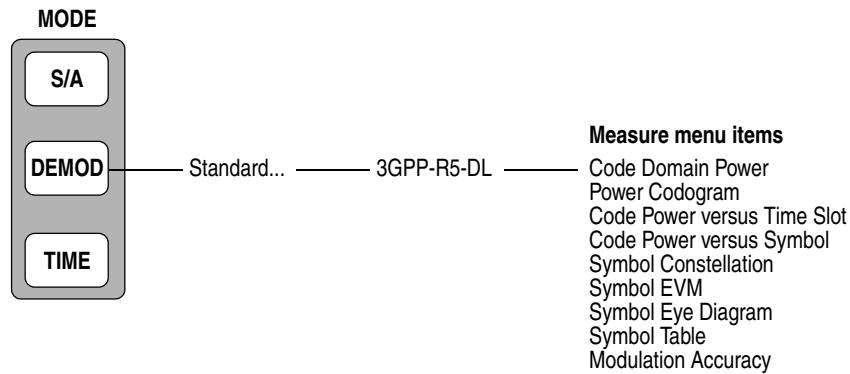


Figure 2-10: Downlink analysis measurement menu in the Demod mode

The measurement in the Demod mode is based on the digital modulation analysis function. For the digital modulation analysis, refer to the *RSA3408A User Manual*.

Measurement Procedure

The following procedure shows you how to acquire data of multiple slots in advance, measure continuous data, and obtain continuous code domain power:

NOTE. For details on setting frequency, span, and amplitude, refer to the RSA3408A User Manual.

1. Press the **DEMOD** key on the front panel.
2. Press the side key **Standard... →3GPP-R5-DL**.
3. Press the **FREQUENCY/CHANNEL** key on the front panel to set frequency.
If you use the channel table, do these steps:
 - a. Press the **Channel Table...** side key and select **W-CDMA-DL**.
 - b. Press the **Channel** side key and select a channel by rotating the general purpose knob.The center frequency is set to the value corresponding to the channel.
4. Press the **SPAN** key on the front panel to set the span.
5. Press the **AMPLITUDE** key on the front panel to set the amplitude appropriately.

NOTE. If the input level is too high, A/D OVERFLOW displays in the red box at the center top of the screen. If this occurs, raise the reference level.

6. Press the **TIMING** key on the front panel and then the **Acquisition Length** side key to set the time length to acquire one block.

Suppose that one block contains M frames; the acquisition length is calculated with this equation:

$$(\text{One block acquisition length}) = M \times (\text{One frame acquisition length})$$

One frame acquisition length is determined by span and indicated on the **Spectrum Length** side key.

The number of frames M required for measuring N slots must meet the following condition:

$$M > K \times (N + 1.2) + 1$$

where

K = 16.7 (for the span of 20 MHz and 15 MHz)

8.34 (for the span of 10 MHz)

4.17 (for the span of 5 MHz)

7. After acquiring measurement data, stop the data acquisition. If you are acquiring data in the continuous mode, press the **RUN/STOP** key.

8. Press the **MEASURE** key on the front panel and select measurement items. For example, press the **Power Codogram** side key to observe the code domain power spectrogram.
9. Press the **MEAS SETUP** key on the front panel and set the measurement parameters. Refer to page 2-22 for details of the Meas Setup menu.
10. Set the analysis range in the overview. Refer to the *RSA3408A User Manual* for the details.
11. Press the **Analyze** side key to perform measurement for the frames in the analysis range. The measurement result and waveform are displayed in the main view.
Change the scale and format of the view as needed. Refer to page 2-25 for setting views specific to the 3GPP-R5 downlink analysis.
12. If the level of input signals is low, the waveform may not be displayed correctly. In this case, perform the following procedure:

NOTE. *The 3GPP-R5 downlink signal analysis may not be performed correctly if the P-SCH, S-SCH, and PCPICH channels are too low to be detected. An error occurs when one of these channel levels is lower than several tenths the sum of other channel levels. In this case, set Scrambling Code Search to Off and specify the scrambling code with the Scrambling Code side key.*

- a. Press the **MEAS SETUP** key on the front panel.
- b. Press the **Modulation Parameters...** side key.
- c. Press the **Scrambling Code Search** side key to select **Off**.
- d. Press the **Scrambling Code** side key and enter the scrambling code.
The analyzer performs measurement with the value set here in place of detecting the scrambling code.
- e. Press the **MEAS SETUP** key on the front panel.
- f. Press the **Analyze** side key to perform measurement for the frames in the analysis range.

Figure 2-11 shows an example of the code domain power measurement.

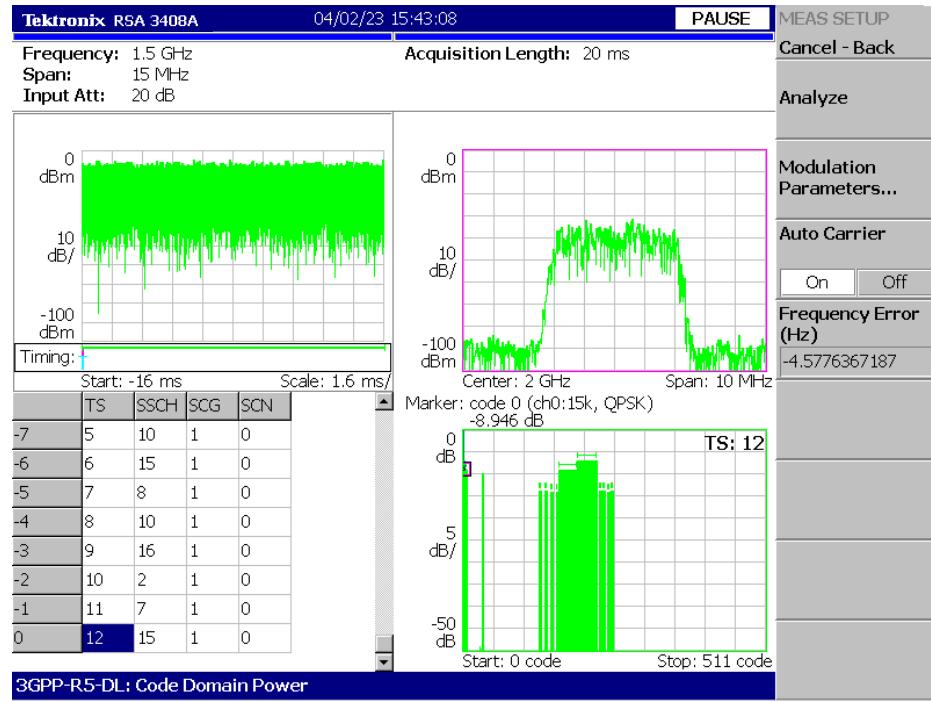


Figure 2-11: Code domain power measurement example

Measurement Setup Menu

The Meas Setup menu for the 3GPP-R5 downlink modulation analysis contains the following controls:

Analyze Performs analysis for time slots in the analysis range.

NOTE. When you change settings of the parameters in the Meas Setup menu described below, press the **Analyze** side key to perform the measurement for the modified settings.

Modulation Parameters... Sets a measurement parameter to a non-standard value. The following controls are provided:

Scrambling Code Search. Selects whether to perform analysis by detecting a scrambling code from input signals.

- **On.** Detects a scrambling code automatically from the input signal to perform the measurement.
- **Off.** Performs measurement using the scrambling code that has been set manually with **Scrambling Code** described below.

NOTE. *The manual mode (Scrambling Code Search Off) should be used with the appropriate scrambling code for reliable detection when either multiple code channels are active or the sync channels have low power.*

Also refer to *Note* on page 2-21.

Scrambling Code. Sets the scrambling code number when you select Off in Scrambling Code Search. Range: 0 to 24575.

The analyzer performs measurement using the set scrambling code.

Use Alternative Scramb. Code... Selects the de-spread method to display the measurement results:

- **Not Used.** Uses the primary scrambling code only (without the left and the right alternative scrambling codes) to de-spread the input signal.
- **Primary.** Uses the primary scrambling with the left and the right alternative scrambling codes to de-spread the input signal.
- **Left Alternative.** Uses the left alternative scrambling code to de-spread the input signal.
- **Right Alternative.** Uses the right alternative scrambling code to de-spread the input signal.

Primary, Left Alternative and **Right Alternative** use the proprietary algorithm to enhance the sensitivity by approximately 20 to 30 dB compared to **Not Used**. **Not Used** does not use the alternative scrambling codes for faster measurement.

Use SCH Part. Selects whether to include or exclude the SCH portion when calculating the code domain power.

- **On.** Calculates the code domain power by including the SCH portion.
- **Off. Default.** Calculates the code domain power by excluding the SCH portion.

Composite. Determines whether to perform the composite analysis (automatic detection of symbol rate).

- **On.** Specifies that the composite analysis is performed.
- **Off.** Specifies that the composite analysis is not performed.

NOTE. You should usually specify that composite analysis is performed. If a normal analysis does not result, select **Off** in this command and select a specific symbol rate with **Symbol Rate** in the **View: Define** menu.

16QAM Detection. Selects whether to detect the QPSK or 16QAM code channel automatically.

- **On.** Automatically detects whether the code channel is QPSK or 16QAM.
- **Off.** Assumes that all code channels are QPSK.

Measurement Filter... Selects a filter for demodulating digitally-modulated signals:

- None (no filter)
- RootRaisedCosine

Reference Filter... Selects a filter for creating reference data:

- None (no filter)
- RaisedCosine
- Gaussian

For the filters, refer to *Process Flow of Digitally-Modulated Signal* in the *RSA3408A User Manual*.

Filter Parameter. Sets the a/BT value for Measurement Filter and Reference Filter described above. Range: 0.0001 to 1.

Auto Carrier Selects whether to detect the carrier automatically.

- **On. Default.** Automatically detects the carrier for every frame. The error from the center frequency is shown on the **Freq Error** side key.
- **Off.** Sets the carrier frequency using **Frequency Offset** described below.


Frequency Offset Sets the carrier frequency when **Auto Carrier** is selected to Off. Input the carrier offset from the center frequency.

Scale and Format of View

The following main views are specific for the measurement items of the 3GPP-R5 downlink analysis in Demod mode:

- Code domain power
- Power codogram
- Code power versus Time slot
- Code power versus Symbol
- Symbol constellation
- Symbol EVM
- Symbol eye diagram
- Symbol table
- Modulation accuracy

Each view and its specific menu are described on the following pages. In the main view, the time slot table shown in Figure 2-12 is displayed in addition to waveform and measurement results.

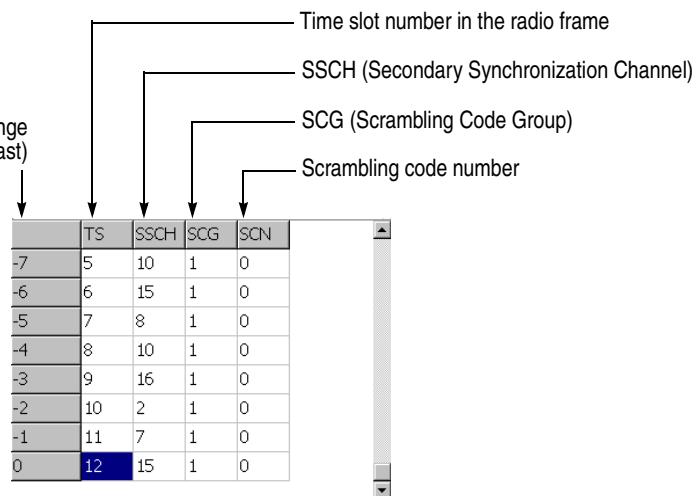

The diagram shows a table with 8 rows and 5 columns. The columns are labeled TS, SSCH, SCG, SCN, and an empty column on the right. The rows are numbered -7 to 0. Row 0 is highlighted with a blue background. Arrows point from the table to the following labels: 'Time slot number in the analysis range (0 is the last)' points to row 0; 'Time slot number in the radio frame' points to the first column; 'SSCH (Secondary Synchronization Channel)' points to the second column; 'SCG (Scrambling Code Group)' points to the third column; and 'Scrambling code number' points to the fourth column.

	TS	SSCH	SCG	SCN	
-7	5	10	1	0	
-6	6	15	1	0	
-5	7	8	1	0	
-4	8	10	1	0	
-3	9	16	1	0	
-2	10	2	1	0	
-1	11	7	1	0	
0	12	15	1	0	

Figure 2-12: Time slot table

View: Define Menu

The View: Define menu is common to all main views of the 3GPP-R5 downlink measurement items. It contains the following controls:

Show Views. Selects the view style:

- **Single.** Displays only the view selected by the VIEW: **SELECT** key.
- **Multi. Default.** Displays the overview, subview, and main view.

Overview Content... Selects a view to display in the overview:

- Waveform (power versus time)
- Spectrogram

Subview Content... Selects a view to display in the subview:

- Spectrum
- Code Domain Power
- Power Codogram
- CDP vs Time Slot (code domain power versus time slot)
- CDP vs Symbol (code domain power versus symbol)
- Symbol Constellation
- Symbol EVM
- Symbol Eye Diagram
- Symbol Table
- Modulation Accuracy

Time Slot. Sets a time slot number to position the marker.

Range: 0 to the number of slots – 1

Short Code. Sets a short code number to position the marker.

Range: 0 to 511 channels

Multi Slot. Selects whether to display single slot or multiple slots in the main view. This selection practically affects only the code domain power versus symbol view and the symbol EVM view. In the other views, it is meaningless.

- **Off.** Displays one time-slot selected by the **Time Slot** side key.
- **On.** Displays up to 15 time-slots in the main view.

Menu Off. Turns off the side menu on screen to expand the waveform and measurement result display. Press the **MENU** side key when you return to the original display.

Show SCH Part. Determines whether to display SCH at the beginning of data.

- **Off.** Hides the SCH part.
- **On.** Displays the SCH part.

Symbol Rate... Sets the symbol rate for displaying symbol constellation:

- 960 k
- 480 k
- 240 k
- 120 k
- 60 k
- 30 k
- 15 k
- 7.5 k
- Composite

The default is Composite for multi-rate.

Code Domain Power

When you select Code Domain Power in the Measure menu, the code domain power is displayed for each short code, as shown in Figure 2-13.

View: Scale Menu Use the following controls to scale the view:

Auto Scale. Sets the start value and the scale of the vertical axis automatically to display the entire waveform.

Horizontal Scale. Sets the scale of the horizontal axis. Range: 16 to 512 channels.

Horizontal Start. Sets the start channel number of the horizontal axis.

Vertical Scale. Sets the scale of the vertical axis. Range: 1 to 100 dB.

Vertical Stop. Sets the maximum value (top edge) of the vertical axis. Range: -100 to 100 dB.

Full Scale. Sets the scale of the vertical axis to the default full scale value.

Y Axis. Selects whether to represent the vertical axis (amplitude) with relative or absolute values.

- **Relative.** The vertical axis represents power relative to the total power of all channels.
- **Absolute.** The vertical axis represents absolute power of each channel

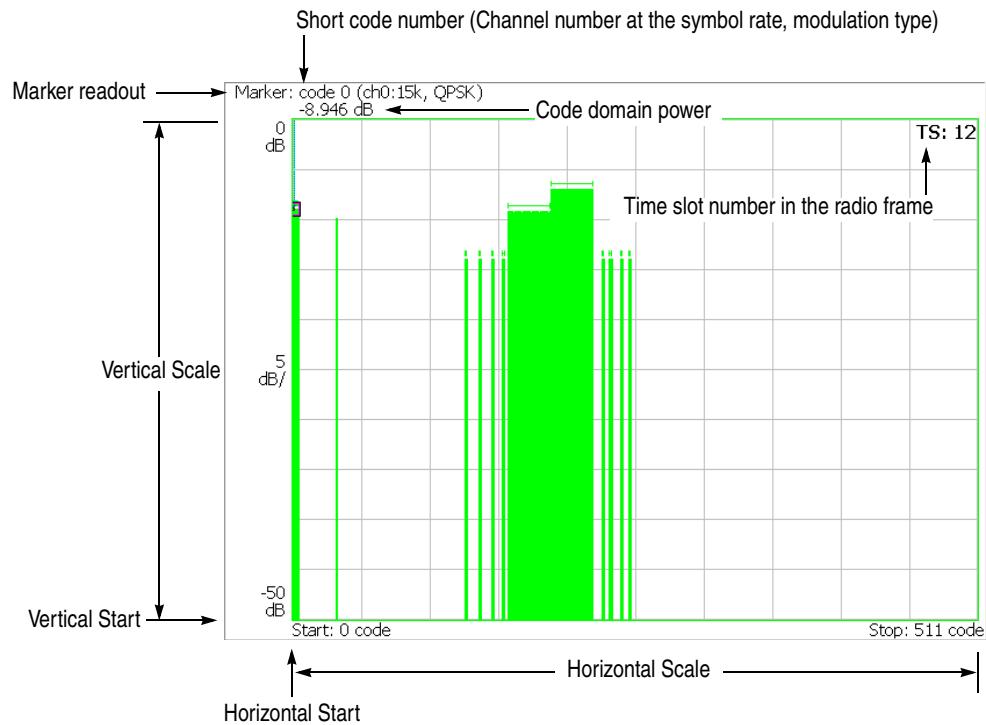


Figure 2-13: Code domain power versus Short code

Power Codogram

When you select Power Codogram in the Measure menu, the code domain power is displayed in spectrogram, as shown in Figure 2-14.

View: Scale Menu Use the following controls to scale the view:

Auto Scale. Sets the start value and the scale of the vertical axis automatically to display the entire waveform.

Horizontal Scale. Sets the scale of the horizontal axis. Range: 16 to 512 channels.

Horizontal Start. Sets the start channel number of the horizontal axis.

Vertical Size. Sets the full scale of the vertical axis in frames. Range: 58 to 59392.

Vertical Start. Sets the start frame number of the vertical axis.

Color Scale. Sets the scale (the value subtracting the minimum power value from the maximum) of the color axis:

- 5 dB
- 10 dB
- 20 dB
- 50 dB

The spectrogram is displayed in 100 steps (100 colors) from the minimum value (blue) to the maximum value (red) in the default state.

Color Stop. Sets the maximum value (top edge) of the color axis. Range: -50 to 50 dB.

Full Scale. Sets the maximum value of the color axis to the reference level and the height to 50 dB.

Y Axis. Selects whether to represent the Y (color) axis with relative or absolute values.

- **Relative.** The Y axis represents power relative to the total power of all channels.
- **Absolute.** The Y axis represents absolute power of each channel.

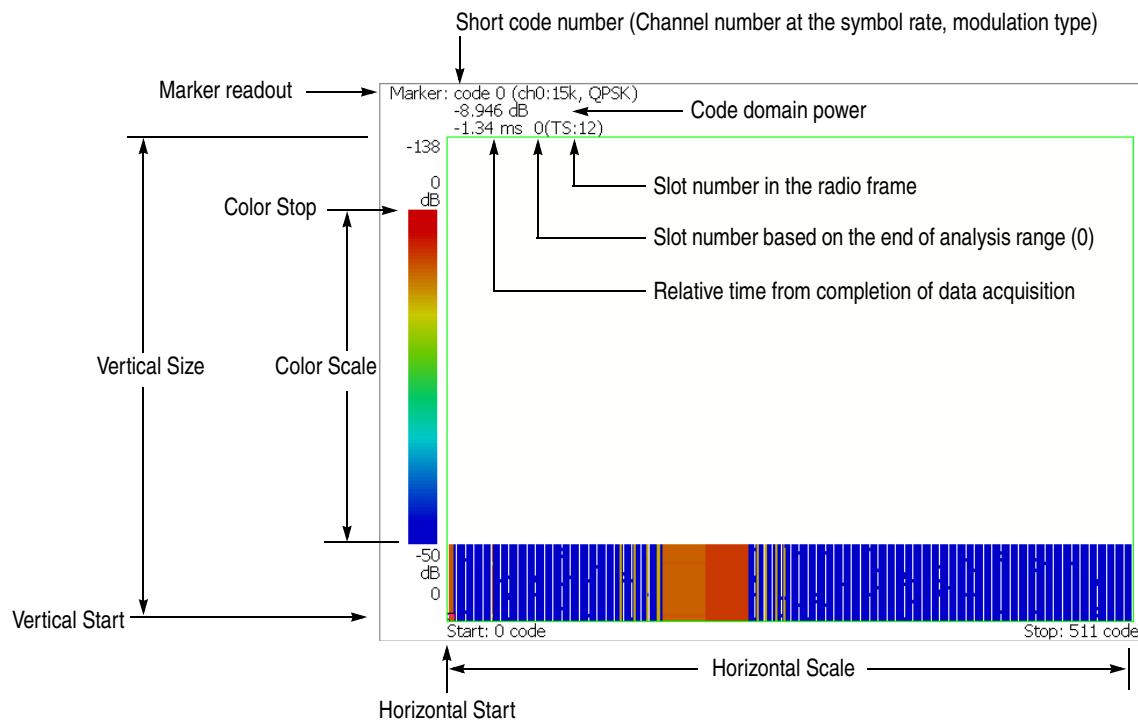


Figure 2-14: Power codogram

Code Power versus Time Slot

When you select Code Power versus Time Slot in the Measure menu, the code domain power is displayed for each slot, as shown in Figure 2-15.

View: Scale Menu Use the following controls to scale the view:

Auto Scale. Sets the start value and the scale of the vertical axis automatically to display the entire waveform.

Horizontal Scale. Sets the scale of the horizontal axis (number of slots).

Horizontal Start. Sets the start slot number of the horizontal axis.

Vertical Scale. Sets the scale of the vertical axis. Range: 1 to 100 dB

Vertical Stop. Sets the maximum value (top edge) of the vertical axis. Range: -100 to 100 dB.

Full Scale. Sets the scale of the vertical axis to the default full scale value.

Y Axis. Selects whether to represent the vertical (amplitude) axis with relative or absolute values.

- **Relative.** The vertical axis represents time slot power relative to the power of the first time slot in the analysis range.
- **Absolute.** The vertical axis represents absolute power of time slots.

Select Power. Selects the channel to show the power for each time slot.

- **Code.** Shows the power of all channels or the specified channel depending on the setting of Total Power described below.
- **PSCH.** Shows the power of the PSCH (Primary Synchronization Channel).
- **SSCH.** Shows the power of the SSCH (Secondary Synchronization Channel).

Total Power. Determines whether to display the total power for each time slot when you select Code with Select Power described above.

- **On. Default.** Displays the total power of all channels for each time slot.
- **Off.** Displays power of the channel specified with Short Code in the View: Define menu (refer to page 2-26).

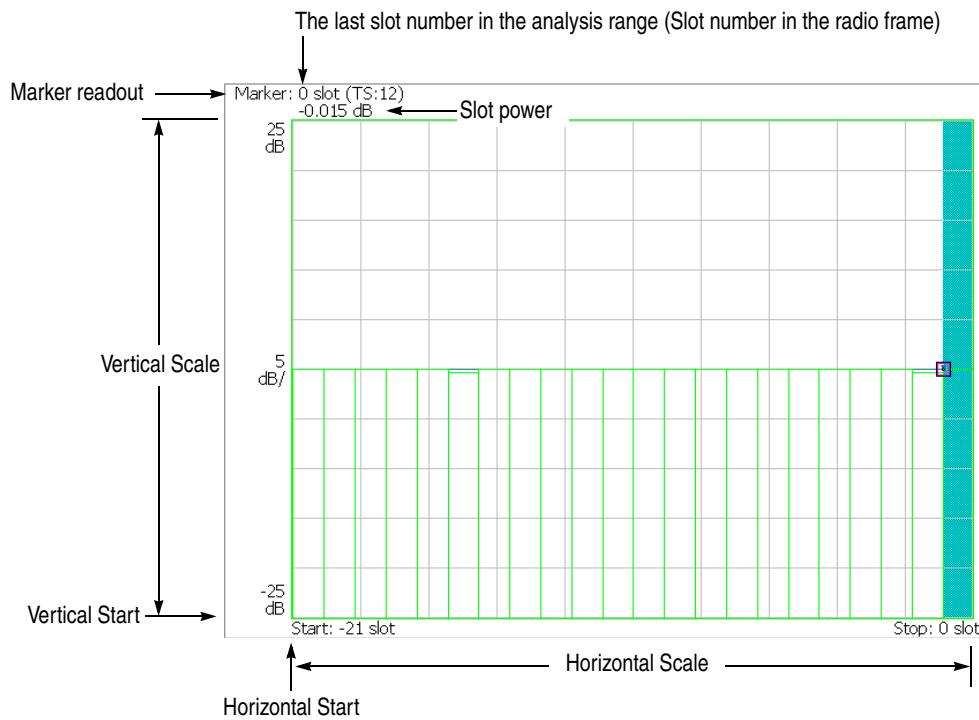


Figure 2-15: Code domain power versus Time slot

Code Power versus Symbol

When you select Code Power versus Symbol in the Measure menu, the code domain power is displayed for each symbol, as shown in Figure 2-16.

View: Scale Menu Use the following controls to scale the view:

Auto Scale. Sets the start value and the scale of the vertical axis automatically to display the entire waveform.

Horizontal Scale. Sets the scale of the horizontal axis (number of symbols).

Horizontal Start. Sets the start symbol number of the horizontal axis.

Vertical Scale. Sets the scale of the vertical axis. Range: 1 to 100 dB

Vertical Stop. Sets the maximum value (top edge) of the vertical axis. Range: -100 to 100 dB.

Full Scale. Sets the scale of the vertical axis to the default full-scale value.

Y Axis. Selects whether to represent the vertical (amplitude) axis with relative or absolute values.

■ **Relative.** The vertical axis represents power relative to the total power of all channels.

■ **Absolute.** The vertical axis represents absolute power of each channel.

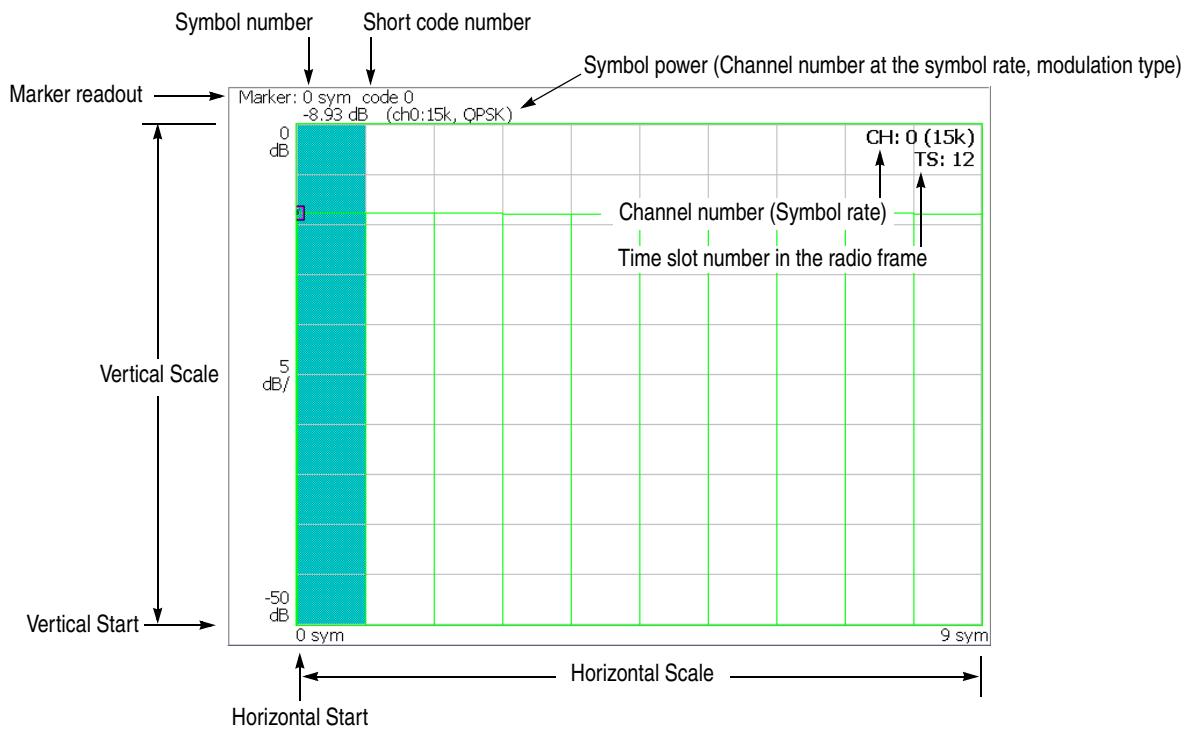


Figure 2-16: Code domain power versus Symbol

Symbol Constellation

The symbol constellation is displayed when you select Symbol Constellation in the Measure menu, as shown in Figure 2-17.

View: Scale Menu Use the following controls to set the scale:

Measurement Content... Selects vector or constellation display.

- **Vector.** Selects vector display. A signal represented with phase and amplitude is displayed in polar coordinate or IQ diagram. The red point indicates the symbol position of measured signal, and the yellow trace indicates the locus of the signal between symbols.
- **Constellation.** Selects constellation display. It is the same as the vector display, except that only symbols of measured signal are indicated in red, and the locus between symbols is not shown. The cross marks indicate the symbol positions of an ideal signal.

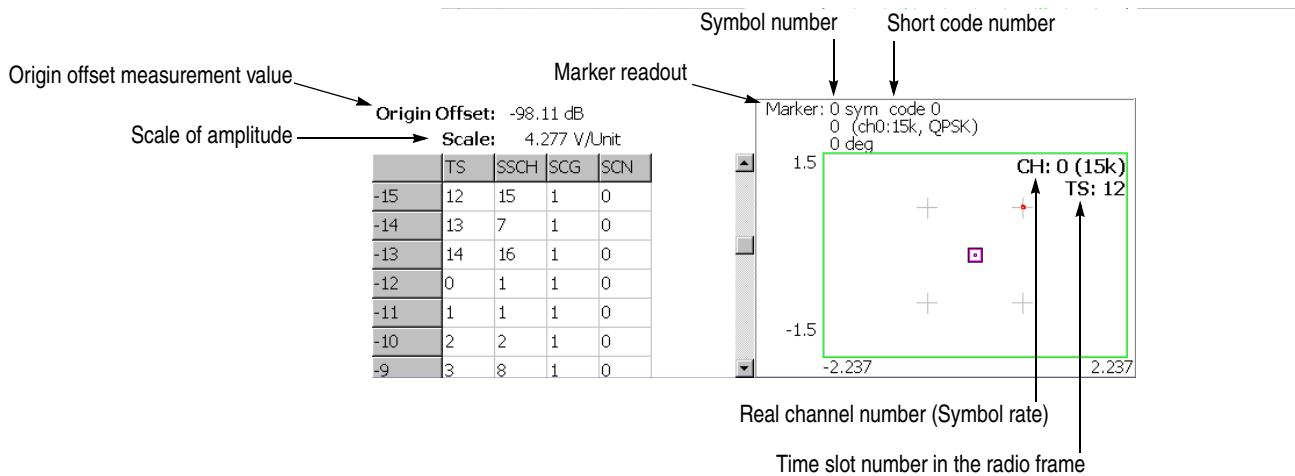


Figure 2-17: Symbol constellation

You can select degree or radian for the angular unit by pressing **SYSTEM** → **Instrument Setup...** → **Angular Units...**

Symbol EVM

When you select Symbol EVM in the Measure menu, EVM (Error Vector Magnitude) is displayed for each symbol, as shown in Figure 2-18.

View: Scale Menu

Use the following controls to scale the view:

Auto Scale. Sets the start value and the scale of the vertical axis automatically to display the entire waveform.

Horizontal Scale. Sets the scale of the horizontal axis (number of symbols).

Horizontal Start. Sets the start symbol number of the horizontal axis.

Vertical Scale. Sets the scale of the vertical axis. Range: 100m to 100% (EVM), 200m to 200% (Mag Error), 450m to 450° (Phase Error)

Vertical Start. When the measurement content is EVM, sets the minimum value (bottom edge) of the vertical axis. Range: -100 to 100% (EVM)

Vertical Offset. When the measurement content is Mag Error or Phase Error, sets the center value ((maximum + minimum) / 2) of the vertical axis. Range: -200 to 200% (Mag Error), -450 to 450° (Phase Error)

Full Scale. Sets the scale of vertical axis to the default full-scale value.

Measurement Content... Selects how to display the vertical axis:

- **EVM.** Represents the vertical axis with EVM (Error Vector Magnitude).
- **Mag Error.** Represents the vertical axis with magnitude error.
- **Phase Error.** Represents the vertical axis with phase error.

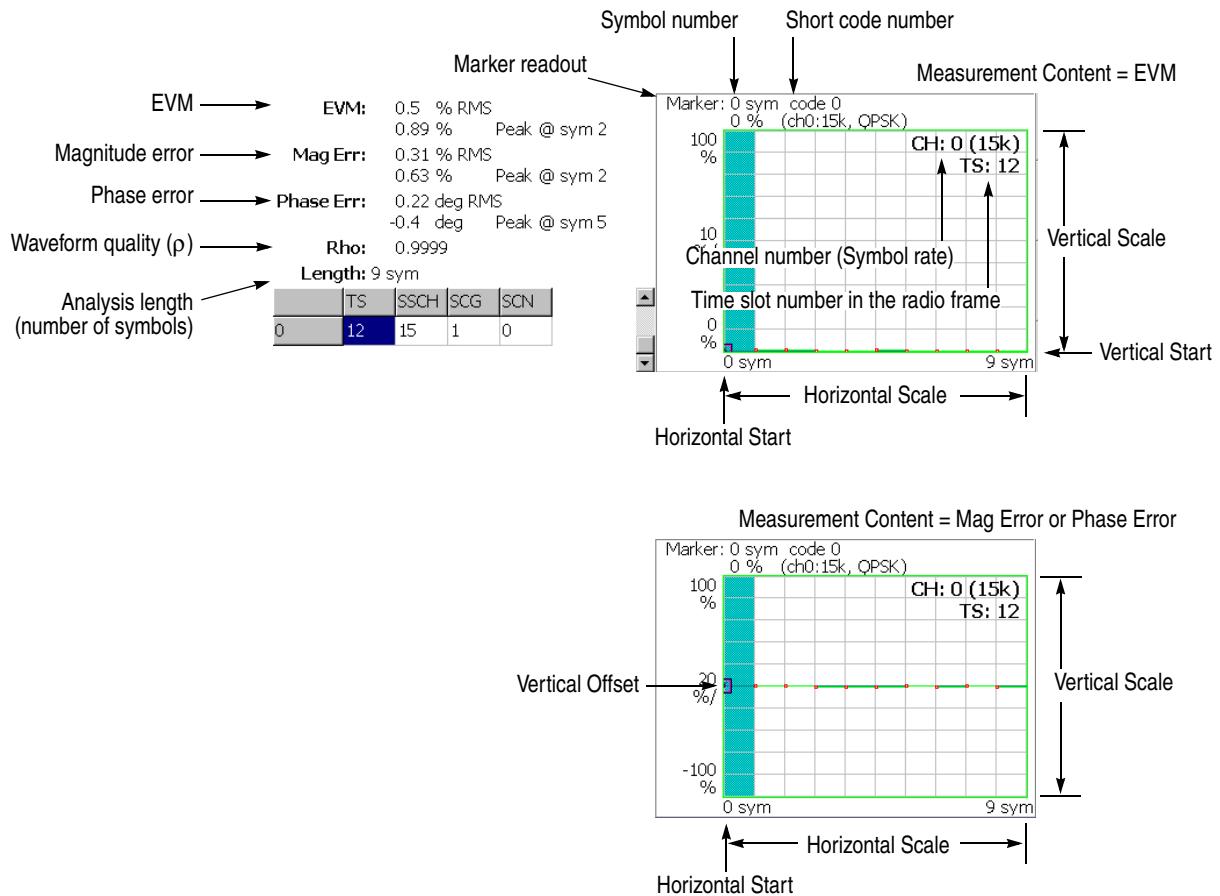


Figure 2-18: Symbol EVM

You can select degree or radian for the angular unit by pressing **SYSTEM** → **Instrument Setup...** → **Angular Units...**

Symbol Eye Diagram

The symbol eye diagram is displayed when you select Symbol Eye Diagram in the Measure menu, as shown in Figure 2-19.

View: Scale Menu Use the following controls to scale the view.

Measurement Content... Selects the vertical axis of eye diagram.

- **I.** *Default.* Displays I data on the vertical axis.
- **Q.** Displays Q data on the vertical axis.
- **Trellis.** Displays phase on the vertical axis.

Eye Length. Enters the number of display symbols on the horizontal axis.

Range: 1 to 16 (default: 2)

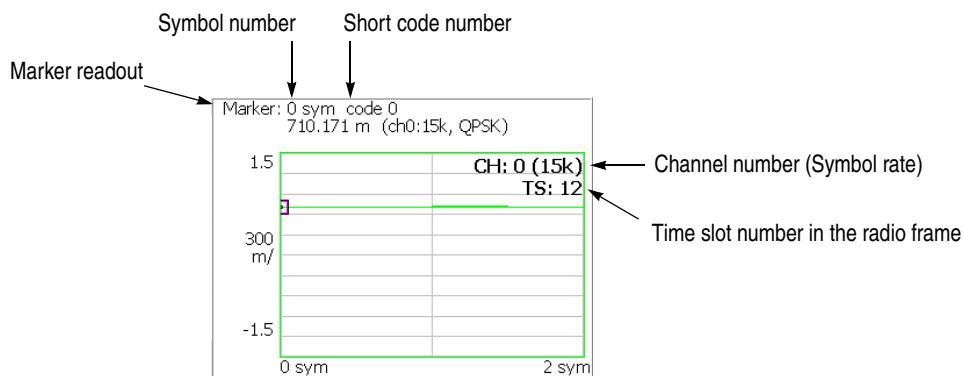


Figure 2-19: Symbol eye diagram

Symbol Table

The symbol table is displayed when you select Symbol Table in the Measure menu, as shown in Figure 2-20.

View: Scale Menu Use the following controls to scale the view:

Radix. Selects the radix for displaying the table:

- **Hex.** Hexadecimal digit
- **Oct.** Octal digit
- **Bin.** *Default.* Binary digit

Rotate. Sets the start position. Range: 0 to 3.

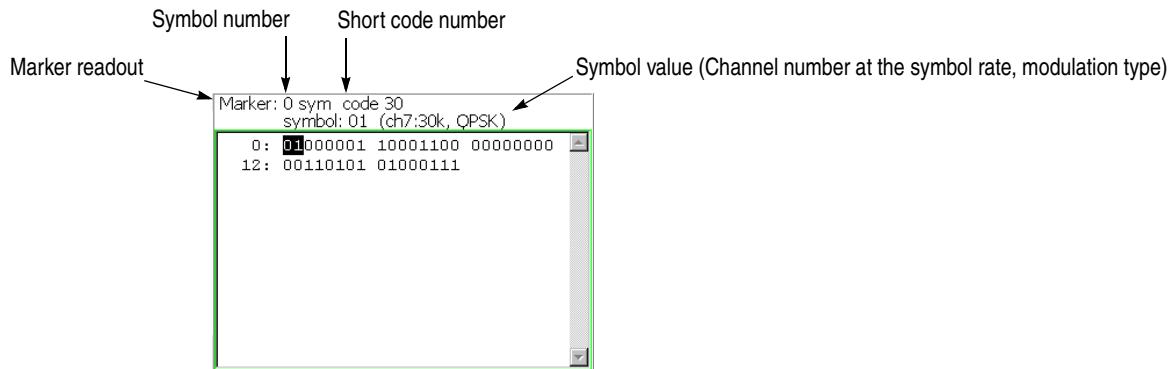


Figure 2-20: Symbol table

Modulation Accuracy

The constellation of all channels before the de-spread is displayed when you select Modulation Accuracy in the Measure menu.

When you press the **VIEW: SELECT** key on the front panel to select the constellation view, the measurement results for the time slot are displayed instead of the overview, as shown in Figure 2-21.

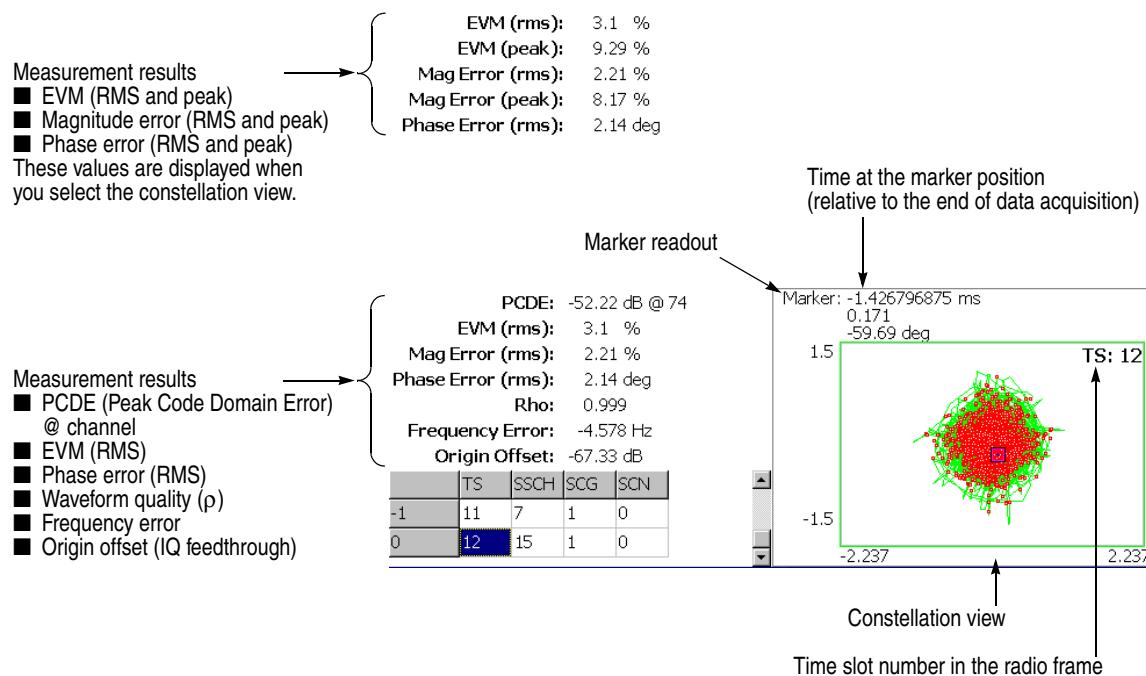


Figure 2-21: Modulation accuracy

The view settings are the same as for Symbol Constellation. Refer to *Symbol Constellation* on page 2-36.

Uplink Analysis in the Demod Mode

This section describes the basic operation for the 3GPP-R5 uplink analysis in the Demod (modulation analysis) mode. You can access the measurement item by pressing **DEMOD** → **Standard...** → **3GPP-R5-UL** as shown in Figure 2-22.

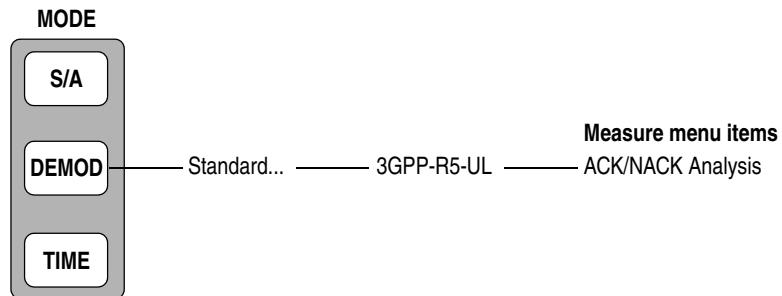


Figure 2-22: Uplink analysis measurement menu in the Demod mode

The 3GPP-R5 uplink modulation analysis is based on the standard digital modulation analysis function. For the digital modulation analysis, refer to the *RSA3408A User Manual*.

ACK/NACK Analysis

The ACK/NACK analysis detects and displays the arrival of ACK and NACK indications, DTX (Discontinuous Transmission), and CQI (Channel Quality Indicator) from the UE (User Equipment). Also, measures the power versus time against a mask and display other contents of the indications.

NOTE. The ACK/NACK analysis requires Option 23 W-CDMA Uplink Analysis Software.

Measurement Procedure

The following procedure show you how to acquire data of multiple slots in advance, measure continuous data, and obtain continuous code domain power:

NOTE. For details on setting frequency, span, and amplitude, refer to the RSA3408A User Manual.

1. Press the **DEMOD** key on the front panel.
2. Press the side key **Standard... →3GPP-R5-UL**.
3. Press the **FREQUENCY/CHANNEL** key on the front panel to set frequency.

If you use the channel table, do these steps:

- Press the **Channel Table...** side key and select **W-CDMA-UL**.
- Press the **Channel** side key and select a channel by rotating the general purpose knob.

The center frequency is set to the value corresponding to the channel.

4. Press the **SPAN** key on the front panel to set the span.
5. Press the **AMPLITUDE** key on the front panel to set the amplitude appropriately.

NOTE. If the input level is too high, A/D OVERFLOW displays in the red box at the center top of the screen. If this occurs, raise the reference level.

6. Press the **TIMING** key on the front panel and then the **Acquisition Length** side key to set the time length to acquire one block.

Suppose that one block contains M frames; the acquisition length is calculated with this equation:

$$(\text{One block acquisition length}) = M \times (\text{One frame acquisition length})$$

One frame acquisition length is determined by span and indicated on the **Spectrum Length** side key.

The number of frames M required for measuring N slots must meet the following condition:

$$M > K \times (N + 1.2) + 1$$

where

$K = 16.7$ (for span 20 MHz and 15 MHz)

8.34 (for span 10 MHz)

4.17 (for span 5 MHz)

After acquiring measurement data, stop acquisition of data. If you are acquiring data in the continuous mode, press the **RUN/STOP** key.

7. Press the **MEASURE** key on the front panel to select measurement items.
8. Press the **ACK/NACK Analysis** side key to perform the ACK/NACK analysis.
9. Press the **MEAS SETUP** key on the front panel and set the measurement parameters. Refer to page 2-46 for details of the Meas Setup menu.
10. Set the analysis range in the overview using the Timing menu.
Refer to the *RSA3408A User Manual* for the details.
11. Press the **MEAS SETUP** key on the front panel and then the **Analyze** side key to start processing the frames in the analysis range. The results are displayed in the main view.

Measurement Setup Menu

The Meas Setup menu for the ACK/NACK analysis contains the following controls:

Analyze Performs analysis for time slots in the analysis range.

NOTE. When you change settings of the parameters in the Meas Setup menu described below, press the **Analyze** side key to perform the measurement for the modified settings.

Modulation Parameters...

Sets a measurement parameter to a non-standard value.

The following setting items are provided:

Scrambling Code Type. Selects the scrambling code type for DPDCH/DPCCH:

- Long
- Short

Scrambling Code. Sets the scrambling code number. Range: 0 to 16777215

Measurement Filter... Selects a filter for demodulating digitally-modulated signals:

- None (no filter)
- RootRaisedCosine

Reference Filter... Selects a filter for creating reference data:

- None (no filter)
- RaisedCosine
- Gaussian

For the filters, refer to *Process Flow of Digitally-Modulated Signal* in the *RSA3408A User Manual*.

Filter Parameter. Sets an α/BT value for Measurement Filter and Reference Filter described above. Range: 0.0001 to 1 (default: 0.22)

Auto Carrier	Selects whether to detect the carrier automatically.
	<ul style="list-style-type: none"> ■ On. <i>Default.</i> Automatically detects the carrier for every frame. The error from the center frequency is shown on the Freq Error side key. ■ Off. Sets the carrier frequency using Frequency Offset described below.
Frequency Offset	Sets the carrier frequency when Off is selected in Auto Carrier . Input the carrier offset from the center frequency.
Subframe Offset Select	Determines whether to specify the subframe offset manually.
	<ul style="list-style-type: none"> ■ Auto. <i>Default.</i> The symbol table is displayed for any offset. ■ Man. Sets the subframe offset with the Subframe Offset side key.
Subframe Offset	<p>Specifies the subframe offset when you select Man with the Subframe Offset Select side key. Range: 0 to 9 symbols.</p> <p>The subframe offset is the time offset between the start of the time slot and the start of the HS subframe (see Figure 2-23).</p>

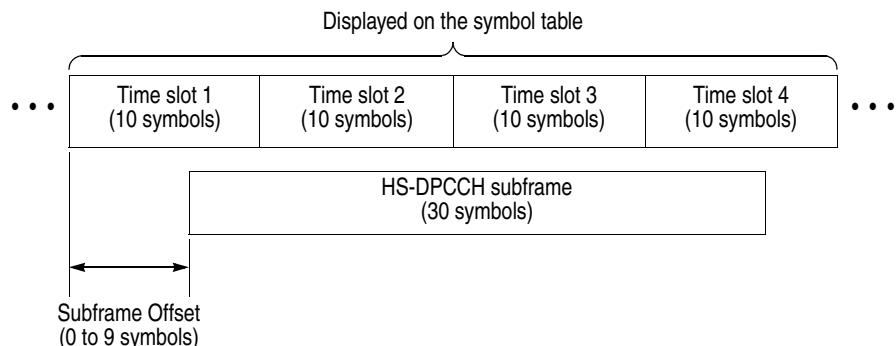


Figure 2-23: Subframe offset

Update ACK/NACK Results	Re-detects ACK and NACK indications on the existing time slot data to update the measurement result display after you change the subframe offset manually or abort the Analyze (top side key) operation.
--------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Measurement Display

Figure 2-24 shows an example of the ACK/NACK analysis measurement display.

- Overview: Power versus Time
- Subview: Spectrum
- Main view: Measurement results and symbol table

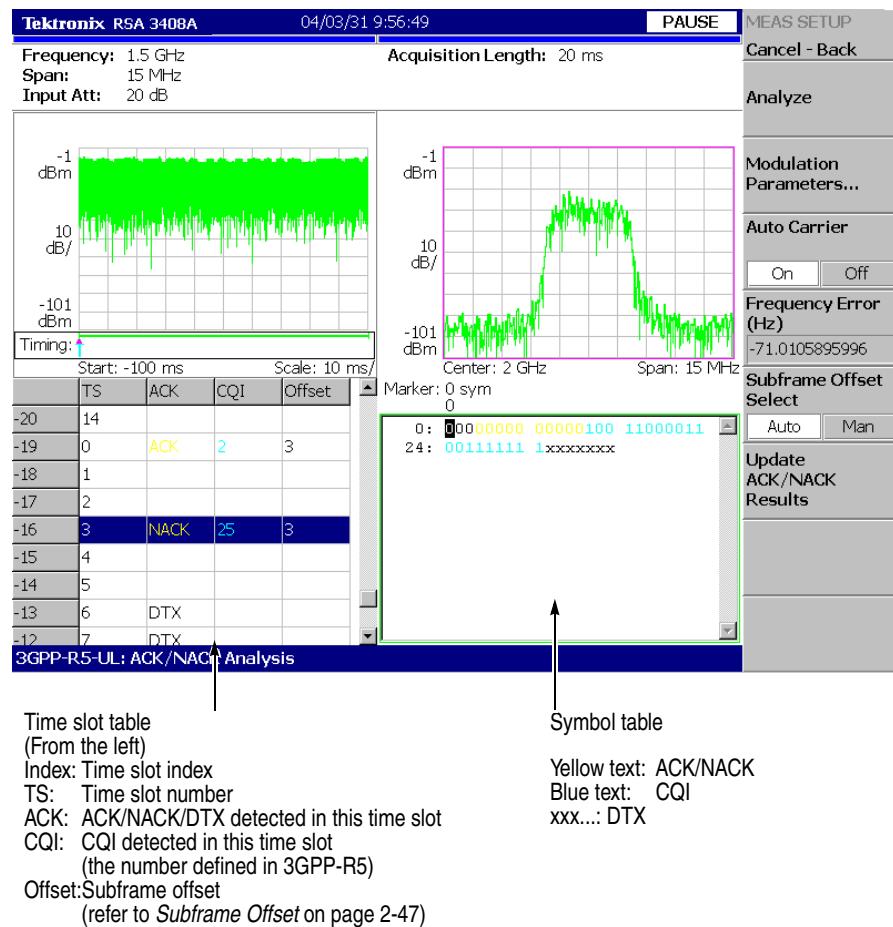


Figure 2-24: ACK/NACK analysis

When the TS index is changed to a time slot which does not contain the beginning of an HS-DPCCH subframe, the symbol table text is all white. When an ACK or NACK time slot is selected, the symbol table text color changes to show the position of the ACK/NACK symbols (yellow) and the CQI symbols (blue).

Changing the View

You can change the contents of the views by pressing the VIEW: **DEFINE** key with the following controls:

Show Views. Selects the view style:

- **Single.** Displays only the view selected by the VIEW: **SELECT** key.
- **Multi. Default.** Displays the overview, the subview, and the main view.

Overview Content... Selects the content of the overview:

- Spectrogram
- Waveform (power versus time)

Subview Content... Selects the content of the subview:

- Spectrum
- Code Domain Power
- Power Codogram
- CDP vs Time Slot (code domain power versus time slot)
- CDP vs Symbol (code domain power versus symbol)

Time Slot. Selects a time slot in the main view to display the symbol table.

Symbol Rate... Sets the symbol rate for displaying DPDCH:

- 960 k (default)
- 480 k
- 240 k
- 120 k
- 60 k
- 30 k
- 15 k

Change scale and format of the view as needed. For the details, refer to the *RSA3408A User Manual* and the *RSA3408A Option 23 User Manual*.



Appendices

Appendix A: Measurement Limit Defaults

This section provides tables of the measurement limit defaults. Tables A-1, A-2, and A-3 list the default limit settings used to perform the pass/file testing for the 3GPP-R5 downlink measurements. Refer to *Using the Measurement Limits Editor* on page 2-12 for procedures to edit the measurement limits.

Common Limits

Tables A-1 lists the default values of the common measurement limits that can be used for the channel power, ACLR, and OBW measurements for Band I, II, and III defined in 3GPP-R5.

Table A-1: Common limits (Band I, II, and III)

Limit	Enable	Lower	Upper	Units
Channel Power	No	21.5	26.5	dBm
OBW	Yes	N.A	5 M	Hz
ACLR 1st Lower Channel	Yes	N.A	45	dB
ACLR 1st Upper Channel	Yes	N.A	45	dB
ACLR 2nd Lower Channel	Yes	N.A	50	dB
ACLR 2nd Upper Channel	Yes	N.A	50	dB

SEM Offset from Channel Limits

Tables A-2 and A-3 list the default values of the measurement limits that can be used for the spectrum emission mask measurement for Band I, II, and III defined in 3GPP-R5.

Table A-2: SEM limits in Band I and III

Zone	A	B	C	D	E
Enable	Yes	Yes	Yes	Yes	No
Beginning Frequency	2.5 MHz	2.7 MHz	3.5 MHz	7.5 MHz	12.5 MHz
Ending Frequency	2.7 MHz	3.5 MHz	7.5 MHz	12.5 MHz	8 GHz
Measurement Bandwidth	30 kHz	30 kHz	1 MHz	1 MHz	1 MHz
Offset from Carrier	Both	Both	Both	Both	Both
Failure if signal exceeds	Rel OR Abs	Rel OR Abs	Rel OR Abs	Relative	Absolute
Beginning Absolute Limit	-14 dBm	-14 dBm	-13 dBm	-13 dBm	-13 dBm
Ending Absolute Limit	-14 dBm	-26 dBm	-13 dBm	-13 dBm	-13 dBm
Beginning Relative Limit	-53 dBc	-53 dBc	-52 dBc	-56 dBc	0 dBc
Ending Relative Limit	-53 dBc	-65 dBc	-52 dBc	-56 dBc	0 dBc

Table A-3: SEM limits in Band II

Zone	A	B	C	D	E
Enable	Yes	Yes	Yes	Yes	No
Beginning Frequency	2.5 MHz	2.7 MHz	3.5 MHz	7.5 MHz	12.5 MHz
Ending Frequency	2.7 MHz	3.5 MHz	7.5 MHz	12.5 MHz	8 GHz
Measurement Bandwidth	30 kHz	30 kHz	1 MHz	1 MHz	1 MHz
Offset from Carrier	Both	Both	Both	Both	Both
Failure if signal exceeds	Rel OR Abs	Rel OR Abs	Rel OR Abs	Relative	Absolute
Beginning Absolute Limit	-15 dBm	-15 dBm	-13 dBm	-13 dBm	-13 dBm
Ending Absolute Limit	-15 dBm	-26 dBm	-13 dBm	-13 dBm	-13 dBm
Beginning Relative Limit	-53 dBc	-53 dBc	-52 dBc	-56 dBc	0 dBc
Ending Relative Limit	-53 dBc	-65 dBc	-52 dBc	-56 dBc	0 dBc

Appendix B: Scale Setting Range

This section lists the setting ranges of the horizontal and the vertical scales for the views used in the 3GPP-R5 analysis.

Table B-1: Display format and scale

Display format	Horizontal range	Vertical range
Spectrum	0 Hz to 8 GHz	-200 to +100 dBm
Spectrogram	0 Hz to 8 GHz	Frame -15999 to 0 Frame -63999 to 0 (Option 02)
Time domain view	$-(T_f \times N_f) \text{ to } 0 \text{ s}^1$	-200 to +100 dBm (Amplitude) -30 to +30 V (I/Q level) -300 to +300% (AM) -38.4 to +38.4 MHz (FM/FVT) -675 to +675 deg. (PM)
Constellation	$-(T_f \times N_f) \text{ to } 0 \text{ s}^1$	Fixed
EVM	$-(T_f \times N_f) \text{ to } 0 \text{ s}^1$	-100 to +200% (EVM) -300 to +300% (amplitude error) -675 to +675 deg. (phase error)
Eye diagram	$-(T_f \times N_f) \text{ to } 0 \text{ s}^1$	Fixed
Symbol table	0 to $(1024 \times N_f)$ symbols	NA
CDP spectrogram ²	0 to 511 channels	Slot -3999 to 0 Slot -15999 to 0 (Option 02)
CDP vs. Short code ²	0 to 511 channels	-200 to +100 dB/dBm
CDP vs. Symbol ²	0 to 639 symbols	-200 to +100 dB/dBm
CDP vs. Time slot ²	Slot -3999 to 0 Slot -15999 to 0 (Option 02)	-200 to +100 dB/dBm
Symbol constellation	0 to 639 symbols	Fixed
Symbol EVM	0 to 639 symbols	-100 to +200% (EVM) -300 to +300% (amplitude error) -675 to +675 deg. (phase error)
Symbol eye diagram	0 to 639 symbols	Fixed

1. Tf: Frame time; Nf: Frame number

2. CDP: Code Domain Power



Index

Index

A

ACK/NACK analysis, 2-44
ACLR measurement, 2-5
Additional functions in Option 27, 1-1

C

Carrier frequency measurement, 2-11
Changing the view
 ACK/NACK analysis, 2-49
 Downlink analysis in the Demod mode, 2-26
Channel power measurement, 2-3
Code domain power, 2-28
Code power versus Symbol, 2-34
Code power versus Time slot, 2-32
Contacting Tektronix, vi
CQI, 1-4, 2-44

D

Default settings, A-1
Definition
 Downlink analysis, 1-2
 Uplink analysis, 1-3
Downlink analysis
 ACLR measurement, 2-5
 carrier frequency measurement, 2-11
 channel power measurement, 2-3
 Demod mode, 2-19
 EBW measurement, 2-10
 Meas Setup menu, 2-22
 measurement procedure, 2-20
 OBW measurement, 2-9
 S/A mode, 2-1
 spectrum emission mask measurement, 2-7
DTX, 1-4, 2-44

E

EBW measurement, 2-10

F

Factory default settings, A-1

L

Load measurement limits, 2-17

M

Manual, related, v
Meas Setup menu
 ACK/NACK analysis, 2-46
 ACLR measurement, 2-5
 carrier frequency measurement, 2-11
 channel power, 2-3
 downlink analysis in the Demod mode, 2-22
 EBW measurement, 2-10
 OBW measurement, 2-9
 spectrum emission mask measurement, 2-7
Measurement limits
 editor, 2-12
 loading, 2-17
 saving, 2-17
 setting, 2-13
 spectrum emission mask, 2-14
Modulation accuracy, 2-41

O

OBW measurement, 2-9

P

PDF manual, v
Power codogram, 2-30

R

Range, scale setting, B-1
Related manuals, v
 PDF, v

S

Save measurement limits, 2-17
Scale setting range, B-1
Spectrum emission mask measurement, 2-7
Subframe offset, 2-47
Symbol constellation, 2-36
Symbol EVM, 2-37
Symbol eye diagram, 2-39
Symbol table, 2-40

U

Uplink analysis

Index

ACK/NACK analysis, 2-44
Demod mode, 2-43