



This manual is for reference and historical purposes, all rights reserved.

This page is copyright© by M. Butkus, NJ.

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.

This will allow me to continue to buy new manuals and pay their shipping costs.

It'll make you feel better, won't it?

**If you use Pay Pal or wish to use your credit card,
click on the secure site on my main page.**


PayPal Name Lynn@butkus.org

30TKUS-US

YASHICA M-II

INSTRUCTION BOOKLET

Description of Yashica 35 M-II


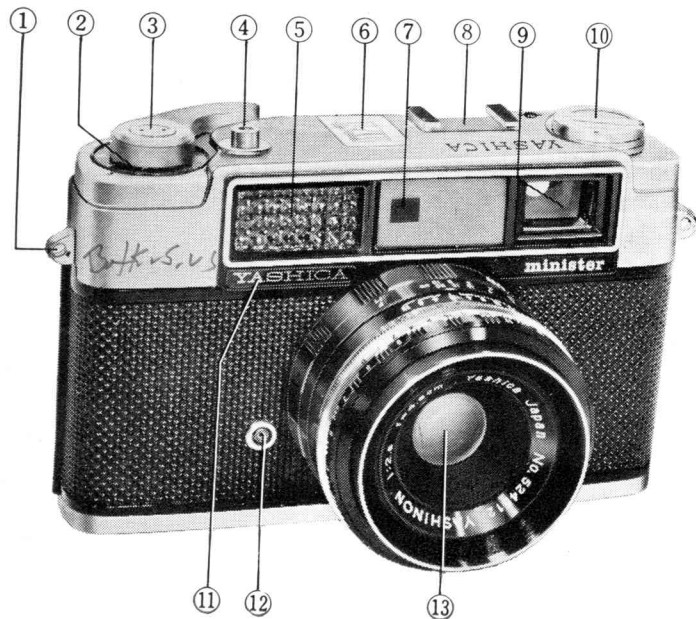


THIS IS YOUR YASHICA

A precision instrument capable of bringing you some of the finest photographs you have ever taken. Please read the following pages carefully. Follow the easy, step-by-step recommendations.

- ① Strap Holder
- ② Film Exposure Counter
- ③ Film Advance Lever
- ④ Shutter Release Button
- ⑤ Light Gathering Window
- ⑥ Exposure Value Scale
- ⑦ Rangefinder
- ⑧ Accessory Shoe
- ⑨ Viewfinder
- ⑩ Film Rewinding Knob
w/Folding Crank
- ⑪ Name Plate



- ⑫ Synchro Terminal
- ⑬ Taking Lens (f/2.8 45mm)
- ⑭ Cassette Supporting Shaft
- ⑮ Finder Eye-piece
- ⑯ Film Gate
- ⑰ Film Speed Adjusting Knob
- ⑱ Sprocket
- ⑲ Take-up Spool
- ⑳ Film Pressure Plate
- ㉑ Slide Lock Release Button
- ㉒ Focusing Lever
- ㉓ Tripod Socket
- ㉔ Self-timer Lever
- ㉕ Film Rewind Release Button
- ㉖ LVS Ring
- ㉗ Shutter Speed Control Ring
- ㉘ Cross Coupling Ring
- ㉙ Lens Opening Scale
- ㉚ Depth-of-Field Scale
- ㉛ Distance Scale
- ㉜ MX Synchro-selector
- ㉝ Film Position Mark

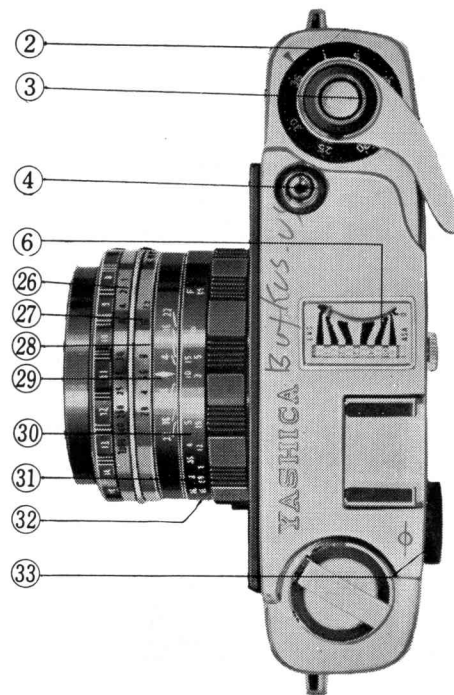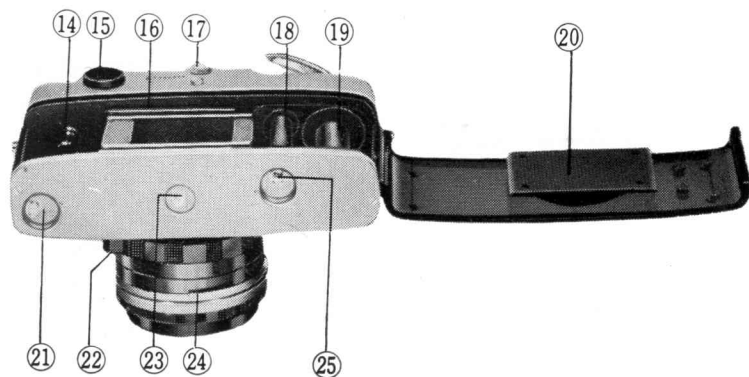

LOADING FILM

35 mm roll film
20 or 36 exposures per roll
24×36 mm size negative
Black and White or Color




- (1) To unlock the back cover, slide the Release Button in the direction of arrow (to the marking 'O') pressing it, and the hinged back cover will swing open.
- (2) Pull out the Film Rewinding Knob, and insert a new roll of 35 mm film in the film chamber.
- (3) Gently draw out the film leader from the cassette. Thread the film leader into the slot of the Take-up Spool.
- (4) Advance the film with one stroke of the Advance Lever, and make sure the perforations in the film are threaded to the

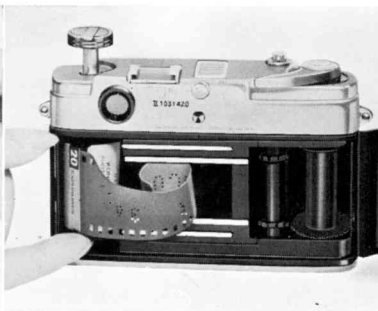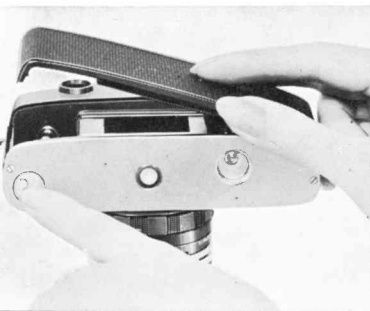

sprockets.

- (5) Close the back cover by pressing it with your fingers until it locks into position. Press the Shutter Release Button.
- (6) Advance film and press the Shutter Release Button, twice.
- (7) Advance the film again and set the figure '1' on the Exposure Counter Dial opposite the red triangle, turning the dial counter-clockwise.

NOW THE CAMERA IS READY FOR THE FIRST PICTURE.

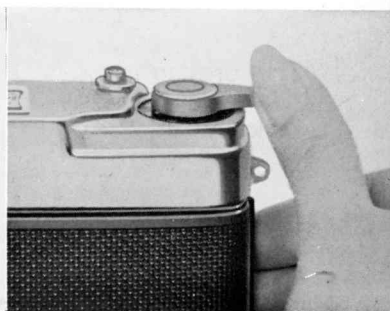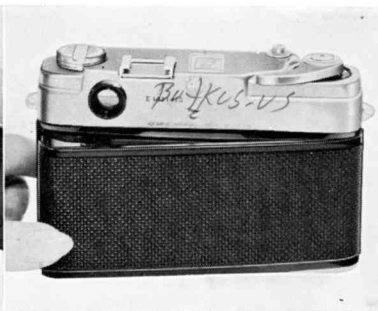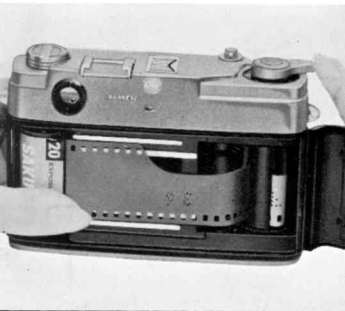


LVS SHUTTER

LVS-Light Value Scale or EVS-Exposure Value Scale as it is sometimes termed is a system of exposure setting incorporated in the shutter. When the LVS or EVS reading from an exposure meter (with LVS scale) is transferred to the LVS shutter, the aperture and shutter speed will be set corresponding to the meter reading to give the correct exposure. The Aperture and Shutter are linked together, therefore, the operation is simplified in obtaining the correct exposure for any combination of aperture opening and shutter speed at small apertures for depth-of-field or higher shutter speeds for action without refiguring exposure.

SHUTTER SPEED : B, 1, 1/2, 1/4, 1/8,
1/15, 1/30, 1/60,
1/125, 1/250, 1/500,
sec.

LENS OPENING : f/2.8, 4, 5.6, 8, 11,
16,

LIGHT VALUE : 2—17

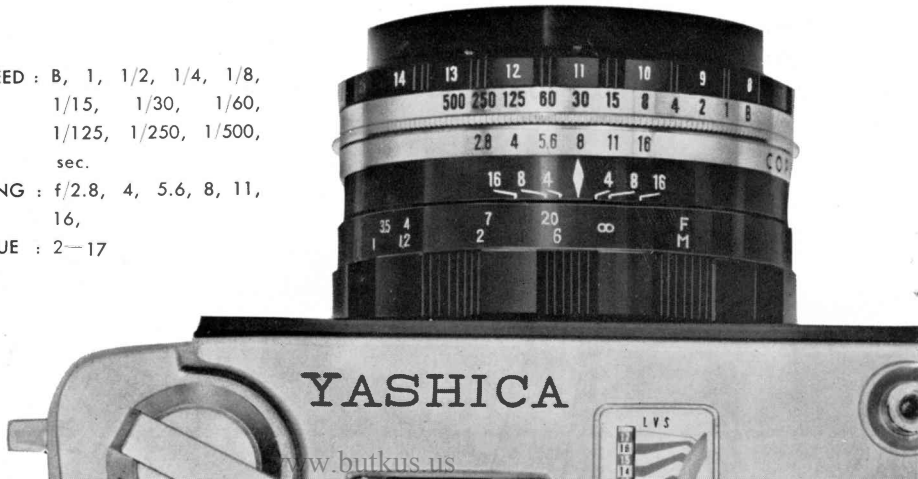



FOR EXPOSURE

Assuming the LVS reading from the exposure meter is 9, turn the LVS ring on the shutter and set the figure 9 opposite the red triangle the aperture will be $f : 5.6$ and the shutter speed $1/15$ second. This is the basic exposure which is the same as indicated on the exposure meter. If smaller apertures or higher shutter speeds are desired, turn the Cross Coupling Ring and set the required aperture opening or shutter Speed to the triangular mark and the correct exposure setting will be made in relation to the basic exposure.

LVS RING

17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1

SHUTTER SPEED SCALE

500 250 125 60 30 15 8 4 2 1 B

COUPLING RING



LENS APERTURE SCALE

2.8 4 5.6 8 11 16

BUILT-IN EXPOSURE METER

The new Yashica 35 M-II, with built-in light meter, measures the intensity of the available light and helps you determine the proper exposure, easily and accurately. The built-in exposure meter and exposure setting system of your Yashica 35 M-II consists of the following elements.




- a) Photo Cell, located directly behind the Light Gathering Window.
- b) Exposure Value Window.
- c) Exposure Value Scale.
- d) Film Speed Adjustment Knob.
- e) Indication Needle.

HOW TO USE THE YASHICA 35 M-II EXPOSURE READING SYSTEM

Set the proper film speed (ASA or DIN) in the small window, just in front of the Film Speed Adjustment Knob. Aim the camera (Photo Cell) at the subject, the red Indication Needle will then show the proper Light Value system number. The shown by the needle is then set on the LVS ring of the shutter (the most outer ring) opposite the red triangle, by turning the LVS ring. The correct lens aperture and shutter speed have now been automatically and accurately adjusted, simultaneously.

NOTE : In those cases you find the Indication needle in a position halfway between a red zone and a white zone, for instance, between 8 and 9, adjust the LVS ring so the red triangle of the shutter is half way between 8 and 9 on the LVS ring.




NOTE : If you desire to increase or decrease the depth-of-field for a particular exposure, it will be necessary for you to turn the inner ring (Coupling Ring) of the shutter to adjust the lens aperture to the desired opening.

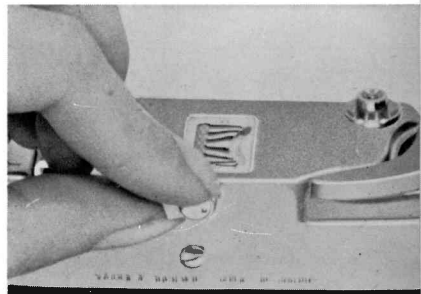

CONVENTIONAL EXPOSURE SETTING

Exposure readings from exposure meter can also be set in the conventional manner with the LVS shutter on the YASHICA M-II to the desired shutter speed and aperture (f. stop) which corresponds to the meter reading.

1. Turn the LVS Ring and set the desired aperture (f. stop) number opposite to the base of the red triangle on the depth-of-field scale.
2. Hold the Coupling Ring between your fingers and stop it from rotating when the LVS Ring is turned.
3. Again, turn the LVS Ring and set the desired shutter speed opposite to the aperture (f. stop) number. Remove the fingers from the Coupling.
4. Cock the shutter and advance the film with one stroke of the Film Advance Lever, and you are ready to take the picture.

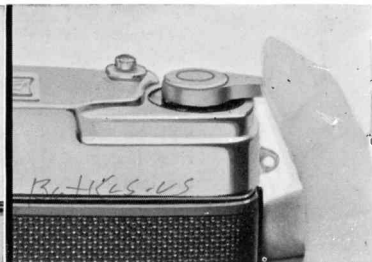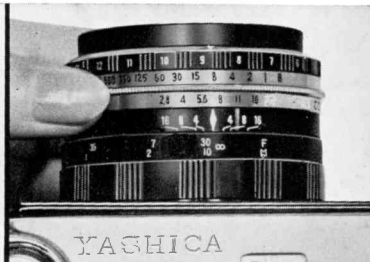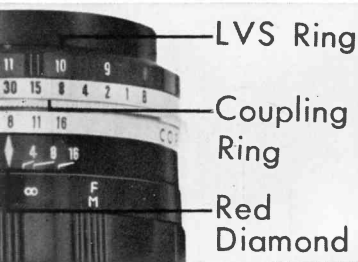

SIGHTING & FOCUSING

The single window combines the viewfinder-rangefinder, which enables you to quickly sight, focus and frame the picture you wish to take. The extra large viewing window features a bright line frame indicating clearly the field of the 45 mm lens. When you compose your picture within this frame you are assured of getting the same picture you are seeing through the viewfinder. When looking through the viewfinder, the small circle appearing in the middle is the range-finder of the superimposed image type of focusing. To focus, sight the small circle to the subject and move the Focusing Lever until the two images overlap and form one clear image. The camera is now in focus.



PARALLAX CORRECTION



Parallax or discrepancy between what the lens and viewfinder see is corrected automatically in the Yashica M-II. The Yashica M-II, with a tilting prism, fully coupled to the range-finder positively corrects for parallax and insures that the image on the film is identical to what seen through the parallax corrected viewfinder.

TAKING FLASH PICTURE


Your Yashica 35 M-II offers M-X synchronization

Selector Position	M	X	X
Bulb Used	Medium Peak	Short Peak	Medium Peak
Shutter Speed	Any speeds	1/50 or Slower	1/25 or Slower (When using selftimer)

Do not use Short Peak bulb with "M" Synchronization. Move the selector to X position when using Electronic Flash. Your camera dealer will be glad to supply the proper flash attachment for your camera.

As you become more proficient at taking picture, you will want to acquire accessories that increase the versatility of your camera. One of the first accessories you want will be a flash unit.

Synchronization for flash is built-in. A standard FC connector plugs into the flash terminal. The battery case slips into the accessory shoe or attaches to the camera with an arm that screws into the tripod socket.

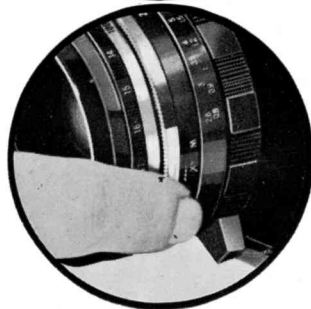

FILM ADVANCE LEVER

The single stroke film advance lever has the advantages of transporting the exposed film, cocking the shutter for the next exposure, and also preventing double exposure. Rapid sequence pictures are possible by quick operation of the Film Advance Lever.

The Yashica 35 M-II Film Advance Lever employs a fine, precision mechanism constructed to provide years of trouble-free performance. Like any instrument it should be treated with care and respect. It is important that one complete smooth stroke be given until it stops.

SELF-TIMER




The Self-timer, for taking self-portraits or group pictures, gives you about 8 seconds to get yourself into picture.

- (A) Caution! Be sure to move the synchronization selector to the X position when using self-timer.
- (B) Then set the speed, and move the Self-timer in the direction shown by the arrow.

CABLE RELEASE

A standard cable release can be fitted to your Yashica. Screw the Cable Release into the socket provided on the shutter Release Button. Your camera dealer will supply the proper cable release for your camera.

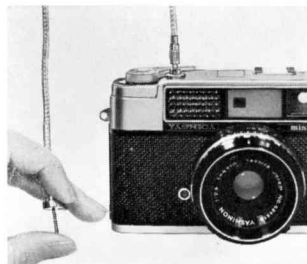



UNLOADING FILM

After taking a full roll of film, it is necessary to rewind the film into the cassette or cartridge before removing the exposed film from the camera.

1. Press the film release button which located on the underside of the camera. It need not be held in position.
2. Flip up the film rewind crank handle to the horizontal position and wind in the direction of the arrow.
3. When the film is completely rewound into the cassette, open the back cover by pressing the Slide Lock Release Button in the direction of the arrow. Pull up the rewind crank shaft and remove cassette.

NOTE :

Toward the end of the film you will feel a slight resistance. But continue turning the rewind crank until the film pulls away from the slot on the Take-up spool.

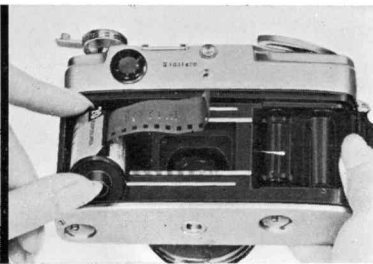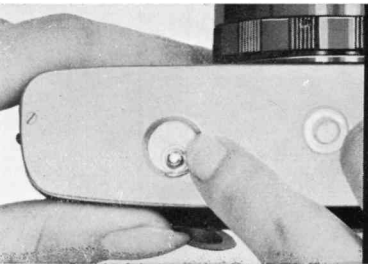

LENS OPENING

The Lens Aperture controls the amount of light that will pass through the lens onto light-sensitive film. Yashica 35 M-II with its Yashinon lens, offers openings at $f : 2.8, 4, 5.6, 8, 11, 16$.

Notice that the lower the number, the larger the opening. $f/2.8$ is the largest opening, and $f/16$ the smallest. To set the lens opening, move the Cross Coupling Ring to set the desired number opposite the red triangle.

SHUTTER SPEED

The shutter speed controls the duration of the exposure. Shutter speeds on your Yashica 35 M-II with its fine Copal Shutter are $1, 1/2, 1/4, 1/8, 1/15, 1/30, 1/60, 1/125, 1/250, 1/500$ of a second and 'B'. The 'B' setting is for taking pictures with an exposure longer than 1 second. Use a tripod or brace when using 'B'. When you press the Shutter Release Button on the 'B' setting, the shutter stays open until you release pressure on the button. It is advisable to set the shutter speed before you cock the shutter at all times.

Camera may be hand-held	
Average Picture	Action Picture
$1/30$ to $1/250$	$1/500$
Use a Tripod or Brace	
Time Exposure	Slow Speed
'B'	$1, 1/2, 1/4, 1/8, 1/15$

EXPOSURE

Exposure means finding the right combination of lens-opening (aperture) and shutter speed in relation to the sensitivity (ASA) of your film. (ASA indicates American Standard Association). For example if you are using a film of ASA 100 sensitivity, your correct exposure will be according to the following table :

DAYLIGHT EXPOSURE TABLE


Your shutter speed will be 1/100 with aperture numbers shown below.

	Bright Sun	Hazy Sun	Cloudy-Bright	Cloudy-Dull or Open Shade (4)
Light Subjects (1)	f/16	f/11	f/8	f/5.6
Average Subjects (2)	f/11	f/8	f/5.6	f/4
Dark Subjects (3)	f/8	f/5.6	f/4	f/2.8

- (1) Light Subjects : Distant landscapes, near-by people with sea, beach and snow scenes in the background.
- (2) Average Subjects : Near-by people, houses, gardens, buildings and places not in the shade. Advisable to use this class when light and dark objects are in about equal proportions.
- (3) Dark Subjects : People in dark clothing ; trees, flowers, animals and large buildings.
- (4) Open Shade : Subjects shade from the sun but lighted by a wide area of open sky. The less the open sky the larger the opening.

If you are using an ASA 50 film, you will make a larger lens-opening or lower your shutter speed (1/50). When in doubt, follow the film manufacturer's recommendations, and you will be assured of good pictures.

DEPTH-OF-FIELD

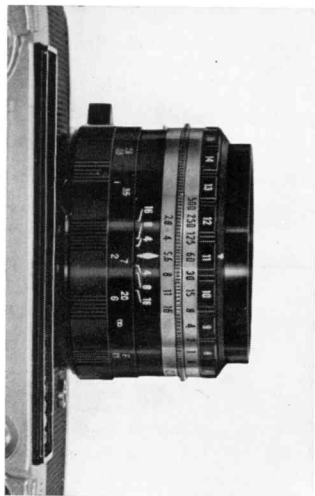

When you focus the camera on a subject there is a certain distance in front and back of the subject within which other objects will also appear sharp. This is known as the "Depth-of-field", and it varies with the lens aperture, the smaller the aperture the greater the Depth-of-field, it is much larger at $f/16$ than $f/2.8$.

The Depth-of-field scale will be found on the lens mount in the front part of the camera. You will notice that on either side of the $f/2.8$ figure is a similar set of numbers which represent the lens apertures.

When the camera is focused on your subject, look for the aperture you are using on either side of the scale to determine the Depth-of-field. Thus, if the camera is focusing at 7 feet and the lens aperture is $f/8$, the Depth-of-field (area in which all objects are sharp) is from about 4 ft. to 20 ft.

You can also use the Depth-of-field to use your Yashica 35 M-II as a fixed-focus camera. In this case set the distance scale to 20 ft. and the lens aperture to $f/8$. You will notice on the Depth-of-field that anything from about 11 feet to infinity will be in focus.

FILTERS

Initially, you will find a yellow filter ideal for bringing out clouds in landscape pictures and for general uses. An UV filter is suitable for color photography and also protect the lens. As you become more advanced, you may want to use various filters, such as orange, green, etc., for different effects. Your camera dealer will give you complete information.



Notice

Be sure to replace the Lens Cap when your camera is not in use. Keep your camera away from dust and moisture. For cleaning the lens surface to remove dust or dirt, always wipe very lightly by using clean gauze or lens cleaning cloth. Do not wipe lens with a dirty handkerchief. When you are not using your camera for a long period do not leave the shutter set. In such cases place the Lens Cap over the lens to avoid exposure, and release the shutter.

CAMERA IDENTIFICATION

REVIEW :

- a Set the film emulsion speed in the window.
- b Read the light value on the exposure meter.
- c Turn the LVS Ring and set the LVS number opposite the red triangle.
- d Cock the shutter.
- e Compose your picture through the viewfinder.
- f Take the picture.
- g Advance the film for the next exposure.

As soon as possible after you purchase your Yashica 35 M-II fill in the information required below. Keep this booklet in a safe place. In case of loss or theft this information may prove valuable in recovering the camera.

YASHICA 35 M-II Serial Number _____

YASHINON f/2.8 45 mm Lens Number _____

PURCHASED at _____

(Name of Firm)

(Address)

DATE of PURCHASE _____