

取扱説明書

● ● ● ● ● ブラケット


KRB5-PAD

Part No. Z1-002-930, IA002993

Feb. 2008


次の手順で機器にブラケットを取り付け、ラックに組み込みます。

1. 底部のキャスターとストッパー、および側面のねじを取り外します。

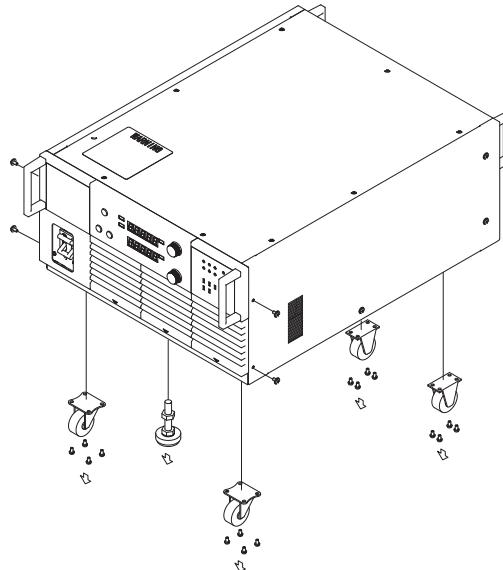


2. 付属のねじを使用してブラケットを図のように取り付けます。


③のねじは、付属のねじ(M4 x 14皿ねじ)以外は使用しないでください。

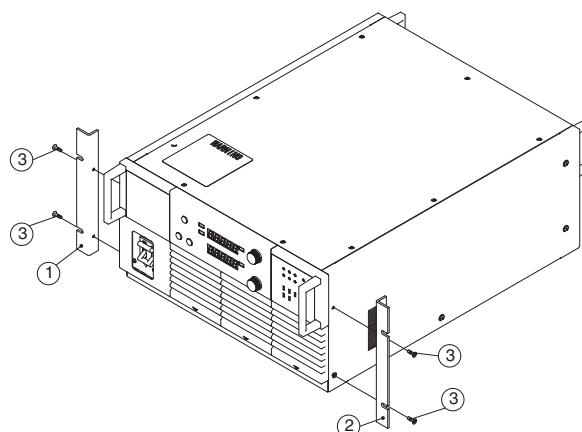

3. 付属のねじとワッシャを使用してラックに取り付けます。

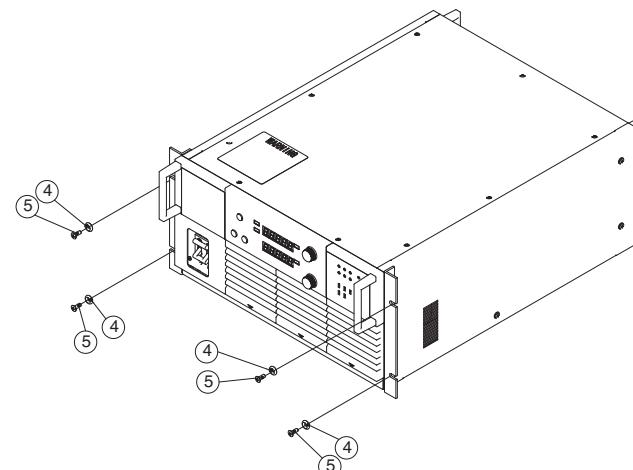

△ 注意 機器が落下する恐れがあります。
使用するラックに適合したサポートアングルを取り付けて、本体を支持してください。

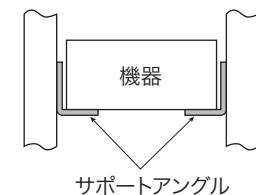

| No. | コード | 説明 | 数量 |
|-----|------------|--------------------------|----|
| 1 | B9-000-035 | BRKT KRB5-PAD (L) | 1 |
| 2 | B9-000-034 | BRKT KRB5-PAD (R) | 1 |
| 3 | M2-101-018 | FLH SCREW S-NI M4X0.7X14 | 4 |
| 4 | M5-003-031 | CUP WASHER 5 CW | 4 |
| 5 | M2-102-002 | OVH SCREW S-NI M5X0.8X14 | 4 |



菊水電子工業株式会社

本社・技術センター 〒224-0023 横浜市都筑区東山田 1-1-3 TEL: 045-593-0200 (代)


INSTRUCTION MANUAL

Bracket


KRB5-PAD

Install the brackets to the instrument in the next procedure and build in it to the rack.


1. Remove the casters and stopper on the bottom panel and the screws on the panel.

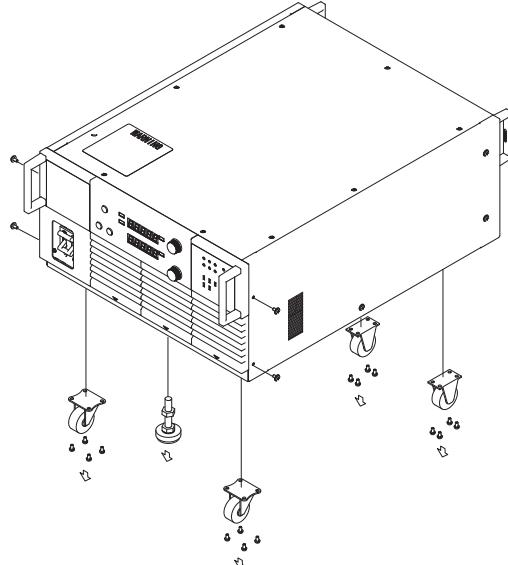

2. As shown in figure, using the accompanying screws, install the brackets.
For ③ screws, do not use except the accompanying screws (M4 x 14 flat head screws).

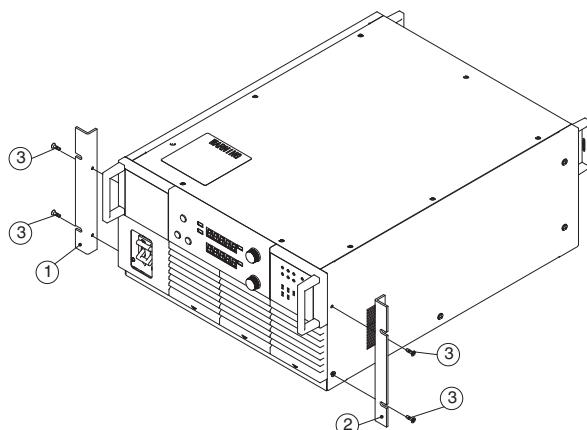


3. Using the accompanying screws and washers, mount the instrument in the rack.

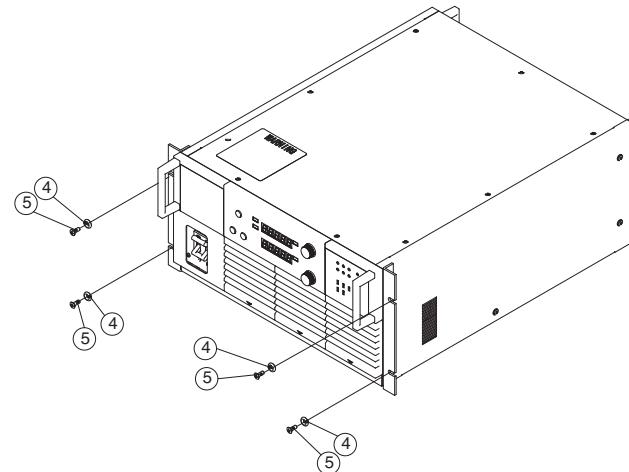

CAUTION

The instrument may fall.
Install the suitable support angles
applying to the used rack system to
support the instrument.

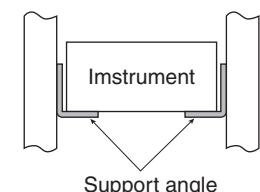

| No. | CODE | DESCRIPTION | QTY |
|-----|------------|--------------------------|-----|
| 1 | B9-000-035 | BRKT KRB5-PAD (L) | 1 |
| 2 | B9-000-034 | BRKT KRB5-PAD (R) | 1 |
| 3 | M2-101-018 | FLH SCREW S-NI M4X0.7X14 | 4 |
| 4 | M5-003-031 | CUP WASHER 5 CW | 4 |
| 5 | M2-102-002 | OVH SCREW S-NI M5X0.8X14 | 4 |



KIKUSUI ELECTRONICS CORP.

1-1-3, Higashiyamata, Tsuzuki-ku, Yokohama, 244-0023, Japan