

This manual is for reference and historical purposes, all rights reserved.

**This page is copyright© by M. Butkus, NJ.**

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

**If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.**

**This will allow me to continue to buy new manuals and pay their shipping costs.**

**It'll make you feel better, won't it?**

**If you use Pay Pal or wish to use your credit card,  
click on the secure site on my main page.**

PayPal Name [Lynn@butkus.org](mailto:Lynn@butkus.org)

# Nikon

## Flash Unit Adapter for Nikonos III

This adapter is specifically designed for flash photography above water with the amphibious Nikonos III camera. Attached to the synchro-socket at the base of the Nikonos III, it adapts the camera into accepting synch cords for either bulb- or electronic-type flash units.

**How to attach the adapter:** First, unscrew the protective cap covering the synchro-socket on the baseplate of the Nikonos III using a coin or some such object. Align the adapter's positioning groove with the white dot on the camera's baseplate (Photo 1), and insert. Then turn the grip ring of the adapter to secure the assembly.

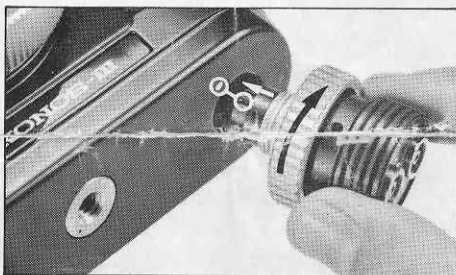


Photo 1

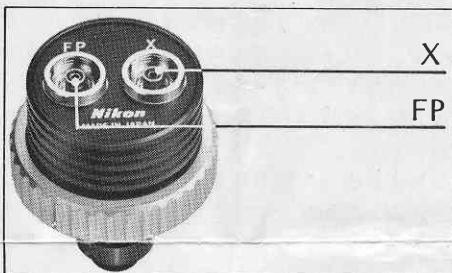


Photo 2

**How to use the adapter:** The adapter has two synch contact terminals—one for bulb flash units, marked "FP", and the other for electronic flash units, marked "X" (Photo 2). First, mount the flash unit on the camera. Then plug the synch cord into the terminal corresponding to the flash unit used. Your Nikonos III is now ready for flash photography (Photo 3).

Contact	Flashbulb	Shutter Speed					
		500	250	125	60	30	B
FP	M						
	FP						
	MF						
X	Electronic Flash						

■ : Synchronized    □ : Cannot be used

**Important:** This adapter cannot be used with other Nikonos cameras. Also, underwater photography is not possible while the adapter is attached to the camera.



Photo 3

# Nikon

## ニコンスIII用ガンコネクター

このガンコネクターは、ニコンスIIIに一般のストロボやフラッシュガンを取り付けるためのアダプターです。ニコンスIIIの底部にあるシンクロソケットにねじ込むだけで、簡単に陸上でのフラッシュ撮影が行なえます。

### 取り付け方

まず、カメラ底部にあるシンクロ接点蓋を、吊皮についている尾錠か硬貨などを利用してはずします。次に、カメラ底部の白点にガンコネクターの凹部を合わせ、シンクロソケットに差し込み、ガンコネクターの外周リングを時計方向に回し、しっかりと締めつけます。なお、ガンコネクターには、フラッシュガン用(FP)とストロボ用(X)の2つの接点があります。カメラにフラッシュユニットを取り付け、シンクロコードをガンコネクターに接続し、撮影準備完了です。

ガンコネクターを取りはずす場合は、取り付ける場合と逆の方法で、外周リングを反時計方向に5～6回回し、手前に引き抜きます。最後に、シンクロ接点蓋はしっかりとめのように取り付けておいてください。

### シンクロ接点について

ガンコネクターには、フラッシュガン用(FP)とストロボ用(X)の2つのシンクロ接点があります。使用するフラッシュユニットにより使いわけてください。

接 点	バルブ	シャッタースピード						
		500	250	125	60	30	B	
F P	M	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
	FP	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
	MF	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
X	スピードライト	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

○：同調 □：使用不可能

### ご注意

- このガンコネクターはニコンスIII用ですので、ニコンスIII以外のカメラには使用しないでください。
- ガンコネクターを使用しない時は、必ずシンクロソケット蓋をシンクロソケットに取り付けておいてください。
- 水中での使用はできません。水中フラッシュ撮影をする時は、ニコンスIII水中フラッシュユニットPをご使用ください。

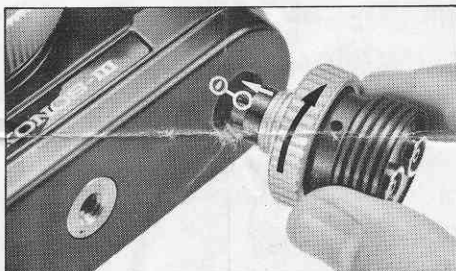


Photo 1

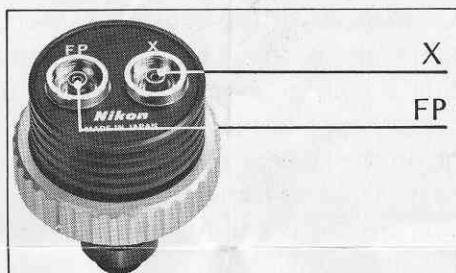


Photo 2



Photo 3

www.butkus.us