

For MT8820C Radio Communication Analyzer

# MX882005C

PHS Measurement Software

## MX882005C-011

Advanced PHS Measurement Software





# for PHS

## Solution for PHS Terminals and Base Stations Production Lines

The MX882005C PHS Measurement Software supports transmitter and receiver measurements of PHS mobile terminals now spreading worldwide centered on Asia, including Japan. Installing the MX882005C PHS Measurement Software in one MT8820C main frame supports evaluation of major transmitter and receiver characteristics of PHS terminals and base stations. Advanced DSP and parallel measurement technologies greatly reduce manufacturing and test times for PHS terminals and base stations.

In addition, multiple measurement items can be selected freely for batch processing, while the number of repeat measurements can be set for each individual measurement.

At PHS measurement, selected items can be batch-measured by one touch for quick and simple Pass/Fail evaluation of major items, such as transmit frequency, modulation accuracy, transmit power, adjacent channel power and BER.

The standard GPIB and Ethernet interface allows the MT8820C to be built into automated production lines and test systems at service and repair depots.

- PHS Measurement

Transmitter Tests	Output Power
	Modulation Accuracy
	Occupied Bandwidth
	Adjacent Channel Power
	Transmission Rate
Receiver Tests	Bit Error Ratio

# MX882005C PHS Measurement Software

## Transmitter Measurement

## Transmit Power

The RF power and carrier-off leakage power of PHS terminals and base stations are measured and the max., average and min. values are displayed by setting the number of repeat measurements to 2 or more, so variations in PHS terminal characteristics can be assessed.


This repeat measurement function is also supported for other measurements.



## Normal Measurement

## Wide Dynamic Range Mode



The absolute value and On/Off ratio of carrier-off leakage power are measured. When the carrier-off level is low, measurement can be performed in the wide dynamic range mode.

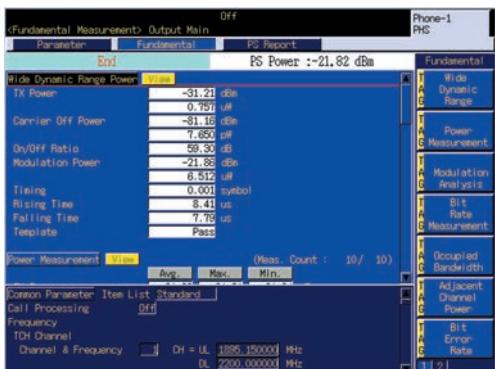

## Wide Dynamic Range Mode

## Modulation Accuracy

The frequency, frequency errors (kHz and ppm), modulation accuracy, phase error, amplitude error and origin offset of PHS terminals and base stations are measured simultaneously. A waveform display function is also provided.

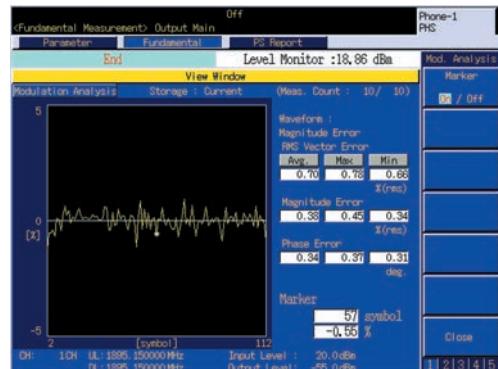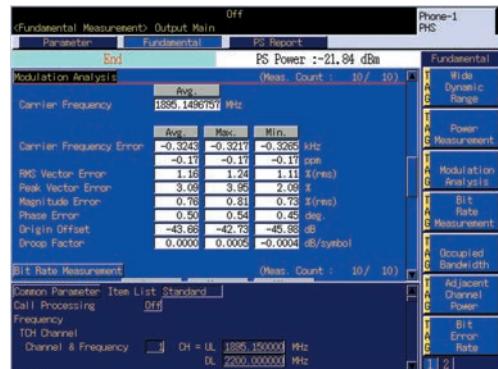


## Burst Waveform Display

The burst waveform can be displayed graphically.


Magnified display of the entire time slot and whole frame as well as the rising/falling edges enables users to easily check whether or not the burst waveform meets the PHS standard template.



Entire Time Slot

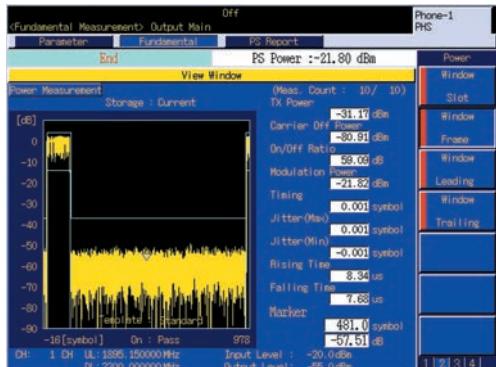

Whole Frame

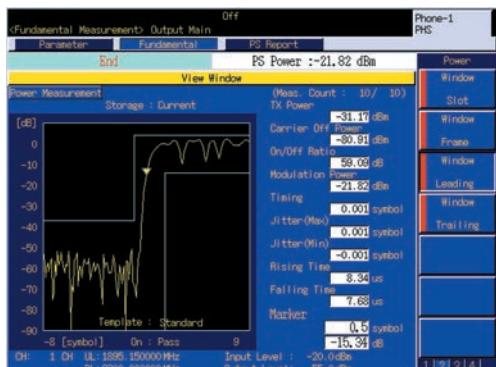


Rising Edge



Falling Edge


## Transmission Rate

Transmission rate and transmission speed error of PHS terminals and base stations can be measured.

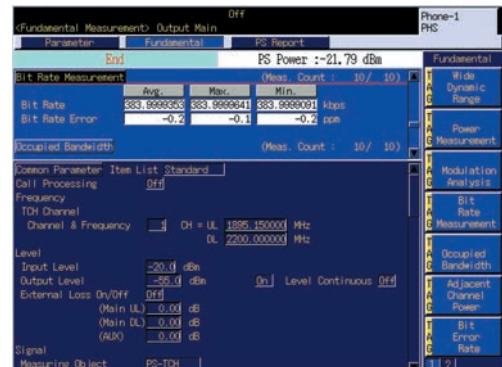



## Occupied Bandwidth

Occupied bandwidth of PHS terminals and base stations is measured. The bandwidth ratio for total power can be changed within the range of 80.0 to 99.9%. Measurements can be performed in the high-speed mode. Waveform can be displayed in the normal mode.

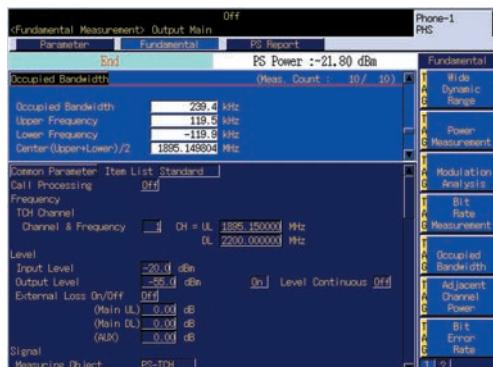

## Adjacent Channel Power


The adjacent channel power of PHS terminals and base stations is measured. The power spectrum is measured at four frequency points (-900, -600, +600 and +900 kHz) offset from the carrier frequency. Advanced DSP technology and parallel processing of the power spectrum with other measurements enable high-speed measurement. And the waveforms can be displayed too.

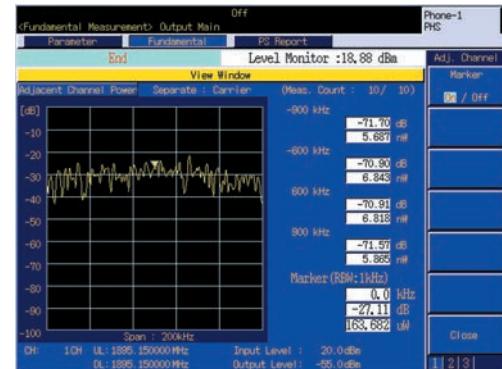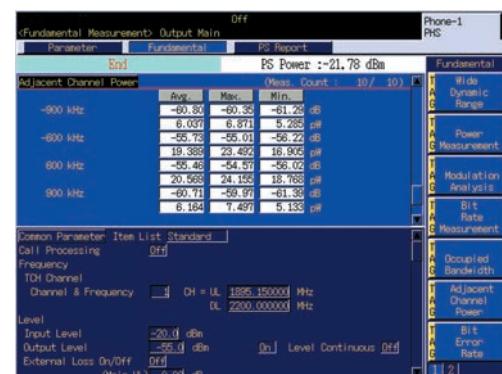

## Receiver Measurement


## Bit Error Rate (BER)

The bit error rate can be measured on receipt of demodulation data and clocks output from a PHS terminal/base station by controlling the PHS terminal with an external PC etc. This measurement can be performed in parallel with transmitter measurement.

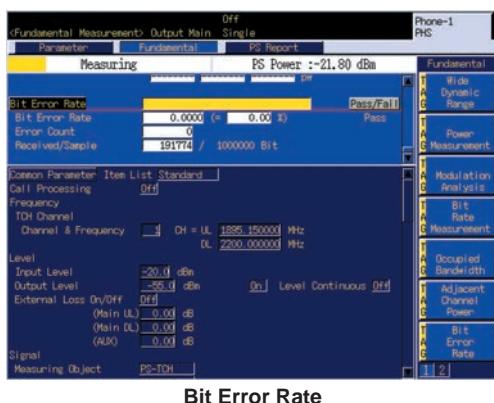

## Connection with DUT

## TRx Measurement

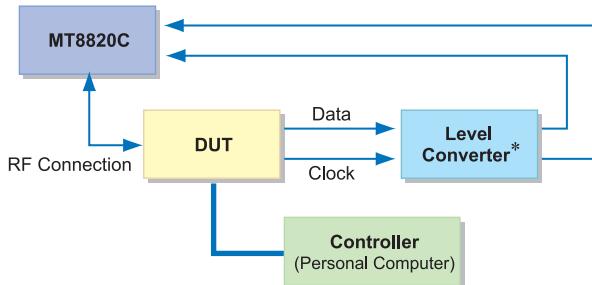


\*: Provide by user

## Call Processing Function

## Connection Test


The call processing function supports various connection tests, including location registration, terminal call origination, network call origination, call communication, network disconnection, terminal disconnection, and handover.

During a call, the user's voice can be echoed back from the PHS terminal to provide a simple voice communication test.

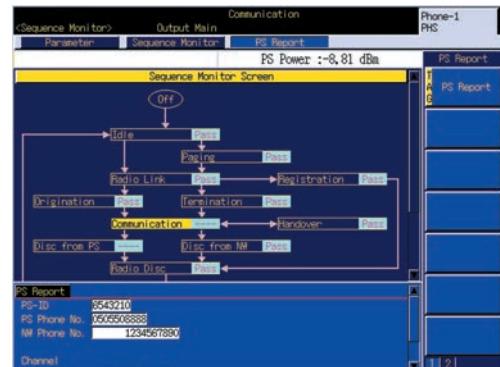


## Mobile Terminal Report Monitor

Mobile terminal information reported by a PHS terminal is displayed on the screen. This information includes the identification code (PS-ID) and phone number of the PHS terminal, as well as the dial network number.

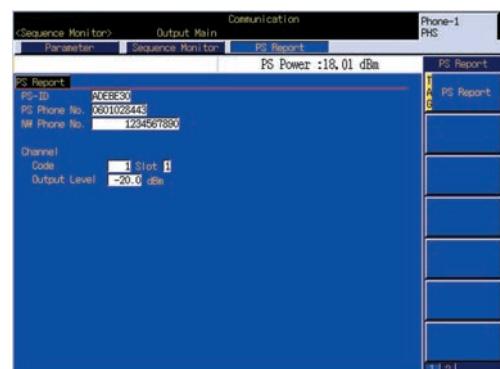

## Sequence Monitor

The functions of a PHS terminal can be operated and verified using the call processing function. The MT8820C simulates the PHS base station and displays the sequence screen, so Pass/Fail results of the connection test for location registration, call origination, call termination, communication, handover (for THC switch type), network disconnection, terminal disconnection, etc., can be checked at a glance.

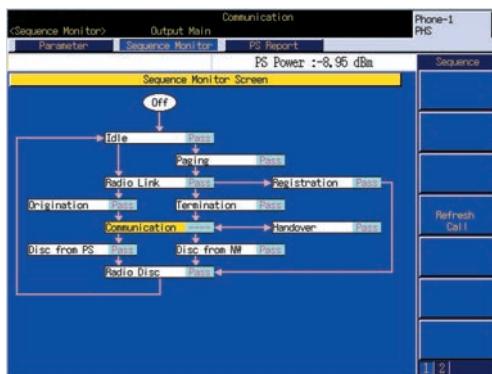


## Transmitter Test in Communication State

A transmission test can be performed in the communication state. As well as conducting evaluations during actual communications with the base station, transmission measurement can be performed regardless of restrictions on test controls, which vary with carrier and manufacturer.

This function greatly improves production and maintenance efficiency.

## Measurement Result Evaluation Function

The upper and lower limits of the normal value can be specified for each item and Pass/Fail can be displayed for measurement results. This function is useful for identifying faults at service centers and repair depots.

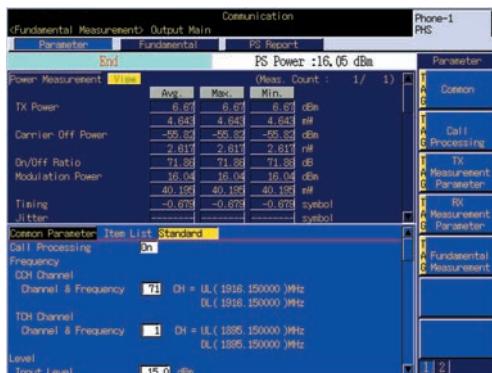

# for Advanced PHS

## Advanced High-speed and Batch Measurement Methods Supporting Advanced PHS Base Station Production Lines

The MX882005C-011 Advanced PHS Measurement Software\* is a software option to enable Advanced PHS measurements in compliance with the PHS measurement specification (ARIB RCR-STD-28 edition 5.0). It evaluates the transmitter and receiver characteristics of Advanced PHS terminals and base stations. Transmitter and receiver measurement is accomplished by installing the MX882005C-011 Advanced PHS Measurement Software in the MT8820C main frame and selecting the required modulation method from π/4DQPSK, 8PSK, and 16QAM.

\*: Requires MT8820C-002 and MX882005C

### • Advanced PHS Measurement

Transmitter Tests	Output Power
	Modulation Accuracy
	Occupied Bandwidth
	Adjacent Channel Power
	Transmission Rate
Receiver Tests	Bit Error Ratio



Modulation Type Select Pop-up Window



Burst Waveform (Entire Time Slot: 8PSK)



# MX882005C-011 Advanced PHS Measurement Software

## Transmitter Measurement

### Modulation Accuracy

The frequency, frequency errors (kHz and ppm), modulation accuracy, phase error, amplitude error, and origin offset of Advanced PHS terminals and base stations are measured simultaneously.

A waveform display function is also provided.

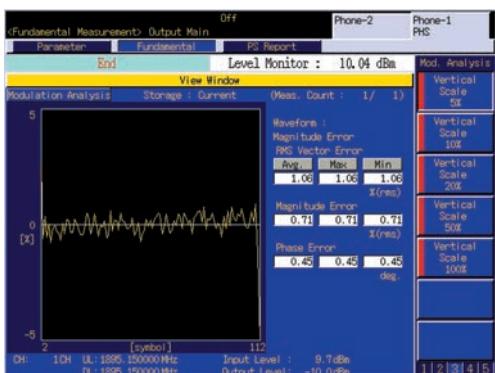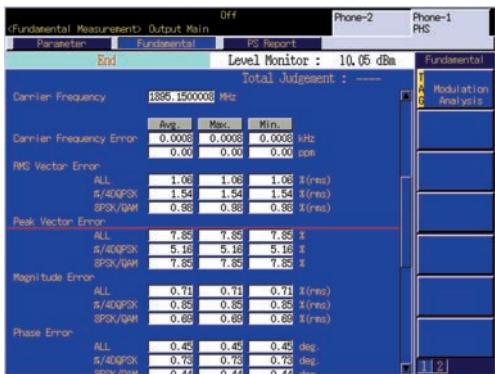

The output power, wide dynamic range mode, burst waveform display, transmission rate, occupied bandwidth and adjacent channel power operations are similar to the MX882005C.

## Receiver Measurement

### Bit Error Rate (BER)

The bit error rate can be measured on receipt of demodulation data and clocks output from an Advanced PHS terminal/base station by controlling the PHS terminal with an external PC etc. This measurement can be performed in parallel with transmission measurement.



Bit Error Rate (8PSK)

## Call Processing Function

### Connection Test

The call processing function enables various connection tests including location registration, terminal call origination, network call origination, call communication, network disconnection, terminal disconnection, and handover.

The added  $\pi/2$ DBPSK voice communication function is based on the existing PHS standard (ARIB RCR-STD-28,  $\pi/4$ DQPSK modulation). During a call, the user's voice can be echoed back from the advanced PHS terminal to provide a simple voice communication test.

The mobile terminal report monitor, sequence monitor, transmission test in communication state, and measurement result evaluation operations are similar to the MX882005C.

# Specifications

## • MT8820C-002 TDMA Measurement Hardware, MX882005C PHS Measurement Software

Frequency/Modulation	Frequency: 300 MHz to 2.7 GHz Input level (Average power within burst, Main): -30 to +40 dBm (Measurement object: PS-TCH, PS-SYNC, CS-TCH, CS-SYNC) -30 to +35 dBm (Measurement object: Continuous wave) Carrier frequency accuracy: $\pm$ (setting frequency $\times$ accuracy of the reference oscillator + 10 Hz) Modulation accuracy: $\pm$ (2% of indicated value + 0.7%) Origin offset accuracy: $\pm$ 0.5 dB to signal level of -30 dBc Transmission rate: $\pm$ 1 ppm (Measurement range 384 kbps $\pm$ 100 ppm)
Amplitude measurement	Frequency: 300 MHz to 2.7 GHz Input level (Average in-burst power, Main): -30 to +40 dBm (Measurement object: PS-TCH, PS-SYNC, CS-TCH, CS-SYNC) -30 to +35 dBm (Measurement object: Continuous wave) Measurement accuracy (After calibration): $\pm$ 0.5 dB (-20 to +40 dBm), $\pm$ 0.7 dB (-30 to -20 dBm) *After calibration, 10° to 40°C Linearity: $\pm$ 0.2 dB (-40 to 0 dB, $\geq$ -30 dBm) Carrier-off power measurement range: $\geq$ 55 dB $\geq$ (Magnitude measurement value [dBm] + 70) dB, (Wide dynamic range power measurement)
Occupied bandwidth	Frequency: 300 MHz to 2.7 GHz Input level (Average in-burst power, Main): -10 to +40 dBm (Measurement object: PS-TCH, PS-SYNC, CS-TCH, CS-SYNC) -10 to +35 dBm (Measurement object: Continuous wave)
Adjacent channel power	Frequency: 300 MHz to 2.7 GHz Input level (Average in-burst power, Main): -10 to +40 dBm (Measurement object: PS-TCH, PS-SYNC, CS-TCH, CS-SYNC) -10 to +35 dBm (Measurement object: Continuous wave) Measurement range: $\leq$ -60 dB (600 kHz offset), $\leq$ -65 dB (900 kHz offset)
RF signal generator	Output frequency: 300 MHz to 2.7 GHz, 1 Hz step Modulation accuracy: $\leq$ 3% rms Modulation data: PN9, PN15
Error rate	Function: Bit error rate measurement Measurement object: Serial data inputted from the Call Proc. I/O terminal of a rear panel
Call processing	Call control: Location registration, Call origination, Call termination, Call communication, Network disconnection, Terminal disconnection, Handover

## • MT8820C-002 TDMA Measurement Hardware, MX882005C-011 ADVANCED PHS Measurement Software

Measurement object	The specifications are the same as for the MX882005C. The measurement objects are as follows: Measurement object: PS-TCH ( $\pi/4$ DQPSK, $\pi/2$ DBPSK, 8PSK, 16QAM) PS-SYNC ( $\pi/4$ DQPSK, $\pi/2$ DBPSK) PS-SCCH ( $\pi/2$ DBPSK) CS-TCH ( $\pi/4$ DQPSK, $\pi/2$ DBPSK, 8PSK, 16QAM) CS-SYNC ( $\pi/4$ DQPSK, $\pi/2$ DBPSK) * For modulation measurement Guaranteed only when no bias in symbol point when measurement object modulation type is 16QAM.
Call processing	Call control with $\pi/4$ DQPSK or $\pi/2$ DBPSK: Location registration, Call origination, Call termination, Call communication, Network disconnection, Terminal disconnection, Handover

# Ordering Information

Please specify the model/order number, name and quantity when ordering.

The names listed in the chart below are Order Names. The actual name of the item may differ from the Order Name.

Model/Order No.	Name	Model/Order No.	Name
MT8820C	<b>Main frame</b> Radio Communication Analyzer	MX882007C-021	TD-SCDMA HSUPA Measurement Software* <sup>2</sup> (requires MT8820C-001, MT8820C-007, MX882007C, MX882007C-011)
W3320AE	<b>Standard accessories</b> Power Cord: 1 pc CF Card: 1 pc PC Card Adapter (For CF card): 1 pc MT8820C Operation Manual (CD-ROM): 1 pc	MX882010C	Parallel Phone Measurement Software* <sup>5</sup> [requires MT8820C-012, the two same measurement hardware (2 board/set) and one measurement software]
MT8820C-017	<b>Options</b> Extended RF Hardware* <sup>1</sup>	MX882012C	LTE FDD Measurement Software* <sup>2</sup> (requires MT8820C-008)
MT8820C-001	W-CDMA Measurement Hardware	MX882012C-006	LTE FDD IP Data Transfer* <sup>2</sup> (requires MX882012C)
MT8820C-002	TDMA Measurement Hardware	MX882012C-011	LTE FDD 2x2 MIMO DL* <sup>2, *6</sup> (requires MT8820C-012 and MX882012C)
MT8820C-003	CDMA2000 Measurement Hardware	MX882012C-016	LTE FDD CS Fallback to W-CDMA/GSM* <sup>7</sup> (requires MX882012C)
MT8820C-007	TD-SCDMA Measurement Hardware	MX882012C-017	LTE FDD CS Fallback to CDMA2000* <sup>7</sup> (requires MX882012C)
MT8820C-008	LTE Measurement Hardware	MX882012C-021	LTE-Advanced FDD DL CA Measurement Software* <sup>2, *8</sup> (requires MT8820C-008 (2 sets), MT8820C-012, MX882010C, and MX882012C)
MT8820C-011	Audio Board	MX882012C-026	LTE-Advanced FDD DL CA IP Data Transfer* <sup>9</sup> (requires MT8820C-008 (2 sets), MT8820C-012, MX882010C, MX882012C, MX882012C-006, MX882012C-021)
MT8820C-012	Parallel Phone Measurement Hardware	MX882012C-031	LTE-Advanced FDD DL CA 3CCs Measurement Software* <sup>2, *10</sup> (requires MT8820C 2 sets. One is required MT8820C-008 (2 sets), MT8820C-012, MX882010C, MX882012C and MX882012C-021. The other is required MT8820C-008, MX882012C.)
MT8820C-018	Extended RF 3.4 GHz to 3.8 GHz (requires MT8820C-017, MT8820C-119, or MT8820C-120)	MX882013C	LTE TDD Measurement Software* <sup>2</sup> (requires MT8820C-008)
MT8820C-043	CDMA2000 Time Offset CAL for GPS SG (requires MT8820C-003 and MX882002C)	MX882013C-006	LTE TDD IP Data Transfer* <sup>2</sup> (requires MX882013C)
MT8820C-101	W-CDMA Measurement Hardware Retrofit	MX882013C-011	LTE TDD 2x2 MIMO DL* <sup>2, *6</sup> (requires MT8820C-012 and MX882013C)
MT8820C-102	TDMA Measurement Hardware Retrofit	MX882013C-016	LTE TDD CS Fallback to W-CDMA/GSM* <sup>11</sup> (requires MX882013C)
MT8820C-103	CDMA2000 Measurement Hardware Retrofit	MX882013C-017	LTE FDD CS Fallback to CDMA2000* <sup>7</sup> (requires MX882013C)
MT8820C-107	TD-SCDMA Measurement Hardware Retrofit	MX882013C-018	LTE FDD CS Fallback to TD-SCDMA/GSM* <sup>11</sup> (requires MX882013C)
MT8820C-108	LTE Measurement Hardware Retrofit	MX882013C-021	LTE-Advanced TDD DL CA Measurement Software* <sup>2, *8</sup> (requires MT8820C-008 (2 sets), MT8820C-012, MX882010C, and MX882013C)
MT8820C-111	Audio Board Retrofit	MX882013C-026	LTE-Advanced TDD DL CA IP Data Transfer* <sup>9</sup> (requires MT8820C-008 (2 sets), MT8820C-012, MX882010C, MX882013C, MX882013C-006, MX882013C-021)
MT8820C-112	Parallel Phone Measurement Hardware Retrofit	MX882013C-031	LTE-Advanced TDD DL CA 3CCs Measurement Software* <sup>2, *10</sup> (requires MT8820C 2 sets. One is required MT8820C-008 (2 sets), MT8820C-012, MX882010C, MX882013C-021. The other is required MT8820C-008, MX882013C.)
MT8820C-119	Extended RF Hardware for SPM Retrofit	MX882032C	LTE TDD Measurement Software Lite* <sup>2</sup>
MT8820C-120	Extended RF Hardware for PPM Retrofit	MX882036C	1xEV-DO Measurement Software Lite* <sup>2</sup>
MT8820C-143	CDMA2000 Time Offset CAL for GPS SG Retrofit (requires MT8820C-003 and MX882002C)	MX882036C-011	1xEV-DO Rev. A Measurement Software* <sup>2</sup>
MT8820C-177	TD-SCDMA Measurement Retrofit (requires MT8820C-001)	MX882042C	LTE FDD Measurement Software Lite* <sup>2</sup>
MX882000C	<b>Software options</b> W-CDMA Measurement Software (requires MT8820C-001 and MX88205xC)	MX882043C	LTE TDD Measurement Software Lite* <sup>2</sup>
MX882000C-001	W-CDMA Voice Codec (requires MT8820C-011 and MX882000C)	MX882050C	W-CDMA Call Processing Software* <sup>2, *12</sup> (requires MX882000C)
MX882000C-011	HSDPA Measurement Software (requires MT8820C-001, MX882000C, and MX882050C)	MX882050C-002	W-CDMA External Packet Data* <sup>2</sup> (requires MX882050C)
MX882000C-013	HSDPA High Data Rate (requires MT8820C-001, MX882000C, MX882000C-011, and MX882050C)	MX882050C-003	W-CDMA Video Phone Test* <sup>2</sup> (requires MX882050C)
MX882000C-021	HSUPA Measurement Software (requires MT8820C-001, MX882000C, MX882000C-011, and MX882050C)	MX882050C-007	W-CDMA Band XII, XIII, XIV, XIX, XX, XXI* <sup>2, *13</sup> (requires MX882050C)
MX882000C-031	HSPA Evolution Measurement Software* <sup>2</sup> (requires MT8820C-001, MX882000C, MX882000C-011, MX882000C-021, and MX882050C)	MX882050C-008	W-CDMA Band XI* <sup>2</sup> (requires MX882050C)
MX882000C-032	DC-HSDPA Measurement Software* <sup>2, *3</sup> (requires MT8820C-001 (2 sets), MT8820C-012, MX882000C, MX882000C-011, MX882000C-021, MX882000C-031, MX882010C, and MX882050C)	MX882050C-009	W-CDMA Band IX* <sup>2</sup> (requires MX882050C)
MX882000C-033	DC-HSUPA Measurement Software* <sup>2, *4</sup> (requires MT8820C-001 (2 sets), MT8820C-012, MX882000C, MX882000C-011, MX882000C-021, MX882000C-031, MX882000C-032, MX882010C, MX882050C)	MX882050C-011	HSUPA External Packet Data* <sup>2</sup> (requires MX882000C-011)
MX882000C-034	4C-HSDPA Measurement Software* <sup>2, *4</sup> (requires MT8820C-001 (2 sets), MT8820C-012, MX882000C, MX882000C-011, MX882000C-021, MX882000C-031, MX882000C-032, MX882010C, MX882050C)	MX882051C	W-CDMA Call Processing Software* <sup>2</sup> (requires MX882000C)
MX882000C-035	DC-HSUPA Measurement Software* <sup>2, *4</sup> (requires MT8820C-001 (2 sets), MT8820C-012, MX882000C, MX882000C-011, MX882000C-021, MX882000C-031, MX882000C-032, MX882010C, MX882050C)	MX882051C-002	W-CDMA External Packet Data* <sup>2</sup> (requires MX882051C)
MX882000C-036	4C-HSDPA Measurement Software* <sup>2, *4</sup> (requires MT8820C-001 (2 sets), MT8820C-012, MX882000C, MX882000C-011, MX882000C-021, MX882000C-031, MX882000C-032, MX882010C, MX882050C)	MX882051C-003	W-CDMA Video Phone Test* <sup>2</sup> (requires MX882051C)
MX882000C-037	4C-HSUPA Measurement Software* <sup>2, *4</sup> (requires MT8820C-001 (2 sets), MT8820C-012, MX882000C, MX882000C-011, MX882000C-021, MX882000C-031, MX882000C-032, MX882010C, MX882050C)	MX882070C	W-CDMA Ciphering Software* <sup>2</sup> (requires MX882050C)
MX882000C-038	4C-HSDPA Measurement Software* <sup>2, *4</sup> (requires MT8820C-001 (2 sets), MT8820C-012, MX882000C, MX882000C-011, MX882000C-021, MX882000C-031, MX882000C-032, MX882010C, MX882050C)	MX882071C	W-CDMA Ciphering Software* <sup>2</sup> (requires MX882051C)
MX882001C	GSM Measurement Software (requires MT8820C-002)	MT8820C-ES210	<b>Warranty</b>
MX882001C-001	GSM Voice Codec (requires MT8820C-011 and MX882001C)	MT8820C-ES310	2 years Extended Warranty Service
MX882001C-002	GSM External Packet Data (requires MX882001C)	MT8820C-ES510	3 years Extended Warranty Service
MX882001C-011	EGPRS Measurement Software (requires MX882001C)		5 years Extended Warranty Service
MX882001C-041	GSM High-speed Adjustment (requires MX882001C)		
MX882002C	CDMA2000 Measurement Software (requires MT8820C-003)		
MX882002C-001	CDMA2000 Voice Codec (requires MT8820C-011 and MX882002C)		
MX882002C-002	CDMA2000 External Packet Data (requires MX882002C)		
MX882005C	PHS Measurement Software (requires MT8820C-002)		
MX882005C-011	Advanced PHS Measurement Software (requires MX882005C)		
MX882007C	TD-SCDMA Measurement Software (requires MT8820C-001 and MT8820C-007)		
MX882007C-001	TD-SCDMA Voice Codec (requires MT8820C-011 and MX882007C)		
MX882007C-003	TD-SCDMA Video Phone Test (requires MX882007C)		
MX882007C-011	TD-SCDMA HSDPA Measurement Software* <sup>2</sup> (requires MT8820C-001, MT8820C-007, and MX882007C)		
MX882007C-012	TD-SCDMA HSDPA Evolution Measurement Software* <sup>2</sup> (requires MT8820C-001, MT8820C-007, MX882007C, MX882007C-011)		
			<b>Application parts</b>
		P0035B	W-CDMA/GSM Test USIM
		P0035B7	W-CDMA/GSM Test USIM* <sup>14</sup>
		P0135A6	Anritsu Test UICC GA (Nano UICC size)* <sup>15</sup>
		P0135A7	Anritsu Test UICC GA (Micro UICC size)* <sup>15</sup>
		P0250A6	Anritsu Test UICC GT (Nano UICC size)* <sup>15</sup>
		P0250A7	Anritsu Test UICC GT (Micro UICC size)* <sup>15</sup>
		P0260A6	Anritsu Test UICC GM (Nano UICC size)* <sup>15</sup>
		P0260A7	Anritsu Test UICC GM (Micro UICC size)* <sup>15</sup>
		P0135B6	Anritsu Test UICC GA (Nano UICC size)* <sup>15</sup>
		P0135B7	Anritsu Test UICC GA (Micro UICC size)* <sup>15</sup>
		P0250B6	Anritsu Test UICC GT (Nano UICC size)* <sup>15</sup>
		P0250B7	Anritsu Test UICC GT (Micro UICC size)* <sup>15</sup>
		P0260B6	Anritsu Test UICC GM (Nano UICC size)* <sup>15</sup>
		P0260B7	Anritsu Test UICC GM (Micro UICC size)* <sup>15</sup>
		A0058A	Handset

Model/Order No.	Name
J1195A	PP2S Output Cable
J1249	CDMA2000 Cable
J1267	[D-Sub (15 pin, P-type) · D-Sub (15 pin, P-type), used in combination with J1267 (sold separately)]* <sup>16</sup> CDMA2000 Cross Cable
J1606A	[D-Sub (9 pin, P-type) · D-Sub (9 pin, P-type), reverse cable used in combination with J1249 (sold separately)]* <sup>16</sup> Cable
J0576B	Coaxial Cord, 1 m (N-P · 5D-2W · N-P)
J0576D	Coaxial Cord, 2 m (N-P · 5D-2W · N-P)
J0127A	Coaxial Cord, 1 m (BNC-P · RG58A/U · BNC-P)
J0127C	Coaxial Cord, 0.5 m (BNC-P · RG58A/U · BNC-P)
J0007	GPIO Cable, 1 m
J0008	GPIO Cable, 2 m
MN8110B	I/O Adapter (for call processing I/O)
B0332	Joint Plate (4 pcs/set)
B0643A	Rack Mount Kit (MT8820C)
B0499	Carrying Case (Hard type) (with protective cover and casters)
B0499B	Carrying Case (Hard type) (with protective cover, without casters)

- \*1: MT8820C-017 has been a standard option that MT8820C are shipped with until July 2012 (Simultaneous order is required MT8820C and MT8820C-017).
- \*2: For terminal connectivity, contact your Anritsu sales representative.
- \*3: MX882000C-032 is required a Parallelphone measurement configuration of W-CDMA Evolution. For use MT8820C 2 units, contact your Anritsu sales representative.
- \*4: MX882000C-033 (034) is required W-CDMA DC-HSDPA configuration.
- \*5: The following measurement hardware supports the Parallelphone measurement option: MT8820C-001, MT8820C-002, MT8820C-003, MT8820C-007, MT8820C-008.

All the measurement hardware can be installed simultaneously.

- \*6: MX882012C-011 is required MT8820C-012.
- \*7: The MX882012C-016 (017) LTE FDD CS Fallback to W-CDMA/GSM (CDMA2000) requires a separate MT8820C with the W-CDMA/GSM (CDMA2000) configuration. Contact your Anritsu sales representative for the CS Fallback function test configuration.
- \*8: MX882012C (12C)-021 is required a Parallelphone measurement configuration of LTE FDD (TDD). For Use MT8820C 2 units, contact your Anritsu sales representative.
- \*9: MX882012C (13C)-026 function test is required external server PCs (2 sets). LTE Advanced FDD (TDD) DL CA IP Data Transfer (2CCs, 2Layer) is required MT8820C LTE 2x2 MIMO DL configuration (2 sets) and external server PCs (2 sets).
- \*10: One is required LTE FDD (TDD) ParallelPhone Configuration. The other is required LTE FDD Single Phone Configuration. For use MT8820C 3 units, contact your Anritsu sales representative. A synchronized cable is required too.
- \*11: The MX882013C-016 (018) LTE TDD CS Fallback to W-CDMA/GSM (TD-SCDMA/GSM) requires a separate MT8820C with the W-CDMA/GSM (TD-SCDMA/GSM) configuration. Contact your Anritsu sales representative for the CS Fallback function test configuration.
- \*12: These options preinstall the integrity protection function.
- \*13: MX882050C-007 supports W-CDMA Band 12, 13, 14, 19, 20, 21.
- \*14: The P0035B7 MicroSIM is a cut-down P0035B W-CDMA/GSM Test USIM. The P0035B7 Test USIM is a microSIM. It CANNOT be used in a normal size USIM card slot. A commercial SIM adapter CANNOT be used with the P0035B7. If used, it may jam and break in the terminal.
- \*15: Refer to the P0135Ax/P0250Ax/P0260Ax leaflet for details.
- \*16: J1267 (J1606A) cable can use for LTE-Advanced DLCA synchronized cable. Contact your Anritsu sales representative for details.

• Parallelphone™ is a registered trademark of Anritsu Corporation.  
• CF® card is a registered trademark of SanDisk Corporation in the United States and is licensed to CFA (Compact Flash Association).



Specifications are subject to change without notice.

#### • United States

##### Anritsu Company

1155 East Collins Blvd., Suite 100, Richardson, TX 75081, U.S.A.  
Toll Free: 1-800-267-4878  
Phone: +1-972-644-1777  
Fax: +1-972-671-1877

#### • Canada

##### Anritsu Electronics Ltd.

700 Silver Seven Road, Suite 120, Kanata, Ontario K2V 1C3, Canada  
Phone: +1-613-591-2003  
Fax: +1-613-591-1006

#### • Brazil

##### Anritsu Eletrônica Ltda.

Praça Amadeu Amaral, 27 - 1 Andar 01327-010 - Bela Vista - São Paulo - SP - Brazil  
Phone: +55-11-3283-2511  
Fax: +55-11-3288-6940

#### • Mexico

##### Anritsu Company, S.A. de C.V.

Av. Ejército Nacional No. 579 Piso 9, Col. Granada 11520 México, D.F., México  
Phone: +52-55-1101-2370  
Fax: +52-55-5254-3147

#### • United Kingdom

##### Anritsu EMEA Ltd.

200 Capability Green, Luton, Bedfordshire, LU1 3LU, U.K.  
Phone: +44-1582-433200  
Fax: +44-1582-731303

#### • France

##### Anritsu S.A.

12 avenue du Québec, Bâtiment Iris 1- Silic 612, 91140 VILLEBON SUR YVETTE, France  
Phone: +33-1-60-92-15-50  
Fax: +33-1-64-46-10-65

#### • Germany

##### Anritsu GmbH

Nemetschek Haus, Konrad-Zuse-Platz 1 81829 München, Germany  
Phone: +49-89-442308-0  
Fax: +49-89-442308-55

#### • Italy

##### Anritsu S.r.l.

Via Elio Vittorini 129, 00144 Roma, Italy  
Phone: +39-6-509-9711  
Fax: +39-6-502-2425

#### • Sweden

##### Anritsu AB

Kistagången 20B, 164 40 KISTA, Sweden  
Phone: +46-8-534-707-00  
Fax: +46-8-534-707-30

#### • Finland

##### Anritsu AB

Teknobulevardi 3-5, FI-01530 VANTAA, Finland  
Phone: +358-20-741-8100  
Fax: +358-20-741-8111

#### • Denmark

##### Anritsu A/S

Kay Fiskers Plads 9, 2300 Copenhagen S, Denmark  
Phone: +45-7211-2200  
Fax: +45-7211-2210

#### • Russia

##### Anritsu EMEA Ltd.

##### Representation Office in Russia

Tverskaya str. 16/2, bld. 1, 7th floor.  
Moscow, 125009, Russia  
Phone: +7-495-363-1694  
Fax: +7-495-935-8962

#### • Spain

##### Anritsu EMEA Ltd.

##### Representation Office in Spain

Edificio Cuzco IV, Po. de la Castellana, 141, Pta. 8 28046, Madrid, Spain  
Phone: +34-915-726-761  
Fax: +34-915-726-621

#### • United Arab Emirates

##### Anritsu EMEA Ltd.

##### Dubai Liaison Office

902, Aurora Tower,  
P O Box: 500311- Dubai Internet City  
Dubai, United Arab Emirates  
Phone: +971-4-3758479  
Fax: +971-4-4249036

#### • India

##### Anritsu India Private Limited

2nd & 3rd Floor, #837/1, Binnamangla 1st Stage, Indiranagar, 100ft Road, Bangalore - 560038, India  
Phone: +91-80-4058-1300  
Fax: +91-80-4058-1301

#### • Singapore

##### Anritsu Pte. Ltd.

11 Chang Charn Road, #04-01, Shiro House Singapore 159640  
Phone: +65-6282-2400  
Fax: +65-6282-2533

#### • P.R. China (Shanghai)

##### Anritsu (China) Co., Ltd.

Room 2701-2708, Tower A,  
New Caohejing International Business Center  
No. 391 Gui Ping Road Shanghai, 200233, P.R. China  
Phone: +86-21-6237-0898  
Fax: +86-21-6237-0899

#### • P.R. China (Hong Kong)

##### Anritsu Company Ltd.

Unit 1006-7, 10/F., Greenfield Tower, Concordia Plaza, No. 1 Science Museum Road, Tsim Sha Tsui East, Kowloon, Hong Kong, P.R. China  
Phone: +852-2301-4980  
Fax: +852-2301-3545

#### • Japan

##### Anritsu Corporation

8-5, Tamura-cho, Atsugi-shi, Kanagawa, 243-0016 Japan  
Phone: +81-46-296-6509  
Fax: +81-46-225-8359

#### • Korea

##### Anritsu Corporation, Ltd.

5FL, 235 Pangyoek-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 463-400 Korea  
Phone: +82-31-696-7750  
Fax: +82-31-696-7751

#### • Australia

##### Anritsu Pty. Ltd.

Unit 20, 21-35 Ricketts Road,  
Mount Waverley, Victoria 3149, Australia  
Phone: +61-3-9558-8177  
Fax: +61-3-9558-8255

#### • Taiwan

##### Anritsu Company Inc.

7F, No. 316, Sec. 1, NeiHu Rd., Taipei 114, Taiwan  
Phone: +886-2-8751-1816  
Fax: +886-2-8751-1817